


Tire Pressure Monitoring System

WIRING SYSTEM

57.Tire Pressure Monitoring System

A: WIRING DIAGRAM

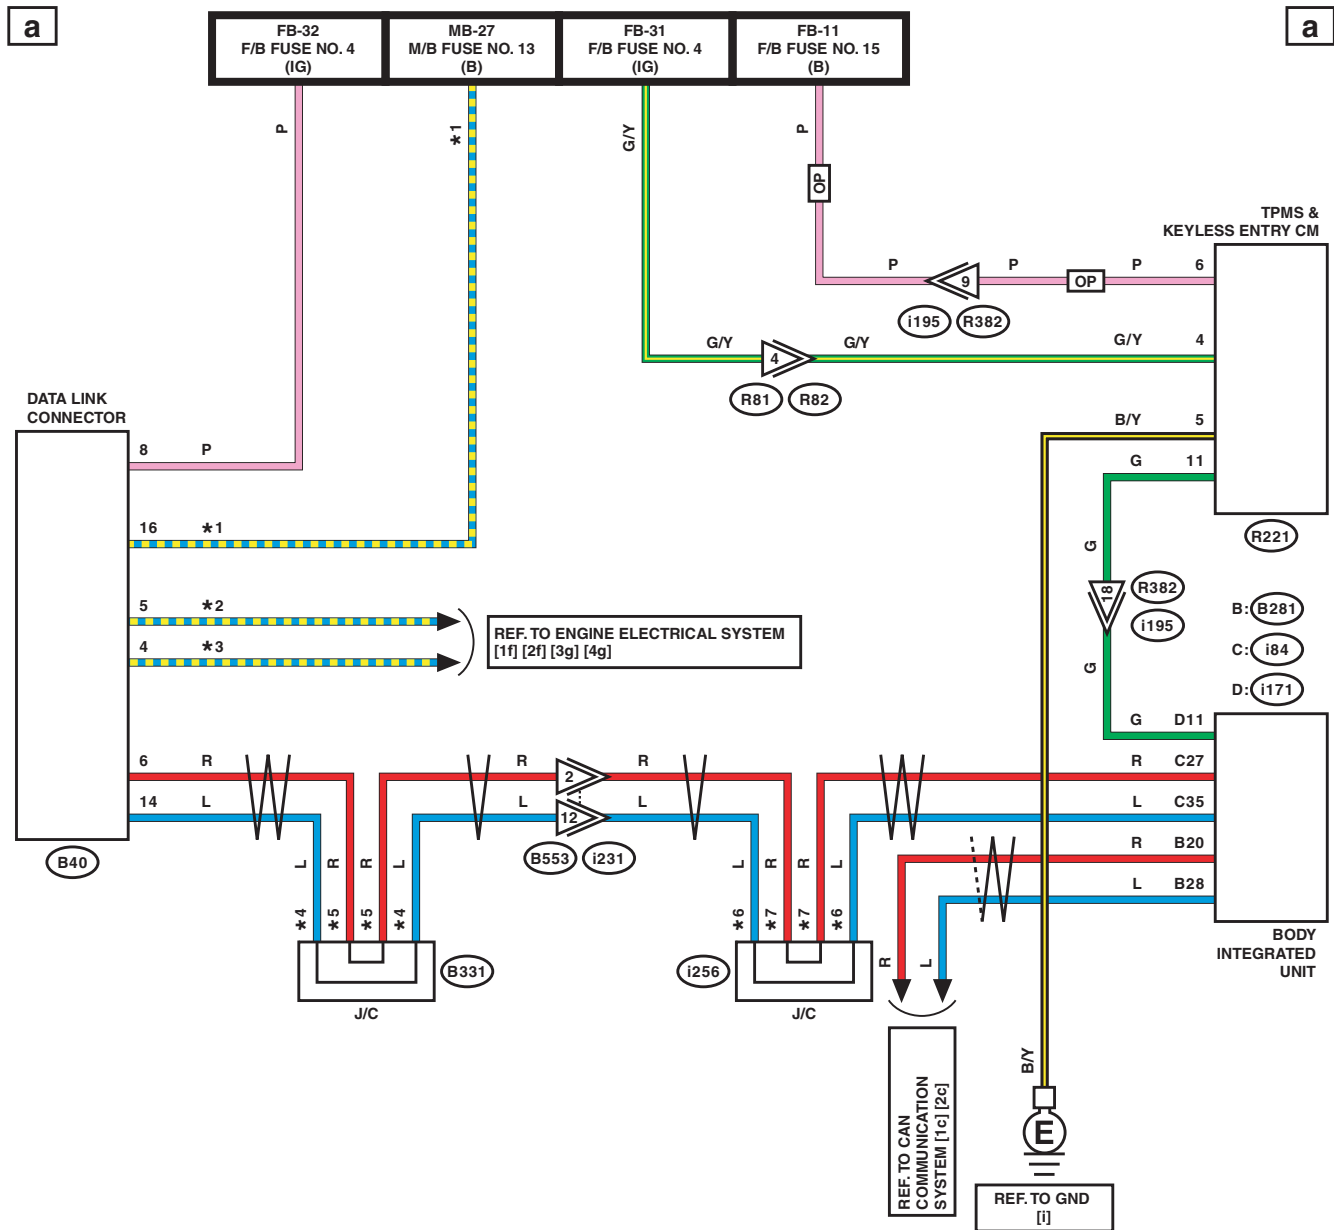

OP : WITHOUT PUSH BUTTON START

*1 : NON-TURBO MODEL : G
TURBO MODEL : W/L

*2 : NON-TURBO MODEL : B
TURBO MODEL : B/R

*3 : NON-TURBO MODEL : B/G
TURBO MODEL : B

*4 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 12, 13, 14, 15, 16, 17, 18, 19, 20, 21 AND 22

*5 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 2, 3, 4, 5, 6, 7, 8, 9, 10 AND 11

*6 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 4, 5, 9, 10, 11 AND 12

*7 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 2, 3, 6, 7 AND 8


WI-40972

Tire Pressure Monitoring System

WIRING SYSTEM

b

b

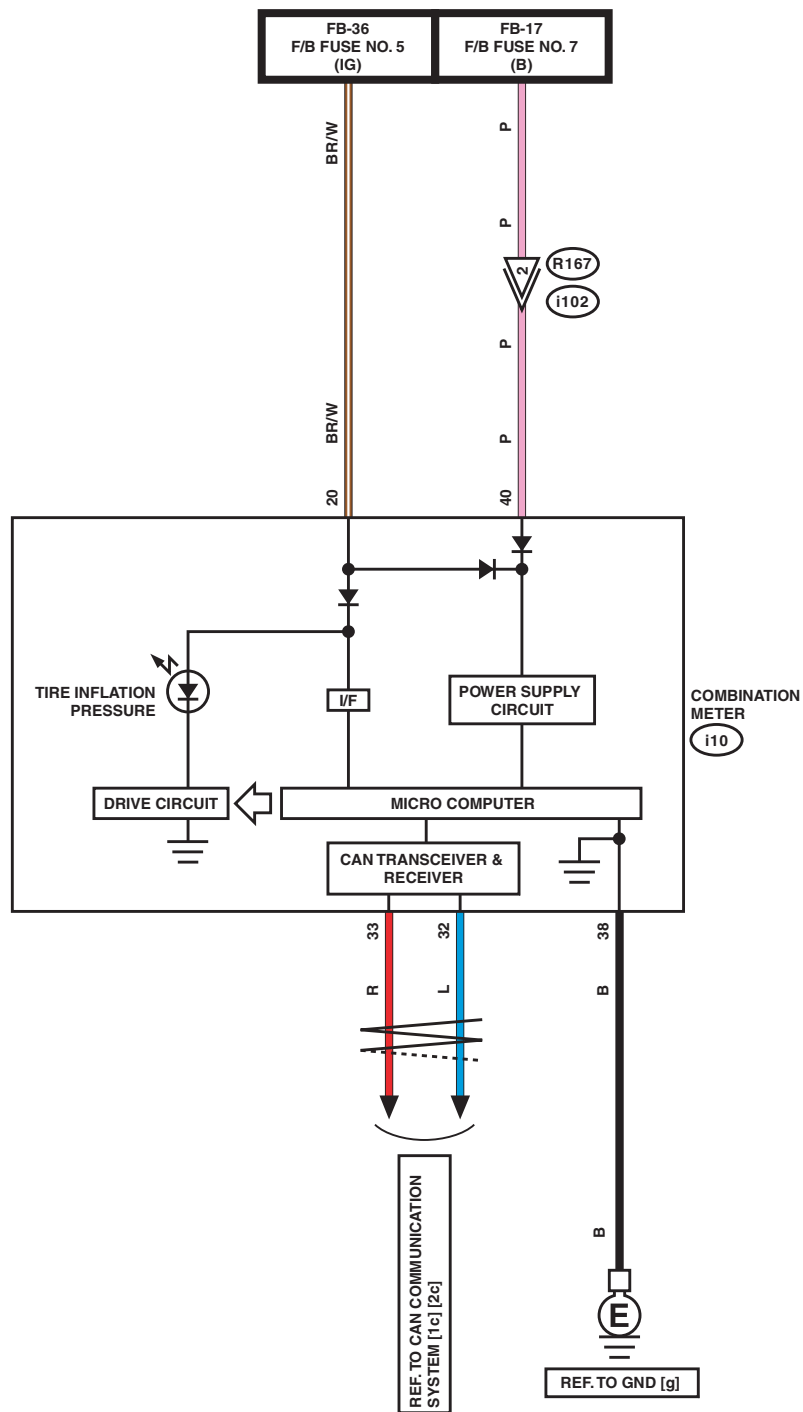

WI-40973

WI-409


Tire Pressure Monitoring System

WIRING SYSTEM

C

C

LIST OF CONNECTORS

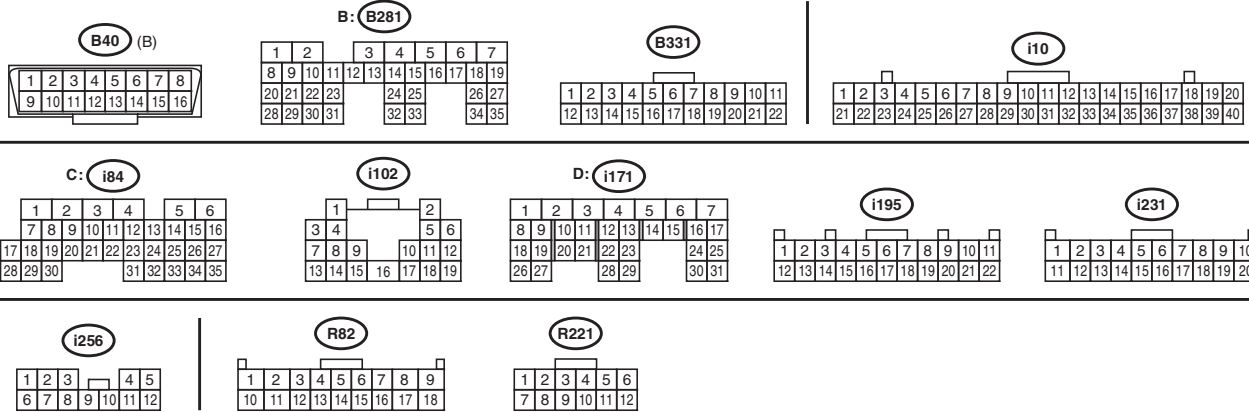

WI-40974

WI-410

