


GMC Sierra 1995 fuse box diagram

Instrument Panel Fuse Block

The fuse block access door is on the driver’s side edge of the instrument panel. Pull off the cover to access the fuse block.

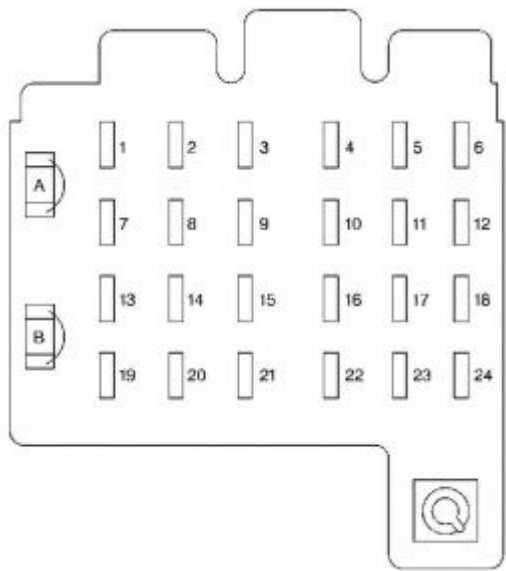

GMC Sierra mk1 – fuse box – instrument panel

Position	Name	Usage
1	STOP/HAZ	Stop/TCC Switch, Buzzer, CHMSL, Hazard Lamps, Stoplamps
2	T CASE	Transfer Case
3	CTSY	Courtesy Lamps, Cargo Lamp, Glove Box Lamp, Dome/Reading Lamps, Vanity Mirrors, Power Mirrors
4	GAGES	IP Cluster, DRL Relay, HDLP Switch, Keyless Entry, Low Coolant Module
5	RR HVAC	RR HVAC Control
6	CRUISE	Cruise Control
7	AUX PWR	Aux Power Outlet
8	CRANK	Diesel Fuel Pump, DERM, ECM
9	PARK LPS	Lic Lamp, Park Lamp, Tail Lamp, Roof Marker Lamp, Tail Gate Lamps, Front Side Markers, Fog Lamp Relay, Door Switch Illum, Fender Lamps

10	AIR BAG	Air Bag System
11	WIPER	Wiper Motor, Washer Pump
12	HTR-A/C	A/C, A/C Blower, High Blower Relay
13	CIG LTR	Power Amp, Cigarette Lighter, Door Lock Relay, Power Lumbar Seat
14	ILLUM	4WD, Indicator, LP Cluster, HVAC Controls, RR HVAC Controls, IP Switches, Radio Illumination
15	DRL-FOG	DRL Relay, Fog Lamp Relay
16	TURN-B/U	Frt Turn, RR Turn, B/U Lps
17	RADIO	Radio (Ign)
18	BRAKE	DRAC, 4WAL PCM, ABS, Cruise
19	RADIO BATT	Radio (Batt)
20	TRANS	PRNDL, Auto Transmission, Speedo, Check Gages Tell Tale
21	—	Not Used
22	—	Not Used
23	—	Not Used
24	4WD	Frt Axle, 4WD Indicator Lamp
A	PWR ACCY	Pwr Door Lock, 6-Way Pwr Seat, Keyless Entry Module
B	PWR WDOS	Power Windows