

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A1	Ignition SW	90980-11615	B16	Power Steering Oil Pressure SW	90980-11428
A2	Accelerator Position Sensor	90980-11858	B17	VSV (ACIS)	90980-11149
A3	Stop Lamp SW	90980-11118	B18	Fuel Injector (No.6)	90980-11875
A4	Skid Control ECU with Actuator	90980-12297	B19	Engine Coolant Temp. Sensor	90980-10735
A5	Skid Control ECU with Actuator	90980-12294	B20	Ignition Coil (No.6)	90980-11885
A6	VSC Warning Buzzer	90980-10906	B21	Fuel Injector (No.4)	90980-11875
A7	Option Connector (Towing Converter Relay)	90980-11535	B22	VSV (Purge)	90980-11156
A8	Option Connector (Driving Lamp)	90980-11156	B23	Ignition Coil (No.4)	90980-11885
A9	Clutch Start SW	90980-10825	B24	Ignition Coil (No.2)	
A10	Daytime Running Light Resistor	90980-10928	B25	Fuel Injector (No.2)	90980-11875
A11	Windshield Wiper Motor	90980-11599	B26	Camshaft Timing Oil Control Valve (LH)	90980-11162
A12	Wireless Door Lock Buzzer	90980-11142	B27	VVT Sensor (Bank 2)	90980-12353
A13	Fuel Pump Resistor	90980-10887	B28	Engine Oil Pressure SW	90980-11363
A14	Brake Fluid Level Warning SW	90980-11156	B29	Crankshaft Position Sensor	90980-12028
A15	Airbag Sensor (Front LH)	90980-11856	B30	A/C Compressor	90980-11016
A16	Turn Signal and Parking Lamp (Front LH)	90980-11020	B31	Air Fuel Ratio Sensor (Bank 2 Sensor 1)	90980-10869
A17	Horn	90980-10619	B32	Transmission Revolution Sensor (Turbine)	90980-11156
A18	Ambient Temp. Sensor	90980-11070	B33	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-10869
A19	Pressure SW	90980-11149	B34	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11028
A20	Turn Signal and Parking Lamp (Front RH)	90980-11020	B35	Park/Neutral Position SW	90980-12362
A21	Windshield Washer Motor	90980-11027	B36	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028
A22	Airbag Sensor (Front RH)	90980-11856	B37	Electronically Controlled Transmission Solenoid	90980-12293
A23	Headlamp (LH)	90980-11314	B38	Transmission Revolution Sensor (Electronically Controlled Transmission)	90980-11156
A24	Headlamp (RH)		B39	Transfer Indicator SW (4WD Position)	
A25	Cruise Control Clutch SW	90980-10906	B40	Transfer Indicator SW (L4 Position)	
A26	Option Connector (Driving Lamp SW)	90980-11541	B41	Transfer Indicator SW (Neutral Position)	90980-10923
A27	Junction Connector	90980-11915	B42	Back-Up Lamp SW	90980-11250
A28	Junction Connector		B43	Transfer Indicator SW (Center Diff.)	90980-11156
A29	Junction Connector	90980-11661	B44	Vehicle Speed Sensor (Combination Meter)	90980-11143
A30	Junction Connector		B45	Junction Connector	90980-11542
A31	Option Connector (Horn)	90980-10619	B46	Junction Connector	90980-11915
B1	Engine Control Module	90980-12527	C1	Generator	90980-09372
B2	Engine Control Module	90980-12528	C2	Generator	90980-11964
B3	Engine Control Module	90980-12526	C3	Starter	90980-11400
B4	4WD Control ECU	90980-10997	C4	Starter	90980-09463
B5	Ignition Coil (No.5)	90980-11885	D1	ADD Actuator Assembly	90980-11858
B6	Ignition Coil (No.3)		D2	Transfer Indicator SW (Rear Diff.)	90980-11250
B7	Ignition Coil (No.1)		D3	Diff. Lock Shift Actuator Assembly	90980-11194
B8	Noise Filter (Ignition)	90980-10843	E1	Data Link Connector 3	90980-11978
B9	Fuel Injector (No.5)	90980-11875	E2	Diff. Lock SW	90980-10933
B10	Fuel Injector (No.3)		E3	Traction Control SW (Auto LSD)	
B11	Fuel Injector (No.1)		E4	Light Control Rheostat	90980-10797
B12	Camshaft Timing Oil Control Valve (RH)	90980-11162	E5	Woofer Speaker SW	90980-11013
B13	Mass Air Flow Meter	90980-11317	E6	Body ECU	90980-12562
B14	Throttle Body Assembly	90980-11858			
B15	VVT Sensor (Bank 1)	90980-12353			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
E7	Body ECU	90980-12560	E53	Junction Connector	90980-11661
E8	Body ECU	90980-12561	E54	Junction Connector	
E9	Turn Signal Flasher	90980-10799	E55	Junction Connector	90980-11742
E10	Clearance Warning Buzzer	90980-11142	E56	Junction Connector	
E11	Clutch Start Cancel SW	90980-12113	E57	Junction Connector	90980-11661
E12	Back Sonar SW	90980-10964	E58	Junction Connector	
E13	Combination Meter	90980-12556	E59	Junction Connector	90980-11915
E14	Combination Meter	90980-12554	E60	Junction Connector	
E15	Traction Control SW (Active TRAC)	90980-11013	E61	Junction Connector	90980-10871
E16	Steering Sensor	90980-12553	E62	Junction Connector	90980-12355
E17	Spiral Cable	90980-12552	E63	Junction Connector	
E18	Airbag Squib (Steering Wheel Pad)	90980-12160	E64	Junction Connector	
E19	Windshield Wiper SW Assembly	90980-11594	E65	Junction Connector	
E20	Headlamp Dimmer SW Assembly	90980-11672	E66	Junction Connector	
E21	Unlock Warning SW	90980-10794	E67	Junction Connector	90980-11915
E22	Parking Brake SW	90980-10871	E68	Junction Connector	90980-11661
E23	Door Control Receiver	90980-11909	E69	A/T Shift Lever Illumination	90980-12063
E24	Main SW	90980-10964	E70	Option Connector (Off-road Lamp Diode)	90980-10962
E25	Power Outlet Socket	90980-10760	E71	Noise Filter (Stereo Jack Adapter)	90980-12551
E26	Stereo Jack Adapter	82824-21030	F1	Accessory Meter	90980-11923
E27	Speaker Condenser	90980-12551	F2	Clock	90980-11013
E28	Shift Lock Control ECU	90980-12552	F3	Tweeter (Front RH)	
E29	Airbag Sensor Assembly Center	90980-12710	F4	Tweeter (Front LH)	
E30	Option Connector (Off-road Lamp SW)	90980-10933	F5	Junction Connector	90980-11915
E31	Clearance Warning ECU	90980-12552	F6	Junction Connector	90980-11661
E32	A/C Amplifier	90980-12460	G1	Junction Connector	90980-11542
E33	A/C Amplifier	90980-12554	G2	Outer Rear View Mirror (RH)	90980-11182
E34	Yaw Rate Sensor	90980-11904	G3	Power Window Regulator Motor (Front RH)	90980-10797
E35	Blower Motor	90980-11579	G4	Speaker (Front RH)	90980-10935
E36	Blower Resistor	90980-11136	G5	Door Lock Control SW	90980-10797
E37	Blower SW	90980-10877	G6	Power Window SW (Front RH)	90980-10789
E38	Damper Servo Motor (Air Mix)	90980-11909	G7	Door Lock Assembly (Front RH)	90980-12226
E39	Damper Servo Motor (Air Vent Mode)		H1	Junction Connector	90980-11542
E40	A/C Thermistor	90980-11918	H2	Outer Rear View Mirror (LH)	90980-11182
E41	Radio Receiver Assembly	90980-10997	H3	Power Window Regulator Motor (Front LH)	90980-10797
E42	Radio Receiver Assembly	90980-10996	H4	Speaker (Front LH)	90980-10935
E43	Radio Receiver Assembly	90980-12460	H5	Power Window Master SW	90980-10997
E44	Option Connector (TVIP)	90980-10795	H6	Door Lock Assembly (Front LH)	90980-12226
E45	Damper Servo Motor (Air Inlet)	90980-11909	I1	Door Courtesy SW (Front RH)	90980-10871
E46	Engine Control Module	90980-12529	I2	Door Courtesy SW (Rear RH Upper Side)	90980-10824
E47	Engine Control Module	90980-12525	I3	Door Courtesy SW (Rear RH Lower Side)	90980-10825
E49	Outer Mirror SW	90980-11657	I4	Pretensioner (RH)	90980-12253
E50	Junction Connector	90980-11661	J1	Door Courtesy SW (Front LH)	90980-10871
E51	Junction Connector		J2	Door Courtesy SW (Rear LH Upper Side)	90980-10824
E52	Junction Connector	90980-10976	J3	Door Courtesy SW (Rear LH Lower Side)	90980-10825

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
J4	Pretensioner (LH)	90980-12253	Q2	Occupant Classification Sensor (Rear LH)	90980-12354
J5	Front Seat Outer Belt (LH)	90980-12063	Q3	Front Seat Inner Belt (RH)	90980-11019
K1	Airbag Sensor Assembly Center	90980-12450	Q4	Occupant Classification ECU	90980-12356
K2	Side Airbag Sensor (Front RH)	90980-12225	Q5	Occupant Classification ECU	90980-12357
K3	Side Airbag Sensor (Rear RH)	90980-12352	Q6	Occupant Classification Sensor (Rear RH)	90980-12353
K4	Speaker (Woofer w/ Amplifier)	90980-11102	Q7	Occupant Classification Sensor (Front RH)	90980-12354
K5	Curtain Shield Airbag Squib (RH)	90980-11886	R1	Option Connector (EC Mirror and Off-road Lamp)	90980-11452
K6	Voltage Inverter	90980-10803	R2	Room Lamp (Front)	-
K7	Voltage Inverter	90980-12299	R3	Room Lamp (Rear)	
K8	Power Outlet Socket (115V)	90980-10797	R4	Speaker (Roof LH)	
L1	Airbag Sensor Assembly Center	90980-12449	R5	Speaker (Roof RH)	90980-11918
L2	Door Courtesy SW (Back Door)	90980-10871	S1	License Plate Lamp	90980-11166
L3	Option Connector (Trailer Socket)	90980-11028	S2	Door ECU (Back)	90980-10799
L4	Side Airbag Sensor (Front LH)	90980-12225	S3	Rear Wiper Motor Assembly	90980-11599
L5	Fuel Suction Pump and Gage Assembly	90980-11077	S4	Back Door Lock Assembly	90980-11858
L6	Side Airbag Sensor (Rear LH)	90980-12352	S5	Door ECU (Back)	90980-11877
L7	4WD Control ECU (Rear Diff. Lock)	90980-10801	S6	Back Window Lock Assembly	90980-10795
L8	Curtain Shield Airbag Squib (LH)	90980-10886	S7	Back Door Lock Cylinder Assembly	90980-11490
L9	Tweeter (Rear LH)	90980-11060	S8	Diode (Back Door)	90980-11071
L10	Canister Pump Module	90980-12380	T1	Center Stop Lamp	90980-11156
L11	Rear Combination Lamp (LH)	90980-10908	U1	Knock Control Sensor (Bank 2)	90980-11875
L12	Rear Combination Lamp (LH)	90980-10906	U2	Knock Control Sensor (Bank 1)	
L13	Rear Combination Lamp (LH)	90980-11162	V1	Speed Sensor (Front RH)	90980-11900
L14	Rear Combination Lamp (RH)	90980-10908	W1	Speed Sensor (Front LH)	
L15	Rear Combination Lamp (RH)	90980-10906	X1	Speed Sensor (Rear RH)	
L16	Rear Combination Lamp (RH)	90980-11162	X2	Speed Sensor (Rear LH)	
L17	Front Seat Inner Belt (LH)	90980-10942	Y1	Airbag Squib (Front Passenger's Airbag Assembly)	90980-12224
L18	Tweeter (Rear RH)	90980-11060	Y2	Airbag Squib (Front Passenger's Airbag Assembly)	90980-12219
L19	Front Seat Inner Belt (LH)	90980-10789	Z1	Side Airbag Squib (RH)	90980-12452
L20	Junction Connector	90980-11915	a1	Side Airbag Squib (LH)	
L21	Junction Connector	90980-11661	b1	Rear Window Defogger	90980-09023
L22	Junction Connector		b2	Rear Window Defogger	
M1	Ultrasonic Sensor (Rear Center RH)	90980-11246			
N1	Ultrasonic Sensor (Rear Center LH)				
Q1	Occupant Classification Sensor (Front LH)	90980-12353			

Note: Not all of the above part numbers of the connector are established for the supply.

