



**RANGE ROVER EVOQUE
OWNER'S HANDBOOK SUPPLEMENT**

Publication Part No. LSA 10 02 60 191



Supplementary Information

ABOUT THIS SUPPLEMENT


The following information replaces that within the Owner's Handbook.

The information relating to the touchscreen operation is dependent on the vehicle's specification and may not be applicable.

Images used in this publication are for illustrative purposes only and may not reflect exactly what is fitted to the vehicle.

Supplementary Information

TOUCH SCREEN HOME MENU

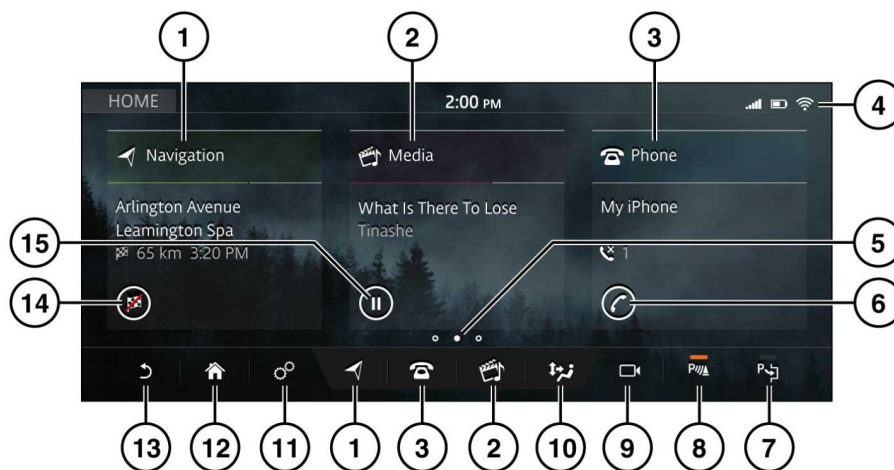

E220686

Make sure the following warnings and cautions have been read and fully understood before using the touchscreen controls. Failure to use the touchscreen controls safely could result in an accident, leading to serious injury or death.

⚠ Do not adjust the touchscreen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, potentially causing serious injury or death.

ⓘ Always run the engine during prolonged use of the touchscreen. Failure to do so may discharge the vehicle's battery and prevent the engine from starting.

ⓘ Avoid spilling or splashing liquids onto the touchscreen. The spilling or splashing of liquids could cause the touchscreen to malfunction or even lead to complete failure.

Swipe the home menu screen to the left, to access the **EXTRA FEATURES** screens or to the right, to access the **MY HOME** screens.

1. Navigation: Touch to select the **NAVIGATION** assistance map. See the Owner's Handbook.

2. Media: Touch to select the **SELECT SOURCE** media screen. If the media system is already switched on, touch to select the current media source menu. See **7, MEDIA CONTROLS**.

Note: When the system is active, current information for the media being played is displayed.

3. Phone: Touch to select the **PHONE** screen. See the Owner's Handbook.

4. Status icons: Display the status of a vehicle feature or application. See the Owner's Handbook.

Supplementary Information

5. **Page indicator:** Indicates the number of available screens. The solid dot indicates the position of the currently displayed screen.
6. **Phone shortcut:** Touch to select **Voicemail** when a phone is connected, or the **PHONE** screen when no phone is connected.
7. **Park assist icon:** Touch to switch the **PARK ASSIST** screen on or off. See the Owner's Handbook.
8. **Parking aids icon:** Touch to switch the **PARKING AIDS** screen on or off. See the Owner's Handbook.
9. **Camera icon:** Touch to select the **CAMERA** screen. See the Owner's Handbook.
10. **Climate icon:** Touch to select the **CLIMATE** control screen. See the Owner's Handbook. If heated or climate seats are fitted the **seats** icon¹ replaces the **climate** icon. See the Owner's Handbook. If dual view is fitted the **dual view** icon² replaces the **seats** or **climate** icons. See the Owner's Handbook.
11. **Settings icon:** Touch to select **Home Settings** via the **SETTINGS** pop-up menu.
12. **Home icon:** Touch to select the **PREVIEWS** screen. Touch to select the **HOME** screen, when in other screens.
13. **Return icon:** Touch to return to a higher menu level.
Note: The return icon is disabled on the HOME screen.
14. **Navigation shortcut:** Touch to set a destination or to cancel guidance if a destination is already set.
15. **Media shortcut:** Touch to select the media shortcut:
 - CD, **Bluetooth®** and USB: Alternate between pause and play.
 - Radio: Station mute.




seats icon¹.



dual view icon².

Supplementary Information

MY HOME SCREEN

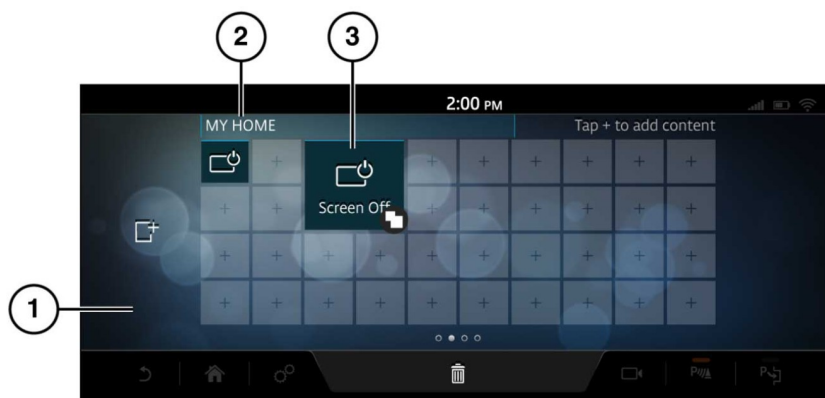

E200654



Do not adjust the touchscreen controls or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, potentially causing serious injury or death.

Note: The screen shown is in edit mode.

From the **HOME** screen, swipe the touchscreen to the right, to access the **MY HOME** screen. See **3, TOUCH SCREEN HOME MENU**

To view all of the **MY HOME** screens, continue to swipe to the right. To return to the **HOME** screen swipe to the left.

The **MY HOME** screen enables the user to display and arrange widgets and shortcuts to applications.

1. **MY HOME** screen: Multiple screens are available.
2. Personalised **MY HOME** screen name: Touch to edit.

3. Widgets and shortcuts: The widgets and shortcuts are available in different sizes and can be moved to different locations.

EDITING SHORTCUTS, WIDGETS AND SCREENS

Adding a widget: Touch and hold the screen to display edit mode. Touch any of the + symbols on the screen and select from the available categories in the **CONTENT LIBRARY**. Scroll through the gallery of widgets using the direction arrows, or swipe the screen. Touch to select a widget. The widget is then displayed on the **MY HOME** screen.

Moving a widget: Touch and hold the screen to display edit mode. Drag the widget to a new location. To move the widget to another **MY HOME** screen, drag it to the side of the screen.



Supplementary Information

Resizing a widget: Touch and hold the screen to display edit mode. When the widget has been selected, moved to a new location, or newly created, a resize toggle is displayed. Touch the toggle to resize the widget.

Delete a widget: Touch and hold the screen to display edit mode. Drag the widget to the delete bar.

Edit a personalised screen name: Touch and hold the screen to display edit mode. Touch the screen name and enter text using the keyboard. Touch **OK** to complete.

Moving a screen: Touch the **home** icon to display the **PREVIEW** screen for the **HOME**, **MY HOME** and **EXTRA FEATURES** screens. Touch the preview to display the chosen screen. Touch and hold the screen to display the **EDIT PREVIEWS** screen. Touch and drag the screen preview to the required position.


Adding a screen: While in the **PREVIEW** screen, touch and hold the screen to display the **EDIT PREVIEWS** screen. Touch the **+** symbol to create a new **MY HOME** screen. When adding or moving a widget, it can be dragged to the left side of the screen to create a new **MY HOME** screen.

Note: A maximum of four **MY HOME** screens can be added.

Deleting a screen: While in the **PREVIEW** screen, touch and hold the screen to display the **EDIT PREVIEWS** screen. Touch and hold the chosen **MY HOME** screen, and drag it to the delete bar and release.

Supplementary Information

MEDIA CONTROLS

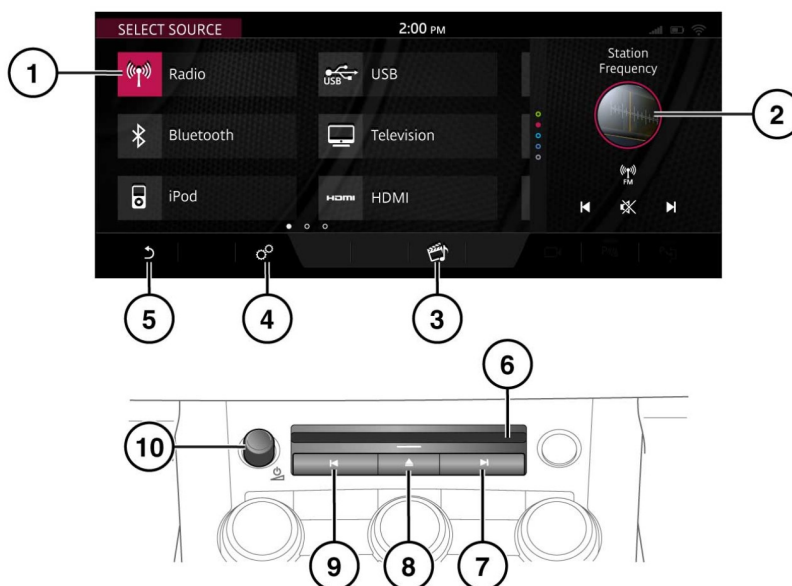

E226855

Make sure the following warnings and cautions have been read and fully understood before using any of the media controls or features. Failure to use the media controls or features safely could result in an accident, leading to serious injury or death.



Do not adjust the touchscreen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, potentially causing serious injury or death.



Sustained exposure to high sound levels, greater than 85 decibels, can damage hearing.

From the **HOME** screen, select the **Media** screen. See **3, TOUCH SCREEN HOME MENU**.

1. **Media source:** Touch to select the media source.
2. **Side panel:** Displays the last used feature.
3. **Media icon:** Touch to select the media system. If the media system is already switched on, touch to select the media source.
4. **Settings icon:** Select to display the **SETTINGS** pop-up menu. Select **Audio Settings** to view or adjust the audio settings. See the Owner's Handbook.
5. **Return icon:** Touch to return to a higher menu level.



Supplementary Information

6. CD/DVD loading slot: The player accommodates one disc at a time. Insert a disc into the loading slot until resistance is felt. The players mechanism completes the loading.

7. Seek up:

Press and release:

- To seek up the frequency to the next radio station.
- To select the next track on the chosen media library or the connected portable media source.
- To select the next TV channel on the channel list, or the next video or DVD chapter.

Press and hold:

- To auto-seek up the frequency to the next radio station.
- To fast forward the current playing track, video or chapter.

8. Eject button: Press to eject the CD/DVD.

9. Seek down:

Press and release:

- To seek down the frequency to the next radio station.
- To select the previous track, or the start of the current track, on the chosen media library or the connected portable media source.
- To select the previous TV channel on the channel list, or the previous video or DVD chapter.

Press and hold:

- To auto-seek down the frequency to the previous radio station.
- To rewind the current playing track, video or chapter.

10. Power and volume control:

- Press to switch the media system on or off.

Note: The media system operates with the ignition on or off, but always switches off when the ignition is switched off. Switch the system on again, if required.

- Rotate to adjust the volume level. The level is displayed on the touchscreen.

Note: If the volume is turned to zero while a media source is playing, the media pauses play. Play resumes when a greater volume is selected.

VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

When the vehicle is moving, the touchscreen displays a relevant safety message, and the video picture is automatically inhibited.

SOFTWARE UPDATES

The vehicle may support the download and installation of over the air software updates. Over the air software allows certain components of the vehicle to be kept up-to-date without the need to visit a retailer/authorised repairer.

When a new software update is available, a notification will display on the touchscreen upon starting or switching off the vehicle. Follow the step-by-step instructions to accept the update and begin the download process, alternatively postpone the update to a later date.

Note: The download of data may incur costs.

Supplementary Information

On completion of the software download, accept the on-screen prompt to begin the install process. Switch off and exit the vehicle, making sure that it is in a locked and alarmed state. Upon successful completion of the update, an on-screen notification is given.

Note: It may take up to 30 minutes to complete the update process.

To complete a software update observe the following conditions:

- The new software must be successfully downloaded onto the vehicle via the in-built SIM or a personal SIM card.
- The vehicle needs cellular connectivity during the process of performing a software update. See the Owner's Handbook.

- The vehicle has to be locked and alarmed for up to 30 minutes.
- The terms and conditions for the download and install must be accepted.
- The vehicle update must not be interrupted, either by the vehicle owner or by loss of cellular connectivity.
- The vehicle may need to be associated to an active InControl account. See the Owner's Handbook.

Note: Availability of over the air updates may vary depending on market and vehicle specification.

TYRE PRESSURES

Tyre pressures for coupe vehicles

Tyre pressures for speeds below 161 km/h (100 mph)				
Tyre size	Normal load up to maximum Gross Vehicle Weight (GVW)		Comfort setting (up to 3 occupants and 1 luggage item)	
	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)
225/65 R17 106V	2.4 (35, 240)	2.2 (32, 220)	2.4 (35, 240)	2.1 (31, 210)
235/60 R18 103V	2.4 (35, 240)	2.1 (31, 210)	2.4 (35, 240)	2.1 (31, 210)
235/60 R18 107V	2.4 (35, 240)	2.2 (32, 220)	2.4 (35, 240)	2.1 (31, 210)
235/55 R19 105V	2.5 (37, 250)	2.3 (34, 230)	2.5 (37, 250)	2.2 (32, 220)
235/55 R19 105W	2.6 (38, 260)	2.3 (34, 230)	2.5 (37, 250)	2.2 (32, 220)



Supplementary Information

Tyre pressures for speeds below 161 km/h (100 mph)				
Tyre size	Normal load up to maximum Gross Vehicle Weight (GVW)		Comfort setting (up to 3 occupants and 1 luggage item)	
	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)
245/45 R20 103W	2.7 (40, 270)	2.5 (37, 250)	2.5 (37, 250)	2.2 (32, 220)
155/85 R18 115M	4.2 (61, 420)		4.2 (61, 420)	

Tyre pressures for speeds in excess of 161 km/h (100 mph)				
Tyre size	Normal load up to maximum Gross Vehicle Weight (GVW)		Comfort setting (up to 3 occupants and 1 luggage item)	
	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)
225/65 R17 106V	2.4 (35, 240)	2.2 (32, 220)	2.4 (35, 240)	2.2 (32, 220)
235/60 R18 103V	2.4 (35, 240)	2.1 (31, 210)	2.4 (35, 240)	2.1 (31, 210)
235/60 R18 107V	2.4 (35, 240)	2.2 (32, 220)	2.4 (35, 240)	2.2 (32, 220)
235/55 R19 105V	2.5 (37, 250)	2.3 (34, 230)	2.5 (37, 250)	2.3 (34, 230)
235/55 R19 105W	2.6 (38, 260)	2.3 (34, 230)	2.6 (38, 260)	2.3 (34, 230)
245/45 R20 103W	2.7 (40, 270)	2.5 (37, 250)	2.7 (40, 270)	2.5 (37, 250)
155/85 R18 115M	4.2 (61, 420)		4.2 (61, 420)	

Supplementary Information

Tyre pressures for convertible vehicles

Tyre pressures for speeds below 160 km/h (99 mph)				
Tyre size	Normal load up to maximum Gross Vehicle Weight (GVW)		Comfort setting (up to 3 occupants and 1 luggage item)	
	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)
225/65 R17 106V	2.5 (37, 250)	2.4 (35, 240)	2.5 (37, 250)	2.4 (35, 240)
235/60 R18 103V	2.5 (37, 250)	2.4 (35, 240)	2.5 (37, 250)	2.4 (35, 240)
235/60 R18 107V	2.5 (37, 250)	2.4 (35, 240)	2.5 (37, 250)	2.4 (35, 240)
235/55 R19 105V	2.6 (38, 260)	2.4 (35, 240)	2.5 (37, 250)	2.4 (35, 240)
235/55 R19 105W	2.6 (38, 260)	2.4 (35, 240)	2.5 (37, 250)	2.4 (35, 240)
245/45 R20 103W	3.2 (47, 320)	2.8 (41, 280)	2.5 (37, 250)	2.4 (35, 240)
155/85 R18 115M	4.2 (61, 420)		4.2 (61, 420)	

Tyre pressures for speeds in excess of 160 km/h (99 mph)				
Tyre size	Normal load up to maximum Gross Vehicle Weight (GVW)		Comfort setting (up to 3 occupants and 1 luggage item)	
	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)
225/65 R17 106V	2.5 (37, 250)	2.4 (35, 240)	2.5 (37, 250)	2.4 (35, 240)
235/60 R18 103V	2.5 (37, 250)	2.4 (35, 240)	2.5 (37, 250)	2.4 (35, 240)
235/60 R18 107V	2.5 (37, 250)	2.4 (35, 240)	2.5 (37, 250)	2.4 (35, 240)
235/55 R19 105V	2.6 (38, 260)	2.4 (35, 240)	2.6 (38, 260)	2.4 (35, 240)



Supplementary Information

Tyre pressures for speeds in excess of 160 km/h (99 mph)				
Tyre size	Normal load up to maximum Gross Vehicle Weight (GVW)		Comfort setting (up to 3 occupants and 1 luggage item)	
	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)	Front pressures bar (psi, kPa)	Rear pressures bar (psi, kPa)
235/55 R19 105W	2.6 (38, 260)	2.4 (35, 240)	2.6 (38, 260)	2.4 (35, 240)
245/45 R20 103W	3.2 (47, 320)	2.8 (41, 280)	3.2 (47, 320)	2.8 (41, 280)
155/85 R18 115M	4.2 (61, 420)		4.2 (61, 420)	

LUBRICANTS AND FLUIDS

Description	Variant	Specification
Engine oil	Petrol	SAE 0W-20 meeting Jaguar Land Rover specification STJLR.03.5006, or STJLR.51.5122.