


Chevrolet Corvette 2015 fuse box diagram

Engine compartment fuse block

There is one fuse block in the engine compartment on the passenger side of the vehicle.

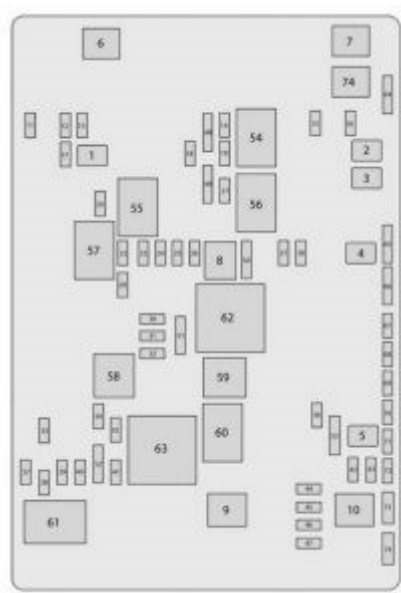

Chevrolet Corvette – fuse box – engine compartment

Micro J-Case Fuses		Usage
1		Front Wiper
2		Starter
3		Antilock Brake System Valves
4		Engine Control Module
5		Electric Parking Brake
J-Case Fuses		Usage
6		Front Heater, Ventilation, and Air Conditioning
7		Antilock Brake System Pump
8		Logistics
9		Vacuum Pump
10		Electronic Rear Differential Module
74		Transmission Cooling Fan 2
Micro Fuse 2-pin		Usage
11		Heated Seat 1
12		Column Lock Module
13		Steering Column
14		Glove Box
15		Engine Inside Position
16		Body Control Module 6
17		Heater, Ventilation and Air Conditioning Controls


18	Body Control Module 5
19	Heated Seat 2
20	Body Control Module 7
21	Electric Steering Column Lock
22	Display
23	Auxiliary Outlet
24	Radio
25	Instrument Cluster HUD
26	Inside Rearview Mirror
27	Odd Ignition
28	Even Ignition
29	Data Link Connector
30	Seat Fan
31	Fuel Pump Power Module
32	Exhaust Valve 1
33	Horn
34	Headlamp Washer
35	Air Conditioning Compressor Clutch
36	Engine Outside Position
37	Real Time Damping
38	Intercooler
39	Left Headlamp
40	Right Headlamp
41	Headlamp Washer Pump
42	Exhaust Valve 2
43	Reverse Lockout
44	Electric Rear Differential Module
45	Rear Transmission Cooler Fan
46	Transmission Control Module
47	Canister Vent
Micro Fuses 3-pin	Usage
48	Integrated Chassis Control Module/Automatic Occupant Sensing
49	Theft/Vehicle Interface Module
50	Engine/Transmission
51	Instrument Cluster
52	Headlamp High Beam
53	Transmission Control Module/Engine Control Module

Micro Relay	Usage
54	Starter

55	Front Wiper Low/High
56	Run/Crank
57	Front Wiper Motor
58	Headlamp Washer
59	Air Conditioning Control
60	Logistics 1
61	Headlamp Low
Mini Relays	Usage
62	Engine Control Module
63	Vacuum Pump
Spare fuses	Usage
64	Spare
65	Spare
66	Spare
67	Spare
68	Spare
69	Spare
70	Spare
71	Spare
72	Spare
73	Spare

Rear Compartment Fuse Block

The rear compartment fuse block is in the rear of the vehicle, under the load floor. Lift the carpet and access door in the center of the load floor to access the fuses.

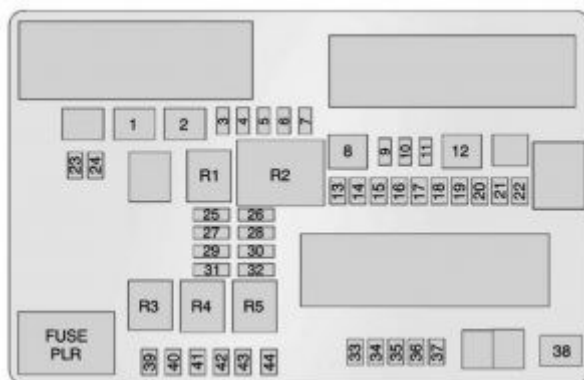

Chevrolet Corvette – fuse box – rear compartment

Fuses	Usage
1	Window
2	Driver Power Seat
3	PEPS 2
4	PEPS 1
5	Engine Control Module
6	Heated Mirrors
7	Body Control Module 4

8	Rear Window Defogger
9	GBS
10	Body Control Module 2
11	Steering Wheel
12	Passenger Power Seat
13	Not Used
14	Outside Rearview Mirror
15	Body Control Module 1
16	Body Control Module 3
17	Sensing Diagnostic Module/Automatic Occupant Sensing
18	Logistics 2
19	Body Control Module 8
20	Integrated Chassis Control Module
21	Amplifier
22	Rear Accessory Power Outlet
23	Rear Closure
24	Memory Seat Module/Convertible Top
25	Theft-Deterrent PSM
26	Pressure Vent (Coupe Only)
27	OnStar (If Equipped)
28	Not Used
29	Not Used
30	Fuel Pump Power Module
31	Not Used
32	Battery Regulated Voltage Control
33	Not Used
34	Convertible Top Solenoid
35	Not Used
36	Passenger Window Switch
37	Front Accessory Power Outlet
38	Not Used
39	Spare
40	Spare
41	Spare
42	Spare
43	Spare
44	Spare

Relays	Usage
--------	-------

R1	Logistics 2
R2	Rear Window Defogger
R3	Not Used
R4	Front Accessory Power Outlet
R5	Theft (Door Lock Security)