

ABBREVIATIONS

ABBREVIATIONS

The following abbreviations are used in this manual.

ABS	= Anti-Lock Brake System
ACIS	= Acoustic Control Induction System
A/C	= Air Conditioning
A/T	= Automatic Transmission
COMB.	= Combination
C/P	= Coupe
ECU	= Electronic Control Unit
EFI	= Electronic Fuel Injection
EGR	= Exhaust Gas Recirculation
ESA	= Electronic Spark Advance
Ex.	= Except
FL	= Fusible Link
IAC	= Idle Air Control
ISC	= Idle Speed Control
J/B	= Junction Block
LH	= Left-Hand
MFI	= Multiport Fuel Injection
M/T	= Manual Transmission
O/D	= Overdrive
R/B	= Relay Block
RH	= Right-Hand
RPM	= Engine Speed
S/D	= Sedan
SFI	= Sequential Multiport Fuel Injection
SRS	= Supplemental Restraint System
SW	= Switch
TEMP.	= Temperature
VSV	= Vacuum Switching Valve
W/G	= Wagon
w/	= With
w/o	= Without

- * The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.