


Chevrolet Corsica 1987 – 1996 fuse box diagram

Fuse Box diagram

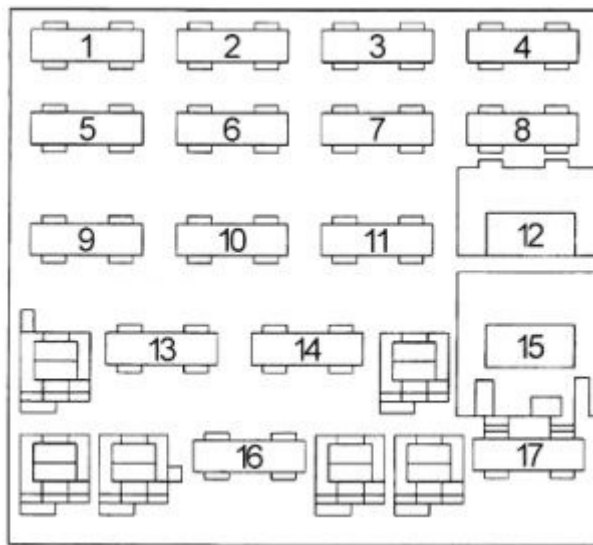

Chevrolet Corsica – fuse box diagram

No.	A	Protected Component
1	15	'87-'93, '96: Computer Command Control, Fuel Injector
2	20	'89-'96: Stoplights, Hazard Lights
3	15	'87-'88: Radio
	10	'91-'96: Air Bag, Ignition
4	20	'87-'88: Stoplights, Hazard Lights
	5	'89-'92: Alternator, Anti-Lock Brakes ('92)
	10	'93-'96: Alternator, Anti-Lock Brakes ('93-'95), LGO Heater Pipe ('93-'94), Daytime Running Light ('95-'96), Multiport Fuel Injection ('96)
5	20	'87-'95: Back-Up Lights, Turn Signal Lights
	15	'96: Back-Up Lights, Turn Signal Lights
6	20	'89-'96: Trunk Release, Cigarette Lighter ('89-'95), Interior Lights ('96)
7	20	Parking & Side Marker Lights, License Lights, Daytime Running Light ('96)
8	25	Heater & Air Conditioner
9	20	Gauges/Warning Indicator, Audible Warning System, Rear Window Defogger, Air Conditioner, Computer Command Control ('87-'90) Cruise Control ('95-'96), Daytime Running Light ('95-'96), ABS ('96), Automatic Door Locks ('96), Automatic Seat Belts ('96), Multiport Fuel Injection ('96), Supplemental Inflatable Restraint ('96)

10	25	Windshield Wiper/Washer
11	20	'87-'93: Courtesy Lights, Clock, Door Locks ('87-'93), Horn ('87-'93), Cigar Lighter ('87-'90), Radio-CD ('91-93), Trunk Release ('87-'88), Audible Warning System, ABS Passive Belts
	15	'94-'96: Courtesy Lights ('94-'95), Clock ('94-'95), Radio-CD ('94-'95), Audible Warning System, ABS Passive Belts
12	35	Circuit Breaker ('87-'91): Power Windows
	30	Circuit Breaker ('92-'96): Power Windows
13	5	'87-'91: Instrument Panel Lights, Headlight Reminder ('87-'90)
	3	'92-'96: Instrument Panel Lights, Interior Lights Dimming ('96), Radio/Audio Systems ('96), Wiper/Washer ('96)
14	15	Radio, Cruise Control ('97-'95), Clock ('87-'88)
15	35	Circuit Breaker ('87-'91): Power Door Locks, Rear Window Defogger
	30	Circuit Breaker ('92-'96): Power Door Locks, Rear Window Defogger
16	10	'89: MAF Sensor (V6)
	5	'91: Daytime Running Light
	3	'92-'93: Daytime Running Light
	20	'94-'96: Fuel Pump/Injectors
17	3	'91-'93: Air Bag
	10	'94-'96: Automatic Door Unlock (Remove to Disable)

Additional Fuses ('94-'95)

There are 2 fuses under the steering column

No.	A	Protected Component
1	3	Air Bag
2	20	Fog Lamps, Door Lock, Horn