


3. Front Under Cover

A: REMOVAL

- 1) Lift-up the vehicle.
- 2) Loosen bolts and clips to remove under cover.

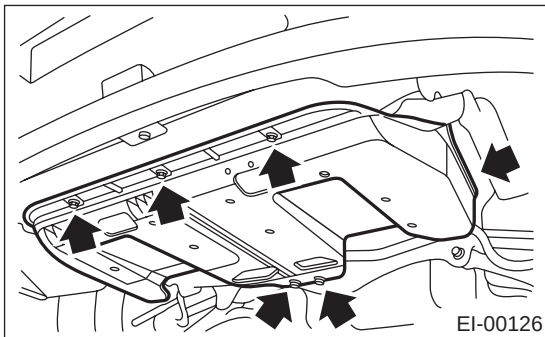

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

18.4 N·m (1.88 kgf-m, 13.6 ft-lb)