

REAR BUMPER

EXTERIOR/INTERIOR TRIM

5. Rear Bumper


A: REMOVAL

1. SEDAN


CAUTION:

- Handle bumper carefully to avoid damage to bumper face.
- Do not damage body during removal or installation of bumper.
- To avoid damage to bumper, lay removed bumper on sheet spread on the floor. Do not lay it directly on the floor.


- 1) Lift-up the vehicle.
- 2) Remove bolts and clips.

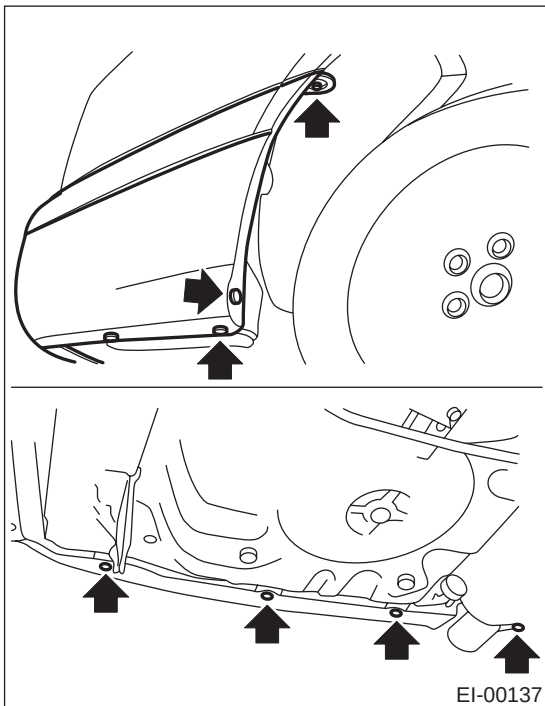


- 3) Loosen clips to remove trunk rear trim.

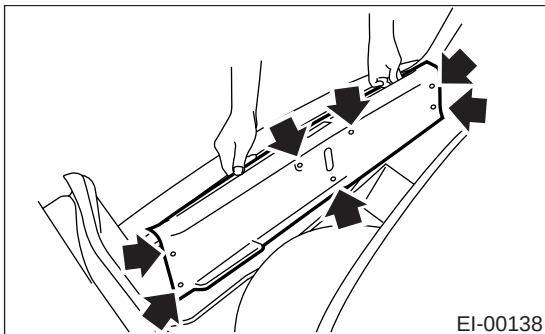


- 4) Remove hook (A) to pull off rear side of trunk side trim.

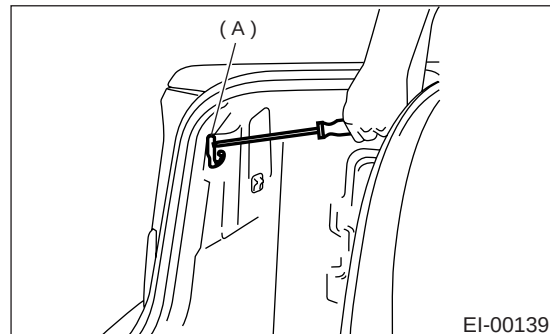


- 5) Remove two nuts from each side to remove rear bumper.

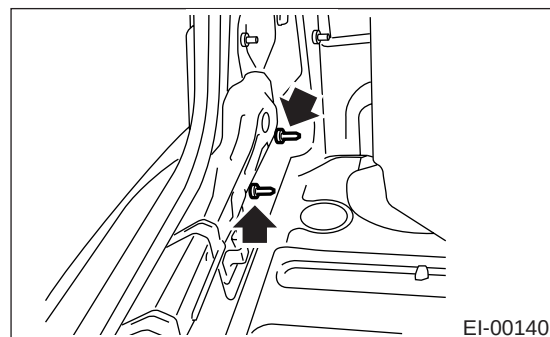

- 6) Loosen clips to remove upper beam (A) from bumper face.

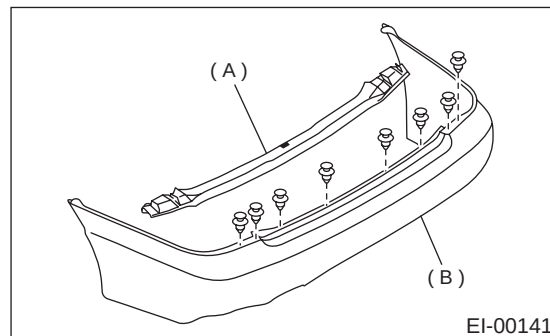

- 7) Remove resin beam.

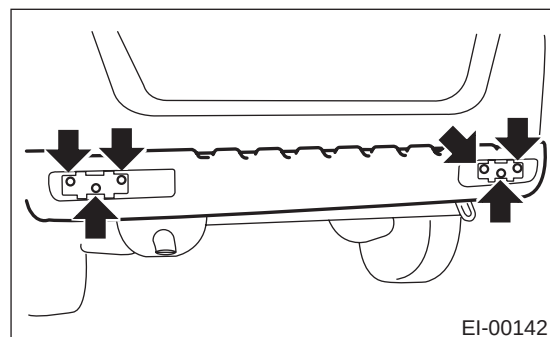

REAR BUMPER


EXTERIOR/INTERIOR TRIM

2. WAGON

CAUTION:


- Handle bumper carefully to avoid damage to bumper face.
- Do not damage body during removal or installation of bumper.
- To avoid damage to bumper, lay removed bumper on sheet spread on the floor. Do not lay it directly on the floor.

- 1) Lift-up the vehicle.
- 2) Remove trailer hitch. <Ref. to EI-31, REMOVAL, Trailer Hitch.>
- 3) Remove bolts and clips.

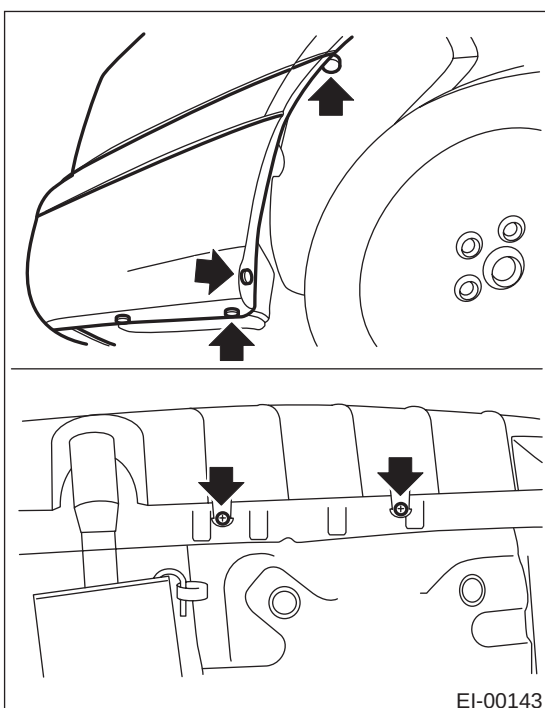


- 4) Remove rear floor box. <Ref. to EI-43, REMOVAL, Rear Quarter Trim.>


- 5) Pull off rear end of rear quarter lower trim to remove cap.

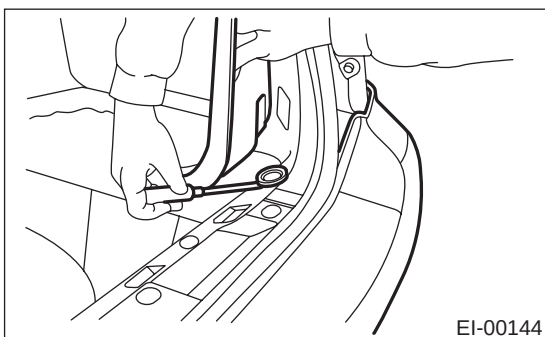


- 6) Loosen bolts to remove rear bumper.

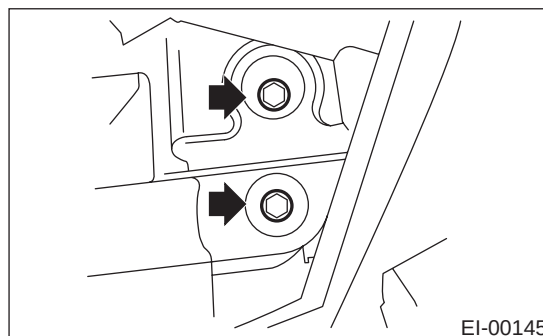

- 7) Loosen clip (A) to remove bumper beam (B) from rear bumper face (C).

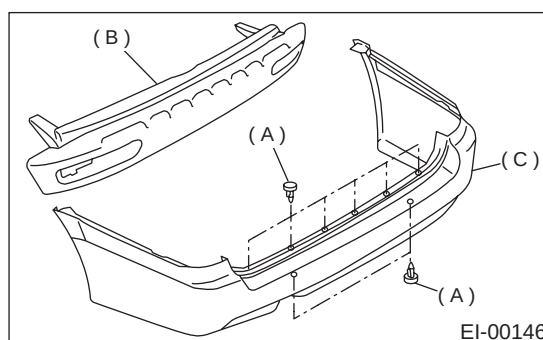

- 8) Remove resin beam from bumper beam.

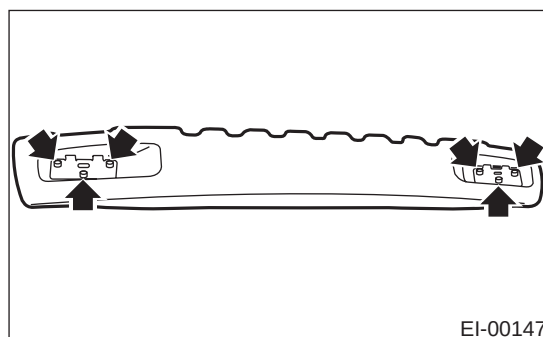

REAR BUMPER

EXTERIOR/INTERIOR TRIM


B: INSTALLATION

1. SEDAN

CAUTION:

- Handle bumper carefully to avoid damage to bumper face.
- Do not damage body during removal or installation of bumper.

- 1) Install in the reverse order of removal.
- 2) Fit slider (A) to guide pin (B) securely.

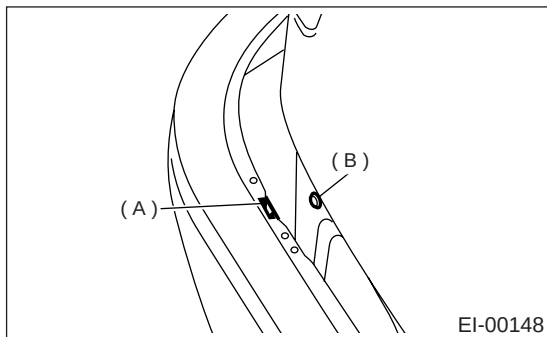

Tightening torque:


Refer to COMPONENT in General Description. <Ref. to EI-3, REAR BUMPER (SEDAN), COMPONENT, General Description.>

2. WAGON

CAUTION:

- Handle bumper carefully to avoid damage to bumper face.
- Do not damage body during removal or installation of bumper.

- 1) Install in the reverse order of removal.
- 2) Fit slider (A) to guide pin (B) securely.

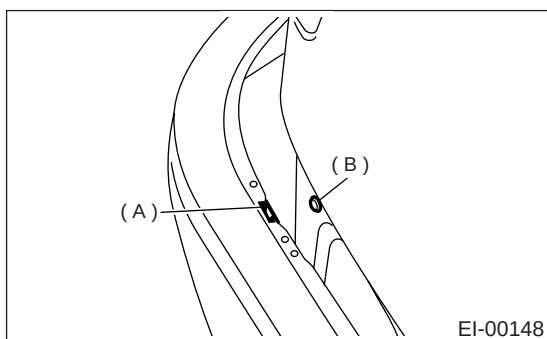

Tightening torque:

Refer to COMPONENT in General Description. <Ref. to EI-4, REAR BUMPER (WAGON), COMPONENT, General Description.>

C: REPAIR

Refer to front bumper repair. <Ref. to EI-14, REMOVAL, Front Bumper.>