

SPOILER

EXTERIOR/INTERIOR TRIM


9. Spoiler

A: REMOVAL

- 1) Open trunk lid.
- 2) Remove electrical connector (a) of high-mounted stop light.
- 3) Remove mounting nut of rear spoiler to remove rear spoiler.

CAUTION:

- When removing nut, do not drop it into trunk lid.
- Pay attention to avoid damage during removal or installation.

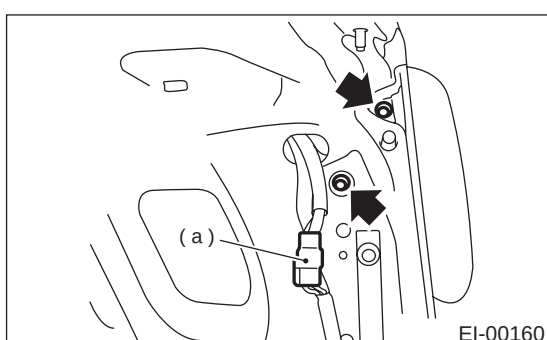

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Clean mounting surfaces of trunk lid and spoiler before installation.