


GLOVE BOX

EXTERIOR/INTERIOR TRIM


15. Glove Box

A: REMOVAL

1) Remove stoppers.

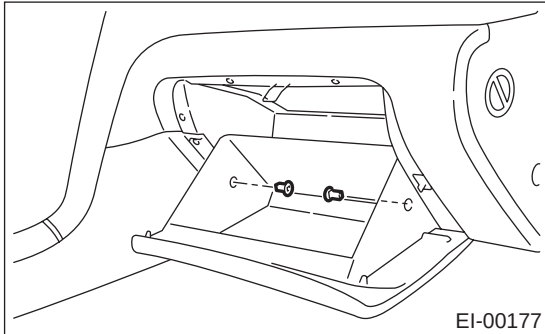

2) Loosen screws to remove glove box.

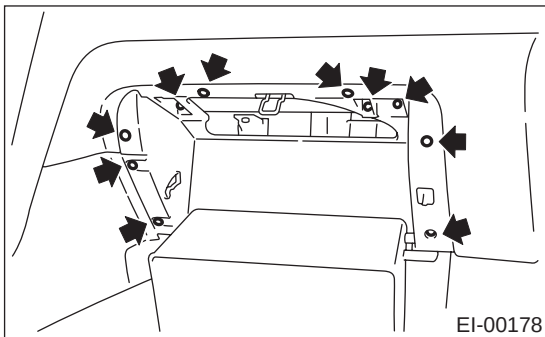

B: INSTALLATION

Install in the reverse order of removal.