


ROOF RAIL

EXTERIOR/INTERIOR TRIM

16.Roof Rail

A: REMOVAL

- 1) Remove roof trim. <Ref. to EI-45, REMOVAL, Roof Trim.>
- 2) Remove five mounting nuts and then detach roof rail carefully.

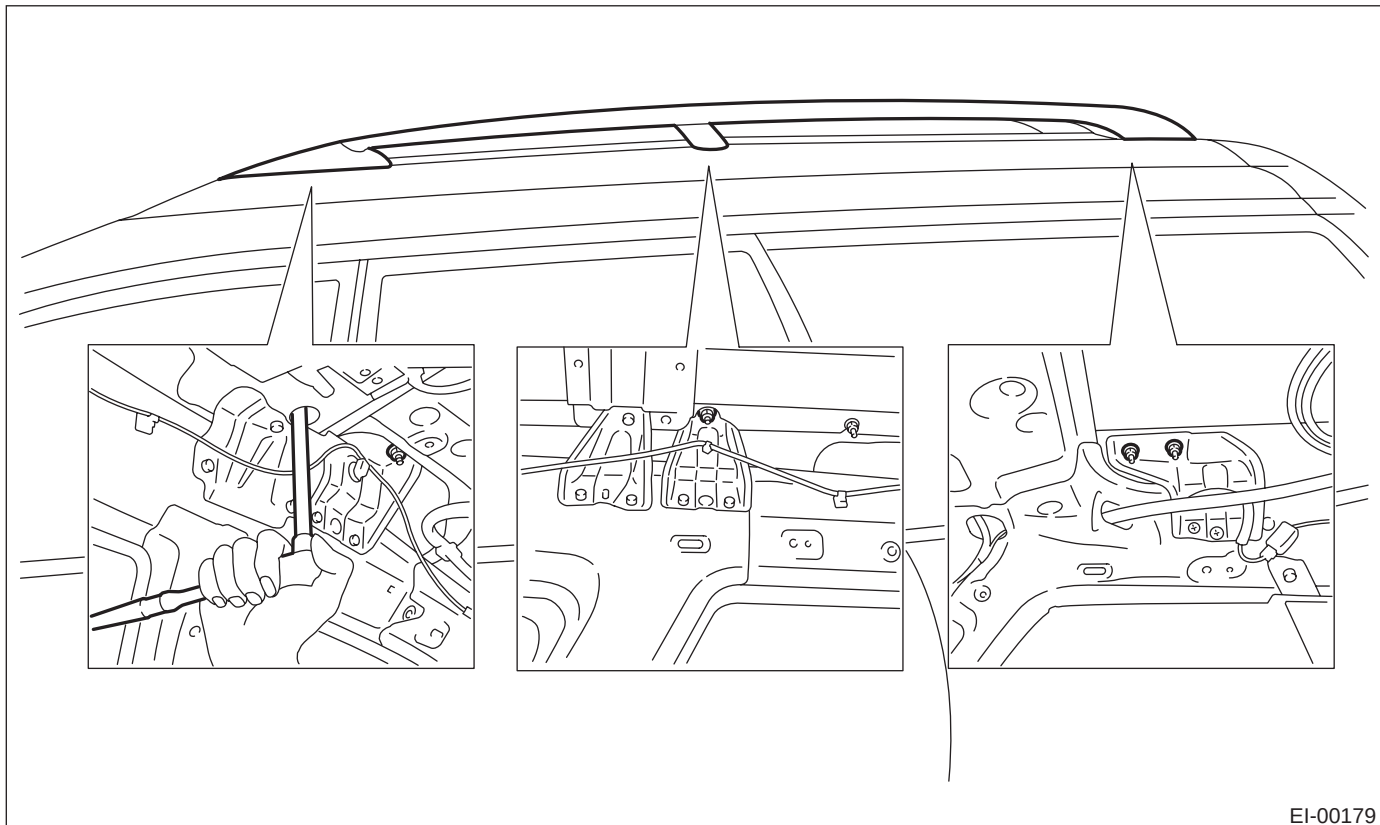

EI-00179

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be careful not to scratch body panels with roof rail stud bolts when removing and installing them.