


SUN VISOR

EXTERIOR/INTERIOR TRIM

22.Sun Visor

A: REMOVAL

Remove mounting screws then detach sun visor (A) and hook (B).

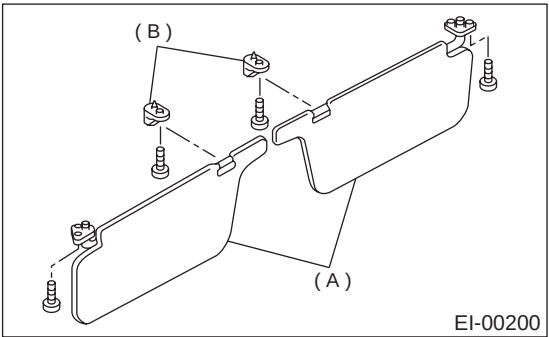

B: INSTALLATION

Install in the reverse order of removal.