


REAR SHELF TRIM

EXTERIOR/INTERIOR TRIM

25.Rear Shelf Trim


A: REMOVAL

1) Remove high-mounted stop light.

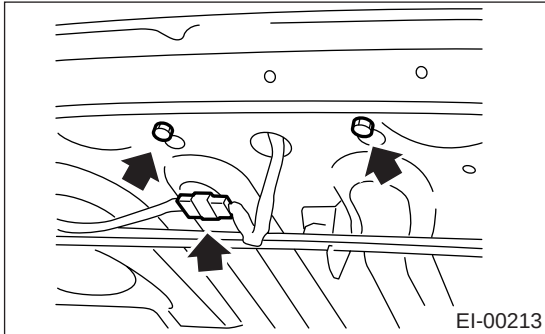


2) Remove rear seat backrest. <Ref. to SE-17, REMOVAL, Rear Seat.>

3) Remove inner seat belt RH, then disconnect inner seat belt RH (A) and outer seat belt center (B).

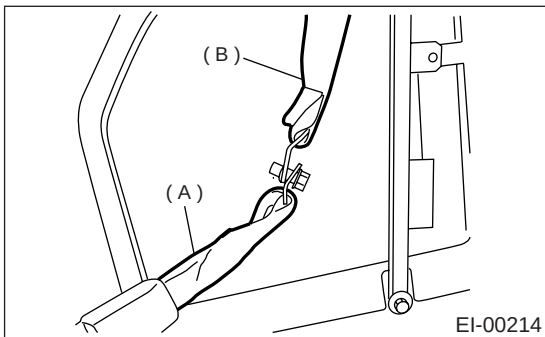

4) Detach rear shelf trim through each rear outer seat belt from slits (A) and hole (B) of rear shelf trim.

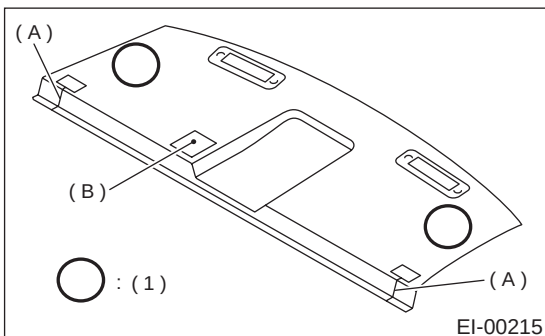

(1) Clip

B: INSTALLATION

Install in the reverse order of removal.