


TRUNK TRIM

EXTERIOR/INTERIOR TRIM

26.Trunk Trim

A: REMOVAL

- 1) Remove clips, and then detach trunk rear trim (A).
- 2) Remove luggage hook (B) and clips, then detach trunk side trim (C).

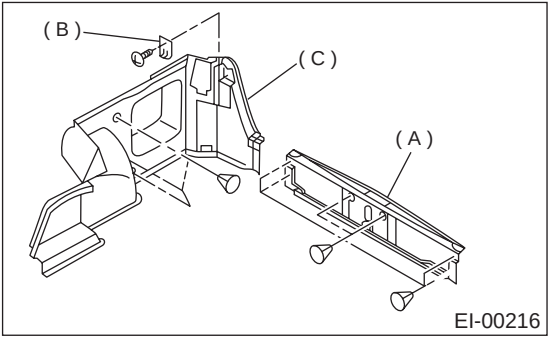

B: INSTALLATION

Install in the reverse order of removal.

EI-49