


LUGGAGE FLOOR MAT

EXTERIOR/INTERIOR TRIM

28.Luggage Floor Mat

A: REMOVAL

Remove clips, then detach rear floor mats and boxes.

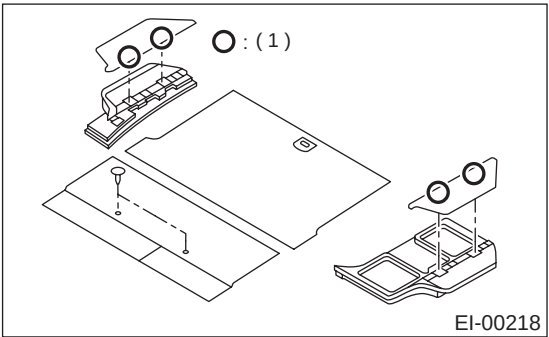

(1) Clips

B: INSTALLATION

Install in the reverse order of removal.

EI-51