


TRUNK ROOM MAT

EXTERIOR/INTERIOR TRIM

29.Trunk Room Mat

A: REMOVAL

Draw out trunk room mat.

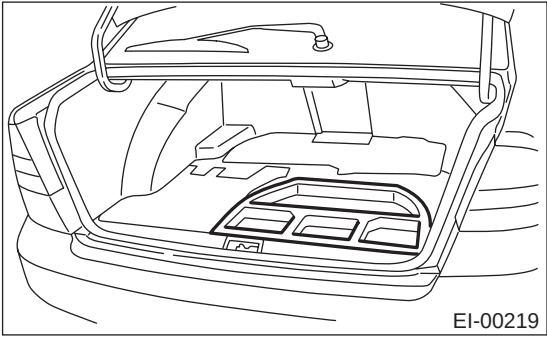

B: INSTALLATION

Install in the reverse order of removal.