


FRONT WIPER MOTOR AND LINK

WIPER AND WASHER SYSTEMS


7. Front Wiper Motor and Link

A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Remove cowl panel. <Ref. to EI-27, REMOVAL, Cowl Panel.>
- 3) Disconnect connector of motor.
- 4) Loosen bolts and nuts to remove wiper link.

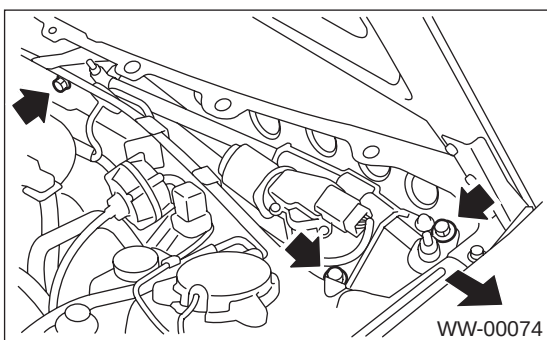

- 5) Loosen bolts and nuts to remove motor.

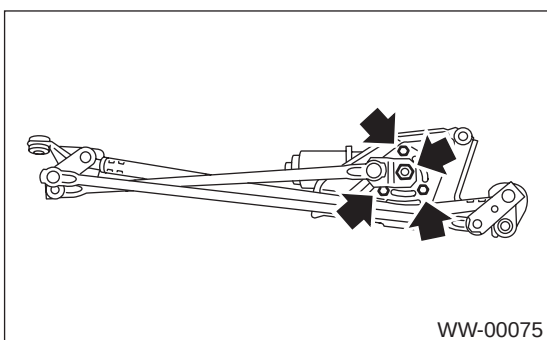

B: INSTALLATION


Install in the reverse order of removal.

Tightening torque:


Refer to **COMPONENT** in *General Description*. <Ref. to WW-2, **FRONT WIPER, COMPONENT**, *General Description*.>

C: INSPECTION


- 1) When battery is connected to terminal of connectors, confirm that motor operates at low speed.

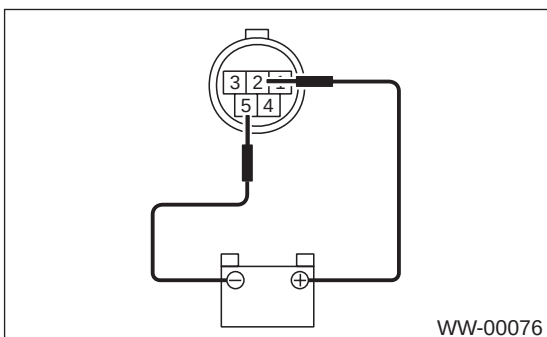

- 2) When battery is connected to terminal of connectors, confirm that motor operates at high speed.

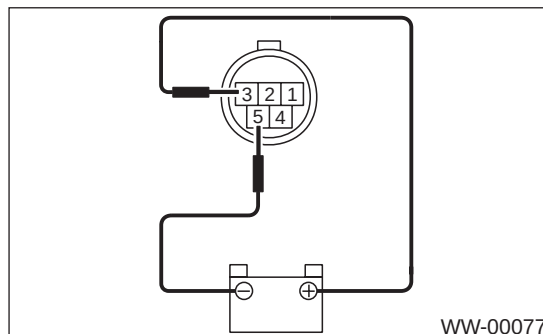

- 3) Connect battery to terminals of connector, and remove terminal connection with motor rotated at low speed, and stop wiper motor through operation.

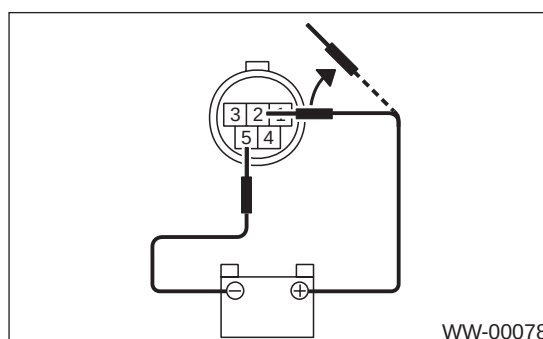

- 4) Connect battery and confirm that motor stops at automatic stop position after motor operates at low speed again.

