


REAR WIPER ARM

WIPER AND WASHER SYSTEMS

9. Rear Wiper Arm


A: REMOVAL

- 1) Raise wiper arm cover (A).
- 2) Loosen nut to remove wiper arm.

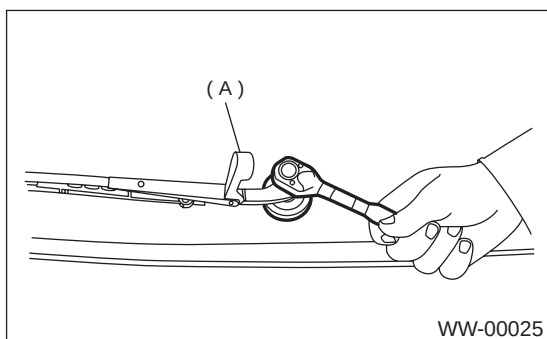

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Operate rear wiper once.
- 3) Align blade to rear defogger heat wire (A).

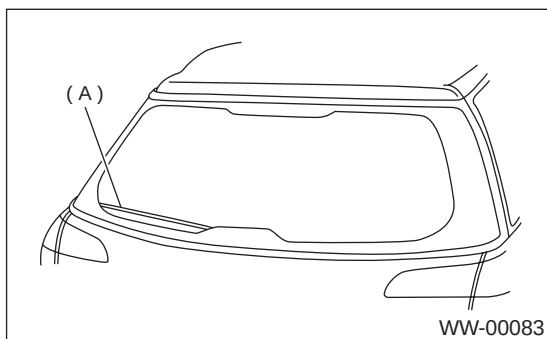

Tightening torque:

Refer to COMPONENT in General Description. <Ref. to WW-2, FRONT WIPER, COMPONENT, GENERAL DESCRIPTION.>

C: ADJUSTMENT

- 1) Operate rear wiper once.
- 2) Align blade to rear defogger heat wire (A).

