


## REAR WIPER MOTOR

WIPER AND WASHER SYSTEMS


### 10.Rear Wiper Motor

#### A: REMOVAL

- 1) Remove rear wiper arm.
- 2) Remove cap (A), nut (B), and spacer (C) from rear wiper shaft.

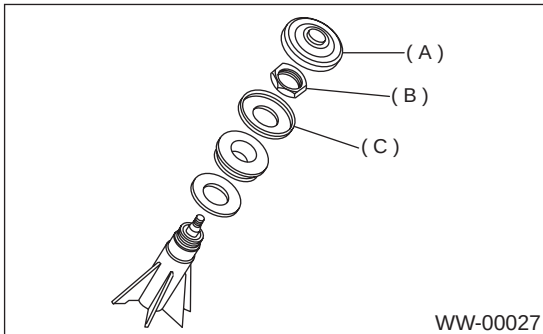


- 3) Remove rear gate lower trim. <Ref. to EI-47, REMOVAL, Rear Gate Trim.>
- 4) Unclip clip of harness and disconnect connector of wiper motor.
- 5) Loosen bolts to remove wiper motor assembly (A).

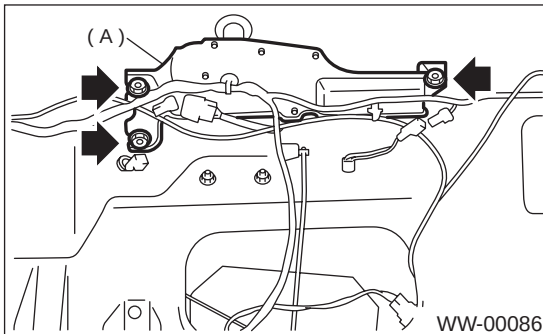

#### B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Install rear wiper cushion with the arrow mark facing up, as shown in the figure.

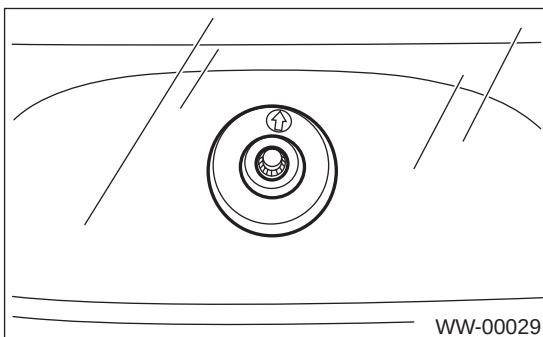


#### Tightening torque:


Refer to **COMPONENT** in **General Description**. <Ref. to WW-2, **FRONT WIPER, COMPONENT**, **General Description**.>

#### C: INSPECTION

- 1) Connect battery to wiper motor connector and confirm that wiper motor operates.

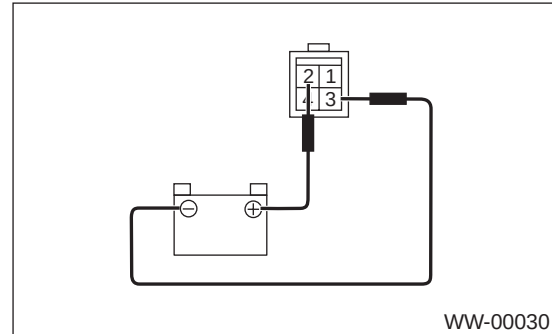

- 2) Connect battery to terminal of connector and remove terminal connections with motor rotated, and stop wiper motor through operation.

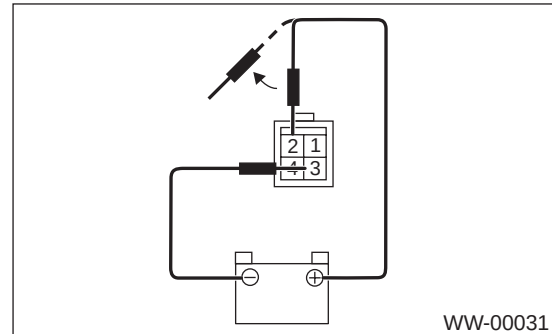

- 3) Connect battery and confirm that motor stops at automatic stop position after motor operates at low speed again.

