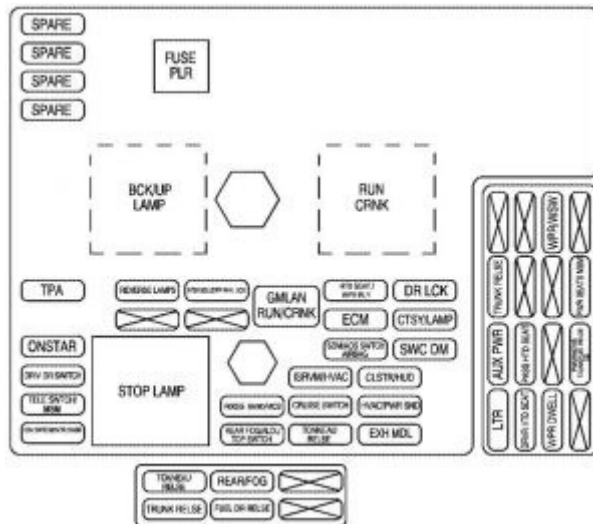


Chevrolet Corvette 2010 fuse box diagram

Instrument panel fuse block

The instrument panel fuse block is located on the passenger's side of the vehicle, under the instrument panel and under the toe-board.



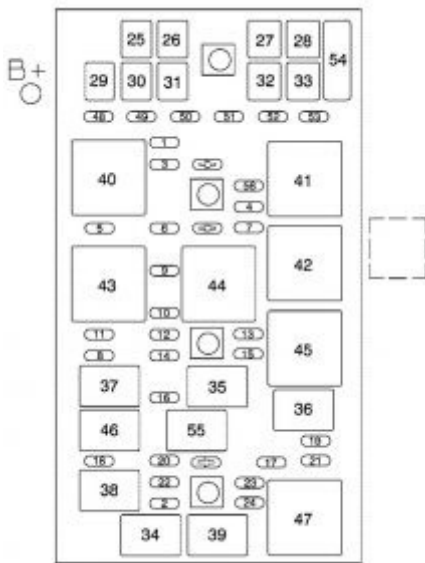
Chevrolet Corvette – fuse box – instrument panel

Fuses	Usage
BCK/UP LAMP	Reverse Lamps
BLANK	Not Used
BLANK	Not Used
BTSI SOL/STR WHL LCK	Brake Transmission Shift Interlock, Steering Wheel Column Lock
CLSTR/HUD	Cluster, Heads-Up Display
CRUISE SWITCH	Cruise Control Switch
CTSY/LAMP	Courtesy Lamp
DR LCK	Door Locks
DRIV DR SWITCH	Driver Door Switch
ECM	Engine Control Module (ECM)
EXH MDL	Exhaust Module (Z06 & ZR1), Spare (Coupe and Convertible)
GM LAN RUN/CRNK	GM LAN Devices
HTD SEAT/WPR RLY	Heated Seat, Wiper Relays
HVAC/PWR SND	Heating, Ventilation/Air Conditioning, Power Sounder
IGN SWTCH/INTR SNSR	Ignition Switch, Intrusion Sensor
ISRVN/HVAC	Electric Inside Rearview Mirror, Heating, Ventilation, Air Conditioning
ONSTAR	OnStar®
RDO/S-BAND/VICS	Radio, S-Band

REAR FOG/ALDL/TOP SWTCH	Rear Fog Lamp, Assembly Line Diagnostic Link Connector, Convertible Top Switch
REVERSE LAMPS	Reverse Lamps
RUN CRNK	Run/Crank Relay
SDM/AOS SWTCH AIRBAG	Sensing and Diagnostic Module, Automatic Occupant Sensing Module, Airbag
SPARE	Spare
SPARE	Spare
SPARE	Spare
SPARE	Spare
STOP LAMP	Stop Lamp
SWC DM	Steering Wheel Dimming
TELE SWTCH/MSM	Telescope Switch, Memory Seat Module
TONNEAU RELSE	Tonneau Release
TPA	Tonneau Pulldown Actuator
BLANK	Blank
BLANK	Blank
FUEL DR RELSE	Fuel Door Release
REAR/FOG	Rear Fog Lamps
TONNEAU RELSE	Tonneau Release
TRUNK RELSE	Trunk Release
AUX PWR	Auxiliary Power
BLANK	Not Used
BLANK	Not Used
BLANK	Not Used
BLANK	Not Used
BLANK	Not Used
BLANK	Not Used
BLANK	Not Used
DRVR HTD SEAT	Driver Heated Seat
LTR	Cigarette Lighter
PASS HTD SEAT	Passenger Heated Seat
PWR SEATS MSM	Power Seats, Memory Seat Module
PWR/ WNDWS/TRUNK/FUEL RELSE	Power Windows, Trunk, Fuel Door Release
TRUNK RELSE	Trunk Release
WPR DWELL	Wiper Dwell
WPR/WSW	Windshield Wiper/Washer

Engine compartment fuse block

There is one fuse block in the engine compartment located on the passenger's side of the vehicle.

 
 
 


Chevrolet Corvette – fuse box – engine compartment

Fuse	Usage
1	Transmission Control Module/Transmission
2	Horn, Alternator Sense
3	Antilock Braking System (ABS)/Real Time Damping
4	Wiper
5	Stoplamps/Back-Up Lamps
6	Oxygen Sensor
7	Battery Main 5
8	Parking Lamps
9	Powertrain Relay Input/Electronic Throttle Control
10	Manual Transmission Solenoids
11	Antilock Braking System
12	Odd Numbered Fuel Injectors
13	Electronic Suspension Control (Option)
14	Canister Purge Solenoid, Mass Air Flow Sensor
15	Air Conditioner Compressor
16	Even Numbered Fuel Injectors
17	Windshield Washer
18	Headlamp Washer
19	Passenger Side Low-Beam Headlamp
20	Fuel Pump (except ZR1)
21	Driver Side Low-Beam Headlamp
22	Front Fog Lamp
23	Passenger Side High-Beam Headlamp

24	Driver Side High-Beam Headlamp	
56	Engine Control Module (ECM)/Transmission Control Module (TCM)/Easy Key Module	
J-Style Fuses		Usage
25		Cooling Fan
26		Battery Main 3
27		Anti-Lock Brake System
28		Heating/Ventilation/Air Conditioning Blower
29		Battery Main 2
30		Starter
31		Audio Amplifier
32		Intercooler Pump
33		Battery Main 1
Micro-Relays		Usage
34		Horn
35		Air Conditioning Compressor
36		Windshield Washer
37		Parking Lamps, Foglamps
38		Front Fog Lamp
39		High-Beam Headlamp
46		Headlamp Washer
55		Fuel Pump (except ZR1)
Mini-Relays		Usage
40		Rear Defog
41		Windshield Wiper High/Low
42		Windshield Wiper Run/Accessory
43		Crank
44		Powertrain Ignition 1
45		Windshield Wiper On/Off
47		Low-Beam Headlamp

Spare Fuses		Usage
48		Spare
49		Spare
50		Spare
51		Spare
52		Spare
53		Spare
54		Fuse Puller
Diodes		Usage

	Diode 1
	Wiper
	Diode 2