

61 12 ...

Removing and installing / replacing positive battery cable at partition seal (engine compartment)




Warning!

Observe [safety informations](#) for handling vehicle battery.



Necessary preliminary tasks:

- Clamp off [battery lead from negative connection point](#)

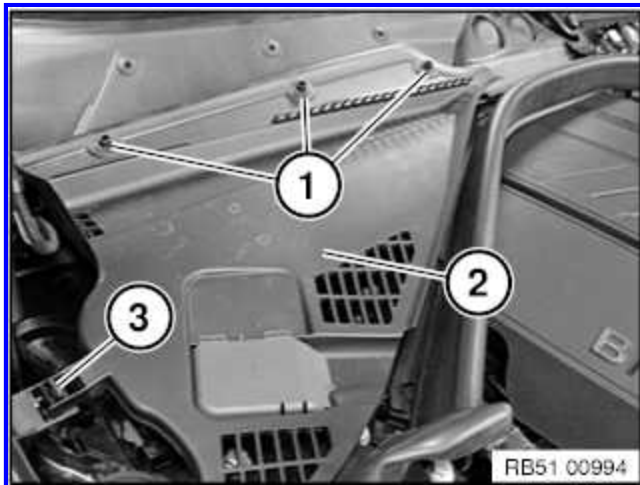


Note:

Graphics shown on the F20 by way of example, deviations in detail are possible in other models.

Turn locks (1) 90° counterclockwise.

Unlock catch (3).

Remove cover (2).

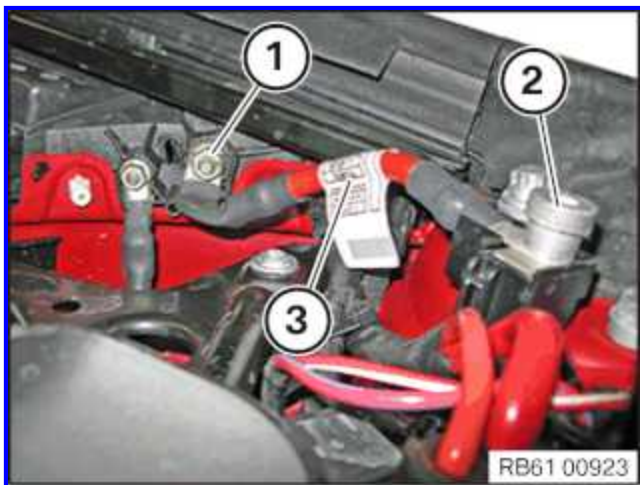

Slacken nut (1).

Tightening torque [61 21 4AZ](#).


Slacken nut (2).

Tightening torque [61 21 4AZ](#).

Remove positive battery cable (3).

Check that the positive battery cable subsurface (1) is correctly positioned.

Positive battery cable subsurface (1) must face away from partition seal as shown.

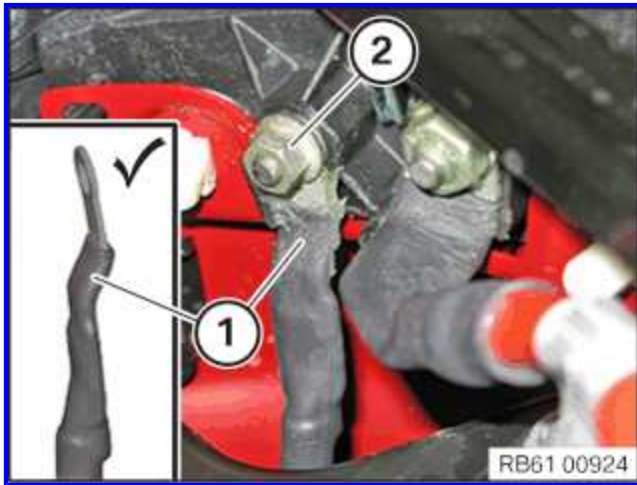

In case of incorrect installation position:

Release nut (2) and correct installation position of positive battery cable subsurface (1).

Tightening torque [61 21 7AZ](#).




Installation note:

Coat positive battery cables (1) at partition seal with contact protection grease.

(Contact protection grease BMW part number 83 19 2 295 229.)


Use a standard flat brush with a width of approx. 2.5 cm to apply the grease.

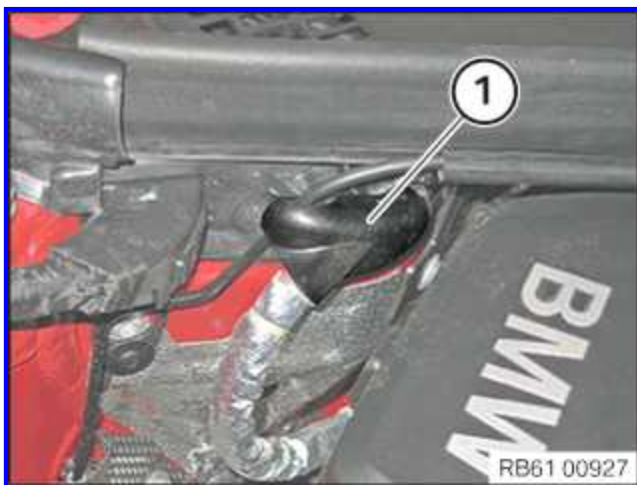

Unclip cover (1).

Installation note:

Guide and retaining lugs on cover (1) must not be damaged or missing.

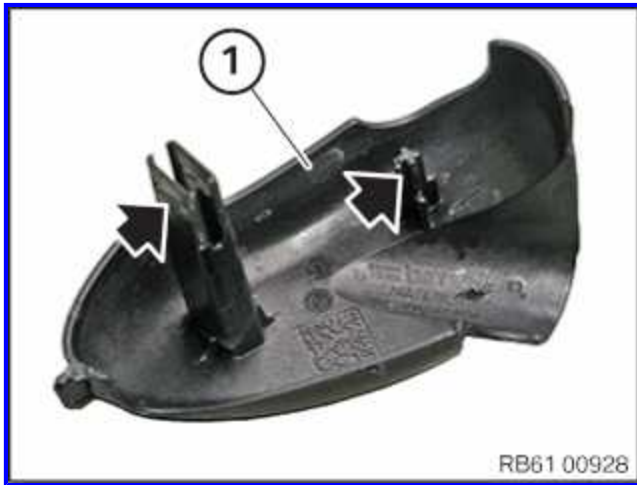

Installation note:

Coat positive battery cables (1) at partition seal with contact protection grease.

(Contact protection grease BMW part number 83 19 2 295 229.)

Use a standard flat brush with a width of approx. 2.5 cm to apply the grease.