


33.Day Time Running Resistor

A: REMOVAL

- 1) Remove the front bumper. <Ref. to EI-28, REMOVAL, Front Bumper.>
- 2) Disconnect the harness connector.
- 3) Remove the mounting nut, then remove the day-time running resistor.

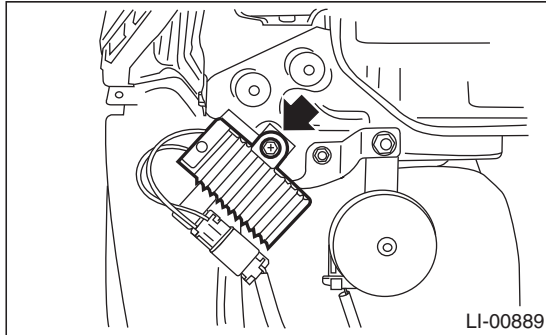

B: INSTALLATION

Install in the reverse order of removal.