

SEAT BELT WARNING SYSTEM

PRECAUTION

NOTICE:
When disconnecting the cable from the negative (-) battery terminal, initialize the following system(s) after the cable is reconnected.

SB


System Name	See Page
Power window control system (with Jam Protection Function)	IN-23
Sliding Roof System	

SB-2

SEAT BELT – SEAT BELT WARNING SYSTEM

PARTS LOCATION

SB

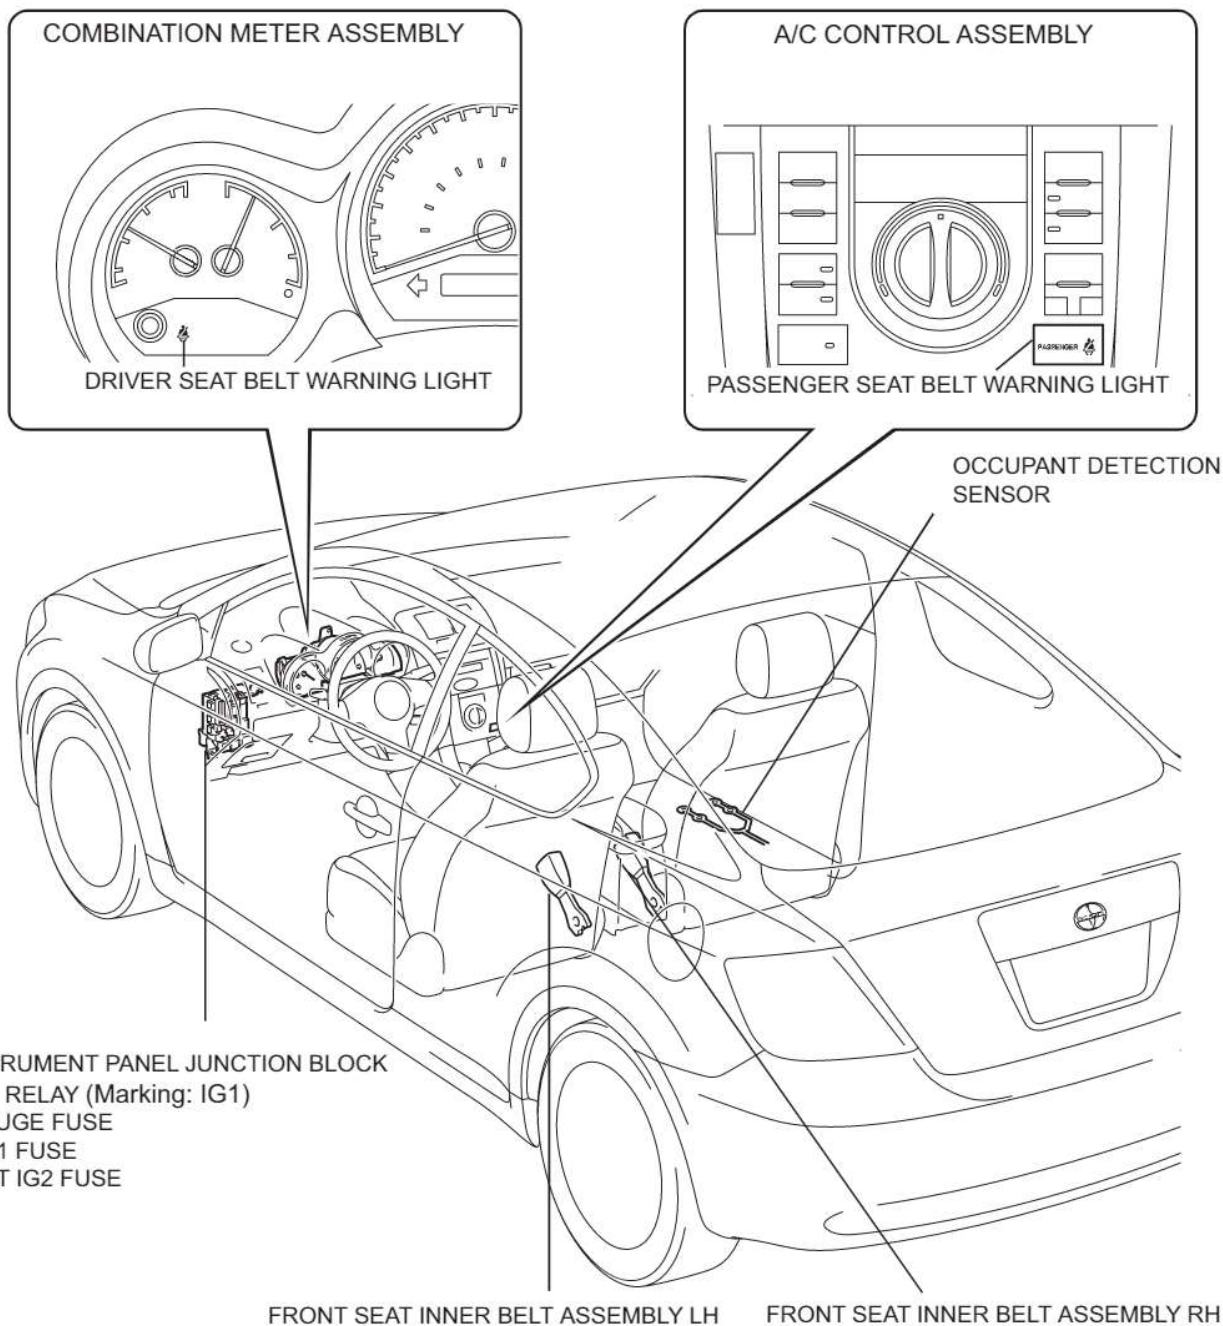

P

B115530E01

PROBLEM SYMPTOMS TABLE

HINT:
Use the table below to help determine the cause of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

SB

Seat belt warning system


Symptom	Suspected Area	See page
Driver seat belt warning light does not blink	1. MET IG2 fuse	SB-2
	2. Combination meter assembly	ME-37
	3. Front seat inner belt assembly LH	SB-5
	4. Wire harness	-
Passenger seat belt warning light does not blink	1. GAUGE fuse	SB-2
	2. AM1 fuse	SB-2
	3. IG1 relay	SB-2
	4. A/C control assembly	SB-5
	5. Combination meter assembly	ME-39
	6. Occupant deletion sensor	RS-244
	7. Front seat inner belt assembly RH	SB-5
	8. Wire harness	-

SB-4

SEAT BELT – FRONT SEAT INNER BELT ASSEMBLY

FRONT SEAT INNER BELT ASSEMBLY
COMPONENTS

SB

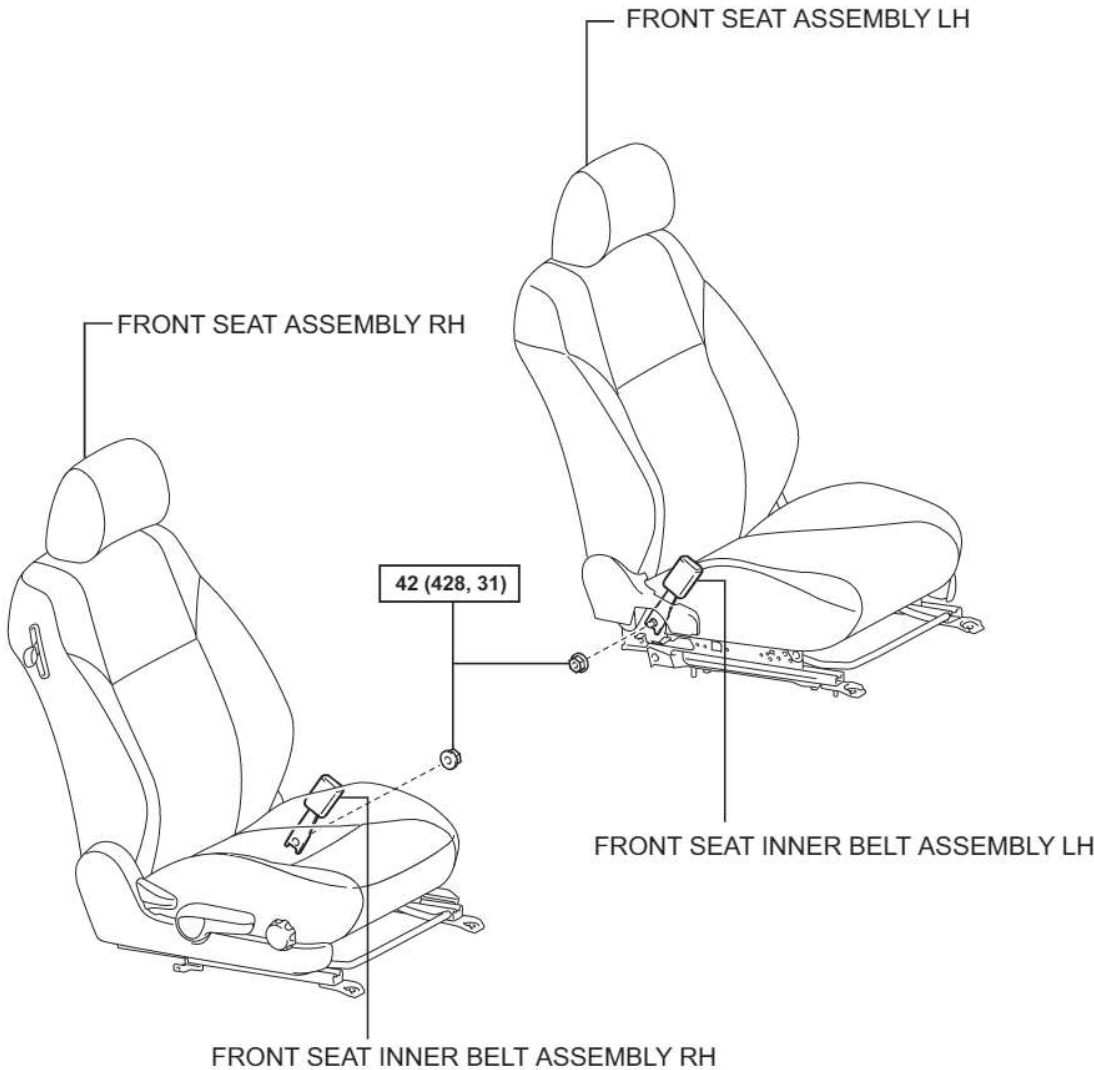

N*m (kgf*cm, ft.*lbf) : Specified torque

P

B115532E02

REMOVAL

- HINT:
- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
 2. **REMOVE FRONT SEAT ASSEMBLY LH** (See page [SE-5](#))
 3. **REMOVE FRONT SEAT INNER BELT ASSEMBLY LH**
 - (a) Disconnect the 3 connectors and then detach the 5 claws.
 - (b) Remove the nut and inner belt.


SB

INSPECTION

1. **INSPECT FRONT SEAT INNER BELT ASSEMBLY LH (for Driver Side)**
 - (a) Measure the resistance of the buckle switch.
Standard resistance

Tester Connection	Condition	Specified Condition
1 - 2	Fasten seat belt	1 MΩ or higher
1 - 2	Release seat belt	Below 1 Ω


If the result is not as specified, replace the inner belt assembly.

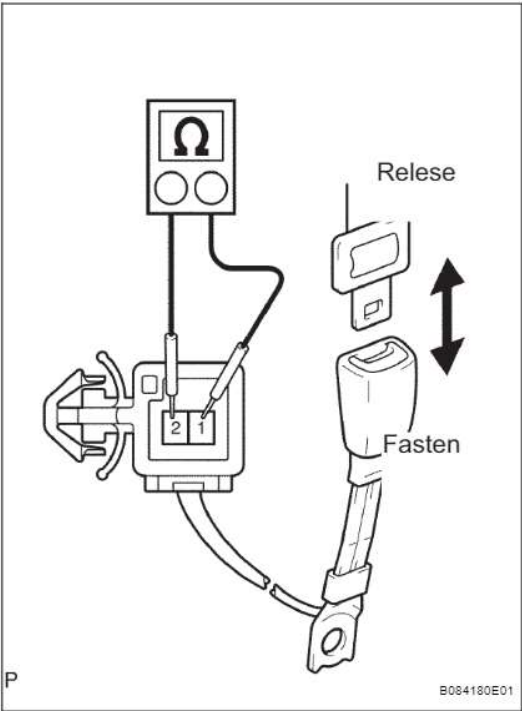

SB-6

SEAT BELT – FRONT SEAT INNER BELT ASSEMBLY

SB

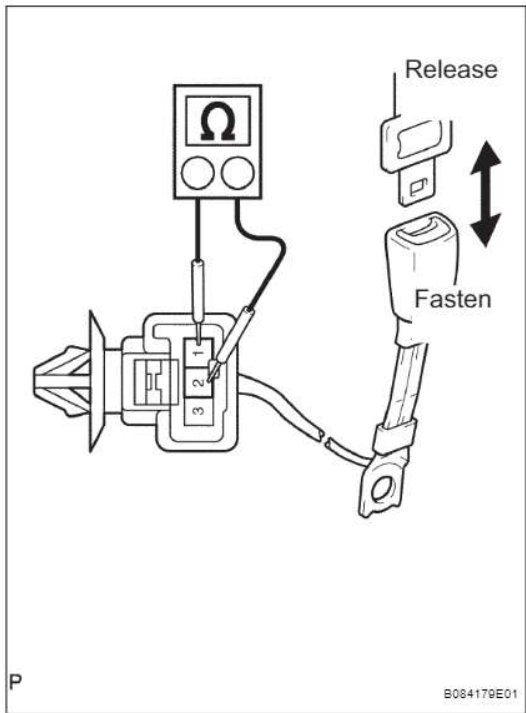


2. INSPECT FRONT SEAT INNER BELT ASSEMBLY RH (for Front Passenger Side)

- (a) Measure the resistance of the buckle switch.
Standard resistance

Tester Connection	Condition	Specified Condition
1 - 2	Fasten seat belt	1 MΩ or higher
1 - 2	Release seat belt	Below 1 Ω

If the result is not as specified, replace the inner belt assembly.

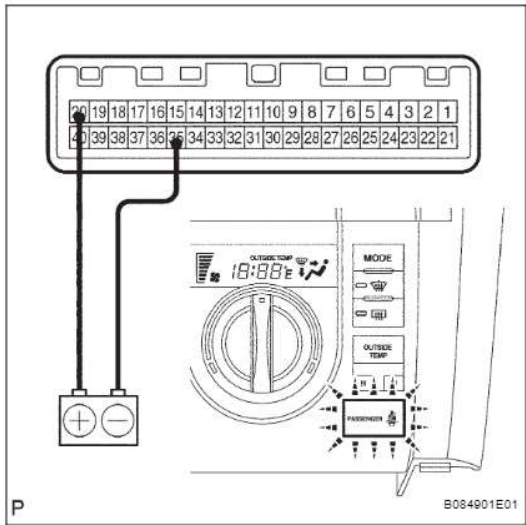

3. INSPECT PASSENGER SEAT BELT WARNING LIGHT ASSEMBLY

- (a) Remove the A/C control (see page AC-71).
(b) Apply battery voltage to the warning lamp terminals and check warning lamp operation as shown in the table and illustration.

OK

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 20 Battery negative (-) → Terminal 35	Illuminates

NOTICE:

- Apply protective tape to the battery leads to avoid contact with other terminals.
- Disconnect the battery's negative (-) terminal cable immediately after the light illuminates.

If the result is not as specified, replace the A/C control assembly.

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

1. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH

- (a) Install the inner belt with the nut.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
- (b) Attach the 5 claws.
- (c) Connect the 3 connectors.

2. INSTALL FRONT SEAT ASSEMBLY LH (See page [SE-11](#))

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

4. PERFORM INITIALIZATION

- (a) Perform initialization (see page [IN-23](#)).

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.

SB

SB-8

SEAT BELT – FRONT SEAT OUTER BELT ASSEMBLY


FRONT SEAT OUTER BELT ASSEMBLY

PRECAUTION

CAUTION:

Replace the faulty parts of the seat belt systems (outer belt, inner belt, bolts, nuts, adjustable shoulder anchor, tether anchor hardware and other related parts).

When inspecting a vehicle that was recently in a collision, be sure to check all of the seat belt systems regardless of whether or not the system was activated in the collision. Replace any damaged or malfunctioning systems.

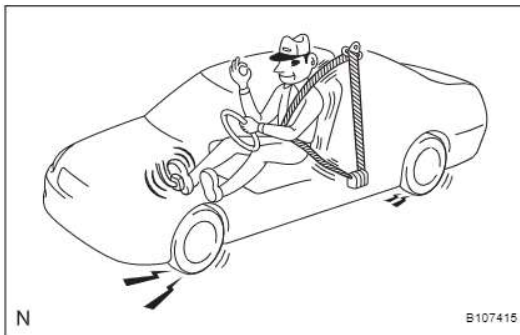**1. RUNNING TEST (IN SAFE AREA)****CAUTION:**

Conduct this test in a safe area.


- Fasten the front seat belts.
- Drive the vehicle at 16 km/h (10 mph) and firmly depress the brakes. Check that the belts lock and cannot be extended at this time.

If a belt does not lock, replace the seat belt assembly (see page [SB-10](#)).

HINT:

Inspect a seat belt assembly before installing it (see page [SB-11](#)).

COMPONENTS

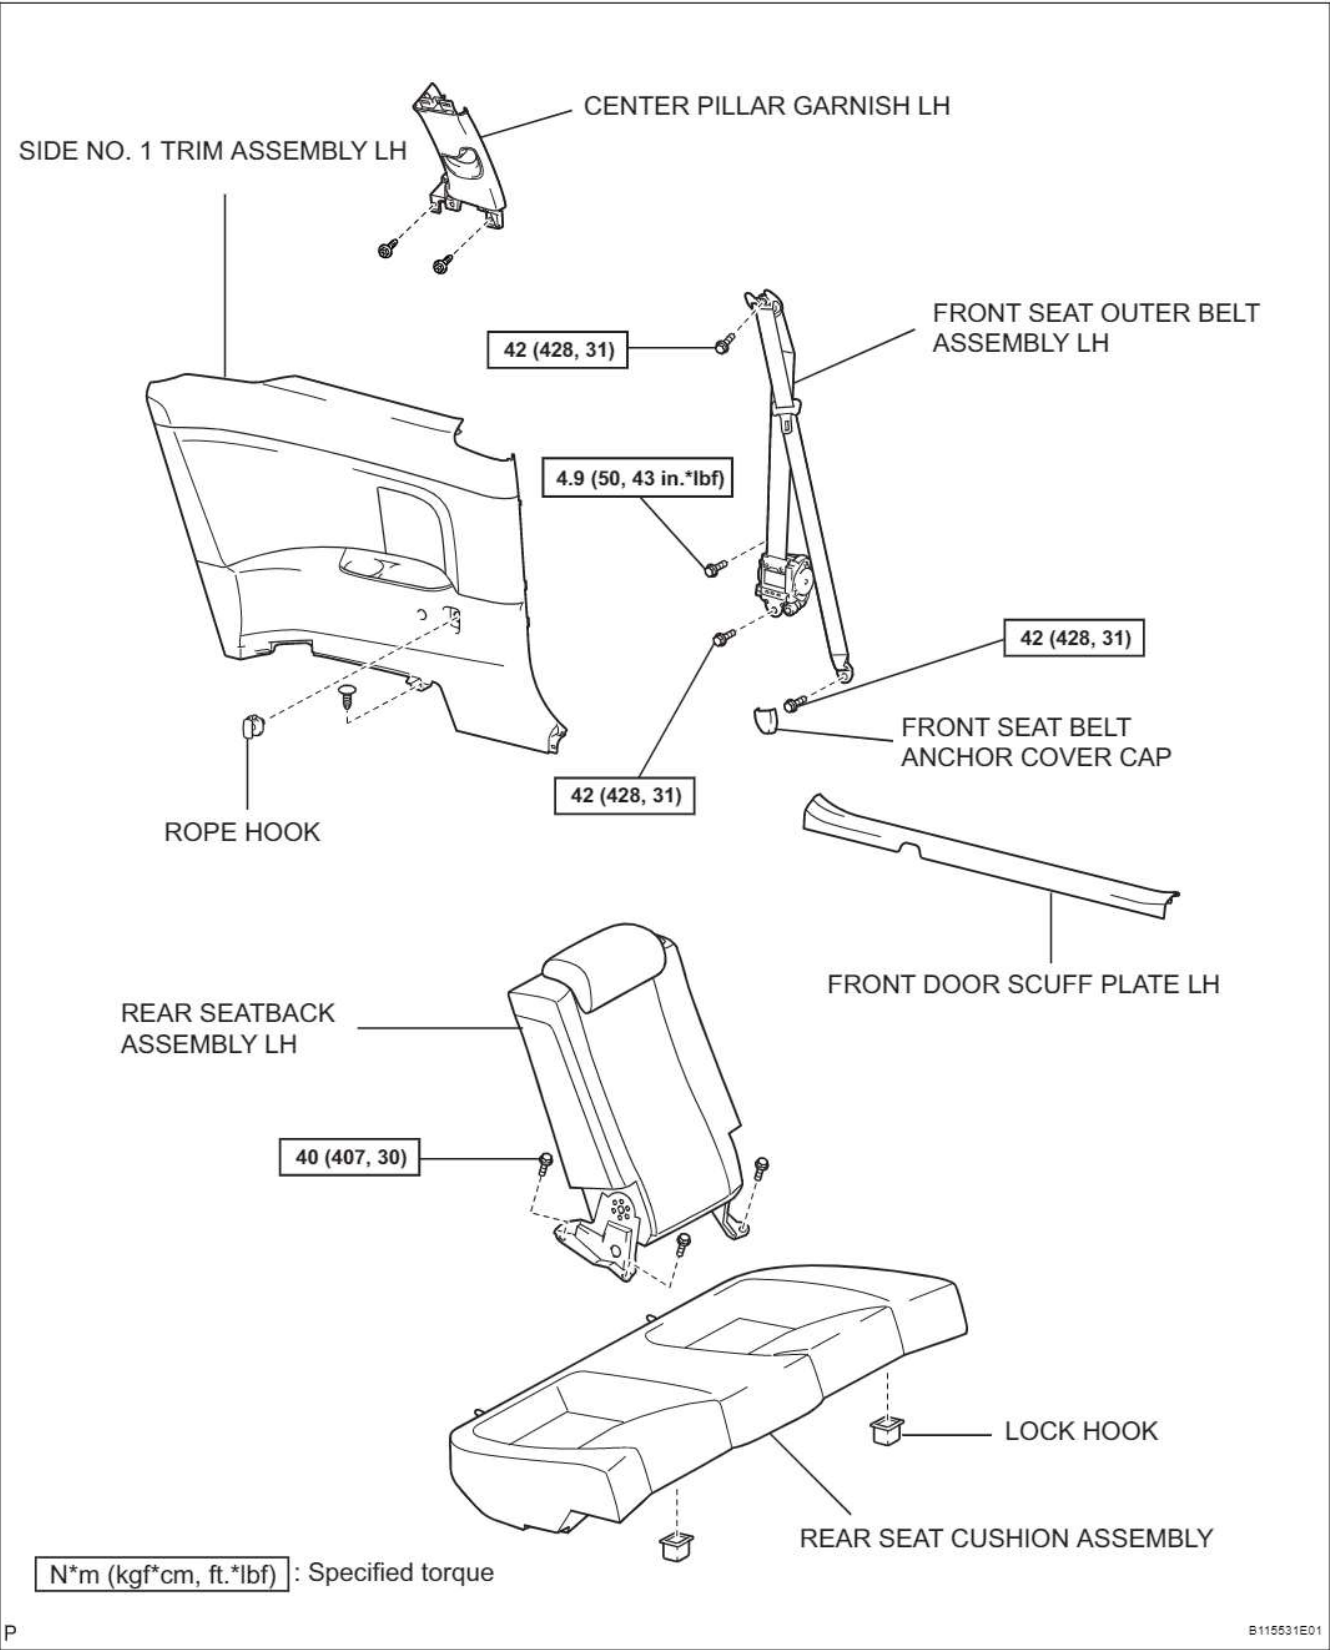

SB-10

SEAT BELT – FRONT SEAT OUTER BELT ASSEMBLY

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

NOTICE:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.



2. REMOVE REAR SEAT CUSHION ASSEMBLY (See page [SE-17](#))3. REMOVE REAR SEATBACK ASSEMBLY LH (See page [SE-17](#))4. REMOVE FRONT DOOR SCUFF PLATE LH (See page [IR-9](#))5. REMOVE SIDE NO. 1 TRIM ASSEMBLY LH (See page [IR-10](#))6. REMOVE CENTER PILLAR GARNISH LH (See page [IR-10](#))

7. REMOVE FRONT SEAT OUTER BELT ASSEMBLY LH

CAUTION:

Carefully read the notices for the pretensioner in the SRS airbag system section and the front seat outer belt section (see page [RS-1](#)).

- (a) Disconnect the pretensioner connector as shown in the illustration.
- (b) Remove the bolt and floor anchor.

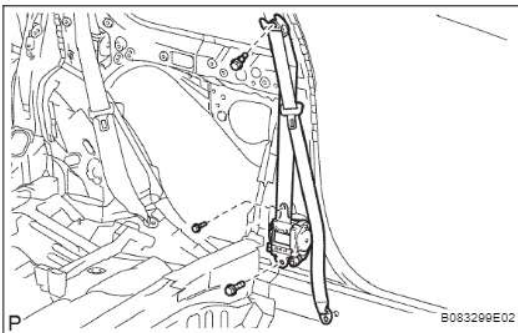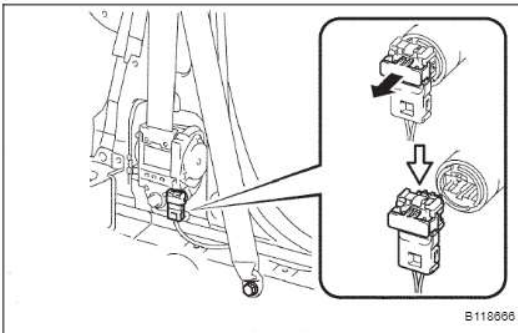


- (c) Remove the 3 bolts and outer belt.

SB

SEAT BELT – FRONT SEAT OUTER BELT ASSEMBLY

SB-11

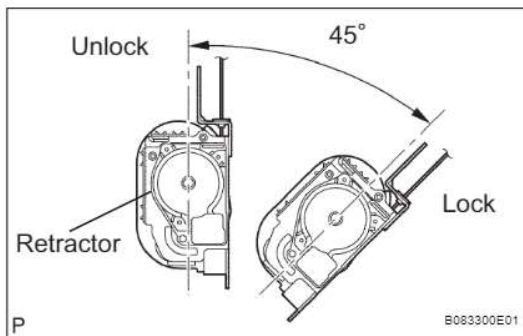**INSPECTION****1. INSPECT FRONT SEAT OUTER BELT ASSEMBLY****NOTICE:****Do not disassemble the retractor.**

- (a) When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks.

SB

SB-12



SEAT BELT – FRONT SEAT OUTER BELT ASSEMBLY

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

SB

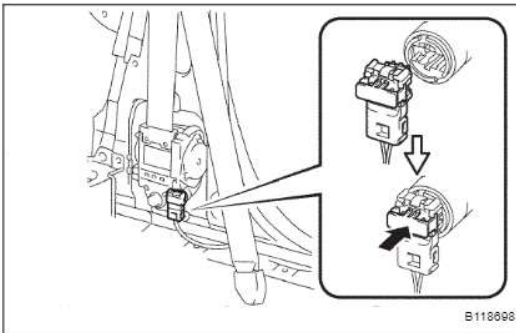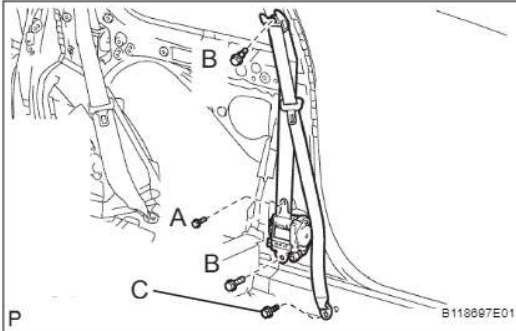

1. INSTALL FRONT SEAT OUTER BELT ASSEMBLY LH

- (a) Install the outer belt with the 3 bolts.

**Torque: 4.9 N*m (50 kgf*cm, 43 in.*lbf) for bolt A
42 N*m (428 kgf*cm, 31 ft.*lbf) for bolt B**

- (b) Install the floor anchor with the bolt.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf) for bolt C

- (c) Connect the pretensioner connector as shown in the illustration.

- (d) With the belt installed, check that the belt locks when it is pulled out quickly.

NOTICE:

The check should be performed with the outer belt assembly installed.

If the operation is not as specified, replace the outer belt.

- (e) Check the fastening function of the child restraint system.

NOTICE:

The check should be performed with the outer belt installed.

- (1) When the belt is pulled out fully, the belt should automatically try to retract.

- (2) After the belt has fully retracted, the belt should be able to be pulled out and retracted again.
If the operation is not as specified, replace the belt.

2. INSTALL CENTER PILLAR GARNISH LH (See page [IR-19](#))3. INSTALL SIDE NO. 1 TRIM ASSEMBLY LH (See page [IR-19](#))4. INSTALL FRONT DOOR SCUFF PLATE LH (See page [IR-20](#))5. INSTALL REAR SEATBACK ASSEMBLY LH (See page [SE-28](#))6. INSTALL REAR SEAT CUSHION ASSEMBLY (See page [SE-29](#))

7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

SEAT BELT – FRONT SEAT OUTER BELT ASSEMBLY

SB-13**8. PERFORM INITIALIZATION**

- (a) Perform initialization (see page [IN-23](#)).

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.

SB

SB-14

SEAT BELT – FRONT SEAT OUTER BELT ASSEMBLY

SB

DISPOSAL

HINT:

When scrapping vehicles equipped with a seat belt pretensioner or disposing of a front seat outer belt (with seat belt pretensioner), always first activate the seat belt pretensioner in accordance with the procedures described below. If any abnormality occurs during activation of the seat belt pretensioner, contact the SERVICE DEPARTMENT of TOYOTA MOTOR SALES, U.S.A., INC.

CAUTION:

- Never dispose of a front seat outer belt that has a non-activated pretensioner.
- The seat belt pretensioner produces a loud, exploding sound when it activates. Perform the operation where it will not be a nuisance to nearby people.
- When activating a front seat outer belt (with seat belt pretensioner), stand at least 10 m (33 ft.) away from the front seat outer belt.
- Use gloves and safety glasses when handling a front seat outer belt with an activated pretensioner.
- Always wash your hands with water after completing the disposal.
- Do not apply water to a front seat outer belt that has an activated pretensioner.
- Perform procedures in a place away from electrical interference.
- When activating the seat belt pretensioner, always use the specified SST (SRS airbag deployment tool).

1. DISPOSE OF FRONT SEAT OUTER BELT ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:




Prepare a battery to activate the seat belt pretensioner.

- (a) Check if SST is functioning properly.

SST 09082-00770

NOTICE:

When activating the seat belt pretensioner, always use the specified SST.

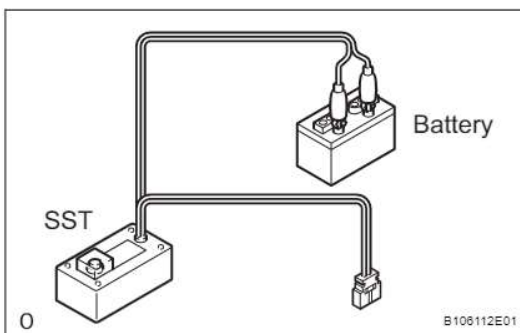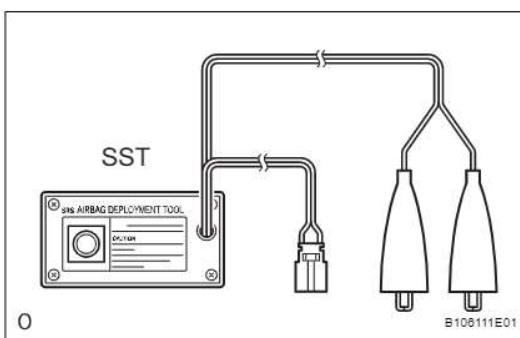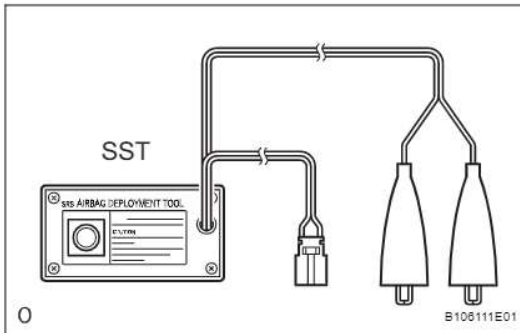


- (1) Connect the SST red clip to the battery's positive (+) terminal and the black clip to the battery's negative (-) terminal.

HINT:

Do not connect the yellow connector. The yellow connector is used to connect to the seat belt pretensioner.

SEAT BELT – FRONT SEAT OUTER BELT ASSEMBLY

SB-15


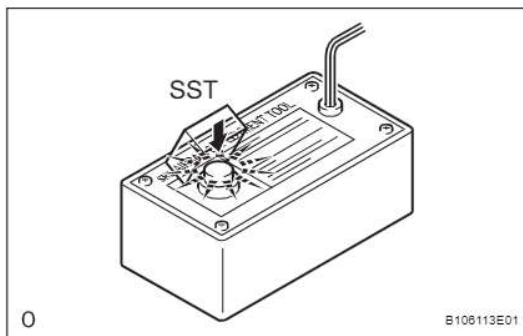


- (2) Press the SST activation switch and check that the LED of the SST activation switch illuminates.

NOTICE:

If the LED illuminates when the activation switch is not being pressed, SST may be malfunctioning. Replace SST with a new one.

- (b) Disconnect SST from the battery.
- (c) Disconnect the pretensioner connector.
 - (1) Disconnect the cable from the negative (-) battery terminal.
 - (2) Remove the rear seat cushion (see page SE-17).
 - (3) Remove the rear seatback (see page SE-17).
 - (4) Remove the front door scuff plate (see page IR-9).
 - (5) Remove the No. 1 side trim (see page IR-10).
 - (6) Remove the center pillar garnish (see page IR-10).
- (7) Disconnect the pretensioner connector as shown in the illustration.
- (d) Prepare SST for activation of the seat belt pretensioner.
 - (1) Install the floor anchor of the seat belt.

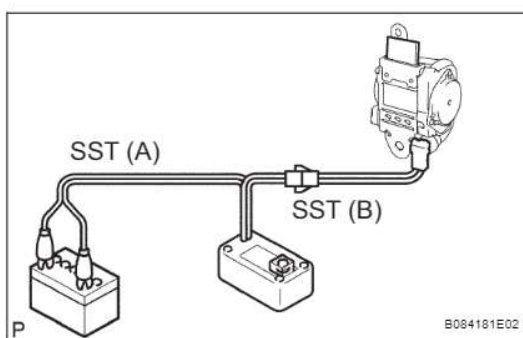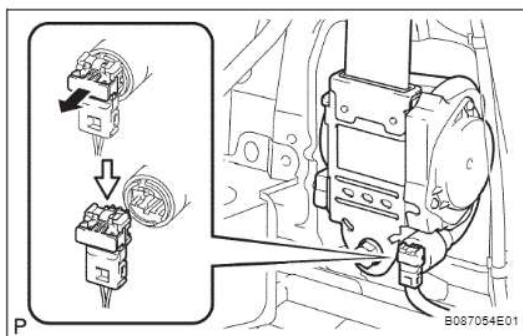


- (2) Connect SST (A) to SST (B). Then connect SST (B)'s connector to the seat belt pretensioner.

SST 09082-00700, 09082-00770

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

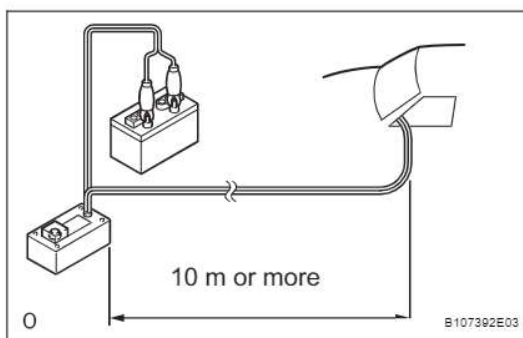

- (3) Move SST at least 10 m (33 ft.) away from the front of the vehicle.
- (4) Close all the doors and windows of the vehicle.

HINT:
Leave a gap in one of the windows for inserting SST wire harness.

NOTICE:
Take care not to damage SST wire harness.
- (5) Connect the SST red clip to the battery's positive (+) terminal and the black clip to the negative (-) terminal.

SB-16

SEAT BELT – FRONT SEAT OUTER BELT ASSEMBLY

SB

- (e) Activate the seat belt pretensioner.
- (1) Confirm that no one is inside the vehicle or within 10 m (33 ft.) of the vehicle.
 - (2) Press the SST activation switch to activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates at the same time the SST activation switch's LED illuminates.

- (f) Dispose of the front seat outer belt (with the seat belt pretensioner).

CAUTION:

- **Do not touch the front seat outer belt for at least 30 minutes after the seat belt pretensioner has been activated. It is very hot.**
- **Use gloves and safety glasses when handling a front seat outer belt whose pretensioner has been activated.**
- **Always wash your hands with water after completing the disposal.**
- **Do not apply water to a front seat outer belt that has an activated pretensioner.**

HINT:

When scrapping a vehicle, activate the seat belt pretensioner, and then scrap the vehicle with the activated front seat outer belt installed.

2. DISPOSE OF FRONT SEAT OUTER BELT ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)


NOTICE:

- **When only disposing of the front seat outer belt (with the seat belt pretensioner), never use the customer's vehicle to activate the seat belt pretensioner.**
- **Be sure to follow the procedures listed below when activating the seat belt pretensioner.**

- (a) Remove the front seat outer belt.
- (1) Wind the seat belt with the retractor.
 - (2) When the seat belt is sufficiently wound, cut the seat belt approximately 100 mm (0.39 in.) from the retractor, as shown in the illustration.


HINT:

The seat belt is designed so that winding the seat belt before pretensioner activation will decrease the pulling power of the seat belt during pretensioner activation.

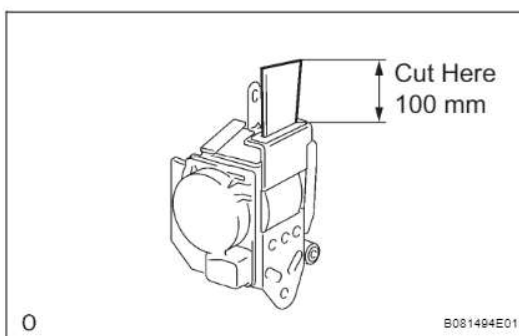

SEAT BELT – FRONT SEAT OUTER BELT ASSEMBLY

SB-17

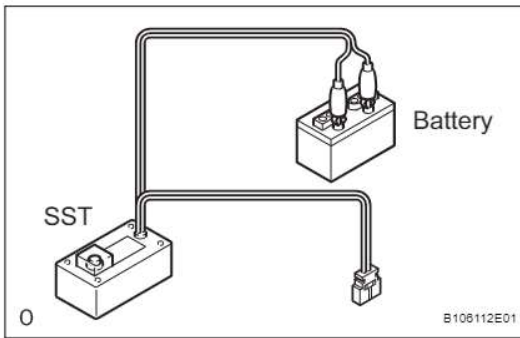


- (b) Check if SST is functioning properly.

SST 09082-00700, 09082-00770

CAUTION:

When activating a seat belt pretensioner, always use the specified SST.

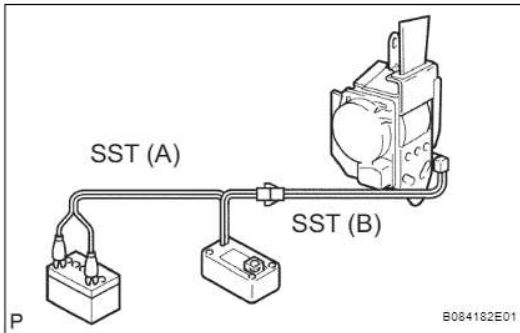


- (c) Prepare SST for activation of the seat belt pretensioner.

- (1) Connect SST (A) to SST (B). Then connect SST (B)'s connector to the seat belt pretensioner.

NOTICE:


To avoid damaging the SST connector and wire harness, do not lock the secondary lock of the twin lock.

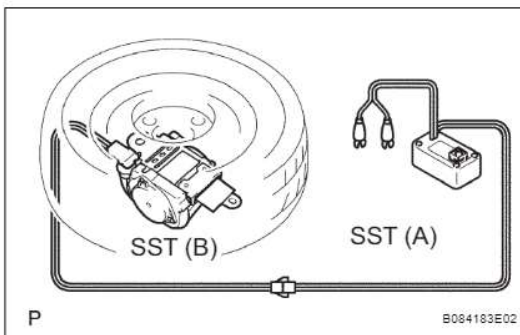

- (2) Place the front seat outer belt on the ground and cover it with a tire (with wheel).

NOTICE:

Set up the front seat outer belt as shown in the illustration.

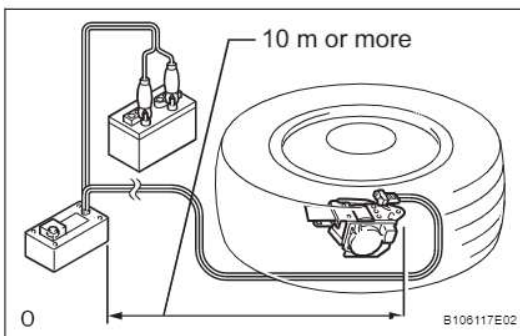

- (3) Move SST at least 10 m (33 ft.) away from the wheel.

NOTICE:

Take care not to damage the SST wire harness.

- (d) Activate the seat belt pretensioner.

- (1) Connect the SST red clip to the battery's positive (+) terminal and the black clip to the battery's negative (-) terminal.

- (2) Check that no one is within 10 m (33 ft.) of the wheel.

- (3) Press the SST activation switch to activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates at the same time the SST activation switch's LED illuminates.

SB-18

SEAT BELT – FRONT SEAT OUTER BELT ASSEMBLY

SB

- (e) Dispose of the front seat outer belt (with the seat belt pretensioner).

CAUTION:

- Do not touch the front seat outer belt for at least 30 minutes after the seat belt pretensioner has been activated. It is very hot.
- Use gloves and safety glasses when handling a front seat outer belt whose pretensioner has been activated.
- Always wash your hands with water after completing the disposal.
- Do not apply water to a front seat outer belt that has an activated pretensioner.


- (1) Remove the tire (with wheel) and SST.
- (2) Place the front seat outer belt in a plastic bag, tie the end tightly, and dispose of it in the same way as other general parts.



REAR SEAT INNER BELT ASSEMBLY

COMPONENTS

SB

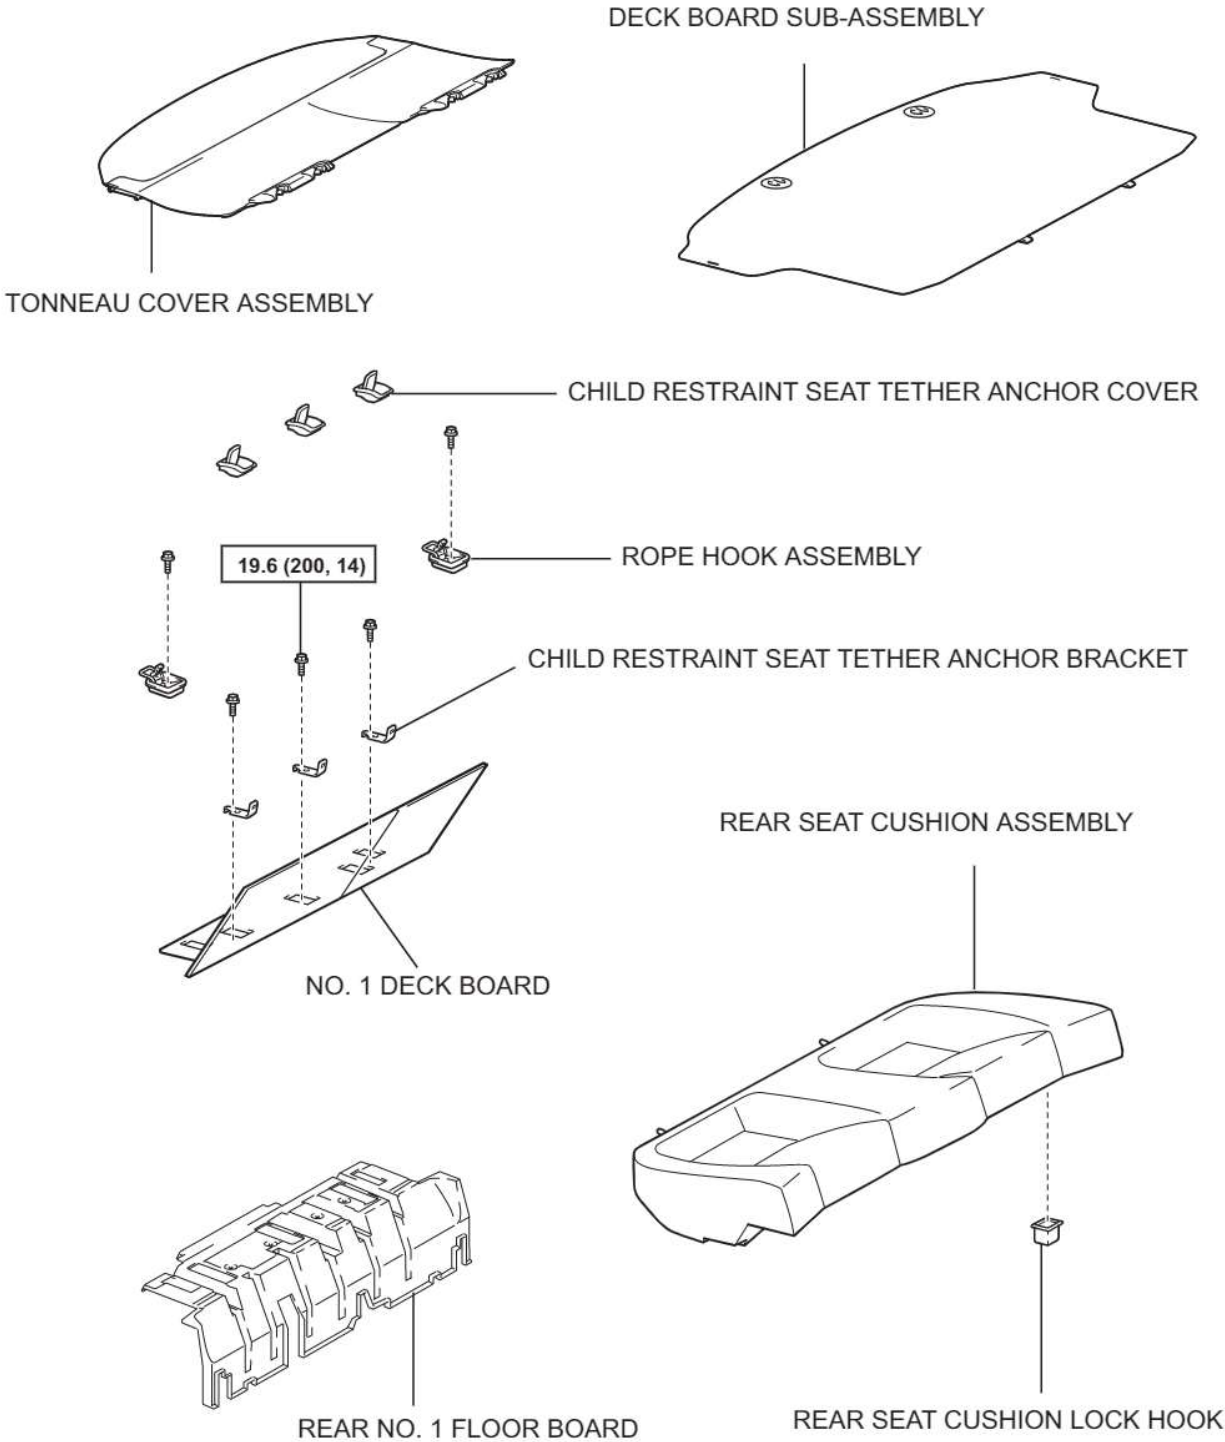


N*m (kgf*cm, ft.*lbf) : Specified torque

B118738E01

SB-18

SEAT BELT – REAR SEAT INNER BELT ASSEMBLY

SB

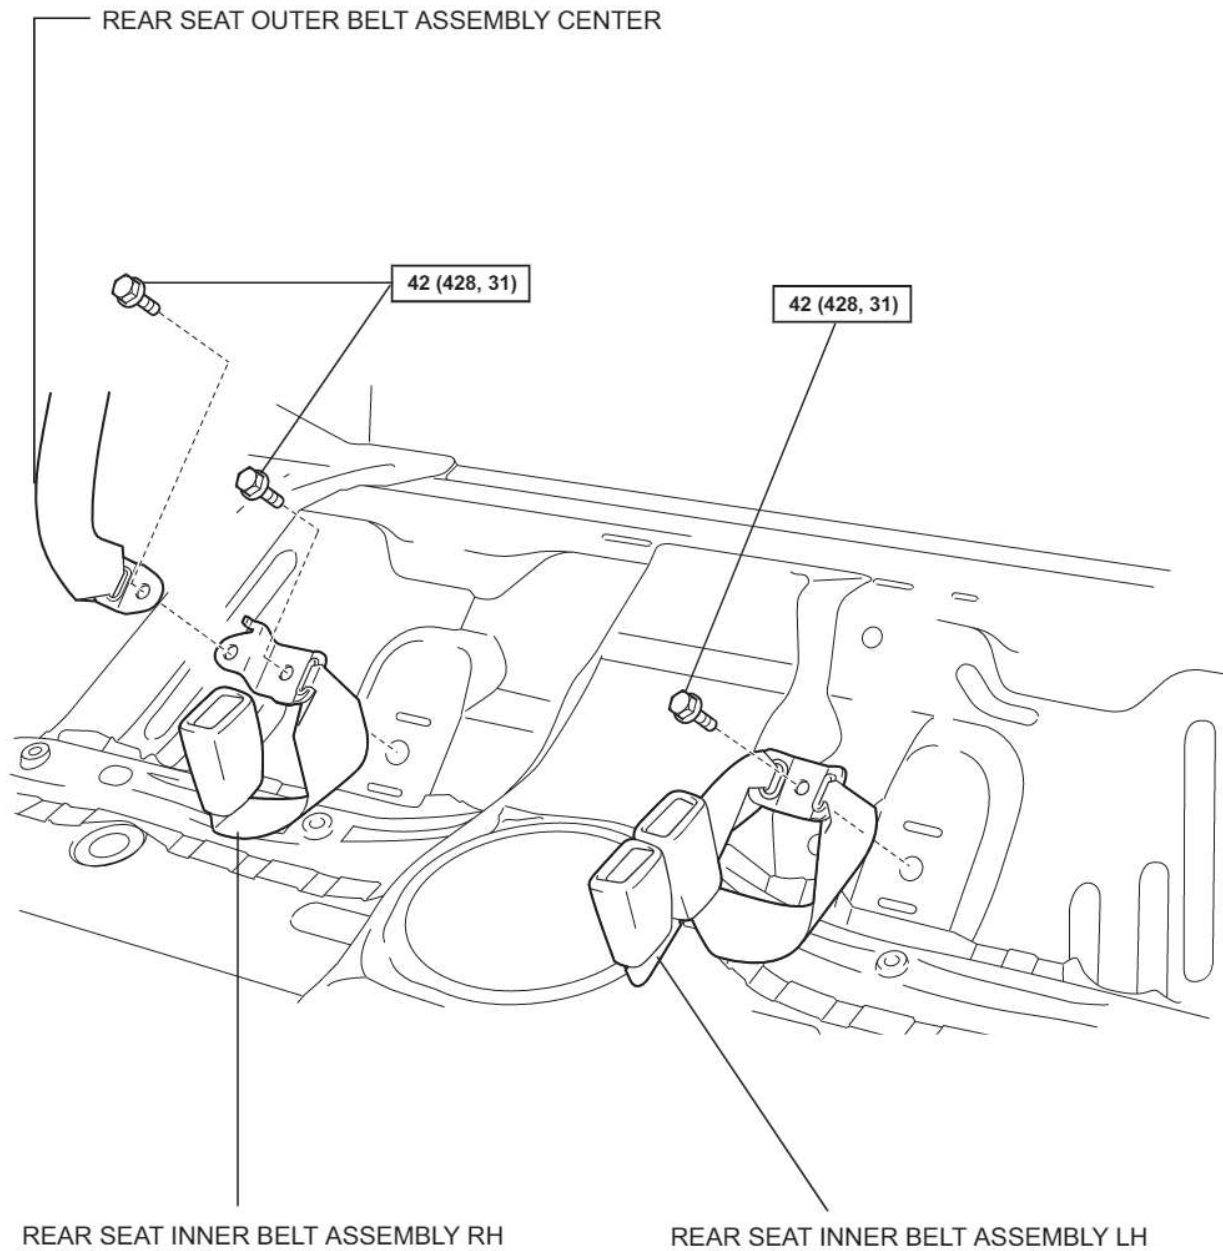

N*m (kgf*cm, ft.*lbf) : Specified torque

P

B116915E01

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative battery terminal to prevent airbag and seat belt pretensioner activation.
2. **REMOVE TONNEAU COVER ASSEMBLY**
3. **REMOVE DECK BOARD SUB-ASSEMBLY**
4. **REMOVE REAR SEAT CUSHION ASSEMBLY (See page [SE-17](#))**
5. **REMOVE REAR SEAT INNER BELT ASSEMBLY LH**
(a) Remove the bolt and inner belt.
6. **REMOVE REAR SEAT OUTER BELT ASSEMBLY CENTER**
(a) Remove the bolt and anchor part of the outer belt assembly center.
7. **REMOVE REAR SEAT INNER BELT ASSEMBLY RH**
(a) Remove the bolt and inner belt.
8. **REMOVE CHILD RESTRAINT SEAT TETHER ANCHOR COVER (See page [SE-17](#))**
9. **REMOVE CHILD RESTRAINT SEAT TETHER ANCHOR BRACKET**
(a) Remove the 2 bolts and 2 rope hooks.
(b) Remove the No. 1 deck board.
(c) Remove the rear No. 1 floor board.
(d) Remove the 3 bolts and 3 anchor brackets.

SB

SB-20

SEAT BELT – REAR SEAT INNER BELT ASSEMBLY

INSTALLATION

HINT:

A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

1. INSTALL CHILD RESTRAINT SEAT TETHER ANCHOR BRACKET

- Install the 3 anchor brackets with the 3 bolts.
Torque: 19.6 N*m (200 kgf*cm, 14 ft.*lbf)
- Install the rear No. 1 floor board.
- Install the No. 1 deck board.
- Install the 2 rope hooks with the 2 bolts.


2. INSTALL CHILD RESTRAINT SEAT TETHER ANCHOR COVER (See page [SE-29](#))

3. INSTALL REAR SEAT INNER BELT ASSEMBLY RH

- Install the inner belt with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

NOTICE:

Do not allow the anchor part to overlap onto the protruding part of the floor panel.

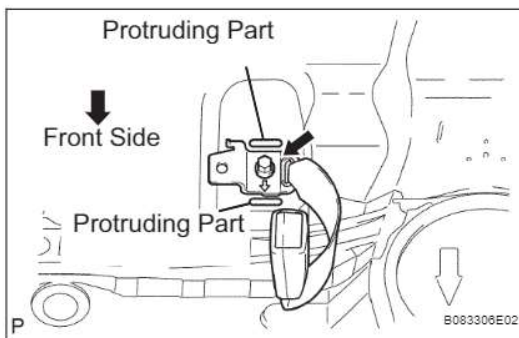


4. INSTALL REAR SEAT OUTER BELT ASSEMBLY CENTER

- Install the anchor part of the outer belt with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

NOTICE:

Do not allow the anchor part to overlap onto the protruding part of the inner belt RH.

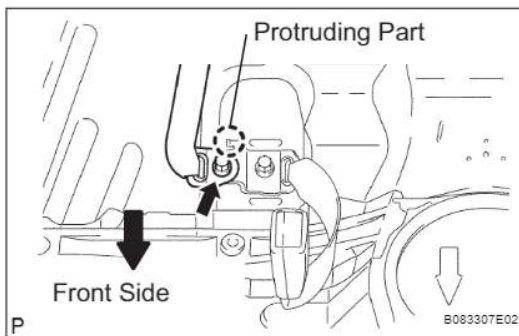


5. INSTALL REAR SEAT INNER BELT ASSEMBLY LH

- Install the inner belt with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

NOTICE:

Do not allow the anchor part to overlap onto the protruding part of the floor panel.

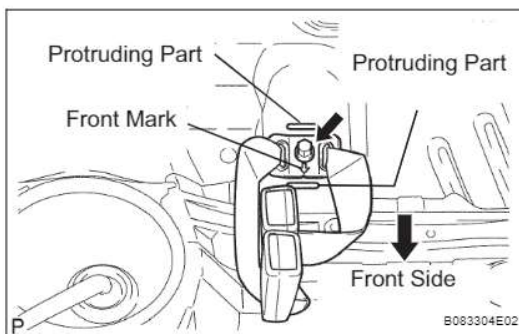

6. INSTALL REAR SEAT CUSHION ASSEMBLY (See page [SE-29](#))

7. INSTALL DECK BOARD SUB-ASSEMBLY

8. INSTALL TONNEAU COVER ASSEMBLY

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

SB

10. PERFORM INITIALIZATION

- (a) Perform initialization (see page [IN-23](#)).

NOTICE:


Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.

SB

REAR SEAT OUTER BELT ASSEMBLY

COMPONENTS

SB

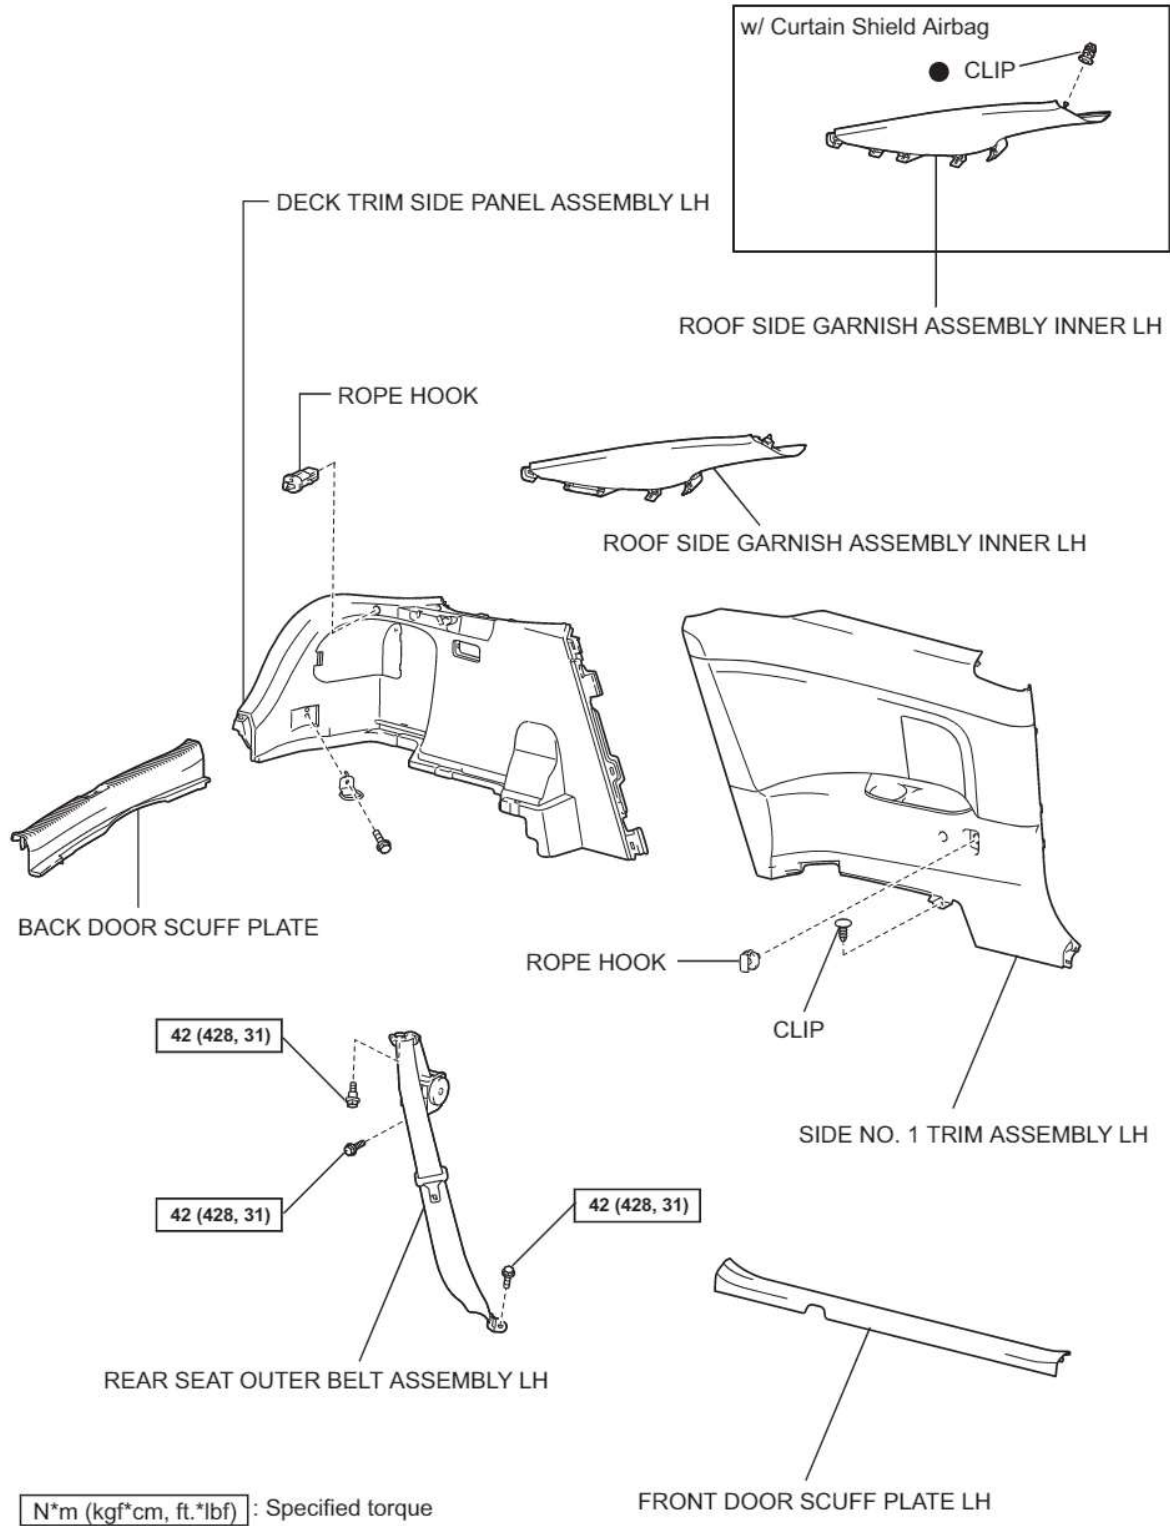

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part


P

B110020E02

SB-22

SEAT BELT – REAR SEAT OUTER BELT ASSEMBLY

SB

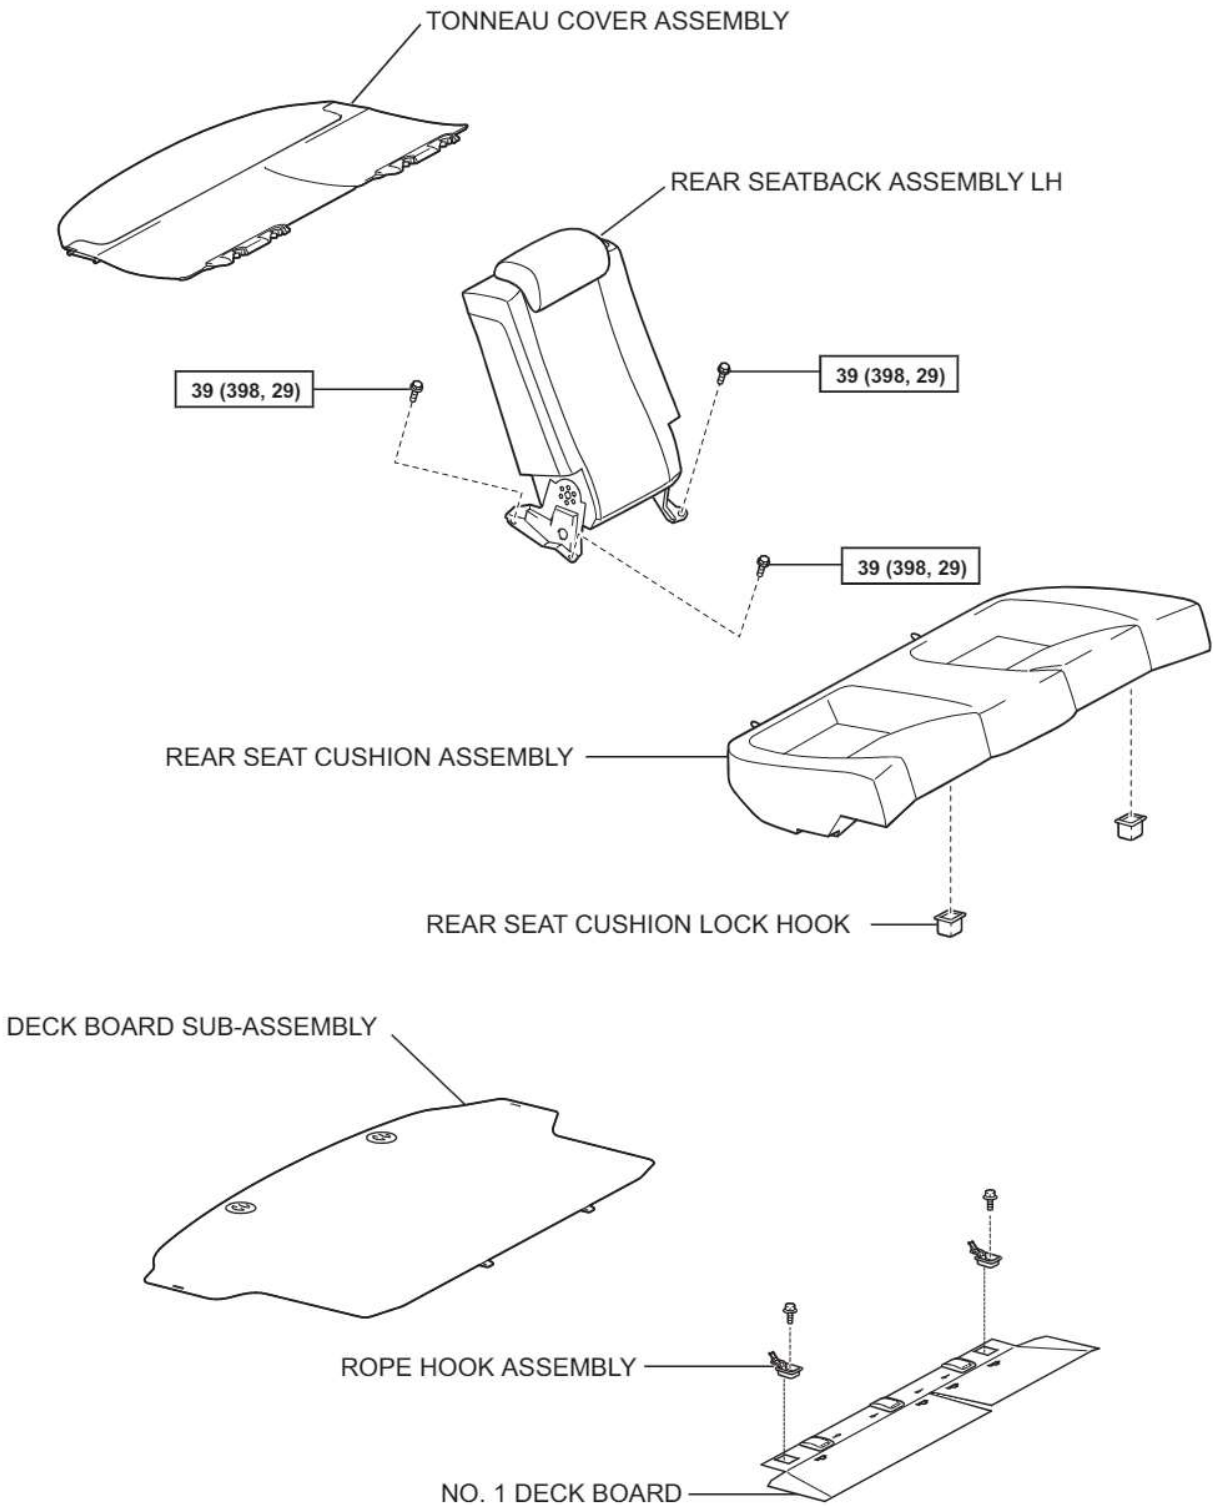


N*m (kgf*cm, ft.*lbf) : Specified torque

B118792E01

SEAT BELT – REAR SEAT OUTER BELT ASSEMBLY

SB-23

SB

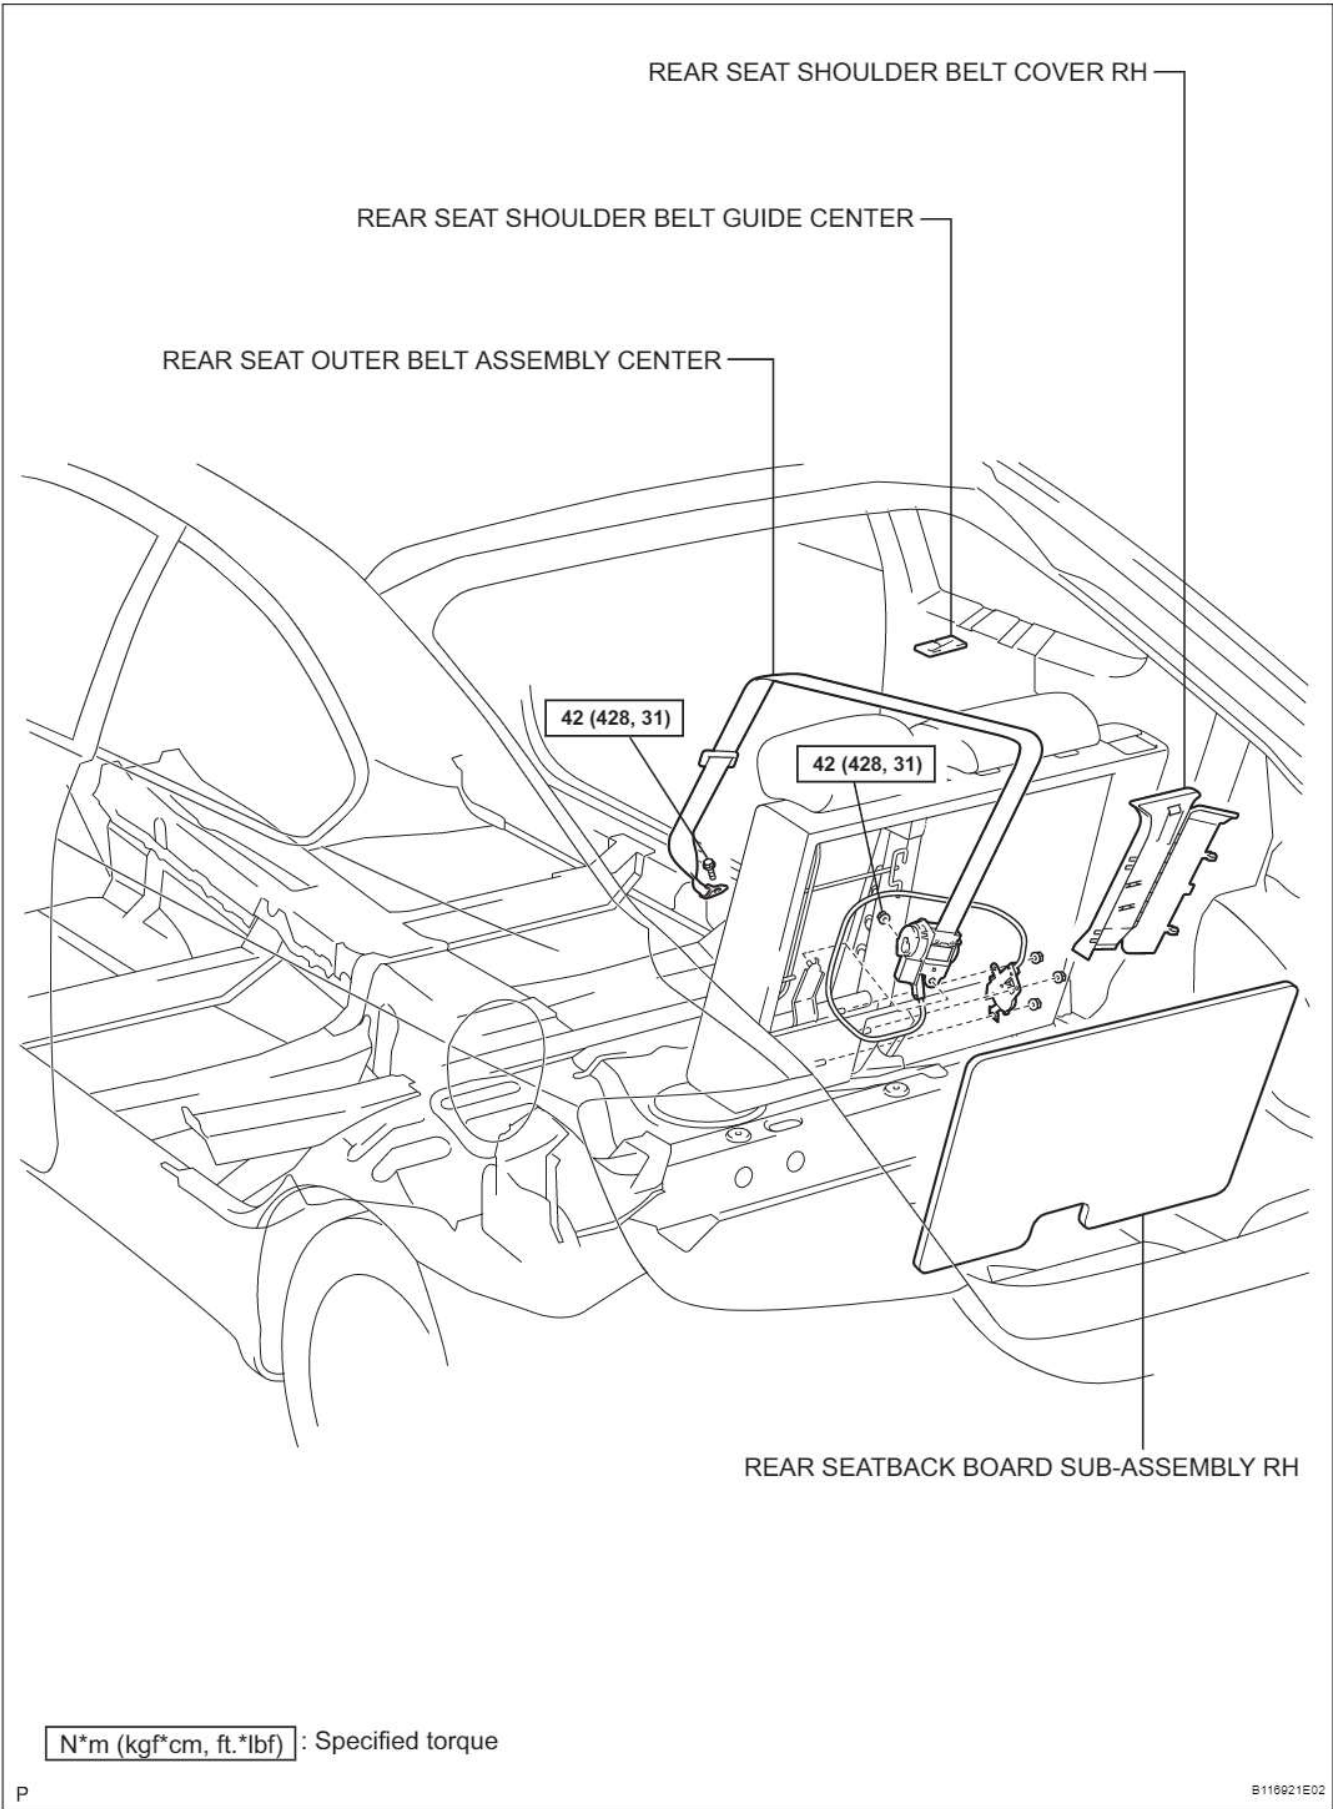

SB-24

SEAT BELT – REAR SEAT OUTER BELT ASSEMBLY

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE TONNEAU COVER ASSEMBLY**3. REMOVE REAR SEAT CUSHION ASSEMBLY (See page [SE-17](#))****4. REMOVE REAR SEATBACK ASSEMBLY LH (See page [SE-17](#))****5. REMOVE FRONT DOOR SCUFF PLATE LH (See page [IR-9](#))****6. REMOVE SIDE NO. 1 TRIM ASSEMBLY LH (See page [IR-10](#))****7. REMOVE BACK DOOR SCUFF PLATE (See page [IR-8](#))****8. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH (See page [IR-11](#))****9. REMOVE ROOF SIDE GARNISH ASSEMBLY INNER LH (See page [IR-11](#))****10. REMOVE REAR SEAT OUTER BELT ASSEMBLY LH**
(a) Remove the 3 bolts and outer belt.**11. REMOVE DECK BOARD SUB-ASSEMBLY****12. REMOVE NO. 1 DECK BOARD**

- (a) Remove the 2 bolts and 2 rope hooks.
- (b) Remove the No. 1 deck board.


13. REMOVE REAR SEAT OUTER BELT ASSEMBLY CENTER

- (a) Remove the bolt and anchor part of the outer belt.
- (b) Remove the rear seat shoulder belt guide center (see page [SE-20](#)).
- (c) Remove the rear seatback board sub-assembly RH (see page [SE-21](#)).
- (d) Remove the rear seat shoulder belt cover RH (see page [SE-22](#)).
- (e) Remove the 4 nuts and outer belt (see page [SE-22](#)).

SB

SEAT BELT – REAR SEAT OUTER BELT ASSEMBLY

SB-25

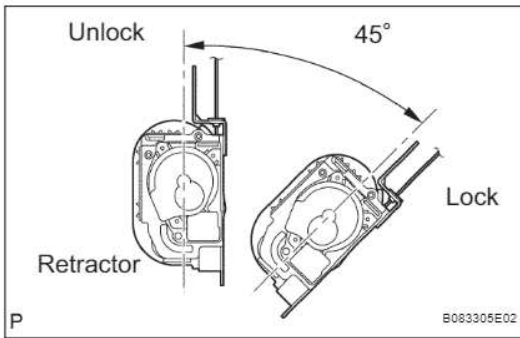

INSPECTION

1. INSPECT REAR SEAT OUTER BELT ASSEMBLY

NOTICE:

Do not disassemble the retractor.

- (a) When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks. If the operation is not as specified, replace the belt.


SB

2. INSPECT REAR SEAT OUTER BELT ASSEMBLY CENTER

NOTICE:

Do not disassemble the retractor.

- (a) When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks. If the operation is not as specified, replace the belt.

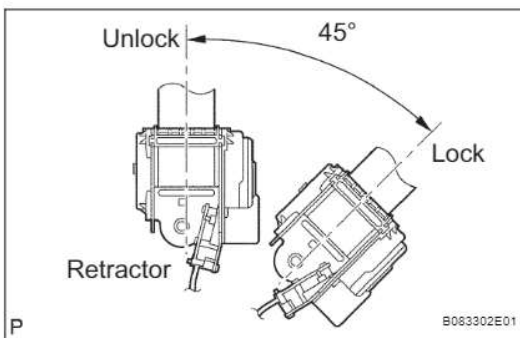

SB-26

SEAT BELT – REAR SEAT OUTER BELT ASSEMBLY

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. INSTALL REAR SEAT OUTER BELT ASSEMBLY LH

- (a) Install the outer belt with the 4 nuts (see page [SE-25](#)).

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

- (b) Install the rear seat shoulder belt cover RH (see page [SE-25](#)).
- (c) Install the rear seatback board sub-assembly RH (see page [SE-26](#)).
- (d) Install the rear seat shoulder belt guide center (see page [SE-27](#)).

- (e) Install the anchor part of the outer belt with the bolt.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

NOTICE:

Do not allow the anchor part to overlap onto the protruding part of the inner belt RH.

- (f) With the belt installed, check that the belt locks when it is pulled out quickly.

NOTICE:

The check should be performed with the outer belt installed.

If the operation is not as specified, replace the belt.

- (g) Check the fastening function of the child restraint system.

NOTICE:


The check should be performed with the outer belt installed.

- (1) When the belt is pulled out fully, the belt should automatically try to retract.
 - (2) After the belt has fully retracted, the belt should be able to be pulled out and retracted again.
- If the operation is not as specified, replace the belt.

2. INSTALL NO. 1 DECK BOARD

- (a) Install the No. 1 deck board.
- (b) Install the 2 rope hooks with the 2 bolts.


3. INSTALL DECK BOARD SUB-ASSEMBLY

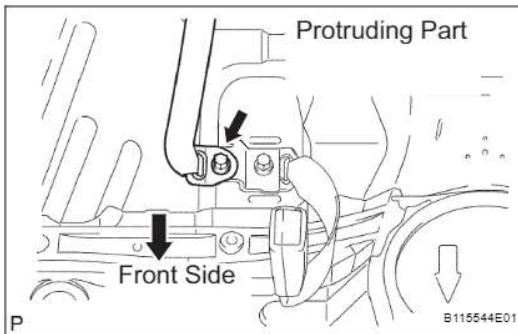

SB

SEAT BELT – REAR SEAT OUTER BELT ASSEMBLY

SB-27

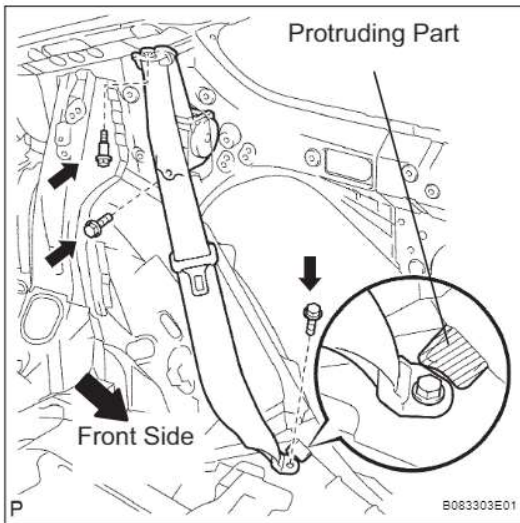

4. INSTALL REAR SEAT OUTER BELT ASSEMBLY LH

- (a) Install the outer belt with the 3 bolts.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

NOTICE:

Do not allow the anchor part to overlap onto the protruding part of the floor panel.

- (b) With the belt installed, check that the belt locks when it is pulled out quickly.

NOTICE:

The check should be performed with the outer belt assembly installed.

If operation is not as specified, replace the belt.

- (c) Check the fastening function of the child restraint system.

NOTICE:

The check should be performed with the outer belt assembly installed.

- (1) When the belt is pulled out fully, the belt should automatically try to retract.

- (2) After the belt has fully retracted, the belt should be able to be pulled out and retracted again. If the operation is not as specified, replace the belt.

5. INSTALL ROOF SIDE GARNISH ASSEMBLY INNER LH (See page [IR-17](#))6. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH (See page [IR-18](#))7. INSTALL BACK DOOR SCUFF PLATE (See page [IR-21](#))8. INSTALL SIDE NO. 1 TRIM ASSEMBLY LH (See page [IR-19](#))9. INSTALL FRONT DOOR SCUFF PLATE LH (See page [IR-20](#))10. INSTALL REAR SEATBACK ASSEMBLY LH (See page [SE-28](#))11. INSTALL REAR SEAT CUSHION ASSEMBLY (See page [SE-29](#))

12. INSTALL TONNEAU COVER ASSEMBLY

13. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

14. PERFORM INITIALIZATION

- (a) Perform initialization (see page [IN-23](#)).

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.

SB