

2002 ACCESSORIES & EQUIPMENT

Exterior Lights System - RAV4

BODY ELECTRICAL SYSTEM

PRECAUTION

NOTE: Take care to observe the following precautions when performing inspections or removal and replacement of body electrical related parts.

1. Headlight System

Halogen bulbs have pressurized gas inside and require special handling. They can burst if scratched or dropped. Hold a bulb only by its plastic or metal case.

Don't touch the glass part of a bulb with bare hands.

2. SRS (Supplemental Restraint System)

The RAV4 is equipped with an SRS (Supplemental Restraint System) such as the driver airbag and front passenger airbag, failure to carry out service operation in the correct sequence could cause the SRS to unexpectedly deploy during servicing, possibly leading to a serious accident. Before servicing (including removal or installation of parts, inspection or replacement), be sure to read the precautionary notices in **AIR BAG SAFETY PRECAUTIONS**.

3. Audio System

If the negative (-) terminal cable is disconnected from the battery, the preset AM, FM1 and FM2 stations stored in memory are erased, so be sure to note the stations and reset them after the battery terminal is reconnected.

4. Mobile Communication System

If the vehicle is equipped with a mobile communication system, refer to precautions in **IF VEHICLE IS EQUIPPED WITH MOBILE COMMUNICATION SYSTEM**.

TROUBLESHOOTING

PROBLEM SYMPTOMS

Headlight And Taillight System

W/Daytime Running Light System

Symptom/Suspect Area	See
----------------------	-----

Headlight Does Not Light. (Taillight Is Normal)	
HEAD Fuse (H-LP LH, RH)	FUSES & CIRCUIT BREAKERS
Headlight Dimmer Switch	Step 2 under INSPECTION
Light Control Switch	Step 1 under INSPECTION
Daytime Running Light Switch	Step 3 under INSPECTION
Passenger's Side J/B ECU	TERMINALS OF ECU
Headlight Bulb	
Wire Harness	
Headlight Does Not Light (Taillight Does Not Light Up)	
HEAD Fuse (H-LP LH, RH)	FUSES & CIRCUIT BREAKERS
Light Control Switch	Step 1 under INSPECTION
Daytime Running Light Relay	Step 3 under INSPECTION
Headlight Bulb	
Wire Harness	
Only One Side Does Not Light	
HEAD Fuse (H-LP LH, RH)	FUSES & CIRCUIT BREAKERS
Headlight Bulb	
Wire Harness	
Lo-Beam Does Not Light (All)	
HEAD Fuse (H-LP LH, RH)	FUSES & CIRCUIT BREAKERS
Headlight Bulb	
Wire Harness	
Lo-Beam Does Not Light (One Side)	
HEAD Fuse (H-LP LH, RH)	FUSES & CIRCUIT BREAKERS
Headlight Bulb	
Wire Harness	
Hi-Beam Does Not Light (All)	
HEAD Fuse (H-LP LH, RH)	FUSES & CIRCUIT BREAKERS
Headlight Bulb	
Wire Harness	
Hi-Beam Does Not Light (One Side)	
HEAD Fuse (H-LP LH, RH)	FUSES & CIRCUIT BREAKERS
Headlight Bulb	
Wire Harness	
Flash Does Not Light	
HEAD Fuse (H-LP LH, RH)	FUSES & CIRCUIT BREAKERS
Headlight Bulb	
Wire Harness	
Light-On Warning System Does Not Operate	
ECU-IG Fuse	FUSES & CIRCUIT BREAKERS
Door Courtesy Switch (Driver's)	INSPECTION

	<u>INSPECTION</u>
Combination Meter	<u>CIRCUIT</u>
Wire Harness	
Headlight Does Not Light With Light Control Switch In HEAD	
Light Control Switch	Step 1 under INSPECTION
Wire Harness	
Headlight Does Not Go Out With Light Control Switch In OFF	
Light Control Switch	Step 1 under INSPECTION
Wire Harness	
Taillight Does Not Light With Light Control Switch In TAIL	
Taillight Control Relay	Step 3 under INSPECTION
TAIL & PANEL Fuse	<u>FUSES & CIRCUIT BREAKERS</u>
Light Control Switch	Step 1 under INSPECTION
Wire Harness	
Taillight Does Not Go Out With Light Control Switch In OFF	
Taillight Control Relay	Step 3 under INSPECTION
TAIL & PANEL Fuse	<u>FUSES & CIRCUIT BREAKERS</u>
Light Control Switch	Step 1 under INSPECTION
Wire Harness	
Headlight Does Not Light With Engine Running & Light Control Switch In OFF	
GAUGE Fuse	<u>FUSES & CIRCUIT BREAKERS</u>
Generator L Terminal	
Passenger's Side J/B ECU	TERMINALS OF ECU
Daytime Running Light Relay	Step 3 under INSPECTION
Wire Harness	

Headlight And Taillight System

W/O Daytime Running Light System

Symptom/Suspect Area	See
Headlight Does Not Light (Taillight Is Normal)	
HEAD Fuse (H-LP LH, RH)	<u>FUSES & CIRCUIT BREAKERS</u>
Headlight Control Relay	Step 3 under INSPECTION
Headlight Dimmer Switch	Step 2 under INSPECTION
Light Control Switch	Step 1 under INSPECTION
Passenger Side J/B ECU	TERMINALS OF ECU
Headlight Bulb	
Wire Harness	
Headlight Does Not Light (Taillight Does Not Light)	
HEAD Fuse (H-LP LH, RH)	<u>FUSES & CIRCUIT BREAKERS</u>
Light Control Switch	Step 1 under INSPECTION

Headlight Bulb	
Wire Harness	
Only One Side Light Does Not Light	
HEAD Fuse (H-LP LH, RH)	<u>FUSES & CIRCUIT BREAKERS</u>
Headlight Bulb	
Wire Harness	
Lo-Beam Does Not Light (All)	
HEAD Fuse (H-LP LH, RH)	<u>FUSES & CIRCUIT BREAKERS</u>
Headlight Bulb	
Wire Harness	
Lo-Beam Does Not Light (One Side)	
HEAD Fuse (H-LP LH, RH)	<u>FUSES & CIRCUIT BREAKERS</u>
Headlight Bulb	
Wire Harness	
Hi-Beam Does Not Light (All)	
HEAD Fuse (H-LP LH, RH)	<u>FUSES & CIRCUIT BREAKERS</u>
Headlight Bulb	
Wire Harness	
Hi-Beam Does Not Light (One Side)	
HEAD Fuse (H-LP LH, RH)	<u>FUSES & CIRCUIT BREAKERS</u>
Headlight Bulb	
Wire Harness	
Flash Does Not Light	
HEAD Fuse (H-LP LH, RH)	<u>FUSES & CIRCUIT BREAKERS</u>
Headlight Bulb	
Wire Harness	
Light On Warning System Does Not Operate	
ECU-IG Fuse	<u>FUSES & CIRCUIT BREAKERS</u>
Door Courtesy Switch (Driver's)	<u>INSPECTION</u>
Ignition Switch	<u>INSPECTION</u>
Combination Meter	<u>CIRCUIT</u>
Wire Harness	
Headlight Does Not Light With Light Control Switch In HEAD	
Light Control Switch	Step 1 under INSPECTION
Wire Harness	
Headlight Does Not Go Out With Light Control Switch In OFF	
Light Control Switch	Step 1 under INSPECTION
Wire Harness	
Taillight Does Not Light With Light Control Switch In TAIL	
Taillight Control Relay	Step 3 under INSPECTION
TAIL & PANEL Fuse	<u>FUSES & CIRCUIT BREAKERS</u>

	Step 1 under INSPECTION
Wire Harness	
Taillight Does Not Go Out With Light Control Switch In OFF	
Taillight Control Relay	Step 3 under INSPECTION
TAIL & PANEL Fuse	FUSES & CIRCUIT BREAKERS
Light Control Switch	Step 1 under INSPECTION
Wire Harness	
Headlight Does Not Light With Engine Running & Light Control Switch In OFF	
GAUGE Fuse	FUSES & CIRCUIT BREAKERS
Generator L Terminal	
Passenger Side J/B ECU	TERMINALS OF ECU
Wire Harness	

Fog Light System

Fog Light System

Symptom/Suspect Areas	See
Fog Light Does Not Light Up With Light Control Switch TAIL or HEAD (Headlight Is Normal)	
Bulb	
FR FOG Fuse	FUSES & CIRCUIT BREAKERS
Front Fog Light Relay	Step 2 under INSPECTION
Front Fog Light Switch	Step 1 under INSPECTION
Wire Harness	
Fog Light Does Not Light Up With Light Control Switch TAIL or HEAD (Headlight Does Not Light)	
Headlight & Taillight System	HEADLIGHT AND TAILLIGHT SYSTEM
Wire Harness	
Only One Light Does Not Light Up	
Bulb	
Wire Harness	

Turn Signal And Hazard Warning System

Turn Signal And Hazard Warning System

Symptom/Suspecte Areas	See
Hazard & Turn Do Not Light Up	
Hazard Warning Switch	Step 2 under INSPECTION
Turn Signal Switch	Step 1 under INSPECTION
Wire Harness	
The Flashing Frequency Is Abnormal	
Bulb	
Turn Signal Flasher Relay	Step 3 under INSPECTION

Wire Harness	
Hazard Warning Light Does Not Light Up (Turn Is Normal)	
HAZ Fuse	FUSES & CIRCUIT BREAKERS
Hazard Warning Switch	Step 2 under INSPECTION
Wire Harness	
Hazard Warning Light Does Not Light Up In One Direction	
Hazard Warning Switch	Step 2 under INSPECTION
Wire Harness	
Turn Signal Does Not Light Up	
Ignition Switch	INSPECTION
TURN Fuse	FUSES & CIRCUIT BREAKERS
Turn Signal Switch	Step 1 under INSPECTION
Wire Harness	
Turn Signal Does Not Light Up In One Direction	
Turn Signal Switch	Step 1 under INSPECTION
Wire Harness	
Only One Bulb Does Not Light Up	
Bulb	
Wire Harness	

Back-Up Light System

BACK-UP LIGHT SYSTEM

Symptom/Suspect Areas	See
Back-Up Light Does Not Light Up	
GAUGE Fuse	FUSES & CIRCUIT BREAKERS
Back-Up Light Switch	Step 1 under INSPECTION
Bulb	
Wire Harness	
Back-Up Light Remains Always ON	
Back-Up Light Switch	Step 1 under INSPECTION
Wire Harness	
Only One Light Does Not Light Up	
Bulb	
Wire Harness	

Stop Light System

STOP LIGHT SYSTEM

Symptom/Suspect Areas	See
Stop Light Does Not Light Up	

STOP Fuse	FUSES & CIRCUIT BREAKERS
Stop Light Switch	Step 1 under INSPECTION
Bulb	
Wire Harness	
Stop Light Remains Always ON	
Stop Light Switch	Step 1 under INSPECTION
Wire Harness	
Only One Light Does Not Light Up	
Bulb	
Wire Harness	

HEADLIGHT AND TAILLIGHT SYSTEM

LOCATION


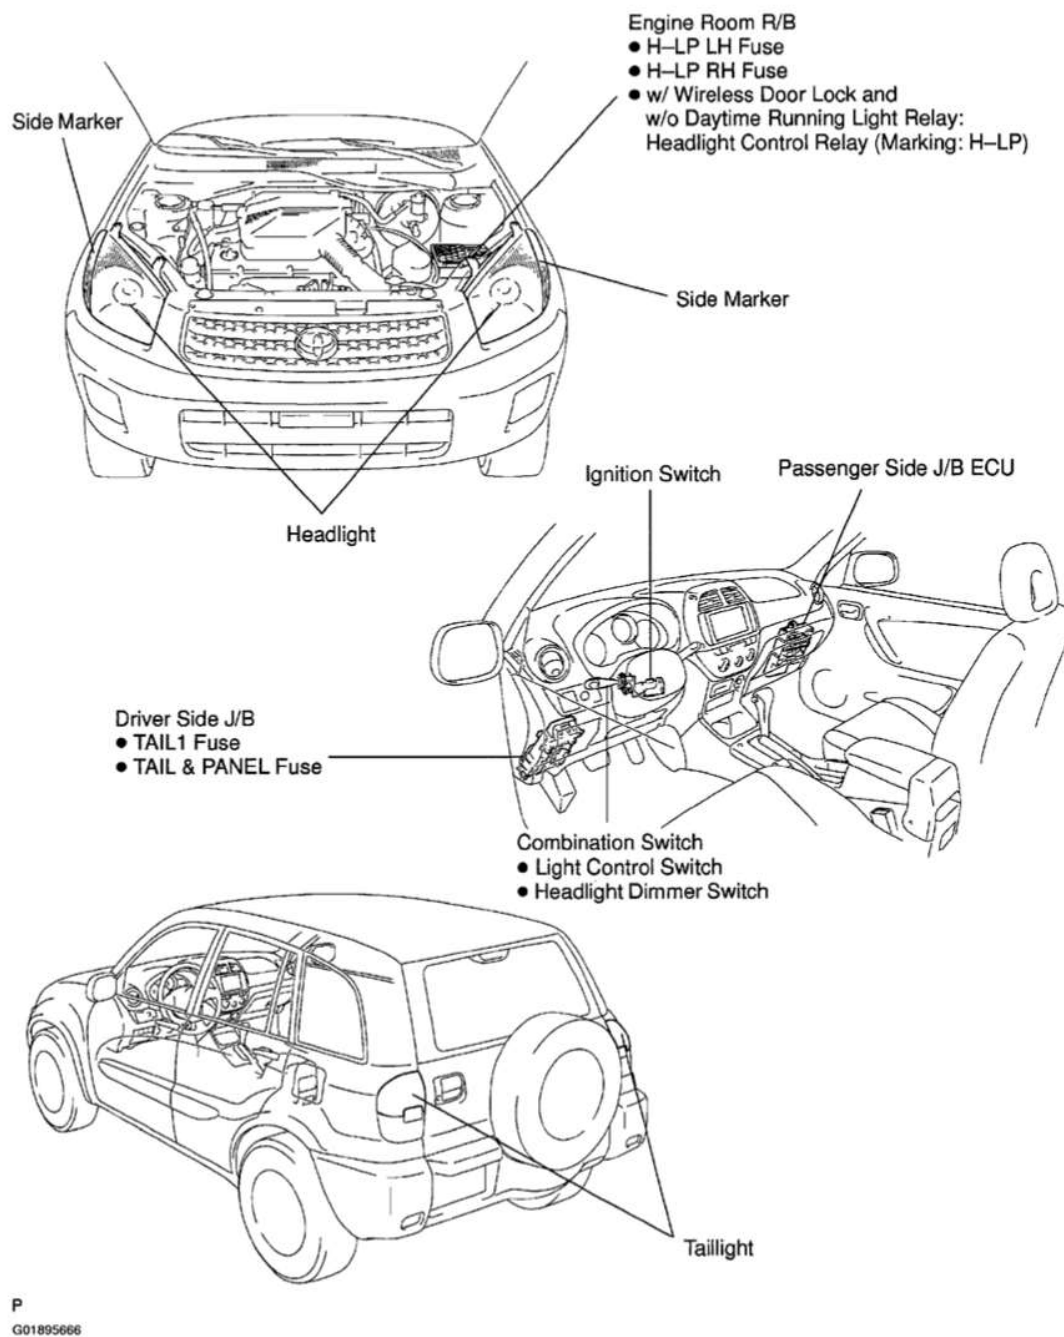
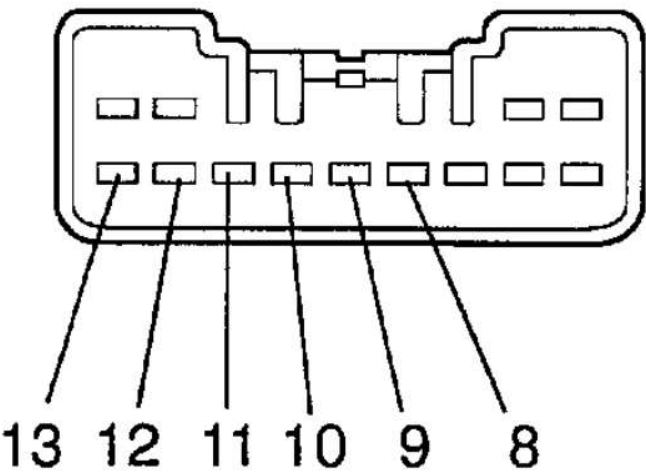


Fig. 1: Displaying Headlight & Taillight System Components
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

INSPECTION

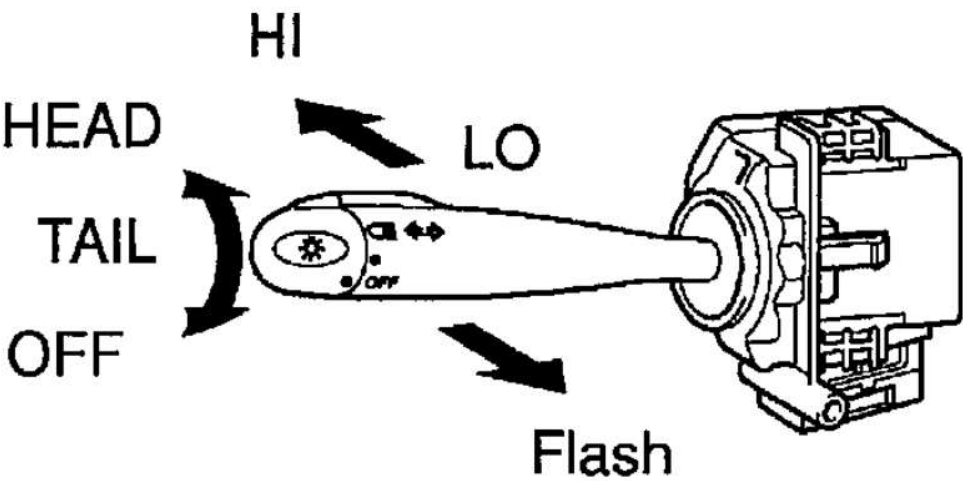1. Inspect light control switch continuity .



Y
G01895669

Fig. 2: Identifying Light Control Switch Functions & Terminals
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Switch position	Tester connection	Specified condition
OFF	—	No continuity
TAIL	10 – 13	Continuity
HEAD	10 – 13	Continuity
	11 – 12	

G01895667

Fig. 3: Displaying Light Control Switch Specifications
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If continuity is not as specified, replace the switch.

2. **Inspect headlight dimmer switch continuity .**

Switch position	Tester connection	Specified condition
LO beam	8 – 11	Continuity
HI beam	9 – 11	Continuity
Flash	9 – 11	Continuity

G01895668

Fig. 4: Displaying Headlight Dimmer Switch Specifications
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If continuity is not as specified, replace the switch.

3. **w/Wireless Door Lock and w/o Daytime Running Light Relay Inspect headlight control relay (Marking: H-LP) continuity .**

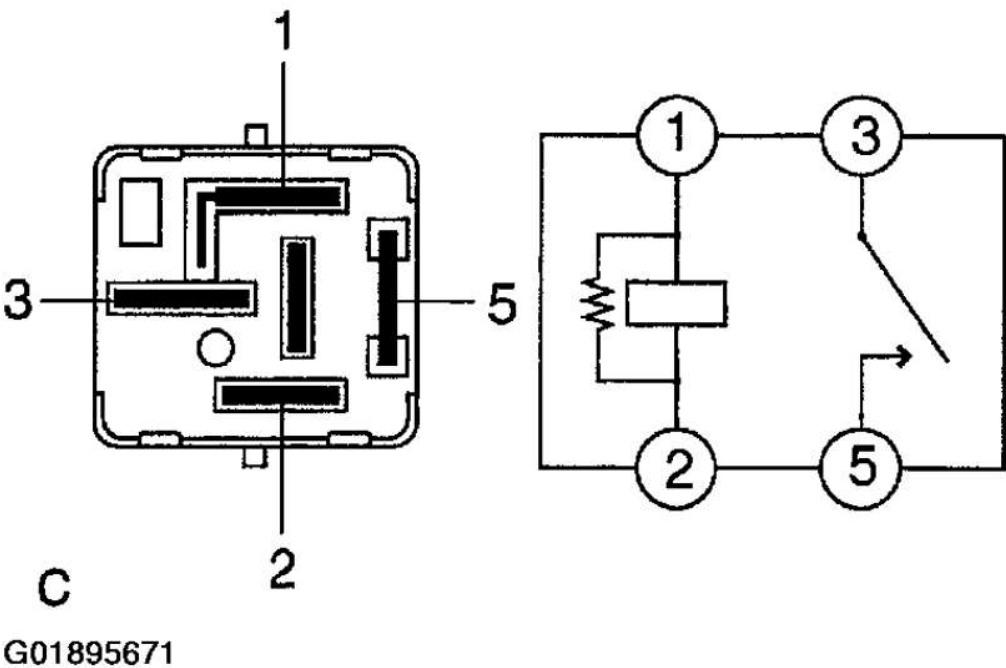


Fig. 5: Identifying Headlight Control Relay Terminals
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

G01895670

Fig. 6: Displaying Headlight Control Relay Specifications
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If continuity is not as specified, replace the relay.

4. **Inspect side marker continuity .**

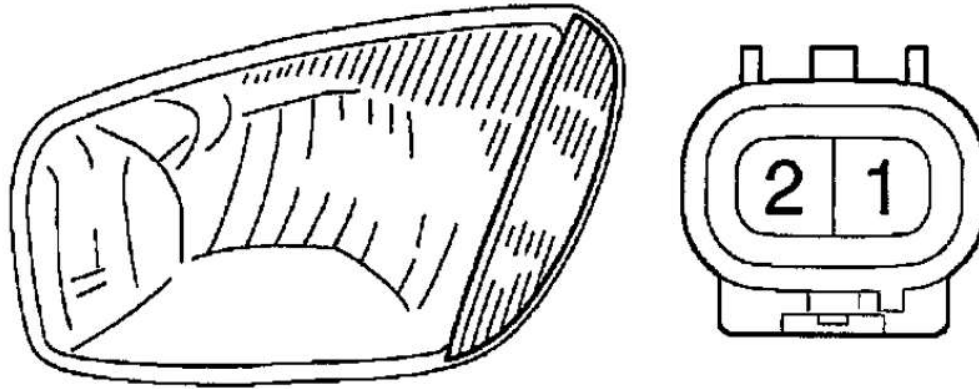
**Y****G01895672**

Fig. 7: Identifying Side Marker Terminals
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

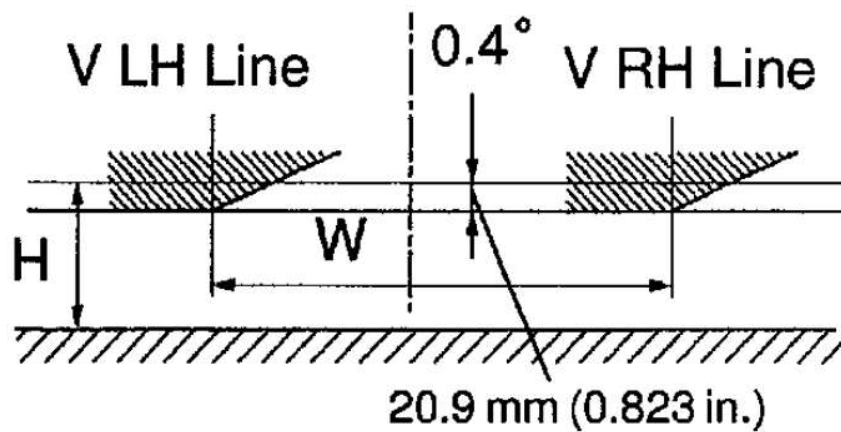
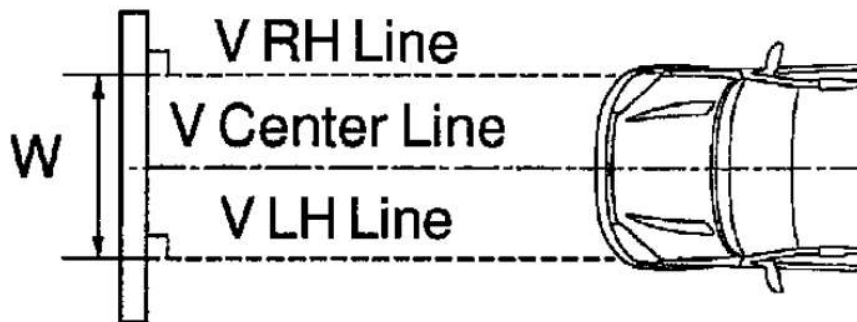
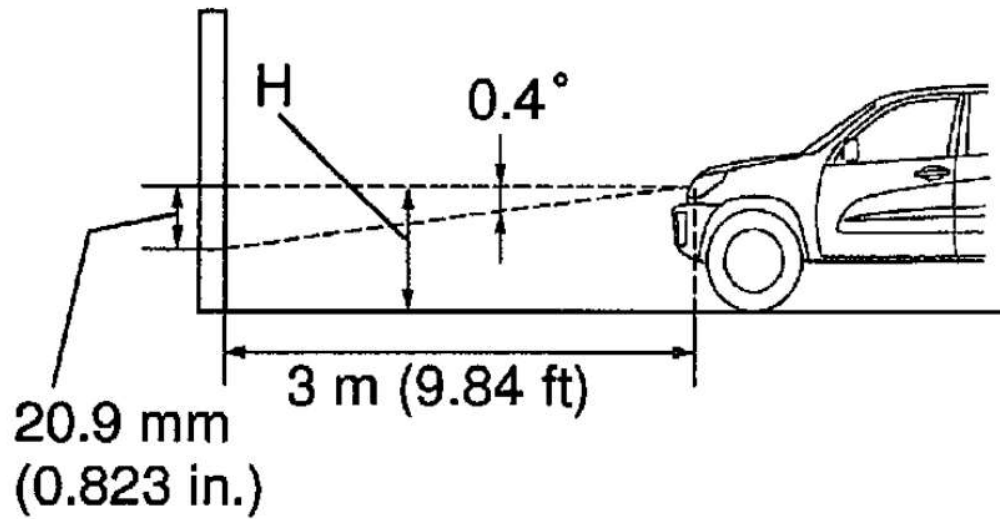
Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.

ADJUSTMENT

Adjust Headlight Aim

- a. Put the vehicle under the following conditions.
 - Make sure the body around the headlight is not deformed.
 - Park the vehicle on a level spot.
 - Get into the driver's seat and be ready for driving (with a full tank).
 - Bounce the vehicle several times.
 - Tire inflation pressure is the specified value.
- b. Prepare the thick white colored paper.
- c. Stand the paper perpendicularly and ensure the distance from it to the head lights is 3 m (9.84 ft).

**P**

G01895674

Fig. 8: Specifying Vehicle Position**Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.**

- d. Ensure that the center line of vehicle and the paper are at a 90 degree angle as shown in the illustration (H line)
- e. On the paper, draw a horizontal line indicating the longitudinal headlights (low beam and high beam center mark) position.
- f. On the paper, draw a vertical line indicating the center of the vehicle (V center line).
- g. On the paper, draw vertical lines indicating the lateral headlights (low beam and high beam center marks) positions (V RH and LH lines).
- h. Take an appropriate measure so as not to affect the other light.

NOTE:

- **Disconnect the connector of another light to prevent heat affection from the light because the other lens of the head light assembly is made of synthetic resin. When connecting the connector again take care not to make the aiming out of adjustment.**
- **When covering the headlight, finish it within 3 minutes.**

- i. Turn the headlights ON.
- j. Check that the head lights light up the paper as shown in the illustration.

NOTE:

As shown in the illustration, adjust aiming of the LH and RH lights respectively.


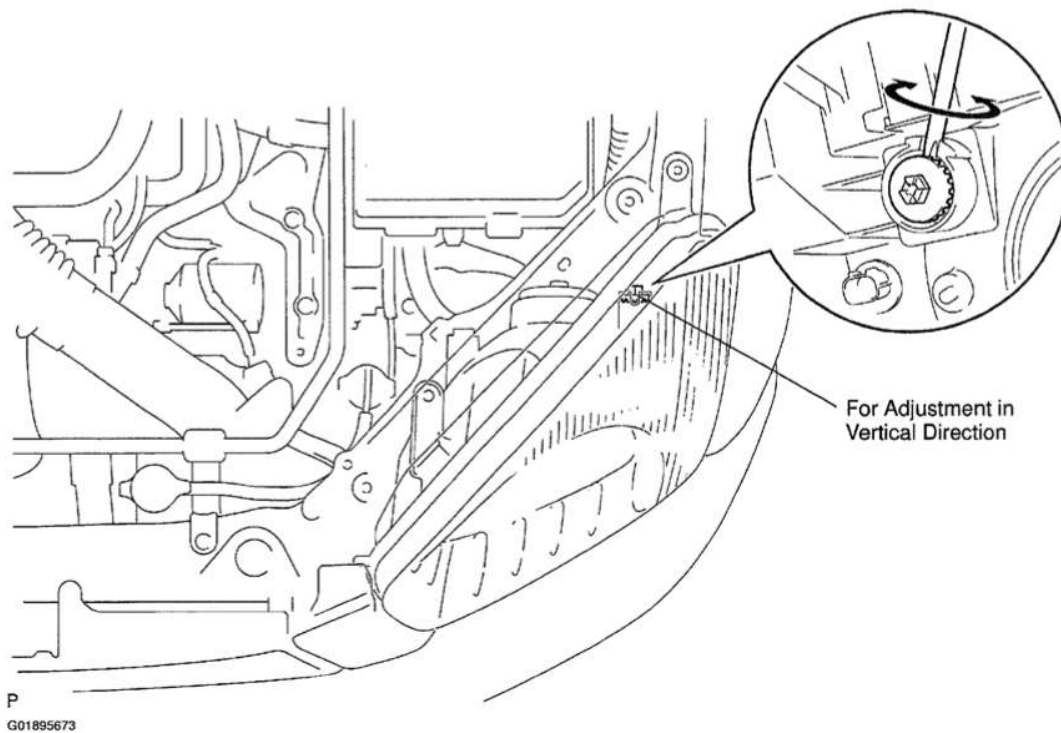


Fig. 9: Locating Headlight Adjuster
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

FOG LIGHT SYSTEM

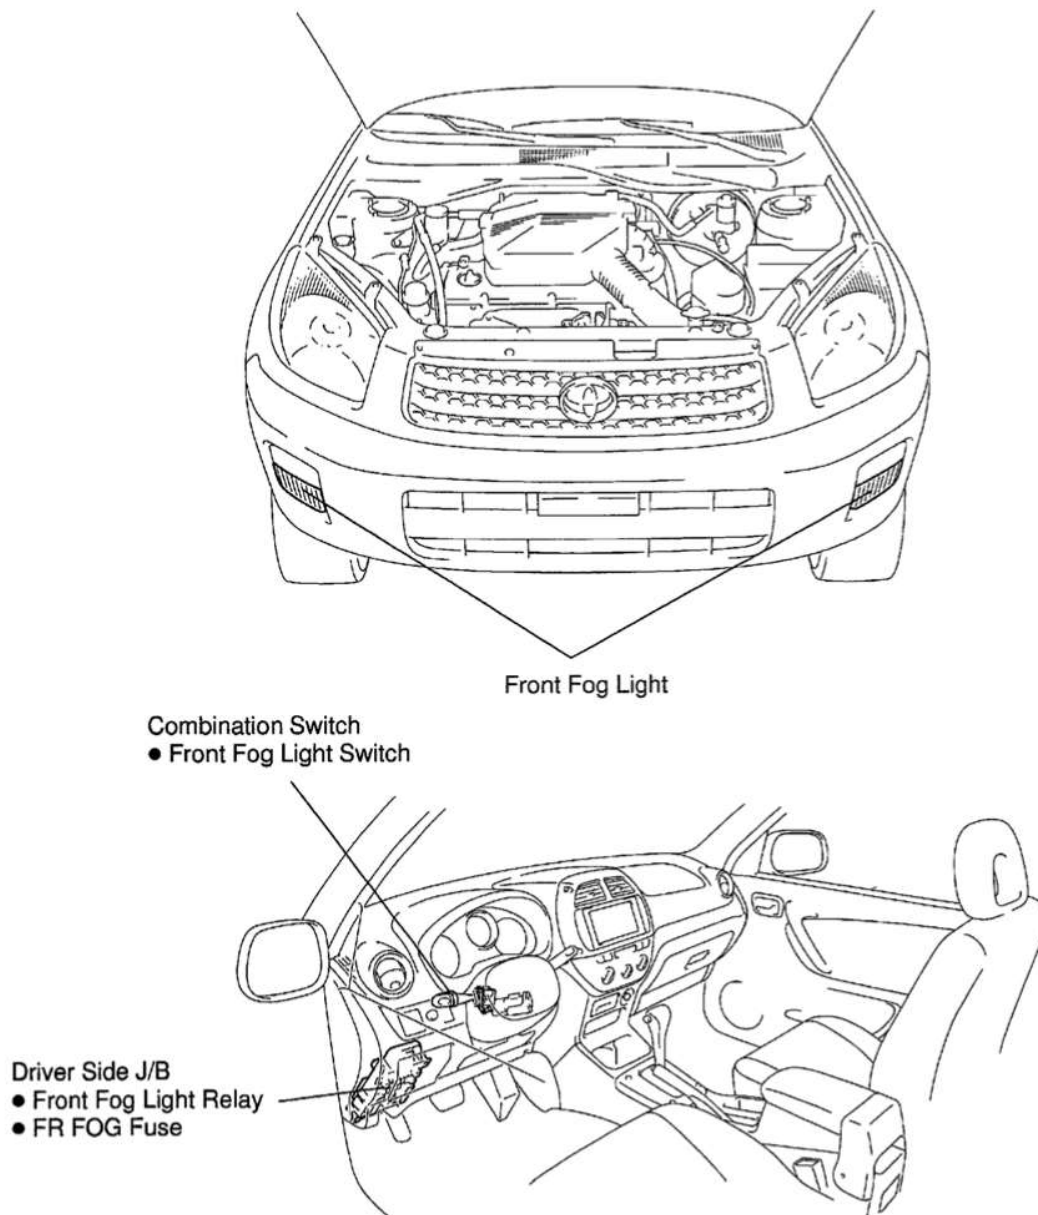LOCATION





P
G01895675

Fig. 10: Identifying Fog Light System Components
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

INSPECTION

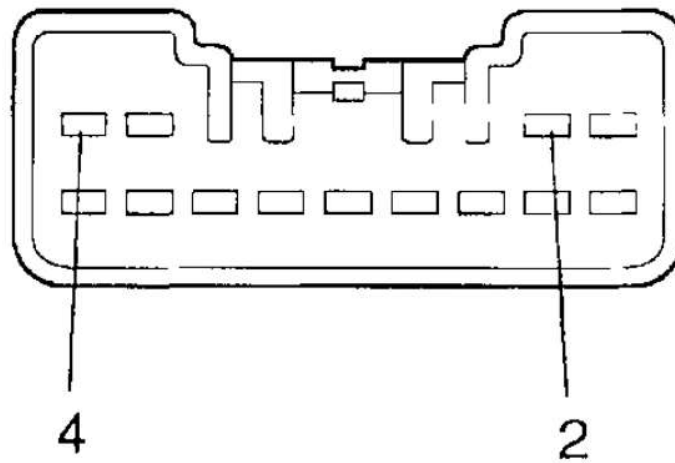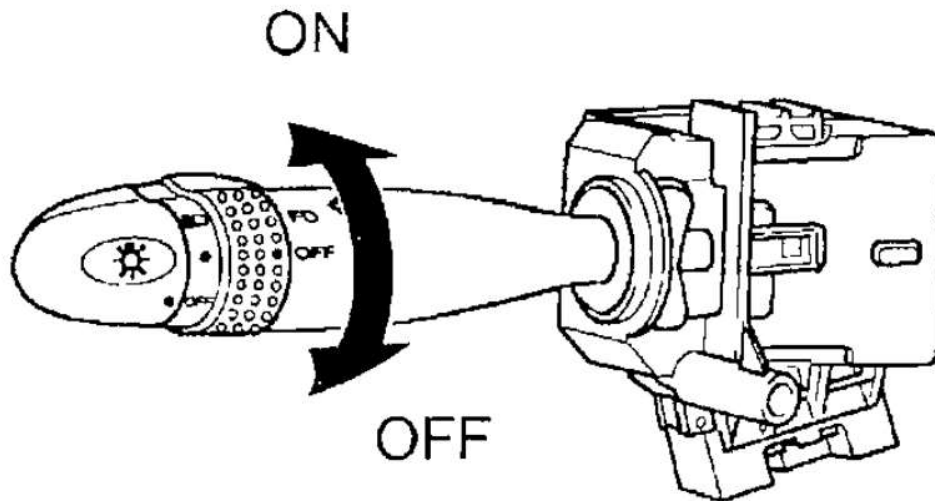1. **Inspect fog light switch continuity .**



Y

G01895677

Fig. 11: Displaying Fog Light Switch & Terminals
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


Switch position	Tester connection	Specified condition
OFF	—	No continuity
ON	2 – 4	Continuity

G01895676

Fig. 12: Displaying Fog Light Switch Specifications
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If continuity is not as specified, replace the switch.

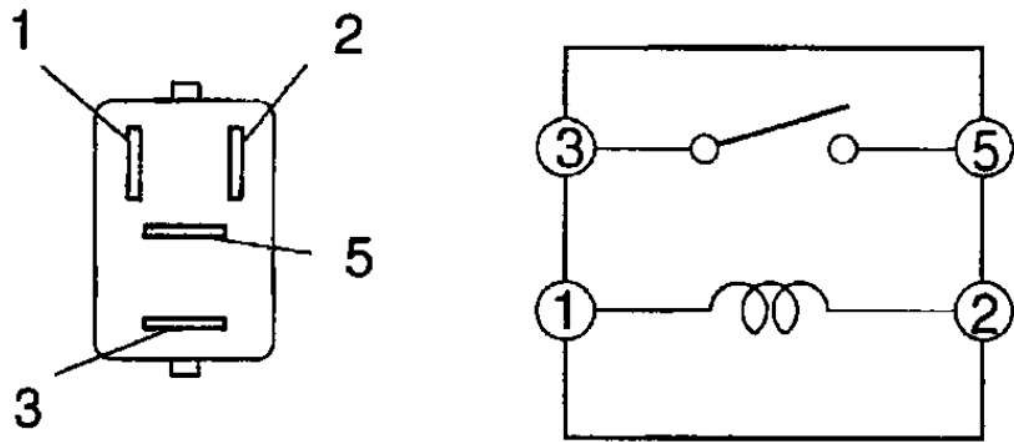2. Inspect front fog light relay continuity .



G01895679

Fig. 13: Identifying Fog Light Relay Terminals
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

condition	Tester connection	Specified condition
constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

G01895678

Fig. 14: Displaying Fog Light Relay Specification
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If continuity is not as specified, replace the relay.

ADJUSTMENT

Adjust Fog Light Aim

A-bolt: Vertical Direction

NOTE: Insert a screwdriver into the hole for aiming in the fender liner to perform aiming.


**Y****G01895680**

Fig. 15: Aiming Fog Light

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

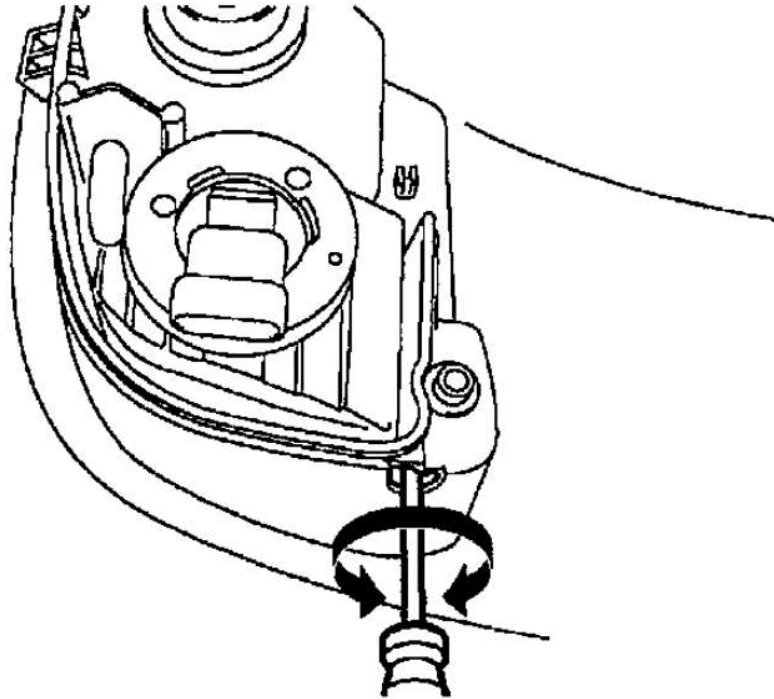TURN SIGNAL AND HAZARD WARNING SYSTEM

LOCATION


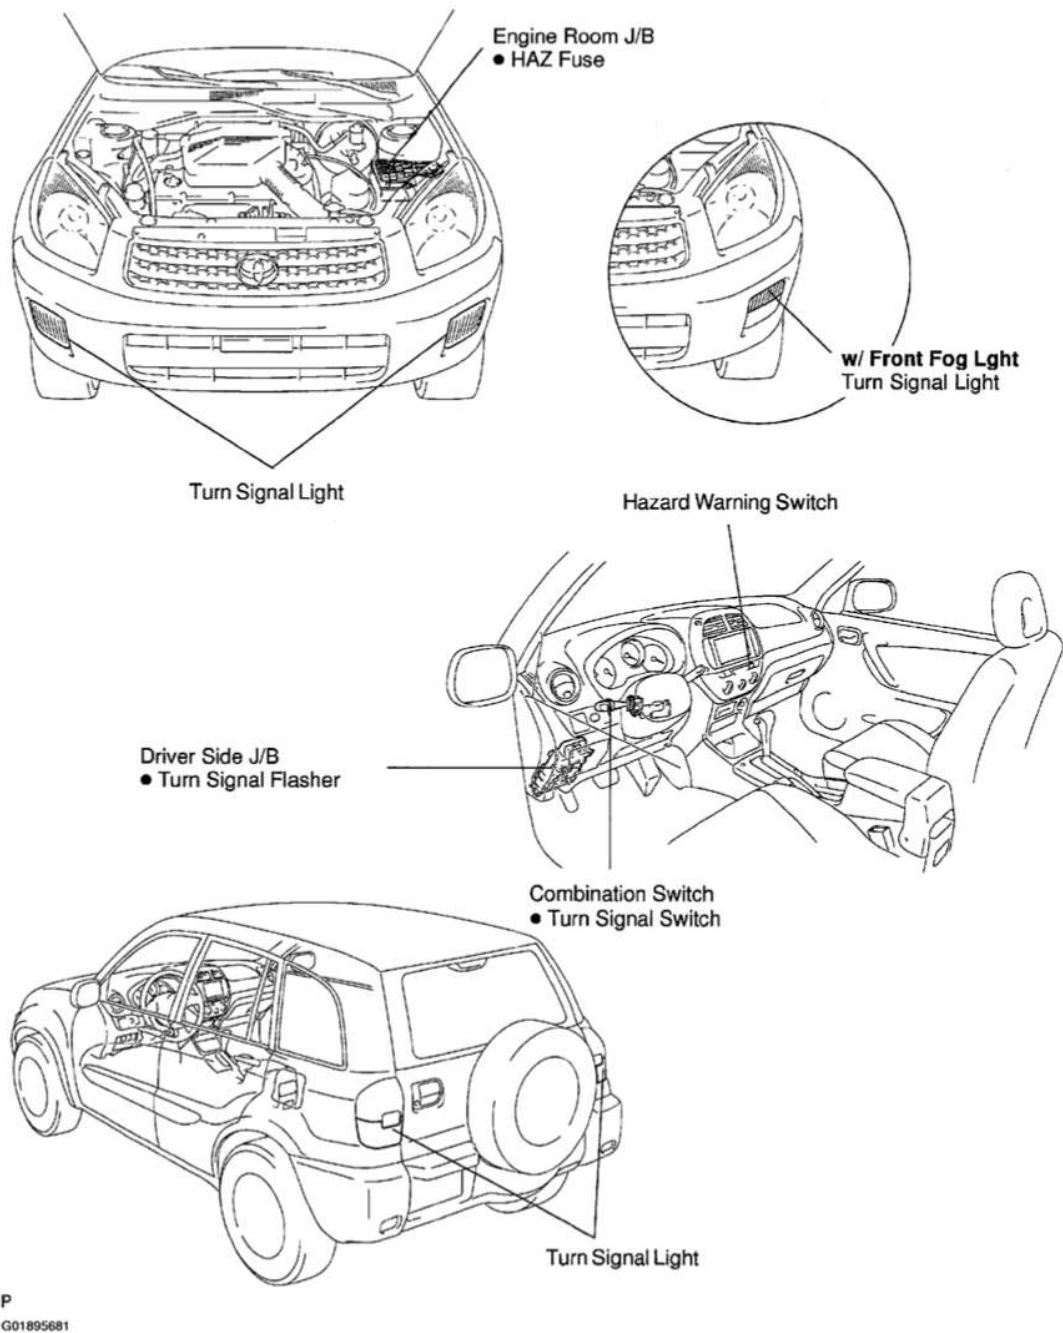


Fig. 16: Displaying Turn Signal & Hazard Warning System Component Locations
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


INSPECTION

1. Inspect turn signal switch continuity .

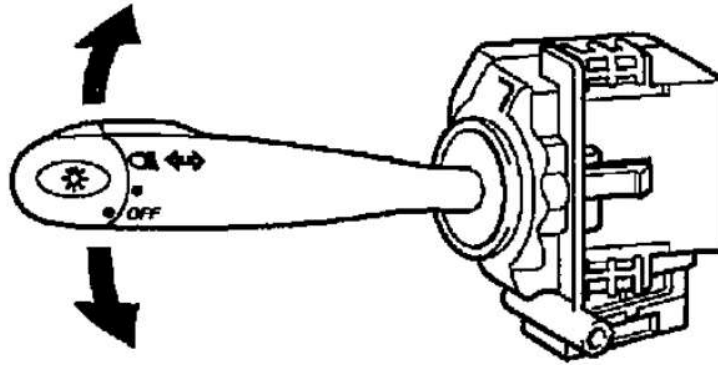Right Turn



Left Turn

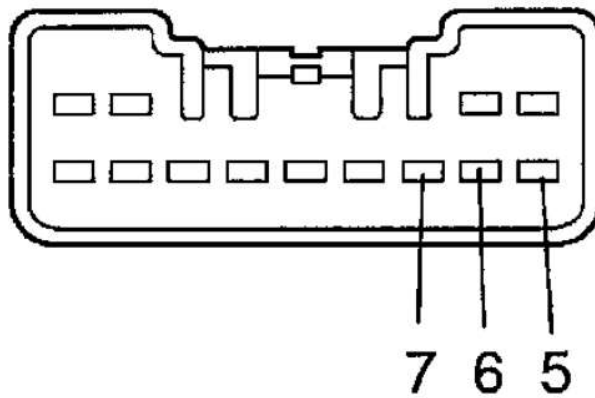

Y

G01895683

Fig. 17: Identifying Turn Signal Switch Terminals
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


Switch position	Tester connection	Specified condition
Left turn	5 – 6	Continuity
Neutral	–	No continuity
Right turn	6 – 7	Continuity

G01895682

Fig. 18: Displaying Turn Signal Switch Specifications
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If continuity is not as specified, replace the switch.

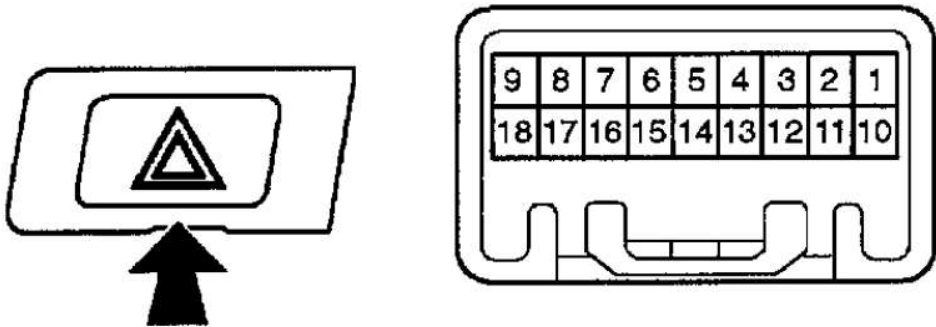2. Inspect hazard warning switch continuity .



Y
G01895685

Fig. 19: Identifying Hazard Warning Switch Terminals
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Condition	Tester connection	Specified condition
OFF	–	No continuity
ON	5 – 9	Continuity
Illumination circuit	4 – 6	Continuity


G01895684

Fig. 20: Displaying Hazard Warning Switch Specifications
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If continuity is not as specified, replace the switch.

- 3. Inspect turn signal flasher circuit .

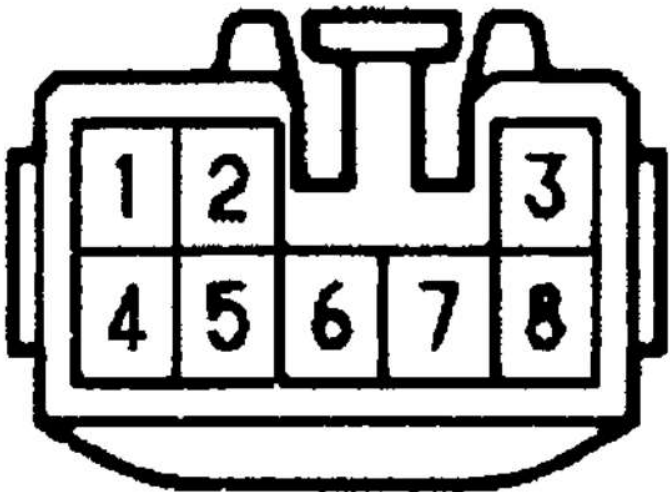Wire Harness Side



G01895686

Fig. 21: Identifving Turn Signal Flasher Terminals

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Disconnect the connector from the combination switch and inspect the connector on the wire harness side, as shown in the next page table.

Tester connection	Condition	Specified condition
2 – Ground	Constant	Continuity
3 – Ground	Constant	Continuity
5 – Ground	Turn signal switch RIGHT or OFF	No continuity
5 – Ground	Turn signal switch LEFT	Continuity
6 – Ground	Turn signal switch LEFT or OFF	No continuity
6 – Ground	Turn signal switch RIGHT	Continuity
7 – Ground	Constant	Continuity
8 – Ground	Hazard warning switch OFF	No continuity
8 – Ground	Hazard warning switch ON	Continuity
1 – Ground	Ignition switch LOCK or ACC	No voltage
1 – Ground	Ignition switch ON	Battery voltage
4 – Ground	Constant	Battery voltage

G01895687


Fig. 22: Displaying Turn Signal Testing Specifications
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If circuit is as specified, replace the flasher.

If circuit is not as specified, inspect the circuits connected to other parts.

BACK-UP LIGHT SYSTEM

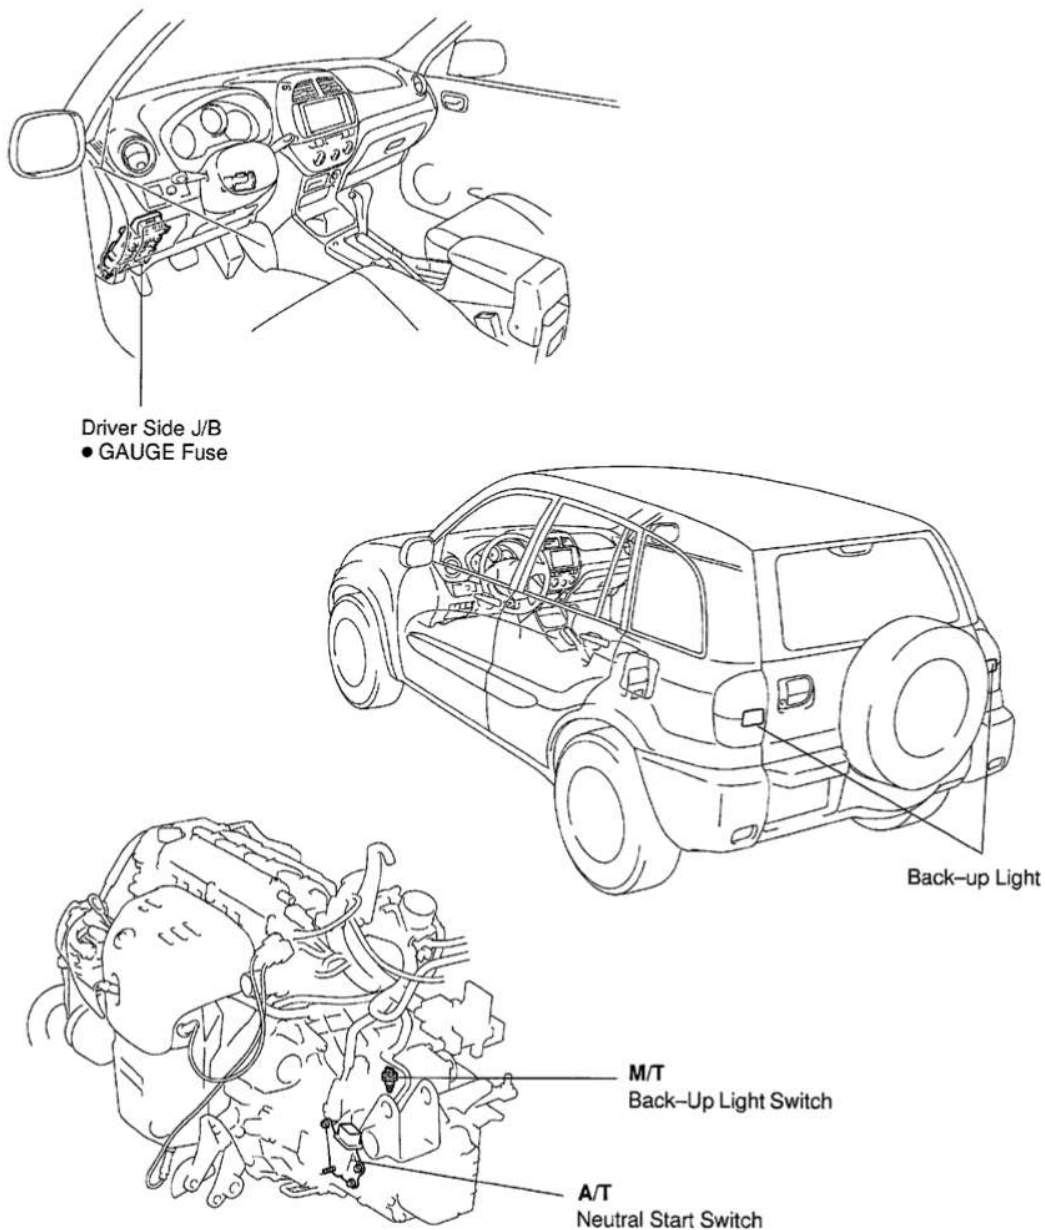LOCATION



P
G01895694

Fig. 23: Displaying Back-Up Light System Component Locations
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

INSPECTION

1. M/T Inspect back-up light switch continuity .

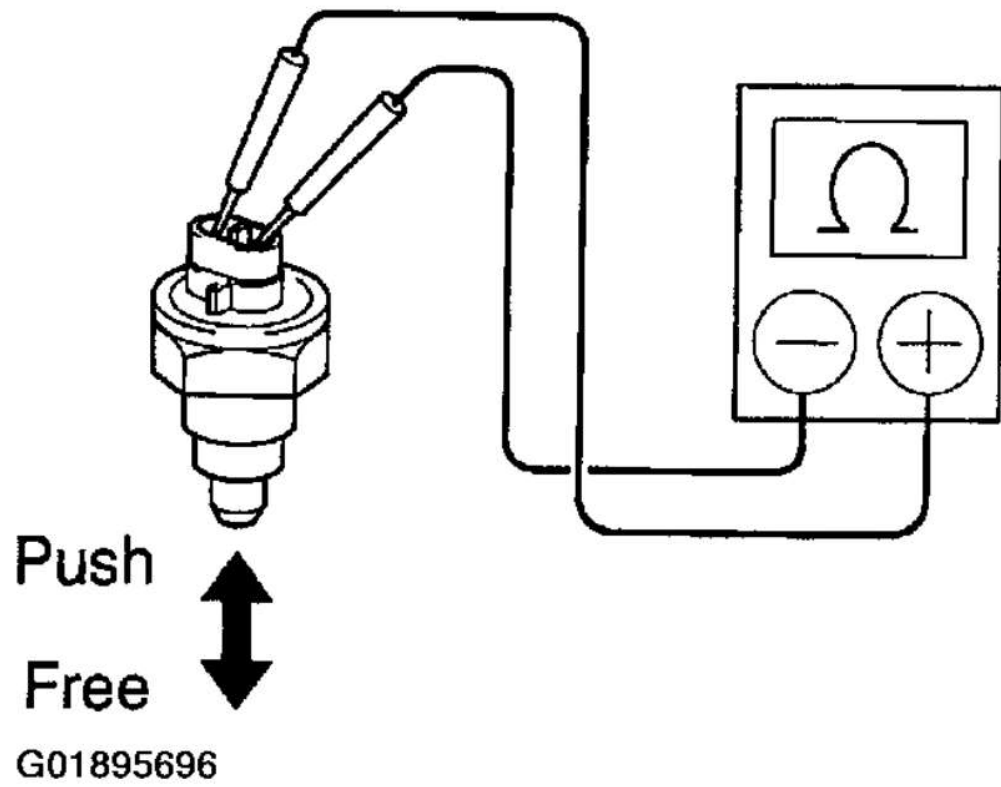


Fig. 24: Testing Back-Up Light Switch
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Switch position	Specified condition
Free	No continuity
Push	Continuity

G01895695


Fig. 25: Displaying Back-Up Light Switch Specifications
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If continuity is not as specified, replace the switch.

2. A/T Inspect neutral start switch continuity (See DTC P1780: PARK/NEUTRAL POSITION SWITCH CIRCUIT) .

STOP LIGHT SYSTEM

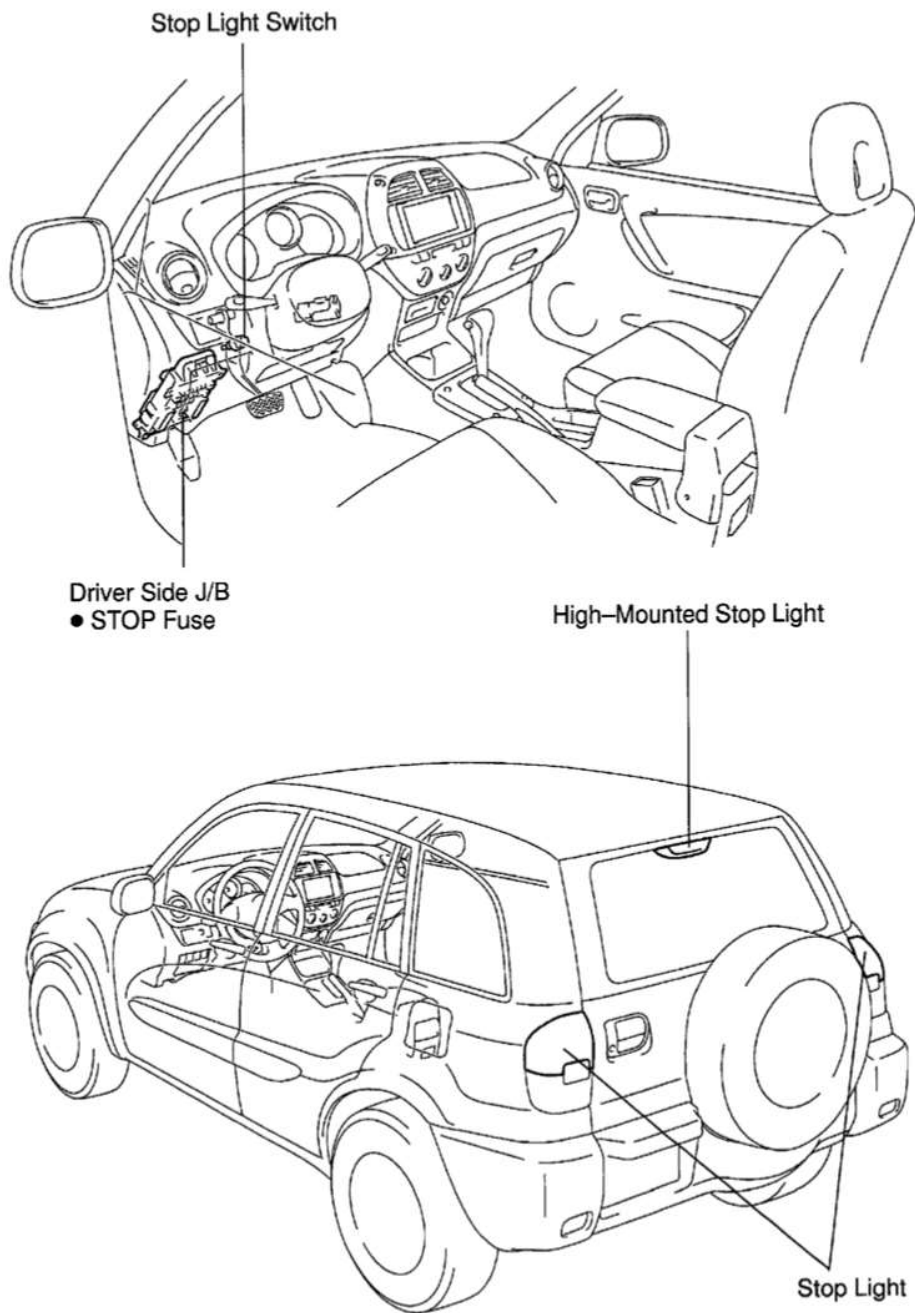LOCATION




P
G01895697

Fig. 26: Displaying Stop Light System Component Locations
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.


INSPECTION

1. Inspect stop light switch continuity .

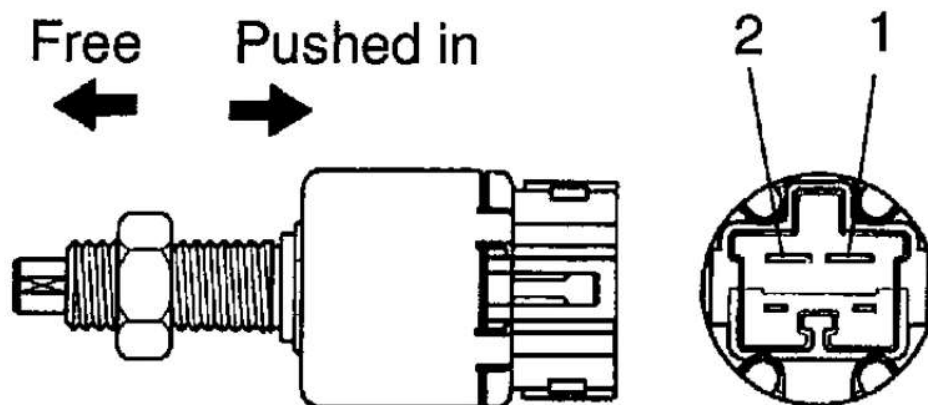w/ Cruise Control System



w/o Cruise Control System

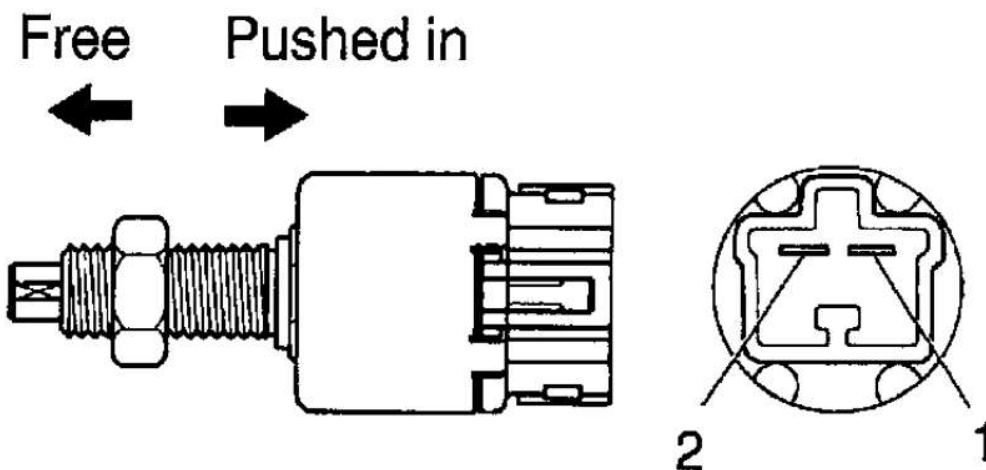

G01895699

Fig. 27: Identifying Stop Light Switch Positions & Terminals
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Switch position	Tester connection	Specified condition
Switch pin pushed in (Pedal released)	1 – 2	No continuity
Switch pin free (Pedal depressed)	1 – 2	Continuity

G01895698

Fig. 28: Displaying Stop Light Switch Continuity Specifications
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If continuity is not as specified, replace the switch.

2002 ACCESSORIES & EQUIPMENT

Interior Light System - RAV4

BODY ELECTRICAL SYSTEM

PRECAUTION

NOTE: Take care to observe the following precautions when performing inspections or removal and replacement of body electrical related parts.

1. Headlight System

Halogen bulbs have pressurized gas inside and require special handling. They can burst if scratched or dropped. Hold a bulb only by its plastic or metal case.

Don't touch the glass part of a bulb with bare hands.

2. SRS (Supplemental Restraint System)

The RAV4 is equipped with an SRS (Supplemental Restraint System) such as the driver airbag and front passenger airbag, failure to carry out service operation in the correct sequence could cause the SRS to unexpectedly deploy during servicing, possibly leading to a serious accident. Before servicing (including removal or installation of parts, inspection or replacement), be sure to read the precautionary notices in **AIR BAG SAFETY PRECAUTIONS**.

3. Audio System

If the negative (-) terminal cable is disconnected from the battery, the preset AM, FM1 and FM2 stations stored in memory are erased, so be sure to note the stations and reset them after the battery terminal is reconnected.

4. Mobile Communication System

If the vehicle is equipped with a mobile communication system, refer to precautions in **IF VEHICLE IS EQUIPPED WITH MOBILE COMMUNICATION SYSTEM**.

TROUBLESHOOTING

PROBLEM SYMPTOMS

INTERIOR LIGHT SYSTEM

Symptom/Suspected Area	See
Interior Light Does Not Light Up	
Bulb	

Interior Light	INTERIOR LIGHT SYSTEM
Passenger Side J/B ECU	TERMINALS OF ECU
Wire Harness	
Personal Light Does Not Light Up	
Bulb	
Personal Light	Step 1 under INSPECTION
Passenger Side J/B ECU	TERMINALS OF ECU
Wire Harness	
Luggage Compartment Light Does Not Light Up	
Bulb	
Luggage Compartment Light	Step 4 under INSPECTION
Passenger Side J/B ECU	TERMINALS OF ECU
Wire Harness	

INTERIOR LIGHT SYSTEM

LOCATION


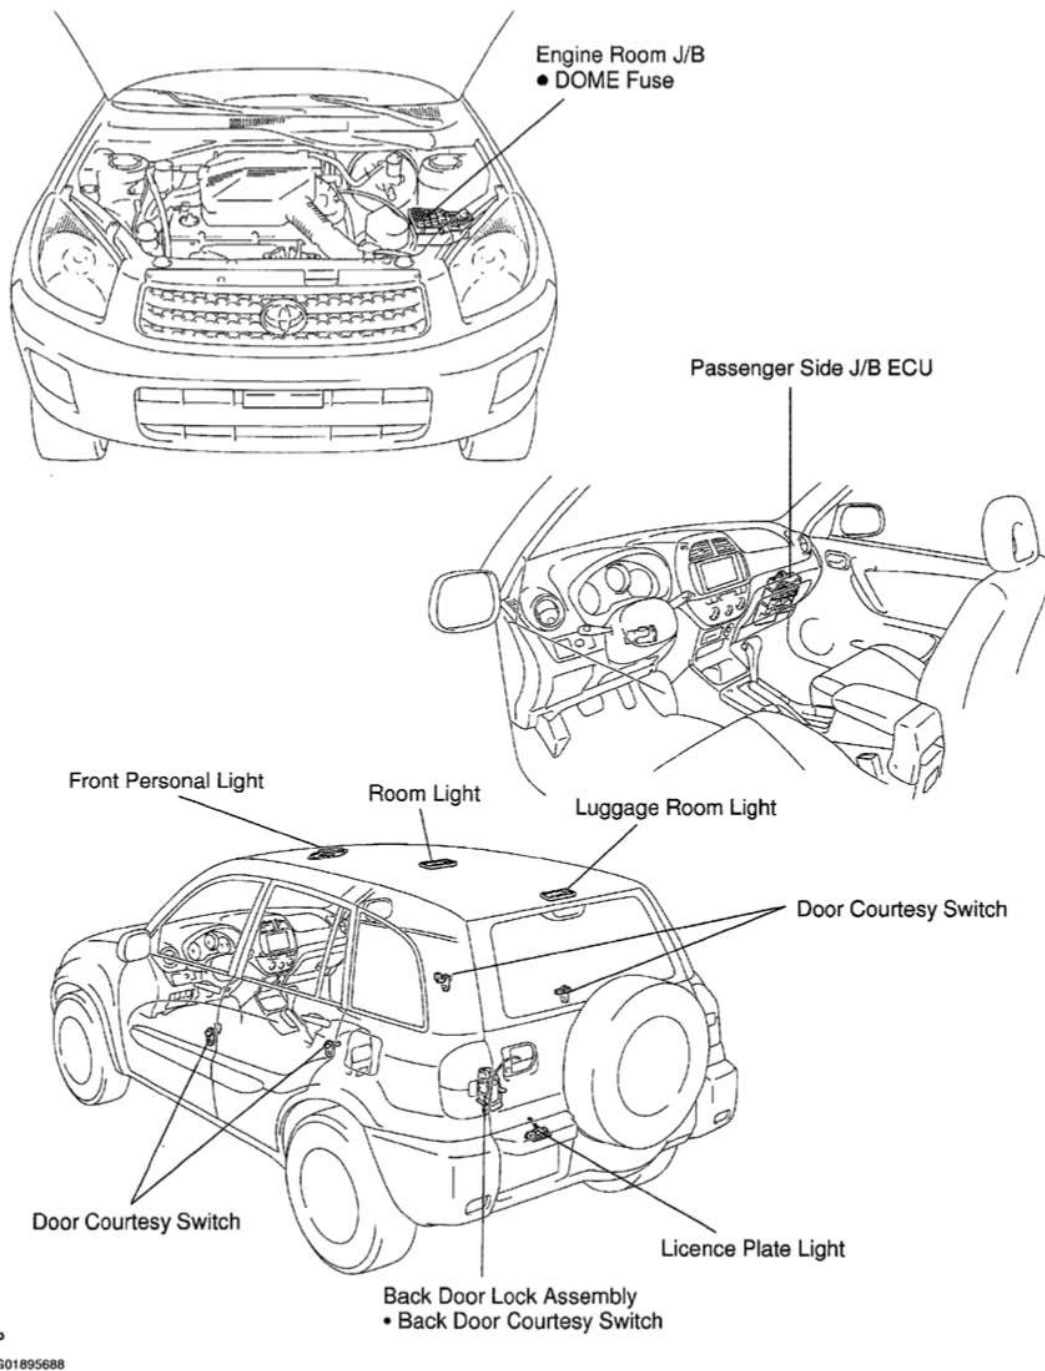


Fig. 1: Identifying Interior Light System Components
 Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.



INSPECTION

1. Inspect front personal light continuity .

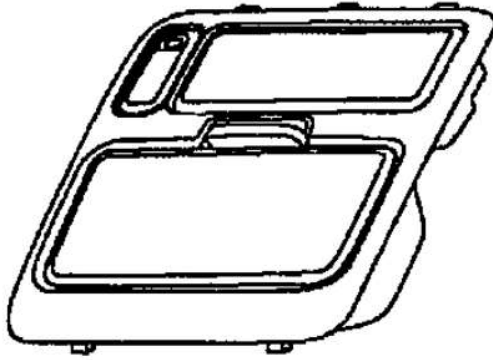w/o Sliding Roof



w/ Sliding Roof

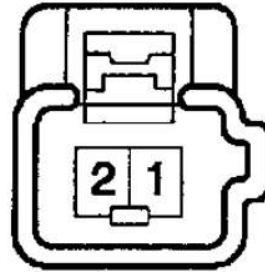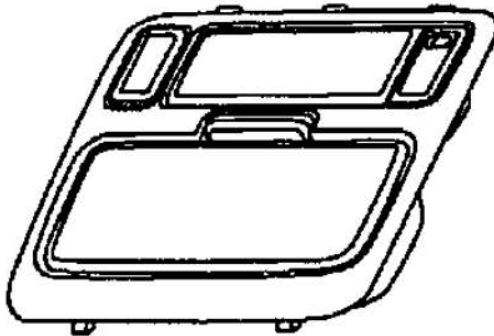

Y

G01895689

Fig. 2: Identifying Front Personal Light & Terminals

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

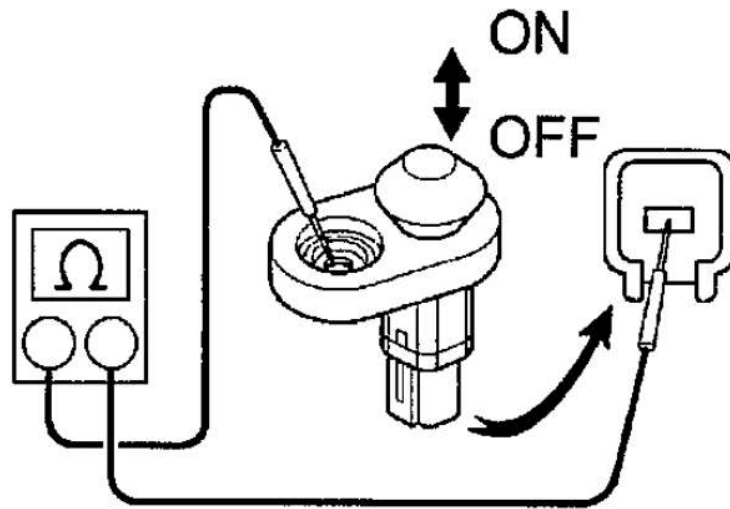
Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.


2. Inspect door courtesy switch continuity .

- a. Check that continuity exists between terminal and the switch body with the switch ON (Switch pin released: opened door).

Rear



Front

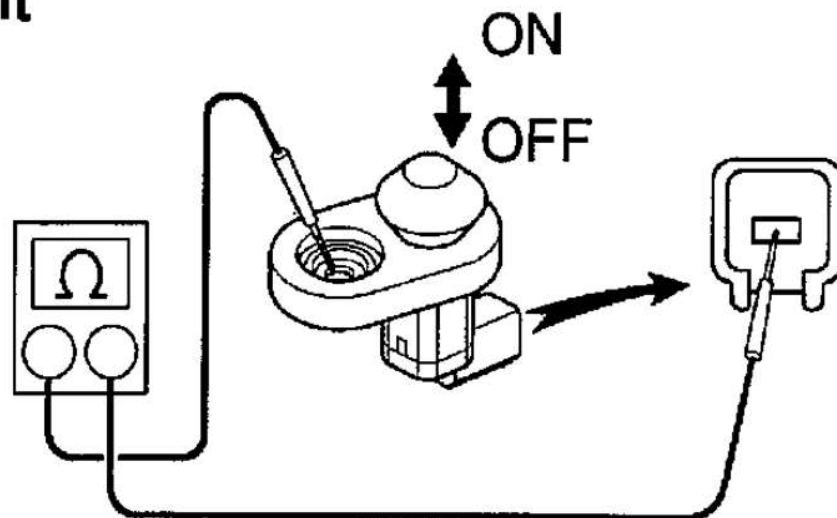

Y


G01895690

Fig. 3: Identifying Front & Rear Courtesy Switch
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

- b. Check that no continuity exists between terminal and the switch body with the switch OFF (Switch pin pushed in: closed door).

If operation is not as specified, replace the switch.

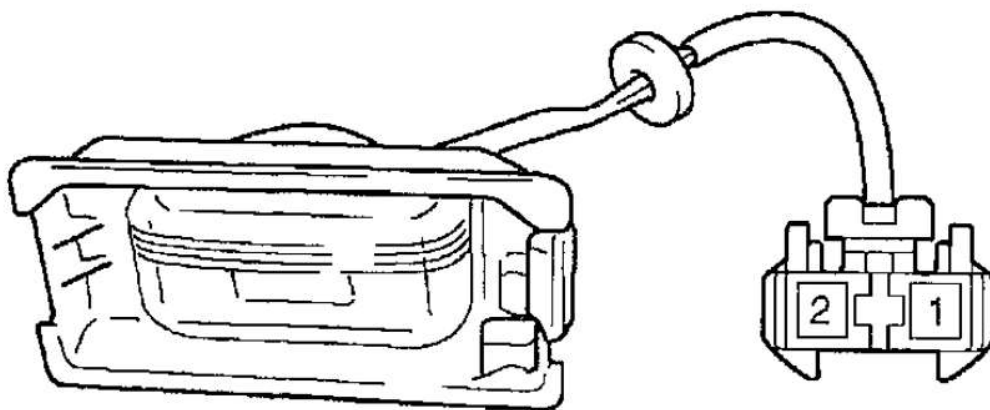3. Inspect licence plate light continuity .



Y

G01895691


Fig. 4: Checking Licence Plate Light
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.

4. Inspect room and luggage light continuity .

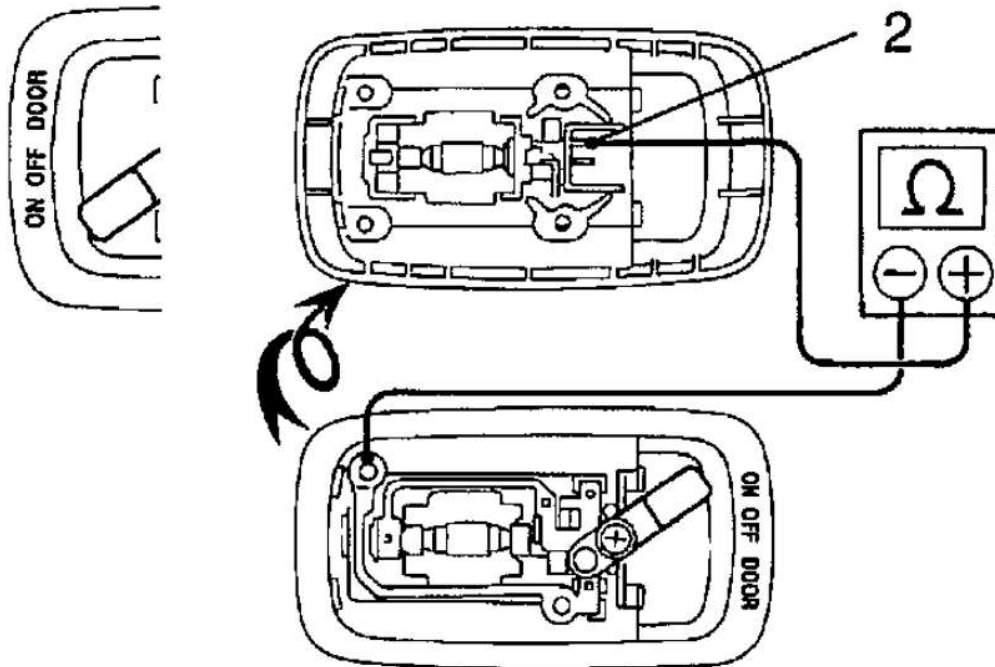
- a. Disconnect the connector from the room light.



G01895692

Fig. 5: Checking Continuity Between Terminal 2 & Body Ground
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

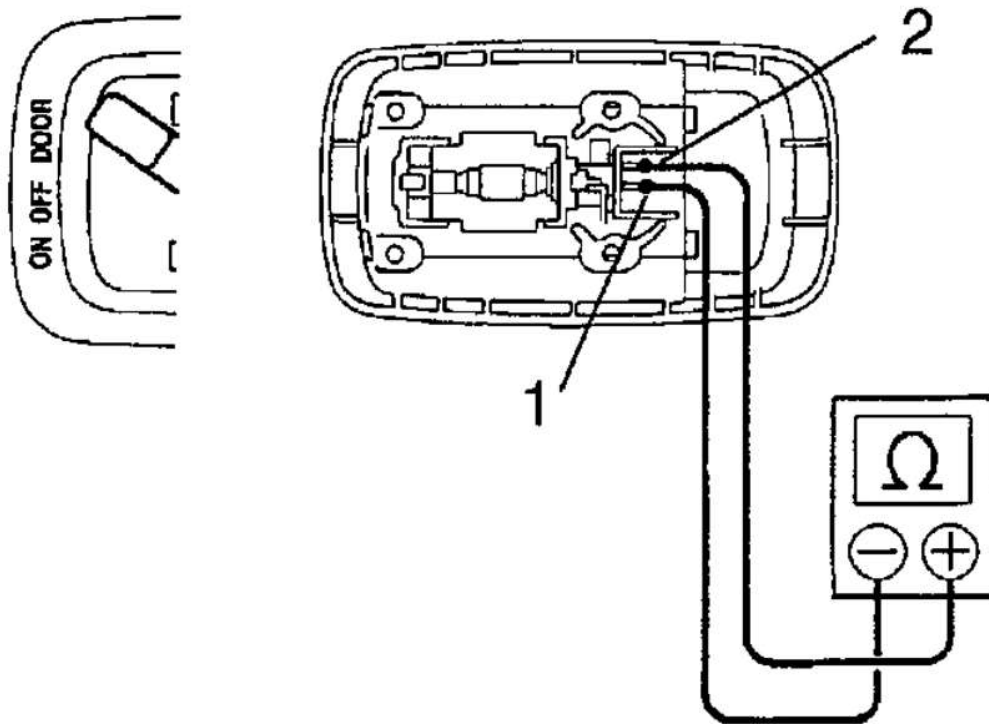- b. Turn the room light switch ON, check that continuity exists between terminal 2 and body ground.
- c. Turn the room light switch to DOOR, check that continuity exists between terminals 1 and 2.



G01895693

Fig. 6: Checking Continuity Between Terminals 1 & 2
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

If continuity is not as specified, replace the light assembly or bulb.