


DTC	C1249/49	OPEN CIRCUIT IN STOP LIGHT SWITCH CIRCUIT
------------	-----------------	--

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1249/49	ECU terminal IG1 voltage is 9.5 to 18.5 V and ABS is in non-operation, the open in circuit stop light switch circuit continues for 10 sec. or more.	- Stop light bulb - Stop light switch circuit

WIRING DIAGRAM

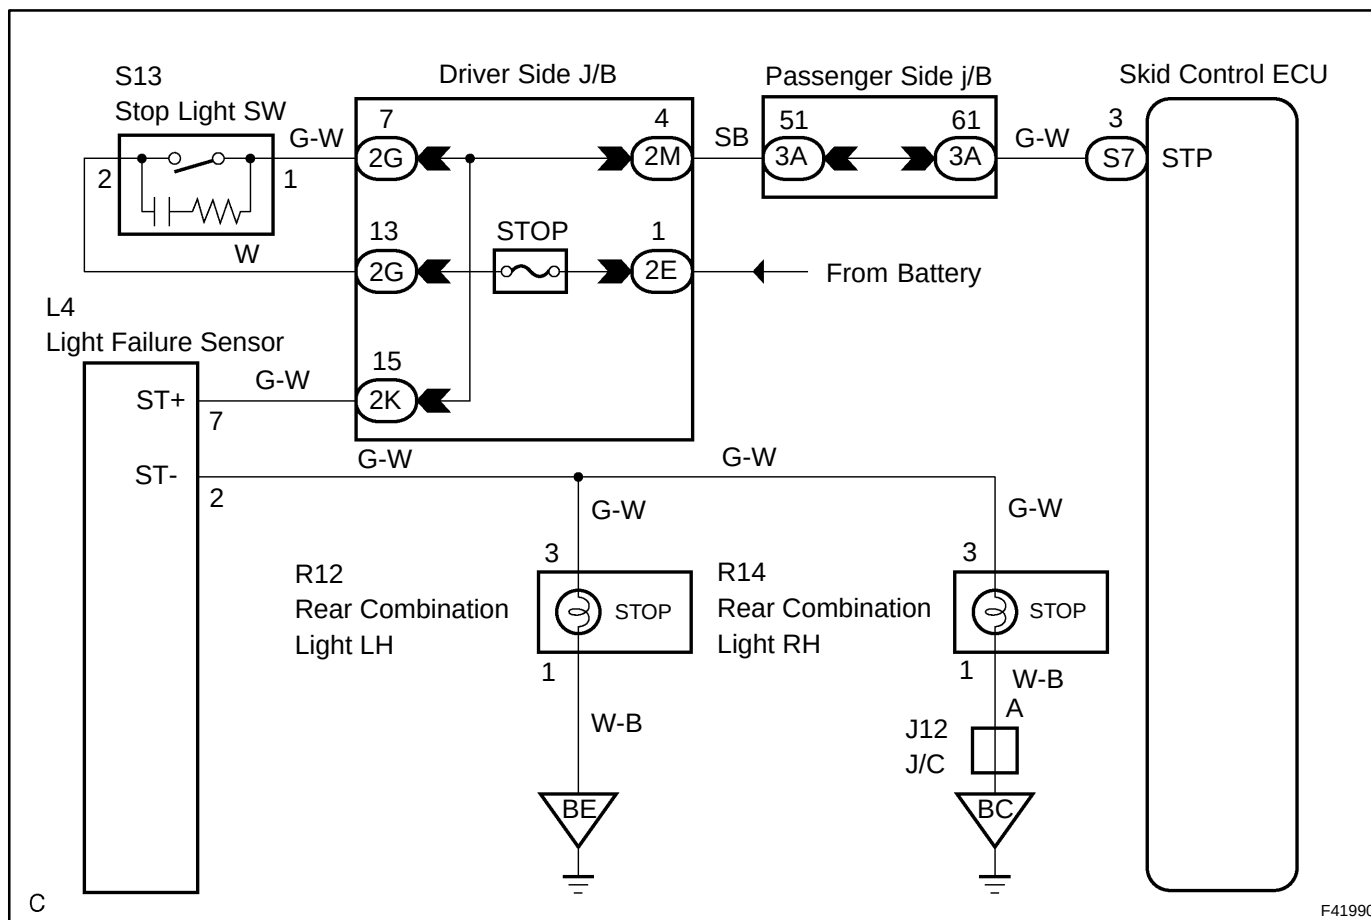

INSPECTION PROCEDURE**1 CHECK STOP LAMP SWITCH OPERATION****CHECK:**

Check that the stop light lights up when brake pedal is depressed and turns off when the brake pedal is released.


OK Go to step 3

NG

2 CHECK STOP LAMP SWITCH CIRCUIT

NG REPAIR OR REPLACE STOP LAMP SWITCH CIRCUIT

OK

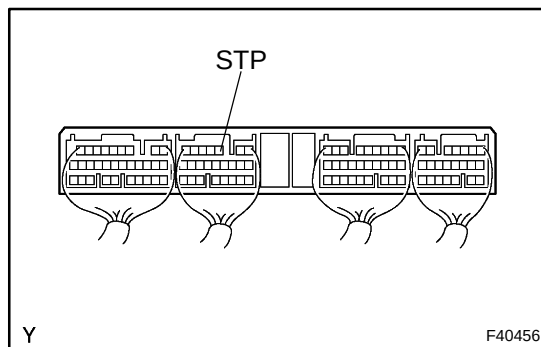3 CHECK SKID CONTROL ECU TERMINAL VOLTAGE(STP TERMINAL)

- (a) Remove the skid control ECU with connectors still connected.
- (b) Measure voltage between terminal STP of skid control ECU and body ground when brake pedal is depressed.
OK: 8 - 14 V
- (c) Measure voltage between terminal STP of skid control ECU and body ground when brake pedal is released.
OK: Below 1.5 V

OK CHECK AND REPLACE SKID CONTROL ECU ASSY

NG

4 CHECK HARNESS AND CONNECTOR(STOP LAMP SWITCH - SKID CONTROL ECU ASSY)(See page 01-31)

NG REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE
(See page 05-308)