

RESTRAINT SYSTEM

SECTION RS

MODIFICATION NOTICE:

- Seat belt adjuster has been changed.
- Spiral cable has been changed.
- Side air bag is available as an optional equipment in specific areas.
- 3-point rear center seat belt has been added.

CONTENTS

PRECAUTIONS	2	
Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	
SEAT BELTS	3	
Front Seat Belt	4	
Rear Seat Belt	5	
SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — For Single Air Bag System	7	
Installation — Spiral Cable	7	
SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — Except for Single Air Bag System	8	
Precautions for SRS "AIR BAG"	8	
Special Service Tools	8	
Description	9	
SRS Component Parts Location	10	
Maintenance Items	10	
Removal and Installation — Diagnosis Sensor Unit and Satellite Sensor	12	
Installation — Air Bag Module and Spiral Cable	14	
Removal — Side air bag module	15	
Installation — Side air bag module	16	
Disposal of Air Bag Module	17	
TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — For Single Air Bag System	20	
Wiring Diagram — SRS —	20	
TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System	21	
Trouble Diagnoses Introduction	21	
How to Perform Trouble Diagnoses for Quick and Accurate Repair	23	
Schematic	25	
Wiring Diagram — SRS —	26	
Self-diagnosis	30	
Trouble Diagnoses for Air Bag Warning Lamp	48	
COLLISION DIAGNOSIS — Except for Single Air Bag System	50	

PRECAUTIONS

Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER (Mechanically activated type)” used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. The SRS composition which is available to NISSAN MODEL N15 is as follows (The composition varies according to the destination and optional equipment.):

- For a frontal collision
The Supplemental Restraint System consists of driver air bag module (located in the center of the steering wheel), front passenger air bag module (located on the instrument panel on passenger side), seat belt pre-tensioners (Mechanically activated type), a diagnosis sensor unit, warning lamp, wiring harness and spiral cable.
- For a side collision
The Supplemental Restraint System consists of front side air bag module (located in the outer side of front seat), satellite sensor, diagnosis sensor unit (one of components of air bags for a frontal collision), wiring harness, warning lamp (one of components of air bags for a frontal collision).

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance should be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. Spiral cable and wiring harnesses covered with yellow insulation either just before the harness connectors or for the complete harness are related to the SRS.

SEAT BELTS

CAUTION:

- For vehicles equipped with seat belt pre-tensioner, refer to “Removal and Installation — Seat Belt Pre-tensioner (Mechanical Type)” when removing seat belt. Refer to “SUPPLEMENTAL RESTRAINT SYSTEM (SRS)” in RS section of Service Manual Pub. No. SM5E-0N15G0 or Pub. No. SM5E-0N15E0.
- Do not disassemble buckle or seat belt assembly.
- Replace anchor bolts if they are deformed or worn out.
- Never oil tongue and buckle.
- If any component of seat belt assembly is questionable, do not repair. Replace the whole seat belt assembly.
- If webbing is cut, frayed, or damaged, replace seat belt assembly.
- When replacing seat belt assembly, use a genuine seat belt assembly.
- After any collision, inspect all seat belt assemblies, including retractors and other attached hard-
wares (i.e., guide rail set).

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

Front Seat Belt



4-DOOR SEDAN AND 5-DOOR HATCHBACK

CAUTION:


Before removing seat belt pre-tensioner assembly, be sure to lock safety lever to make seat belt pre-tensioner inoperative. Do not unlock safety lever before reinstalling seat belt pre-tensioner assembly.

- ① Remove front seat. Refer to "SEAT" in BT section for details.
- ② Remove floor anchor bolt.
- ③ Remove adjuster cover. **A**
- ④ Remove shoulder anchor bolt.
- ⑤ Remove center pillar upper and lower garnishes. Refer to "INTERIOR TRIM" in BT section for details.
- ⑥ Remove second sash guide.
- ⑦ Remove the bolt securing seat belt pre-tensioner retractor, then remove seat belt and seat belt pre-tensioner retractor.
- ⑧ Remove the bolts securing seat belt adjuster, then remove seat belt adjuster.

SEC. 769•868

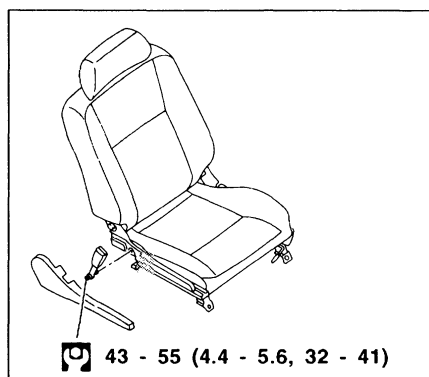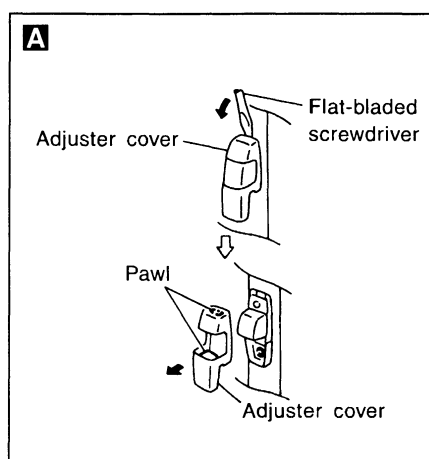

 : N•m (kg-m, ft-lb)

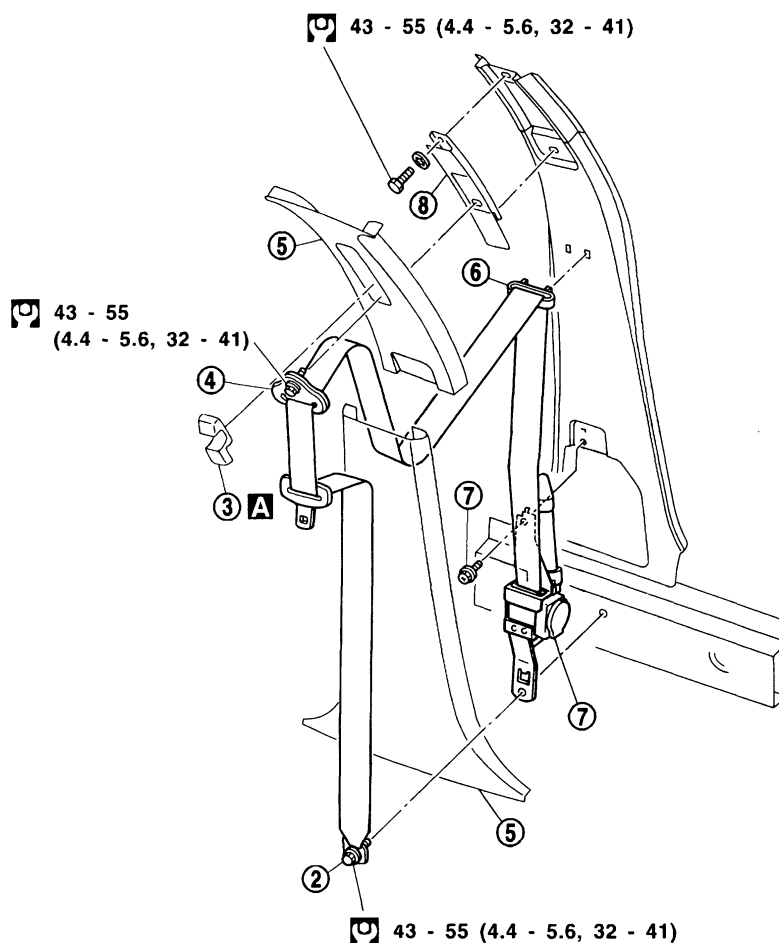


SRS510

SEAT BELTS

Rear Seat Belt

4-DOOR SEDAN (Models with 3-point center seat belt)

- ① Remove rear seat. Refer to "SEAT" in BT section for details.
- ② Remove rear pillar garnish and rear parcel shelf finisher. Refer to "INTERIOR TRIM" in BT section for details.
- ③ Remove trunk room trim. Refer to "INTERIOR TRIM" in BT section for details.
- ④ Remove each anchor bolt.
- ⑤ Remove the bolt securing rear seat belt retractor, then remove seat belt retractor.
- ⑥ Remove rear seat lock protector. **A**
- ⑦ Remove lock knob finisher. **B**
- ⑧ Remove the clips on the rear side of the seat back, turn back the trim, and remove the seat belt retractor anchor bolt.
- ⑨ Pull the seat belt retractor out of the seat back.






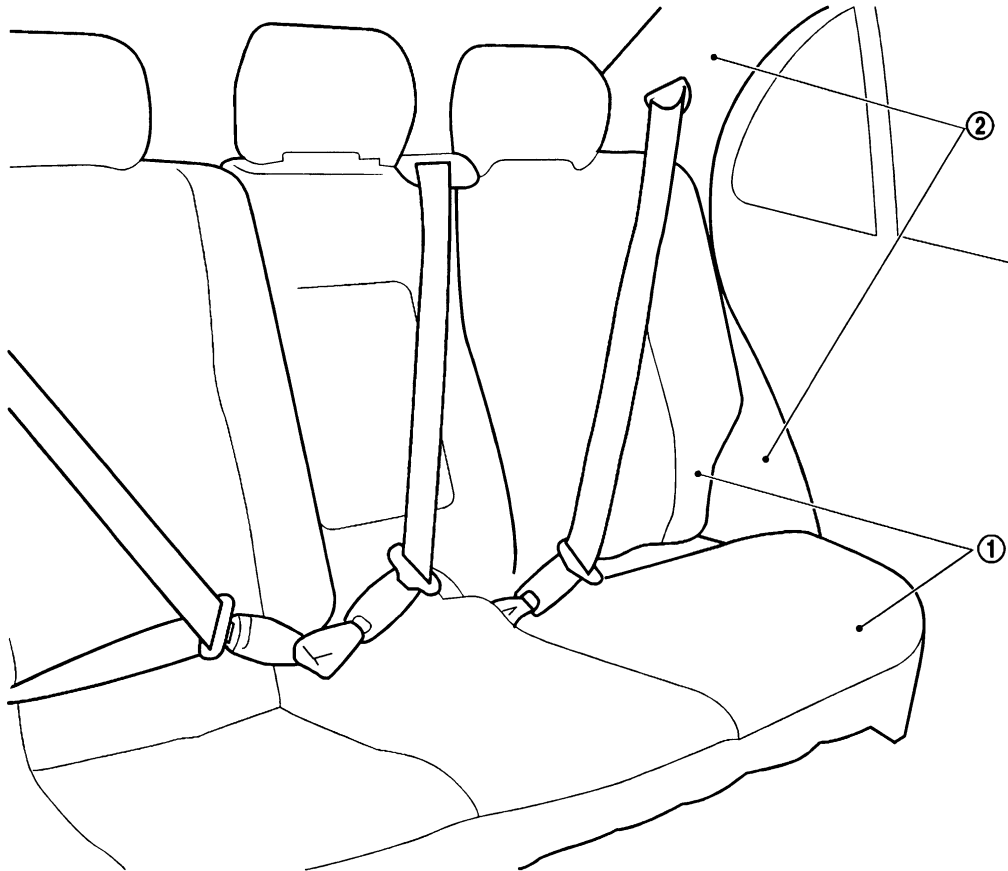


SRS511

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX




SEAT BELTS

Rear Seat Belt (Cont'd)

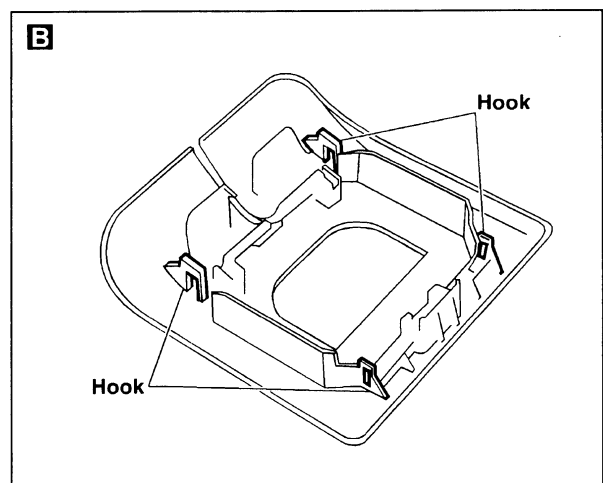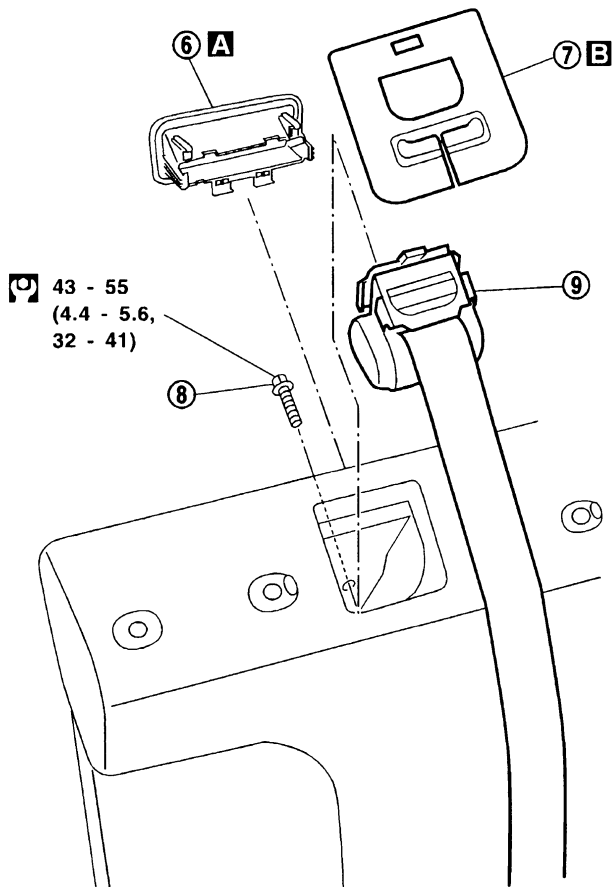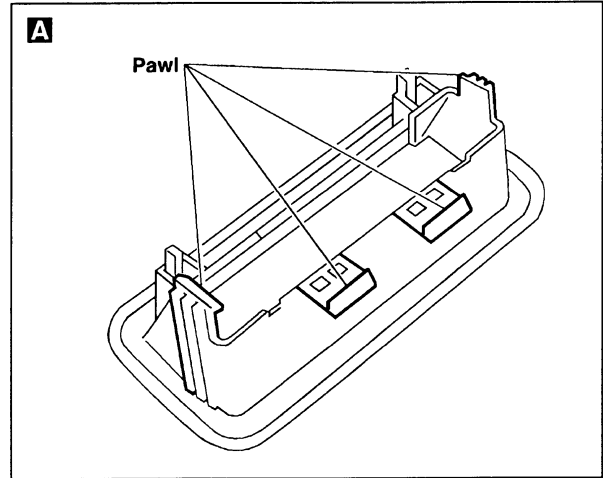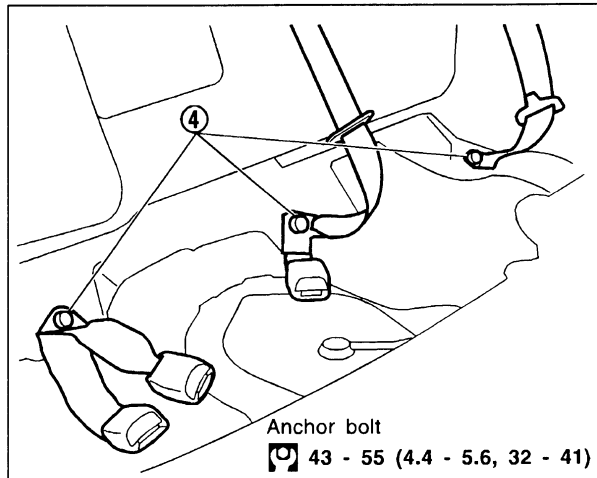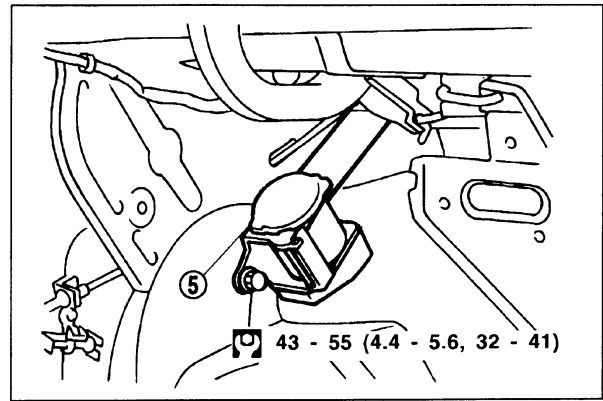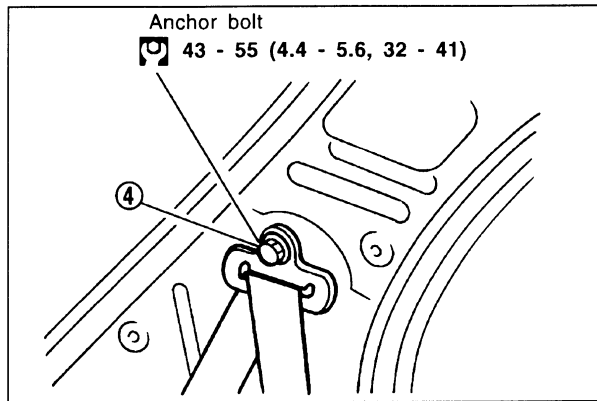

Ⓐ : N·m (kg-m, ft-lb)

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — For Single Air Bag System

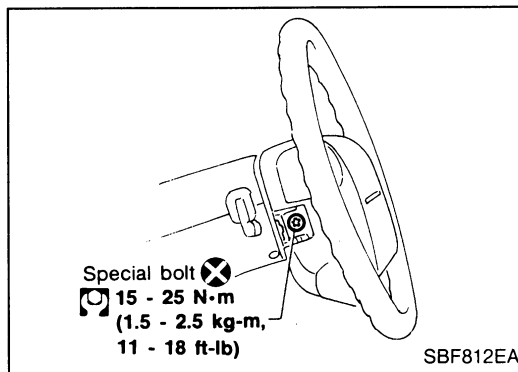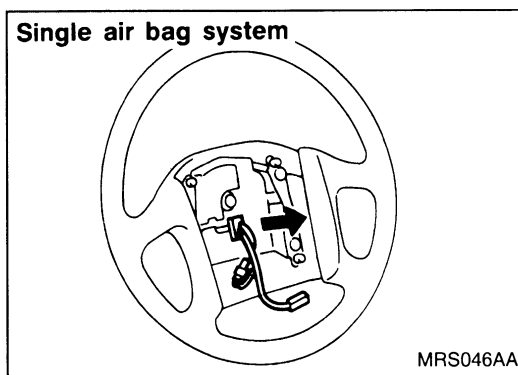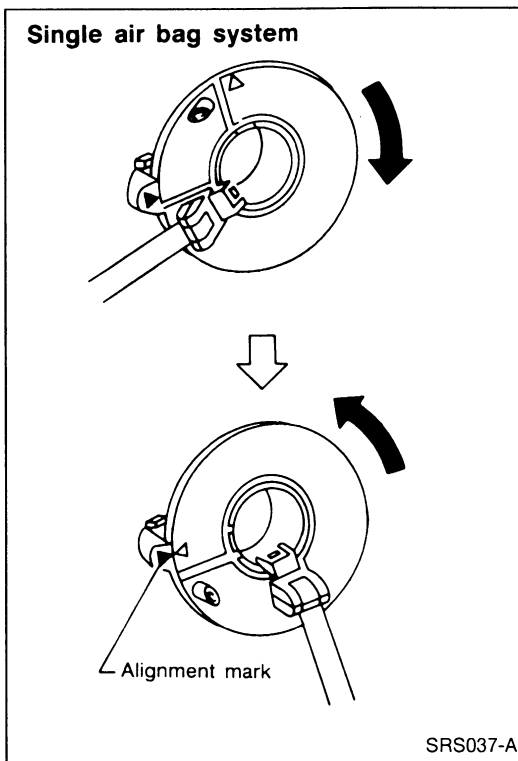

Installation — Spiral Cable

1. Set the front wheels in the straight-ahead position.
2. Make sure that the spiral cable is in the neutral position. The neutral position is detected by turning left about 3.5 revolutions from the right end position. Align the two marks (∇).

CAUTION:

- The spiral cable may snap due to steering operation if the cable is installed in an improper position. Also, with the steering linkage disconnected, the cable may snap by turning the steering wheel beyond the limited number of turns. (The spiral cable can be turned up to 3.5 turns from the neutral position to both the right and left.)
 - Always work from the side of air bag module.
3. Connect spiral cable connector and tighten with screws. Install steering column cover.

4. Install steering wheel setting spiral cable pin guides, and pull spiral cable through.
5. Connect horn connector and engage spiral cable with pawls in steering wheel.
6. Tighten nut.

: 29 - 39 N·m (3.0 - 4.0 kg-m, 22 - 29 ft-lb)






7. Position air bag module and tighten with new special bolts.
8. Connect air bag module connector.
9. Install all lids.
10. Conduct self-diagnosis to ensure entire SRS operates properly. (Use CONSULT or warning lamp check.) Before performing self-diagnosis, connect both battery cables.
11. Turn steering wheel to the left end and then to the right end fully to make sure that spiral cable is set in the neutral position. If air bag warning lamp blinks or stays ON (at the user mode), it shows the spiral cable may be snapped due to its improper position. Perform self-diagnosis again (use CONSULT or warning lamp). If a malfunction is detected, replace the spiral cable with a new one.

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — Except for Single Air Bag System

Precautions for SRS “AIR BAG”

- Do not use a circuit tester to check SRS circuits unless instructed to in this Service Manual.
- Before servicing the SRS, turn ignition switch “OFF”, disconnect both battery cables and wait at least 3 minutes.
For approximately 3 minutes after the cables are removed, it is still possible for the air bag to deploy. Therefore, do not work on any SRS connectors or wires until at least 3 minutes have passed.
- Diagnosis sensor unit must always be installed with their arrow marks “↗” pointing towards the front of the vehicle for proper operation. Also check diagnosis sensor unit for cracks, deformities or rust before installation and replace as required.
- The spiral cable must be aligned with the neutral position since its rotations are limited. Do not attempt to turn steering wheel or column after removal of steering gear.
- Handle air bag module carefully. Always place it with the pad side facing upward.
- Conduct self-diagnosis to check entire SRS for proper function after replacing any components.
- After passenger air bag inflates, the front instrument panel assembly should be replaced if damaged.

Special Service Tools

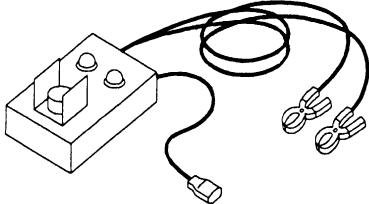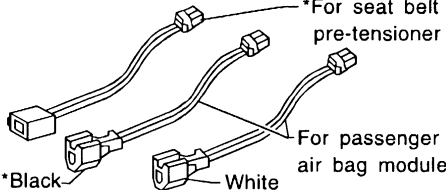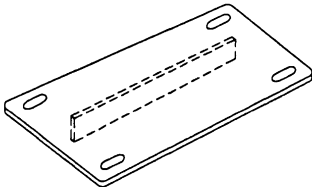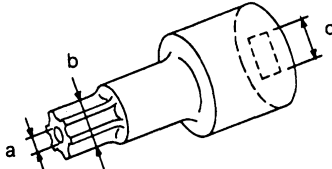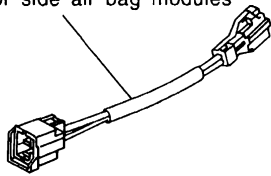
Tool number Tool name	Description
KV99106400 Deployment tool	 Disposing of air bag module NT357
KV991065S0 Deployment tool adapters	 *For seat belt pre-tensioner *Black White For passenger air bag module NT743 * Deployment tool adapters for seat belt pre-tensioner and for passenger air bag module with black connector are not necessary for servicing N15.
KV99105300 Air bag module bracket	 Anchoring air bag module NT354
HT61961000 and HT62152000 combined *Special torx bit	 Use for special bolts [TAMPER RESISTANT TORX (Size T50)] a: 3.5 (0.138) dia. b: 8.5 - 8.6 (0.335 - 0.339) dia. c: approx. 10 (0.39) sq. Unit: mm (in) NT361
KV99108300 Deployment tool adapters for side air bags	 For side air bag modules NT744

*: Special tool or commercial equivalent

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — Except for Single Air Bag System

Description

The air bag deploys if the diagnosis sensor unit activates while the ignition switch is in “ON” or “START” position.

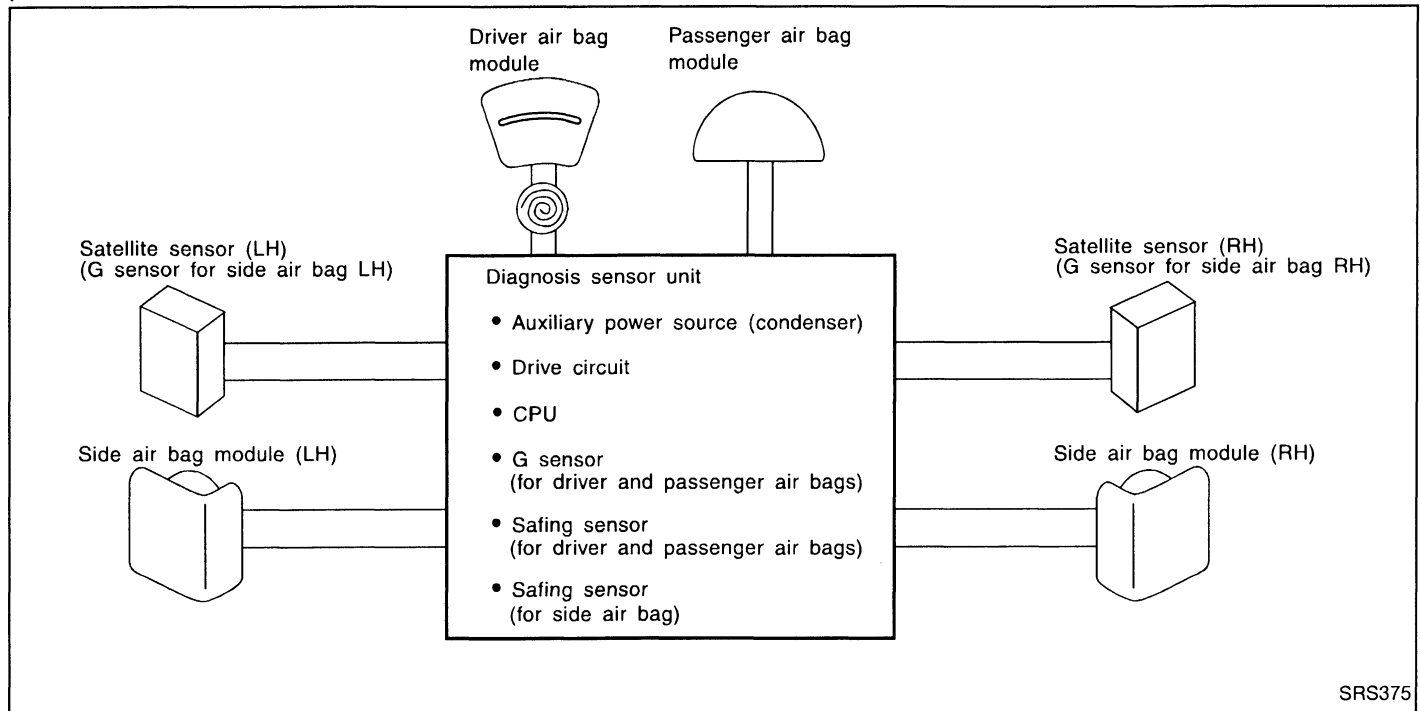

The collision modes for which SRS air bags are activated are different among the SRS air bags. For example, the driver air bag module and passenger air bag module are activated in a frontal collision but not in a side collision.


SRS air bags configurations which are activated for some collision modes are as follows;

SRS configuration	Frontal collision	Left side collision	Right side collision
Driver air bag module	○	—	—
Passenger air bag module	○	—	—
Side air bag module (LH)	—	○	—
Side air bag module (RH)	—	—	○

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — Except for Single Air Bag System

SRS Component Parts Location

SRS configurations vary with vehicle depending on the optional equipment.

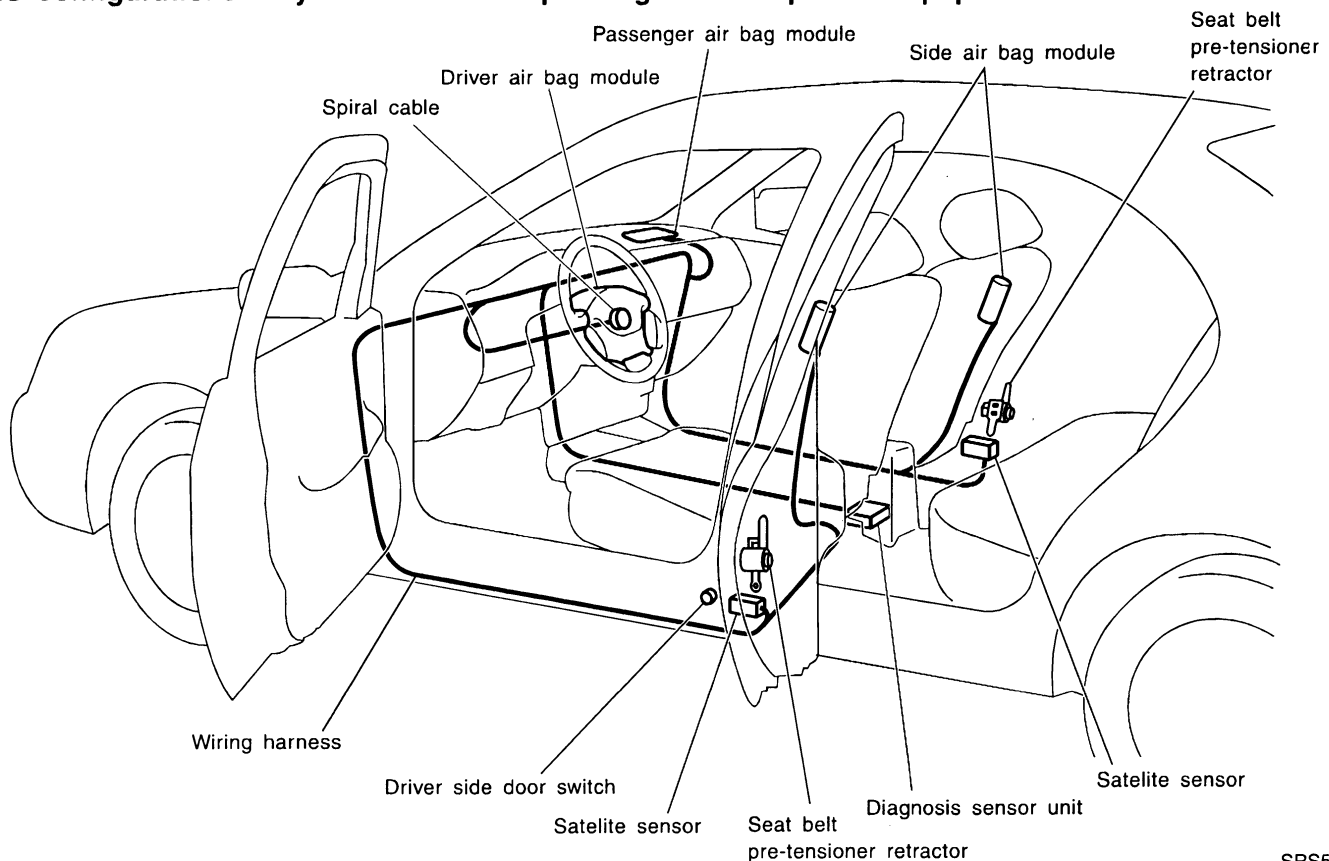

SRS513

**AIR
BAG**

SRS296

Maintenance Items

CAUTION:

Do not use a circuit tester to check SRS circuit.

1. Check operation of "AIR BAG" warning lamp.
After turning ignition key to "ON" position, "AIR BAG" warning lamp illuminates. The "AIR BAG" warning lamp will go off after about 7 seconds if no malfunction is detected.
If any of the following warning lamp conditions occur, immediately check the air bag system. Refer to RS-30 for details.
 - The "AIR BAG" warning lamp does not illuminate when the ignition switch is turned "ON".
 - The "AIR BAG" warning lamp does not go off about 7 seconds after the ignition switch is turned "ON".
 - The "AIR BAG" warning lamp blinks after about 7 seconds after the ignition switch is turned "ON".
2. Visually check SRS components.
 - (1) Diagnosis sensor unit
 - Check diagnosis sensor unit and bracket for dents, cracks or deformities.
 - Check connectors for damage and terminals for deformities.

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — Except for Single Air Bag System

Maintenance Items (Cont'd)

(2) Air bag module and steering wheel

- Remove air bag module from steering wheel, instrument panel or seatback. Check harness cover and connectors for damage, terminals for deformities, and harness for binding.
- Install driver air bag module to steering wheel to check fit or alignment with the wheel.
- Check steering wheel for excessive free play.
- Install passenger air bag module to instrument panel to check fit or alignment with the instrument panel.
- Install side air bag module to seatback to check fit and alignment with the seat.

GI

MA

EM

LC

(3) Spiral cable

- Check spiral cable for dents, cracks, or deformities.
- Check connectors and protective tape for damage.
- Check steering wheel for noise, binding or heavy operation.

EC

(4) Main harness, air bag harness, body harness

- Check connectors for poor connections, damage, and terminals for deformities.
- Check harnesses for binding, chafing or cuts.

FE

CL

(5) Satellite sensor

- Check satellite sensor (including bracket portion) for dents, cracks or deformities.
- Check connectors for damage, and terminals for deformities.

MT

AT

CAUTION:

Replace previously used special bolts, ground bolt and nuts coated with bonding agent and also the anchor bolt with new ones.

FA

RA

BR

ST

RS

BT

HA

EL


IDX

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — Except for Single Air Bag System

Removal and Installation — Diagnosis Sensor Unit and Satellite Sensor

CAUTION:

- Before servicing SRS, turn the ignition switch off, disconnect both battery cables and wait at least 3 minutes.
- Do not use old bolts and nuts coated with bonding agent after removal; replace with new ones.
- Check diagnosis sensor unit and satellite sensor for proper installation.
- Check diagnosis sensor unit and satellite sensor to ensure they are free of deformities, dents, cracks or rust. If they show any visible signs of damage, replace them with new ones.
- Check diagnosis sensor unit brackets to ensure they are free of deformities or rust.
- After replacement of diagnosis sensor unit and satellite sensor, check SRS function and perform self-diagnosis for SRS. Refer to “Self-diagnosis” for details. (RS-30)
- Do not attempt to disassemble diagnosis sensor unit and satellite sensor.
- Replace diagnosis sensor unit and satellite sensor if it has been dropped or sustained an impact.

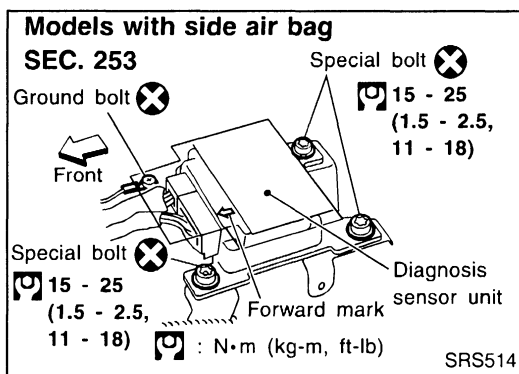

REMOVAL OF DIAGNOSIS SENSOR UNIT

1. Disconnect driver, passenger and side air bag module connectors.
2. Remove console box. Refer to “INSTRUMENT PANEL” in BT section.
3. Disconnect diagnosis sensor unit connector.
4. Remove ground bolt and also remove special bolts using the TAMPER RESISTANT TORX (Size T50), from diagnosis sensor unit.
Then remove the diagnosis sensor unit.

NOTE:


- To install, reverse the removal procedure sequence.

CAUTION:

- Do not use old special bolts and ground bolt coated with bonding agent; replace with new coated special bolts and ground bolt.

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — Except for Single Air Bag System

Removal and Installation — Diagnosis Sensor Unit and Satellite Sensor (Cont'd)

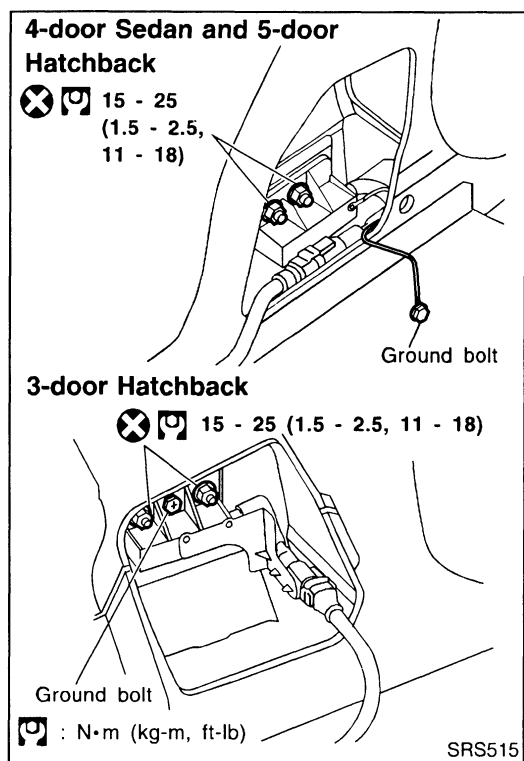

REMOVAL OF SATELLITE SENSOR

1. Remove seat belt retractor. Refer to "Front Seat Belt" for details. (RS-4)
2. Disconnect satellite sensor connector.
3. Remove bolt and nuts from satellite sensor unit. Then remove the satellite sensor.

NOTE:

- To install, reverse the removal procedure sequence.

CAUTION:

- Do not use old nuts coated with bonding agent after removal; replace with new coated nuts.

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT


HA

EL

IDX


SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — Except for Single Air Bag System

Except for single air bag system

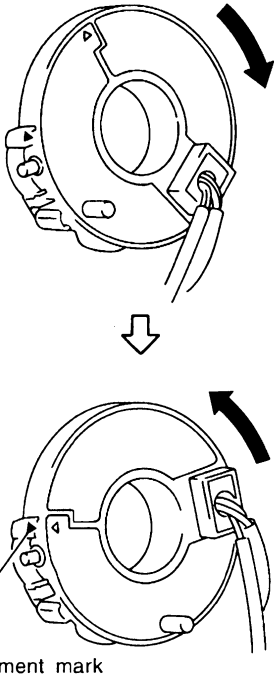


MRS074AB

Except for single air bag system

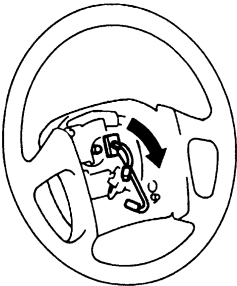

MRS075AB

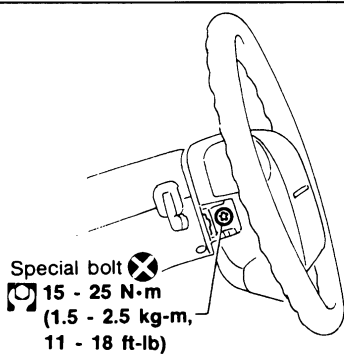

SBF812EA

Installation — Air Bag Module and Spiral Cable

1. Set the front wheels in the straight-ahead position.
2. Make sure that the spiral cable is in the neutral position.
The neutral position is detected by turning left about 3.5 revolutions from the right end position. Align the two marks (X).

CAUTION:


- The spiral cable may snap due to steering operation if the cable is installed in an improper position.
Also, with the steering linkage disconnected, the cable may snap by turning the steering wheel beyond the limited number of turns. (The spiral cable can be turned up to 3.5 turns from the neutral position to both the right and left.)
 - Always work from the side of air bag module.
3. Connect spiral cable connector and tighten with screws. Install steering column cover.

4. Install steering wheel setting spiral cable pin guides, and pull spiral cable through.
5. Connect horn connector and engage spiral cable with pawls in steering wheel.
6. Tighten nut.

: 29 - 39 N·m (3.0 - 4.0 kg-m, 22 - 29 ft-lb)

7. Position air bag module and tighten with new special bolts.
8. Connect air bag module connector.
9. Install all lids.
10. Conduct self-diagnosis to ensure entire SRS operates properly. (Use CONSULT or warning lamp check.)
Before performing self-diagnosis, connect both battery cables.
11. Turn steering wheel to the left end and then to the right end fully to make sure that spiral cable is set in the neutral position.
If air bag warning lamp blinks or stays ON (at the user mode), it shows the spiral cable may be snapped due to its improper position. Perform self-diagnosis again (use CONSULT or warning lamp). If a malfunction is detected, replace the spiral cable with a new one.




SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — Except for Single Air Bag System

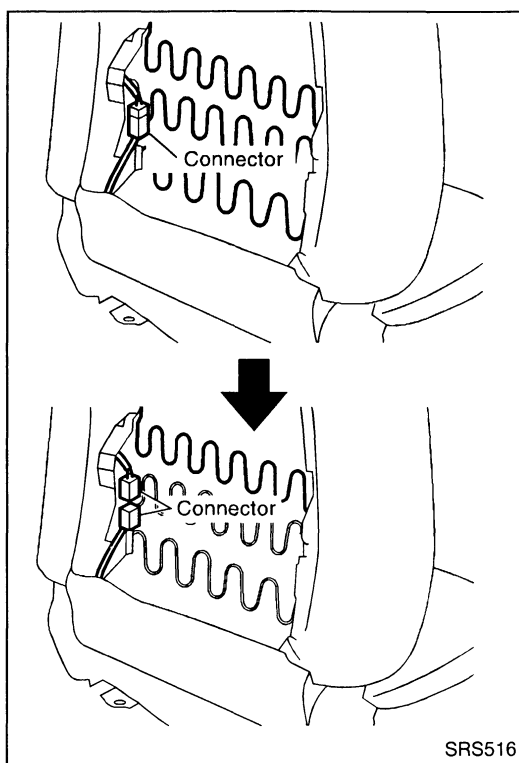

Removal — Side air bag module

CAUTION:

- Before servicing SRS, turn the ignition switch OFF, disconnect both battery cables and wait at least 3 minutes.
 - Always work from the rear of the air bag module.
1. Remove seat back board.
 - When using a clip removal tool to remove the seat back board, take care not to damage the air bag harness.
 2. Disconnect side air bag module connector.

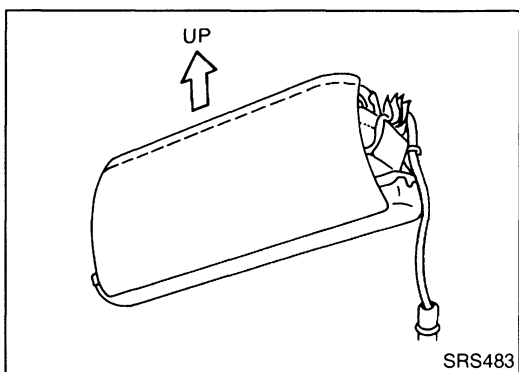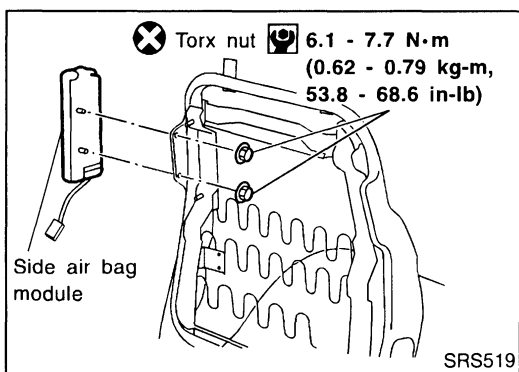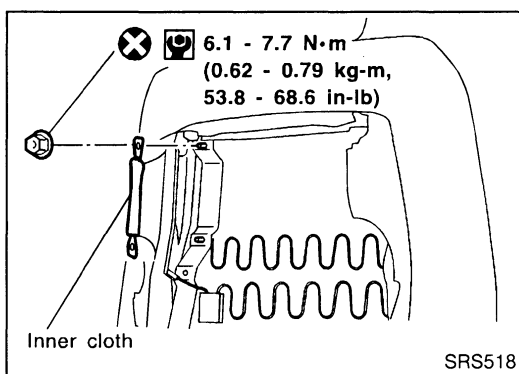

3. Pull up the seat back trim.
4. Remove the nuts securing the inner cloth with seat back frame. Then pull up the inner cloth.
5. Remove the seat back trim. Refer to "Front Seat" in BT section.
6. Remove the torx nuts coated with bonding agent from the side air bag module.
7. Remove side air bag connector. Side air bag module can then be removed.

CAUTION:

- Always place the air bag module with the stud bolt side facing down.
- Do not attempt to disassemble air bag module.
- The torx nuts are coated with bonding agent. Do not use old nuts after removal; replace with new coated nuts.
- Do not insert any foreign objects (screwdriver, etc.) into air bag module connector.

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT


HA

EL

IDX


SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — Except for Single Air Bag System

Removal — Side air bag module (Cont'd)

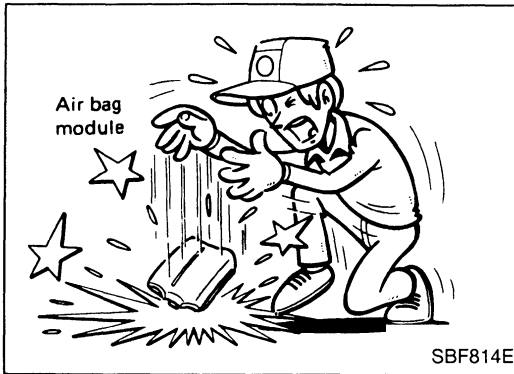


- Replace air bag module if it has been dropped or sustained an impact.
- Do not expose the air bag module to temperatures exceeding 90°C (194°F).
- Do not allow oil, grease or water to come in contact with the air bag module.
- After air bag inflates, all parts of front seat back (including front seat back frame) should be replaced.


Installation — Side air bag module

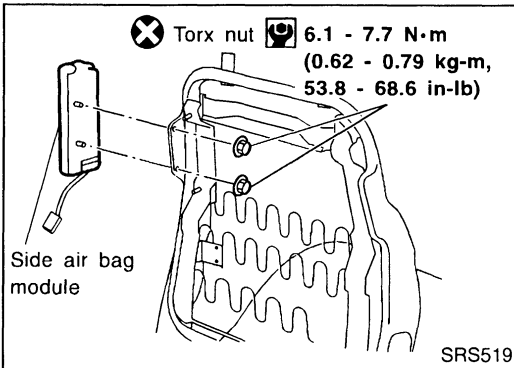

1. Install side air bag module on seat back frame with new torx nuts coated with bonding agent.
2. Install side air bag connector.

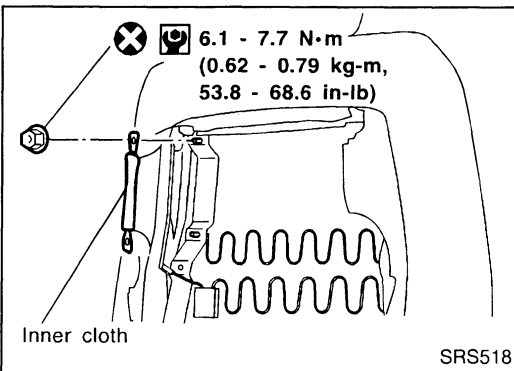

3. Install the seat back trim. Refer to "Front Seat" in BT section.
4. Secure the inner cloth which covers the side air bag module with nuts.

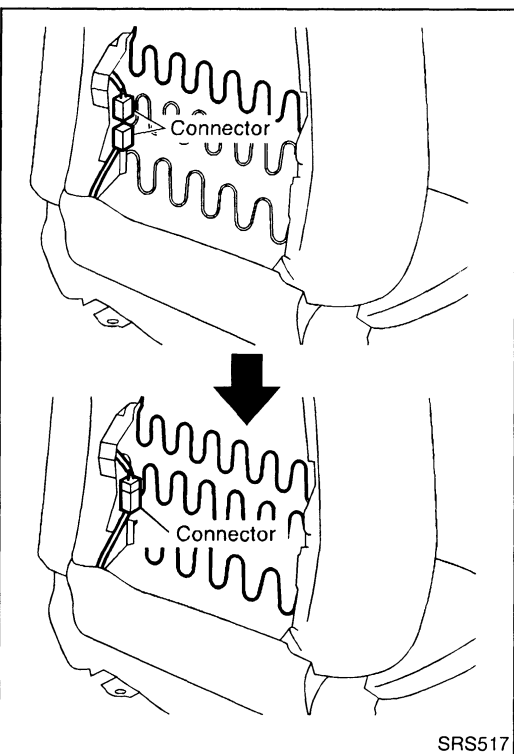


5. Connect side air bag module connector.
6. Install seat back board with new clips.
7. Connect both battery cables.
8. Go to "Self-diagnosis", RS-30 and perform self-diagnosis to ensure entire SRS operates properly. (Use CONSULT or air bag warning lamp.)

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — Except for Single Air Bag System

Disposal of Air Bag Module

- Before disposing of air bag module, or vehicles equipped with such systems, deploy the systems. If such systems have already been deployed due to an accident, dispose of them as indicated in “DISPOSING OF AIR BAG MODULE” (RS-19).
- When deploying the air bag module, always use the Special Service Tool; Deployment tool KV99106400.
- When deploying the air bag module, stand at least 5 m (16 ft) away from the deployment component.
- When deploying air bag module, a fairly loud noise is made, followed by smoke being released. The smoke is not poisonous, however, be careful not to inhale smoke since it irritates the throat and can cause choking.
- Always activate one air bag module at a time.
- Due to heat, leave air bag module unattended for more than 30 minutes after deployment.
- Be sure to wear gloves when handling a deployed air bag module.
- Never apply water to the deployed air bag module.
- Wash your hands clean after finishing work.
- Place the vehicle outdoors with an open space of at least 6 m (20 ft) on all sides when deploying air bag module while mounted in vehicle.
- Use a voltmeter to make sure the vehicle battery is fully charged.
- Do not dispose of the air bag module un-deployed.

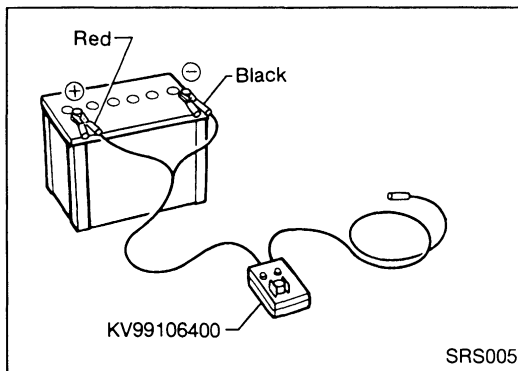

CHECKING DEPLOYMENT TOOL

Connecting to battery

CAUTION:

The battery must show voltage of 9.6V or more.

Remove the battery from the vehicle and place it on dry wood blocks approximately 5 m (16 ft) away from the vehicle.

- Wait 3 minutes after the vehicle battery is disconnected before proceeding.
- Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.

Make sure the polarity is correct. The right side lamp in the tool, marked “deployment tool power”, should glow with a green light. If the right side lamp glows red, reverse the connections to the battery.

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — Except for Single Air Bag System

Disposal of Air Bag Module (Cont'd)



Deployment tool check

Press the deployment tool switch to the "ON" position. The left side lamp in the tool, marked "air bag connector voltage" should illuminate. If it does not illuminate, replace the tool.

Air bag deployment tool lamp illumination chart (Battery connected)


Switch operation	Left side lamp, green* "AIR BAG CONNECTOR VOLTAGE"	Right side lamp, green* "DEPLOYMENT TOOL POWER"
OFF	OFF	ON
ON	ON	ON

*: If this lamp glows red, the tool is connected to the battery incorrectly. Reverse the connections and make sure the lamp glows green.

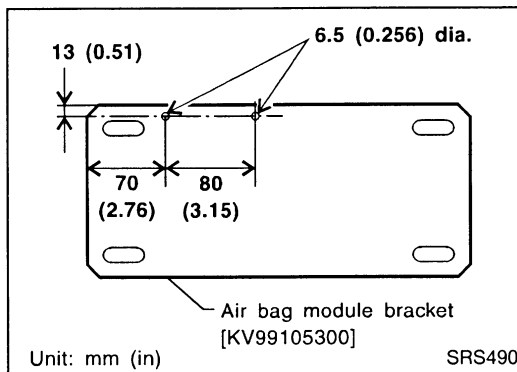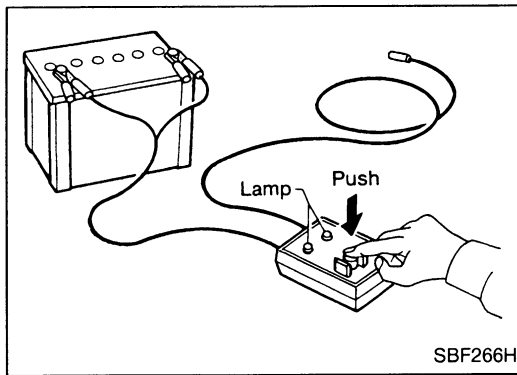

Deployment of side air bag module (outside of vehicle)


1. Make 6.5 mm (0.256 in) diameter holes in air bag module bracket [SST: KV99105300] at the position shown in figure at left.

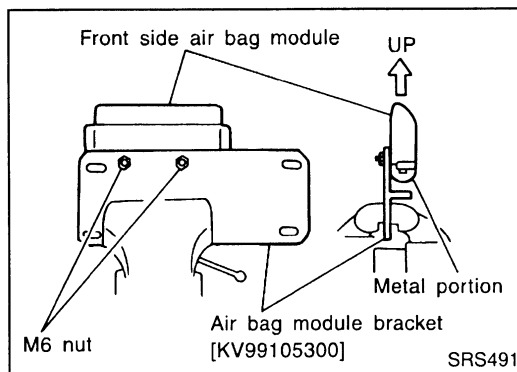

2. Firmly secure air bag module bracket [SST: KV99105300] in a vise.
3. Insert the stud bolts of side air bag module into the two holes in air bag module bracket (held in vise) and fix them with two M6 nuts.

CAUTION:


Side air bag module should be secured to air bag module bracket [SST: KV99105300] in a vise with metal portion facing down.

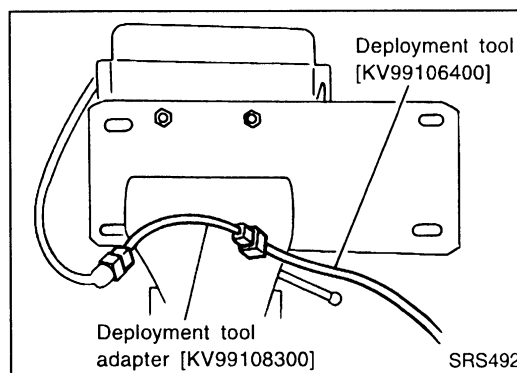

4. Connect deployment tool adapter [SST: KV99108300] to deployment tool [SST: KV99106400] connector and connector on air bag module.

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) — Except for Single Air Bag System


Disposal of Air Bag Module (Cont'd)

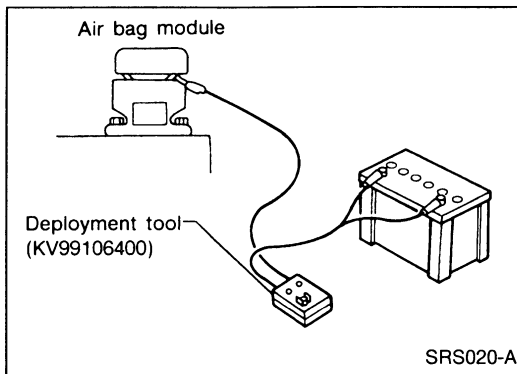

5. Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.
6. The lamp on the right side of the tool, marked “deployment tool power”, should glow green, not red.
7. Press the button on the deployment tool. The left side lamp on the tool, marked “air bag connector voltage”, will illuminate and the air bag module will deploy.

CAUTION:

When deploying the air bag module, stand at least 5 m (16 ft) away from the air bag module.

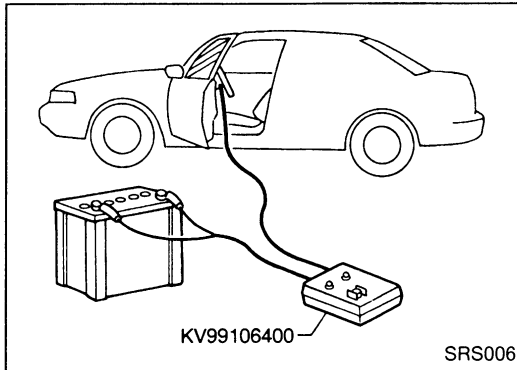

DEPLOYMENT OF AIR BAG MODULE WHILE MOUNTED IN VEHICLE

When disposing of a vehicle, deploy air bag modules while they are mounted in vehicle.


CAUTION:

When deploying air bag module ensure vehicle is empty.

1. Disconnect both vehicle battery cables and wait 3 minutes.
2. Disconnect air bag modules connector.
3. Connect deployment tool [SST: KV99106400] to air bag module.
For front passenger air bag module, attach deployment tool adapter [SST: KV991065S0] to the tool connector.
4. Connect red clip of deployment tool to battery positive terminal and black clip to negative terminal.
5. The lamp on the right side of the tool, marked “deployment tool power”, should glow green, not red.
6. Press the button on the deployment tool. The left side lamp on the tool, marked “air bag connector voltage”, will illuminate and the air bag module will deploy.

CAUTION:

Activate only one air bag module at a time.

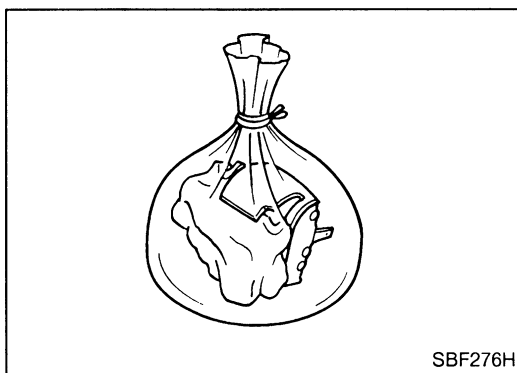

DISPOSING OF AIR BAG MODULE

Deployed air bag modules are very hot. Before disposing of air bag module, wait at least 30 minutes respectively. Seal them in a plastic bag before disposal.

CAUTION:



- Never apply water to a deployed air bag module.
- Be sure to wear gloves when handling a deployed air bag module.
- No poisonous gas is produced upon air bag module deployment. However, be careful not to inhale gas since it irritates throat and can cause choking.
- Do not attempt to disassemble air bag module.
- Air bag module cannot be reused.
- Wash your hands clean after finishing work.

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — For Single Air Bag System

Wiring Diagram — SRS —

SINGLE AIR BAG SYSTEM

RS-SRS-01

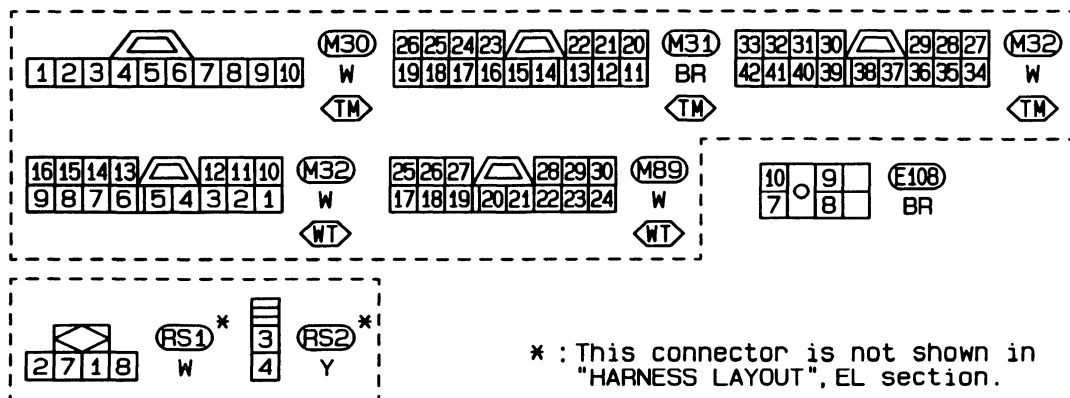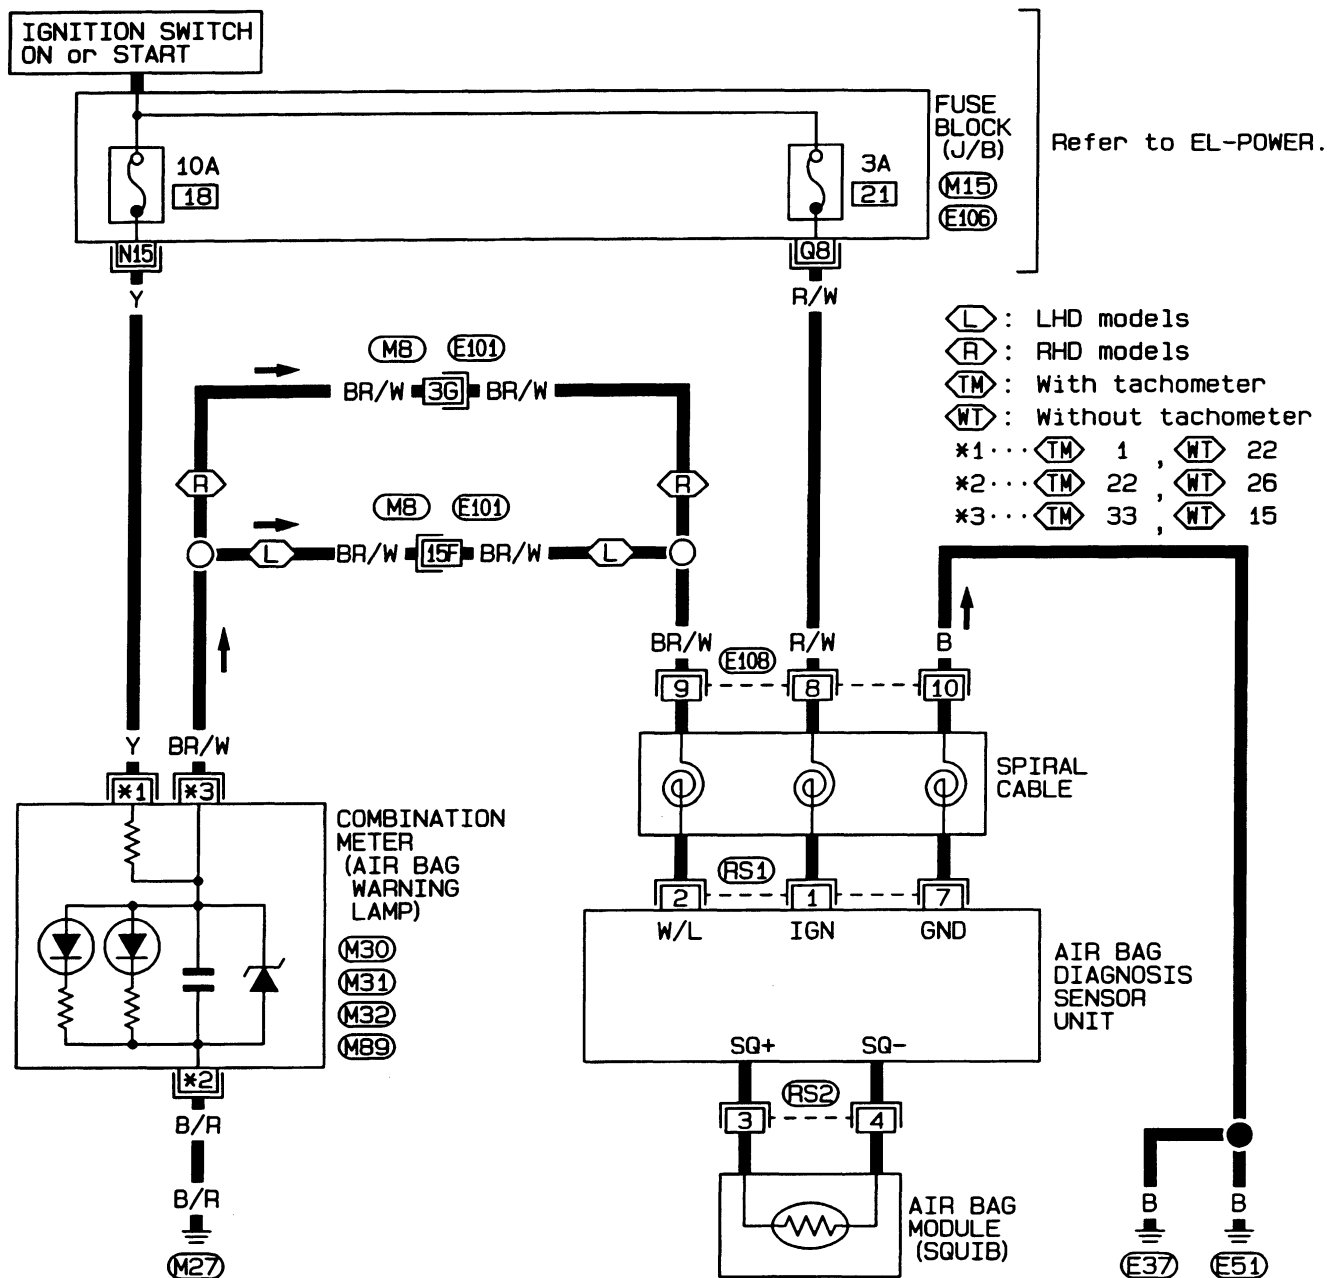

Trouble Diagnoses Introduction

CAUTION:

- Do not use a circuit tester to check SRS harness connectors unless instructed to in this Service Manual. SRS wiring harnesses can be identified with yellow harness protector or yellow insulation tape before the harness connectors.
- Do not attempt to repair, splice or modify the SRS wiring harness. If the harness is damaged, replace it with a new one.
- Keep ground portion clean.

DIAGNOSIS FUNCTION

The SRS self-diagnosis results can be read by using “AIR BAG” warning lamp and/or CONSULT. The reading of these results is accomplished using one of two modes — “User mode” and “Diagnosis mode”.

The User mode is exclusively prepared for the customer (driver). This mode warns the driver of a system malfunction through the operation of the “AIR BAG” warning lamp.


The Diagnosis mode allows the technician to locate and inspect the malfunctioning part.

The mode applications for the “AIR BAG” warning lamp and CONSULT are as follows:

	User mode	Diagnosis mode	Display type
“AIR BAG” warning lamp	X	X	ON-OFF operation
CONSULT	—	X	Monitoring

DIAGNOSIS MODE FOR CONSULT

- “SELF-DIAG [CURRENT]”
A current Self-diagnosis result (also indicated by the warning lamp flashes in the Diagnosis mode) is displayed on the CONSULT screen in real time. This refers to a malfunctioning part requiring repairs.
- “SELF-DIAG [PAST]”
Diagnosis results previously stored in the memory (also indicated by the warning lamp flashes in the Diagnosis mode) are displayed on the CONSULT screen. The stored results are not erased until memory erasing is executed.
- “TROUBLE DIAG RECORD”
With “TROUBLE DIAG RECORD”, diagnosis results previously erased by a reset operation can be displayed on the CONSULT screen.

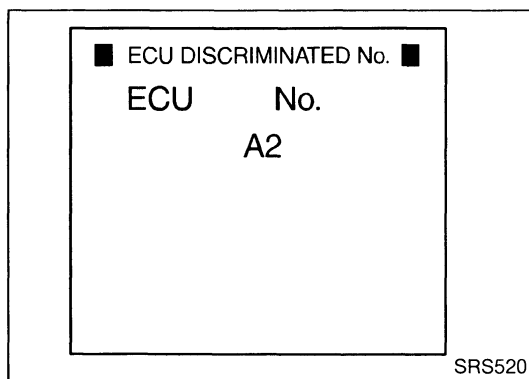

- “ECU DISCRIMINATED NO.”
The diagnosis sensor unit for each vehicle model is assigned with its own, individual classification number. This number will be displayed on the CONSULT screen, as shown at left. When replacing the diagnosis sensor unit, refer to the part number for the compatibility. After installation, replacement with a correct unit can be checked by confirming this classification number on the CONSULT screen.

For NISSAN model N15, the diagnosis sensor unit classification number assigned is A2.

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System


Trouble Diagnoses Introduction (Cont'd)

HOW TO CHANGE SELF-DIAGNOSIS MODE

With CONSULT



From User mode to Diagnosis mode

After selecting AIR BAG on the “SELECT SYSTEM” screen, User mode automatically changes to Diagnosis mode.

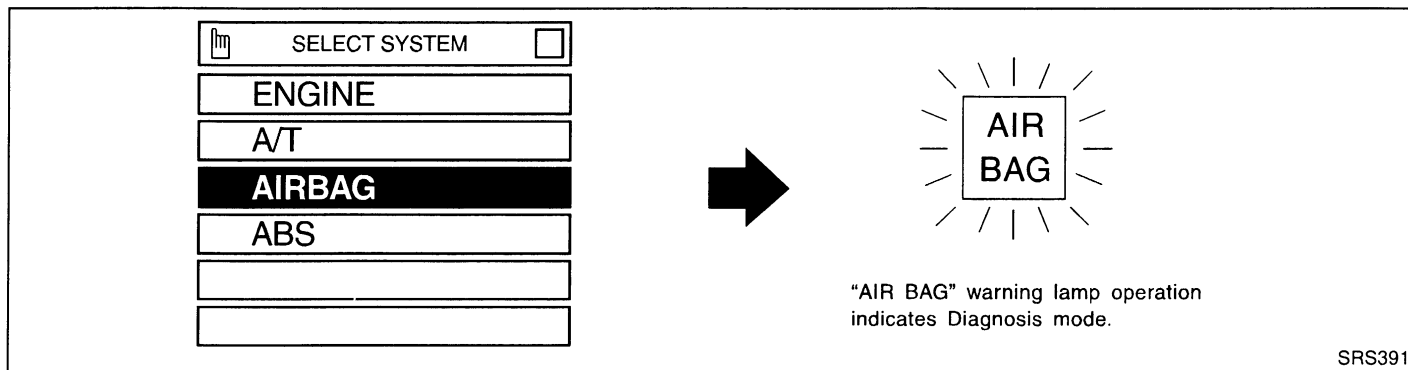

From Diagnosis mode to User mode

To return to User mode from diagnosis mode, touch “BACK” key of CONSULT until “SELECT SYSTEM” appears. Diagnosis mode automatically changes to User mode.

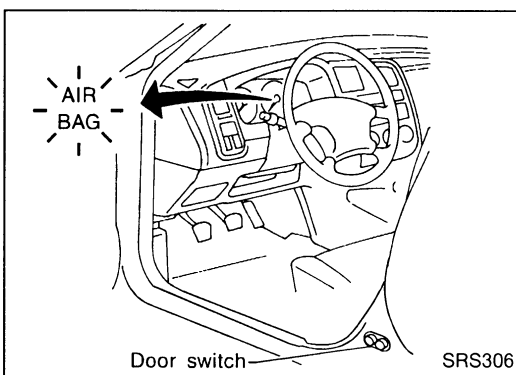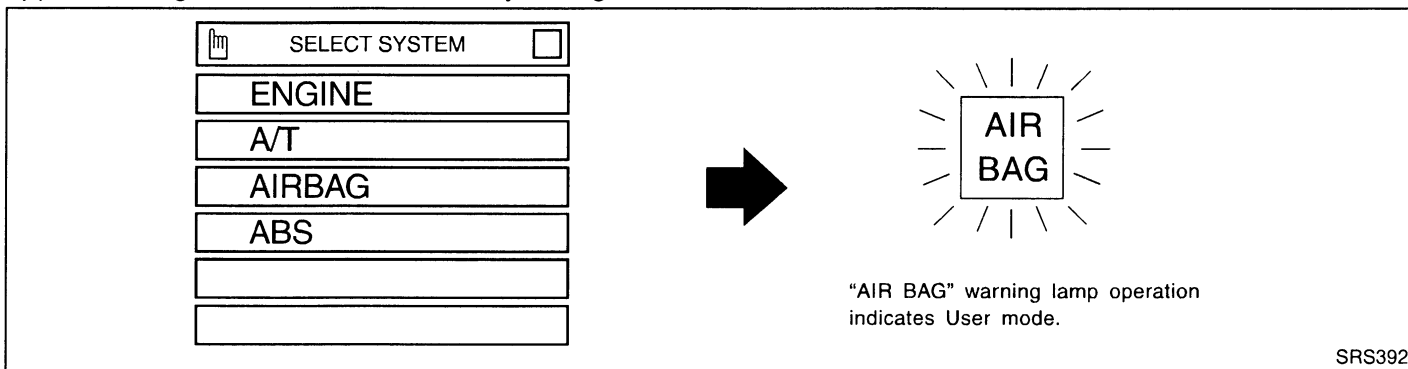

Without CONSULT

From User mode to Diagnosis mode

Diagnosis mode activates only when a malfunction is detected, by pressing the driver's door switch at least 5 times within 7 seconds after turning the ignition “ON”. SRS will not enter Diagnosis mode if no malfunction is detected.

From Diagnosis mode to User mode

After a malfunction is repaired, switch the ignition “OFF” for at least 1 second, then back “ON”. Diagnosis mode returns to User mode. If switching Diagnosis mode to User mode is required while malfunction is being detected, switch the ignition “OFF”, then back “ON” and press the driver's door switch at least 5 times within 7 seconds.


Trouble Diagnoses Introduction (Cont'd)

HOW TO ERASE SELF-DIAGNOSIS RESULTS

With CONSULT

- **“SELF-DIAG [CURRENT]”**

A current Self-diagnosis result is displayed on the CONSULT screen in real time. After the malfunction is repaired completely, no malfunction is detected on “SELF-DIAG [CURRENT]”.

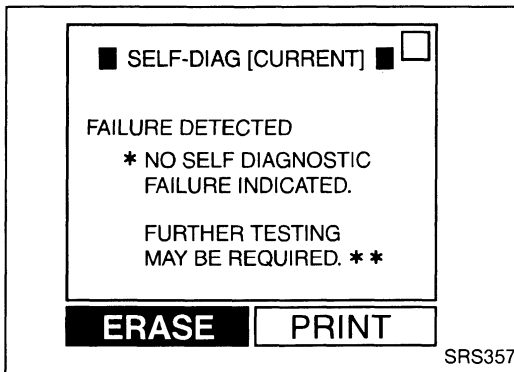

- **“SELF-DIAG [PAST]”**

Return to the “SELF-DIAG [CURRENT]” CONSULT screen by pushing “BACK” key of CONSULT and select “SELF-DIAG [CURRENT]” in “SELECT DIAG MODE”. Touch “ERASE” in “SELF-DIAG [CURRENT]” mode.

NOTE:

If the memory of the malfunction in “SELF-DIAG [PAST]” is not erased, the User mode shows the system malfunction by the operation of the warning lamp even if the malfunction is repaired completely.

- **“TROUBLE DIAG RECORD”**

The memory of “TROUBLE DIAG RECORD” cannot be erased.

Without CONSULT

After a malfunction is repaired, return to User mode from Diagnosis mode by switching the ignition “OFF” for at least 1 second, then back “ON”. At that time, the problem code is cleared.

How to Perform Trouble Diagnoses for Quick and Accurate Repair

A good understanding of the malfunction conditions can make troubleshooting faster and more accurate. In general, each customer feels differently about a problem. It is important to fully understand the symptoms or conditions for a customer complaint.

INFORMATION FROM CUSTOMER

WHAT Vehicle model
WHEN Date, Frequencies
WHERE Road conditions
HOW Operating conditions, Symptoms

PRELIMINARY CHECK


Check that the following parts are in good order.

- Battery [Refer to EL section (“BATTERY”).]
- Fuse [Refer to EL section (“Fuse”, “POWER SUPPLY ROUTING”).]
- System component-to-harness connections

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

How to Perform Trouble Diagnoses for Quick and Accurate Repair (Cont'd)


WORK FLOW

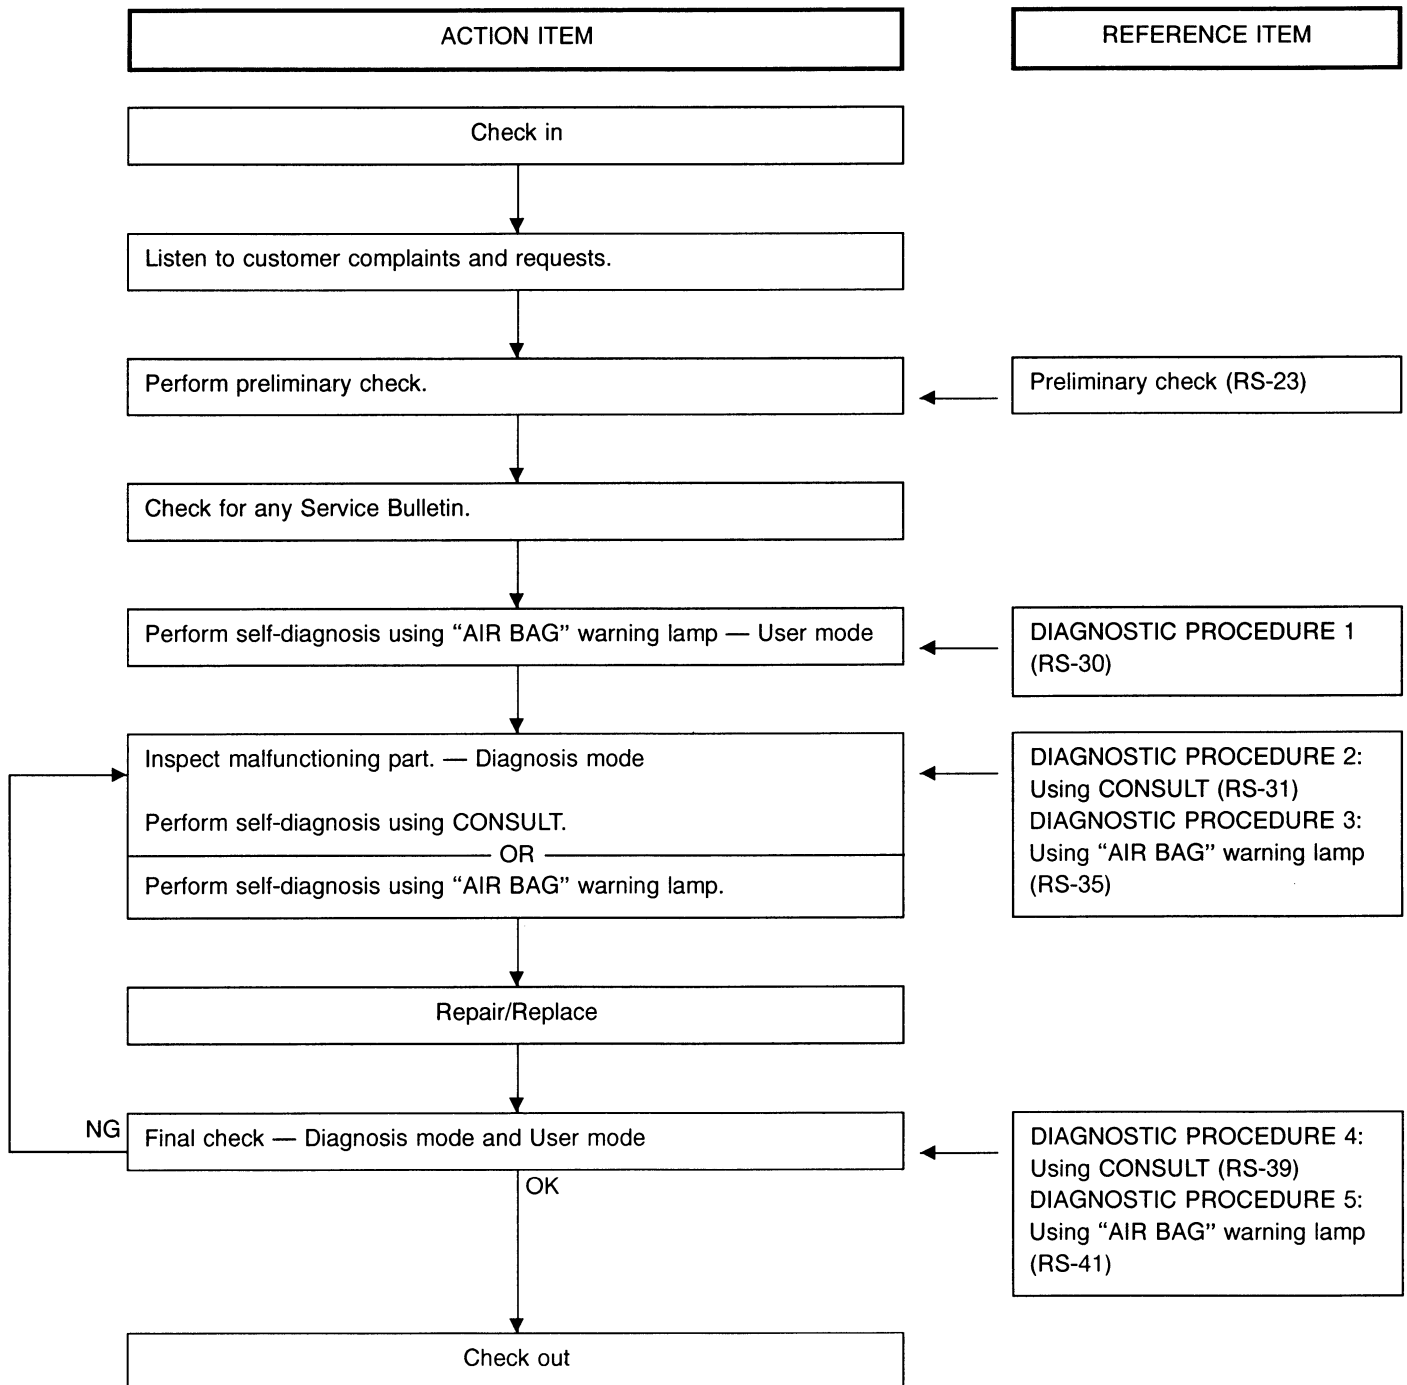

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Schematic

EXCEPT FOR SINGLE AIR BAG SYSTEM

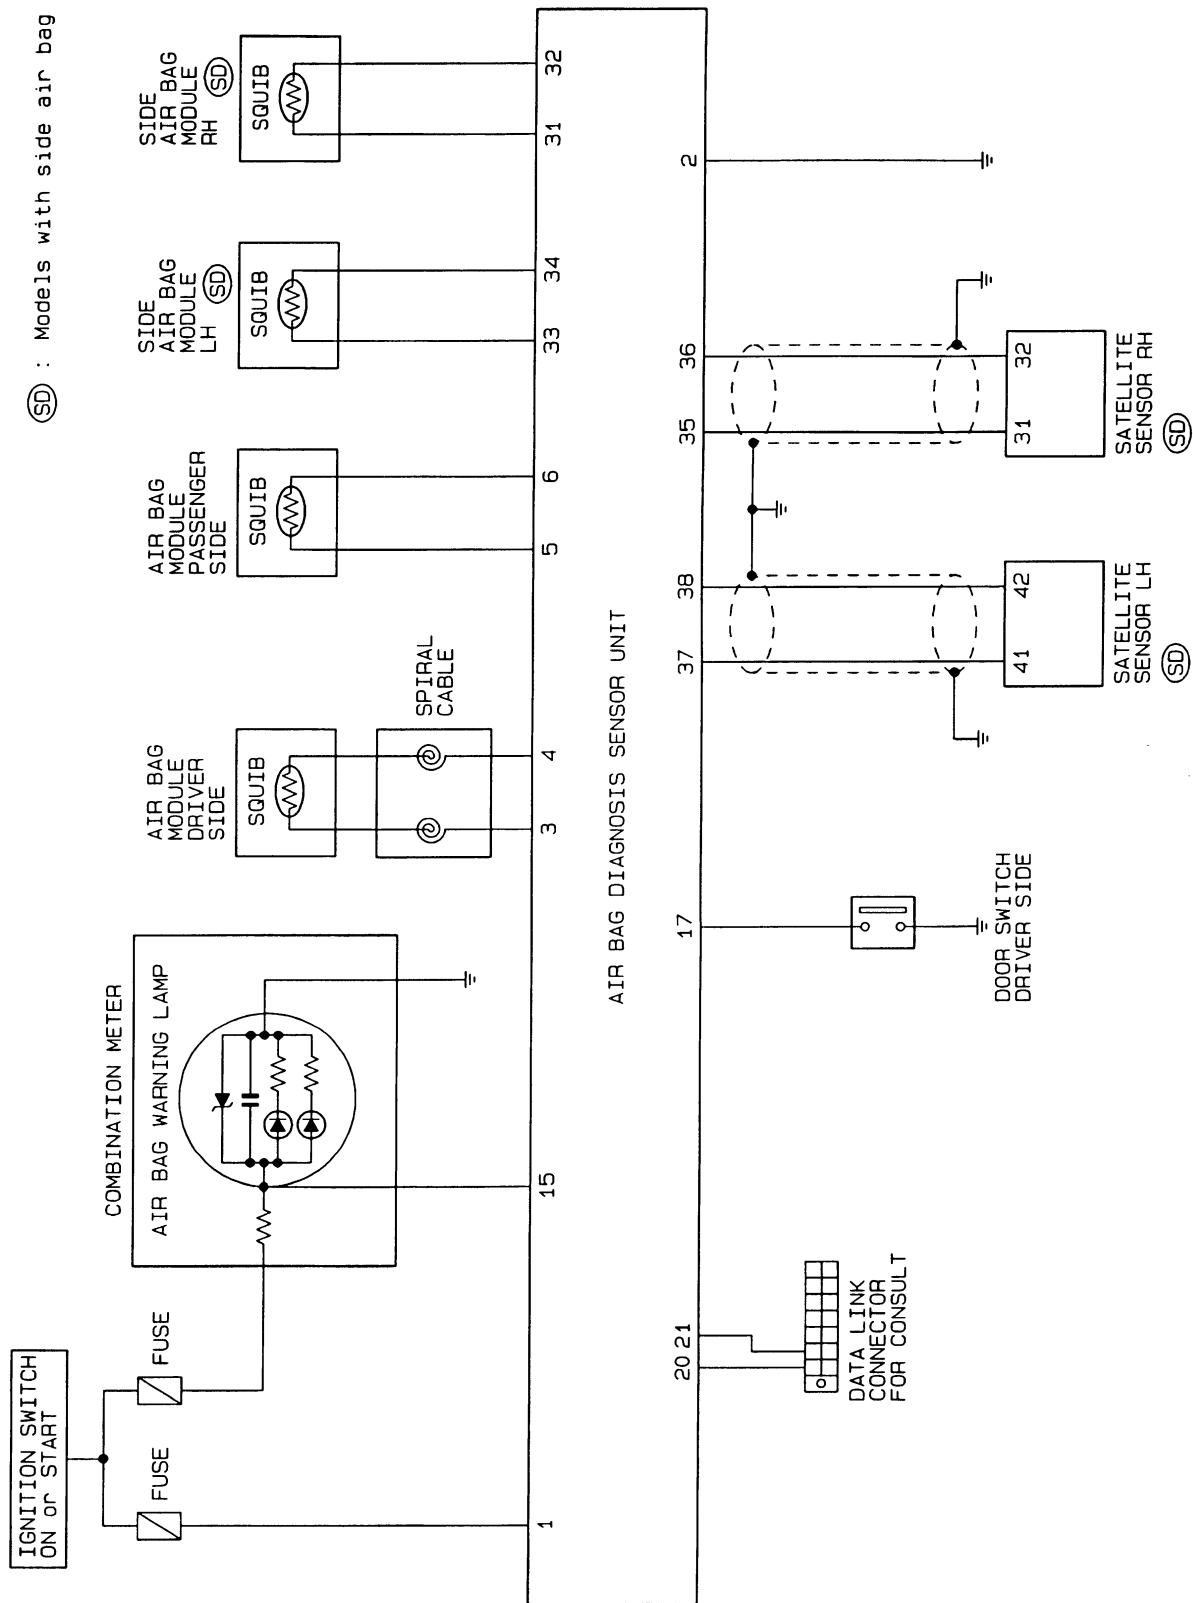


GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Wiring Diagram — SRS —

EXCEPT FOR SINGLE AIR BAG SYSTEM

RS-SRS-02

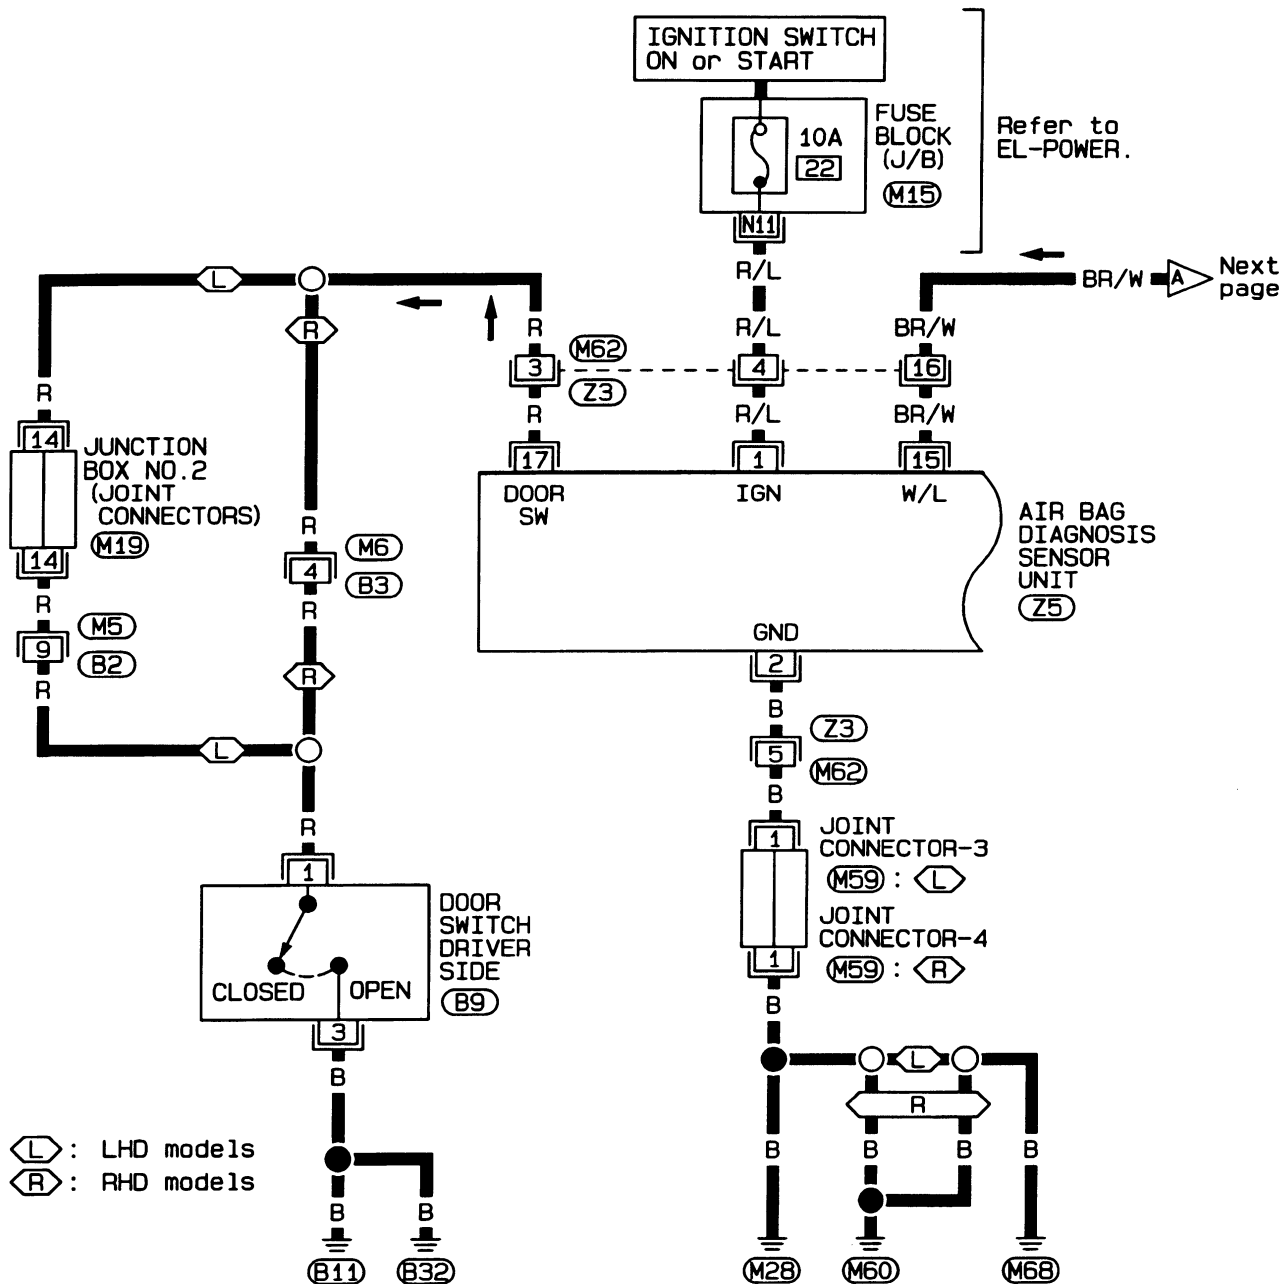

1	2					3	4	M5 W
5	6	7	8	9	10	11	12	

1	2	3	4			5	6	7	8	M6 W	
9	10	11	12	13	14	15	16	17	18		19

1	1	1	1	1	1	1	1	1	1	(M59) : (R)
2	2	2	2	2	3	3	3	3	3	P

1	1	1	1	1	1	1	1	1	1	(M59) : (L)
2	2	2	3	3	3	3	4	4	4	BR

1	2	(B9)
3		B

1	2	3			4	5	6	(Z3)		
7	8	9	10	11	12	13	14	15	16	W

												(Z5)
17	9	14	18	7	15	20	1	21	8	22	10	Y
5	16	3		19	11	13	12		4	2	6	

Refer to last page
(Foldout page).



(M15)

(M19)

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Wiring Diagram — SRS — (Cont'd)

RS-SRS-03

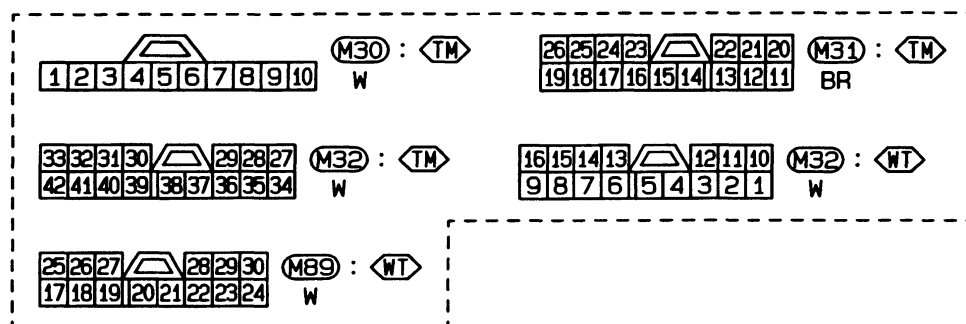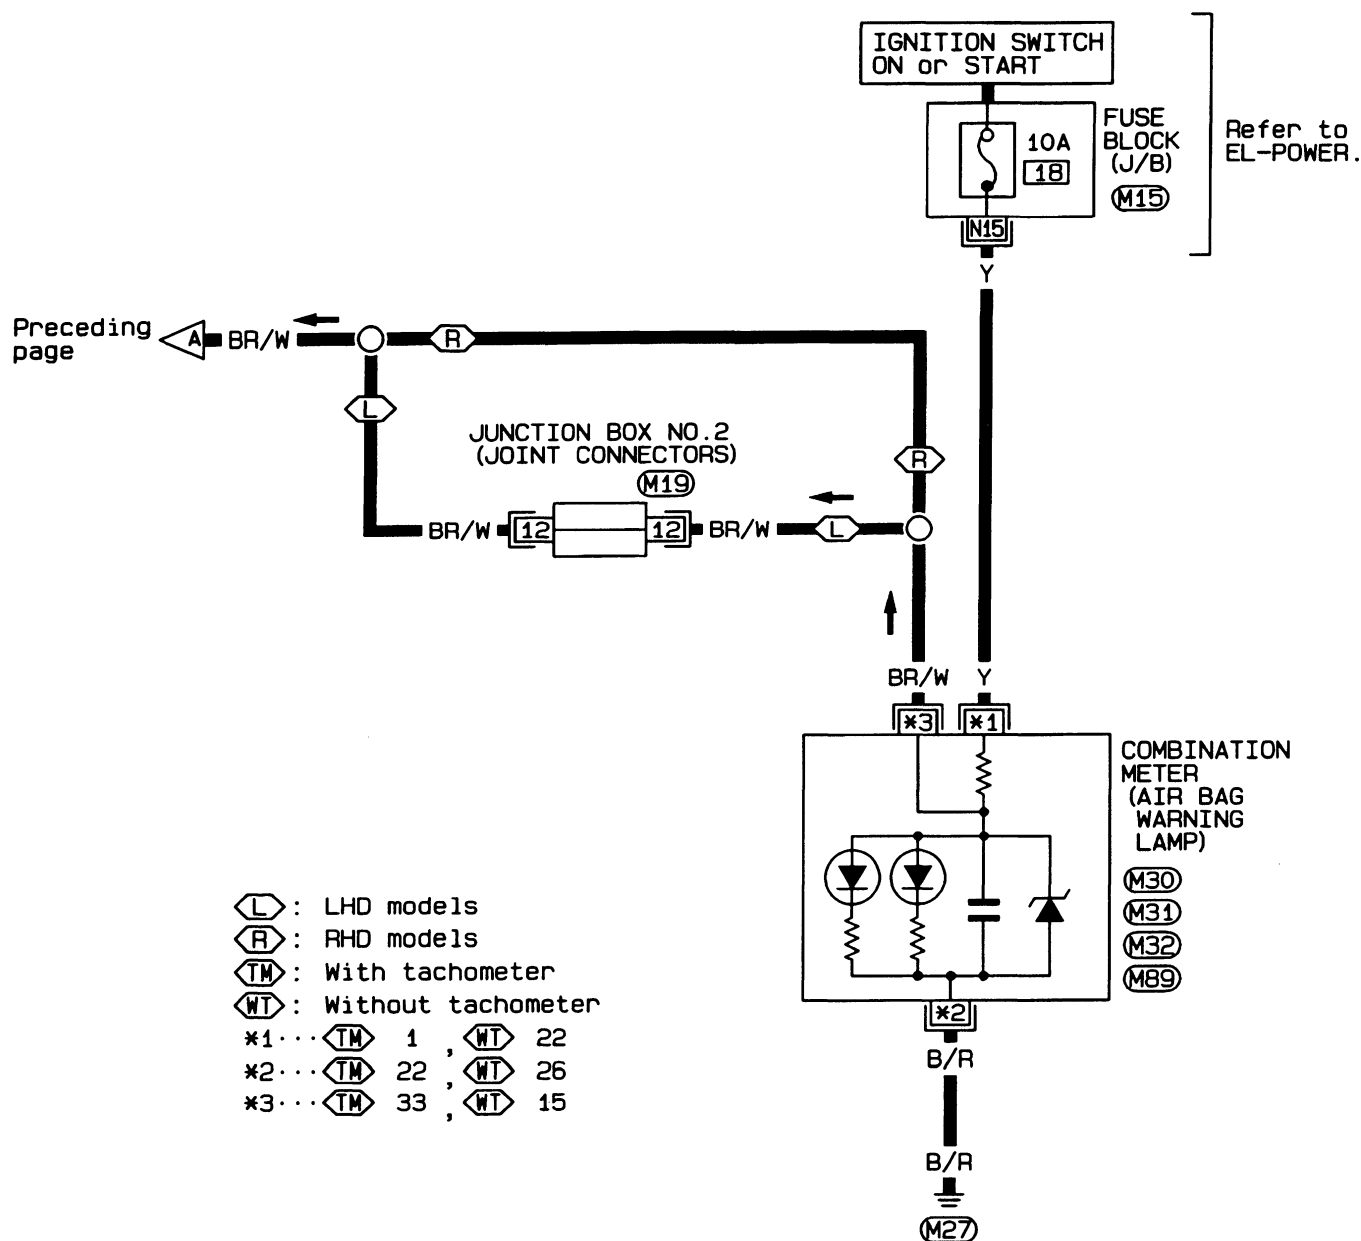

Refer to last page
(Foldout page).


M15

M19

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) **— Except for Single Air Bag System**






Wiring Diagram — SRS — (Cont'd)

RS-SRS-04

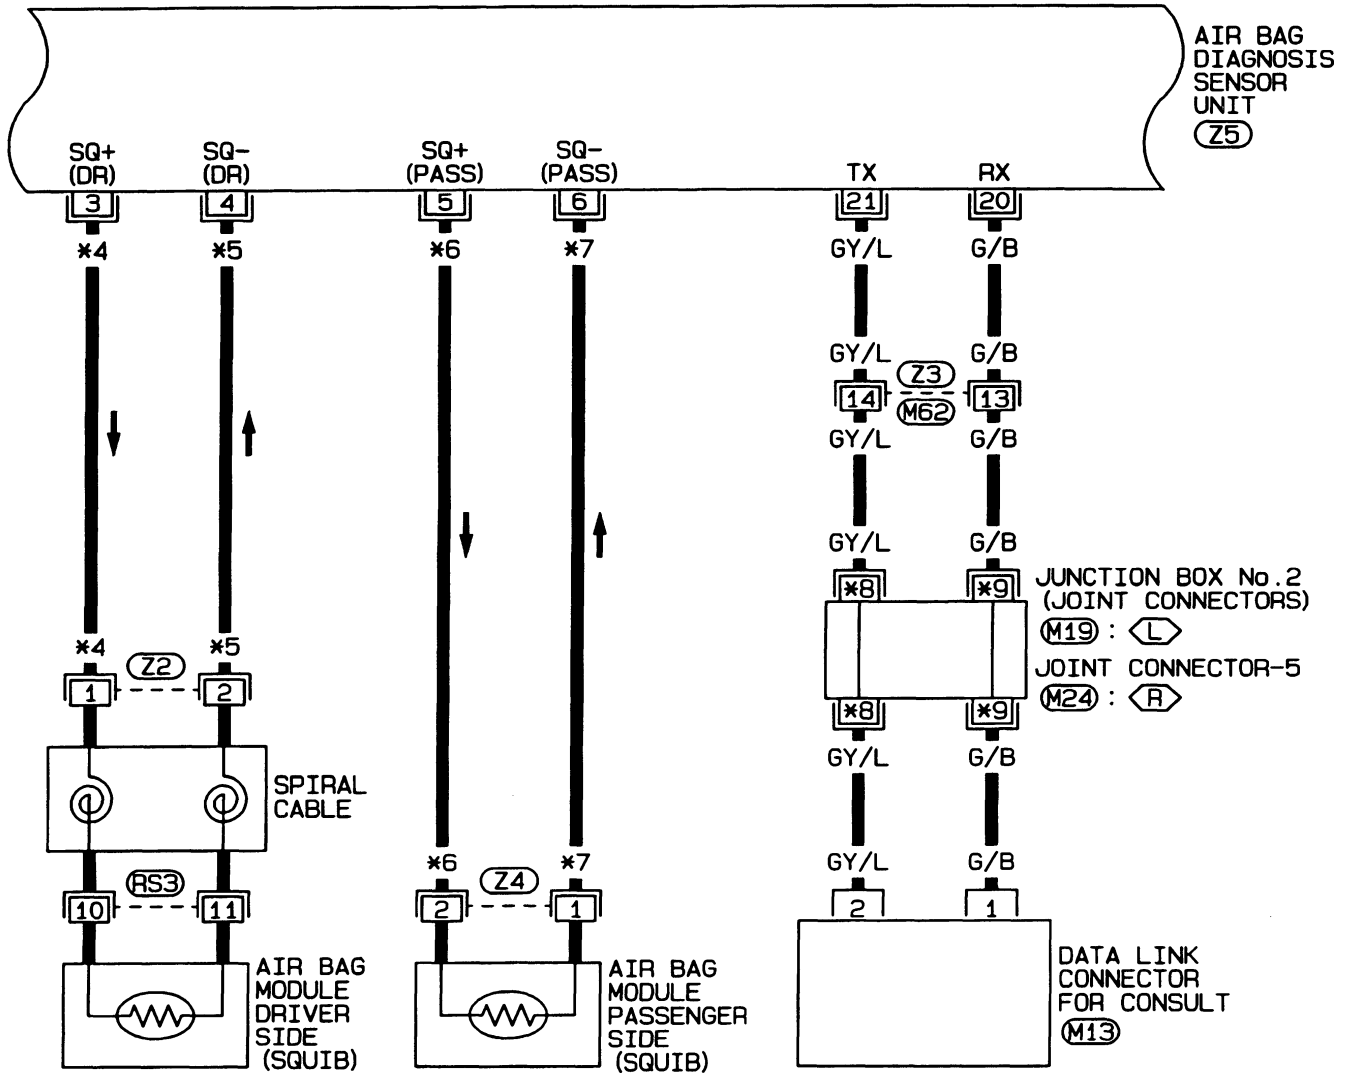

(L) : LHD models
 (R) : RHD models
 *4... (L) W , (R) Y
 *5... (L) L , (R) Y/B

*6... (L) G , (R) Y/G
 *7... (L) OR , (R) Y/R
 *8... (L) 10 , (R) 6
 *9... (L) 9 , (R) 3



*: This connector is not shown in "HARNESS LAYOUT", EL section.



Refer to last page
(Foldout page).

(M19)

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System


Wiring Diagram — SRS — (Cont'd)

RS-SRS-05

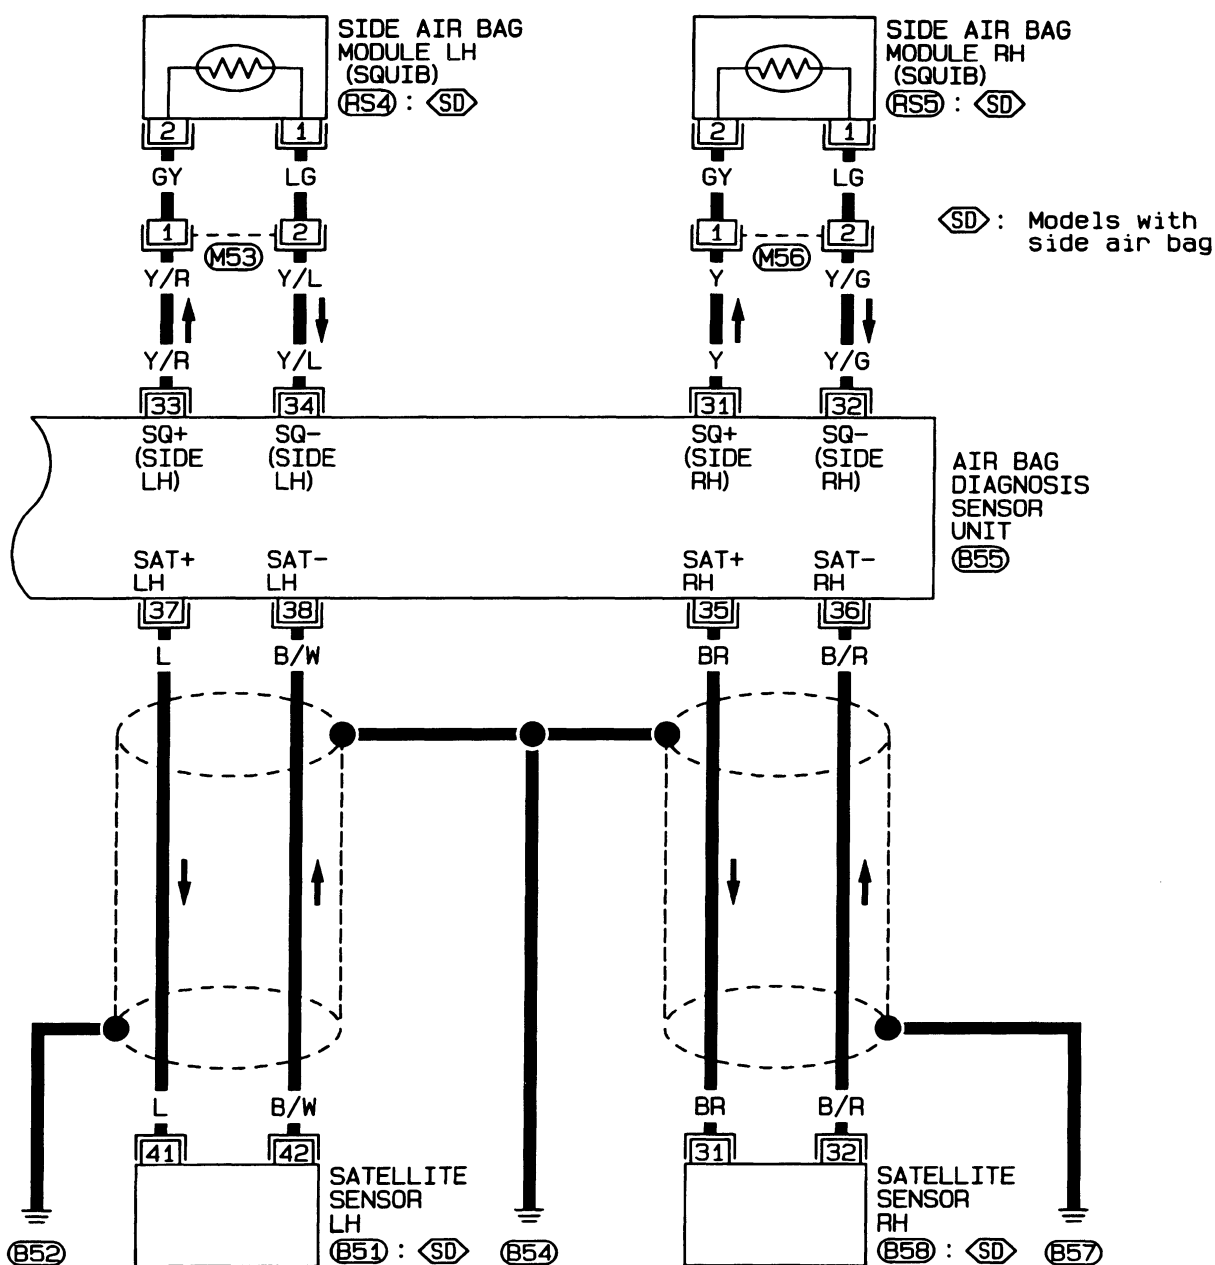

*: This connector is not shown in "HARNESS LAYOUT", EL section.

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

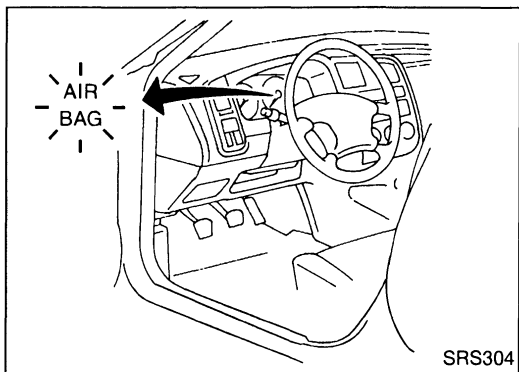

Self-diagnosis

DIAGNOSTIC PROCEDURE 1

Checking SRS operation by using “AIR BAG” warning lamp — User mode






1. After turning ignition switch from “OFF” to “ON”, “AIR BAG” warning lamp operates.
2. Compare “AIR BAG” warning lamp operation to the chart below.

“AIR BAG” warning lamp operation — User mode —	SRS condition	Reference item
MRS095A	No malfunction is detected. No further action is necessary.	—
MRS096A	The system has problem and needs to be repaired as indicated.	Go to DIAGNOSTIC PROCEDURE 2 or 3 (RS-31 or 35).
MRS097A	Air bag is deployed.	Go to COLLISION DIAGNOSIS (RS-50).
MRS098A	Air bag fuse, diagnosis sensor unit or harness is malfunctioning and needs to be repaired.	Go to DIAGNOSTIC PROCEDURE 9 (RS-48).
MRS098A	One of the following has occurred and needs to be repaired. • Meter fuse is blown. • “AIR BAG” warning lamp circuit has open or short. • Diagnosis sensor unit is malfunctioning.	Go to DIAGNOSTIC PROCEDURE 10 (RS-48).

NOTE:

If “AIR BAG” warning lamp operates differently from the operations shown above, refer to “AIR BAG” warning lamp operation — Diagnosis mode —, DIAGNOSTIC PROCEDURE 3 (step 4), RS-35.

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

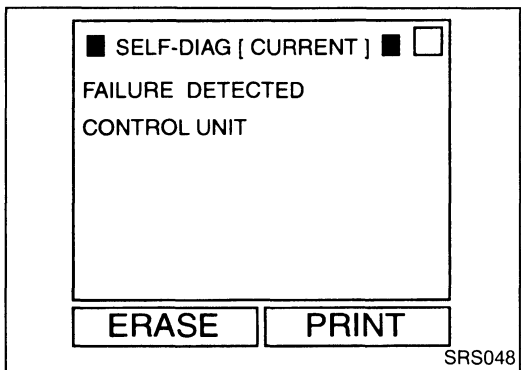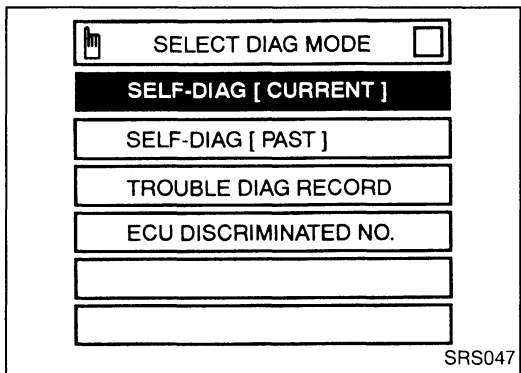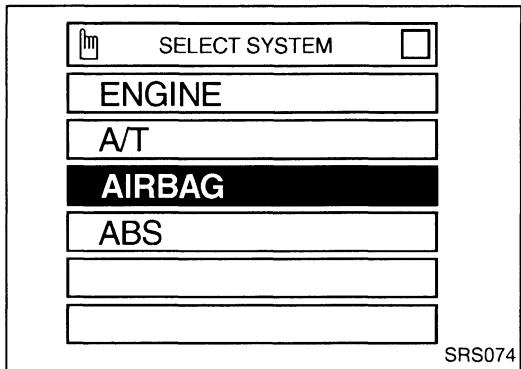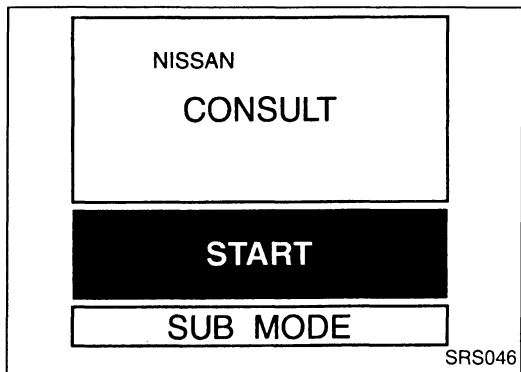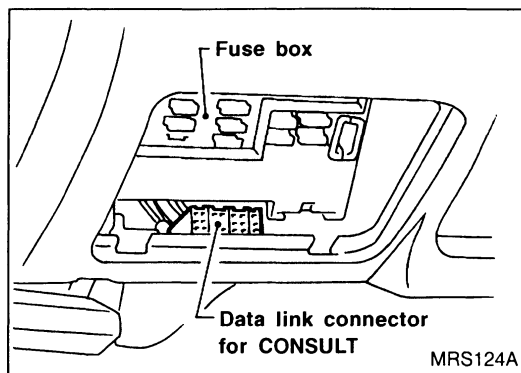

Self-diagnosis (Cont'd)

DIAGNOSTIC PROCEDURE 2 (CONSULT)

Inspecting SRS malfunctioning parts by using CONSULT — Diagnosis mode

1. Turn ignition switch "OFF".
2. Connect "CONSULT" to Data link connector.

3. Turn ignition switch "ON".
4. Touch "START".

5. Touch "AIRBAG".

6. Touch "SELF-DIAG [CURRENT]".

7. Diagnostic codes are displayed on "SELF-DIAG [CURRENT]".

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS


BT

HA

EL

IDX

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

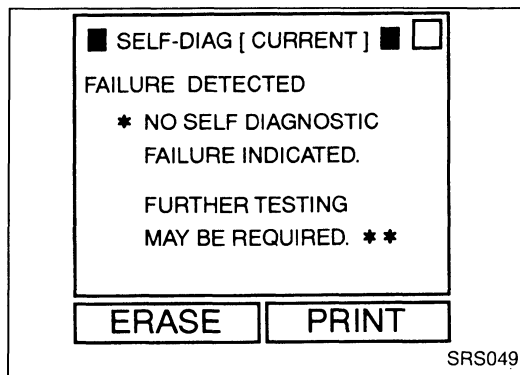

Self-diagnosis (Cont'd)

If no self-diagnostic failure is detected on "SELF-DIAG [CURRENT]" even though malfunction is detected in DIAGNOSTIC PROCEDURE 1, check the battery voltage. If the battery voltage is less than 9V, charge the battery. Then go to DIAGNOSTIC PROCEDURE 4 for final checking, page RS-39. If the battery voltage is OK, go to DIAGNOSTIC PROCEDURE 6, page RS-43, to diagnose the following situations:

- Self-diagnostic failure "SELF-DIAG[PAST]" (previously stored in the memory) might not be erased after repair.
- The SRS system malfunctions intermittently.

8. Touch "PRINT".
9. Compare diagnostic codes to the CONSULT DIAGNOSTIC CODE CHART, page RS-33.
10. Touch "BACK" key of CONSULT until SELECT SYSTEM appears in order to return to User mode from Diagnosis mode, then turn off CONSULT.
11. Turn ignition switch "OFF", then disconnect CONSULT and both battery cables.
12. Repair the system as outlined by the "Repair order" in CONSULT DIAGNOSTIC CODE CHART, that corresponds to the problem code. For replacement procedure of component parts, refer to RS-12.
13. After repairing the system, go to DIAGNOSTIC PROCEDURE 4 for final checking, page RS-39.

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Self-diagnosis (Cont'd)

CONSULT DIAGNOSTIC CODE CHART ("SELF-DIAG [CURRENT]")

Diagnostic item	Explanation		Repair order Recheck SRS at each replacement.
NO SELF DIAGNOSTIC FAILURE INDICATED	When malfunction is indicated by the “AIR BAG” warning lamp in User mode	● Low battery voltage (Less than 9V)	● Go to DIAGNOSTIC PROCEDURE 4 (RS-39) after charging battery.
		● Self-diagnostic failure “SELF-DIAG [PAST]” (previously stored in the memory) might not be erased after repair. ● Intermittent problem has been detected in the past.	● Go to DIAGNOSTIC PROCEDURE 6 (RS-43).
	● No malfunction is detected.		● Go to DIAGNOSTIC PROCEDURE 4 (RS-39).
AIRBAG MODULE [OPEN]	● Driver’s air bag module circuit is open. (including the spiral cable)		1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the spiral cable. 4. Replace driver’s air bag module. (Before disposal of it, it must be deployed.) 5. Replace the diagnosis sensor unit. 6. Replace the air bag harness.
AIRBAG MODULE [VB-SHORT]	● Driver’s air bag module circuit is shorted to some power supply circuit. (including the spiral cable)		
AIRBAG MODULE [GND-SHORT]	● Driver’s air bag module circuit is shorted to ground. (including the spiral cable)		
AIRBAG MODULE [SHORT]	● Driver’s air bag module circuits are shorted to each other.		
ASSIST A/B MODULE [VB-SHORT]	● Front passenger air bag module circuit is shorted to some power supply circuit.		1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace front passenger air bag module. (Before disposal of it, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the air bag harness.
ASSIST A/B MODULE [OPEN]	● Front passenger air bag module circuit is open.		
ASSIST A/B MODULE [GND-SHORT]	● Front passenger air bag module circuit is shorted to ground.		
ASSIST A/B MODULE [SHORT]	● Front passenger air bag module circuits are shorted to each other.		
DA (SIDE MODULE LH [OPEN])	● Side air bag module (LH) circuit is open.		1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace front side air bag module (LH). (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the harness.
DB (SIDE MODULE LH [VB-SHORT])	● Side air bag module (LH) circuit is shorted to some power supply circuits.		
DC (SIDE MODULE LH [GND-SHORT])	● Side air bag module (LH) circuit is shorted to ground.		
DD (SIDE MODULE LH [SHORT])	● Side air bag module (LH) circuits are shorted to each other.		

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Self-diagnosis (Cont'd)

Diagnostic item	Explanation	Repair order Recheck SRS at each replacement.
7A (SIDE MODULE RH [OPEN])	Side air bag module (RH) circuit is open.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace front side air bag module (RH). (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the harness.
7B (SIDE MODULE RH [VB-SHORT])	Side air bag module (RH) circuit is shorted to some power supply circuits.	
7C (SIDE MODULE RH [GND-SHORT])	Side air bag module (RH) circuit is shorted to ground.	
7D (SIDE MODULE RH [SHORT])	Side air bag module (RH) circuits are shorted to each other.	
91, 92 (SATELLITE SENS LH [UNIT FAIL]) 93 (SATELLITE SENS LH [COMM FAIL])	Satellite sensor (LH)	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the satellite sensor (LH). 4. Replace the diagnosis sensor unit. 5. Replace the harness.
81, 82 (SATELLITE SENS RH [UNIT FAIL]) 83 (SATELLITE SENS RH [COMM FAIL])	Satellite sensor (RH)	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the satellite sensor (RH). 4. Replace the diagnosis sensor unit. 5. Replace the harness.
CONTROL UNIT	Diagnosis sensor unit is malfunctioning.	1. Visually check wiring harness connections. 2. Replace the harness if it has visible damage. 3. Replace diagnosis sensor unit. 4. Replace the air bag harness.

* Follow the procedures in numerical order when repairing malfunctioning parts. Confirm whether malfunction is eliminated using the air bag warning lamp or CONSULT each time repair is finished. If malfunction is still observed, proceed to the next step. When malfunction is eliminated, further repair work is not required.

* Diagnostic items enclosed by () appear on the screen of the EE980 CONSULT program card as self-diagnosis result.

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Self-diagnosis (Cont'd)

DIAGNOSTIC PROCEDURE 3 (without CONSULT)

Inspecting SRS malfunctioning parts by using “AIR BAG” warning lamp — Diagnosis mode


NOTE:

SRS will not enter Diagnosis mode if no malfunction is detected in User mode.

1. Open driver's door.
2. Turn ignition switch from “OFF” to “ON”.
3. Press driver's door switch at least 5 times within 7 seconds after turning ignition switch “ON”.
SRS is now in Diagnosis mode.
4. “AIR BAG” warning lamp operates in Diagnosis mode as follows:

NOTE:

If SRS does not enter Diagnosis mode even though malfunction is detected in User mode, go to DIAGNOSTIC PROCEDURE 11, page RS-49.

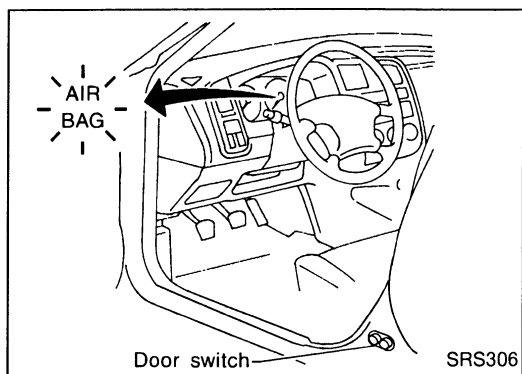

No.	“AIR BAG” warning lamp flash pattern — Diagnosis mode —	SRS condition
1	① through ② are repeated. SRS333	• Diagnosis results (previously stored in the memory) might not be erased after repair. • Intermittent problem has been detected in the past. Go to DIAGNOSTIC PROCEDURE 7 (RS-43).
2	① through ④ are repeated. ② — Driver and passenger air bag marker (For identifying driver and/or passenger air bag malfunctioning) ④ — Indicates malfunctioning part. The number of flash varies with malfunctioning part (0.5 sec. ON and 0.5 sec. OFF is counted as one flash.) SRS341	The system has a problem and needs to be repaired.
3	① through ① are repeated. ②, ③, ④ — Side air bag marker (For identifying side air bag malfunctioning) ① — Indicates malfunctioning part. The number of flash varies with malfunctioning part (0.5 sec. ON and 0.5 sec. OFF is counted as one flash.) SRS342-A	




Self-diagnosis (Cont'd)

- ## AIR BAG WARNING LAMP FLASH CODE CHART (DIAGNOSIS MODE)

RS-36




TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Self-diagnosis (Cont'd)

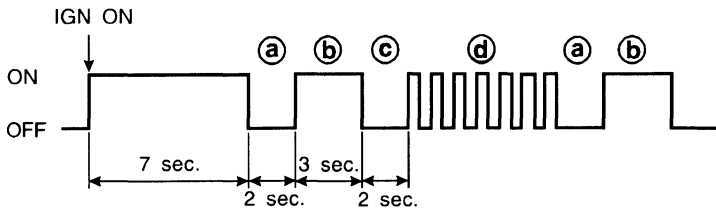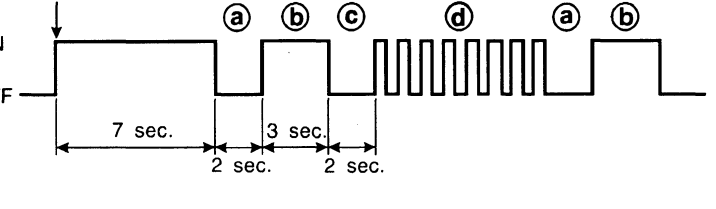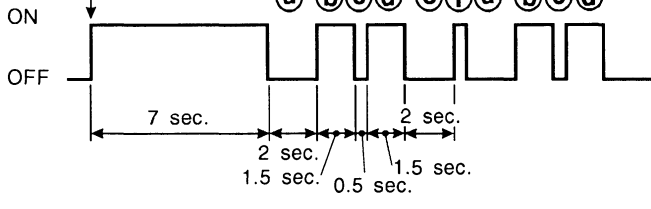The diagnosis sensor unit is malfunctioning. (④: 7 flashes)	Flash pattern  ③ through ④ are repeated. ④ — Seven flashes indicate malfunctioning diagnosis sensor unit. SRS335	GI MA EM LC
	Repair order ("Recheck SRS at each replacement.") 1. Visually check the wiring harness connections. 2. Replace the harness if it has visible damage. 3. Replace the diagnosis sensor unit. 4. Replace the air bag harness.	
The front passenger air bag module circuit is malfunctioning. (④: 8 flashes)	Flash pattern  ③ through ④ are repeated. ④ — Eight flashes indicate malfunctioning front passenger air bag module circuit. SRS336	CL MT AT FA
	Repair order ("Recheck SRS at each replacement.") 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace front passenger air bag module. (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit.	
The side air bag module (RH) circuit is malfunctioning. (①: 1 flash)	Flash pattern  ③ through ⑦ are repeated. ① — One flash indicates malfunctioning side air bag module (RH) circuit. SRS338	ST RS BT HA
	Repair order ("Recheck SRS at each replacement.") 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace side air bag module (RH). (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the harness.	

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Self-diagnosis (Cont'd)

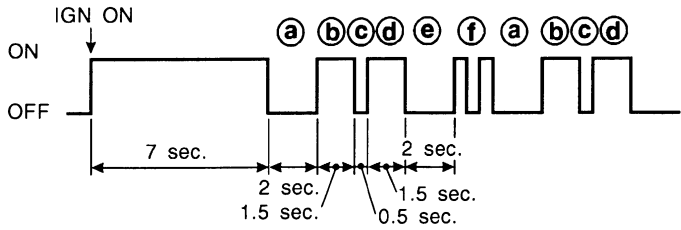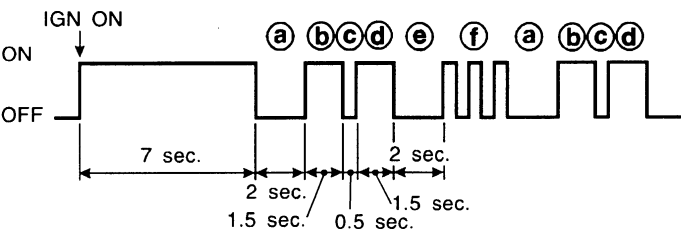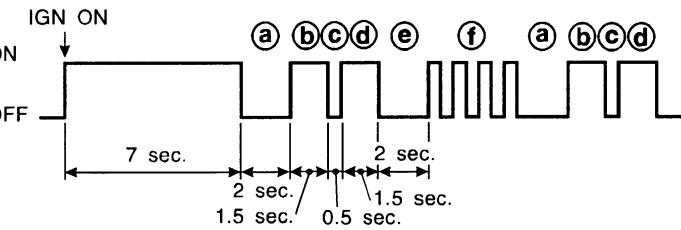The side air bag module (LH) circuit is malfunctioning. (①: 2 flashes)	Flash pattern  ③ through ① are repeated. ① — Two flashes indicate malfunctioning side air bag module (LH) circuit. SRS337
	Repair order ("Recheck SRS at each replacement.") 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace side air bag module (LH). (Before disposal, it must be deployed.) 4. Replace the diagnosis sensor unit. 5. Replace the harness.
	Flash pattern  ③ through ① are repeated. ① — Three flashes indicate malfunctioning satellite sensor (RH) circuit. SRS340
The satellite sensor (RH) is malfunctioning. (①: 3 flashes)	Repair order ("Recheck SRS at each replacement.") 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the satellite sensor (RH). 4. Replace the diagnosis sensor unit. 5. Replace the harness.
	Flash pattern  ③ through ① are repeated. ① — Four flashes indicate malfunctioning satellite sensor (LH) circuit. SRS342-A
	Repair order ("Recheck SRS at each replacement.") 1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. Replace the satellite sensor (LH). 4. Replace the diagnosis sensor unit. 5. Replace the harness.

* Follow the procedures in numerical order when repairing malfunctioning parts. Confirm whether malfunction is eliminated using the air bag warning lamp (in User mode) or CONSULT each time repair is finished. If malfunction is still observed, proceed to the next step. When malfunction is eliminated, further repair work is not required.



TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Self-diagnosis (Cont'd)


DIAGNOSTIC PROCEDURE 4 (CONSULT with CONSULT)

Final checking after repairing SRS by using CONSULT — Diagnosis mode


1. After repairing SRS, connect both battery cables.
2. Connect CONSULT to Data link connector.
3. Turn ignition switch from "OFF" to "ON".

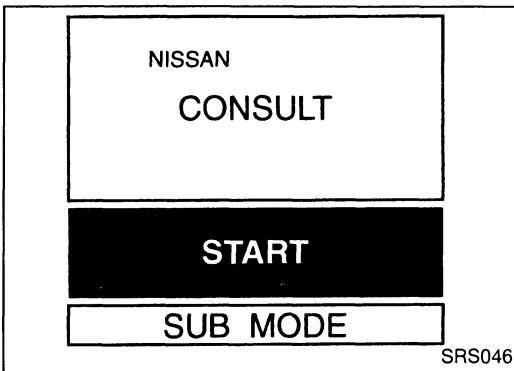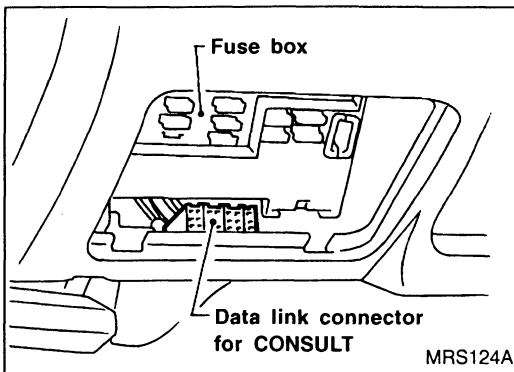


4. Touch "START".

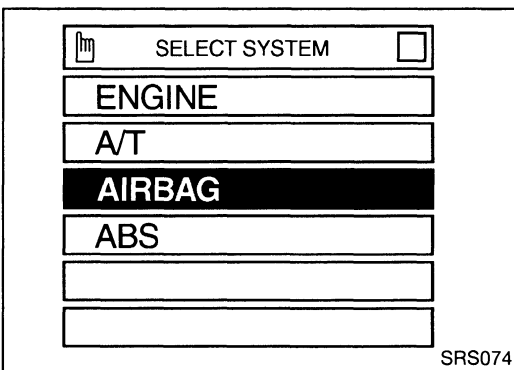

5. Touch "AIRBAG".

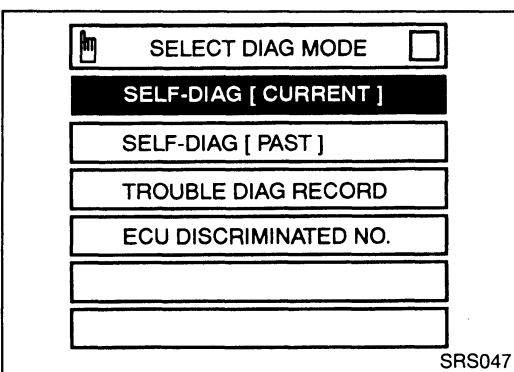

6. Touch "SELF-DIAG [CURRENT]".

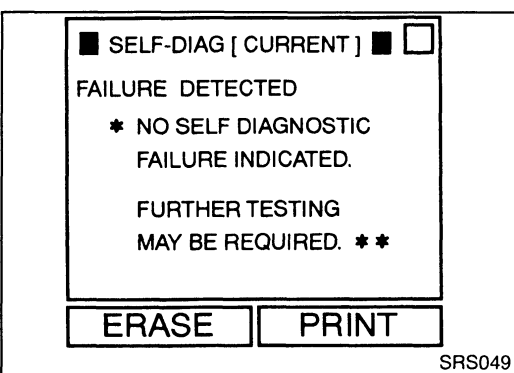

7. If no malfunction is detected on "SELF-DIAG [CURRENT]", repair of SRS is completed.

If any problem code is displayed on "SELF-DIAG [CURRENT]", the malfunctioning part is not repaired completely or another malfunctioning part is detected. Go to DIAGNOSTIC PROCEDURE 2, page RS-31, and repair malfunctioning part completely.

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Self-diagnosis (Cont'd)

■ SELF-DIAG [CURRENT] ■

FAILURE DETECTED

* NO SELF DIAGNOSTIC
FAILURE INDICATED.

FURTHER TESTING
MAY BE REQUIRED. **

ERASE **PRINT**

SRS357

SELECT DIAG MODE

SELF-DIAG [CURRENT]

SELF-DIAG [PAST]

TROUBLE DIAG RECORD

ECU DISCRIMINATED NO.

SRS050

■ SELF-DIAG [PAST] ■

FAILURE DETECTED

* NO SELF DIAGNOSTIC
FAILURE INDICATED.

FURTHER TESTING
MAY BE REQUIRED. **

PRINT

SRS062

8. Touch "ERASE".

NOTE:

Touch "ERASE" to clear the memory of the malfunction ("SELF-DIAG [PAST]").

If the memory of the malfunction is "SELF-DIAG [PAST]" is not erased, the User mode shows the system malfunction by the operation of the warning lamp even if the malfunction is repaired completely.

9. Touch "BACK" key of CONSULT to select "SELF-DIAG [PAST]" in the "SELECT DIAG MODE" screen. Touch "SELF-DIAG [PAST]".

10. Check that no self-diagnostic failure is detected on "SELF-DIAG [PAST]".

11. Touch "BACK" key of CONSULT until SELECT SYSTEM appears in order to return to User mode from Diagnosis mode, turn off CONSULT, then disconnect CONSULT.

12. Turn ignition switch "OFF".

13. Go to DIAGNOSTIC PROCEDURE 1, page RS-30 to check SRS operation by using "AIR BAG" warning lamp with User mode.


TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Self-diagnosis (Cont'd)

DIAGNOSTIC PROCEDURE 5 (without CONSULT)

Final checking after repairing SRS by using “AIR BAG” warning lamp — Diagnosis mode and User mode

1. After repairing SRS connect both battery cables.
2. Open driver's door.
3. Turn ignition switch from “OFF” to “ON”.
4. “AIR BAG” warning lamp operates in Diagnosis mode as follows:

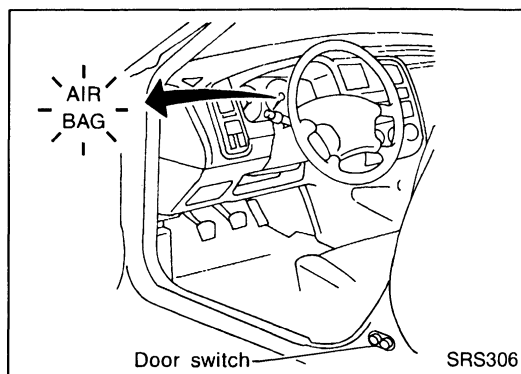

No.	“AIR BAG” warning lamp flash pattern — Diagnosis mode —	SRS condition
1	① through ⑥ are repeated. SRS333	No malfunction is detected or repair is completed. No further action is necessary.
2	① through ④ are repeated. ② — Driver and passenger air bag marker (For identifying driver and/or passenger air bag malfunctioning) ④ — Indicates malfunctioning part. The number of flashes varies with malfunctioning part (0.5 sec. ON and 0.5 sec. OFF is counted as one flash.) SRS341	The system has a problem and needs to be repaired.
3	① through ⑥ are repeated. ②, ③, ④ — Side air bag marker (For identifying side air bag malfunctioning) ⑥ — Indicates malfunctioning part. The number of flashes varies with malfunctioning part (0.5 sec. ON and 0.5 sec. OFF is counted as one flash.) SRS342-A	

NOTE:

When diagnosis sensor unit is replaced with new one, “AIR BAG” warning lamp will operate in User mode. Checking “AIR BAG” warning lamp operation in Diagnosis mode is not required. Go to step 6.

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Self-diagnosis (Cont'd)

5. If "AIR BAG" warning lamp operates as shown in No. 1 in chart above, turn ignition switch "OFF" to reset from Diagnosis mode to User mode and to erase the memory of the malfunction. Then go to step 6.



If "AIR BAG" warning lamp operates as shown in No. 2 or No. 3 in chart above, the malfunctioning part is not repaired completely, or another malfunctioning part is detected. Go to DIAGNOSTIC PROCEDURE 3, page RS-35, and repair malfunctioning part completely.

6. Turn ignition switch "ON". "AIR BAG" warning lamp operates in User mode. Compare "AIR BAG" warning lamp operation to the chart below.

NOTE:

If switching Diagnosis mode to User mode is required while malfunction is being detected, turn ignition switch from "OFF" to "ON". Then press driver's door switch at least 5 times within 7 seconds after turning ignition switch "ON".

SRS is now in User mode.

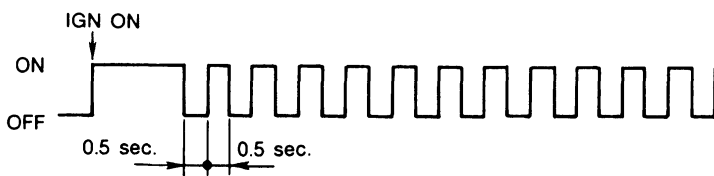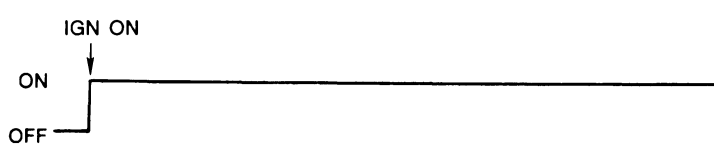
"AIR BAG" warning lamp operation — User mode —	SRS condition	Reference item
 MRS095A	No malfunction is detected. No further action is necessary.	—
 MRS096A	The system has problem and needs to be repaired as indicated.	Go to DIAGNOSTIC PROCEDURE 2 or 3 (RS-31 or 35).
 MRS097A	Air bag is deployed. Air bag fuse, diagnosis sensor unit or harness is malfunctioning and needs to be repaired.	Go to COLLISION DIAGNOSIS (RS-50). Go to DIAGNOSTIC PROCEDURE 9 (RS-48).
 MRS098A	One of the following has occurred and needs to be repaired. • Meter fuse is blown. • "AIR BAG" warning lamp circuit has open or short. • Diagnosis sensor unit is malfunctioning.	Go to DIAGNOSTIC PROCEDURE 10 (RS-48).

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)
— Except for Single Air Bag System

Self-diagnosis (Cont'd)


**DIAGNOSTIC PROCEDURE 6 (Continued from
DIAGNOSTIC PROCEDURE 2) (CONSULT with CONSULT)**

Inspecting SRS malfunctioning record

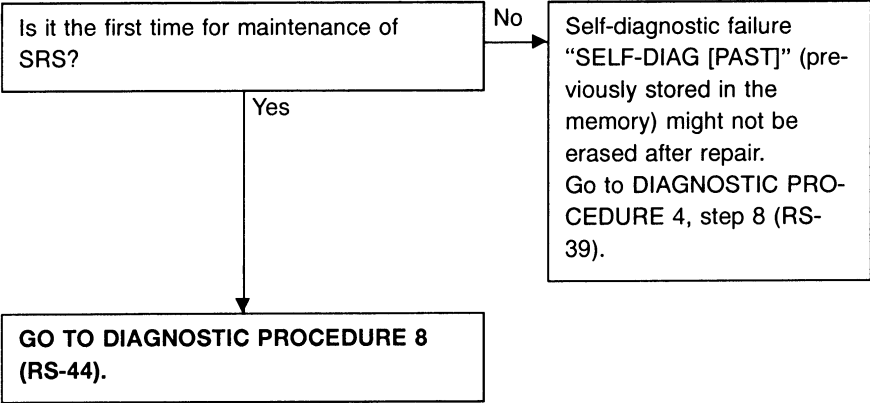

**DIAGNOSTIC PROCEDURE 7 (Continued from
DIAGNOSTIC PROCEDURE 3) (CONSULT without CONSULT)**

Inspecting SRS malfunctioning record

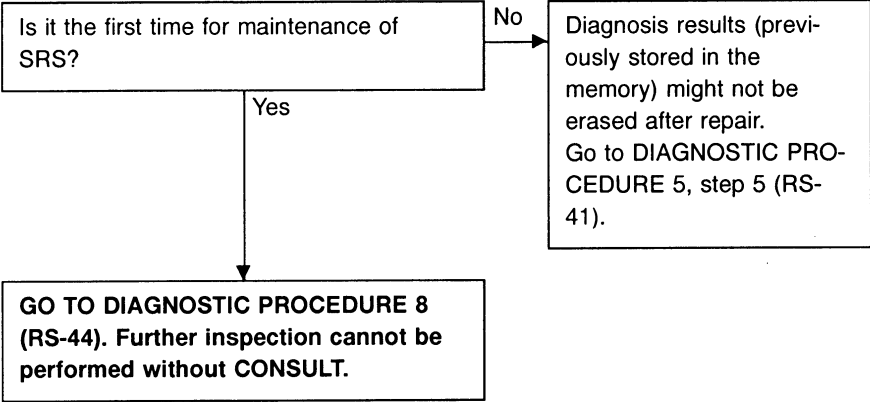

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX



TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Self-diagnosis (Cont'd)


DIAGNOSTIC PROCEDURE 8 (CONSULT with CONSULT)

Inspecting SRS intermittent problem by using CONSULT — Diagnosis mode


1. Turn ignition switch "OFF".
2. Connect "CONSULT" to Data link connector.

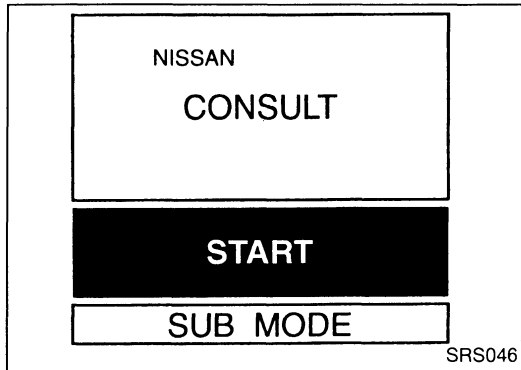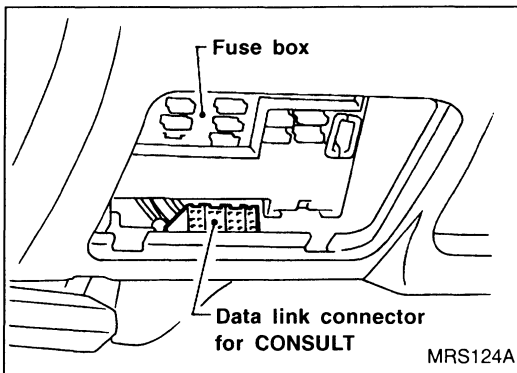


3. Turn ignition switch "ON".
4. Touch "START".

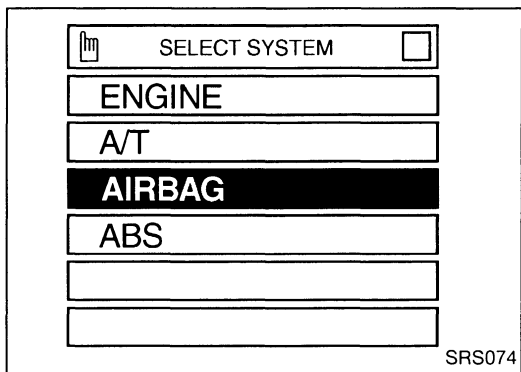

5. Touch "AIRBAG".

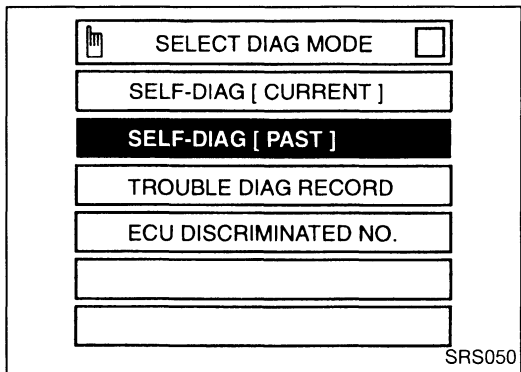

6. Touch "SELF-DIAG [PAST]".

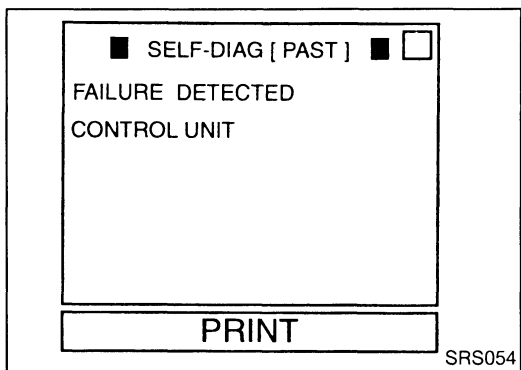

7. If diagnostic codes are displayed on "SELF-DIAG [PAST]", go to step 10.

Self-diagnosis (Cont'd)

DX

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Self-diagnosis (Cont'd)

INTERMITTENT PROBLEM DIAGNOSTIC CODE CHART (SELF-DIAG [PAST] or TROUBLE DIAG RECORD)

Diagnostic item	Explanation		Repair order
NO SELF DIAGNOSTIC FAILURE INDICATED.	When malfunction is indicated by the "AIR BAG" warning lamp in User mode	● Low battery voltage (Less than 9V)	● Go to DIAGNOSTIC PROCEDURE 4 (RS-39) after charging battery.
	● No malfunction is detected.		● Go to DIAGNOSTIC PROCEDURE 4 (RS-39).
AIRBAG MODULE [OPEN]	● Driver's air bag module circuit is open. (including the spiral cable)		1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check is OK, replace the spiral cable, diagnosis sensor unit and driver air bag module. (Before disposing the driver air bag module, it must be deployed.)
AIRBAG MODULE [VB-SHORT]	● Driver's air bag module circuit is shorted to some power supply circuit. (including the spiral cable)		
AIRBAG MODULE [GND-SHORT]	● Driver's air bag module circuit is shorted to ground. (including the spiral cable)		
AIRBAG MODULE [SHORT]	● Driver's air bag module circuits are shorted to each other.		
ASSIST A/B MODULE [VB-SHORT]	● Front passenger air bag module circuit is shorted to some power supply circuit.		1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check is OK, replace the diagnosis sensor unit and passenger air bag module. (Before disposing the passenger air bag module, it must be deployed.)
ASSIST A/B MODULE [OPEN]	● Front passenger air bag module circuit is open.		
ASSIST A/B MODULE [GND-SHORT]	● Front passenger air bag module circuit is shorted to ground.		
ASSIST A/B MODULE [SHORT]	● Front passenger air bag module circuits are shorted to each other.		
DA (SIDE MODULE LH [OPEN])	● Side air bag module (LH) circuit is open.		1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check is OK, replace the diagnosis sensor unit and front side air bag module (LH). (Before disposing the front side air bag module (LH), it must be deployed.)
DB (SIDE MODULE LH [VB-SHORT])	● Side air bag module (LH) circuit is shorted to some power supply circuits.		
DC (SIDE MODULE LH [GND-SHORT])	● Side air bag module (LH) circuit is shorted to ground.		
DD (SIDE MODULE LH [SHORT])	● Side air bag module (LH) circuits are shorted to each other.		
7A (SIDE MODULE RH [OPEN])	● Side air bag module (RH) circuit is open.		1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check is OK, replace the diagnosis sensor unit and front side air bag module (RH). (Before disposing the front side air bag module (RH), it must be deployed.)
7B (SIDE MODULE RH [VB-SHORT])	● Side air bag module (RH) circuit is shorted to some power supply circuits.		
7C (SIDE MODULE RH [GND-SHORT])	● Side air bag module (RH) circuit is shorted to ground.		
7D (SIDE MODULE RH [SHORT])	● Side air bag module (RH) circuits are shorted to each other.		

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Self-diagnosis (Cont'd)

Diagnostic item	Explanation	Repair order
91, 92 (SATELLITE SENS LH [UNIT FAIL]) 93 (SATELLITE SENS LH [COMM FAIL])	Satellite sensor (LH)	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check is OK, replace the diagnosis sensor unit and satellite sensor (LH).
81, 82 (SATELLITE SENS RH [UNIT FAIL]) 83 (SATELLITE SENS RH [COMM FAIL])	Satellite sensor (RH)	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check is OK, replace the diagnosis sensor unit and satellite sensor (RH).
CONTROL UNIT	Diagnosis sensor unit is malfunctioning.	1. Visually check the wiring harness connection. 2. Replace the harness if it has visible damage. 3. If the harness check is OK, replace the diagnosis sensor unit.

* Follow the procedures in numerical order when repairing malfunctioning parts, then make the final system check.

* Diagnostic items enclosed by () appear on the screen of the EE980 CONSULT program card as self-diagnosis result.

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS



BT

HA

EL

IDX



TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

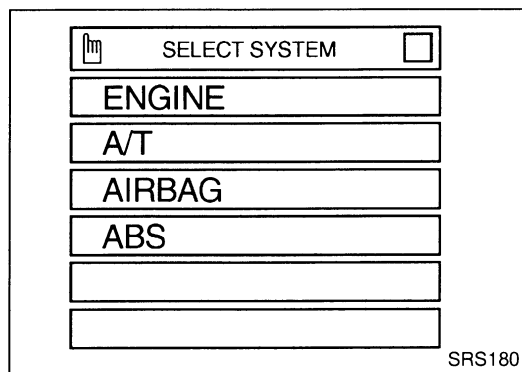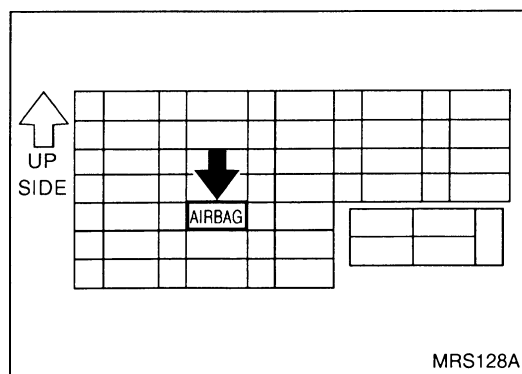

Trouble Diagnoses for Air Bag Warning Lamp


DIAGNOSTIC PROCEDURE 9

SYMPTOM: "AIR BAG" warning lamp does not turn off.

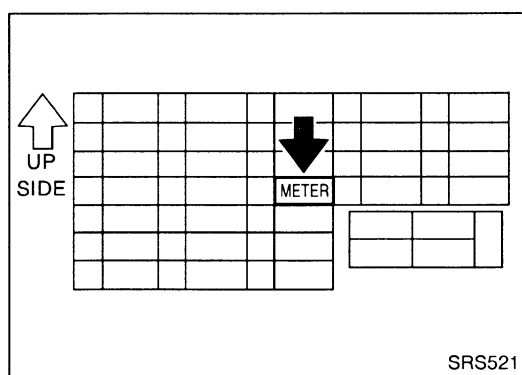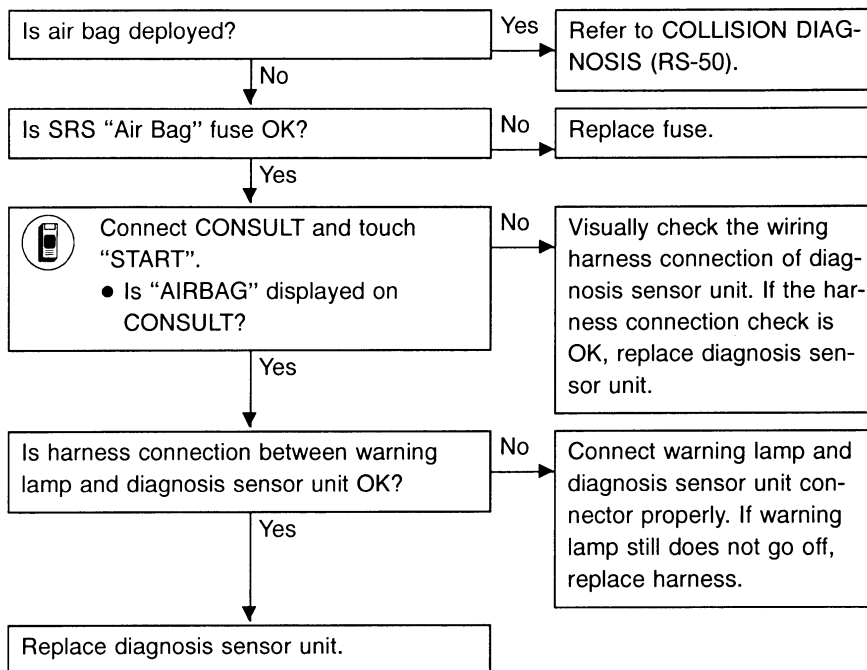

DIAGNOSTIC PROCEDURE 10

SYMPTOM: "AIR BAG" warning lamp does not turn on.




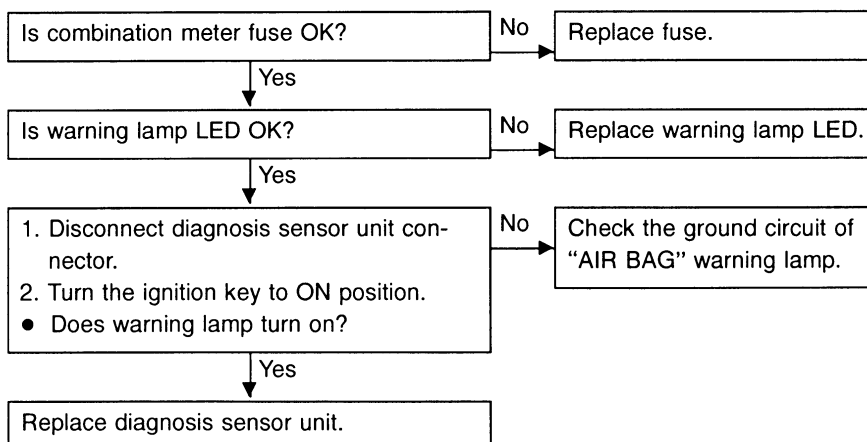


TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) — Except for Single Air Bag System

Trouble Diagnoses for Air Bag Warning Lamp (Cont'd)

DIAGNOSTIC PROCEDURE 11

SYMPTOM: SRS does not enter Diagnosis mode using door switch.

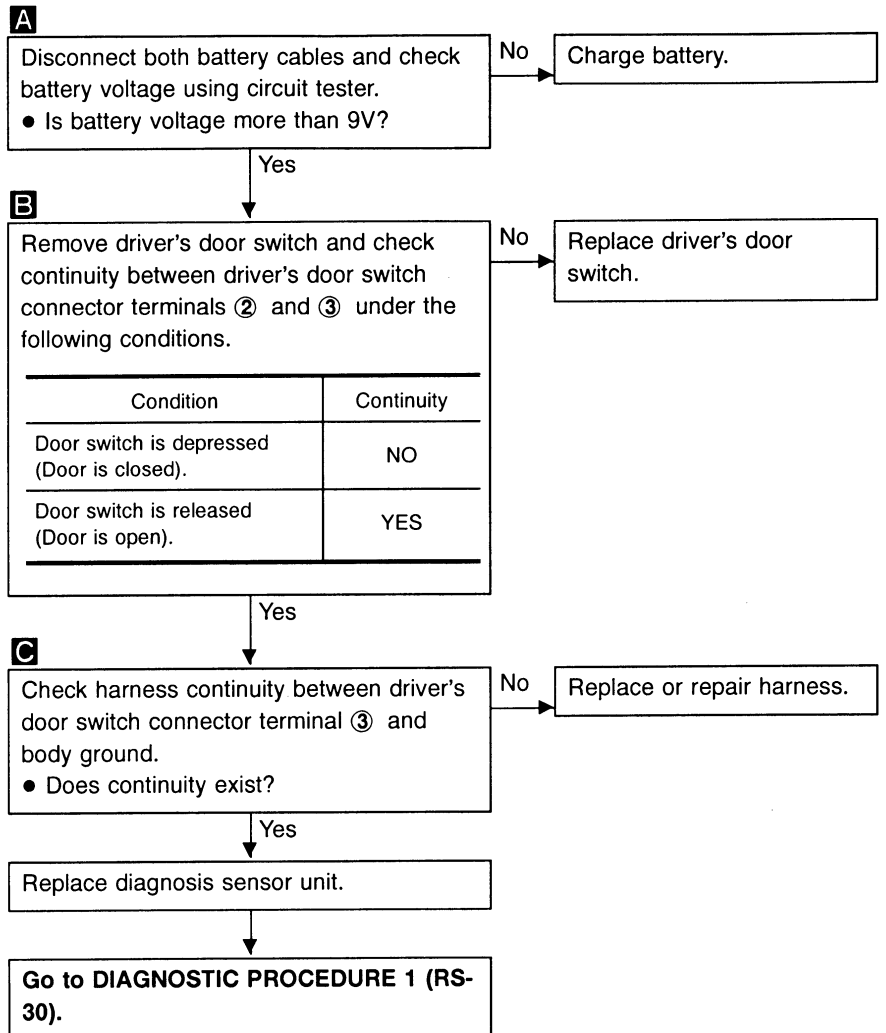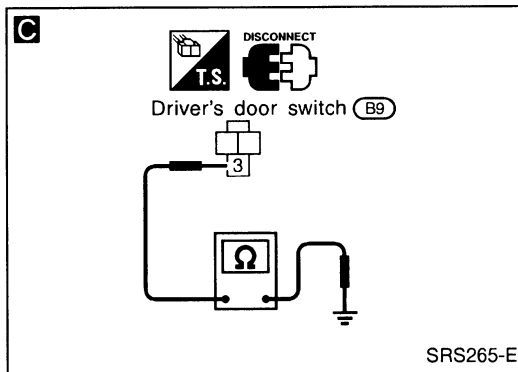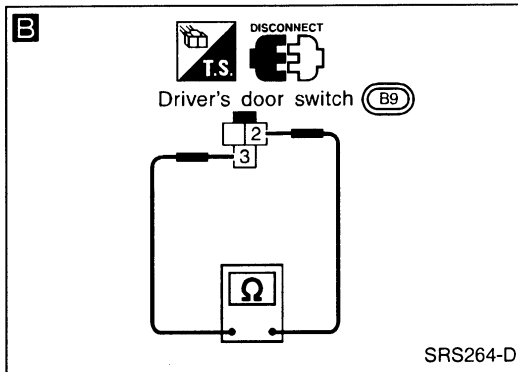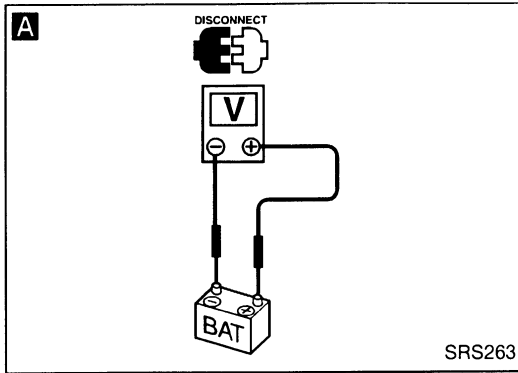

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

COLLISION DIAGNOSIS — Except for Single Air Bag System

FOR FRONTAL COLLISION

To repair the SRS for a frontal collision, perform the following steps.

When SRS (except the side air bag) is activated in a collision:

- ① Replace the diagnosis sensor unit.
- ② Remove the air bag modules (except the side air bag module) and seat belt pre-tensioner assemblies.
- ③ Check the SRS components using the table shown below:
 - Replace any SRS components showing visible signs of damage (dents, cracks, deformation).
- ④ Install new air bag modules (except the side air bag module) and seat belt pre-tensioner assemblies.
- ⑤ Conduct self-diagnosis using CONSULT, and “AIR BAG” warning lamps. Refer to “Self-diagnosis” for details (RS-30). Ensure entire SRS operates properly.




When SRS is not activated in a collision:

- ① Check the SRS components using the table shown below:
 - Replace any SRS components showing visible signs of damage (dents, cracks, deformation).
- ② Conduct self-diagnosis using CONSULT, and “AIR BAG” warning lamps. Refer to “Self-diagnosis” for details (RS-30). Ensure entire SRS operates properly.

SRS inspection

Part	SRS (except the side air bag) is activated	SRS is NOT activated
Air bag module (driver and passenger side)	REPLACE Install air bag module with new bolts.	1. Remove air bag module. Check harness cover and connectors for damage, terminals for deformities, and harness for binding. 2-1. Install driver air bag module into the steering wheel to check fit and alignment with the wheel. 2-2. Install passenger air bag module into the instrument panel to check fit with the instrument panel. 3. No damage found, reinstall with new bolts coated with bonding agent. 4. If damaged—REPLACE. Air bag must be deployed before discarding.
Seat belt pre-tensioner assembly	REPLACE Install seat belt pre-tensioner with new bolts.	1. Remove seat belt pre-tensioners. 2. Check belts for damage and anchors for loose mounting. 3. Check retractor for smooth operation. 4. If no damage is found, reinstall with new bolts coated with bonding agent. 5. If damaged—REPLACE. Install the seat belt pre-tensioners with new bolts coated with bonding agent. Seat belt pre-tensioners must be deployed before discarding.
Diagnosis sensor unit	REPLACE Install diagnosis sensor unit with new bolts.	1. Check case and bracket for dents, cracks or deformities. 2. Check connectors for damage, and terminals for deformities. 3. If no damage is found, reinstall with new bolts. 4. If damaged—REPLACE. Install diagnosis sensor unit with new bolts coated with bonding agent.
Steering wheel		1. Visually check steering wheel for deformities. 2. Check harness (built into steering wheel) and connectors for damage, and terminals for deformities. 3. Install air bag module to check fit or alignment with steering wheel. 4. Check steering wheel for excessive free play. 5. If no damage is found, reinstall the steering wheel. 6. If damaged—REPLACE.
Spiral cable		1. Visually check spiral cable and combination switch for damage. 2. Check connectors, flat cable and protective tape for damage. 3. Check steering wheel for noise, binding or heavy operation. 4. If no damage is found, reinstall the spiral cable. 5. If damaged—REPLACE.
Harness and Connectors		1. Check connectors for poor connection, damage, and terminals for deformities. 2. Check harness for binding, chafing, cuts, or deformities. 3. If no damage is found, reinstall harness and connectors. 4. Damaged—REPLACE damaged section of harness. Do not attempt to repair, splice or modify any SRS harness.
Instrument panel		Refer to the table on the next page.

COLLISION DIAGNOSIS — Except for Single Air Bag System

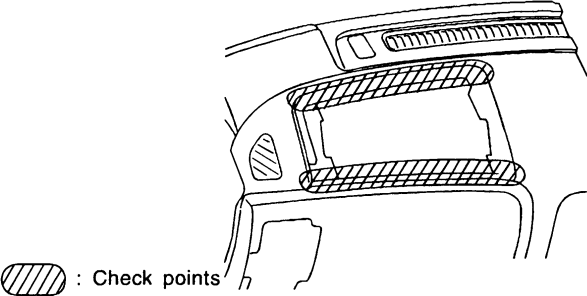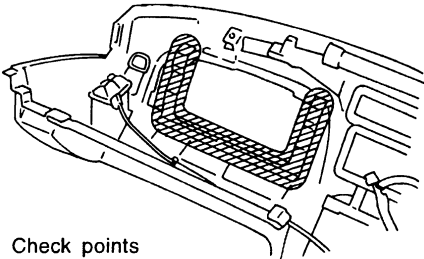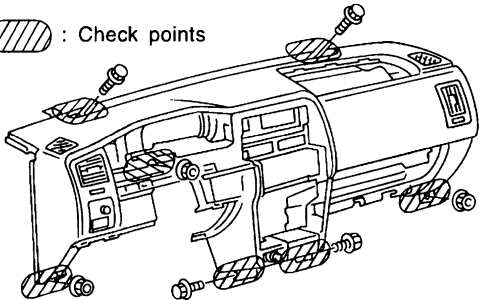Part	SRS (except the side air bag) is activated	SRS is NOT activated
Instrument panel	1. When passenger air bag inflates, check the following points for bending, deformities or cracks. ● Opening portion for passenger air bag  ● Passenger air bag module brackets Back face of instrument panel  ● The portions securing the instrument panel  2. If no damage is found, reinstall the instrument panel. 3. If damaged—REPLACE the instrument panel with bolts.	

GI

MA

EM

LC

EC

SRS522

FE

CL

MT

AT

SRS415

FA

RA

BR

ST

SRS523

RS

BT

HA

EL

IDX

COLLISION DIAGNOSIS — Except for Single Air Bag System

FOR SIDE COLLISION

To repair the SRS for a side collision, perform the following steps.

When the side air bag is activated in the side collision:

- ① Replace the following components:
 - All parts of seat back with side air bag module (on the side on which side air bag is activated)
 - Diagnosis sensor unit
 - Satellite sensor (on the side on which side air bag is activated)
- ② Check the SRS components and the related parts using the table shown below.
 - Replace any SRS components and the related parts showing visible signs of damage (dents, cracks, deformation).
- ③ Conduct self-diagnosis using CONSULT, and “AIR BAG” warning lamp. Refer to “Self-diagnosis” for details (RS-30). Ensure entire SRS operates properly.

When SRS is not activated in the side collision:

- ① Check the SRS components and the related parts using the table shown below.
 - Replace any SRS components and the related parts showing visible signs of damage (dents, cracks, deformation).
- ② Conduct self-diagnosis using CONSULT, and “AIR BAG” warning lamp. Refer to “Self-diagnosis” for details (RS-30). Ensure entire SRS operates properly.

In the case of the side collision

Part	Side air bag is activated	SRS is NOT activated
Side air bag module (LH or RH)	REPLACE all parts of seat back with deployed side air bag module.	1. Check for visible signs of damage (dents, tears, deformation) of the seat back on the collision side. 2. If damaged—REPLACE the damaged seat parts with new bolts and remove the side air bag module. 3. Check for visible signs of damage (tears etc.) of the side air bag module. 4. Check harness and connectors for damage, and terminals for deformities. 5. If no damage is found, reinstall the side air bag module with new torx nuts coated with bonding agent. 6. If damaged—REPLACE the side air bag module with new torx nuts coated with bonding agent. Air bag must be deployed before disposing of it.
Satellite sensor (LH or RH)	REPLACE the satellite sensor on the collision side with new nuts. (Repair the center pillar inner, etc. before installing new one if damaged.)	1. Remove the satellite sensor on the collision side. Check harness connectors for damage, terminals for deformities, and harness for binding. 2. Check for visible signs of damage (dents, cracks, deformation) of the satellite sensor. 3. Install the satellite sensor to check fit. 4. If no damage is found, reinstall the satellite sensor with new nuts coated with bonding agent. 5. If damaged—REPLACE the satellite sensor with new nuts coated with bonding agent.
Diagnosis sensor unit	REPLACE the diagnosis sensor unit with the new bolts.	1. Check case and bracket for dents, cracks or deformities. 2. Check connectors for damage, and terminals for deformities. 3. If no damage is found, reinstall the diagnosis sensor unit with new special bolts and ground bolt coated with bonding agent. 4. If damaged—REPLACE the diagnosis sensor unit with new special bolts and ground bolt coated with bonding agent.
Seat belt pre-tensioner assembly	1. Check if the seat belt can be extended smoothly. If the seat belt cannot be extended smoothly. - Check for deformities of the center pillar inner. - If the center pillar inner has no damage, REPLACE the seat belt pre-tensioner assembly. 2. Remove the seat belt pre-tensioner assembly on the collision side. 3. Check for visible signs of damage (dents, cracks, deformation) of the seat belt pre-tensioner assembly. 4. If no damage is found, reinstall the seat belt pre-tensioner assembly with new bolts coated with bonding agent. 5. If damaged—REPLACE the seat belt pre-tensioner assembly with new bolts coated with bonding agent. The seat belt pre-tensioner assembly must be deployed before disposing of it.	

COLLISION DIAGNOSIS — Except for Single Air Bag System

Part	Side air bag is activated	SRS is NOT activated	
Seat with side air bag	REPLACE all parts of seat back (including seat back frame)	1. Visually check the seat on the collision side. 2. Remove the seat on the collision side and check the following for damage and deformities. ● Harness, connectors and terminals ● Frame and recliner, and also adjuster and slides 3. If no damage is found, reinstall the seat. 4. If damaged—REPLACE the damaged seat parts with new bolts.	GI MA EM
Center pillar inner	1. Check the center pillar inner on the collision side for damage (dents, cracks, deformation). 2. If damaged—REPAIR the center pillar inner.		LC
Trim	1. Check for visible signs of damage (dents, cracks, deformation) of the interior trim on the collision side. 2. If damaged—REPLACE the damaged trim parts.		EC
			FE
			CL
			MT
			AT
			FA
			RA
			BR
			ST
			RS
			BT
			HA
			EL
			IDX