

MAINTENANCE

Maintenance requirements	144
General maintenance	145
Does your vehicle need repairing?	148
Scheduled maintenance	149

MAINTENANCE REQUIREMENTS

Your Lexus vehicle has been designed to have fewer maintenance requirements with long service intervals to save both your time and money. However, each regular maintenance as well as day-to-day care is more important than ever before to ensure smooth, trouble-free, safe, and economical driving.

It is the owner's responsibility to make sure that the specified maintenance, including general maintenance services, is performed. Note that both the new vehicle and emission control system warranties specify that proper maintenance and care must be performed. See Owner's Guide or Warranty Booklet for complete warranty information.

General maintenance

General maintenance items are those day-to-day care practices that are important to your vehicle for proper operation. It is the owner's responsibility to ensure that the general maintenance items are performed regularly.

These checks or inspections can be done either by yourself or your Lexus dealer.

Scheduled maintenance

The scheduled maintenance items listed in this part are those required in servicing at regular intervals.

However, under severe driving conditions, a separate maintenance schedule that requires more frequent maintenance service should be practiced.

It is recommended that any replacement part used for maintenance or for the repair of the emission control system be Lexus supplied.

The owner may elect to use non-Lexus supplied parts for replacement purposes without invalidating the emission control system warranty. However, use of replacement parts which are not of equivalent quality may impair the effectiveness of the emission control system.

You may also elect to have maintenance, replacement, or repair of the emission control devices and system performed by any automotive repair establishment or individual without invalidating this warranty. See Owner's Guide or Warranty Booklet for complete warranty information.

Where to go for service?

Lexus technicians are well-trained specialists and are kept up to date with the latest service information through technical bulletins, service tips, and in-dealership training programs. They are well informed about the operation of all the systems on your vehicle.

You can be confident that your Lexus dealer's service department performs the best job to meet the maintenance requirements of your vehicle.

Your copy of the repair order is proof that all required maintenance has been performed for warranty coverage. And if any problems should arise with your vehicle while under warranty, your Lexus dealer will promptly take care of it. Again, be sure to keep a copy of the repair order for any service performed on your Lexus.

What about do-it-yourself maintenance?

Many of the maintenance items are easy to do yourself, if you have a little mechanical ability and a few basic automotive tools. Simple instructions for how to perform them are presented in Section 6.

If you are a skilled do-it-yourself mechanic, the Lexus service manuals are recommended. Please be aware that do-it-yourself maintenance can affect your warranty coverage. See your Owner's Guide or Warranty Booklet for the details.

GENERAL MAINTENANCE

Listed below are the general maintenance items that should be performed at the intervals specified. It is recommended that any problem you notice be brought to the attention of your Lexus dealer or the qualified service shop for their advice.

CAUTION:

Make these checks only where adequate ventilation can be obtained if you run the engine.

Outside the vehicle

Items listed below should be performed from time to time, unless otherwise specified.

Tires

Check the pressure with a gauge and adjust as shown on the tire pressure label. Check carefully for cuts, damage or excessive wear. See page 185 for additional information.

Wheel nuts

When checking the tires, make sure to check the nuts for looseness. Tighten them if necessary.

Tire rotation

Rotate the tires every 7500 miles (12000 km). See page 186 for additional information.

Windshield wiper blades

Check for wear or cracks whenever they do not wipe clean.

Fluid leaks

Check underneath for leaking fuel, oil, water or other fluid after the vehicle has been parked for a while. If you smell fuel fumes or notice any leak, have the cause found and corrected immediately.

Doors and engine hood

Check that all doors, including trunk lid, operate smoothly and all latches lock securely. Make sure the engine hood secondary latch secures the hood from opening when the primary latch is released.

Inside the vehicle

Items listed below should be checked regularly, e.g. while performing periodic services, cleaning the vehicle, etc.

Lights

Make sure that the headlights, stop lights, tail lights, turn signal lights, and other lights are all working. Check headlight aim.

Warning lights and buzzers

Check that all warning lights and buzzers function properly.

Horn

Make sure it works.

Windshield glass

Check that it is free from scratches, pits or abrasions.

Windshield wipers and washer

Check operation of the wipers and washer. Make sure that the wipers do not streak.

Windshield defroster

Check that the air comes out from the defroster outlet when operating the air conditioner.

Rear view mirror

Make sure that it is mounted securely.

Sun visors

Make sure that they move freely and are mounted securely.

Steering wheel

Check that it has the specified freeplay. See page 183 for additional information. Be alert for changes in steering condition, such as hard steering, excessive freeplay or strange noise.

Seats

Check that all front seat controls such as seat adjusters, seatback recliner, etc. operate smoothly and that all latches lock securely in any position. Check that the head restraints move up and down smoothly and that the locks hold securely in any latched position. For folding-down rear seatbacks, check that the latches lock securely.

Seat belts

Check that the seat belt system such as buckles, retractors and anchors operate properly and smoothly. Make sure that the belt webbing is not cut, frayed, worn or damaged.

Accelerator pedal

Check the pedal for smooth operation and uneven pedal effort or catching.

Clutch pedal

Check the pedal for smooth operation and that the pedal has the proper freeplay. See page 180 for additional information.

Brake pedal

Check the pedal for smooth operation and check that the pedal has the proper clearance and freeplay. Check the brake booster function. See page 181 for additional information.

Brakes

At a safe place, check that the brakes do not pull to one side when applied.

Parking brake

Check that the lever has the proper travel and that, on a safe incline, your vehicle is held securely with only the parking brake applied. See page 182 for additional information.

Automatic transmission “Park” mechanism

Check the lock release button of the selector lever for proper and smooth operation. On a safe incline, check that your vehicle is held securely with the selector lever in “P” position and all brakes released.

In the engine compartment

Items listed below should be checked from time to time, e.g. each time when refueling.

Windshield washer fluid

Make sure there is sufficient fluid in the tank. See page 202 for additional information.

Engine coolant level

Make sure that the coolant level is between the “FULL” and “LOW” lines on the see-through reservoir. See page 175 for additional information.

Radiator and hoses

Make sure that the front of the radiator is clean and not blocked with leaves, dirt or bugs. Check the hoses for cracks, kinks, rot and loose connections.

Battery electrolyte level

Check the electrolyte level of all battery cells is between upper and lower level lines on the case. Add only distilled water when replenishing. See page 195 for additional information.

Brake and clutch fluid levels

Make sure that the brake and clutch fluid levels are correct. See page 180 for additional information.

Engine drive belts

Check all belts for fraying, cracks, wear or oiliness.

Engine oil level

Check the level on the dipstick with the engine turned off and the vehicle parked on a level spot. See page 173 for additional information.

Power steering fluid level

Check the level through the reservoir. The level should be in the "HOT" or "COLD" range depending on the fluid temperature. See page 182 for additional information.

Automatic transmission fluid level

Check the level on the dipstick with the engine idling and the selector lever in "P". The level should be in the "HOT" or "COOL" range according to the fluid temperature. See page 184 for additional information.

Exhaust system

Look for cracks, holes and loose supports. If you notice any change in the sound of the exhaust or smell exhaust fumes, have the cause located and corrected immediately. (See engine exhaust cautions in Section 3-1.)

DOES YOUR VEHICLE NEED REPAIRING?

Be on the alert for changes in performance, sounds, and visual tip-offs that indicate service is needed. Some important clues are as follows :

- Engine missing, stumbling or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioner after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tire; excessive tire squeal when cornering; uneven tire wear
- Vehicle pulls to one side when driving straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness; spongy feeling brake or clutch pedal; pedal almost touches floor; vehicle pulls to one side when braking
- Engine temperature continually higher than normal

If you notice any of these clues, take your vehicle to your Lexus dealer as soon as possible. It probably needs adjustment or repair.

CAUTION:

Do not continue driving with the vehicle unchecked. It could result in serious vehicle damage and possibly personal injury.

SCHEDULED MAINTENANCE

Driving conditions under which you mainly operate your vehicle determine which maintenance schedule you follow.

In order to ensure smooth, trouble-free, safe and economical driving, Lexus provides two maintenance schedules to be selected according to your driving conditions: schedules A and B. The instructions on which schedule to follow are given on the next page.

The service interval for scheduled maintenance is determined by the odometer reading or the time interval, whichever comes first, shown in the schedule.


The maintenance services beyond the last period should be performed at the same intervals.

The service interval of each item can be obtained from the maintenance schedule.

Which schedule to follow?


If you mainly operate your vehicle under one or more of the severe conditions below:

- Towing a trailer, using a camper or car top carrier
- Operating on dusty, rough, muddy or salt-spread roads
- Repeated short trips less than 5 miles (8 km) and outside temperatures remain below freezing
- Extensive idling and/or low speed driving for a long distance such as police, taxi or door-to-door delivery use

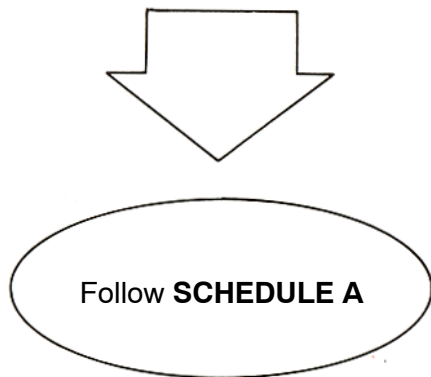

If you mainly operate your vehicle under:

CONDITIONS OTHER THAN THOSE LISTED ON THE LEFT

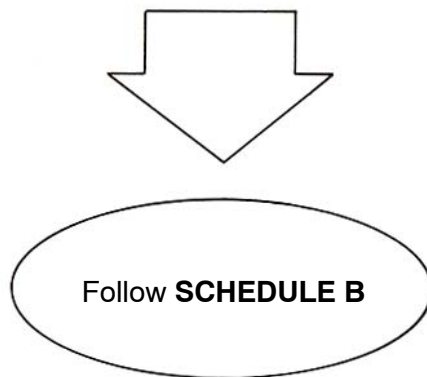

SCHEDULE A

Maintenance operations:

A = Check and adjust as necessary; I = Inspect and correct or replace as necessary; R = Replace, change or lubricate.

Service interval (Use odometer reading or months, whichever comes first.)	Maintenance services beyond 60,000 miles (96,000 km) should continue to be performed at the same intervals shown for each maintenance schedule.																		Months
	Miles x 1,000	1	3.75	7.5	11.25	15	18.75	22.5	26.25	30	33.75	37.5	41.25	45	48.75	52.5	56.25	60	
Maintenance items	km x 1,000	1.6	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	
ENGINE COMPONENTS AND EMISSION CONTROL SYSTEMS																			
Timing belt		See note (1)																	
Valve clearance																		A	A: Every 72 months
Drive belts		See note (2)																I	I: See note (2)
Engine oil and oil filter★			R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R: Every 6 months
Engine coolant		See note (3)												R					R: See note (3)
Exhaust pipes and mountings						I				I				I				I	I: Every 24 months
Air filter★		See note (4)		I	I	I	I	I	I	R	I	I	I	I	I	I	I	R	I: Every 6 months R: Every 36 months
Fuel line and connections		See note (5)								I								I	I: Every 36 months
Fuel tank cap gasket																		R	R: Every 72 months
Spark plugs																		R	R: Every 72 months
Charcoal canister																		I	I: Every 72 months

Maintenance services indicated by a star (★) are required under the terms of the Emission Control Systems Warranty. See Owner's Guide or Warranty Booklet for complete warranty information.

★ For vehicles sold in California

NOTE:

- If you operate your vehicle under conditions of extensive idling and/or low speed driving for a long distance such as police, taxi or door to door delivery use, replace every 60,000 miles (96,000 km).
- After 60,000 miles (96,000 km) or 72 months, inspect every 7,500 miles (12,000 km) or 12 months.
- After 45,000 miles (72,000 km) or 36 months, replace every 30,000 miles (48,000 km) or 24 months.
- Applicable when operating mainly on dusty roads. If not applicable, follow schedule B.
- Includes inspection of fuel tank band and vapor vent system.

MAINTENANCE

SCHEDULE A

Maintenance operations:

A = Check and adjust as necessary; I = Inspect and correct or replace as necessary; R = Replace, change or lubricate.

Service interval (Use odometer reading or months, whichever comes first.)	Maintenance services beyond 60,000 miles (96,000 km) should continue to be performed at the same intervals shown for each maintenance schedule.																		Months
	Miles x 1,000	1	3.75	7.5	11.25	15	18.75	22.5	26.25	30	33.75	37.5	41.25	45	48.75	52.5	56.25	60	
Maintenance items	km x 1,000	1.6	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	
CHASSIS AND BODY																			
Brake linings and drums			I		I		I		I		I		I		I		I		I: Every 12 months
Brake pads and discs			I		I		I		I		I		I		I		I		I: Every 12 months
Brake fluid	I				I					R			I					R	R: Every 36 months
Brake line pipes and hoses					I					I			I					I	I: Every 24 months
Steering linkage			I		I		I		I		I		I		I		I		I: Every 12 months
SRS airbag	After inspection at 10 years, inspect every 2 years.																		
Steering gear box See note (6)	I				I					I				I				I	I: Every 24 months
Ball joints, dust covers and drive shaft boots			I		I		I		I		I		I		I		I		I: Every 12 months
Automatic transmission, manual transaxle and differential	I				R					R				R				R	R: Every 24 months
Bolts and nuts on chassis and body See note (7)	I		I		I		I		I		I		I		I		I		I: Every 12 months
Body inspection (paint, corrosion)	I		I		I		I		I		I		I		I		I		I: Every 12 months
ROAD TEST	I		I		I		I		I		I		I		I		I		I: Every 12 months

NOTE:

- (6) Inspect the steering gear housing for oil leakage only.
 (7) Applicable when operating mainly on rough and/or muddy roads. If not, follow schedule B.

SCHEDULE B
Maintenance operations:

A = Check and adjust as necessary; I = Inspect and correct or replace as necessary; R = Replace, change or lubricate.

Service interval (Use odometer reading or months, whichever comes first.)	Maintenance services beyond 60,000 miles (96,000 km) should continue to be performed at the same intervals shown for each maintenance schedule.										Months
	Miles x 1,000	1	7.5	15	22.5	30	37.5	45	52.5	60	
Maintenance items	km x 1,000	1.6	12	24	36	48	60	72	84	96	
ENGINE COMPONENTS AND EMISSION CONTROL SYSTEMS											
Valve clearance										A	A: Every 72 months
Drive belt See note (1)										I	I: See note (1)
Engine oil and oil filter★			R	R	R	R	R	R	R	R	R: Every 12 months
Engine coolant See note (2)								R			R: See note (2)
Exhaust pipes and mountings						I				I	I: Every 36 months
Air filter★						R				R	R: Every 36 months
Fuel line and connections See note (3)						I				I	I: See note (3)
Fuel tank cap gasket										R	R: Every 72 months
Spark plugs										R	R: Every 72 months
Charcoal canister										I	I: Every 72 months

Maintenance services indicated by a star (★) are required under the Emission Control Systems Warranty. See Owner's Guide or Warranty Booklet for complete warranty information.

★ For vehicles sold in California

NOTE:

- (1) After 60,000 miles (96,000 km) or 72 months, inspect every 7,500 miles (12,000 km) or 12 months.
- (2) After 45,000 miles (72,000 km) or 36 months, replace every 30,000 miles (48,000 km) or 24 months.
- (3) Includes inspection of fuel tank band and vapor vent system.

MAINTENANCE

SCHEDULES

Maintenance operations:

A = Check and adjust as necessary; I = Inspect and correct or replace as necessary; R = Replace, change or lubricate.

Service interval (Use odometer reading or months, whichever comes first.)	Maintenance services beyond 60,000 miles (96,000 km) should continue to be performed at the same intervals shown for each maintenance schedule.										Months
	Miles x 1,000	1	7.5	15	22.5	30	37.5	45	52.5	60	
Maintenance items	km x 1,000	1.6	12	24	36	48	60	72	84	96	
CHASSIS AND BODY											
Brake linings and drums			I			I		I		I	I: Every 24 months
Brake pads and discs			I			I		I		I	I: Every 24 months
Brake fluid	I		I			R		I		R	R: Every 36 months
Brake line pipes and hoses			I			I		I		I	I: Every 24 months
Steering linkage			I			I		I		I	I: Every 24 months
SRS airbag	After inspection at 10 years, inspect every 2 years.										
Steering gear box See note (4)	I		I			I		I		I	I: Every 24 months
Ball joints, dust covers and drive shaft boots			I			I		I		I	I: Every 24 months
Automatic transmission, manual transaxle and differential	I		I			I		I		I	I: Every 24 months
Bolts and nuts on chassis and body	I		I			I		I		I	I: Every 24 months
Body inspection (paint, corrosion)	I	I	I	I	I	I	I	I	I	I	I: Every 12 months
ROAD TEST	I	I	I	I	I	I	I	I	I	I	I: Every 12 months

NOTE:

(4) Inspect the steering gear housing for oil leakage only.

Explanation of scheduled maintenance items

ENGINE COMPONENTS AND EMISSION CONTROL SYSTEMS

Timing belt

(Applicable to schedule A only.) When scheduled, replace the belt and inspect the ignition timing. A qualified technician must perform these operations.

Valve clearances

Adjust the valve clearances to factory specifications. A qualified technician should perform this operation.

Drive belts

Inspect the drive belts for cracks, excessive wear or oiliness. Replace belt if damaged. Check the belt tension and adjust if necessary.

Engine oil and oil filter

Change the engine oil and oil filter when scheduled. Use API grade SG engine oil only Multigrade and fuel-efficient oil is recommended. A qualified technician should perform this operation.

Engine coolant

Drain and flush the cooling system when scheduled. Refill only with an ethylene-glycol type coolant. A qualified technician should perform this operation.

Exhaust pipes and mountings

Visually inspect the exhaust pipes, muffler and hangers for cracks, deterioration, or damage. Start the engine and listen carefully for any exhaust gas leakage. Tighten connections or replace parts as necessary.

Air filter

Replace the air filter when scheduled. Do-it-yourself instructions are given on page 176. If you mainly operate your vehicle on dusty roads, additionally inspect and clean the air filter when scheduled. Visually check for dirt or damage. It may be cleaned with compressed air.

Fuel lines and connections

Visually inspect the lines, connections and tank band for corrosion, damage, cracks, and loose or leaking connections. Tighten connections or replace parts as necessary.

Fuel tank cap gasket

Make sure the new gasket is correctly installed.

MAINTENANCE

Spark plugs

Install new plugs of the same type as originally equipped. A qualified technician should perform this operation.

Charcoal canister

Inspect for internal damage or clogging. Clean with compressed air or replace if necessary. A qualified technician should perform this operation.

CHASSIS AND BODY

Brake linings and drums

Check for scoring, burning, leaking fluid, broken parts, and excessive wear. A qualified technician should perform this operation.

Brake pads and discs

Check the pads for excessive wear and discs for runout and wear, and leaking fluid. A qualified technician should perform this operation.

Brake and clutch fluids

Check for correct levels of the brake and clutch fluids. If the level is low, add FMVSS No. 116 DOT3 or SAE J1703 brake fluid to the brake or clutch reservoir. Change the brake and clutch fluids as scheduled. A qualified technician should perform these operations.

Brake line pipes and hoses

Visually check for proper installation. Check for chafing, cracks, deterioration, and any evidence of leaking. Replace any deteriorated or damaged parts immediately. A qualified technician should do these operations.

Steering linkage

With the vehicle stopped, check for excessive freeplay in the steering wheel. Check the linkage for bend or damage. Check the dust boots for deterioration, cracks, or damage. Replace any damaged parts.

Steering gear box

Inspect the steering gear box for signs of leakage. Should you discover any leakage, have the cause found and corrected/repared by a qualified technician immediately.

Drive shaft boots

Inspect the drive shaft boots for clamp looseness, grease leakage or damage. Replace any deteriorated or damaged parts immediately. A qualified technician should perform these operations.

Ball joints and dust covers

Check the suspension and steering linkage ball joints for looseness or damage. Check all dust covers for deterioration or damage. A qualified technician should perform these operations.

Automatic transmission, manual transaxle and differential

Inspect each component for signs of leakage. Should you discover any leakage, have the cause found and corrected/repared by a qualified technician immediately. Under severe driving conditions, change the fluid and oil when scheduled.

SRS airbag

This should be periodically inspected by a qualified technician.

Bolts and nuts on chassis and body

Where necessary, retighten to specified torque.

Body inspection (paint, corrosion)

Visually check for corrosion, scratches and other damage. Check body outer panels, underneath the vehicle, inner panels of the hood and doors, etc. Apply touch-up paint to any chips or scratches, or have them repaired by a qualified technician.

ROAD TEST

While driving the vehicle, check the proper operation of engine, transmission, brakes and steering, and check for abnormal noise or vibration from any part of the vehicle.