

POWER SOURCE LOCATION

6804U-01

ENGINE:**3ZZ-FE:****1ZZ-FE:****2AZ-FSE:****1AZ-FSE:****1AZ-FE:**

Engine Room No.2 Relay Block

Engine Room Relay Block

Engine Room No.3 Relay Block

w/o Discharge headlamp:

Headlamp Cleaner Control Relay

w/ Discharge headlamp:

Headlamp Cleaner Control Relay Assy

ENGINE:**1CD-FTV:**

Engine Room No.2 Relay Relay

Glow Plug Relay Assy

Engine Room No.3 Relay Block

Engine Room Relay Block

w/o Discharge headlamp:

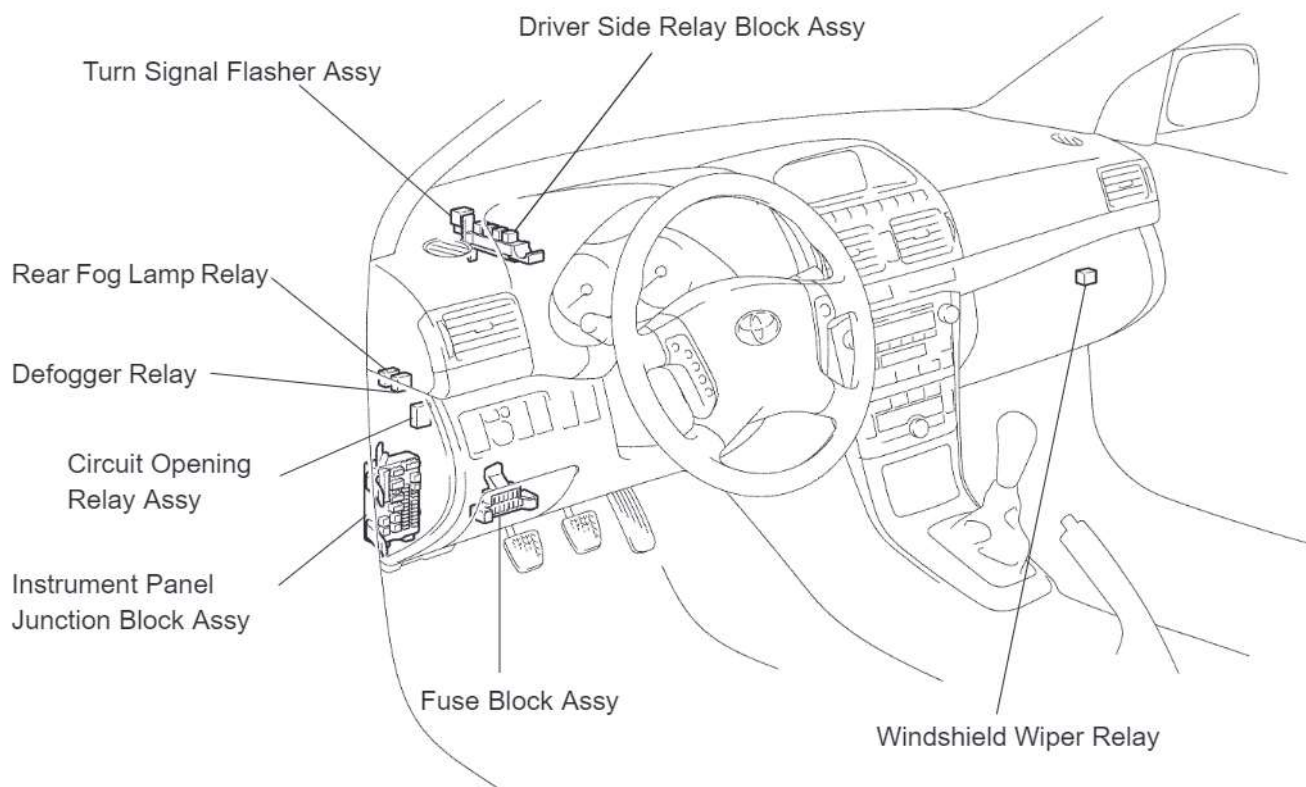
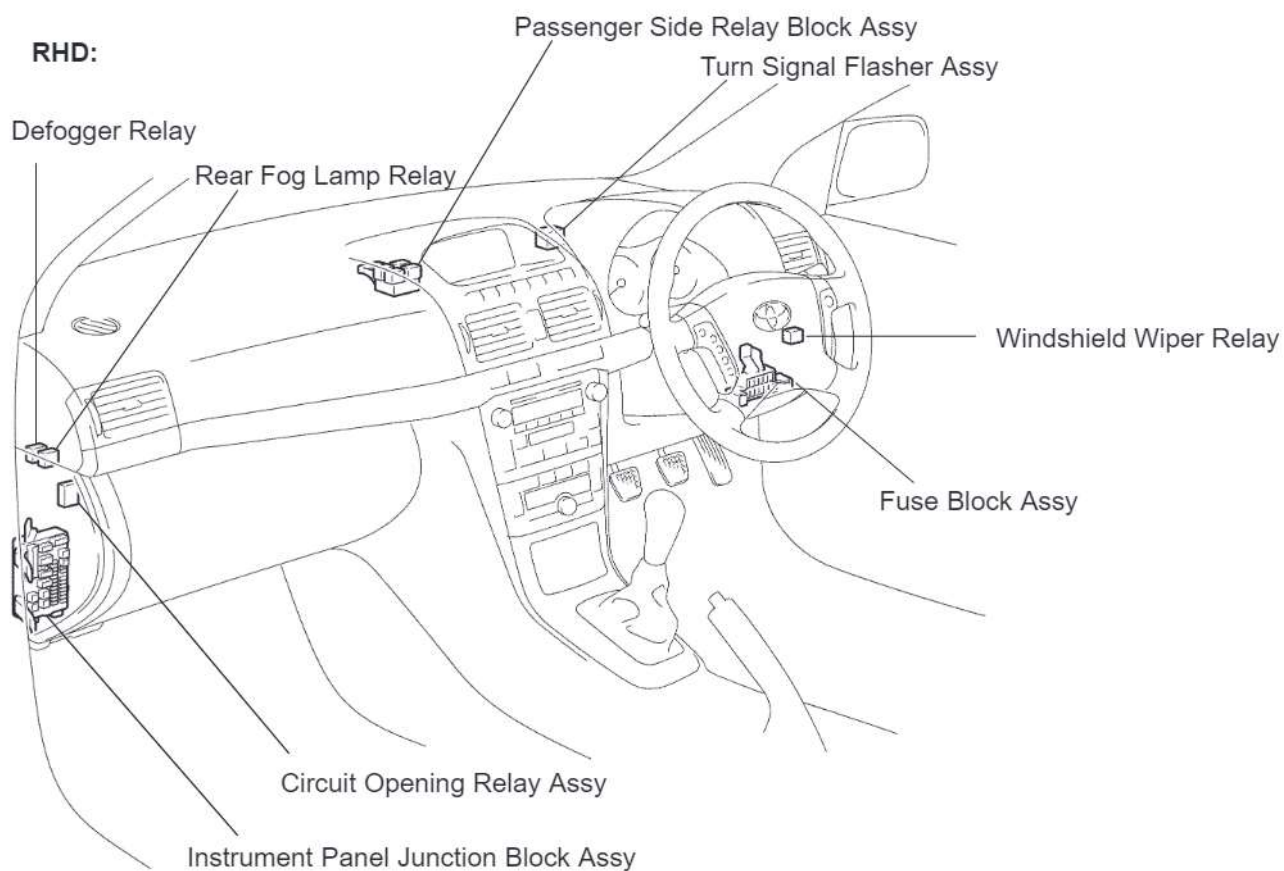
Headlamp Cleaner Control Relay

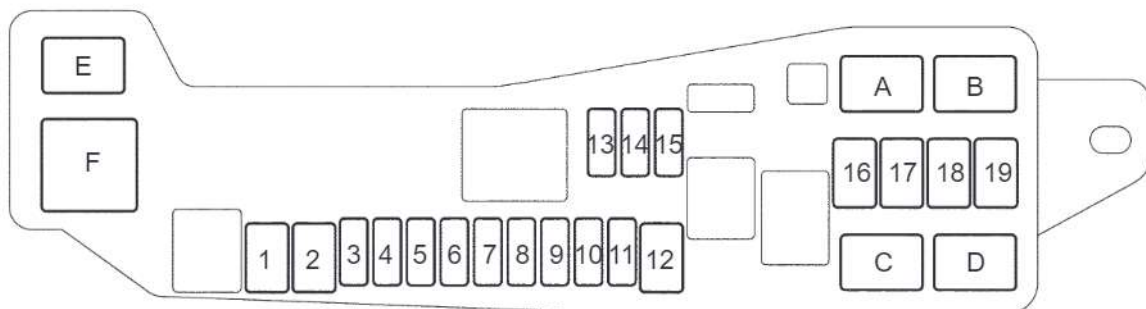
w/ Discharge headlamp:

Headlamp Cleaner Control Relay Assy

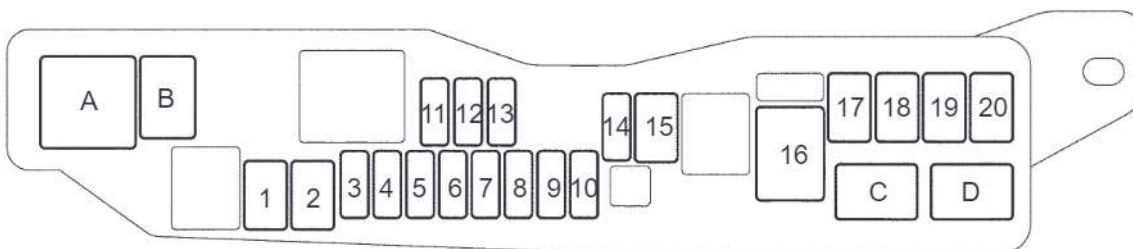
P

I35269

LHD:**RHD:**

ENGINE:**3ZZ-FE:****1ZZ-FE:****2AZ-FSE:****1AZ-FSE:****1AZ-FE:****Engine Room Relay Block****RELAY****FUSE**

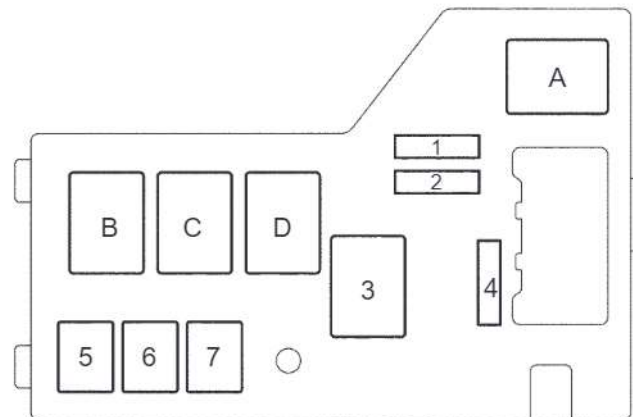
A. FAN No.2	1. EMPS	50A	6. HAZARD	10A	11. AM2	30A	16. RR DEF	30A
B. FAN No.1	2. -		7. ALT-S	7.5A	12. MAIN	40A	17. HTR	40A
C. FAN No.3	3. A/F	20A	8. IG2	15A	13. -		18. RDI	30A
D. -	4. THROTTLE	10A	9. EFI	20A	14. -		19. CDS	30A
E. -	5. HORN	15A	10. DCC	30A	15. -			
F. EMPS								

ENGINE:**1CD-FTV:****Engine Room Relay Block****RELAY****FUSE**

A. FAN No.1	1. MAIN	40A	6. F-HTR	25A	11. -	16. RDI	40A
B. FAN No.3	2. RR DEF	30A	7. HAZARD	10A	12. -	17. CDS	30A
C. EDU	3. PWR HTR	25A	8. AM2	30A	13. -	18. HTR	40A
D. EFI MAIN	4. EFI	20A	9. DCC	30A	14. *1	19. H/CLN	30A
	5. HORN	15A	10. ALT-S	7.5A	15. *2	20. AM1 No.1	50A

*1 VSC 25A (w/ VSC)
ABS 25A (w/o VSC)

*2 VSC 50A (w/ VSC)
ABS 40A (w/o VSC)

ENGINE:**3ZZ-FE:****1ZZ-FE:****2AZ-FSE:****1AZ-FSE:****1AZ-FE:****Engine Room No.2 Relay Block****RELAY**

- A. INJ
- B. A/F
- C. IG2
- D. EFI

FUSE

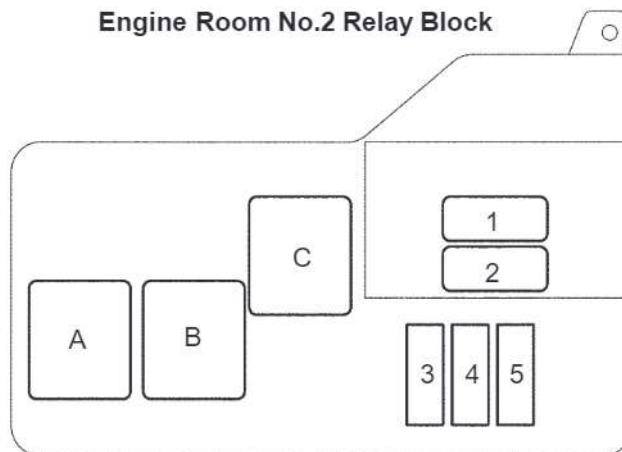
- 1. EFI No.1 10A
- 2. EFI No.2 7.5A
- 3. *1
- 4. *2
- 5. H-LP CLN 30A
- 6. AM1 No.1 50A
- 7. *3

*1 ALT 120A
2AZ-FSE
1AZ-FSE
1AZ-FE

ALT 100A
3ZZ-FE
1ZZ-FE

*2 VSC 25A (w/ VSC)
ABS 25A (w/o VSC)

*3 VSC 50A (w/ VSC)
ABS 40A (w/o VSC)

ENGINE:
ICD-FTV:**Engine Room No.2 Relay Block****RELAY**

- A. HTR1
- B. HTR2
- C. HTR3

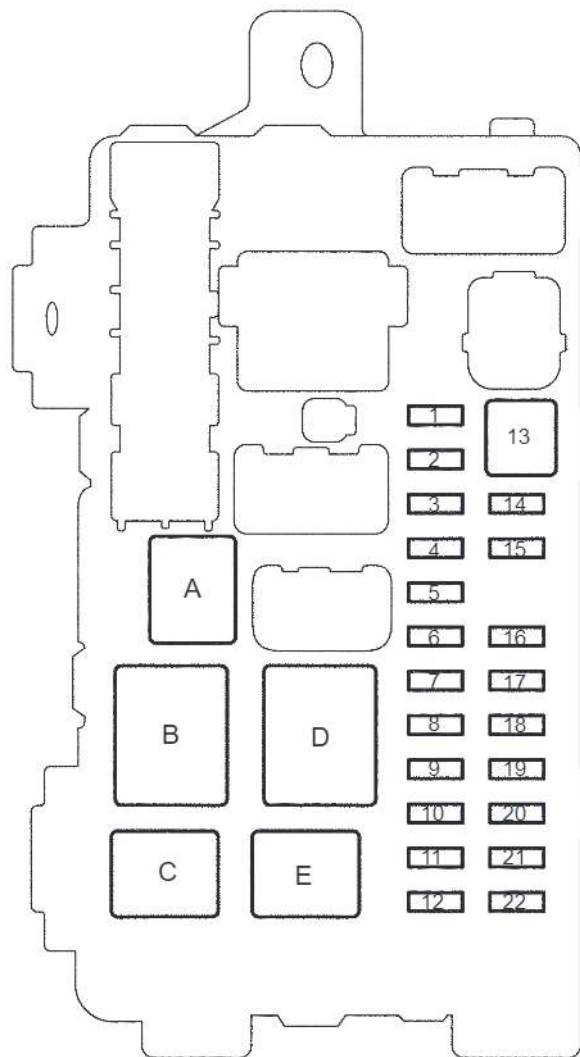
FUSE

- 1. ALT 140A
- 2. GLOW 80A
- 3. HTR1 50A
- 4. HTR2 50A
- 5. HTR3 50A

Instrument Panel Junction Block Assy

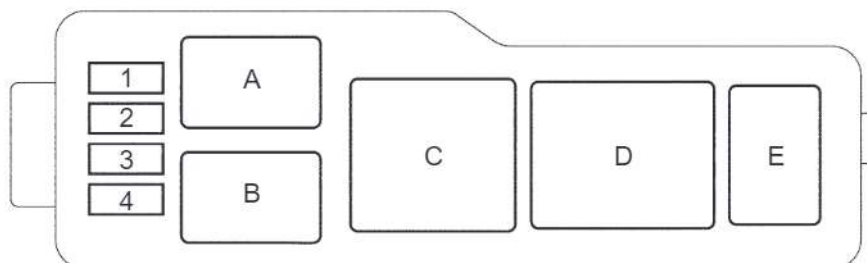
RELAY

- A. -
 B. HTR
 C. SEAT HTR
 D. IG1
 E. TAIL

**FUSE**

- | | |
|--------------|------|
| 1. IGN | 10A |
| 2. S/ROOF | 20A |
| 3. RR FOG | 7.5A |
| 4. FR FOG | 7.5A |
| 5. AM1 | 25A |
| 6. PANEL | 7.5A |
| 7. RR WIP | 20A |
| 8. GAUGE2 | 7.5A |
| 9. CIG | 15A |
| 10. HTR | 10A |
| 11. - | |
| 12. RAD No.1 | 7.5A |
| 13. PWR SEAT | 30A |
| 14. TAIL | 10A |
| 15. OBD2 | 7.5A |
| 16. P/POINT | 15A |
| 17. DOOR | 25A |
| 18. WIP | 25A |
| 19. EGU-IG | 7.5A |
| 20. S-HTR | 20A |
| 21. GAUGE1 | 10A |
| 22. STOP | 15A |

Engine Room Relay No.3 Block

**RELAY**

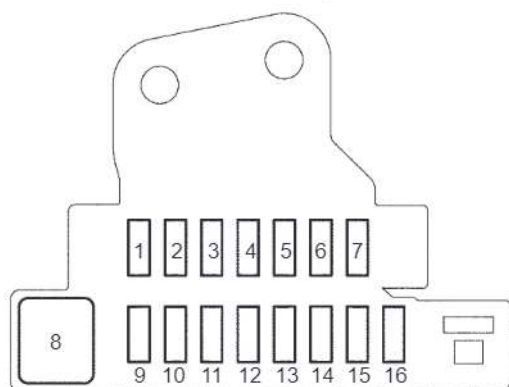
- A. HORN
 B. F-HTR
 C. H-LP
 D. DIM
 E. FAN No.2

FUSE

- | | |
|---------------|-----|
| 1. H-LP HI LH | 10A |
| 2. H-LP HI RH | 10A |
| 3. H-LP LH | 15A |
| 4. H-LP RH | 15A |

LHD:

Fuse Block Assy



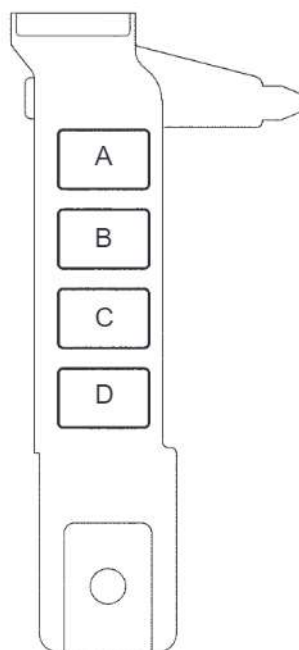
FUSE

1. —		6. DOME	7.5A	11. P-FR P/W	20A
2. DEF I/ UP	7.5A	7. ECU-B2	7.5A	12. D-RR P/W	20A
3. ST	7.5A	8. PWR SEAT	30A	13. D-FR P/W	20A
4. MIR HTR	7.5A	9. —		14. ECU-B1	7.5A
5. RAD No.2	15A	10. P-RR P/W	20A	15. FUEL OPN	10A
				16. FR DIC	20A

Drive Side Relay Block Assy

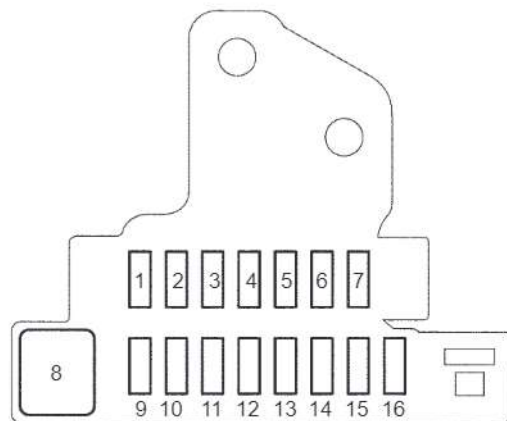
RELAY

- A. ST
- B. FR FOG
- C. P/POINT
- D. FR DEICER



RHD:

Fuse Block Assy



FUSE

1. -		6. DOME	7.5A	11. D-FR P/W	20A
2. DEF I/ UP	7.5A	7. ECU-B2	7.5A	12. P-RR P/W	20A
3. ST	7.5A	8. PWR SEAT	30A	13. P-FR P/W	20A
4. MIR HTR	10A	9. -		14. ECU-B1	7.5A
5. RAD No.2	15A	10. P-RR P/W	20A	15. FUEL OPN	10A
				16. FR DIC	20A

Passenger Side Relay Block Assy

RELAY

- A. P/POINT
- B. FR FOG
- C. ST
- D. FR DEICER

