




Antenna in Antenna

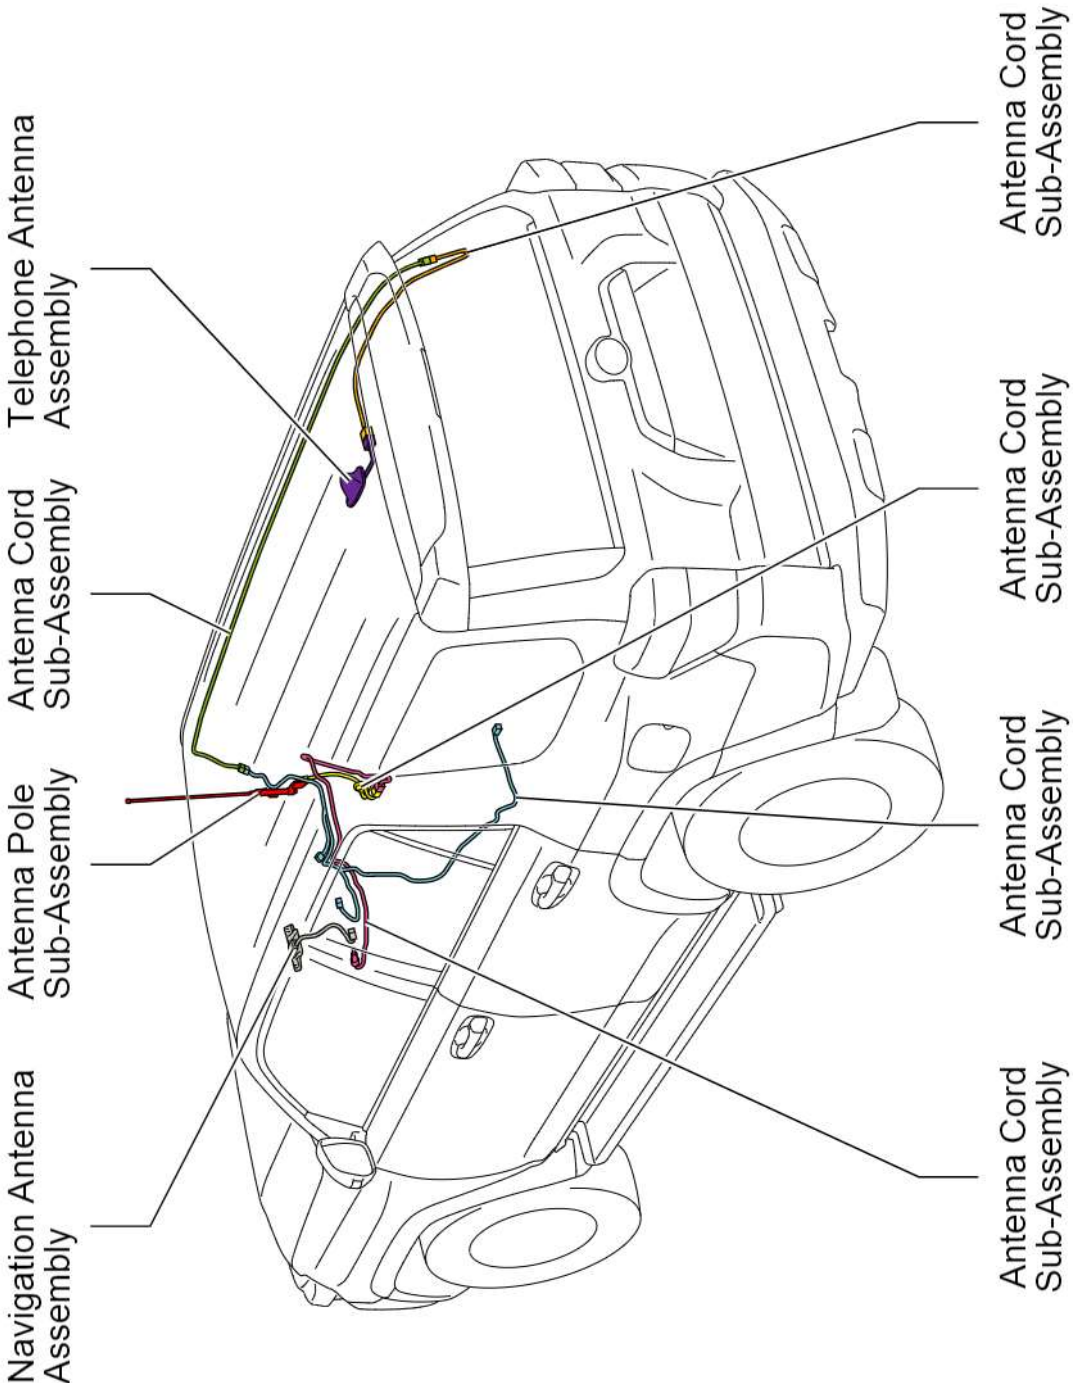


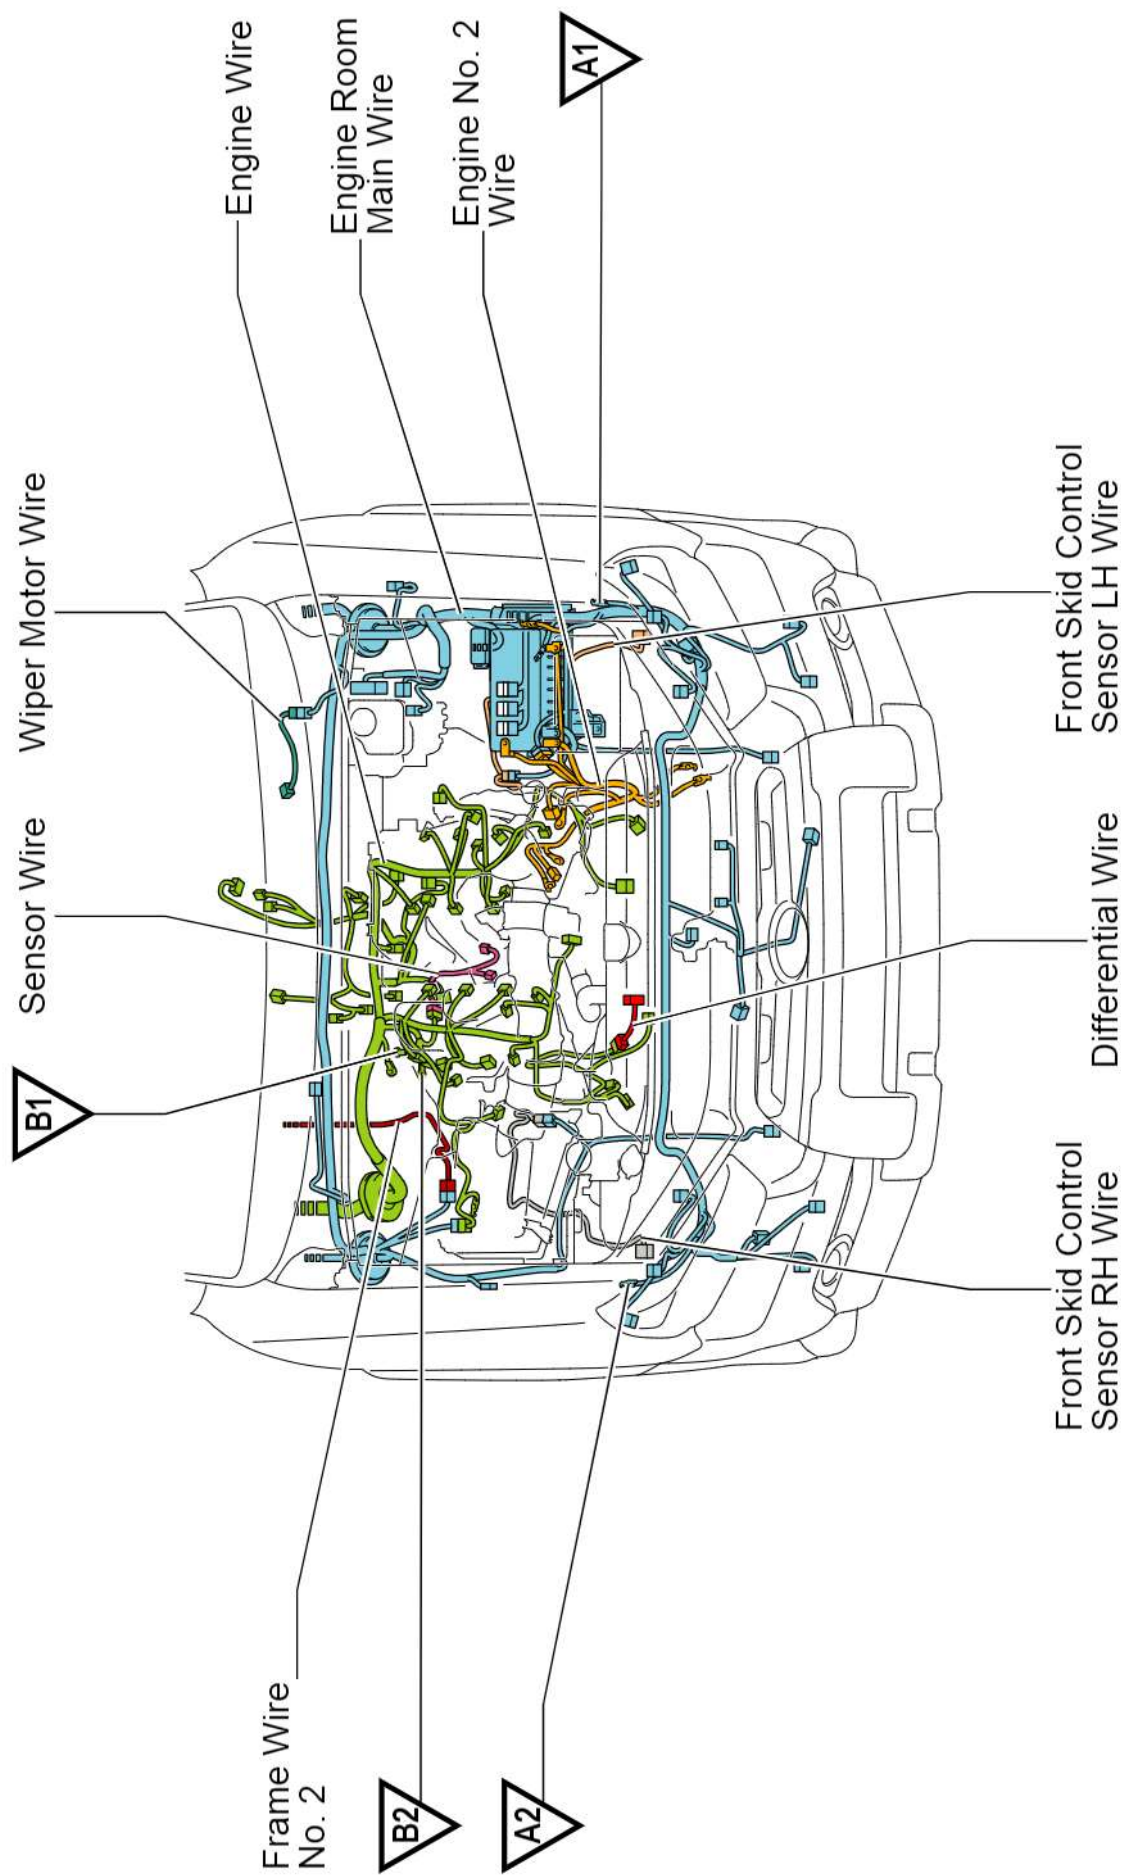

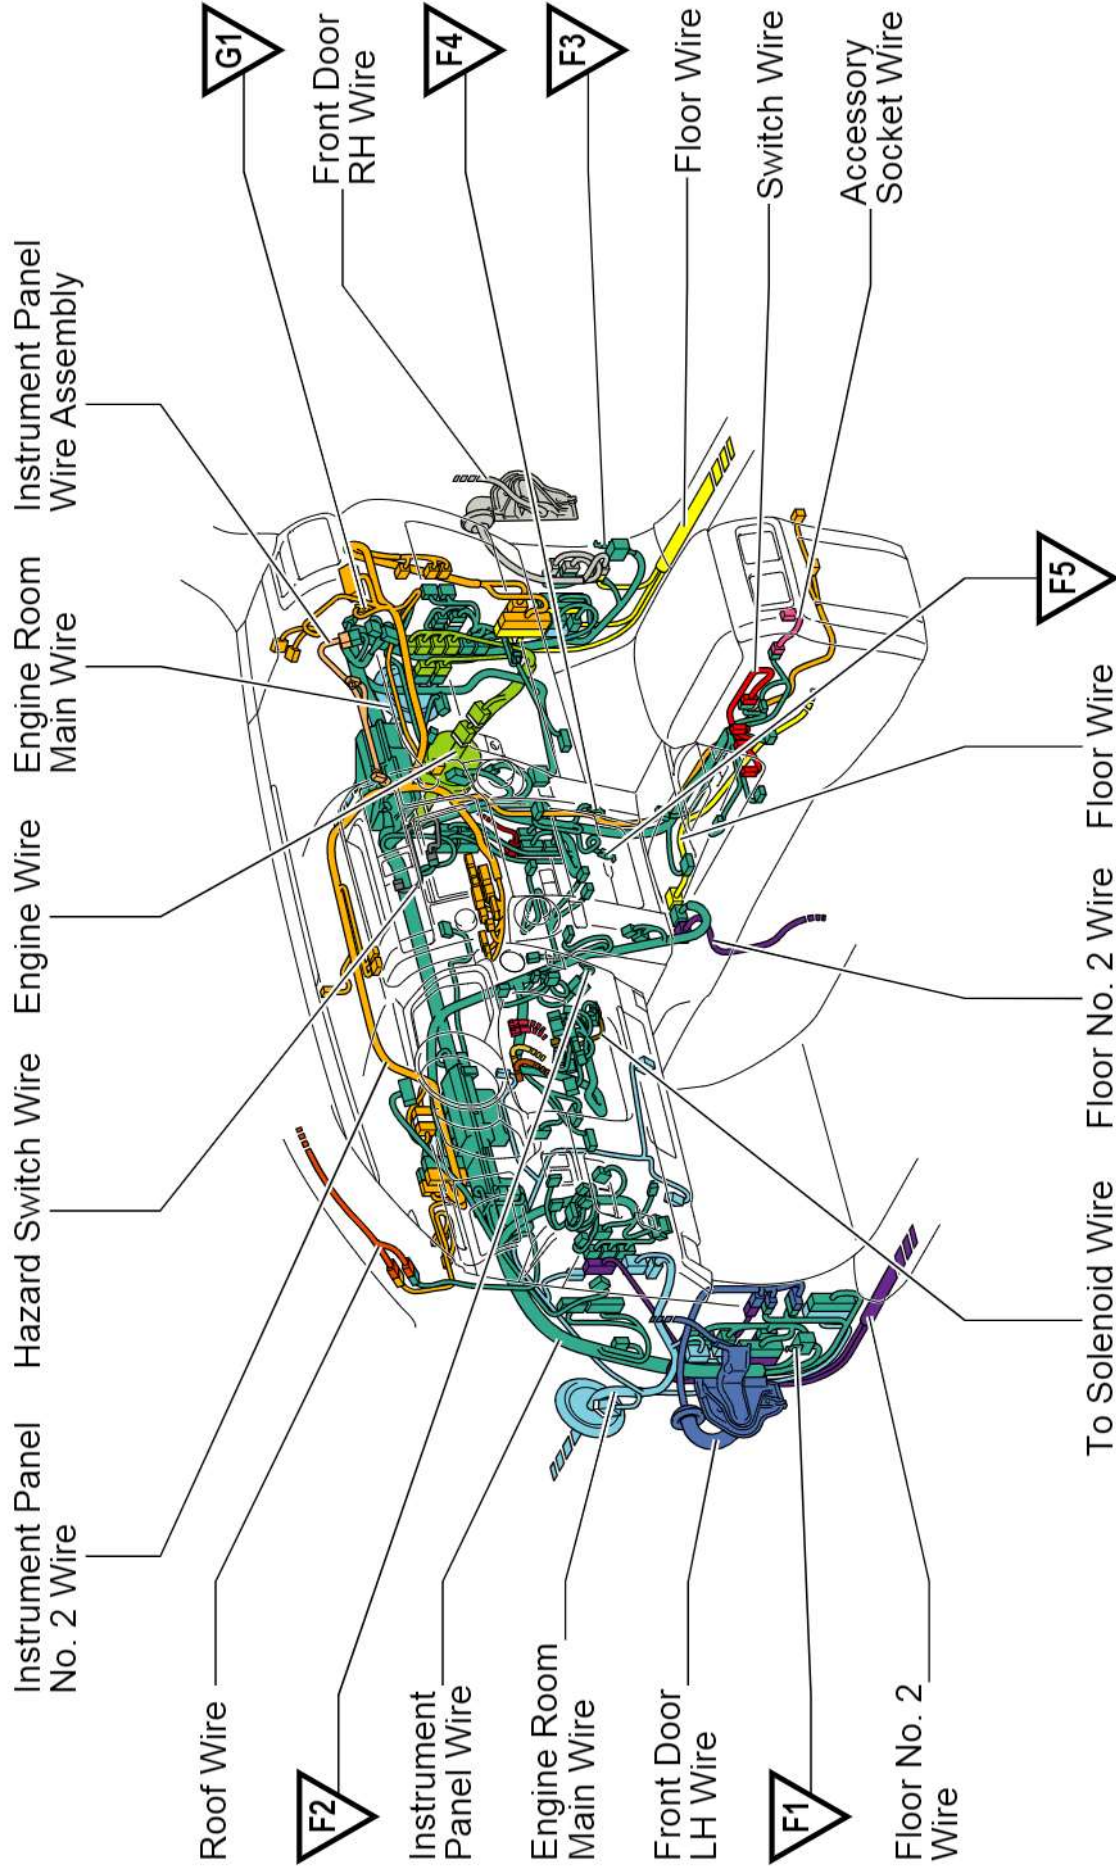




Position of Parts in Body

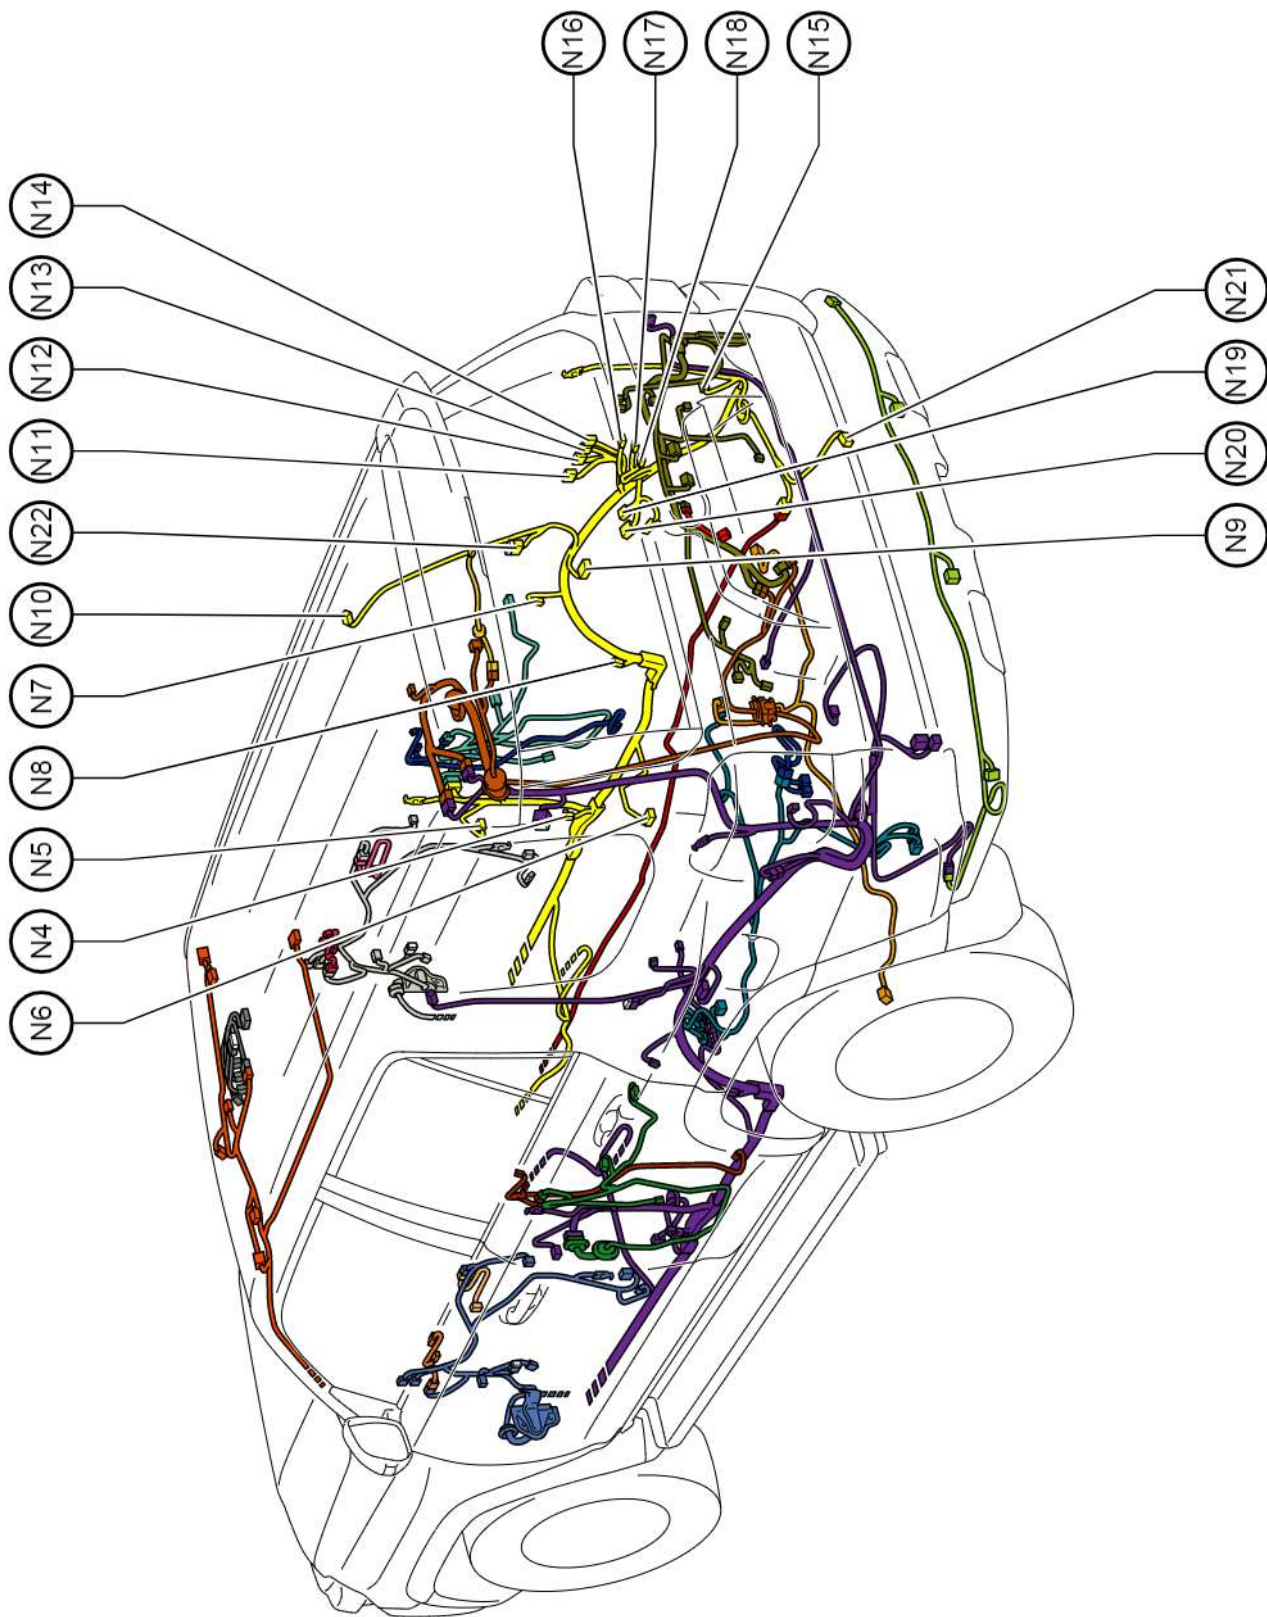


N 4	Front Seat Outer Belt Assembly RH
N 5	Front Door Courtesy Light Switch Assembly RH
N 6	Rear Floor Side Airbag Sensor
N 7	Rear Door Courtesy Light Switch Assembly RH
N 8	Diode (Rear Door Courtesy Switch RH)
N 9	Rear Airbag Sensor RH
N 10	Curtain Shield Airbag Assembly RH
N 11	Stereo Component Amplifier Assembly
N 12	Stereo Component Amplifier Assembly
N 13	Stereo Component Amplifier Assembly
N 14	Stereo Component Amplifier Assembly
N 15	No. 1 with Box Speaker Assembly
N 16	Rear Power Point Socket Assembly
N 17	Rear Power Point Socket Assembly
N 18	Power Outlet Socket
N 19	Voltage Inverter Assembly
N 20	Voltage Inverter Assembly
N 21	Outside Luggage Electrical Key Antenna
N 22	Junction Connector

Position of Parts in Body

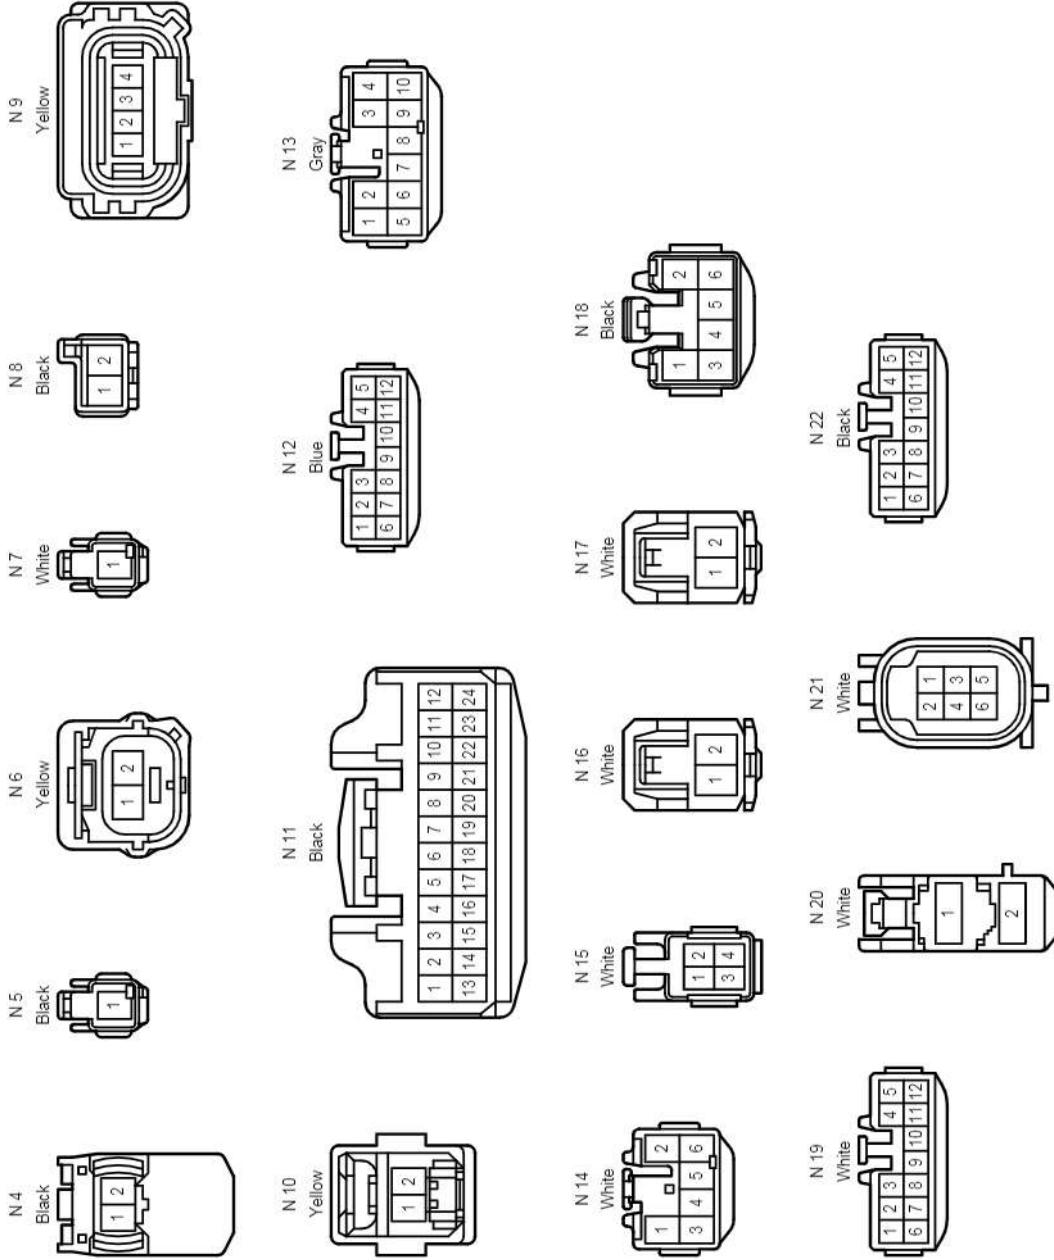


Position of Parts in Body


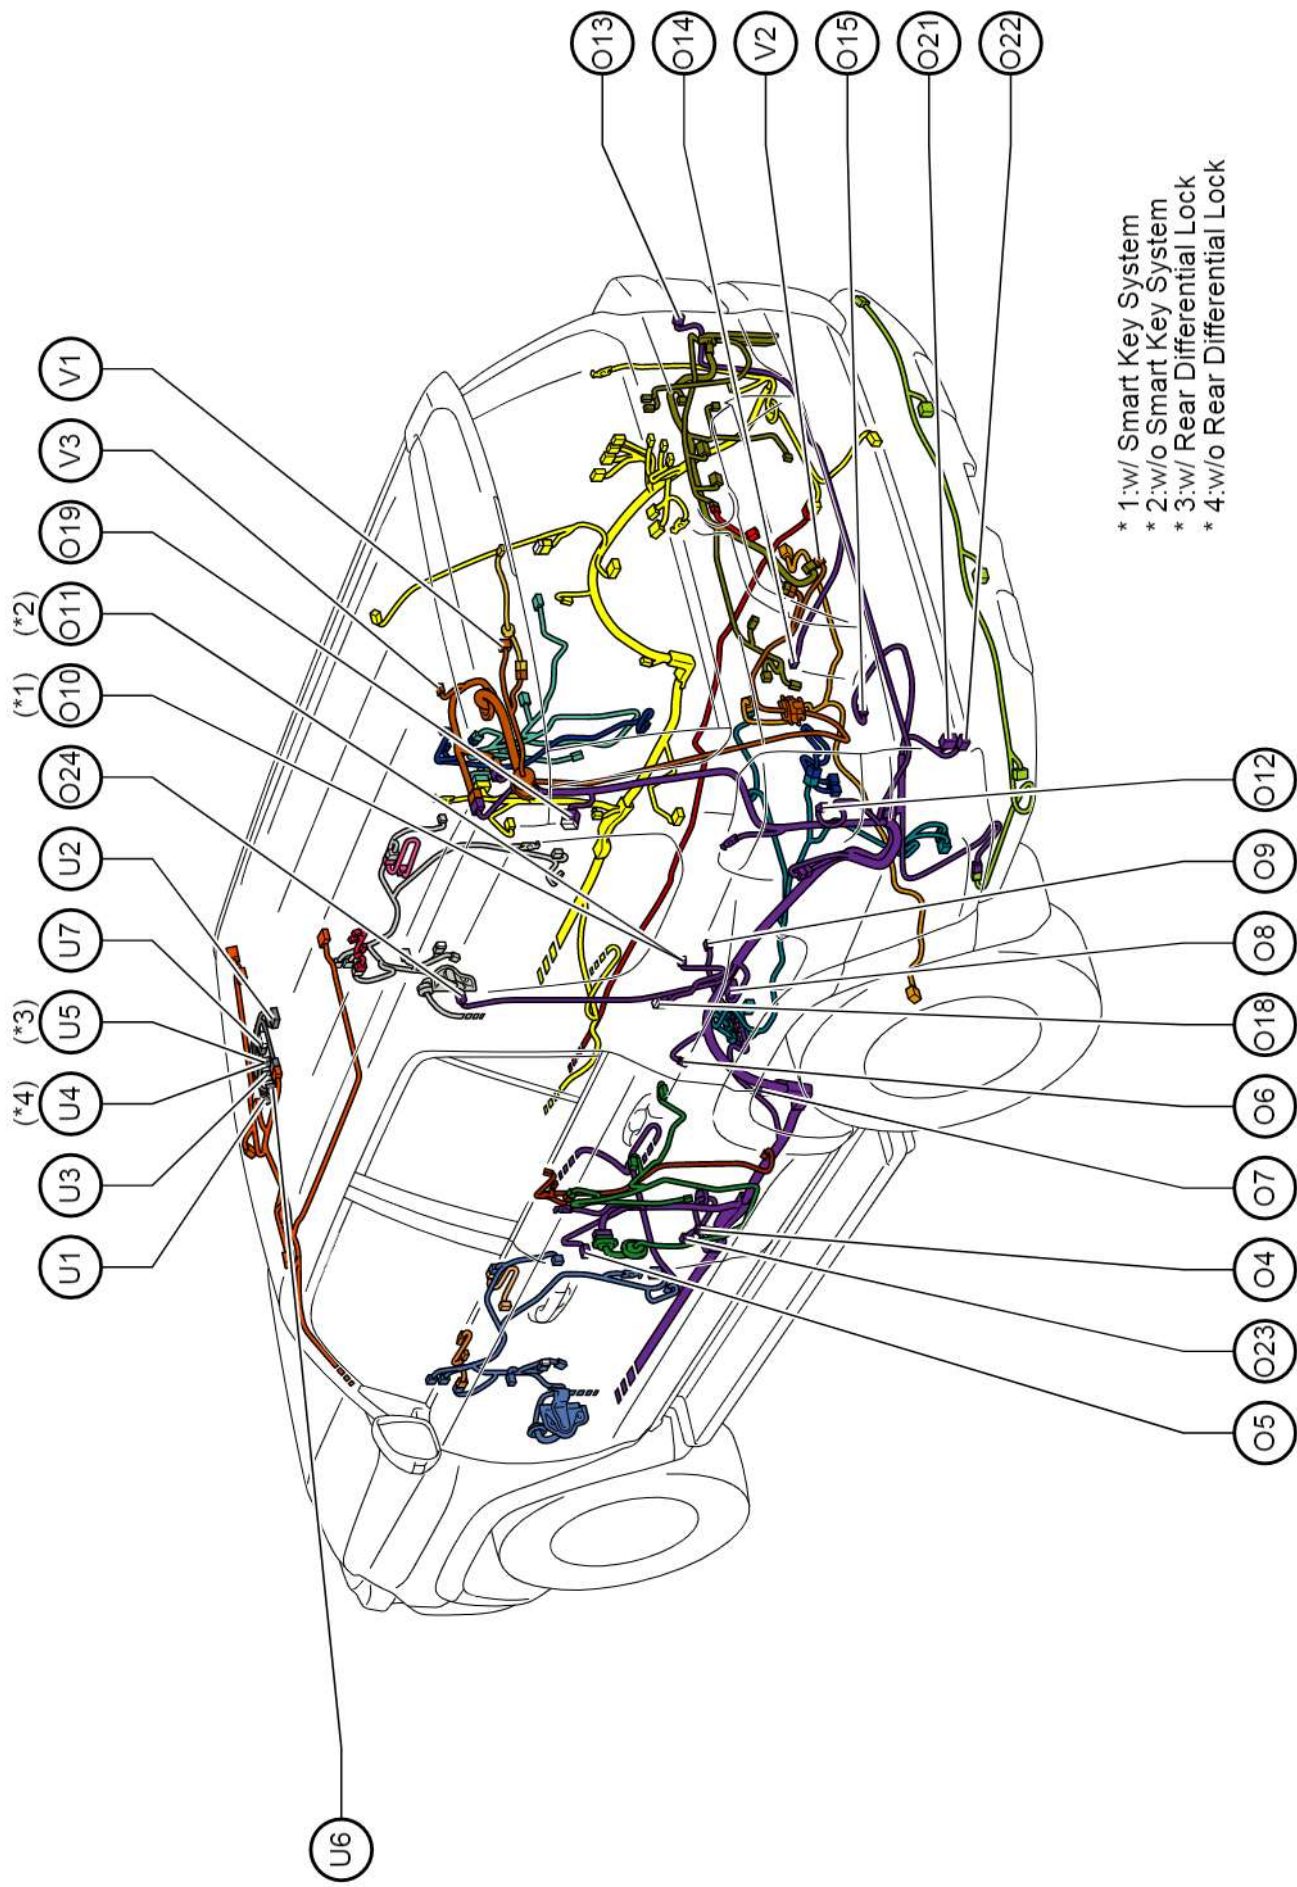


- * 1:w/ Smart Key System
- * 2:w/o Smart Key System
- * 3:w/ Rear Differential Lock
- * 4:w/o Rear Differential Lock


O	4	Front Seat Outer Belt Assembly LH
O	5	Front Door Courtesy Light Switch Assembly LH
O	6	Rear Door Courtesy Light Switch Assembly LH
O	7	Diode (Rear Door Courtesy Switch LH)
O	8	Rear Airbag Sensor LH
O	9	Rear Indoor Electrical Key Antenna Assembly
O	10	Door Control Receiver
O	11	Door Control Receiver
O	12	Rear Combination Light Assembly LH
O	13	Rear Combination Light Assembly RH
O	14	Indoor Luggage Compartment Electrical Key Antenna Assembly
O	15	Canister Pump Module
O	18	Junction Connector
O	19	Junction Connector
O	21	Option Connector (Towing Socket)
O	22	Option Connector (Towing Socket)
O	23	Stabilizer Control with Accumulator Housing Assembly
O	24	Curtain Shield Airbag Assembly LH
U	1	Drive Monitor Switch
U	2	Map Light Assembly
U	3	Traction Control Switch
U	4	Downhill Assist Control Switch
U	5	Differential Lock Switch
U	6	VSC Off Switch
U	7	Junction Connector
V	1	Rear Wiper Motor and Bracket Assembly
V	2	Multiplex Network Door ECU
V	3	Tire Pressure Warning Antenna and Receiver

Position of Parts in Body

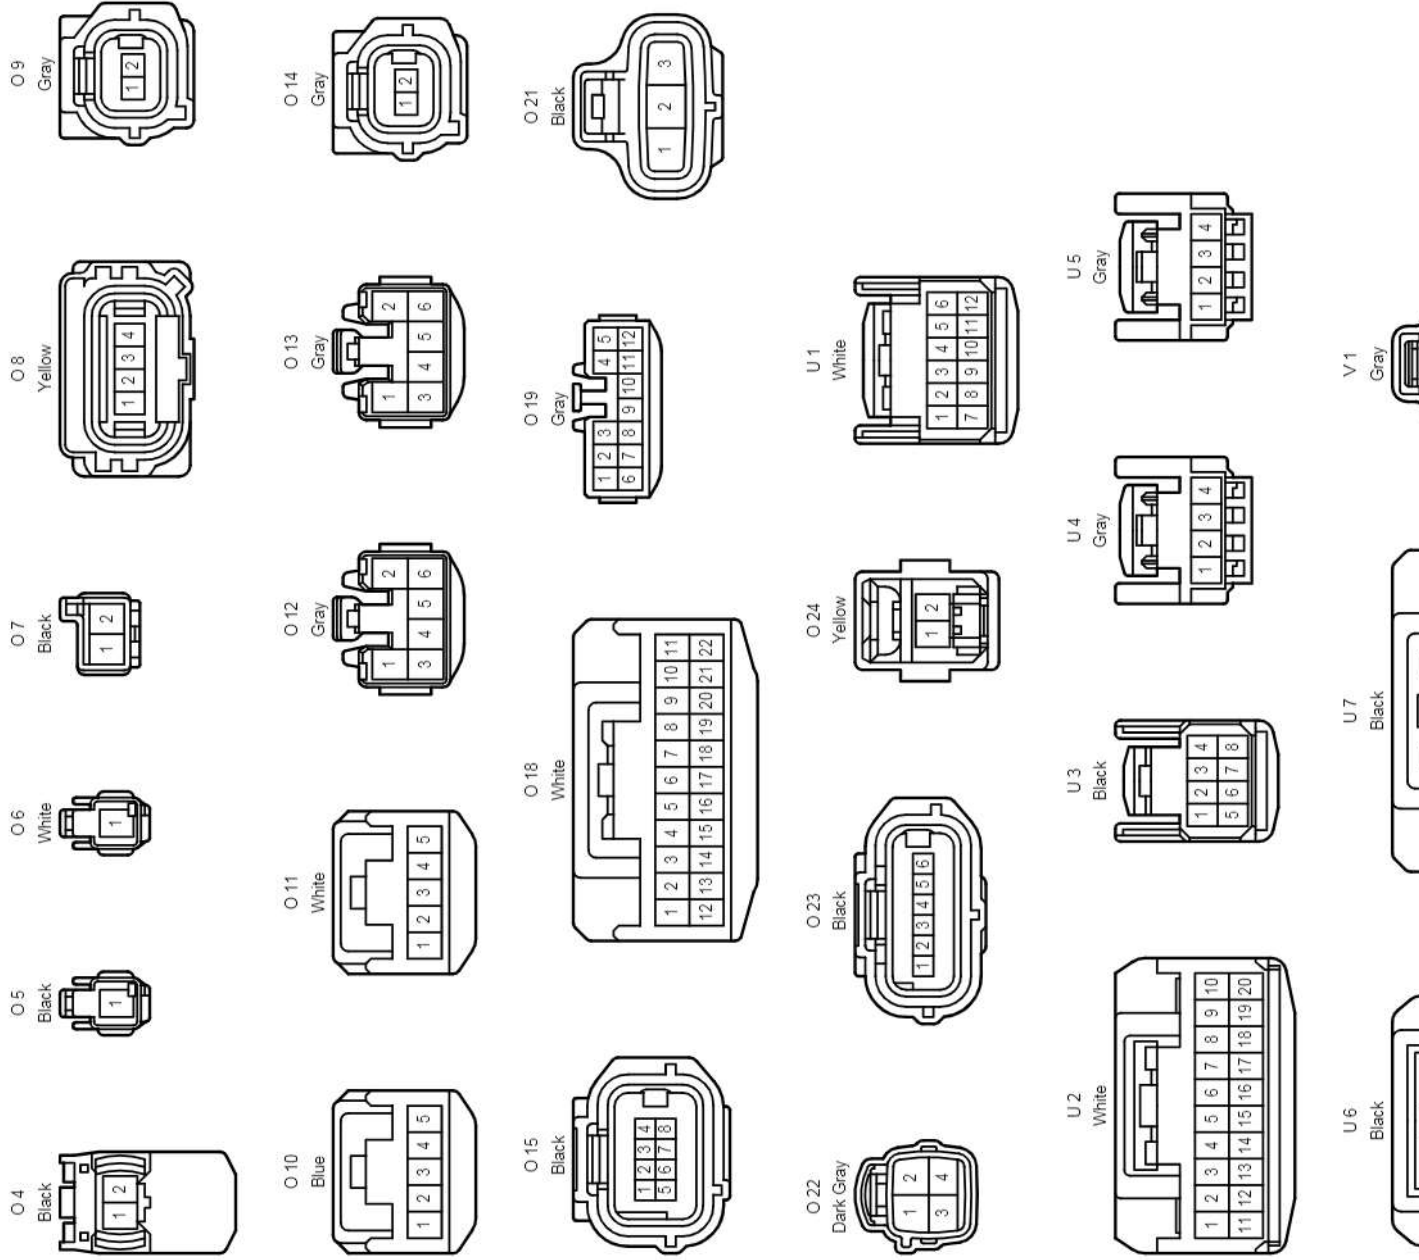

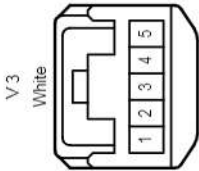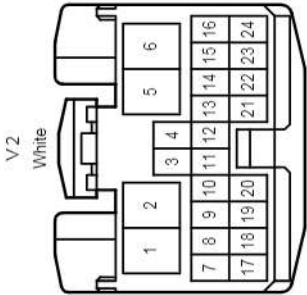

Position of Parts in Body


















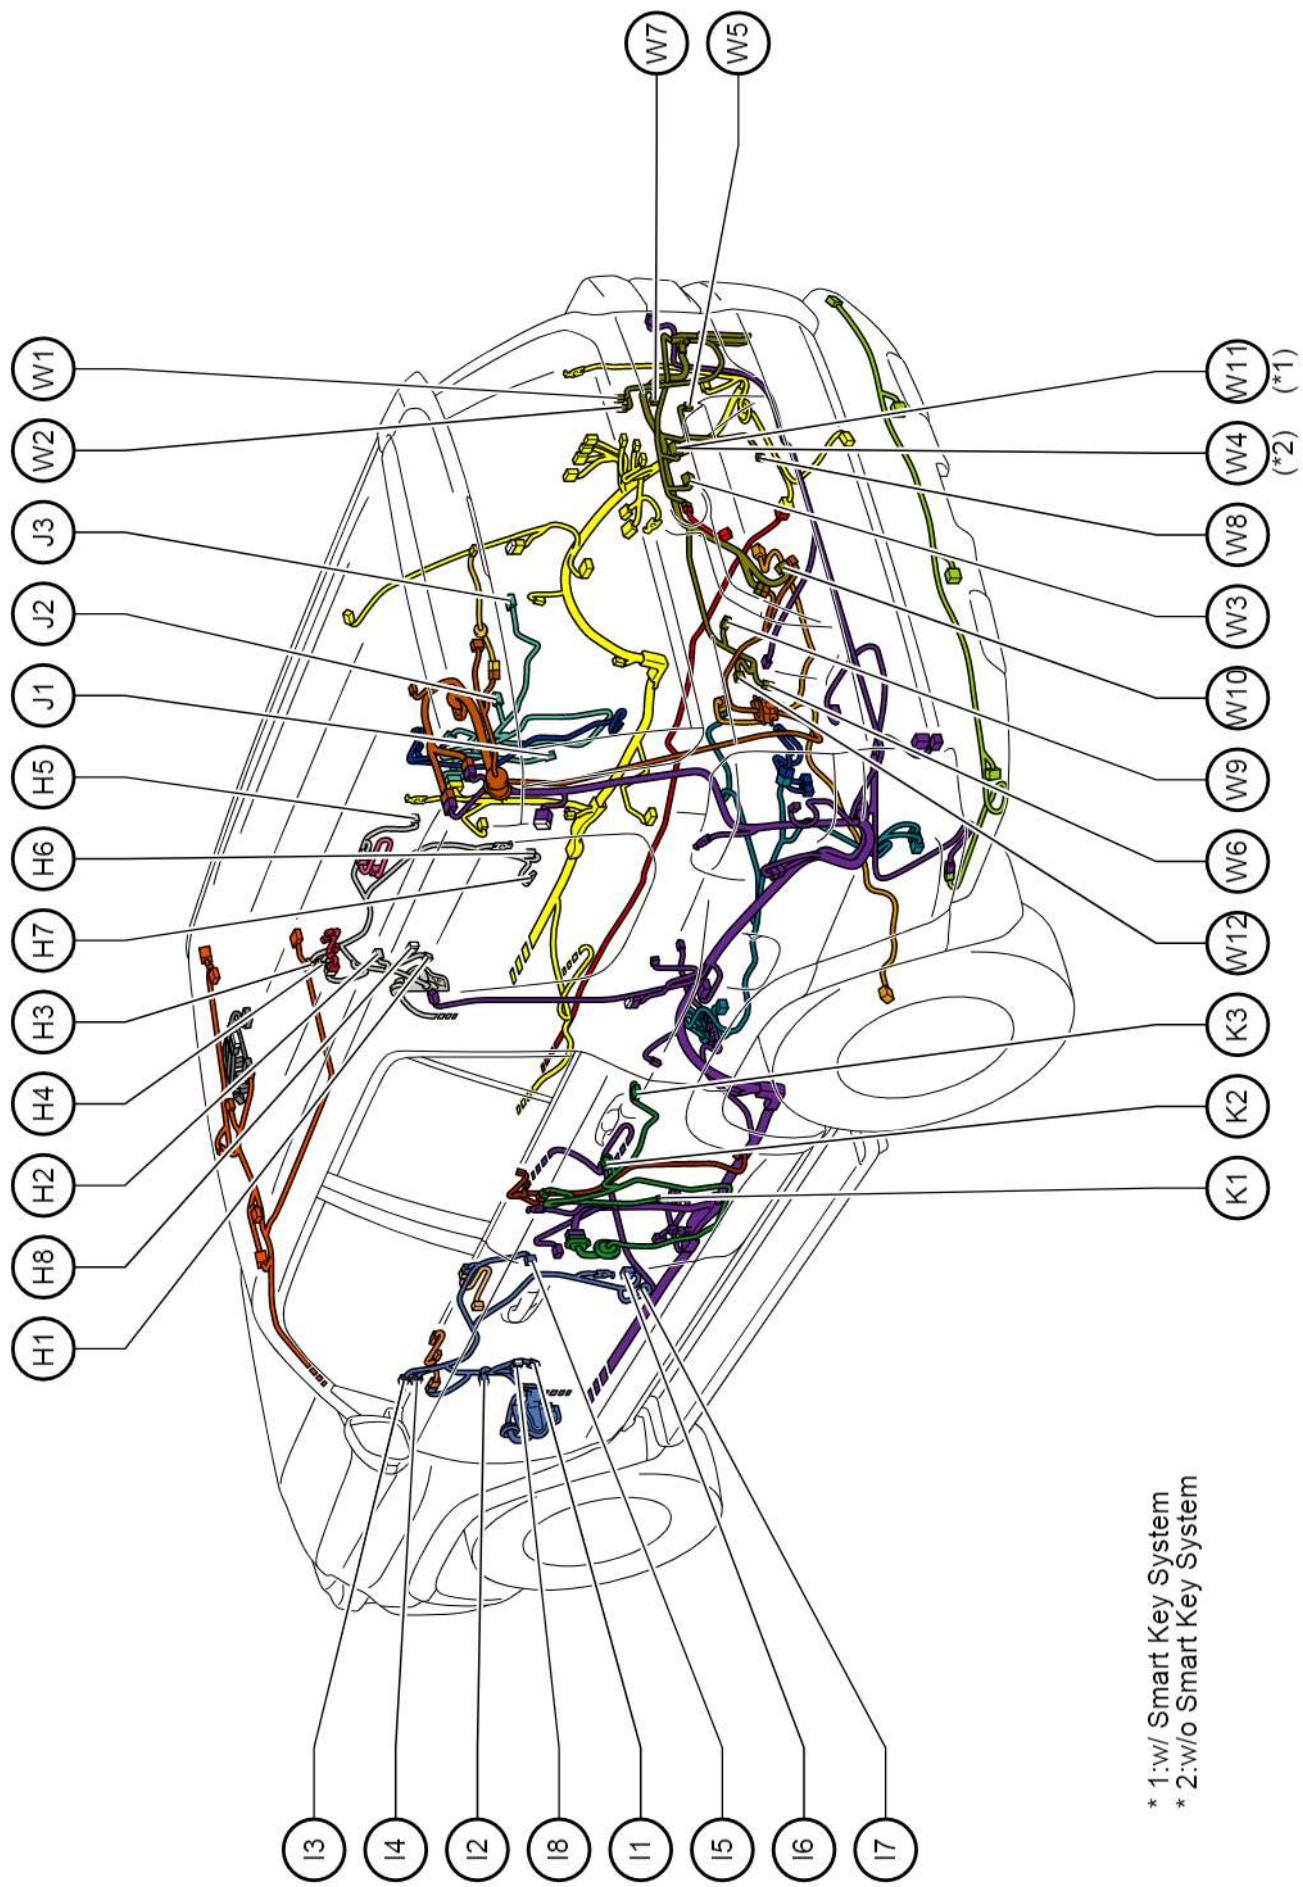


* 1:w/ Smart Key System
* 2:w/o Smart Key System

Position of Parts in Body










H	1	Front No. 1 Speaker Assembly RH
H	2	Front Power Window Regulator Motor Assembly RH
H	3	Outer Rear View Mirror Assembly RH
H	4	Outer Rear View Mirror Assembly RH
H	5	Front Door with Motor Lock Assembly RH
H	6	Door Side Airbag Sensor Assembly RH
H	7	Front Door Courtesy Light Assembly RH
H	8	Junction Connector
I	1	Front No. 1 Speaker Assembly LH
I	2	Front Power Window Regulator Motor Assembly LH
I	3	Outer Rear View Mirror Assembly LH
I	4	Outer Rear View Mirror Assembly LH
I	5	Front Door with Motor Lock Assembly LH
I	6	Door Side Airbag Sensor Assembly LH
I	7	Front Door Courtesy Light Assembly LH
I	8	Junction Connector
J	1	Rear No. 1 Speaker Assembly RH
J	2	Rear Power Window Regulator Motor Assembly RH
J	3	Rear Door with Motor Lock Assembly RH
K	1	Rear No. 1 Speaker Assembly LH
K	2	Rear Power Window Regulator Motor Assembly LH
K	3	Rear Door with Motor Lock Assembly LH
W	1	Rear Window Defogger (Back Door Glass)
W	2	Rear Window Defogger (Back Door Glass)
W	3	License Plate Light Assembly
W	4	Tail Gate Control Switch Assembly
W	5	Rear No. 2 Speaker Assembly RH
W	6	Rear No. 2 Speaker Assembly LH
W	7	Spot Light Assembly RH
W	8	Back Door Lock Assembly
W	9	Back Door Power Window Regulator Sub-Assembly
W	10	Multiplex Network Door ECU
W	11	Luggage Electrical Key Switch
W	12	Spot Light Assembly LH

Position of Parts in Body

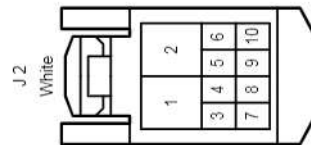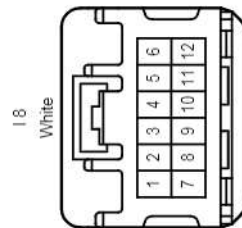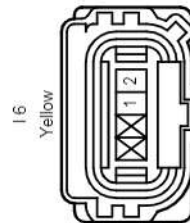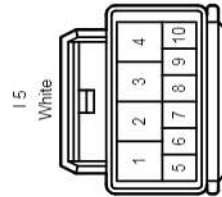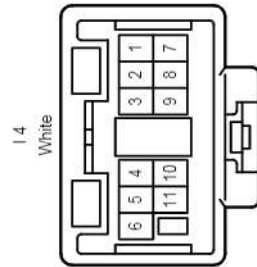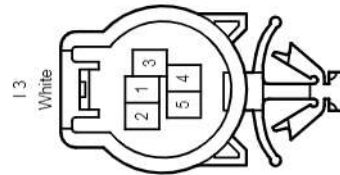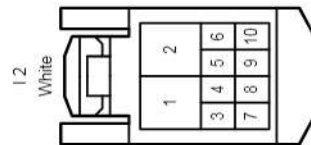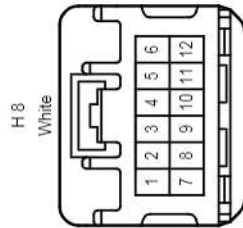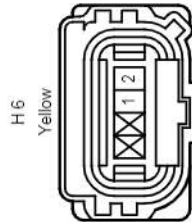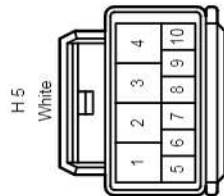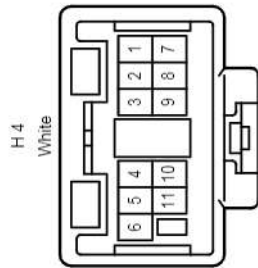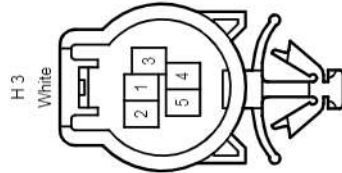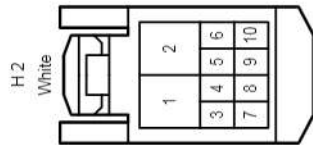


cardiagn.com

Position of Parts in Body

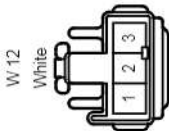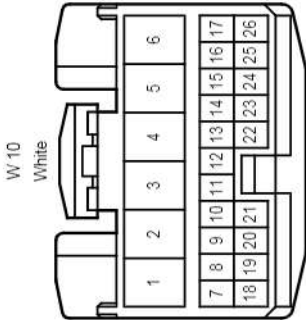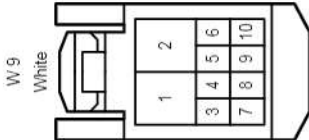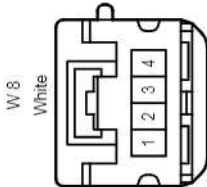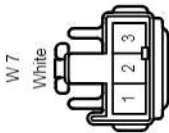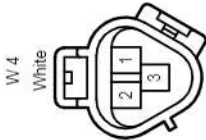


















Position of Parts in Body

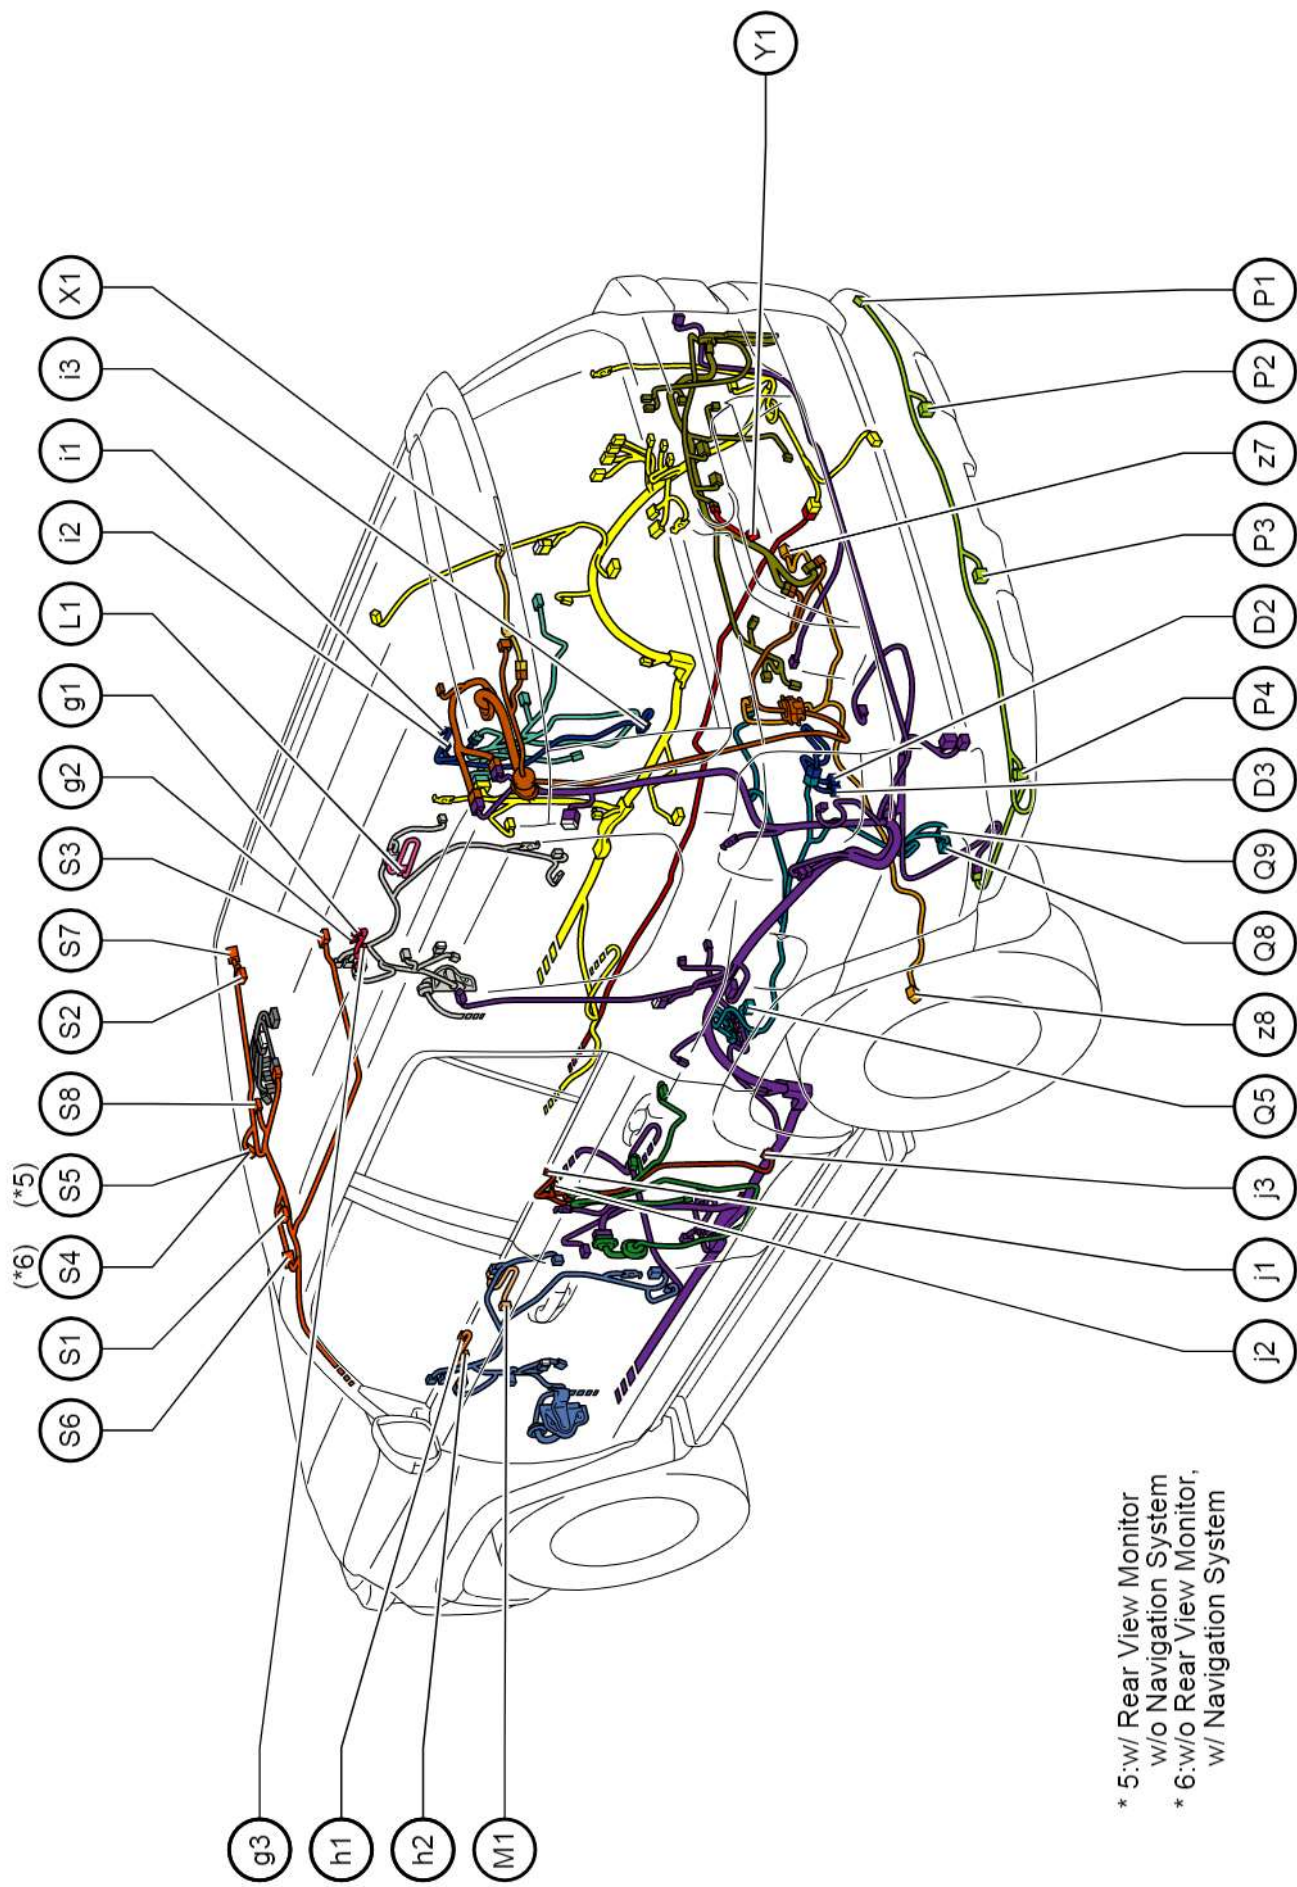







Position of Parts in Body

D	2	Rear Differential Lock Shift Actuator
D	3	Rear Differential Lock Indicator Switch
L	1	Front Outside Electrical Key Antenna RH
M	1	Front Outside Electrical Key Antenna LH
P	1	No. 2 Ultrasonic Sensor RH
P	2	No. 1 Ultrasonic Sensor RH
P	3	No. 1 Ultrasonic Sensor LH
P	4	No. 2 Ultrasonic Sensor LH
Q	5	Fuel Pump , Fuel Sender Gauge Assembly
Q	8	Fuel Pump Control ECU Assembly
Q	9	Fuel Pump Control ECU Assembly
S	1	Vanity Light Assembly LH
S	2	Vanity Light Assembly RH
S	3	No. 1 Room Light Assembly
S	4	Inner Rear View Mirror Assembly
S	5	Inner Rear View Mirror Assembly
S	6	Visor Assembly LH
S	7	Visor Assembly RH
S	8	Sliding Roof Control ECU
X	1	Center Stop Light Assembly
Y	1	Rear Television Camera Assembly
g	1	Front Power Window Regulator Switch Assembly RH
g	2	Door Control Switch Assembly RH
g	3	Front Door Handle Illumination RH (Interior Illumination Lamp Assembly No. 1)
h	1	Multiplex Network Master Switch Assembly
h	2	Front Door Handle Illumination LH (Interior Illumination Lamp Assembly No. 1)
i	1	Rear Power Window Regulator Switch Assembly RH
i	2	Rear Door Handle Illumination RH (Interior Illumination Lamp Assembly No. 2)
i	3	Rear Door Courtesy Light Assembly RH
j	1	Rear Power Window Regulator Switch Assembly LH
j	2	Rear Door Handle Illumination LH (Interior Illumination Lamp Assembly No. 2)
j	3	Rear Door Courtesy Light Assembly LH


Position of Parts in Body

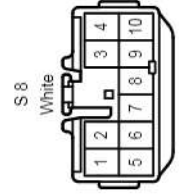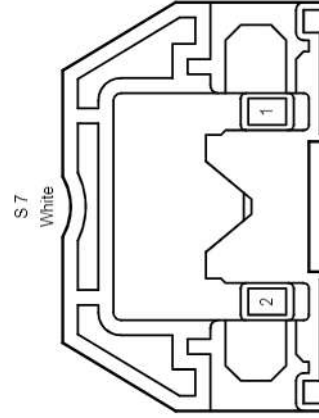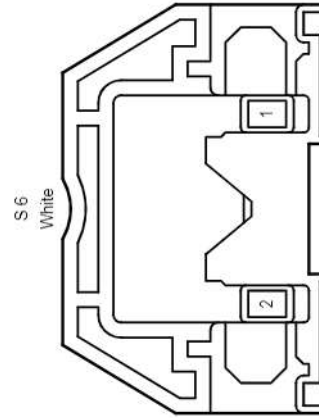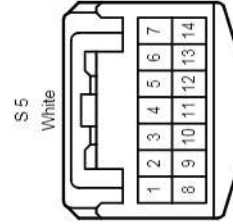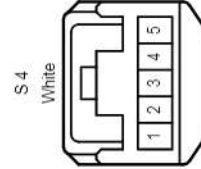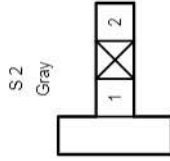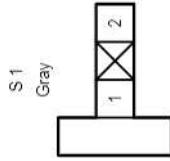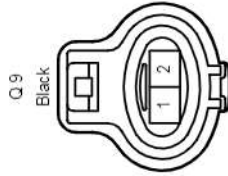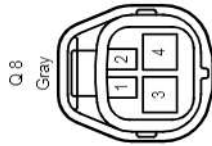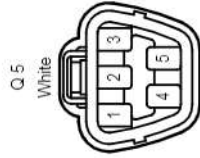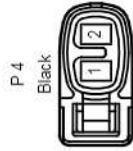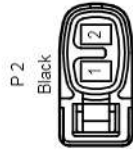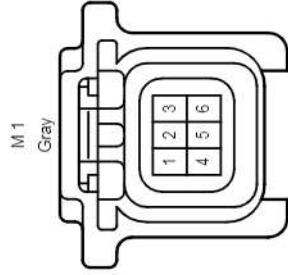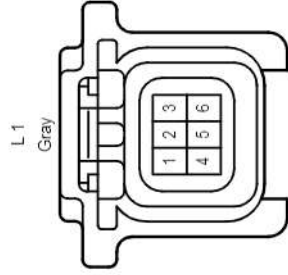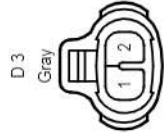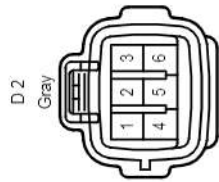

Position of Parts in Body

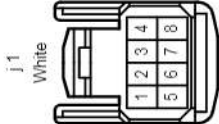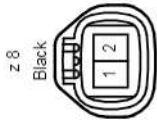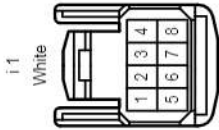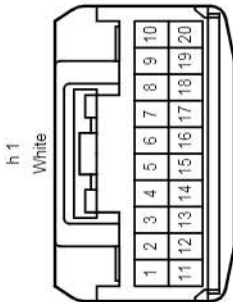

Position of Parts in Engine Compartment

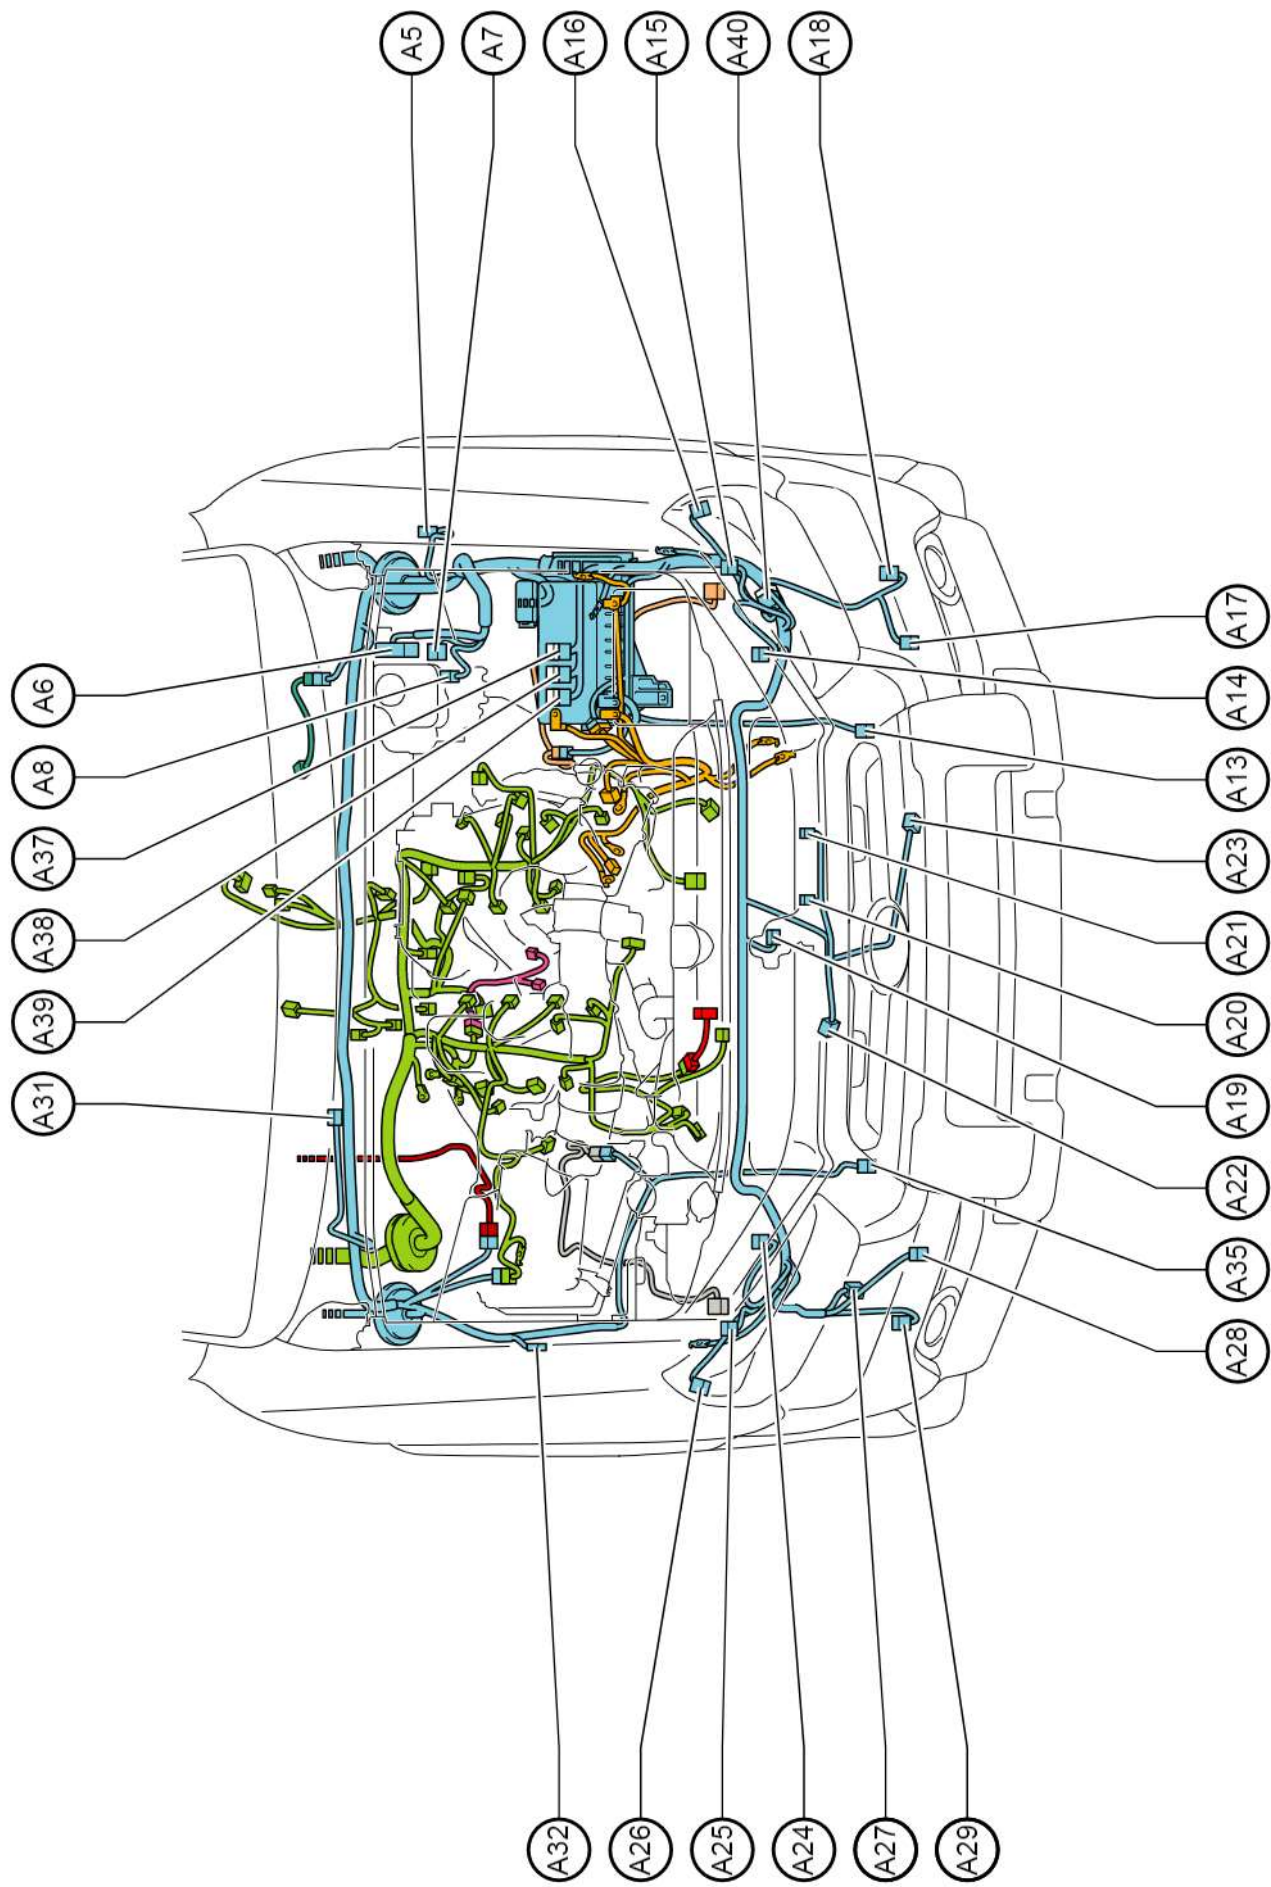

Position of Parts in Engine Compartment


A 5	Wireless Door Lock Buzzer
A 6	Skid Control ECU with Actuator Assembly
A 7	Skid Control ECU with Actuator Assembly
A 8	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 13	Front Airbag Sensor LH
A 14	Headlight Assembly LH
A 15	Headlight Assembly LH
A 16	Headlight Assembly LH
A 17	Front Turn Signal Light Assembly LH
A 18	Front Fog Light Assembly LH
A 19	Engine Hood Courtesy Switch
A 20	High Pitched Horn Assembly
A 21	Low Pitched Horn Assembly
A 22	A/C Tube & Accessory Assembly
A 23	Cooler (Ambient Temperature Sensor) Thermistor
A 24	Headlight Assembly RH
A 25	Headlight Assembly RH
A 26	Headlight Assembly RH
A 27	Front Washer Jar & Pump Assembly
A 28	Front Turn Signal Light Assembly RH
A 29	Front Fog Light Assembly RH
A 31	Front Wiper Deicer (Windshield Glass)
A 32	Security Horn Assembly
A 35	Front Airbag Sensor RH
A 37	Junction Connector
A 38	Junction Connector
A 39	Junction Connector
A 40	Junction Connector

Position of Parts in Engine Compartment


A 5
Gray



A 6
Black

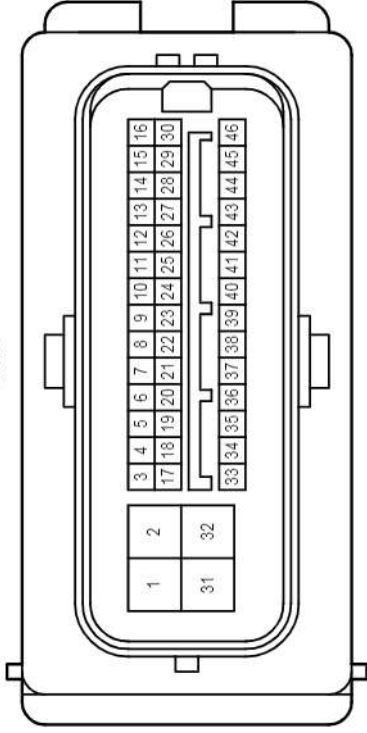

A 7
Black

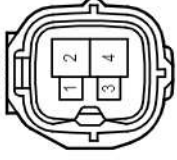


A 8
Gray




A 13
Yellow



A 14
Black

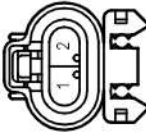

A 15
Black

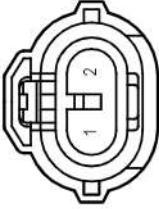


A 16
Brown



A 17
Gray



A 18
Black

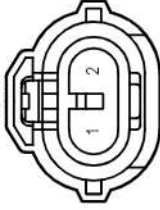

A 19
Black



A 20
Black



A 21
Black




A 22
Gray




A 23
Black



A 24
Black

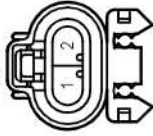


A 25
Black

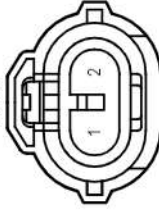

A 26
Brown




A 27
Dark Gray

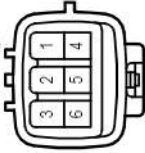




A 28
Gray




A 29
Black

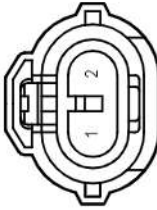

Position of Parts in Engine Compartment

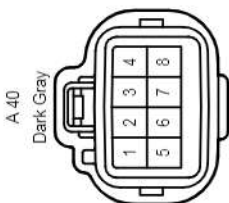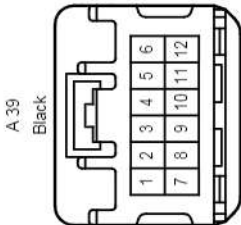
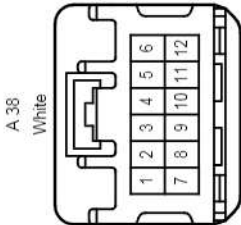


Position of Parts in Engine Compartment

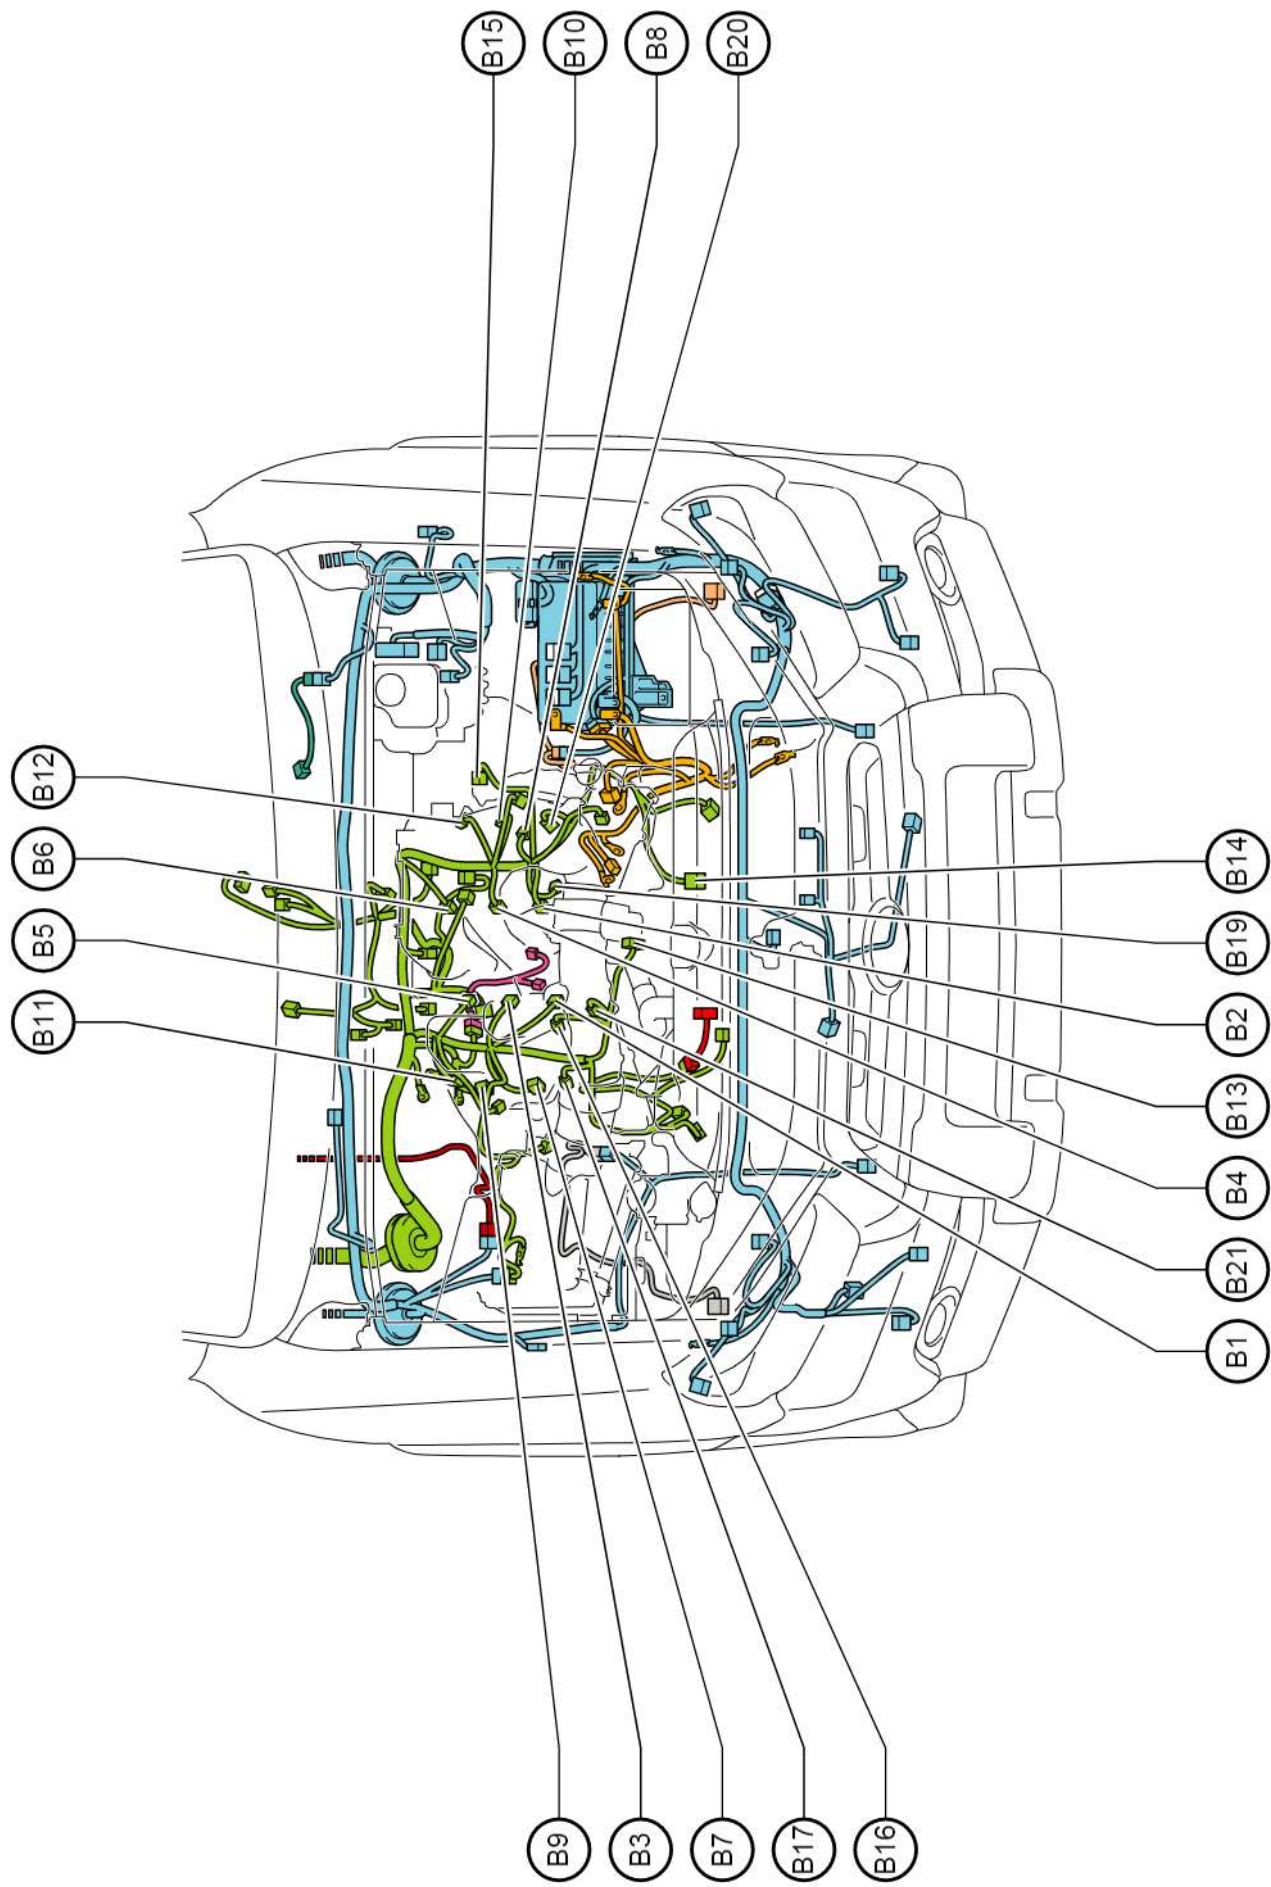


- B 1 Fuel Injector Assembly No. 1
- B 2 Fuel Injector Assembly No. 2
- B 3 Fuel Injector Assembly No. 3
- B 4 Fuel Injector Assembly No. 4
- B 5 Fuel Injector Assembly No. 5
- B 6 Fuel Injector Assembly No. 6
- B 7 Ignition Coil Assembly No. 1
- B 8 Ignition Coil Assembly No. 2
- B 9 Ignition Coil Assembly No. 3
- B 10 Ignition Coil Assembly No. 4
- B 11 Ignition Coil Assembly No. 5
- B 12 Ignition Coil Assembly No. 6
- B 13 Throttle with Motor Body Assembly
- B 14 Crank Position Sensor
- B 15 Purge VSV
- B 16 Cam Timing Oil Control Valve (Bank 1 Intake Side)
- B 17 Cam Timing Oil Control Valve (Bank 1 Exhaust Side)
- B 19 Cam Timing Oil Control Valve (Bank 2 Intake Side)
- B 20 Cam Timing Oil Control Valve (Bank 2 Exhaust Side)
- B 21 VVT Sensor (Bank 1 Intake Side)

Position of Parts in Engine Compartment

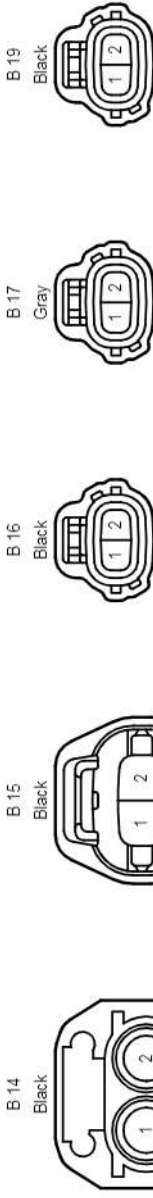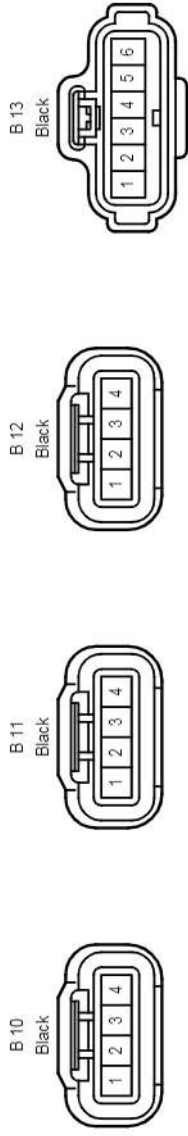







Position of Parts in Engine Compartment

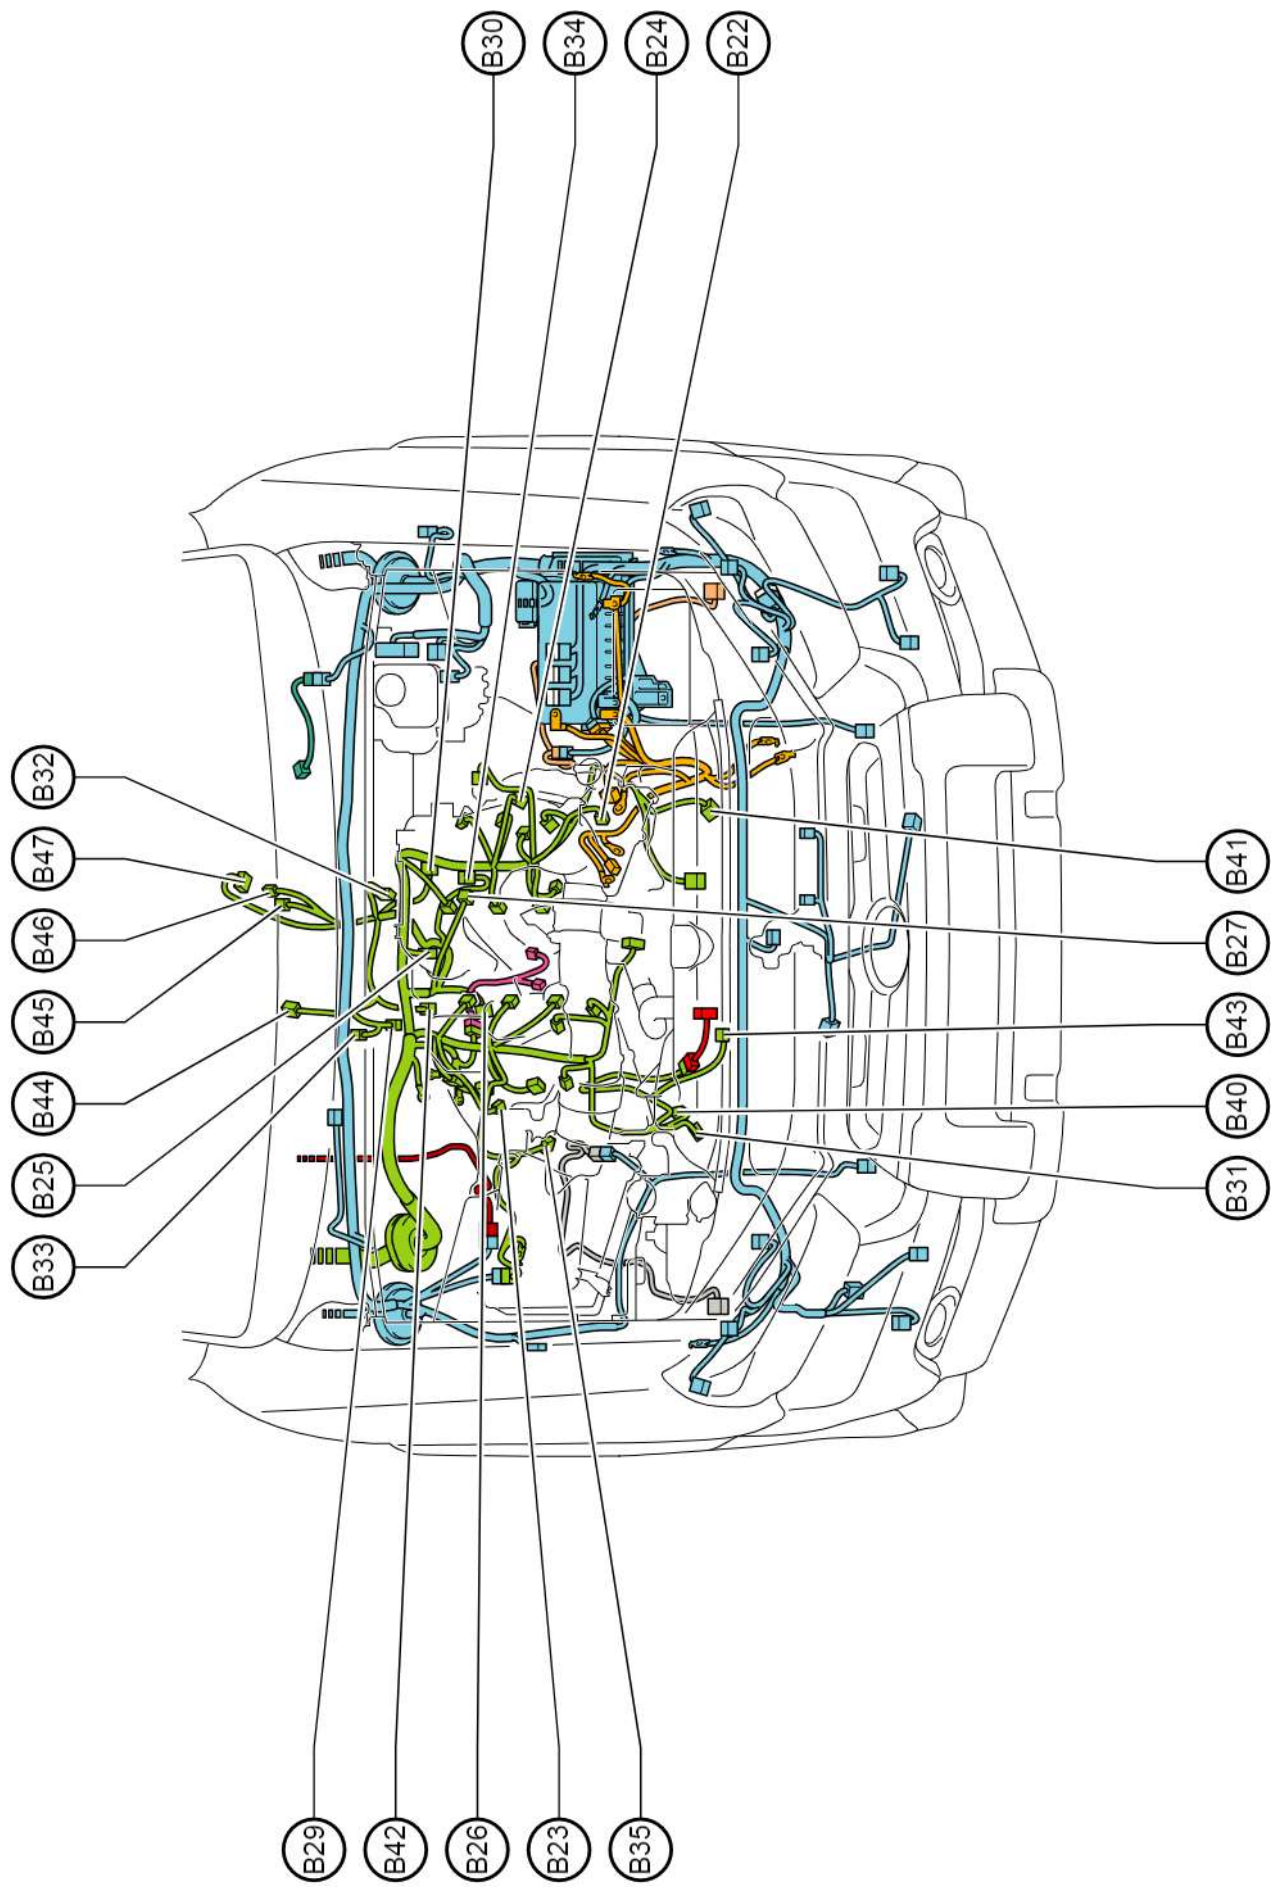


Position of Parts in Engine Compartment

- B 22 VVT Sensor (Bank 2 Intake Side)
- B 23 VVT Sensor (Bank 1 Exhaust Side)
- B 24 VVT Sensor (Bank 2 Exhaust Side)
- B 25 E.F.I. Engine Coolant Temperature Sensor
- B 26 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 27 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- B 29 Oxygen Sensor (Bank 1 Sensor 2)
- B 30 Oxygen Sensor (Bank 2 Sensor 2)
- B 31 Power Steering Oil Pressure Switch
- B 32 Electronically Controlled Transmission Solenoid
- B 33 Transmission Revolution Sensor (Counter Gear)
- B 34 Transmission Revolution Sensor (Turbine)
- B 35 Intake Mass Air Flow Meter Sub-Assembly
- B 40 Solenoid Valve Assembly
- B 41 With Magnet Clutch Compressor Assembly
- B 42 Park/Neutral Position Switch
- B 43 Engine Oil Pressure Switch Assembly
- B 44 Transfer Indicator Switch (4WD Position)
- B 45 Transfer Indicator Switch (L4 Position)
- B 46 Transfer Indicator Switch (Neutral Position)
- B 47 Transfer Shift Actuator Assembly

Position of Parts in Engine Compartment

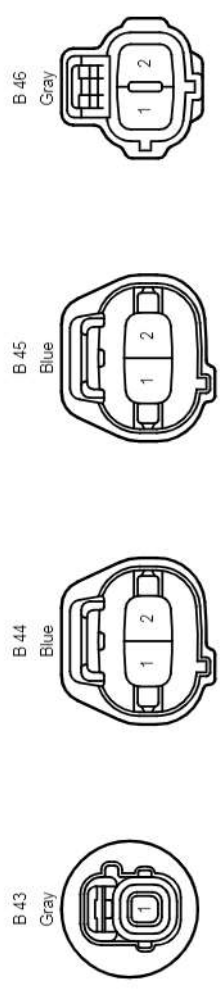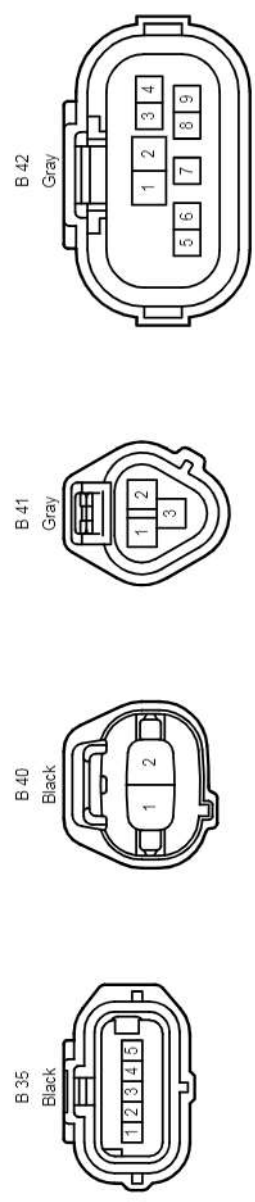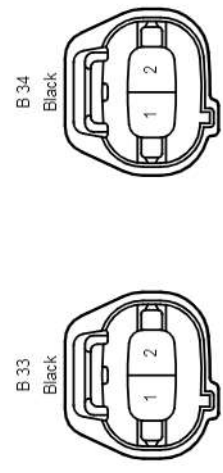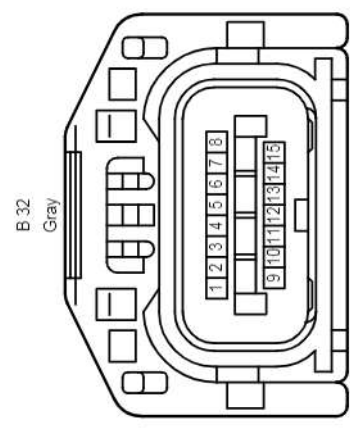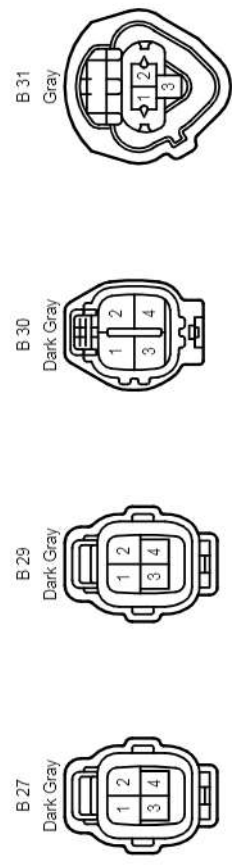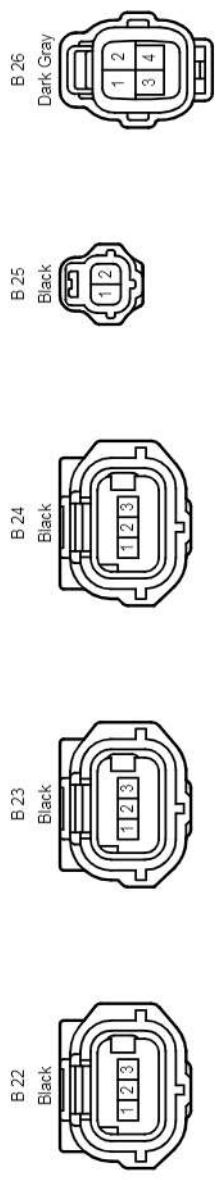


Position of Parts in Engine Compartment

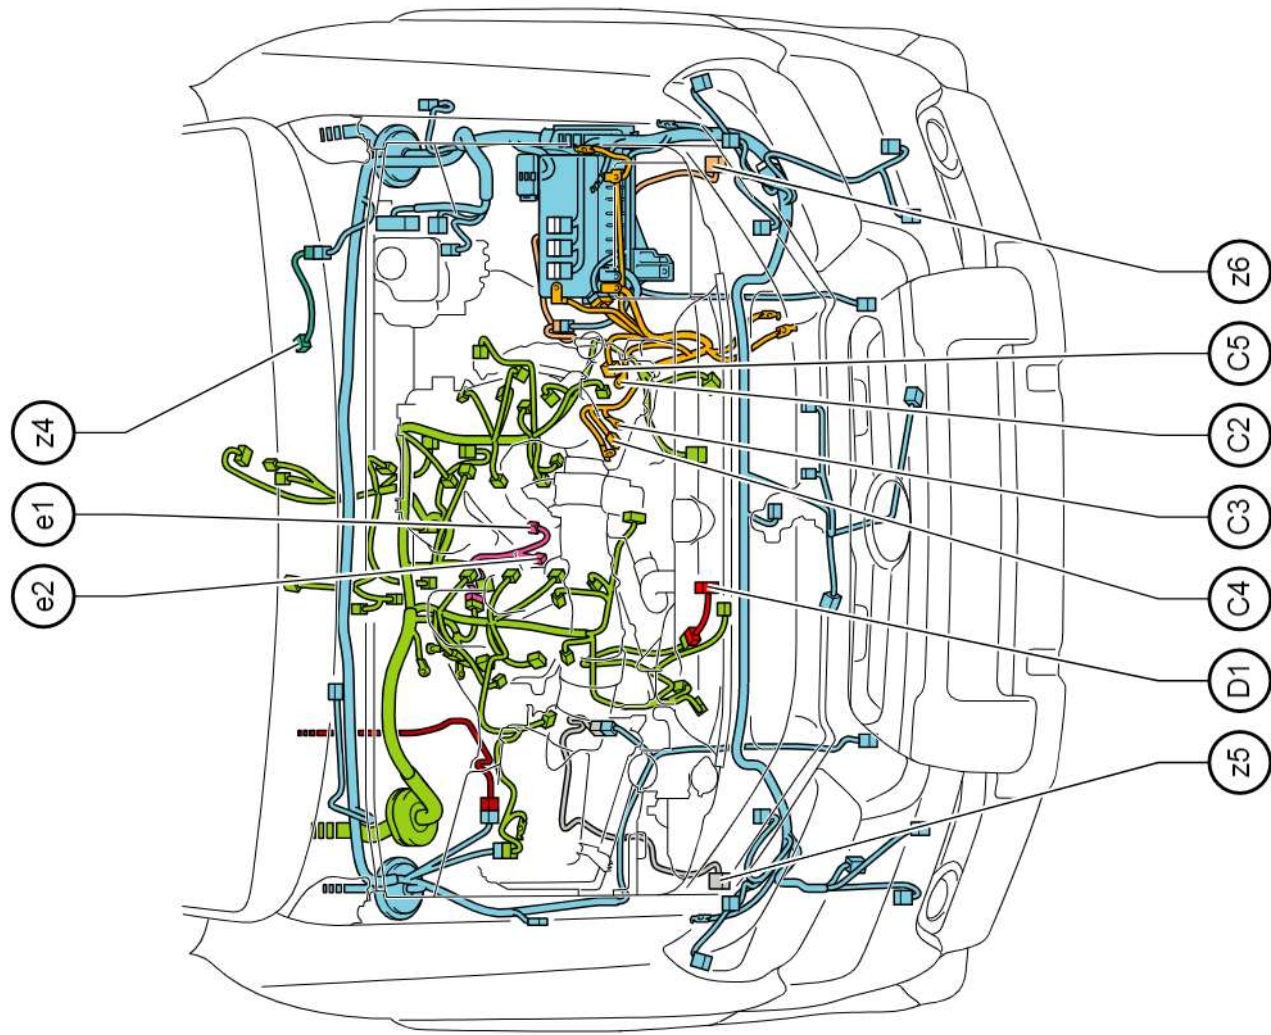


- C 2 Generator Assembly
- C 3 Starter Assembly
- C 4 Starter Assembly
- C 5 Generator Assembly
- D 1 Differential Vacuum Actuator Assembly
- e 1 Knock Control Sensor (Bank 2)
- e 2 Knock Control Sensor (Bank 1)
- z 4 Windshield Wiper Motor Assembly
- z 5 Front Speed Sensor RH
- z 6 Front Speed Sensor LH

Position of Parts in Engine Compartment

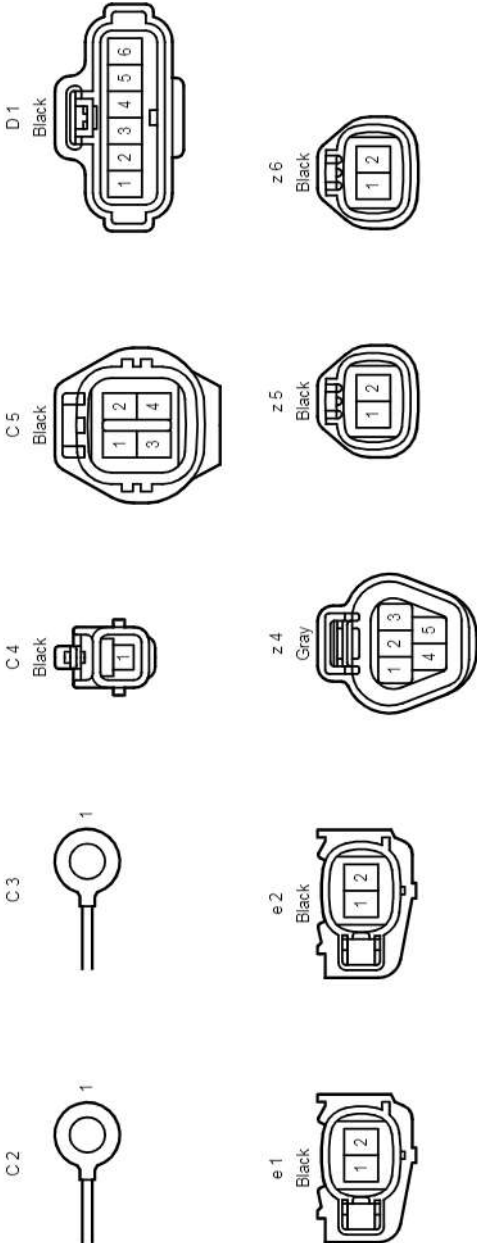

Position of Parts in Instrument Panel

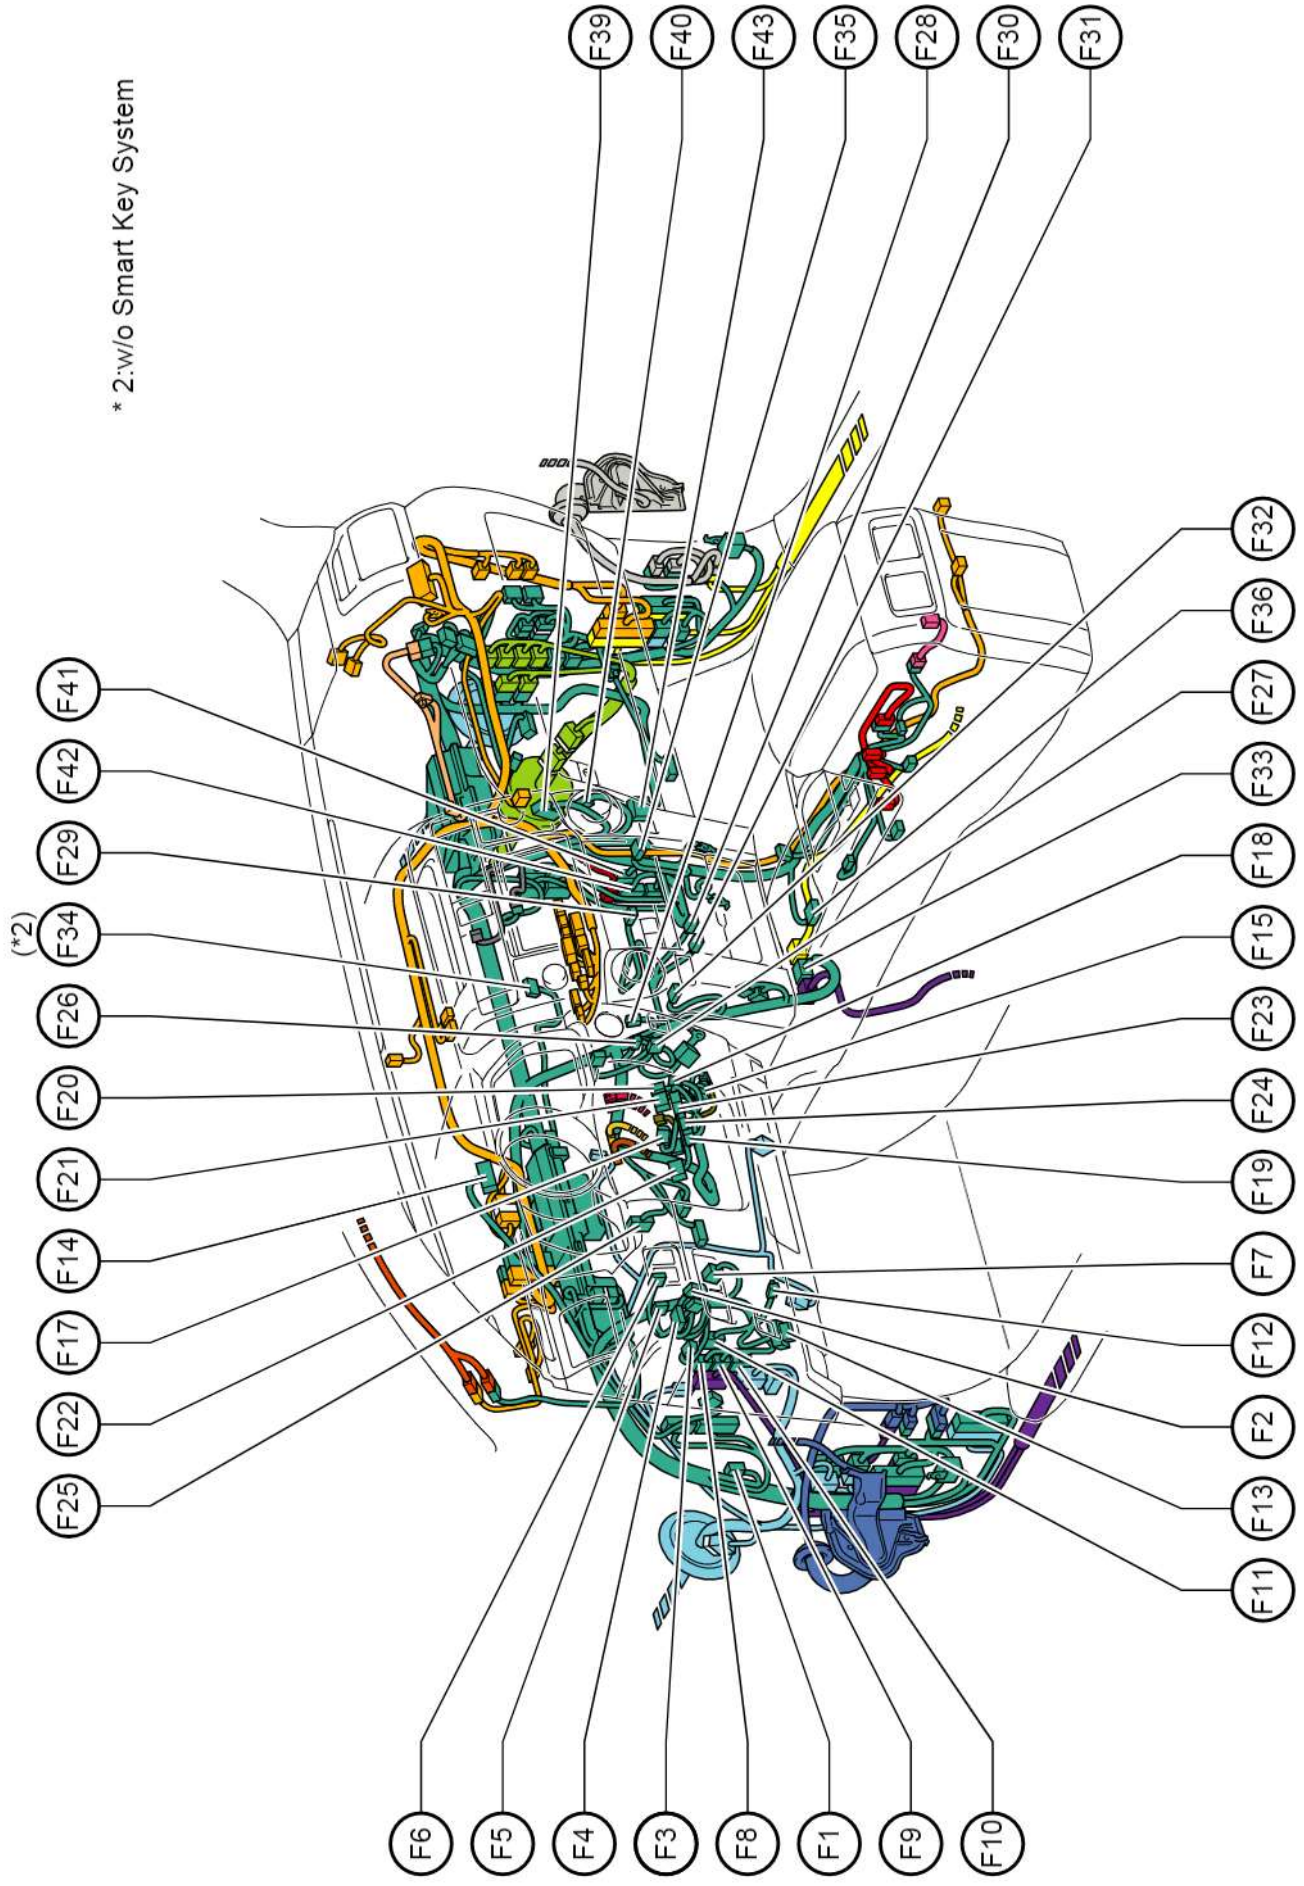


Position of Parts in Instrument Panel


F 1	Option Connector (Towing Brake Controller)
F 2	Curtain Airbag Cutoff Switch
F 3	Front Window Deicer Switch (Outer Mirror Heater Switch Assembly)
F 4	Outer Mirror Switch Assembly
F 5	Light Control Rheostat
F 6	Back Sonar or Clearance Sonar Switch Assembly
F 7	Tire Pressure Warning ECU
F 8	Main Body ECU
F 9	Main Body ECU
F 10	Main Body ECU
F 11	Turn Signal Flasher Assembly
F 12	Lower No. 1 Instrument Panel Airbag Assembly
F 13	DLC3
F 14	Combination Meter Assembly
F 15	Ignition or Starter Switch Assembly
F 17	Transponder Key Amplifier
F 18	Un-Lock Warning Switch Assembly
F 19	Steering Sensor
F 20	Windshield Wiper Switch Assembly
F 21	Windshield Wiper Switch Assembly
F 22	Headlight Dimmer Switch Assembly
F 23	Spiral Cable Sub-Assembly
F 24	Spiral Cable Sub-Assembly
F 25	Clearance Warning ECU Assembly
F 26	Cooler (Room Temperature Sensor) Thermistor
F 27	Woofers Speaker Switch
F 28	No. 1 Clearance Warning Buzzer
F 29	Heater Control Assembly
F 30	Power Point Socket Assembly
F 31	No. 1 Stereo Jack Adapter Assembly
F 32	Security Indicator Light Assembly
F 33	Airbag Sensor Assembly
F 34	Transponder Key ECU Assembly
F 35	Telltale Light Assembly
F 36	Yaw Rate Sensor Assembly
F 39	DCM (Telematics Transceiver)
F 40	Back-Up Battery (Mayday Battery)
F 41	Power Steering ECU Assembly
F 42	A/C Amplifier Assembly
F 43	Blower with Fan Motor Sub-Assembly

Position of Parts in Instrument Panel


F 1
White

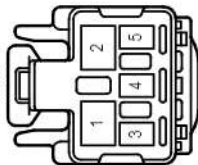


F 2
Gray

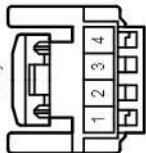


F 3
Black

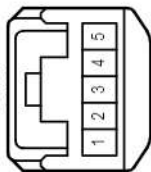


F 4
White

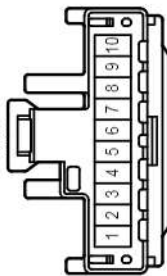


F 5
White

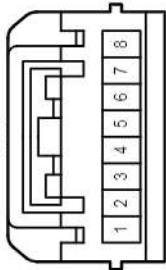


F 6
Black

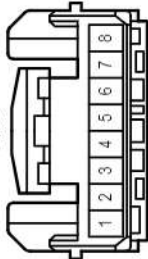


F 7
Black

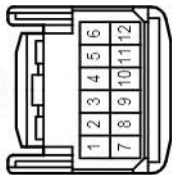


F 8
White

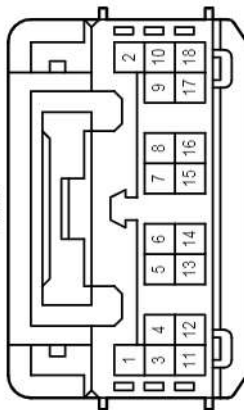


F 9
White

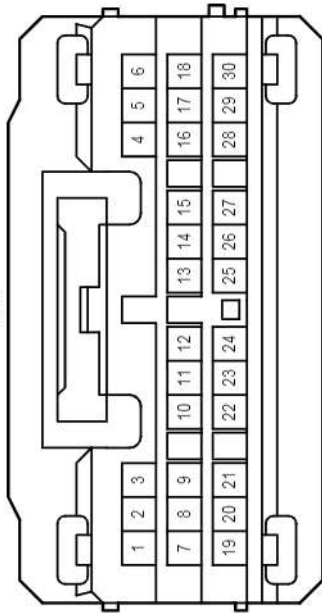


F 10
White

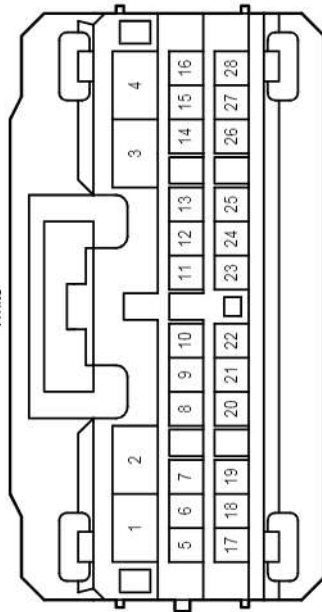

F 11
White

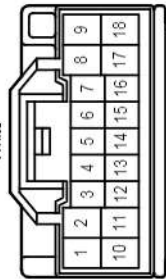

















F 12
Black



F 13
White


F 14
White

Position of Parts in Instrument Panel

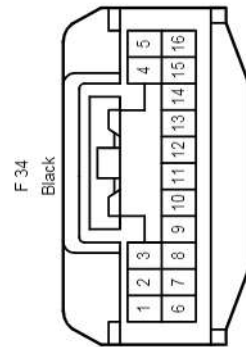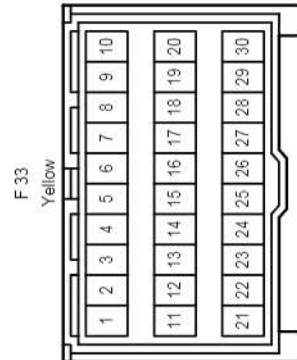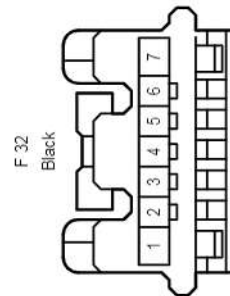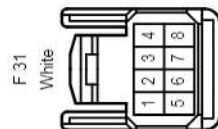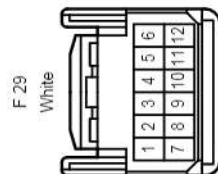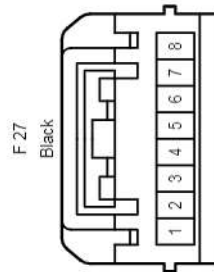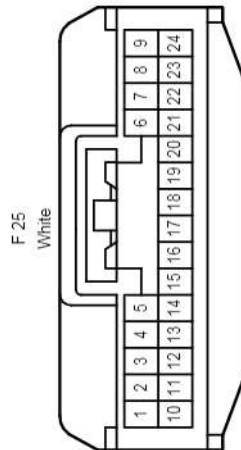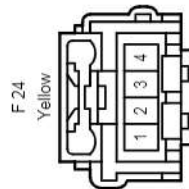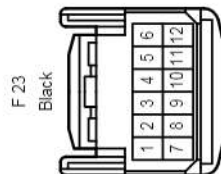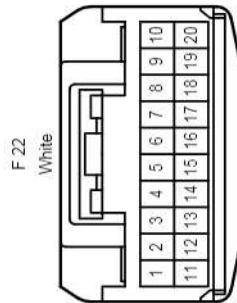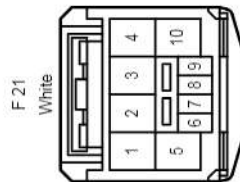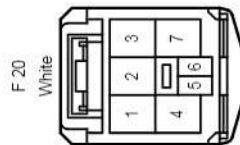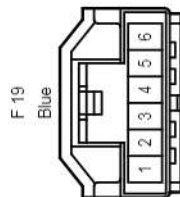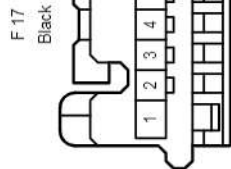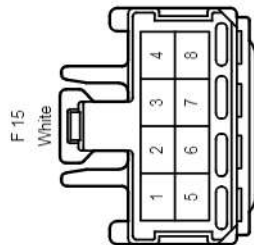


Position of Parts in Instrument Panel


F 39
White

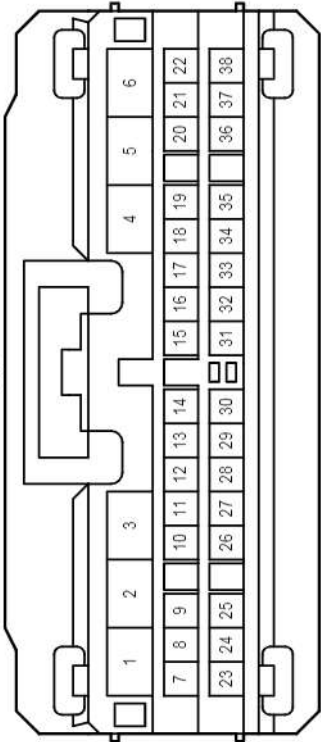


F 40
White

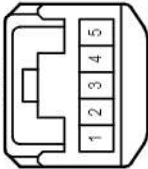


F 41
White

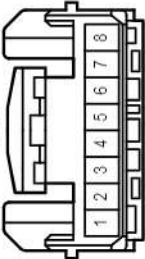


F 42
White

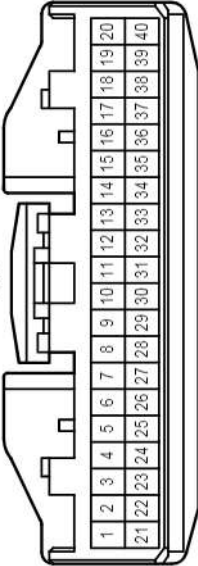

F 43
Black

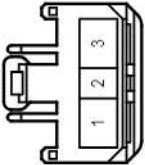


Position of Parts in Instrument Panel

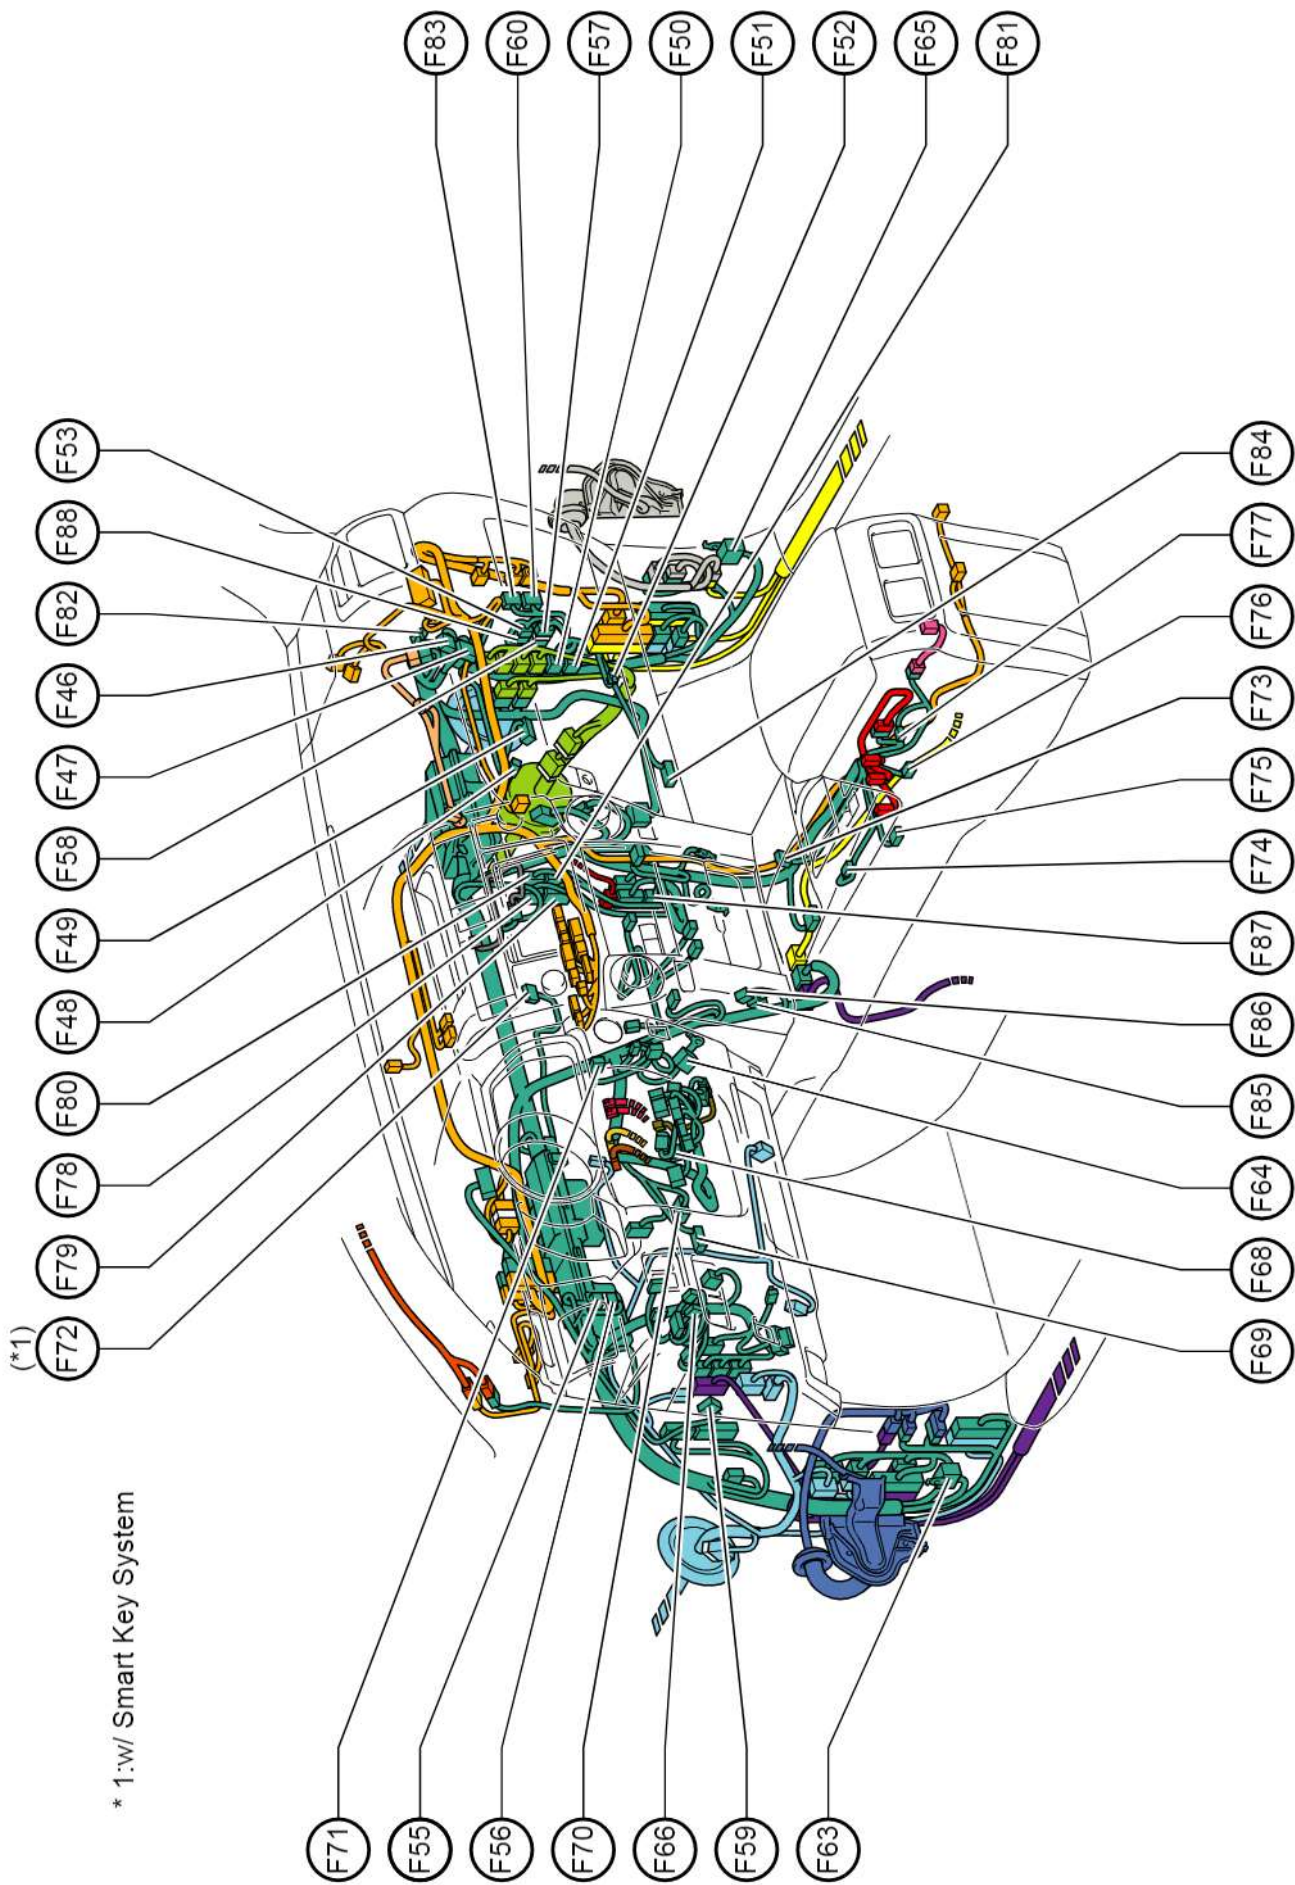


Position of Parts in Instrument Panel

F 46	Four Wheel Drive Control ECU
F 47	Four Wheel Drive Control ECU
F 48	No. 2 Power Point Socket Assembly
F 49	Glove Box Light Assembly
F 50	ECM
F 51	ECM
F 52	Lower No. 2 Instrument Panel Airbag Assembly
F 53	Option Connector (Remote Engine Start)
F 55	Junction Connector
F 56	Junction Connector
F 57	Junction Connector
F 58	Junction Connector
F 59	Junction Connector
F 60	Junction Connector
F 63	Junction Connector
F 64	Junction Connector
F 65	Junction Connector
F 66	Main Switch Assembly
F 68	Steering Lock Actuator Assembly
F 69	Front Foot Light LH (No. 1 Interior Illumination Light Assembly)
F 70	Stabilizer Control ECU
F 71	Engine Switch
F 72	ID Code Box
F 73	Transfer Position Switch
F 74	Shift Position Indicator (Indicator Light Wire Sub-Assembly)
F 75	Shift Lock Control ECU Sub-Assembly
F 76	Transmission Control Switch
F 77	Front Indoor Electrical Key Antenna Assembly
F 78	Certification ECU Assembly
F 79	Certification ECU Assembly
F 80	Power Management Control ECU
F 81	Power Management Control ECU
F 82	Diode (Voltage Inverter)
F 83	Junction Connector
F 84	Front Foot Light RH (No. 1 Interior Illumination Light Assembly)
F 85	Quick Heater Assembly
F 86	Quick Heater Assembly
F 87	A/C Amplifier Assembly
F 88	Option Connector (Remote Engine Start)



Position of Parts in Instrument Panel

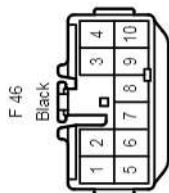


F 47
Black

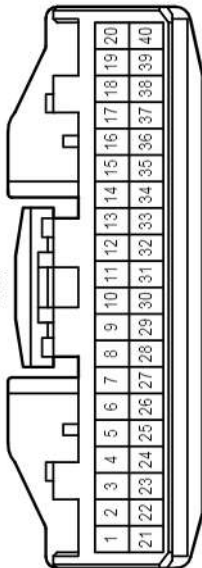


F 48
White





F 50
White

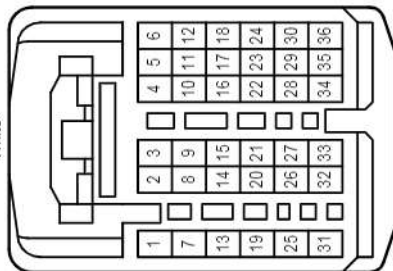


F 51
White

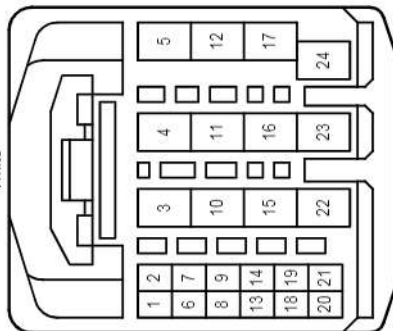


F 52
Black

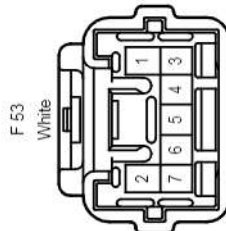


F 55
Gray

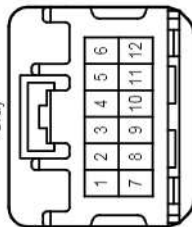


F 56
Gray

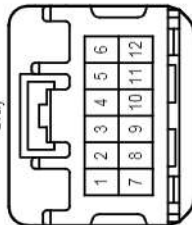


F 57
Black

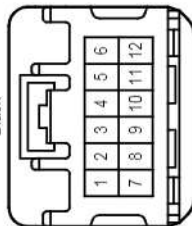


F 58
Black

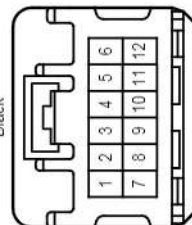

F 59
Gray

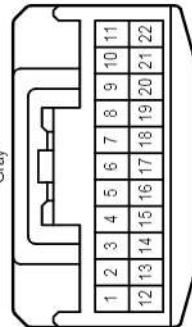

F 60
Gray

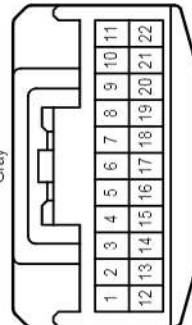

F 63
White



F 64
White














F 65
White



F 66
Black








Position of Parts in Instrument Panel

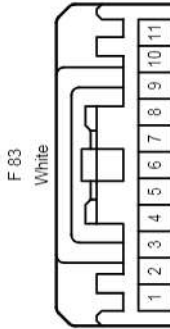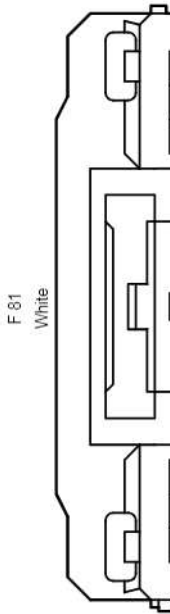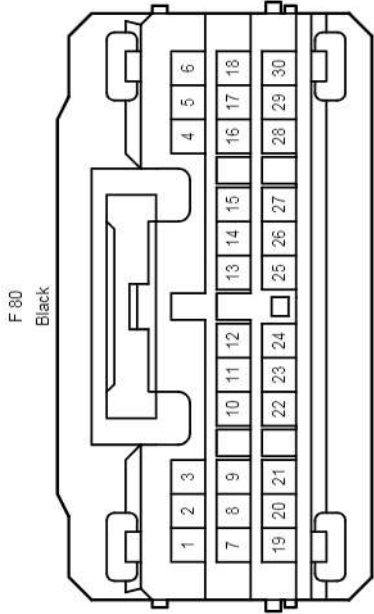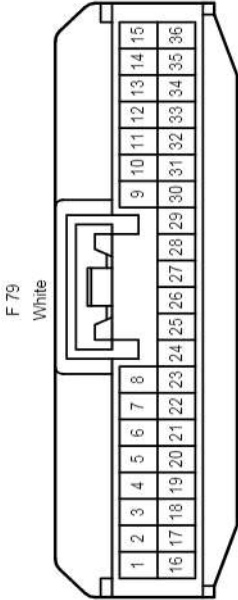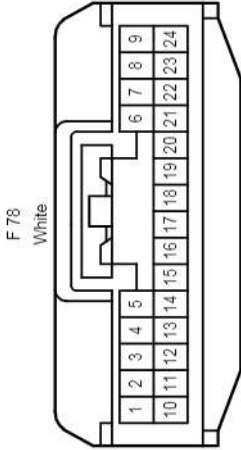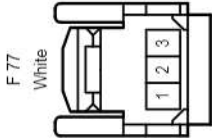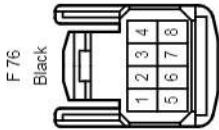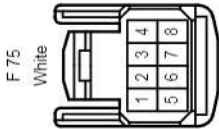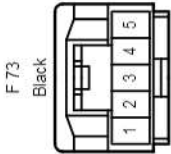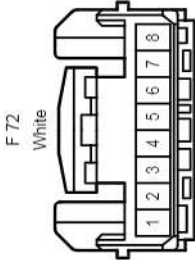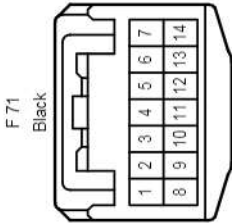


F 83
White

Position of Parts in Instrument Panel













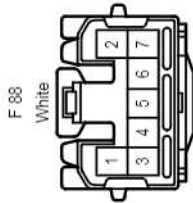
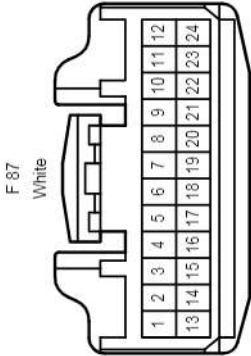
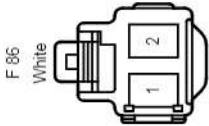
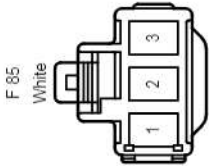



Position of Parts in Instrument Panel

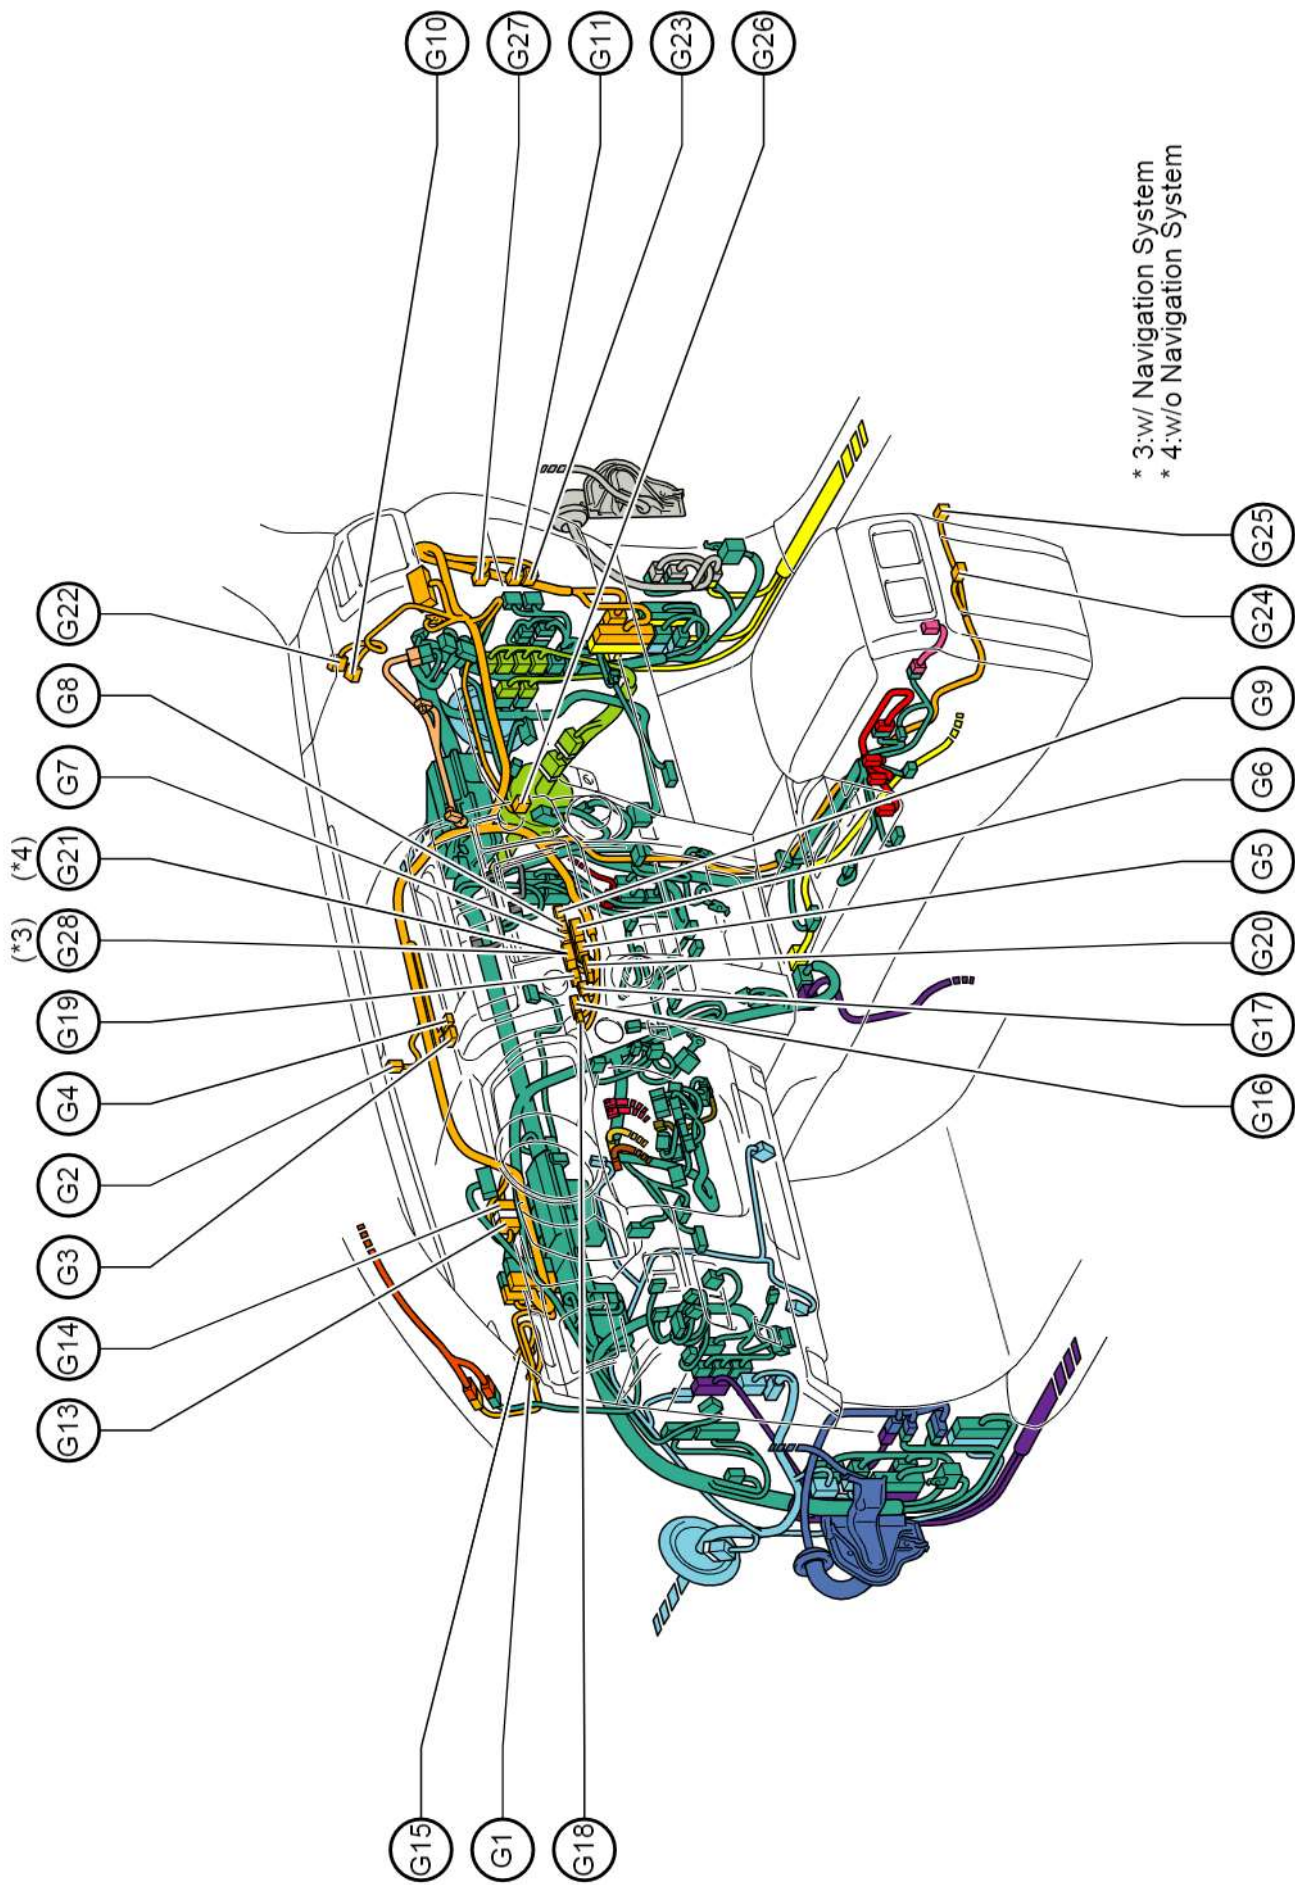

G 1	Front No. 2 Speaker Assembly LH
G 2	Automatic Light Control Sensor
G 3	Accessory Meter Assembly
G 4	Accessory Meter Assembly
G 5	Radio Receiver Assembly
G 6	Radio Receiver Assembly
G 7	Radio Receiver Assembly
G 8	Radio Receiver Assembly
G 9	Radio Receiver Assembly
G 10	Front No. 2 Speaker Assembly RH
G 11	Multi-Media Interface ECU
G 13	Junction Connector
G 14	Junction Connector
G 15	Front No. 2 Speaker Assembly LH
G 16	Navigation Receiver Assembly
G 17	Navigation Receiver Assembly
G 18	Navigation Receiver Assembly
G 19	Navigation Receiver Assembly
G 20	Navigation Receiver Assembly
G 21	Radio Receiver Assembly
G 22	Front No. 2 Speaker Assembly RH
G 23	Multi-Media Interface ECU
G 24	Stereo Component Tuner Assembly
G 25	Stereo Component Tuner Assembly
G 26	No. 2 Stereo Jack Adapter Assembly
G 27	Multi-Media Interface ECU
G 28	Navigation Receiver Assembly

Position of Parts in Instrument Panel

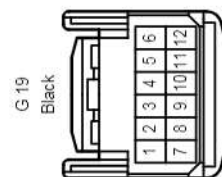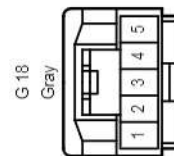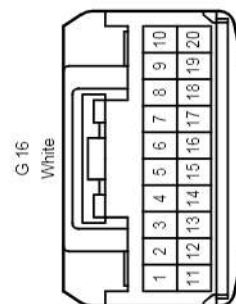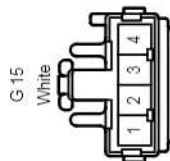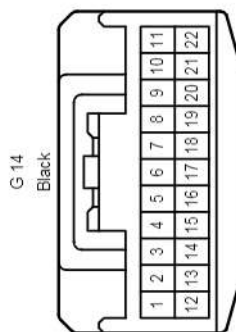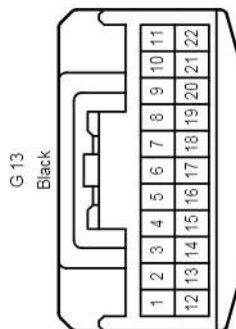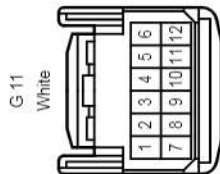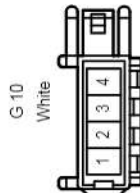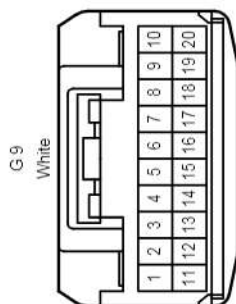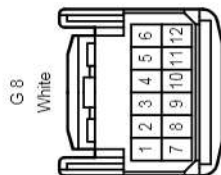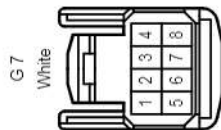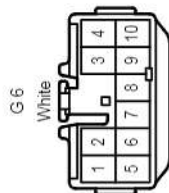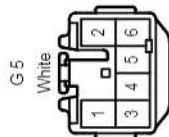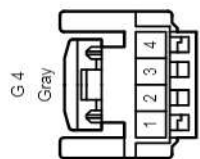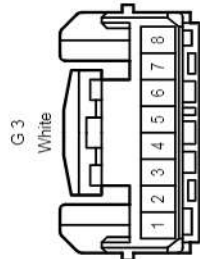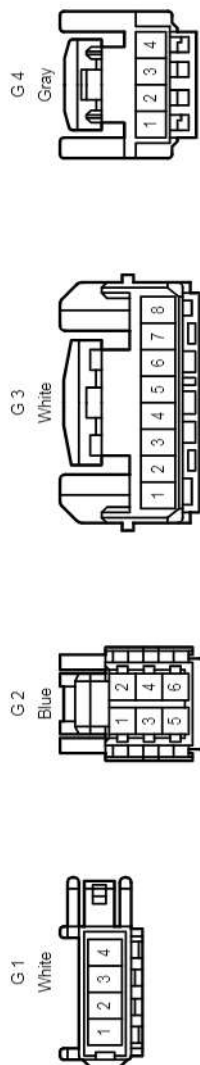

G 20
White


G 21
White

G 22
White

Position of Parts in Instrument Panel


G 23

White

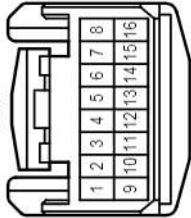


G 24

White

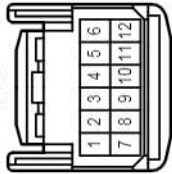


G 25

Blue




G 26

Black

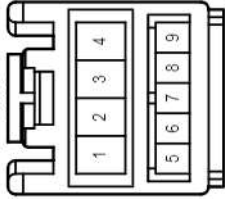


G 27

Brown

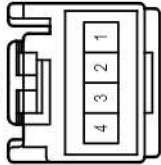


G 28

White

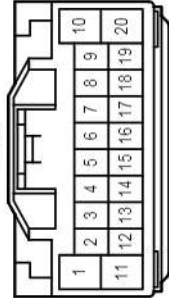













Position of Parts in Instrument Panel

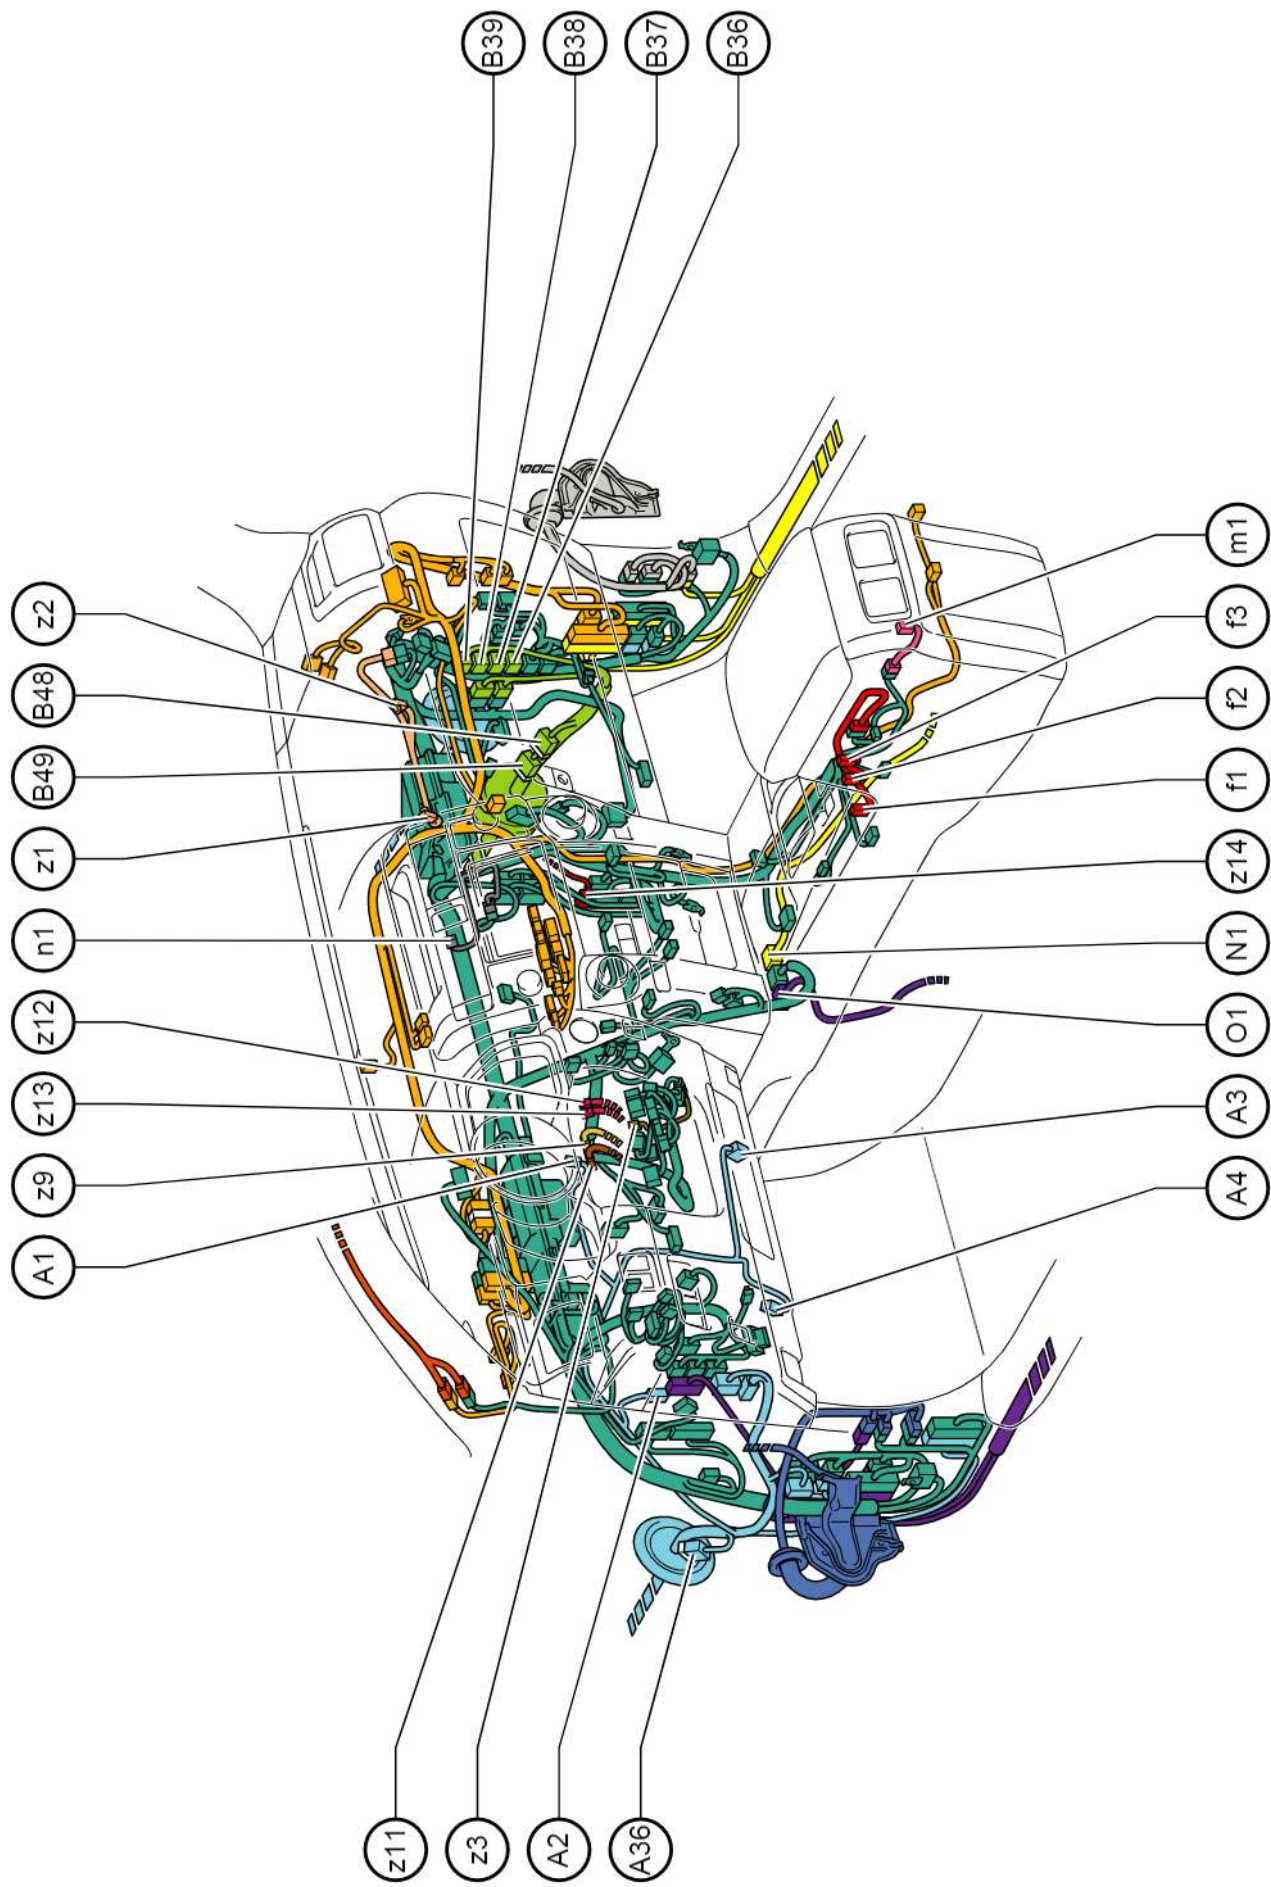








Position of Parts in Instrument Panel



A	1	Skid Control Buzzer Assembly
A	2	Parking Brake Switch Assembly
A	3	Accelerator Pedal Sensor Assembly
A	4	Stop Light Switch Assembly
A	36	Junction Connector
B	36	ECM
B	37	ECM
B	38	ECM
B	39	ECM
B	48	Junction Connector
B	49	Junction Connector
N	1	Airbag Sensor Assembly
O	1	Airbag Sensor Assembly
f	1	Back Door Power Window Regulator Switch Assembly
f	2	Seat Heater Switch LH
f	3	Seat Heater Switch RH
m	1	Power Outlet Socket Assembly
n	1	Hazard Warning Signal Switch Assembly
z	1	Front Passenger Side Squib Circuit (Instrument Panel Passenger without Door Airbag Assembly)
z	2	Front Passenger Side Squib Circuit (Instrument Panel Passenger without Door Airbag Assembly)
z	3	Key Inter Lock Solenoid
z	9	Cruise Control Main Switch , Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z	11	Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z	12	Driver Side Squib Circuit (Horn Button Assembly) , Spiral Cable Sub-Assembly
z	13	Driver Side Squib 2nd Step Circuit (Horn Button Assembly) , Spiral Cable Sub-Assembly
z	14	A/C Amplifier Assembly , A/C Blower Assembly

Position of Parts in Instrument Panel

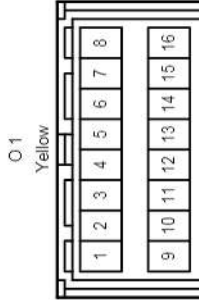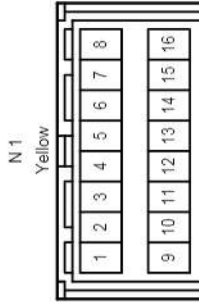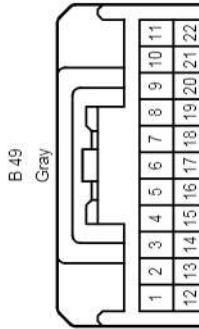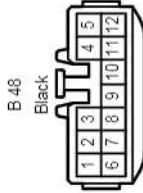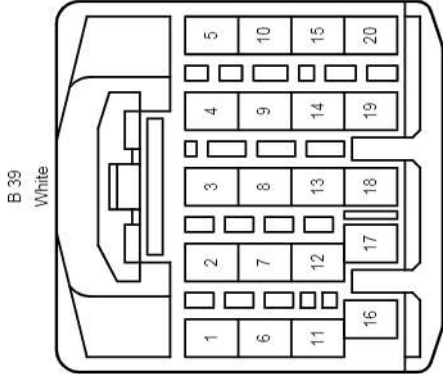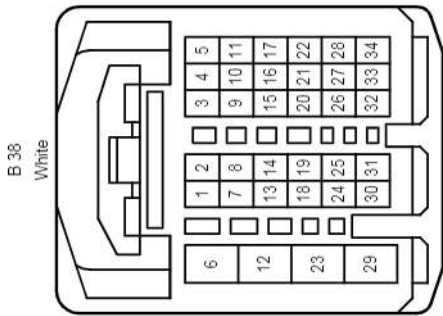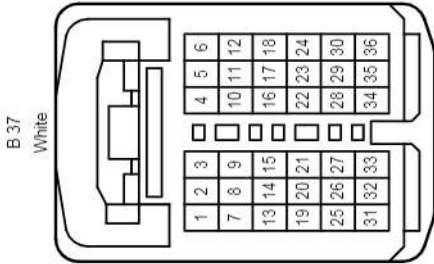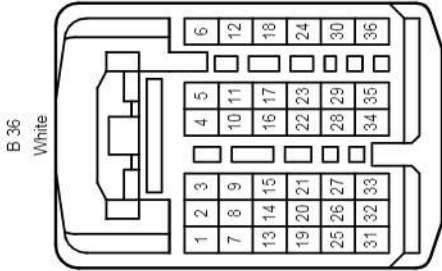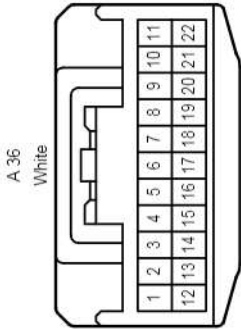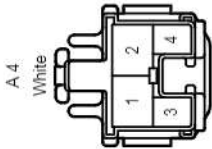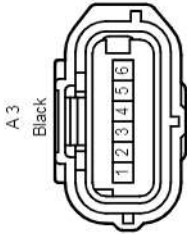


Position of Parts in Instrument Panel

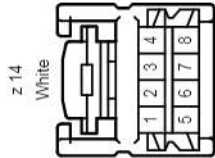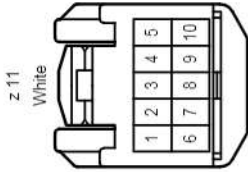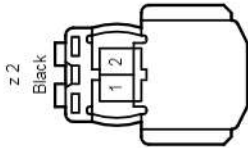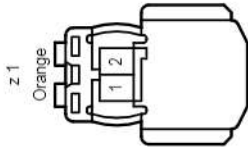

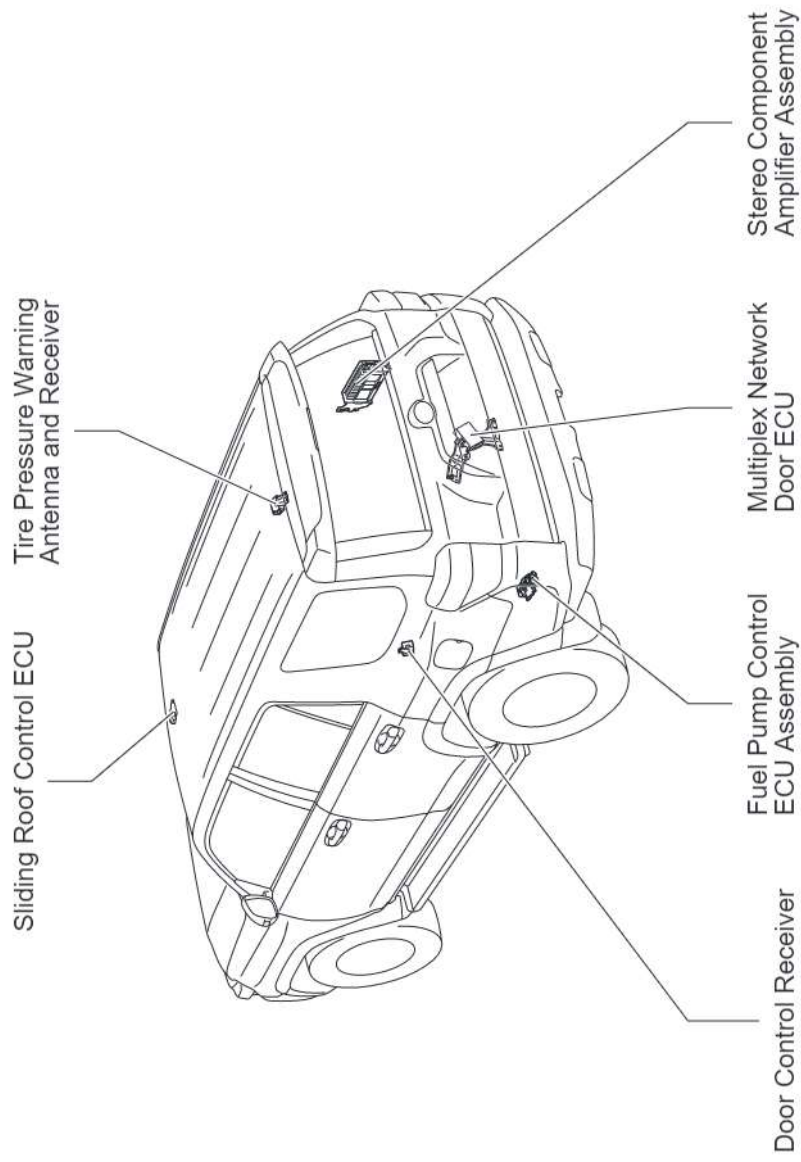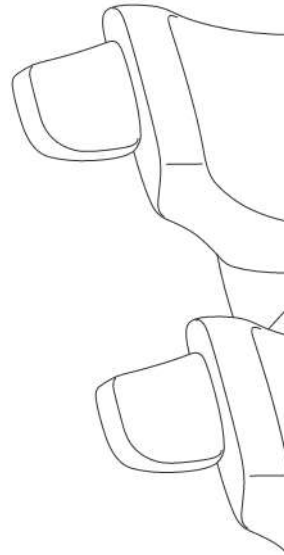
[Body]**[Seat]**

F RELAY LOCATIONS

[Driver Side J/B Assembly Inner Circuit]

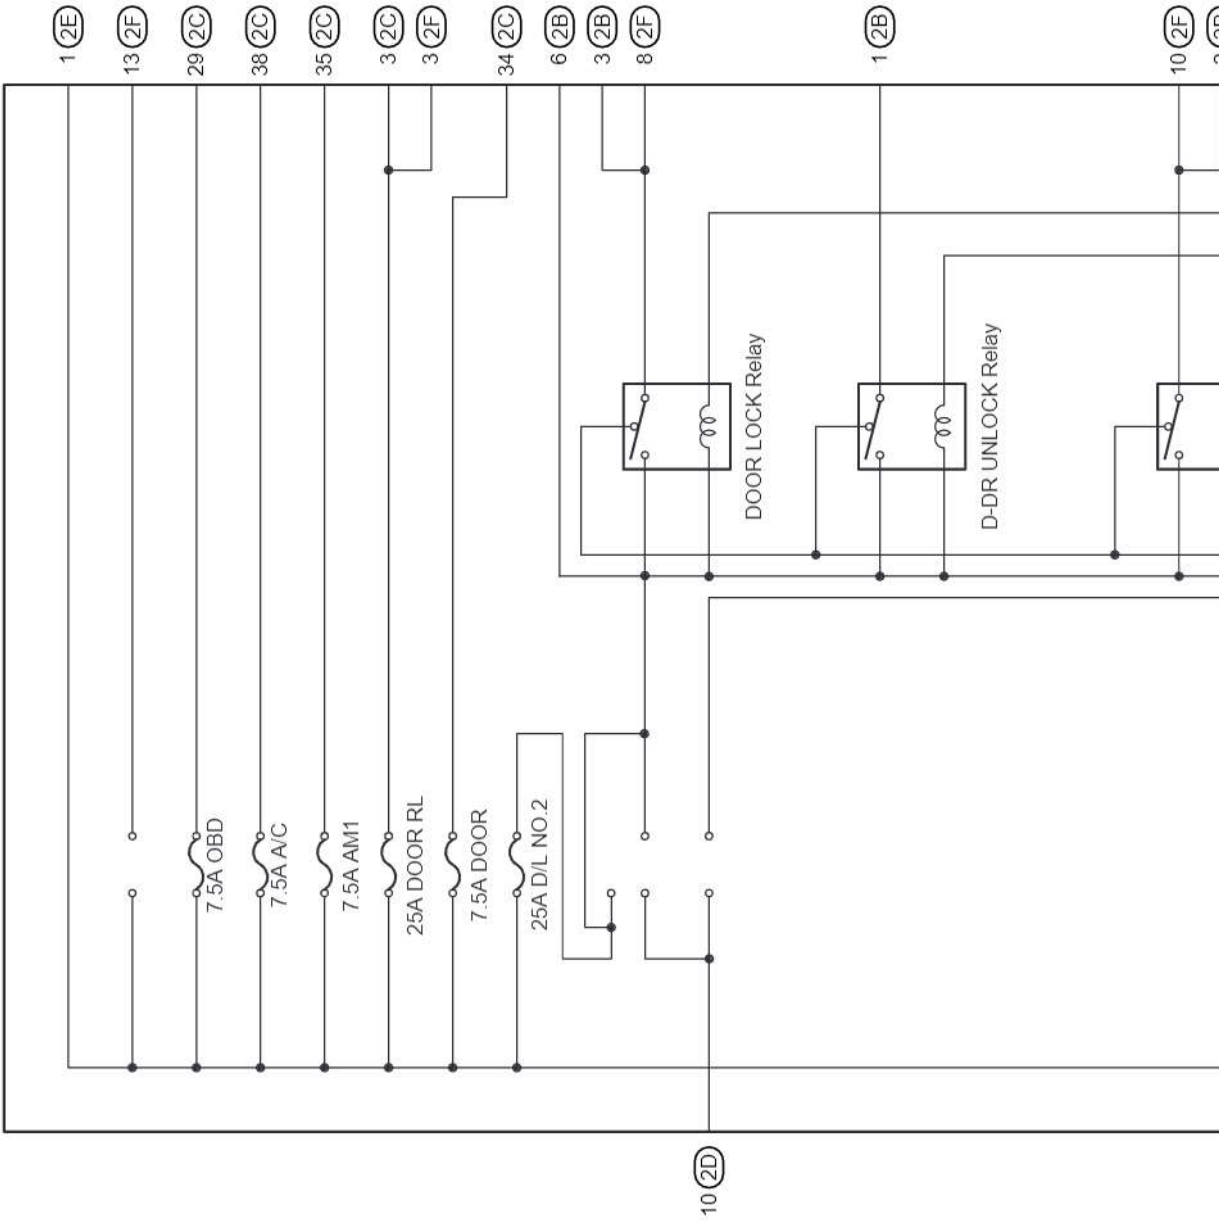


(Cont'd)

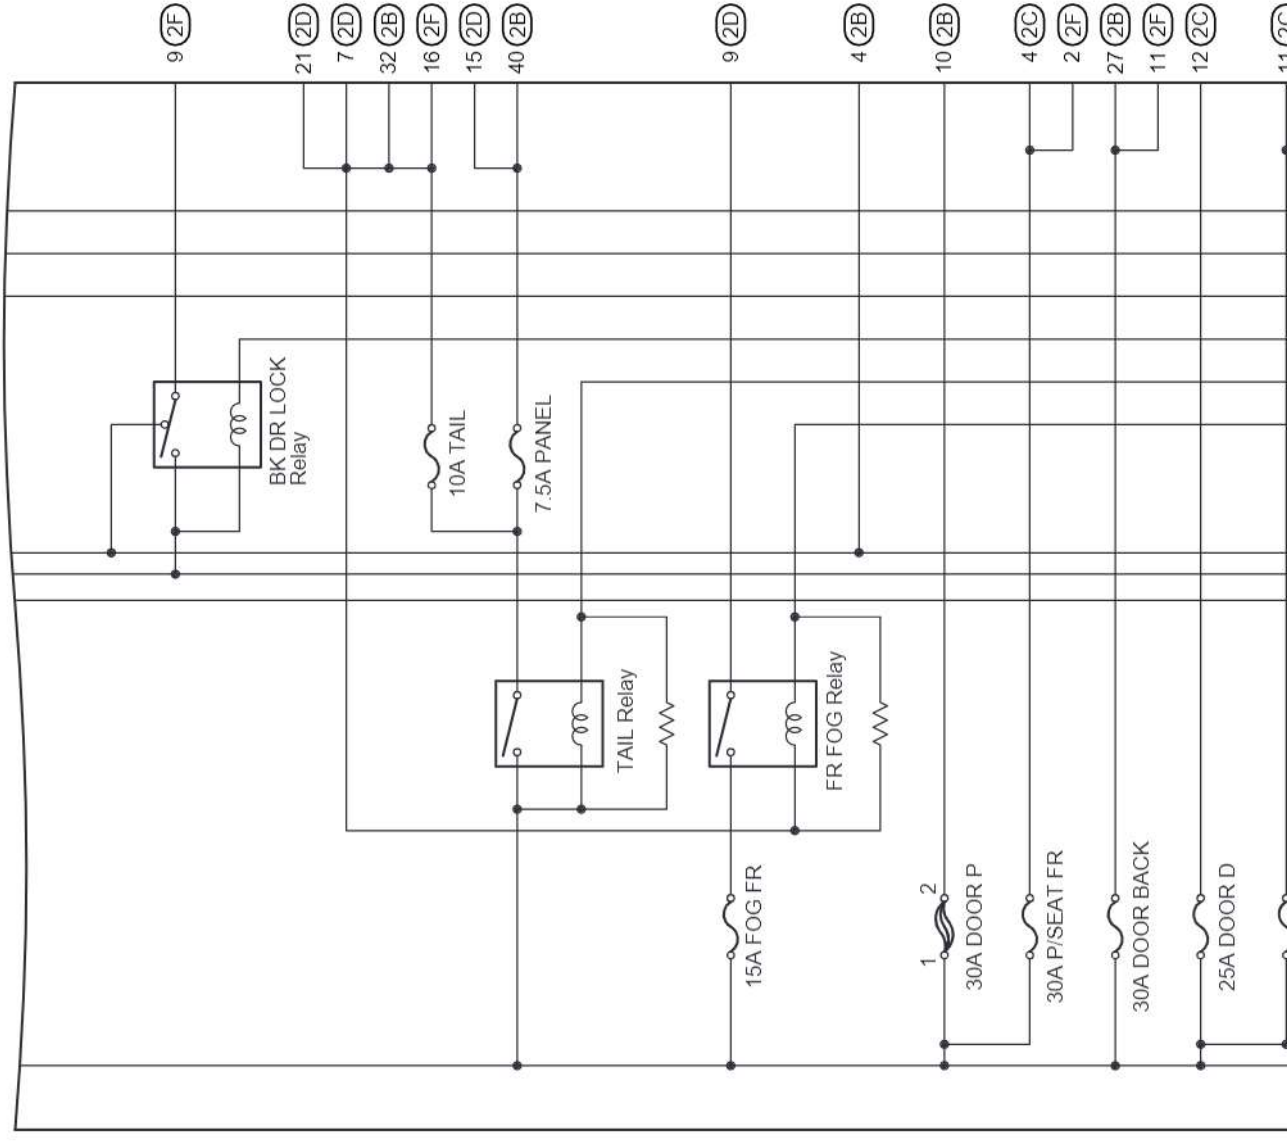


F RELAY LOCATIONS

[Driver Side J/B Assembly Inner Circuit]

(Cont'd)

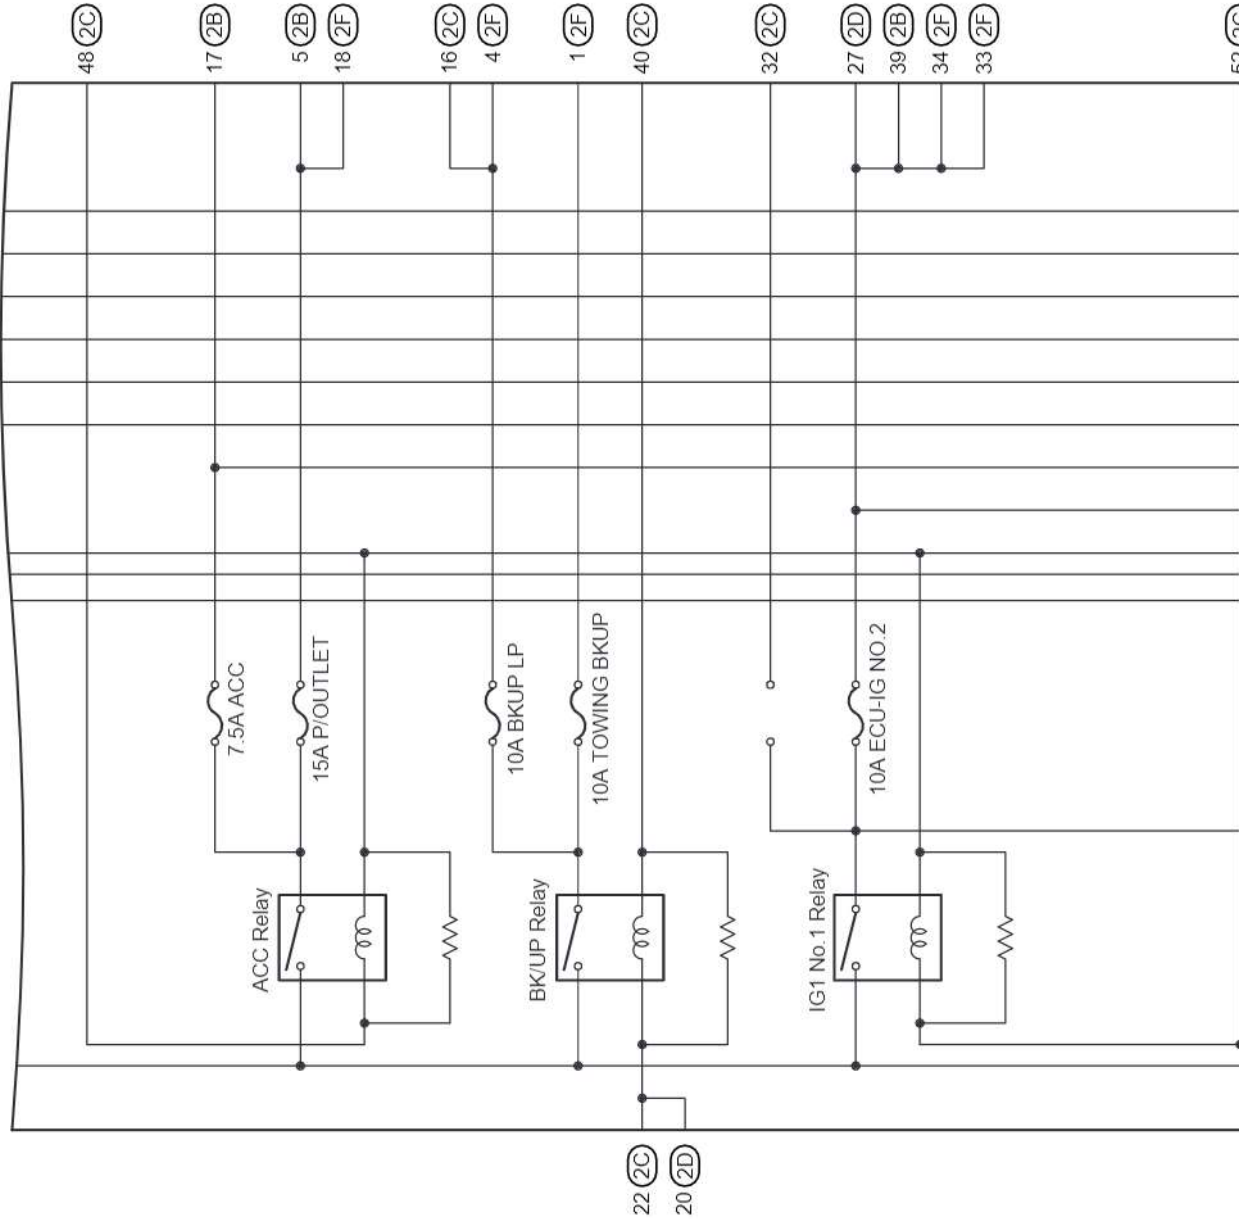


(Cont'd)

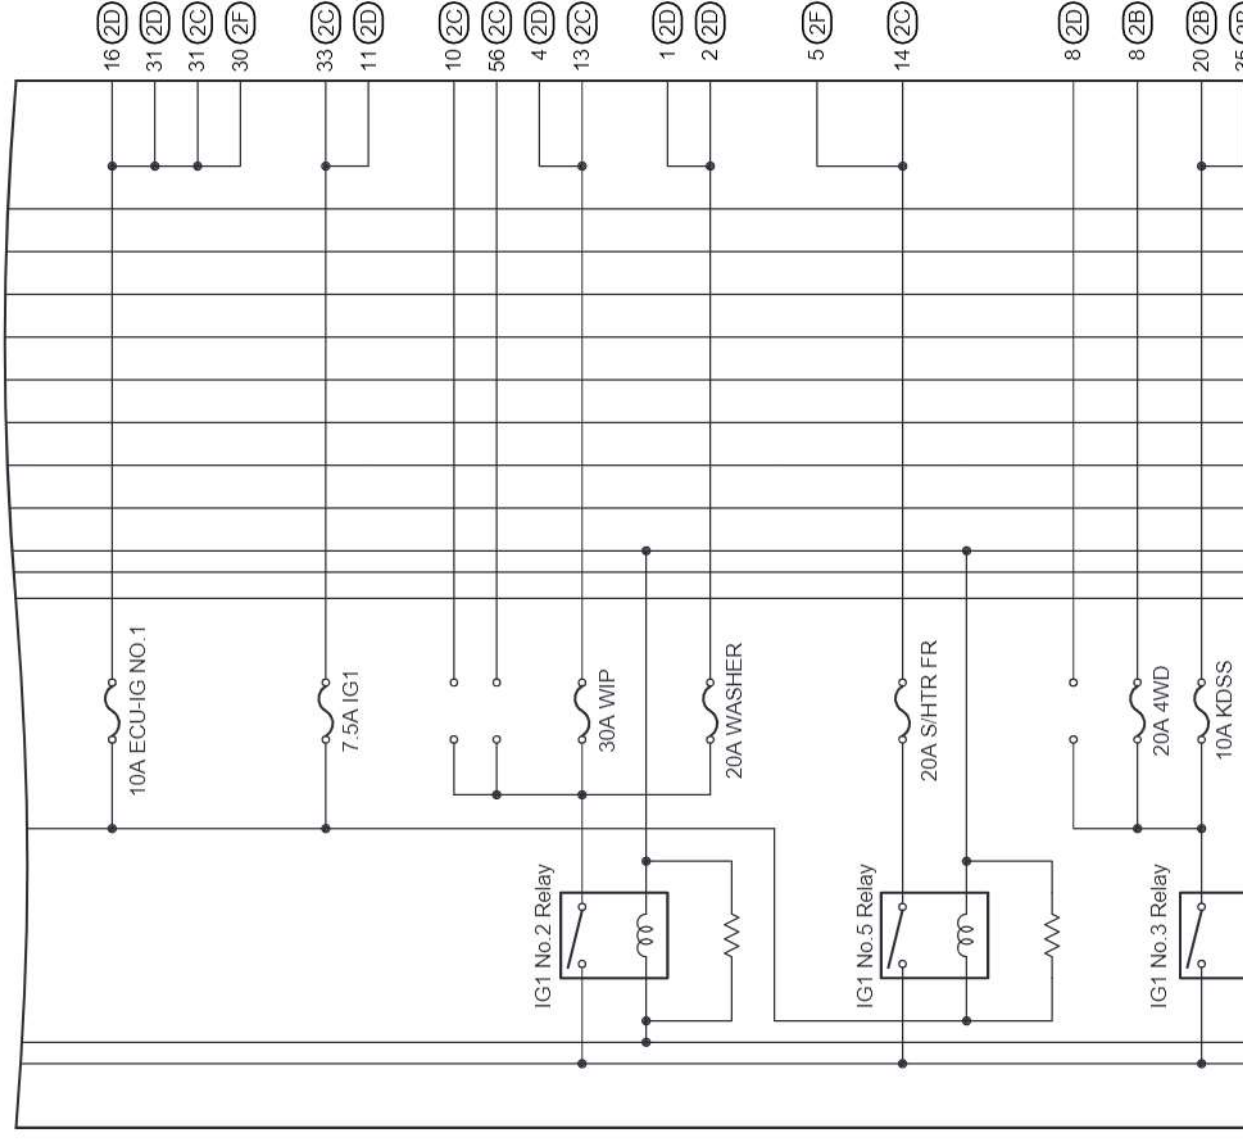


F RELAY LOCATIONS

[Driver Side J/B Assembly Inner Circuit]

(Cont'd)

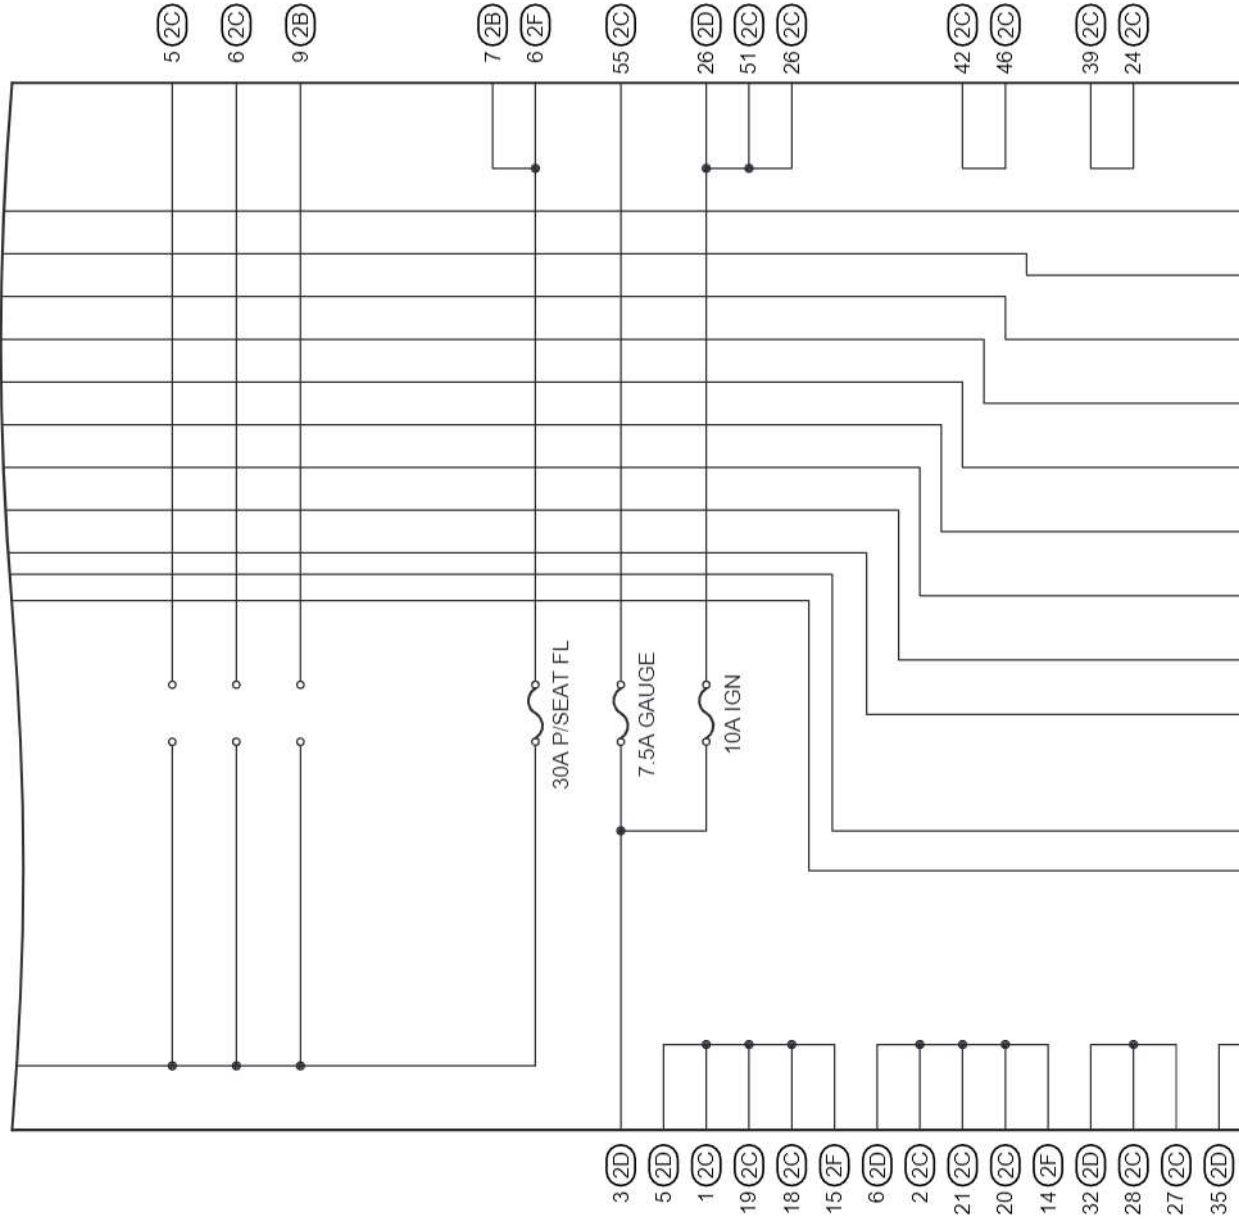


(Cont'd)

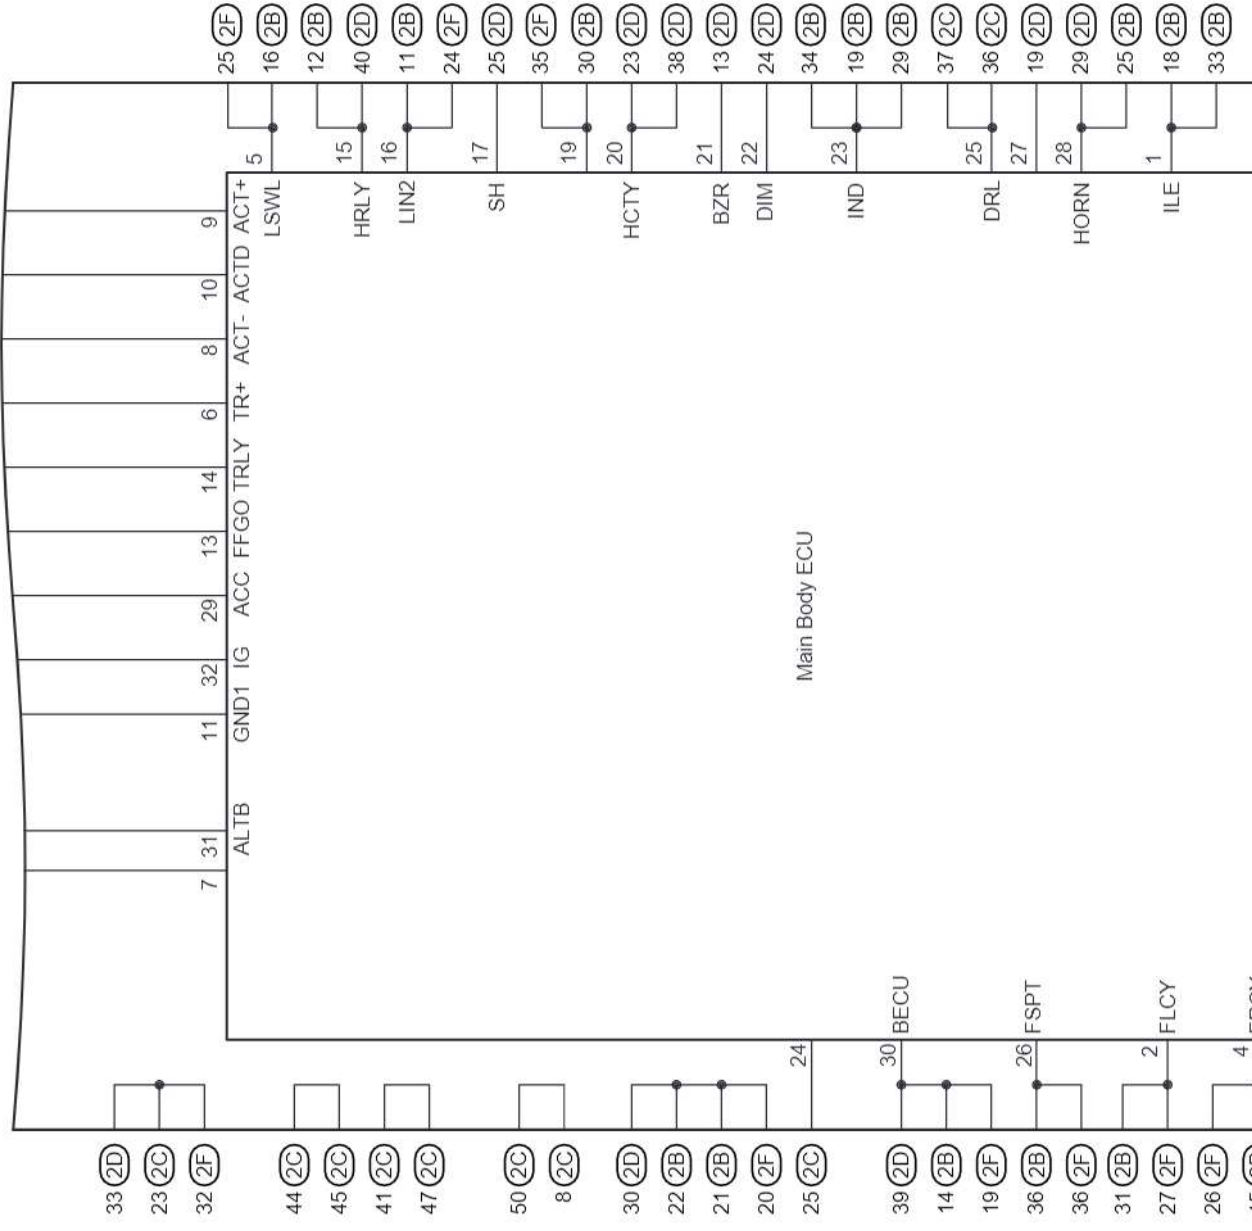


F RELAY LOCATIONS

	: Driver Side J/B Assembly	Instrument Panel Reinforcement (See Page 20)
---	----------------------------	--

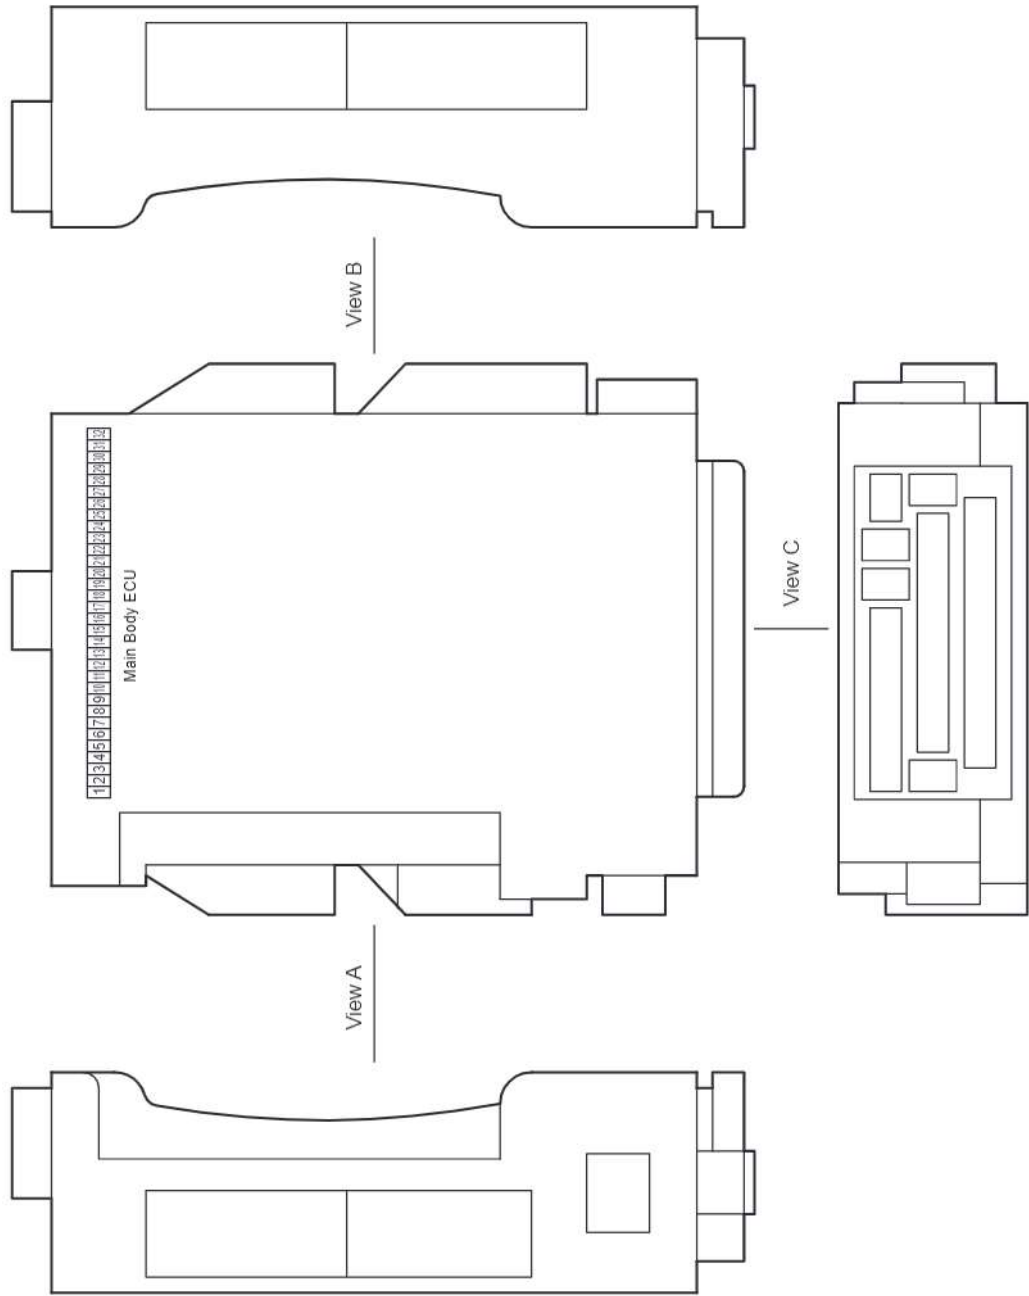


View A

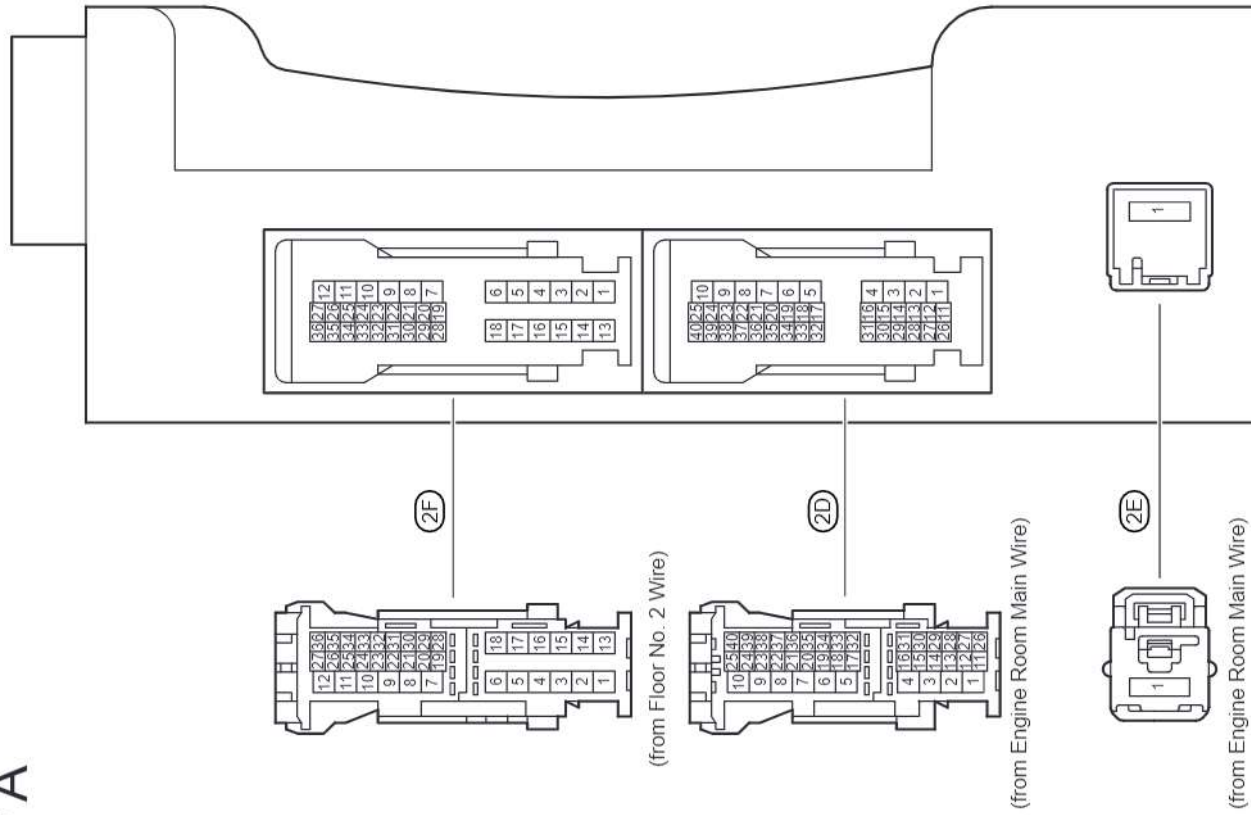

F RELAY LOCATIONS


	: Driver Side J/B Assembly	Instrument Panel Reinforcement (See Page 20)
---	----------------------------	--

View B

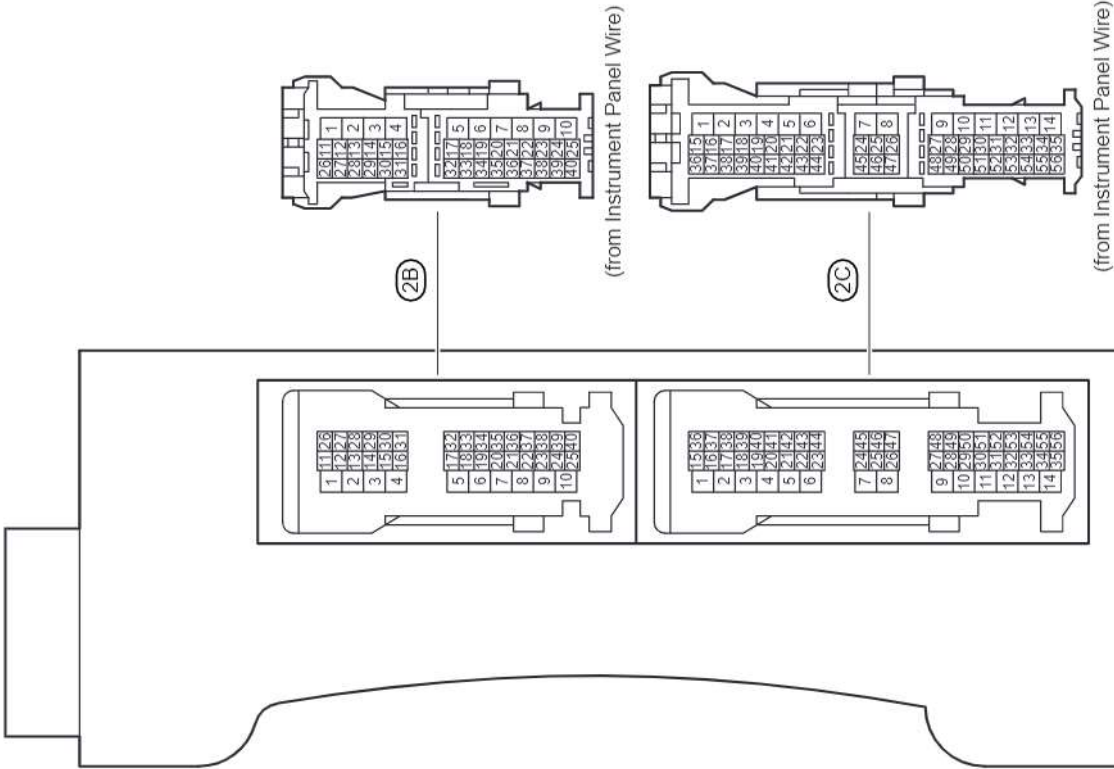

cardiagn.com

View C

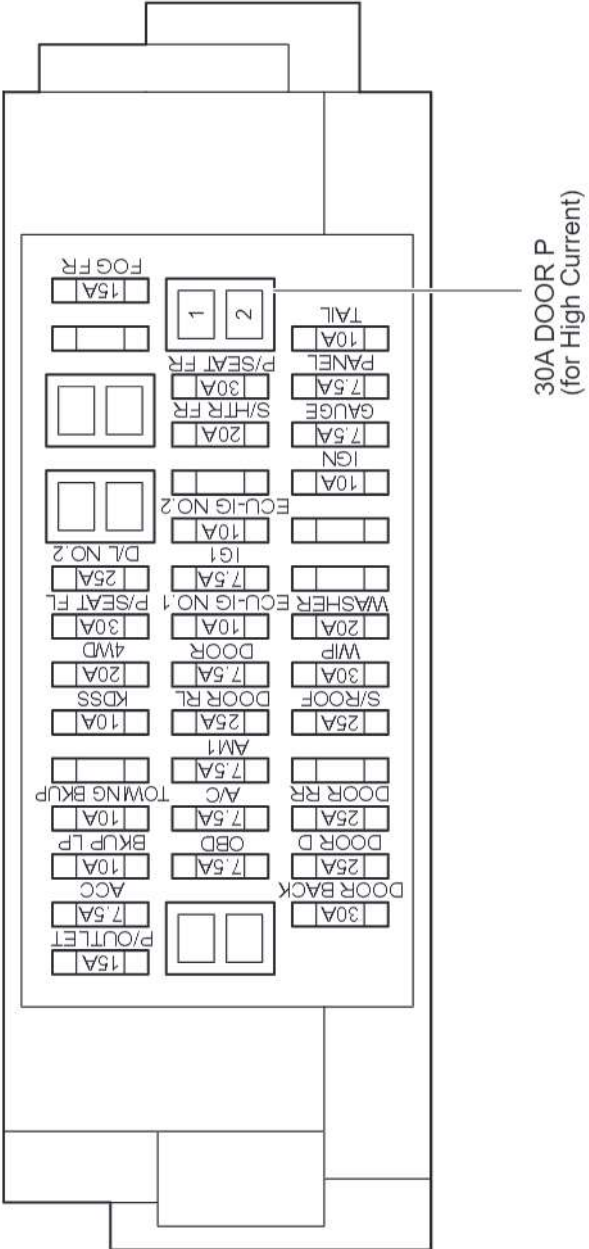


F RELAY LOCATIONS

[Engine Compartment]

Skid Control ECU with
Actuator Assembly

Engine Room R/B
No. 3 Assembly

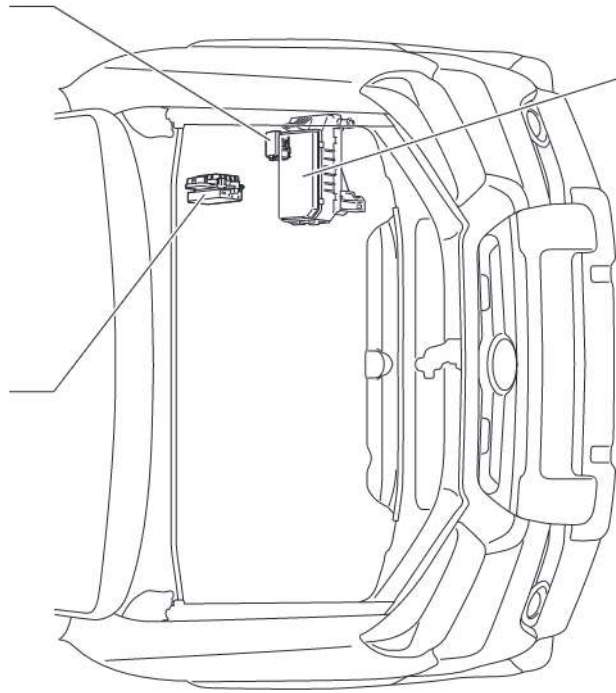

Engine Room R/B Assembly
Engine Room J/B Assembly

[Instrument Panel]


ID Code Box (*1) Transponder Key ECU Assembly (*2) Power Management Control ECU J/B No. 5 Passenger Side R/B Assembly * 1:w/ Smart Key System * 2:w/o Smart Key System

J/B No. 4 Clearance Warning ECU Assembly Tire Pressure Warning ECU Junction

Four Wheel Drive Control ECU Multi-Media Interface ECU Junction Connector (CAN No. 2)

F RELAY LOCATIONS

[Engine Room R/B Assembly and Engine Room J/B Assembly Inner Circuit]

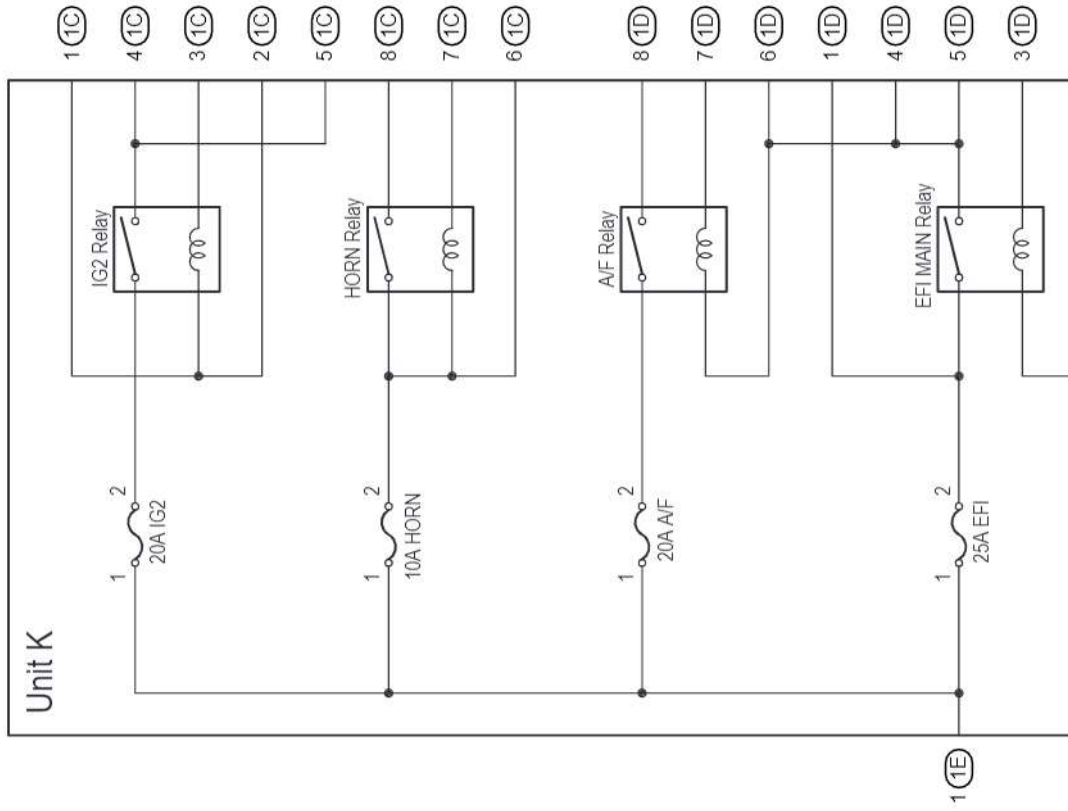

cardiagn.com


F RELAY LOCATIONS

1 : Engine Room R/B Assembly


2 : Engine Room J/B Assembly

- * 1: TOWING TAIL Relay
- * 2: PTC NO.1 Relay
- * 3: SUB BATT Relay
- * 4: 30A TOWING BRK
- * 5: 50A ABS NO.1 (for High Current)
- * 6: 30A ABS NO.2 (for High Current)
- * 8: 30A ST (for High Current)
- * 9: 50A HTR (for High Current)
- * 10: 80A 400W INV (for High Current)
- * 11: 30A PTC HTR NO.2 (for High Current)
- * 12: 140A ALT (for High Current)
- * 13: 80A P/I-B (for High Current)
- * 14: 50A PTC HTR NO.1 (for High Current)
- * 15: 30A TOWING TAIL
- * 16: 30A SUB BATT
- * 17: DEF Relay
- * 18: 30A PTC HTR NO.3 (for High Current)
- * 19: H-LP HI Relay
- * 20: STOP LP Relay
- * 21: C/OPN Relay
- * 22: DEICER Relay
- * 23: MIR HTR Relay
- * 24: WASHER RR Relay
- * 25: S-HORN Relay
- * 26: A/C COMP Relay
- * 28: ST Relay
- * 30: H-LP LO Relay


Front Fender Apron LH (See Page 20)

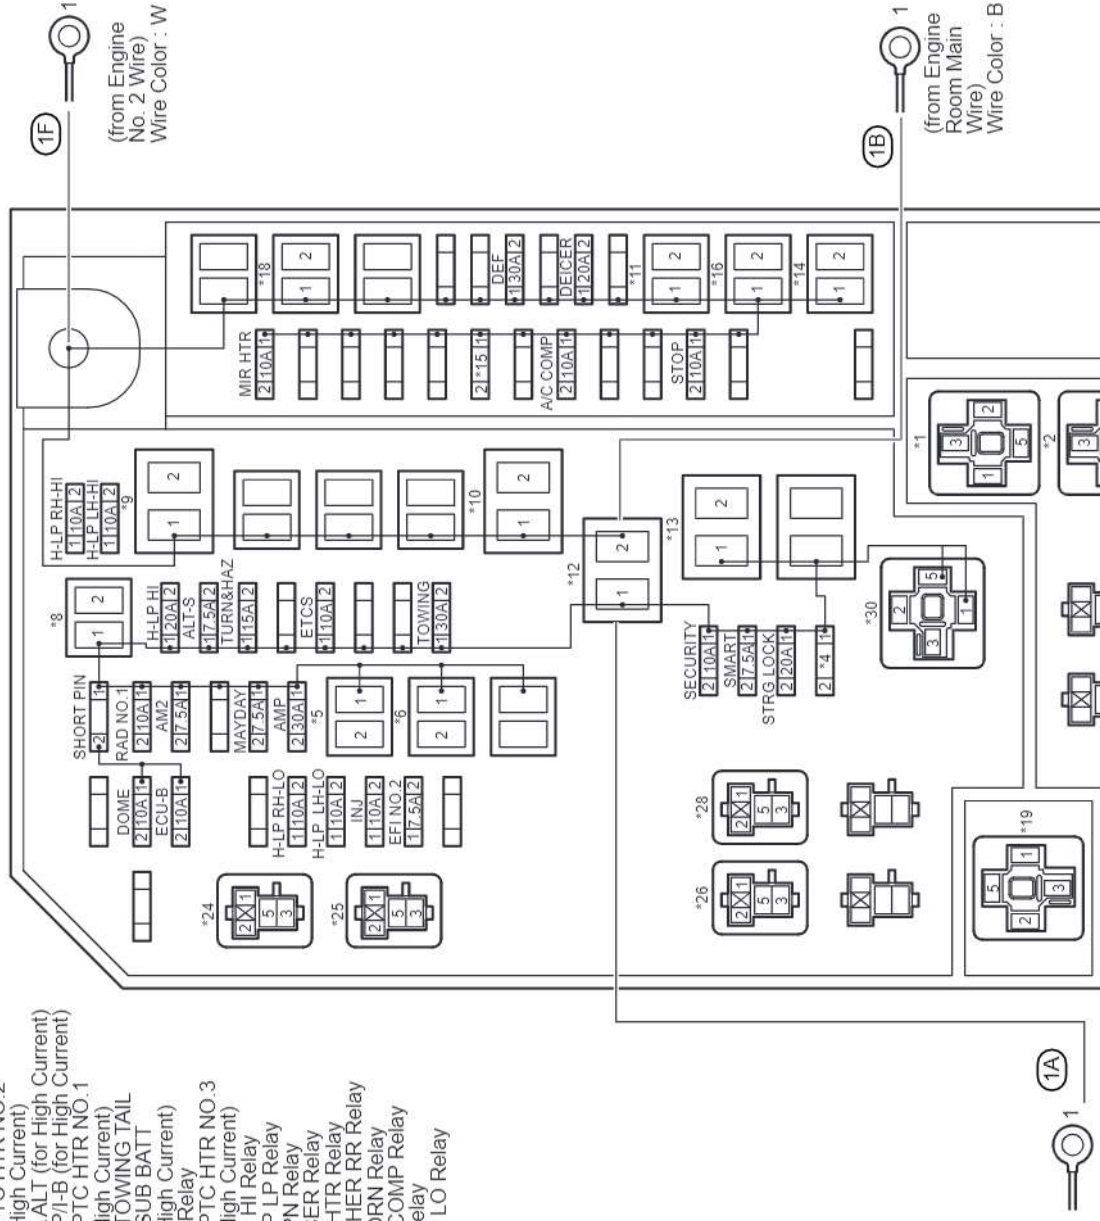


Unit K

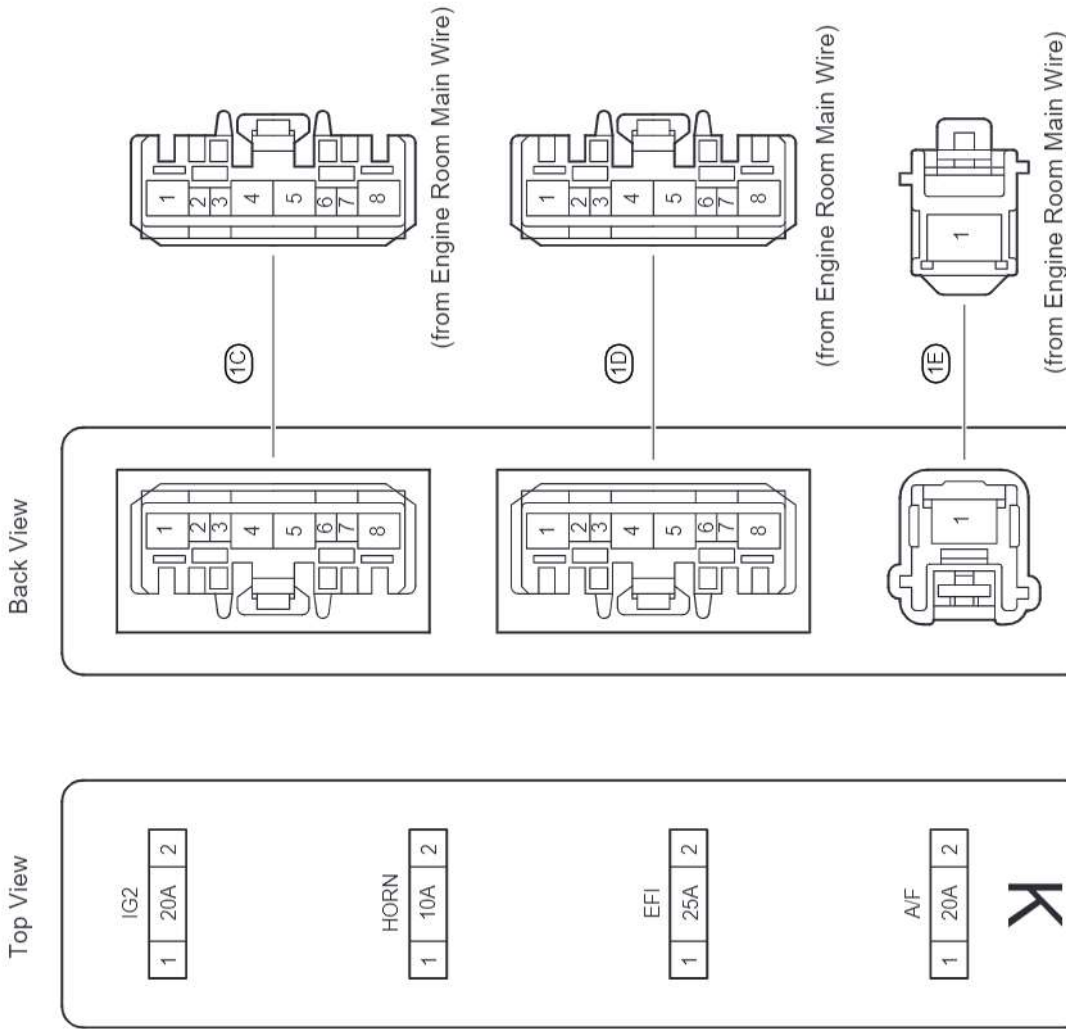

③ : Engine Room R/B No. 3 Assembly	Front Fender Apron LH (See Page 20)
------------------------------------	-------------------------------------

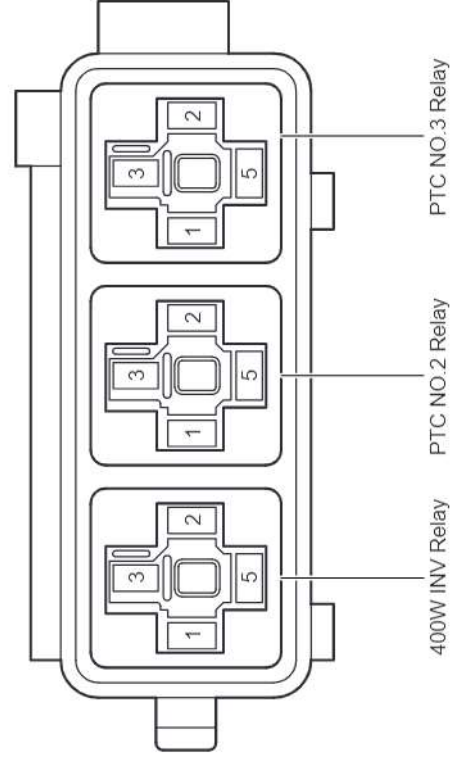


[J/B No. 4 Inner Circuit]

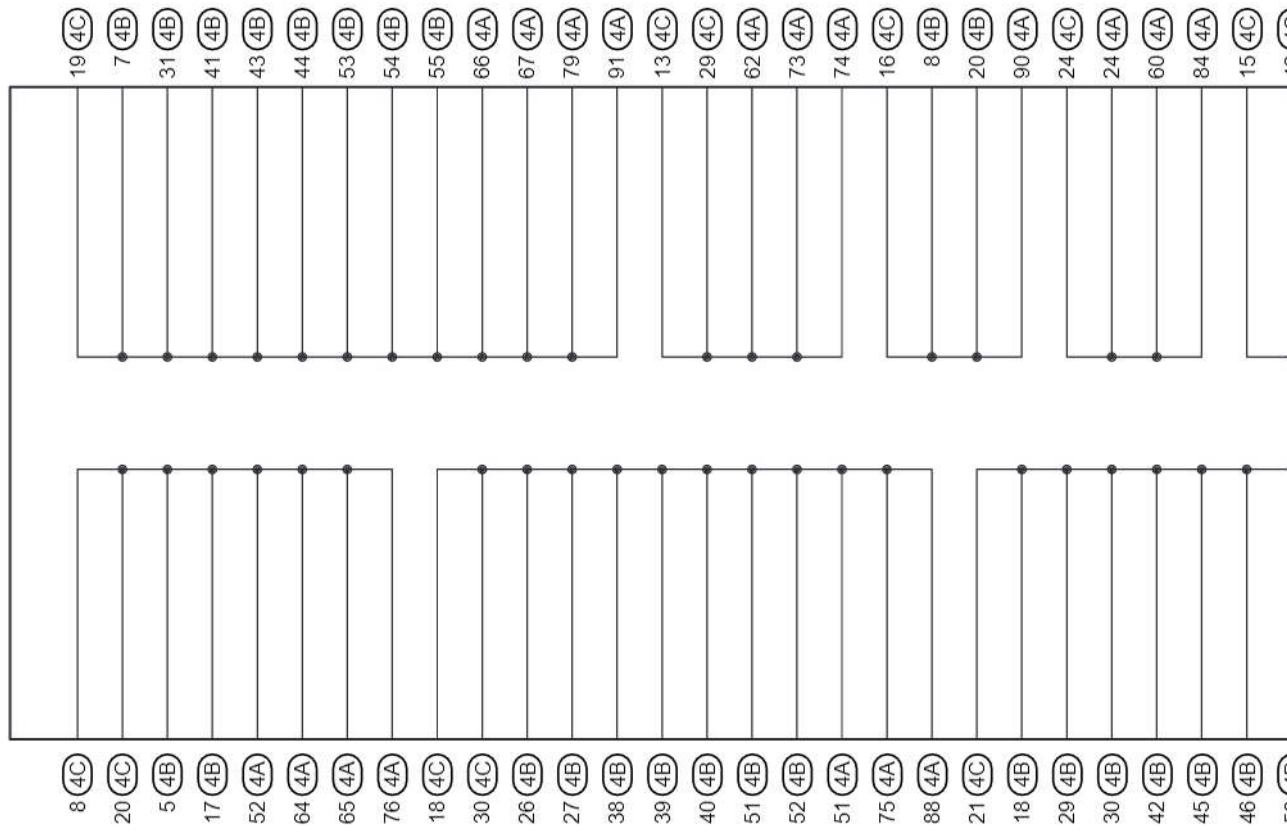

cardiagn.com

F RELAY LOCATIONS

[J/B No. 4 Inner Circuit]

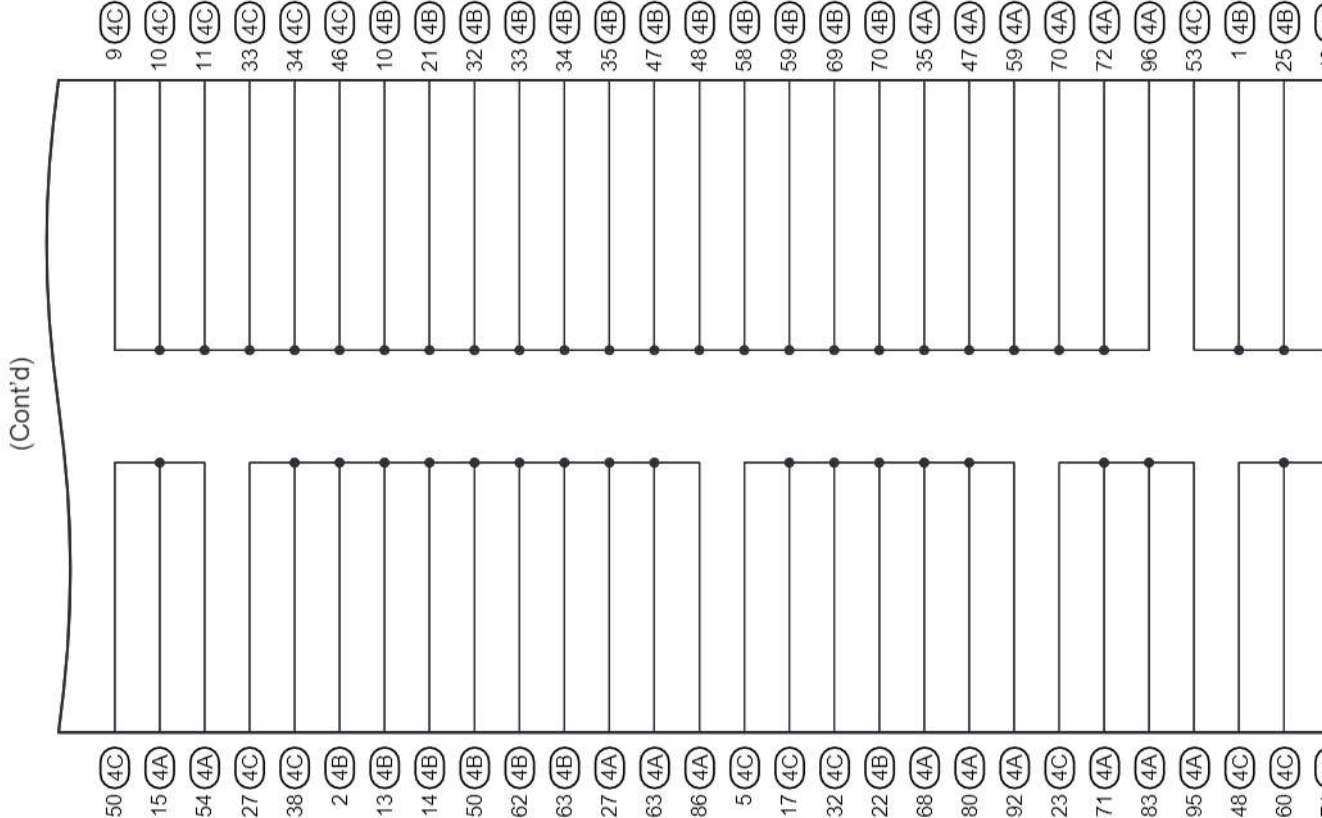


(Cont'd)

54 (4C)			23 (4B)
3 (4B)			82 (4A)
4 (4B)			94 (4A)
49 (4C)			56 (4A)
3 (4A)			57 (4A)
61 (4A)			69 (4A)
57 (4C)			22 (4A)
68 (4B)			23 (4A)
48 (4A)			34 (4A)
14 (4C)			58 (4A)
66 (4B)			77 (4A)
37 (4A)			78 (4A)
35 (4C)			7 (4A)
59 (4C)			19 (4A)
22 (4C)			8 (4A)
11 (4B)			20 (4A)
12 (4B)			9 (4A)
72 (4B)			21 (4A)
28 (4B)			36 (4C)
17 (4A)			58 (4C)
18 (4A)			16 (4A)
37 (4B)			28 (4A)
13 (4A)			25 (4C)
38 (4A)			14 (4A)
28 (4C)			31 (4C)
65 (4B)			55 (4C)
4 (4A)			6 (4C)


F RELAY LOCATIONS

[J/B No. 4 Inner Circuit]

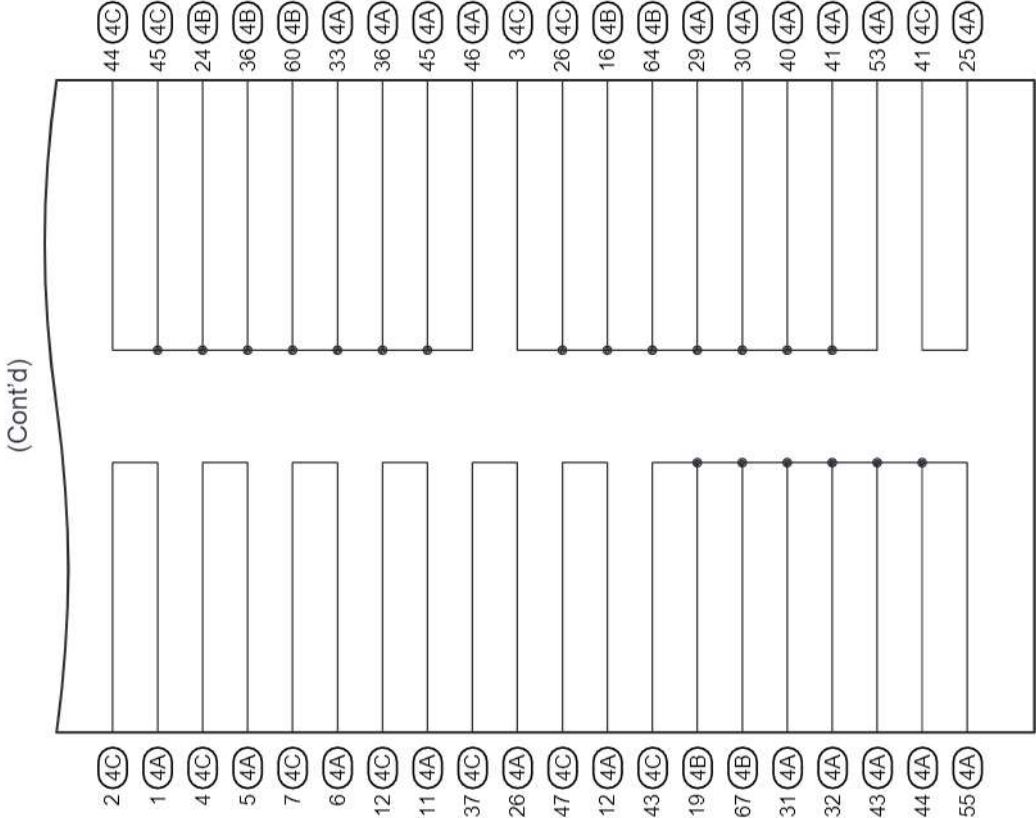


F RELAY LOCATIONS

 : J/B No. 4 Instrument Panel Reinforcement (See Page 20)

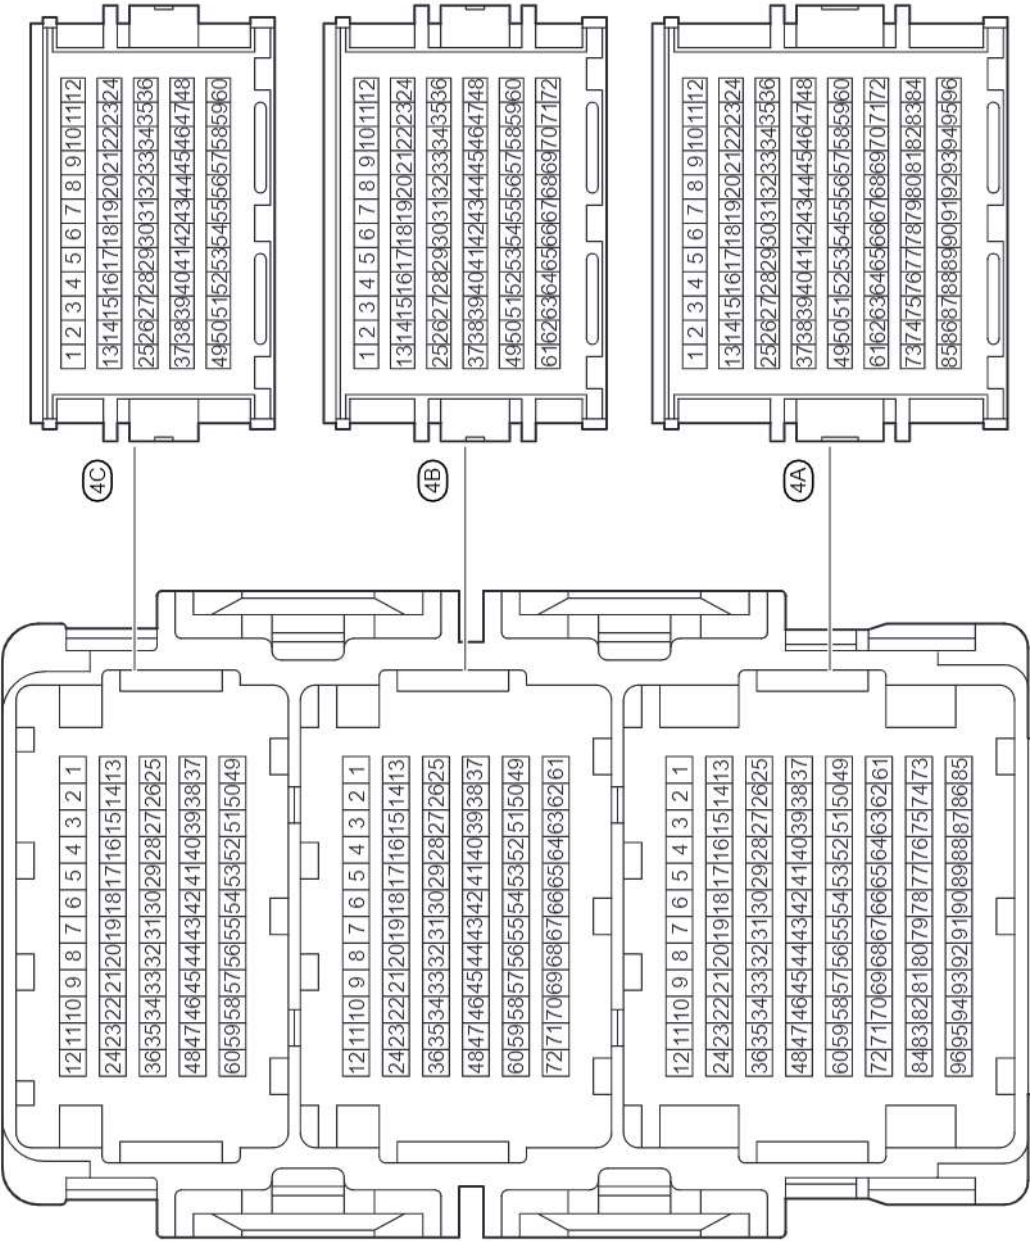


[J/B No. 5 Inner Circuit]

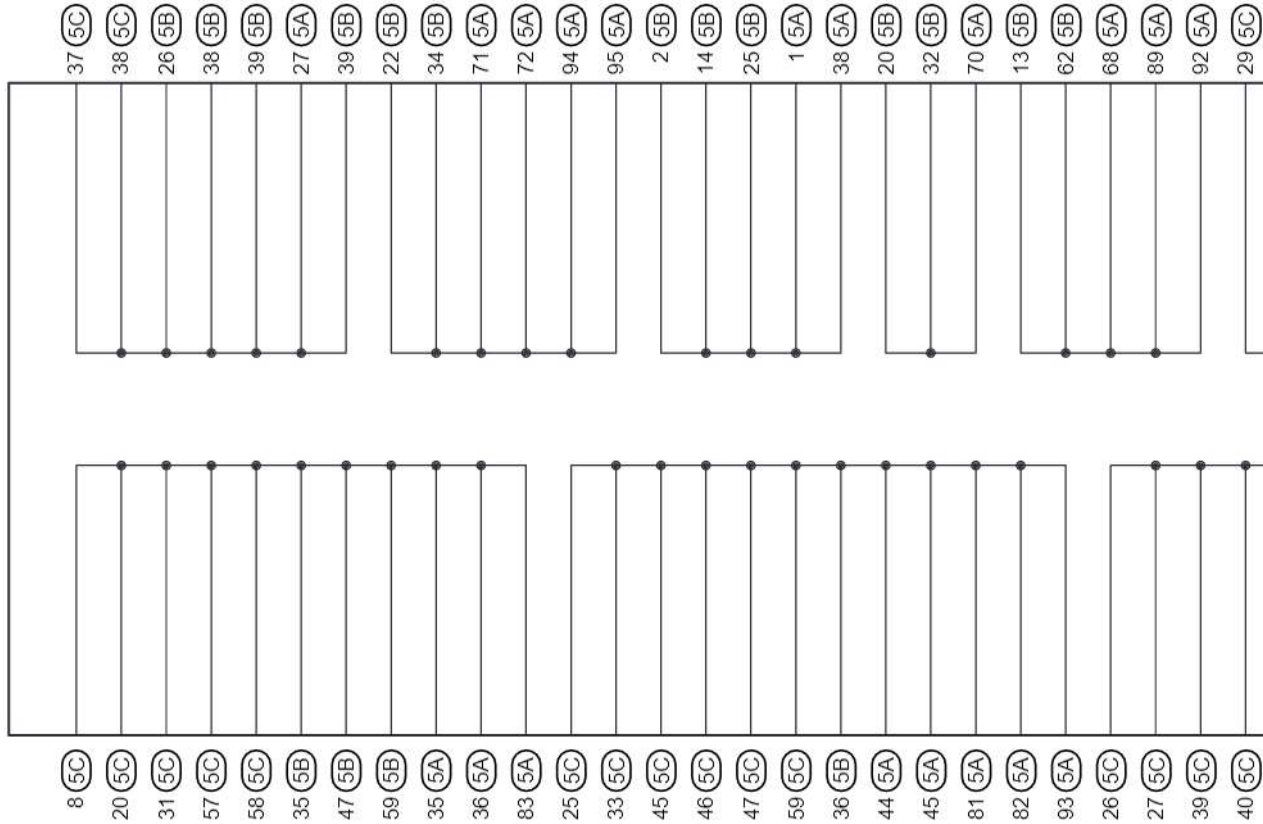

F RELAY LOCATIONS

[J/B No. 5 Inner Circuit]

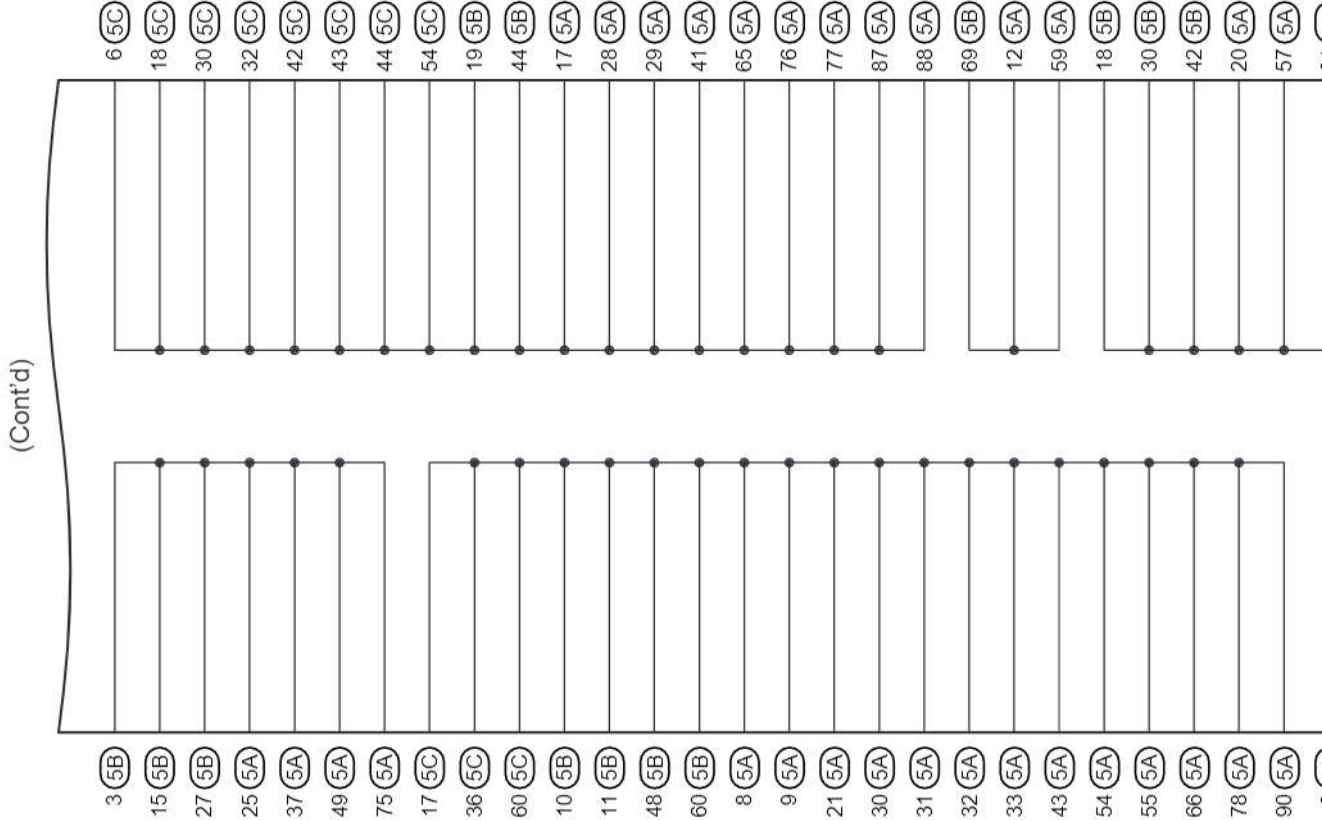


(Cont'd)

55 (5C)			49 (5B)
43 (5B)			14 (5A)
56 (5B)			26 (5A)
67 (5B)			5 (5B)
22 (5A)			54 (5B)
34 (5A)			55 (5B)
46 (5A)			18 (5A)
12 (5B)			1 (5B)
72 (5B)			50 (5B)
71 (5B)			51 (5B)
48 (5A)			28 (5C)
29 (5B)			52 (5C)
41 (5B)			6 (5B)
7 (5B)			68 (5B)
17 (5B)			10 (5A)
53 (5B)			66 (5B)
65 (5B)			5 (5A)
3 (5A)			52 (5A)
21 (5B)			64 (5A)
67 (5A)			51 (5A)
6 (5A)			63 (5A)
7 (5A)			52 (5B)
19 (5A)			64 (5B)
51 (5C)			50 (5A)
4 (5B)			62 (5A)
4 (5A)			60 (5A)
16 (5A)			69 (5A)
5 (5A)			5 (5A)


F RELAY LOCATIONS

[J/B No. 5 Inner Circuit]

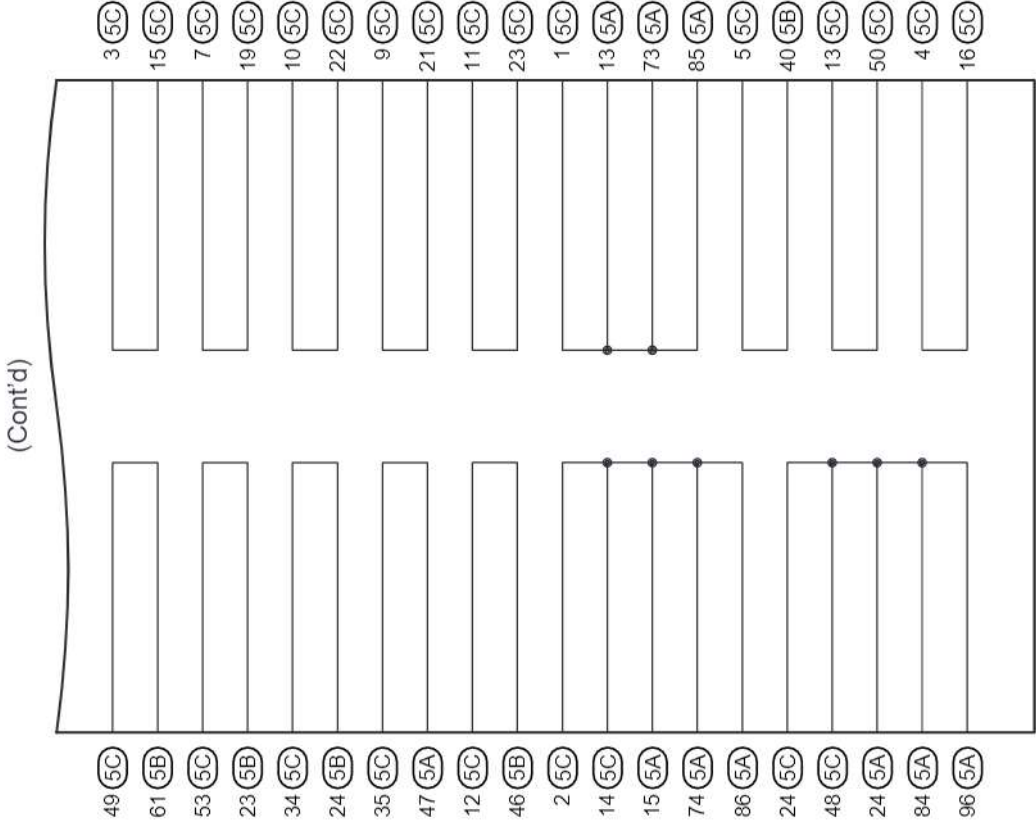

F RELAY LOCATIONS


 : J/B No. 5 Instrument Panel Reinforcement (See Page 20)

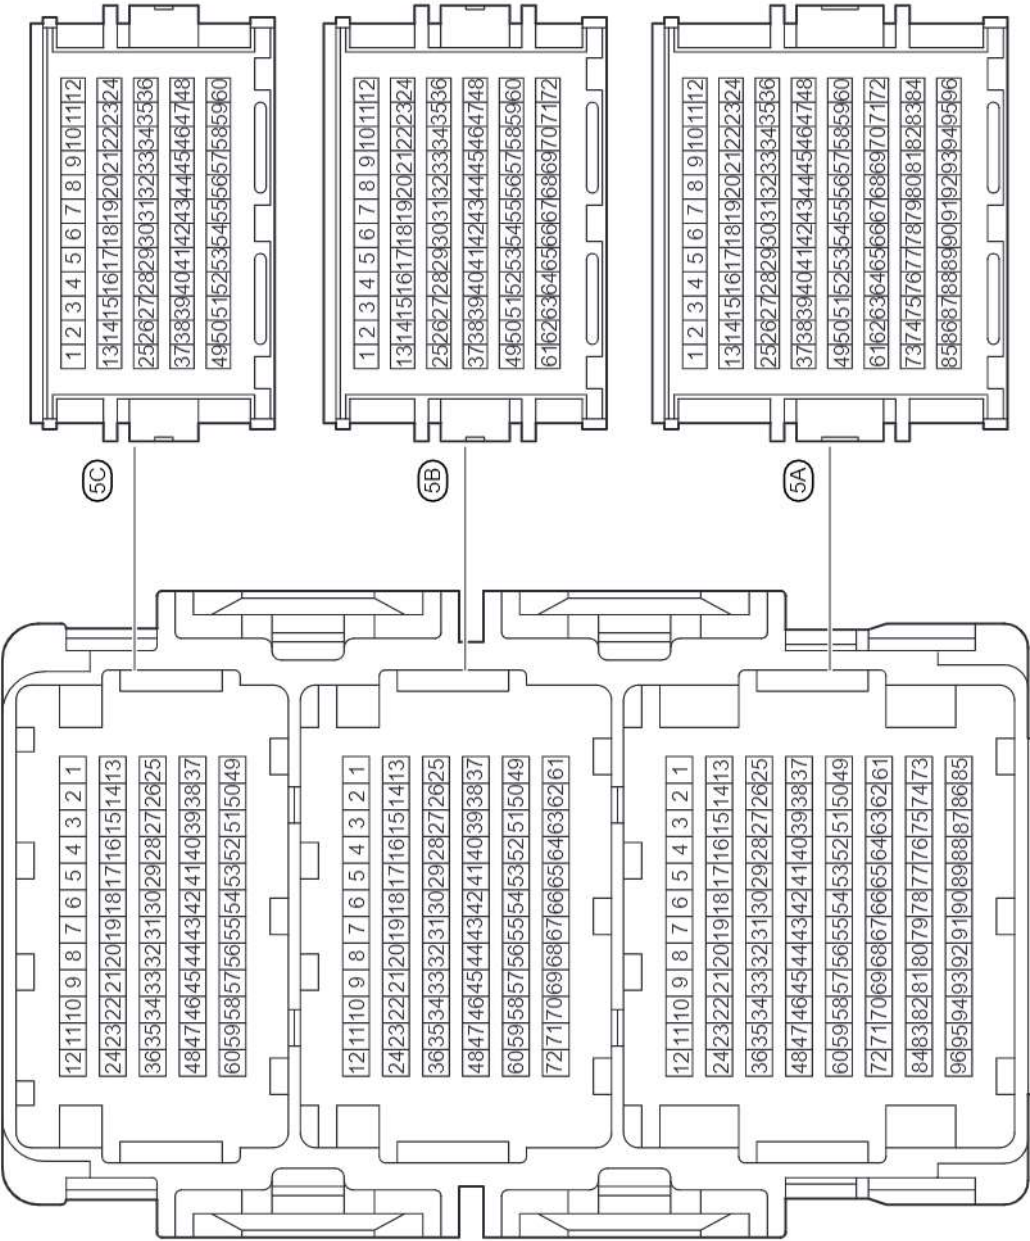


cardiagn.com

F RELAY LOCATIONS

Junction Connector (CAN No. 1)	Instrument Panel Reinforcement (See Page 20)
--------------------------------	--

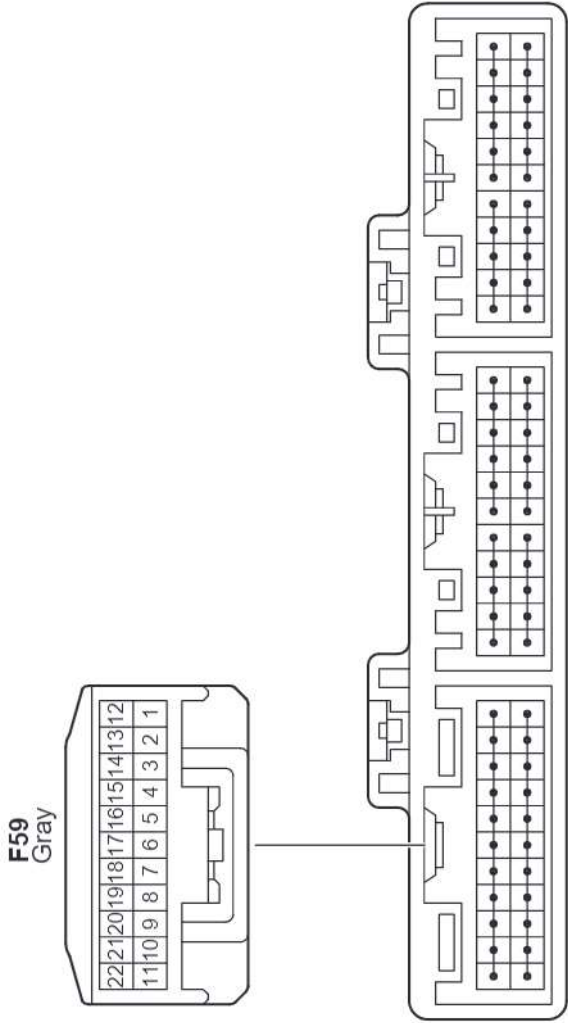



Junction Connector (CAN No. 2) Instrument Panel Reinforcement (See Page 20)

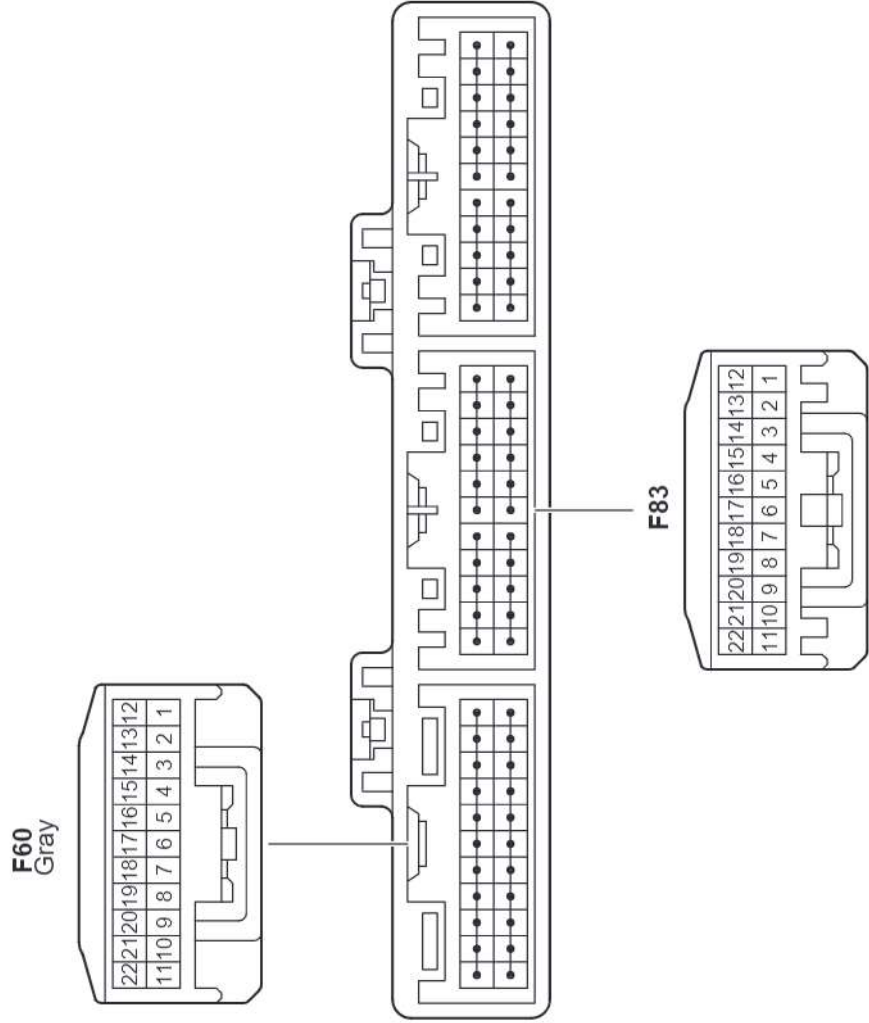

F RELAY LOCATIONS





⑥ : Passenger Side R/B Assembly	Instrument Panel Reinforcement (See Page 20)
---------------------------------	--

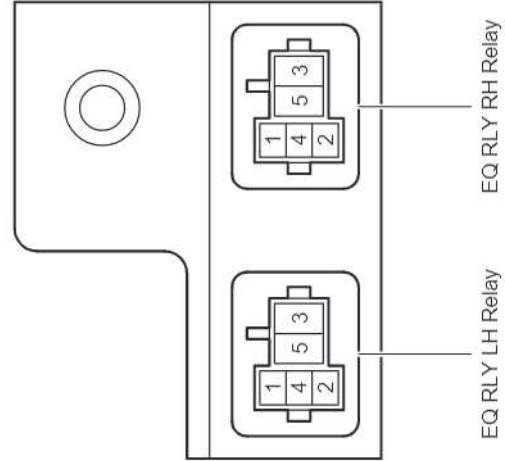


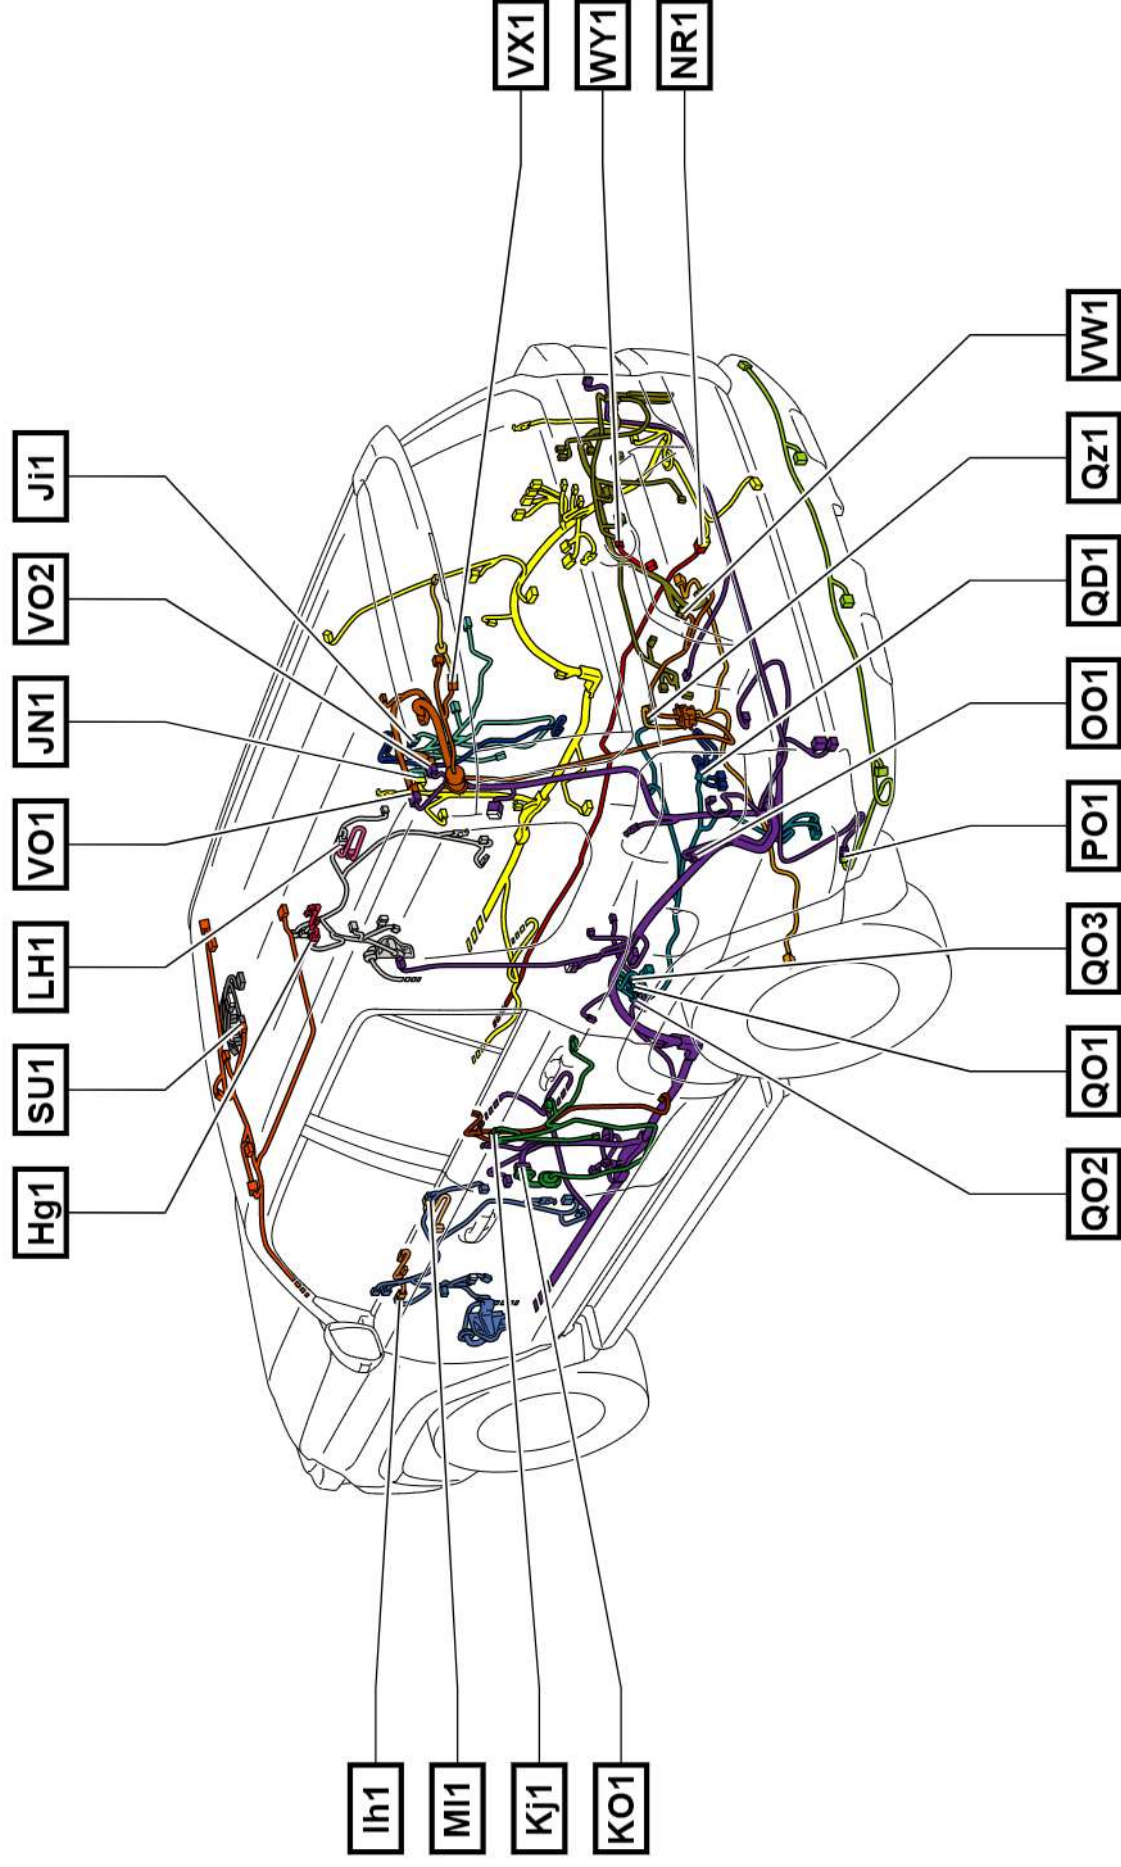


Hg1
White



Ih1
White

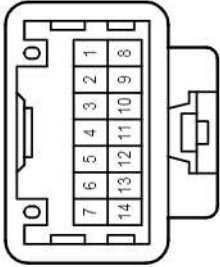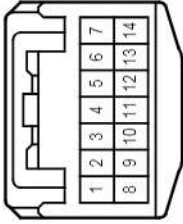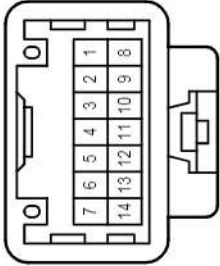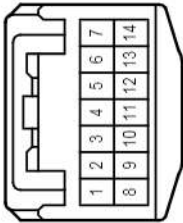



JN1
White

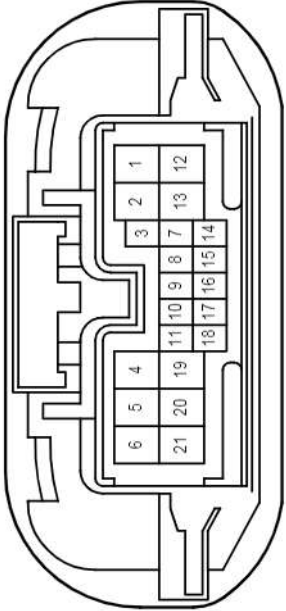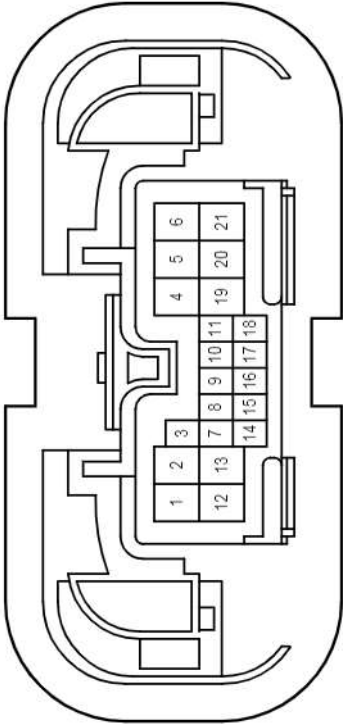

Ji1
White

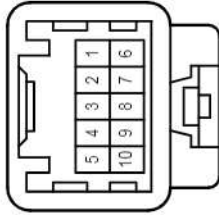
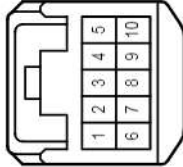


KO1
White

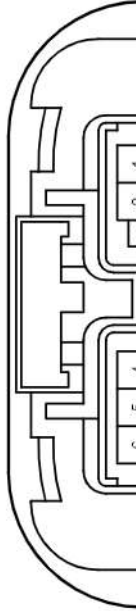
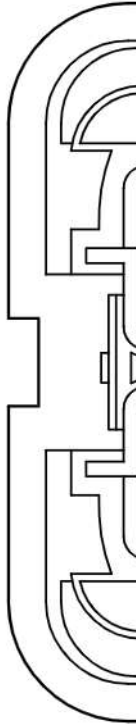


Wire and Wire in Body



KJ1
White

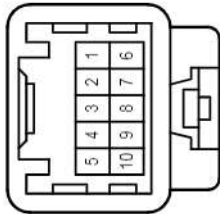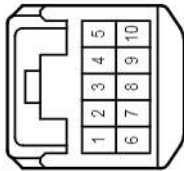


LH1
White

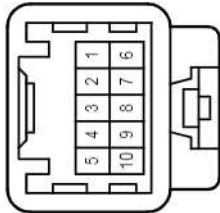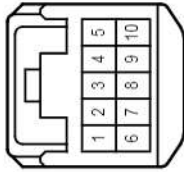



MI1
White

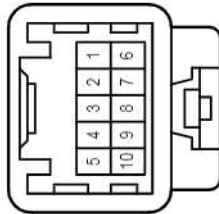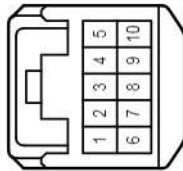



NR1
Black

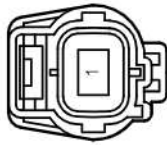



OO1
White

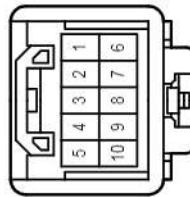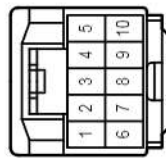



PO1
White



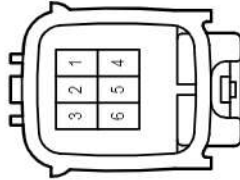
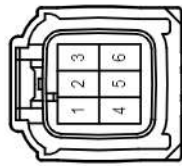



QD1
Gray

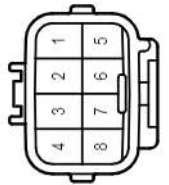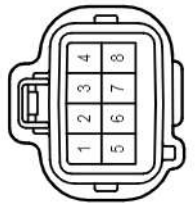


QO1
White

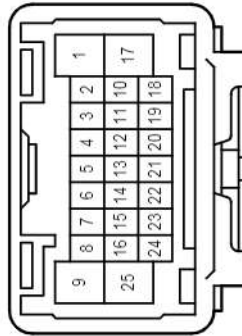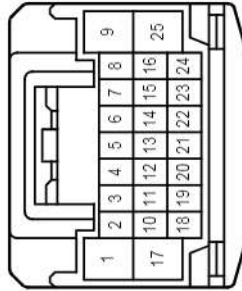


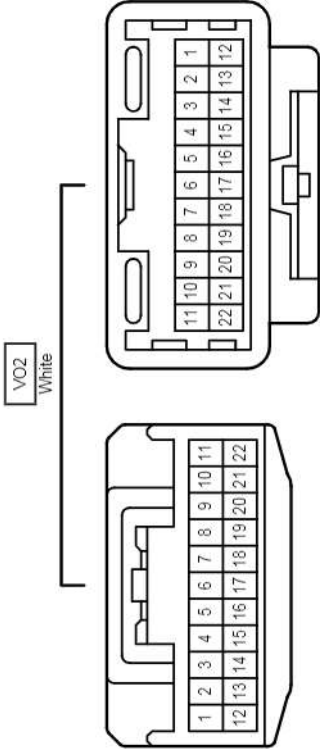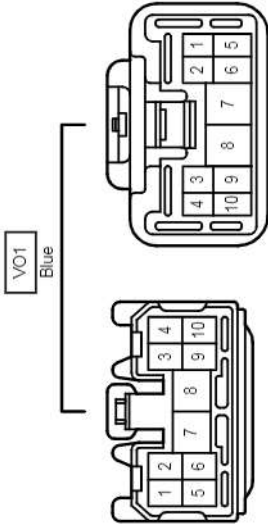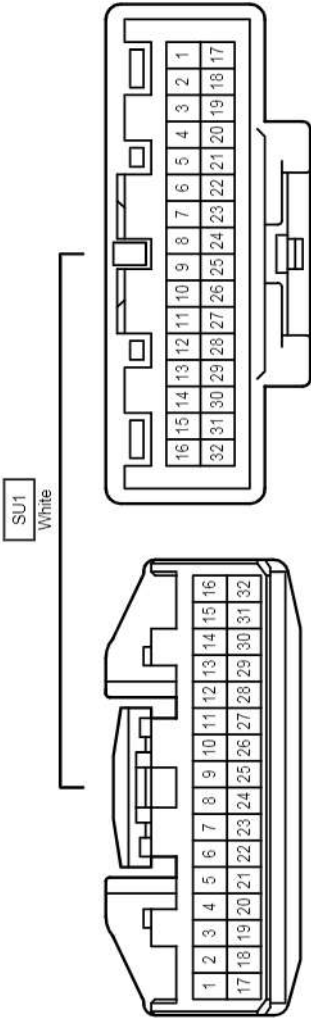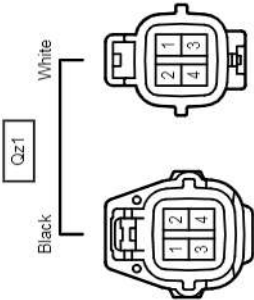


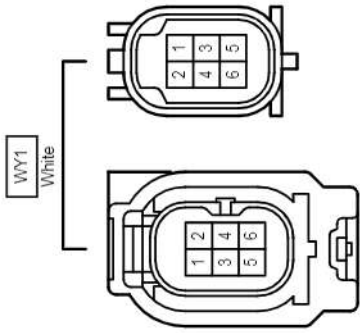

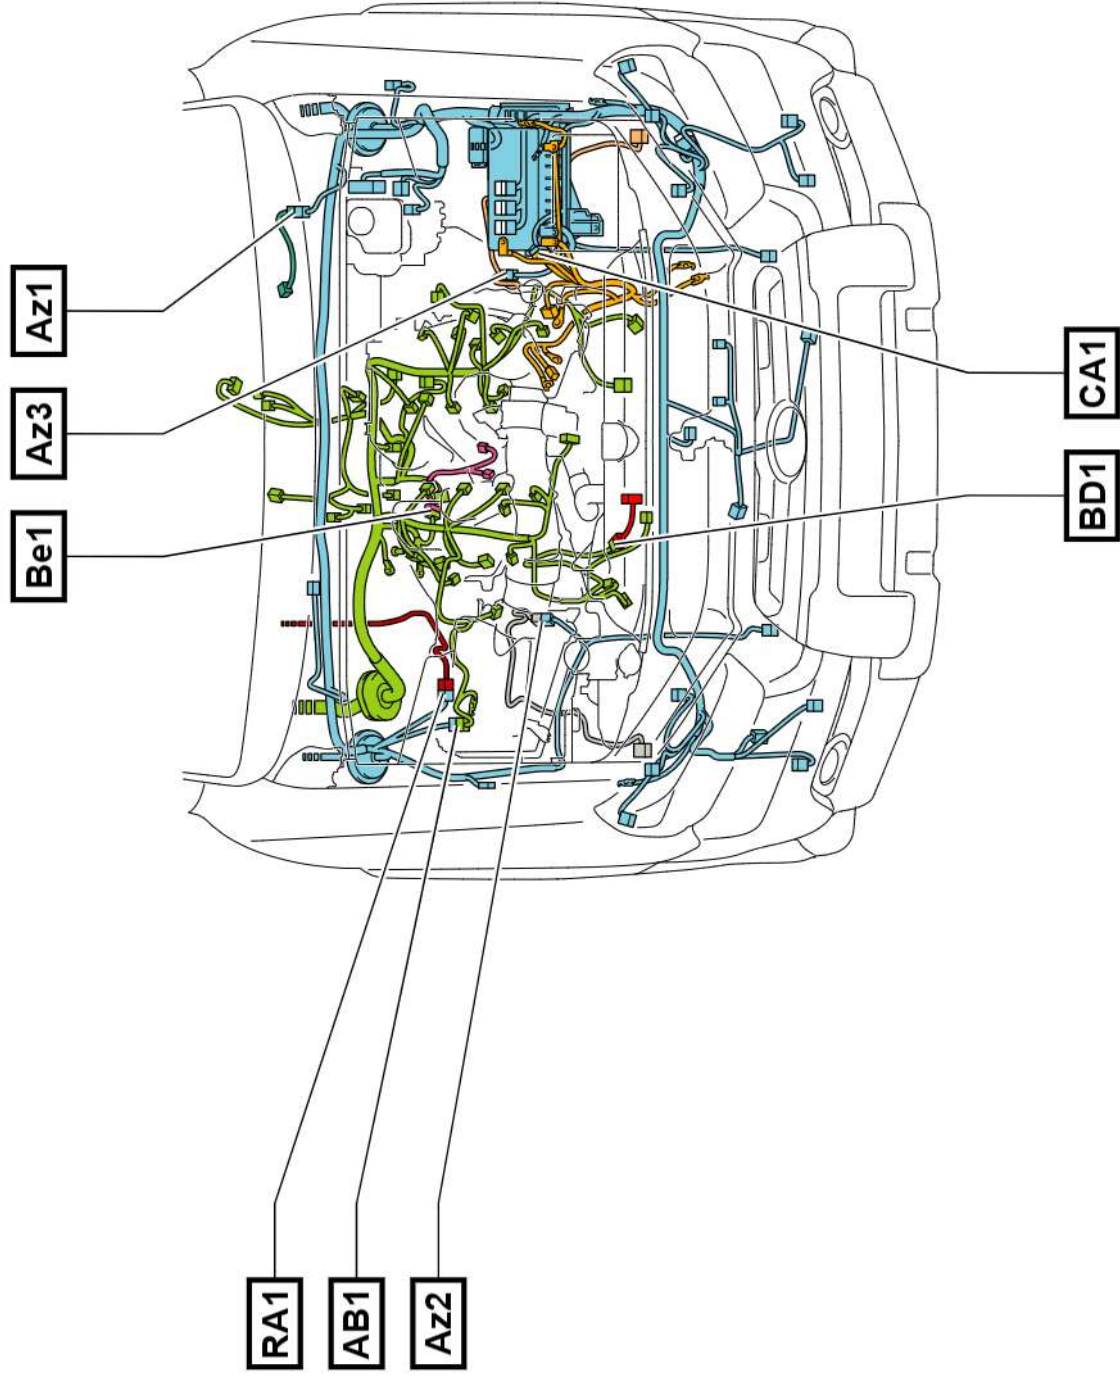


Wire and Wire in Engine Compartment

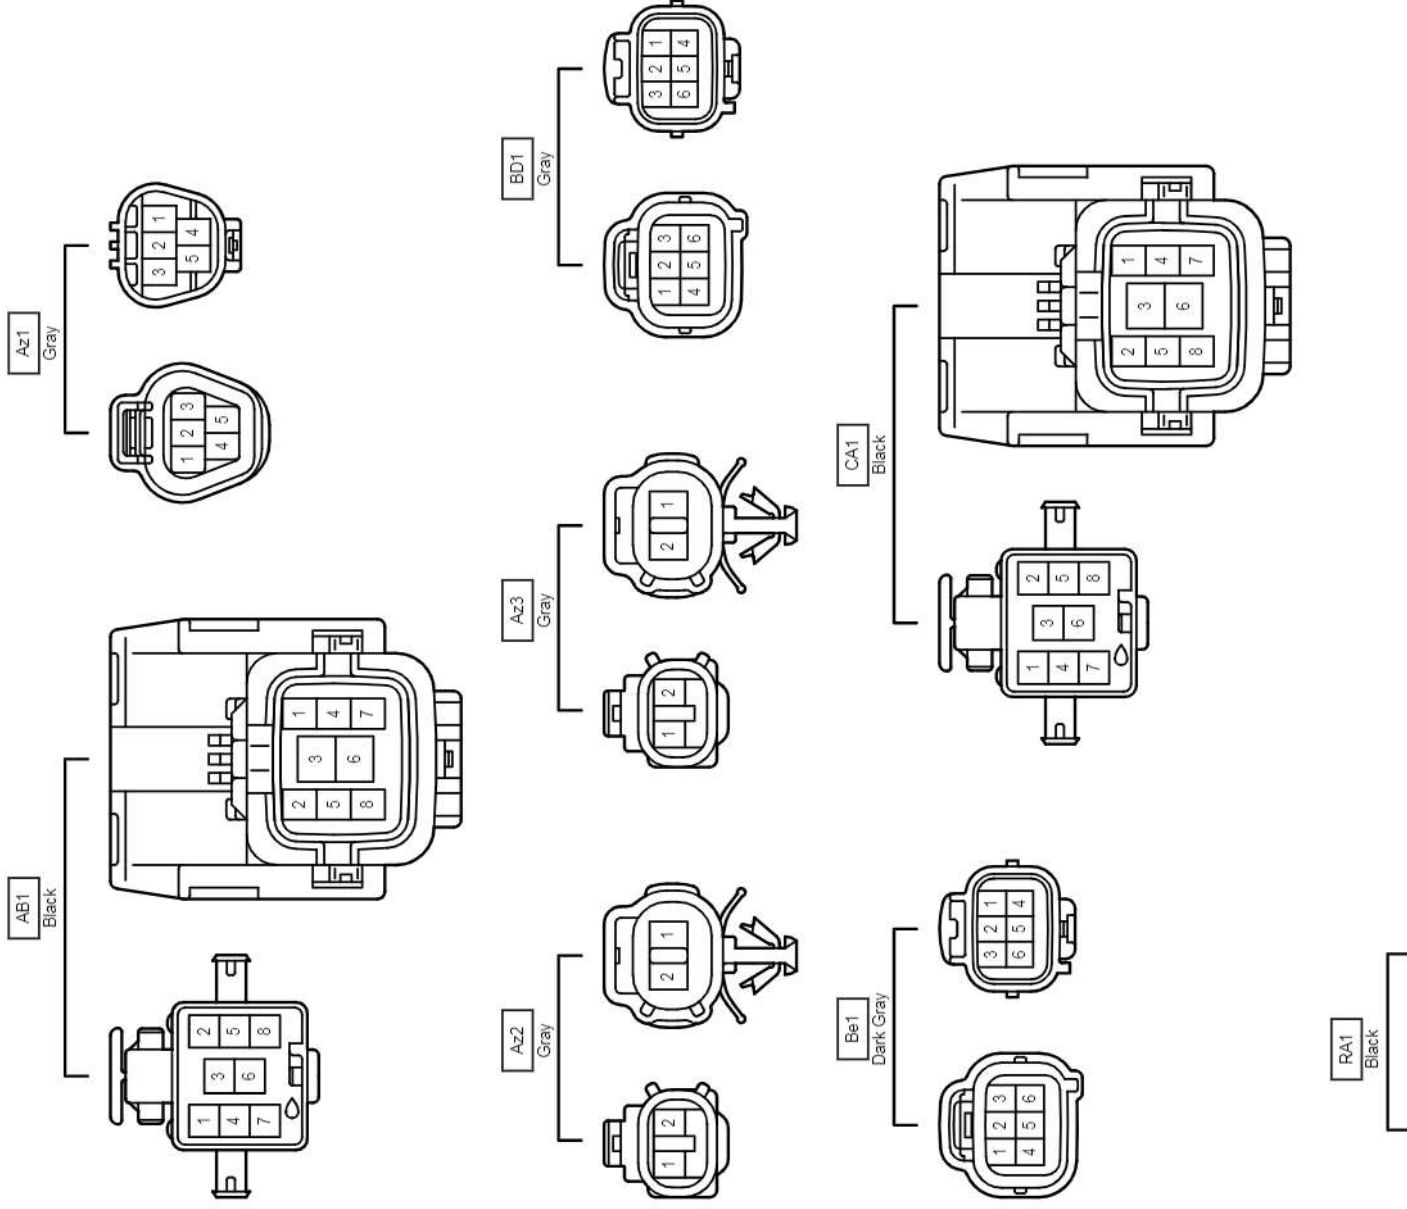


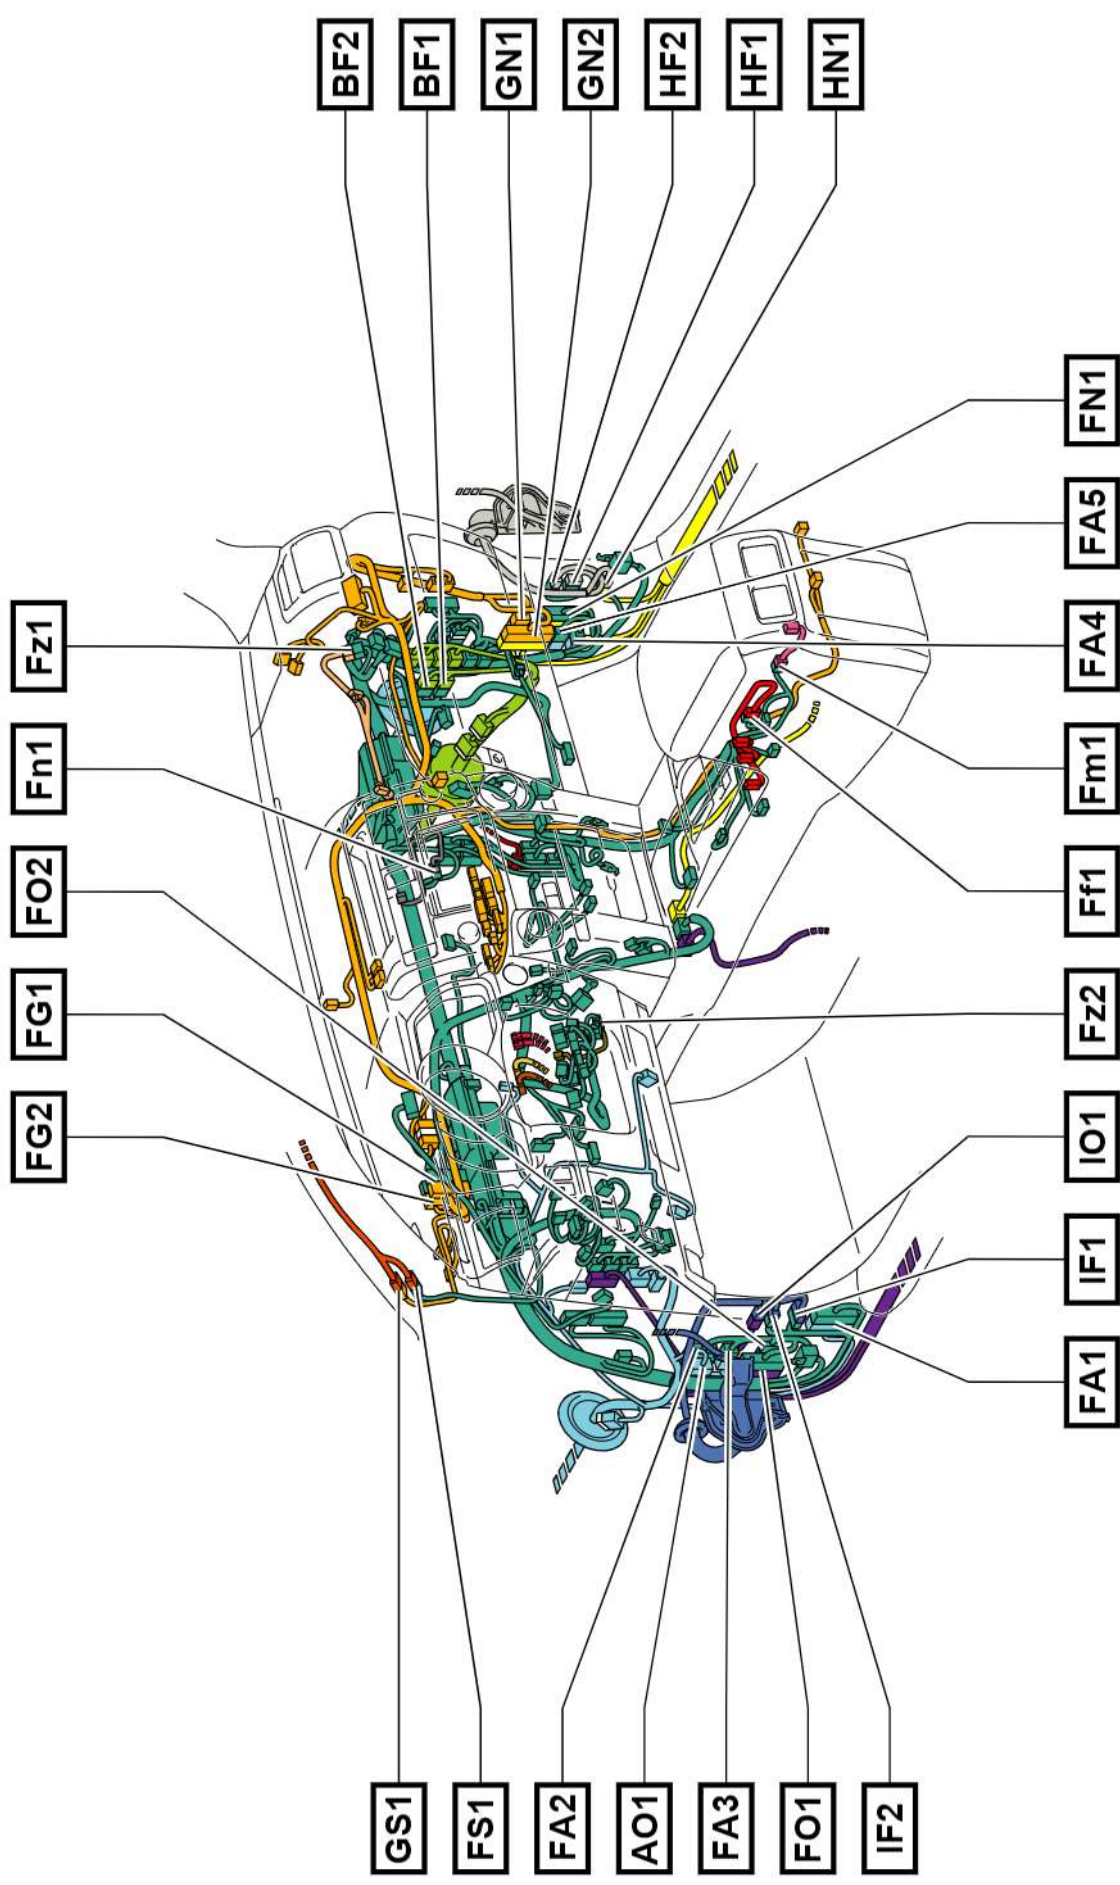


AO1
Gray

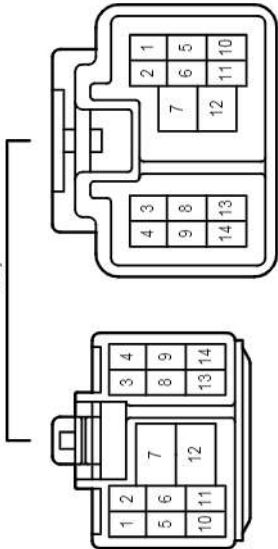


BF1
White

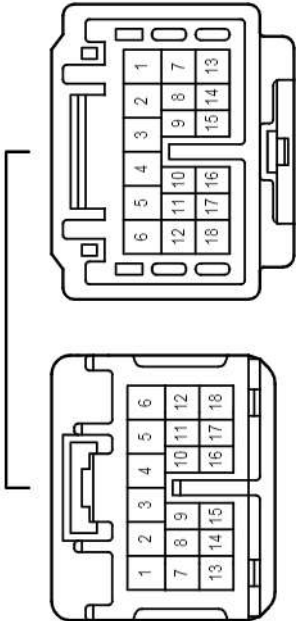

BF2
White


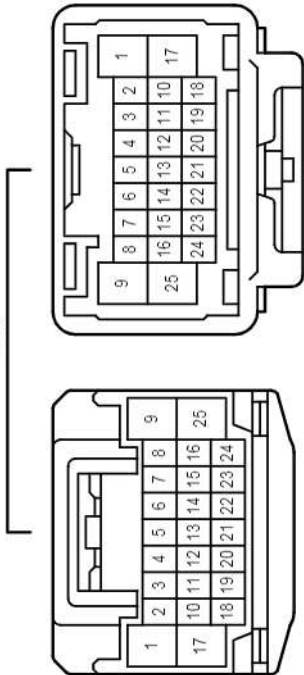


FA1
White




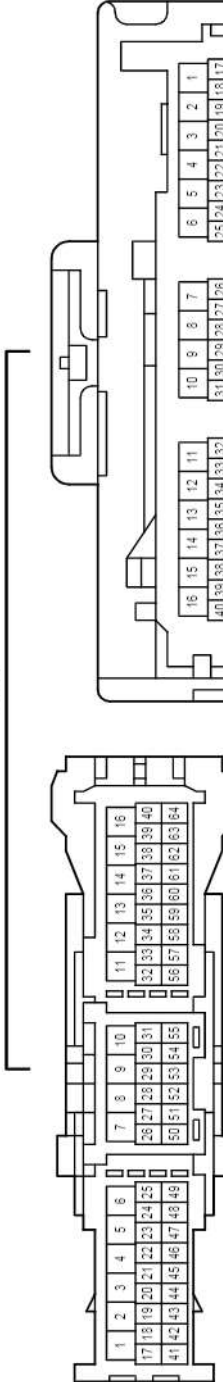


Wire and Wire in Instrument Panel





FA2
White

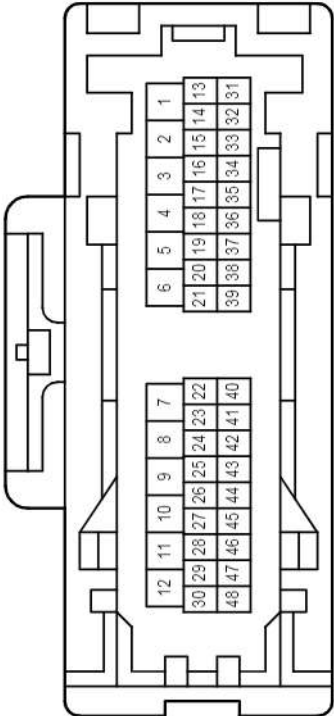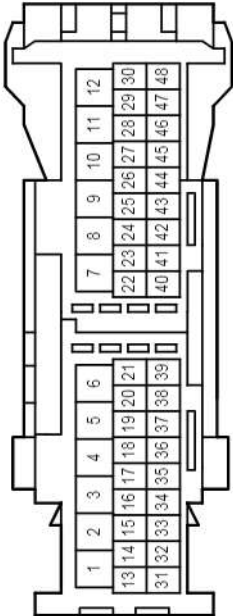



FA3
Black

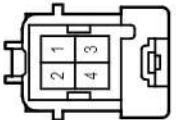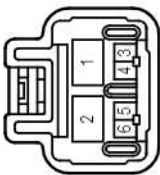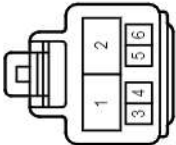



FA4
Yellow

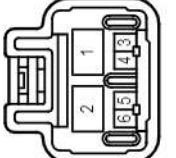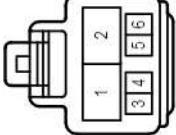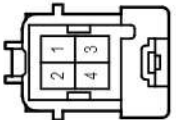

FA5
Black

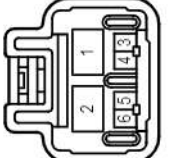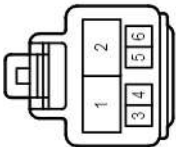

FG1
White

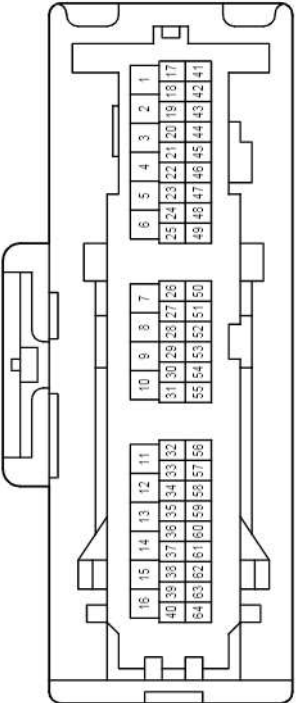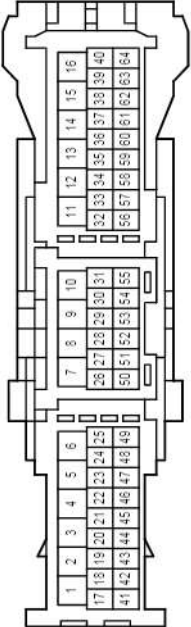


FG2
White




cardiagn.com

Wire and Wire in Instrument Panel


FN1
White

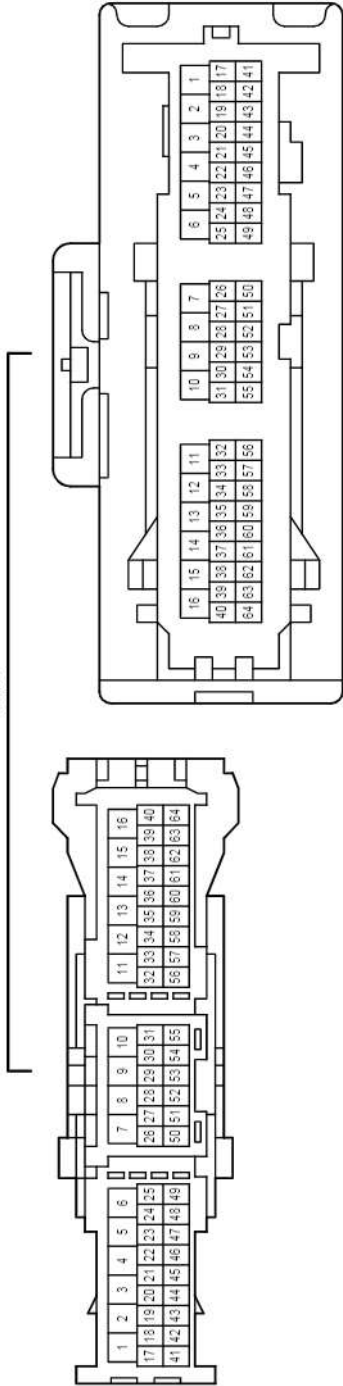


FO1
White

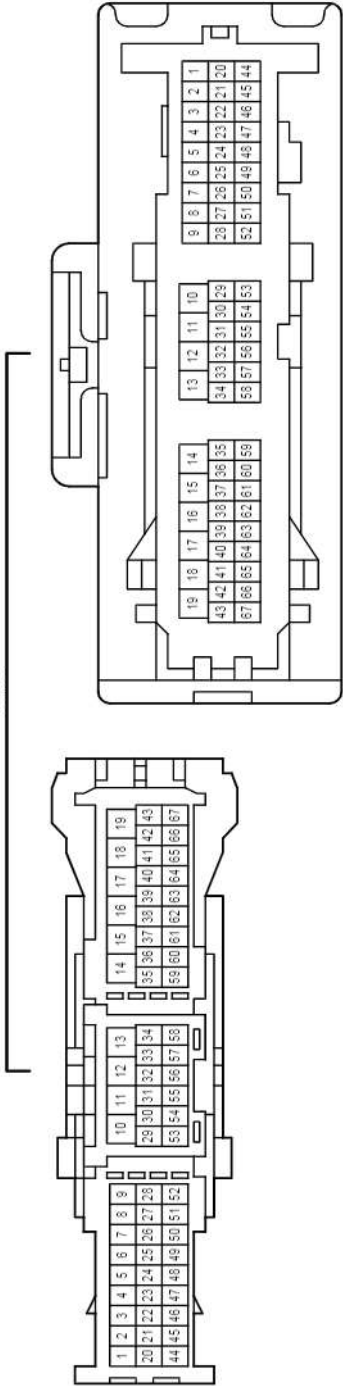


FO2
Gray

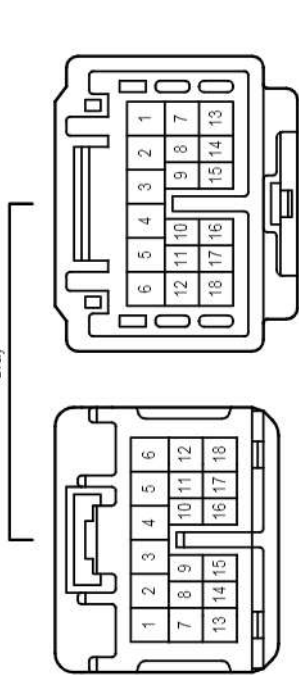


FS1
White



Wire and Wire in Instrument Panel

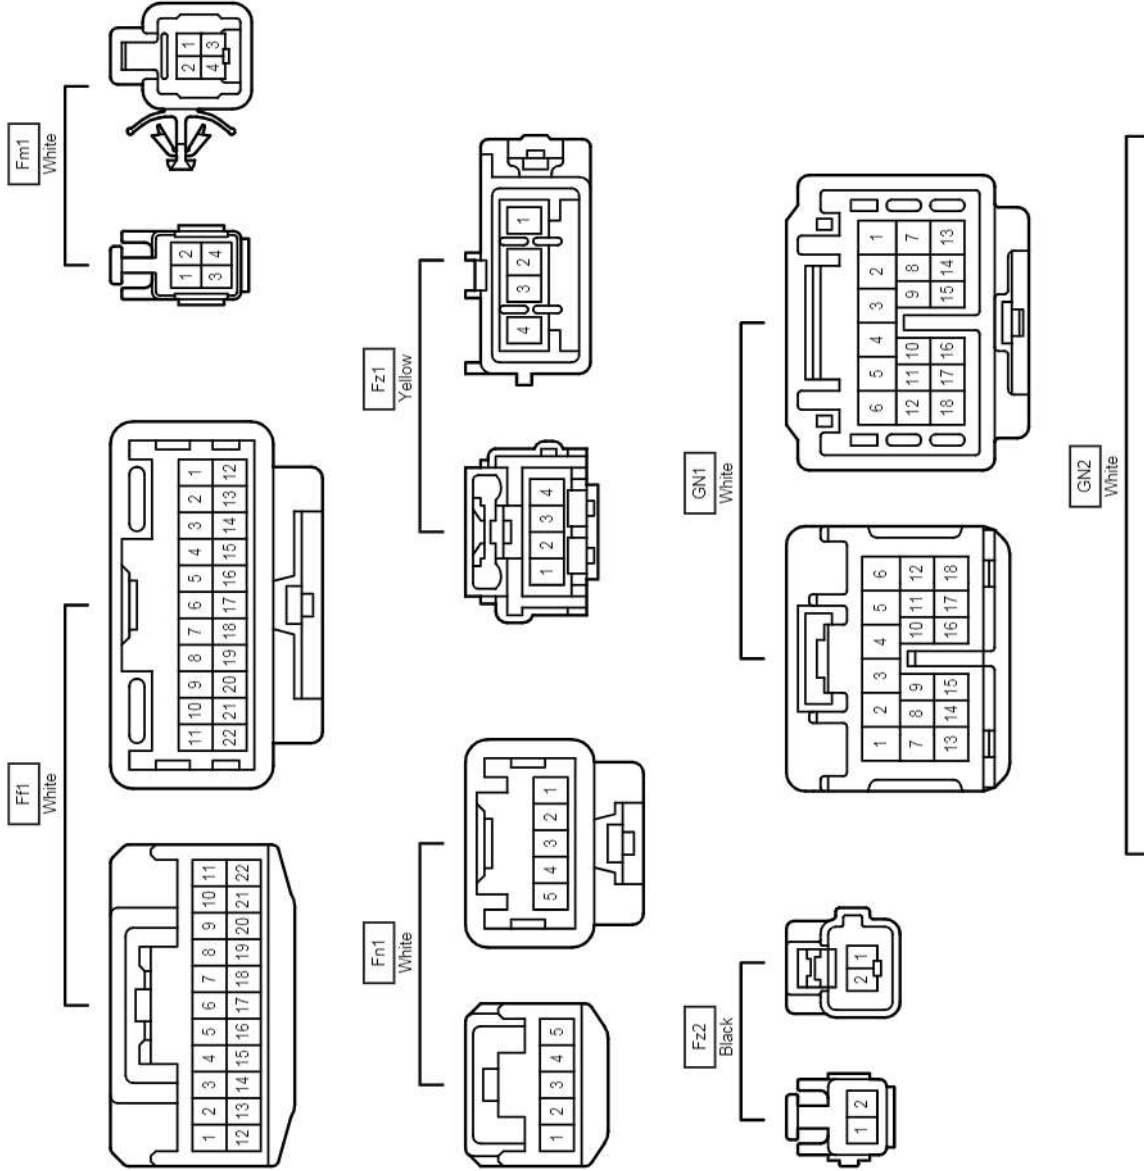

cardiagn.com

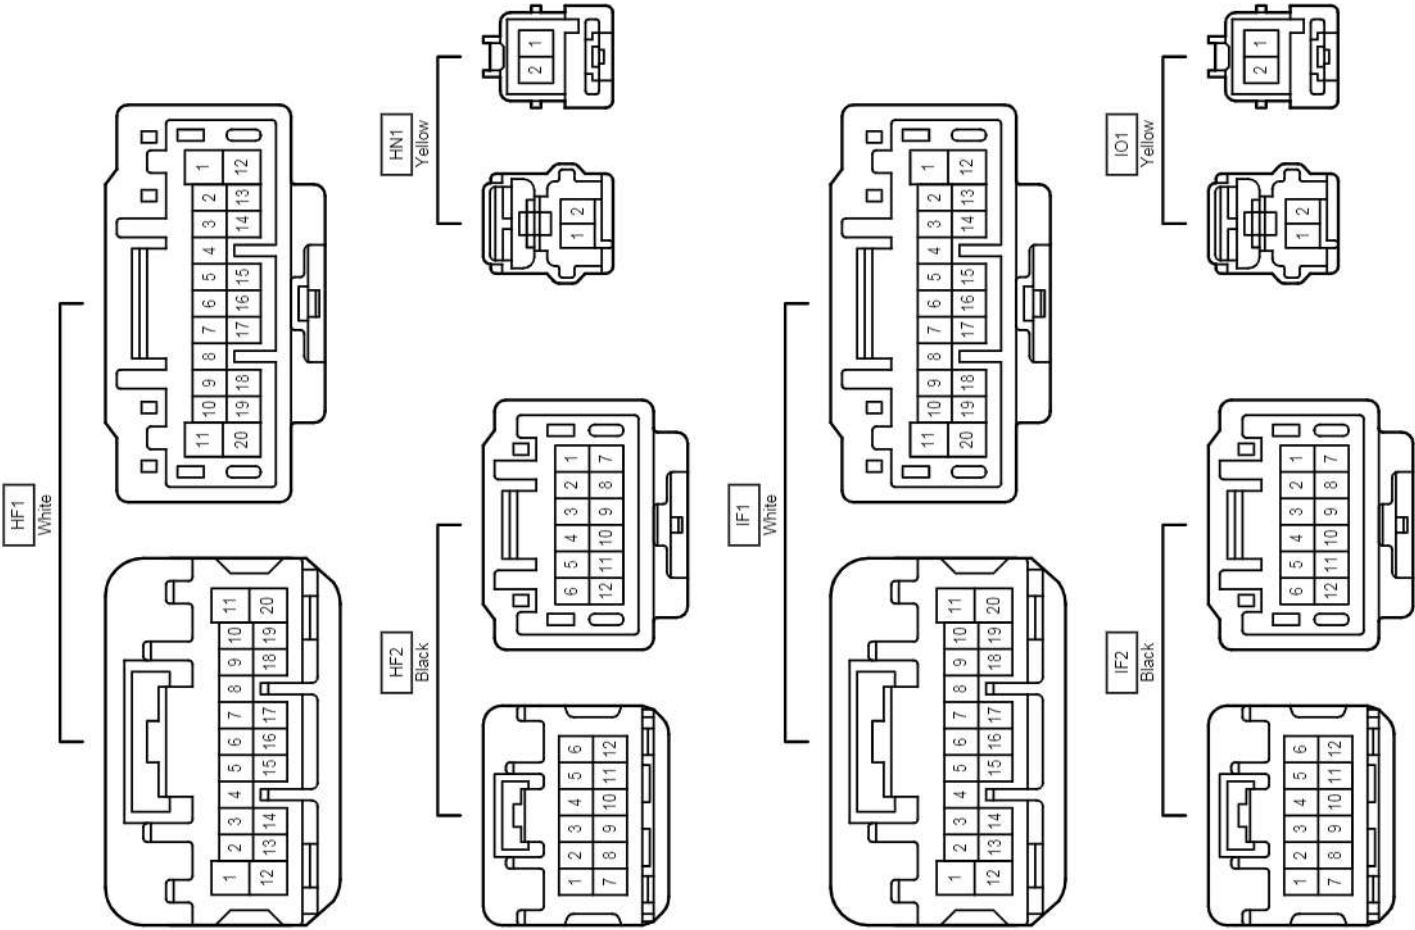

Wire and Wire in Seat <Front Seat>



Wire and Wire in Seat <Front Seat>

