

DTC	P2119	Throttle Actuator Control Throttle Body Range / Performance
------------	--------------	--

DESCRIPTION

The Electronic Throttle Control System (ETCS) is composed of the throttle actuator, Throttle Position (TP) sensor, Accelerator Pedal Position (APP) sensor, and ECM. The ECM operates the throttle actuator to regulate the throttle valve in response to driver inputs. The TP sensor detects the opening angle of the throttle valve, and provides the ECM with feedback so that the throttle valve can be appropriately controlled by the ECM.

DTC No.	DTC Detection Condition	Trouble Area
P2119	Throttle valve opening angle continues to vary greatly from target opening angle (1 trip detection logic)	- ETCS - ECM

ES

MONITOR DESCRIPTION

The ECM determines the actual opening angle of the throttle valve from the TP sensor signal. The actual opening angle is compared to the target opening angle commanded by the ECM. If the difference between these two values is outside the standard range, the ECM interprets this as a malfunction in the ETCS. The ECM then illuminates the MIL and sets the DTC.

If the malfunction is not repaired successfully, the DTC is set when the accelerator pedal is quickly released (to close the throttle valve) after the engine speed reaches 5,000 rpm by the accelerator pedal being fully depressed (full open the throttle valve).

MONITOR STRATEGY

Related DTCs	P2119: ETCS malfunction
Required Sensors/Components (Main)	Throttle actuator
Required Sensors/Components (Related)	-
Frequency of Operation	Continuous
Duration	1 second (close throttle), 0.6 seconds (open throttle)
MIL Operation	Immediate
Sequence of Operation	None

TYPICAL ENABLING CONDITIONS

The monitor will run whenever the following DTCs are not present	None
System guard	ON
*System guard set when following conditions met	-
Throttle actuator	ON
Throttle actuator duty calculation	Executing
TP sensor	Fail determined
Throttle actuator current-cut operation	Not executing
Throttle actuator power supply	4 V or more
Throttle actuator	Fail determined

TYPICAL MALFUNCTION THRESHOLDS

Either of following conditions met	Condition A or B
A. Commanded closed TP - current closed TP	0.3 V or more for 1 second
B. Commanded open TP - current open TP	0.3 V or more for 0.6 seconds

FAIL-SAFE

When any of these DTCs, as well as other DTCs relating to ETCS (Electronic Throttle Control System) malfunctions, are set, the ECM enters fail-safe mode. During fail-safe mode, the ECM cuts the current to the throttle actuator off, and the throttle valve is returned to a 6.5° throttle angle by the return spring. The ECM then adjusts the engine output by controlling the fuel injection (intermittent fuel-cut) and ignition timing, in accordance with the accelerator pedal opening angle, to allow the vehicle to continue at a minimal speed. If the accelerator pedal is depressed firmly and gently, the vehicle can be driven slowly. Fail-safe mode continues until a pass condition is detected, and the ignition switch is then turned to OFF.

WIRING DIAGRAM

Refer to DTC P2102 (See page ES-265).

ES

INSPECTION PROCEDURE

HINT:

Read freeze frame data using an intelligent tester or OBD II scan tool. The ECM records vehicle and driving condition information as freeze frame data the moment a DTC is stored. When troubleshooting, freeze frame data can be helpful in determining whether the vehicle was running or stopped, whether the engine was warmed up or not, whether the air-fuel ratio was lean or rich, as well as other data recorded at the time of a malfunction.

1


CHECK ANY OTHER DTCS OUTPUT (IN ADDITION TO DTC P2119)

- (a) Connect an intelligent tester or OBD II scan tool to the DLC3.
- (b) Turn the ignition switch to ON.
- (c) Turn the tester or scan tool ON.
- (d) On the tester, select the following menu items:
DIAGNOSIS / ENHANCED OBD II / DTC INFO /
CURRENT CODES.
- (e) Read DTCs.
- (f) If using an OBD II scan tool, refer to the instruction manual.

Result

Display (DTC Output)	Proceed to
P2119	A
P2119 and other DTCs	B

HINT:
If any DTCs other than P2119 are output, troubleshoot those DTCs first.

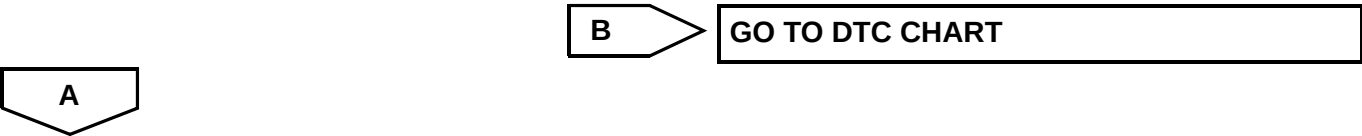

2

CHECK WHETHER DTC OUTPUT RECURS (DTC P2119)

- (a) Connect the intelligent tester or OBD II scan tool to the DLC3 (Procedure "A").
- (b) Turn the ignition switch to ON (Procedure "B").
- (c) Turn the tester or scan tool ON (Procedure "C").
- (d) Clear DTCs (See page ES-30) (Procedure "D").
- (e) Allow the engine to idle for 15 seconds (Procedure "E").

CAUTION:

Exercise extreme care and take precautions at procedures "F" and "G" below. Failure to do so may result in the vehicle unexpectedly rolling away.

- (f) Securely apply the parking brake and move the gear selector lever to the D position (Procedure "F").
- (g) While depressing the brake pedal securely, fully depress the accelerator pedal for 5 seconds (Procedure "G").
- (h) On the tester, select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / CURRENT CODES (Procedure "H").
- (i) Read DTCs (Procedure "I").
- (j) If using an OBD II scan tool, refer to the instruction manual (Procedure "J").

HINT:

The voltage output of the throttle position sensor can be checked during procedure "G" using an intelligent tester or OBD II scan tool. Variations in the voltage output indicate that the throttle actuator is in operation. To check the voltage output using the intelligent tester, select the following menu items: DIAGNOSIS / ENHANCED OBD II / DATA LIST / ALL / THROTTLE POS #1. If using an OBD II scan tool, refer to the instruction manual.

OK:

No DTC output.

NG**REPLACE THROTTLE BODY ASSEMBLY****OK****NORMAL****ES**

cardiagn.com