

DTC**P2716****Pressure Control Solenoid "D" Electrical (Shift Solenoid Valve SLT)****DESCRIPTION**

The linear solenoid valve (SLT) controls the transmission line pressure for smooth transmission operation based on signals from the throttle position sensor and the vehicle speed sensor. The ECM adjusts the duty cycle of the SLT solenoid valve to control hydraulic line pressure coming from the primary regulator valve. Appropriate line pressure assures smooth shifting with varying engine outputs.


(*): Duty Ratio

The duty ratio is the ratio of the period of continuity in one cycle.

For example, if A is the period of continuity in one cycle, and B is the period of non-continuity, then

Duty Ratio = $A/(A + B) \times 100(\%)$

DTC No.	DTC Detection Condition	Trouble Area
P2716	Open or short is detected in shift solenoid valve SLT circuit for 1 second or more while driving (1-trip detecting logic).	- Open or short in shift solenoid valve SLT circuit - Shift solenoid valve SLT - ECM

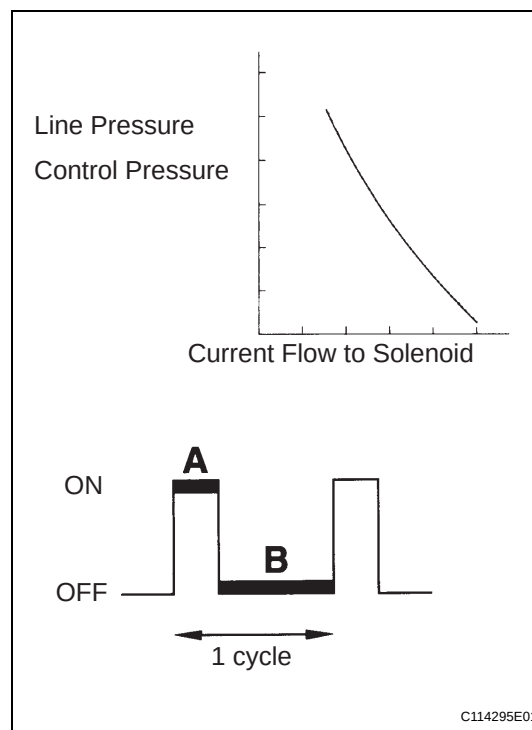**MONITOR DESCRIPTION**

When an open or short in the linear solenoid valve (SLT) circuit is detected, the ECM interprets this as a fault. The ECM will turn on the MIL and store the DTC.

MONITOR STRATEGY

Related DTCs	P2716: Shift solenoid valve SLT/Range check
Required sensors/Components	Shift solenoid valve SLT
Frequency of operation	Continuous
Duration	1 sec.
MIL operation	Immediately
Sequence of operation	None

TYPICAL ENABLING CONDITIONS

Range check (A):

The monitor will run whenever this DTC is not present.	None
Solenoid current cut status	Not cut
Battery voltage	11 V or more
Target current	0.1 A or more

Range check (B):

The monitor will run whenever the following DTCs are not present.	None
The typical enabling condition is not available.	-

TYPICAL MALFUNCTION THRESHOLDS

Range check (A):

Solenoid status (SLT) from IC	Fail (Open or short) (Output signal duty equal to 100%)
-------------------------------	--


Range check (B):

Hybrid IC status	Fail (Open or short) (Output signal duty equal to 100%)
------------------	--

COMPONENT OPERATING RANGE

Shift solenoid valve SLT	Resistance: 5.0 to 5.6 Ω at 20°C (68°F)
--------------------------	---

WIRING DIAGRAM

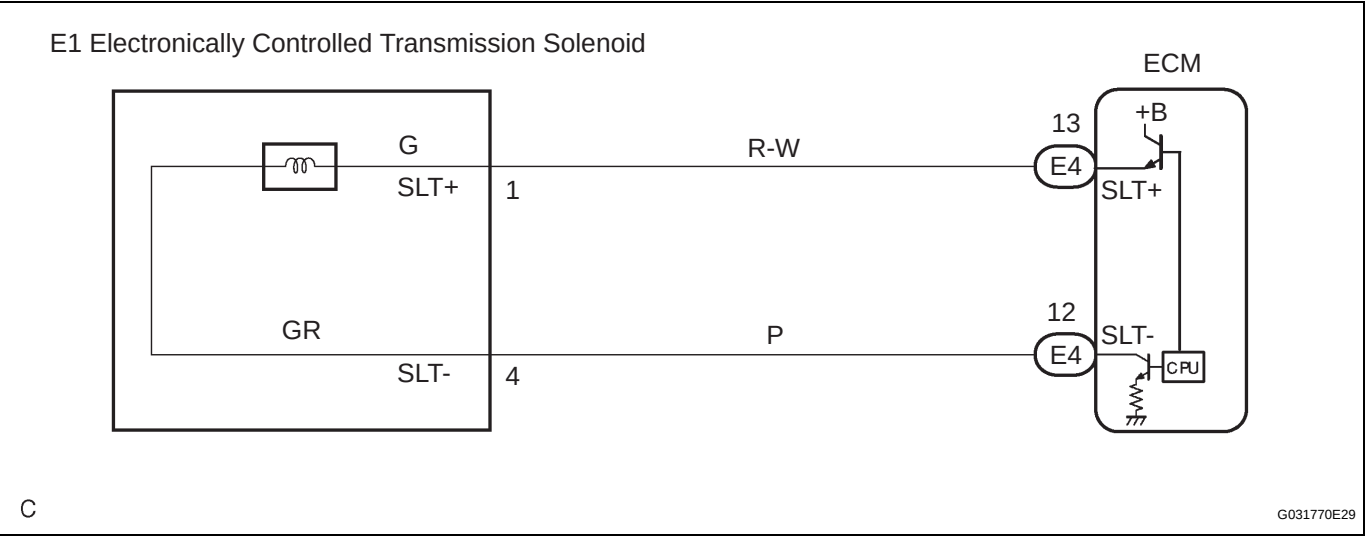


INSPECTION PROCEDURE

1 INSPECT TRANSMISSION WIRE (SLT)

Transmission Wire Side:

(Connector Front View):

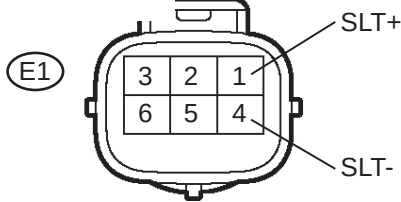

D025254E06

- (a) Disconnect the transmission wire connector from the transaxle.
 (b) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Specified Condition 20°C (68°F)
1 (SLT+) - 4 (SLT-)	5.0 to 5.6 Ω

- (c) Measure the resistance according to the value(s) in the table below.


Standard resistance:**Check for short**

Tester Connection	Specified Condition
1 (SLT+) - Body ground	10 kΩ or higher
4 (SLT-) - Body ground	↑

NG

Go to step 3

OK

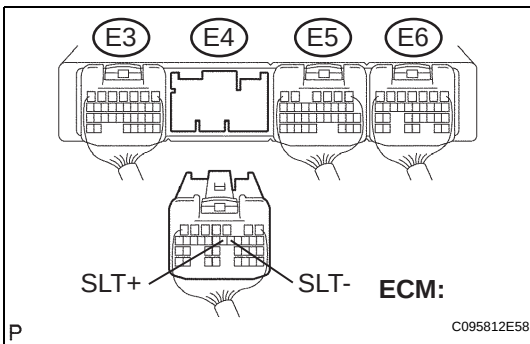2 CHECK HARNESS AND CONNECTOR (TRANSMISSION WIRE - ECM)

C095812E58

- (a) Connect the transmission wire connector to the transaxle.
 (b) Disconnect the ECM connector.
 (c) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Specified Condition 20°C (68°F)
E4-13 (SLT+) - E4-12 (SLT-)	5.0 to 5.6 Ω

- (d) Measure the resistance according to the value(s) in the table below.

Standard resistance:**Check for short**

Tester Connection	Specified Condition
E4-13 (SLT+) - Body ground	10 kΩ or higher
E4-12 (SLT-) - Body ground	↑


NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE ECM

3INSPECT SHIFT SOLENOID VALVE SLT

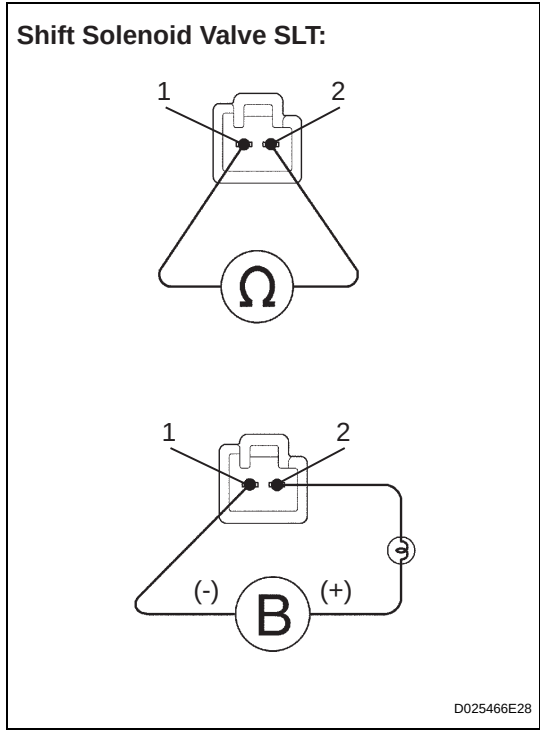

- (a) Remove the shift solenoid valve (SLT).
- (b) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Specified Condition 20°C (68°F)
1 - 2	5.0 to 5.6 Ω

- (c) Connect the positive (+) lead with a 21 W bulb to terminal 2 and the negative (-) lead to terminal 1 of the solenoid valve connector, then check the movement of the valve.

OK:
The solenoid makes an operating sound.

NG

REPLACE SHIFT SOLENOID VALVE SLT

OK

REPAIR OR REPLACE TRANSMISSION WIRE