


ECU Power Source Circuit

DESCRIPTION

This circuit provides power to operate the TVIP ECU.

WIRING DIAGRAM

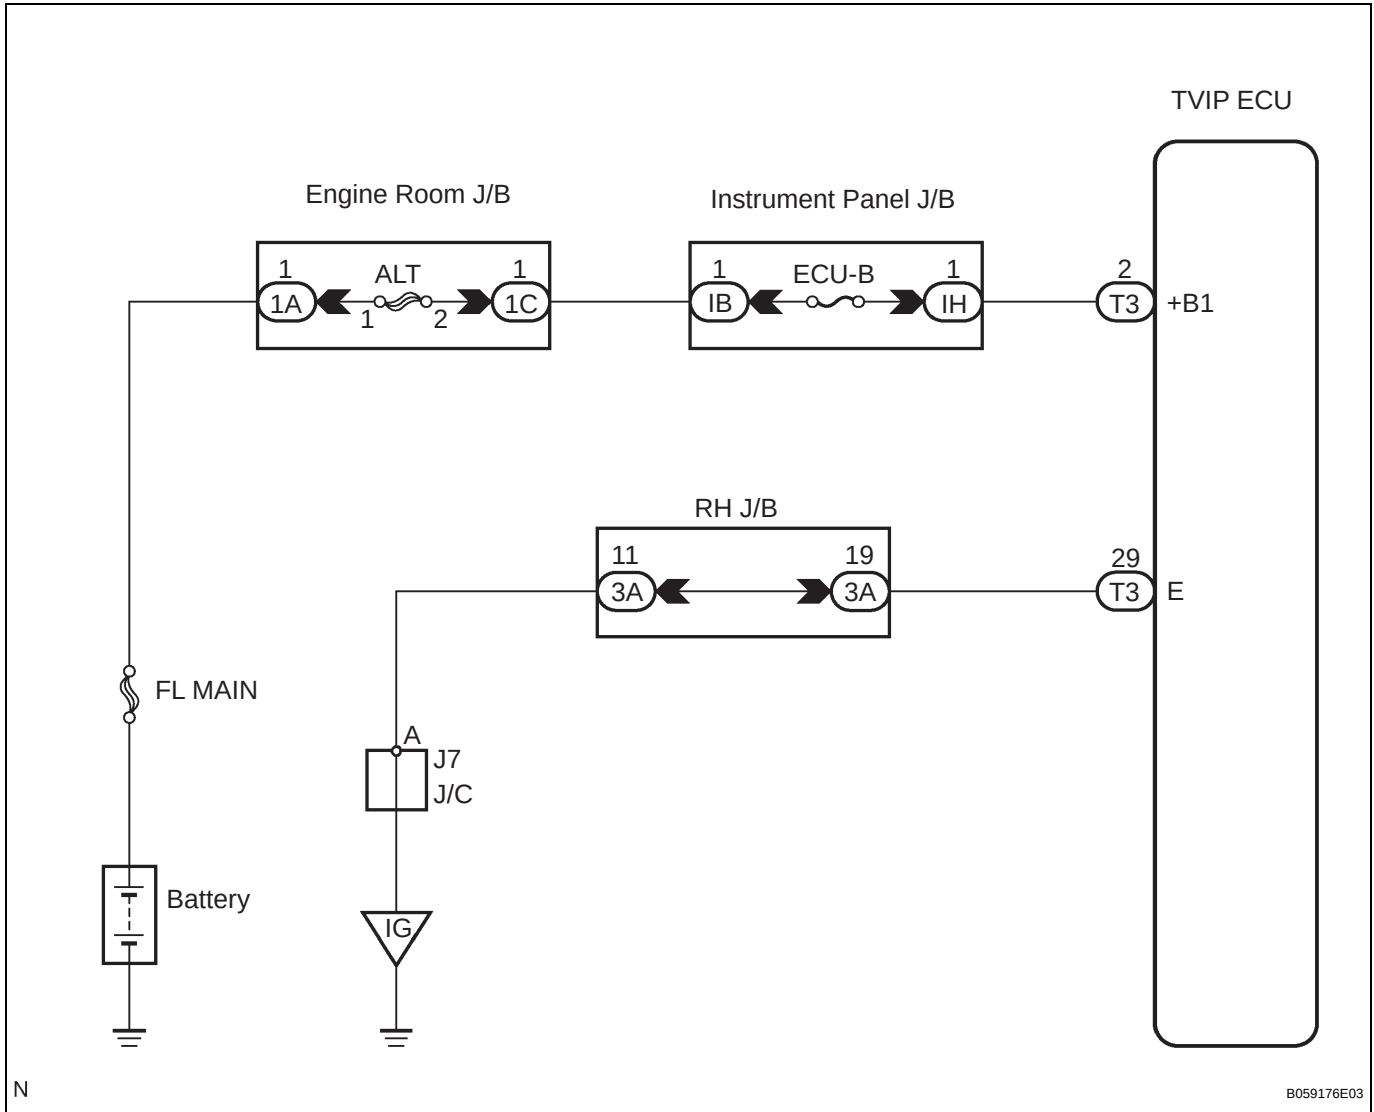


TD

cardiagn.com

INSPECTION PROCEDURE

1

CHECK FUSE (ECU-B)

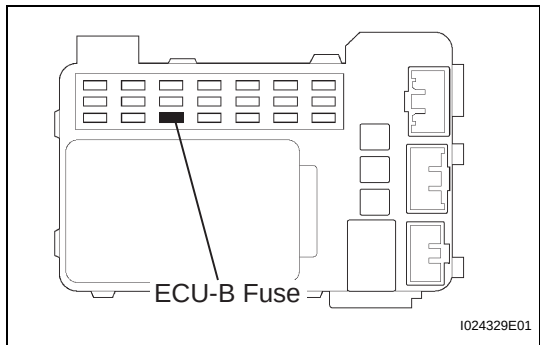

- (a) Remove the fuse from the instrument panel J/B.
- (b) Measure the resistance of the fuse.

Standard resistance:
Below 1 Ω


NG

REPLACE FUSE

OK

2

CHECK TVIP ECU

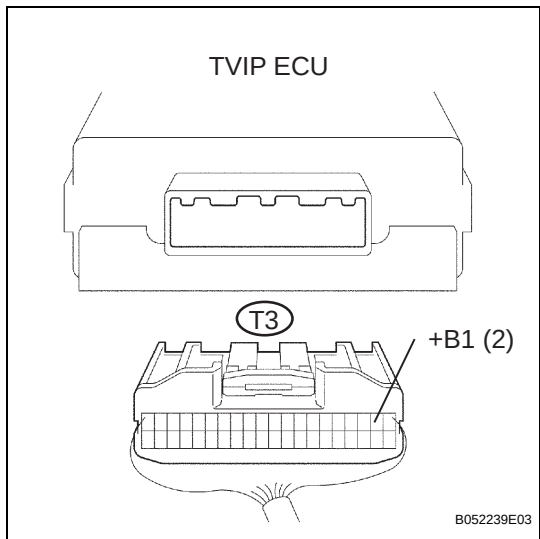

- (a) Disconnect the TVIP ECU connector.
- (b) Measure the voltage according to the value(s) in the table below.


Standard voltage

Tester Connection	Specified Condition
+B1 (T3-2) - Body ground	10 to 14 V

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE

OK

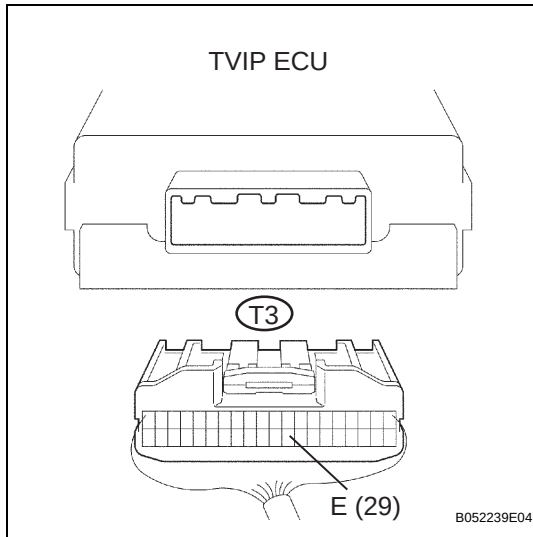3 CHECK HARNESS AND CONNECTOR (TVIP ECU - BODY GROUND)

- (a) Disconnect the TVIP ECU connector.
(b) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Specified Condition
E (T3-29) - Body ground	Below 1 Ω

NG**REPAIR OR REPLACE HARNESS OR CONNECTOR****OK****REPLACE TVIP ECU****TD**