


Stereo Component Amplifier Power Source Circuit

DESCRIPTION


This circuit provides power to the stereo component amplifier.

WIRING DIAGRAM

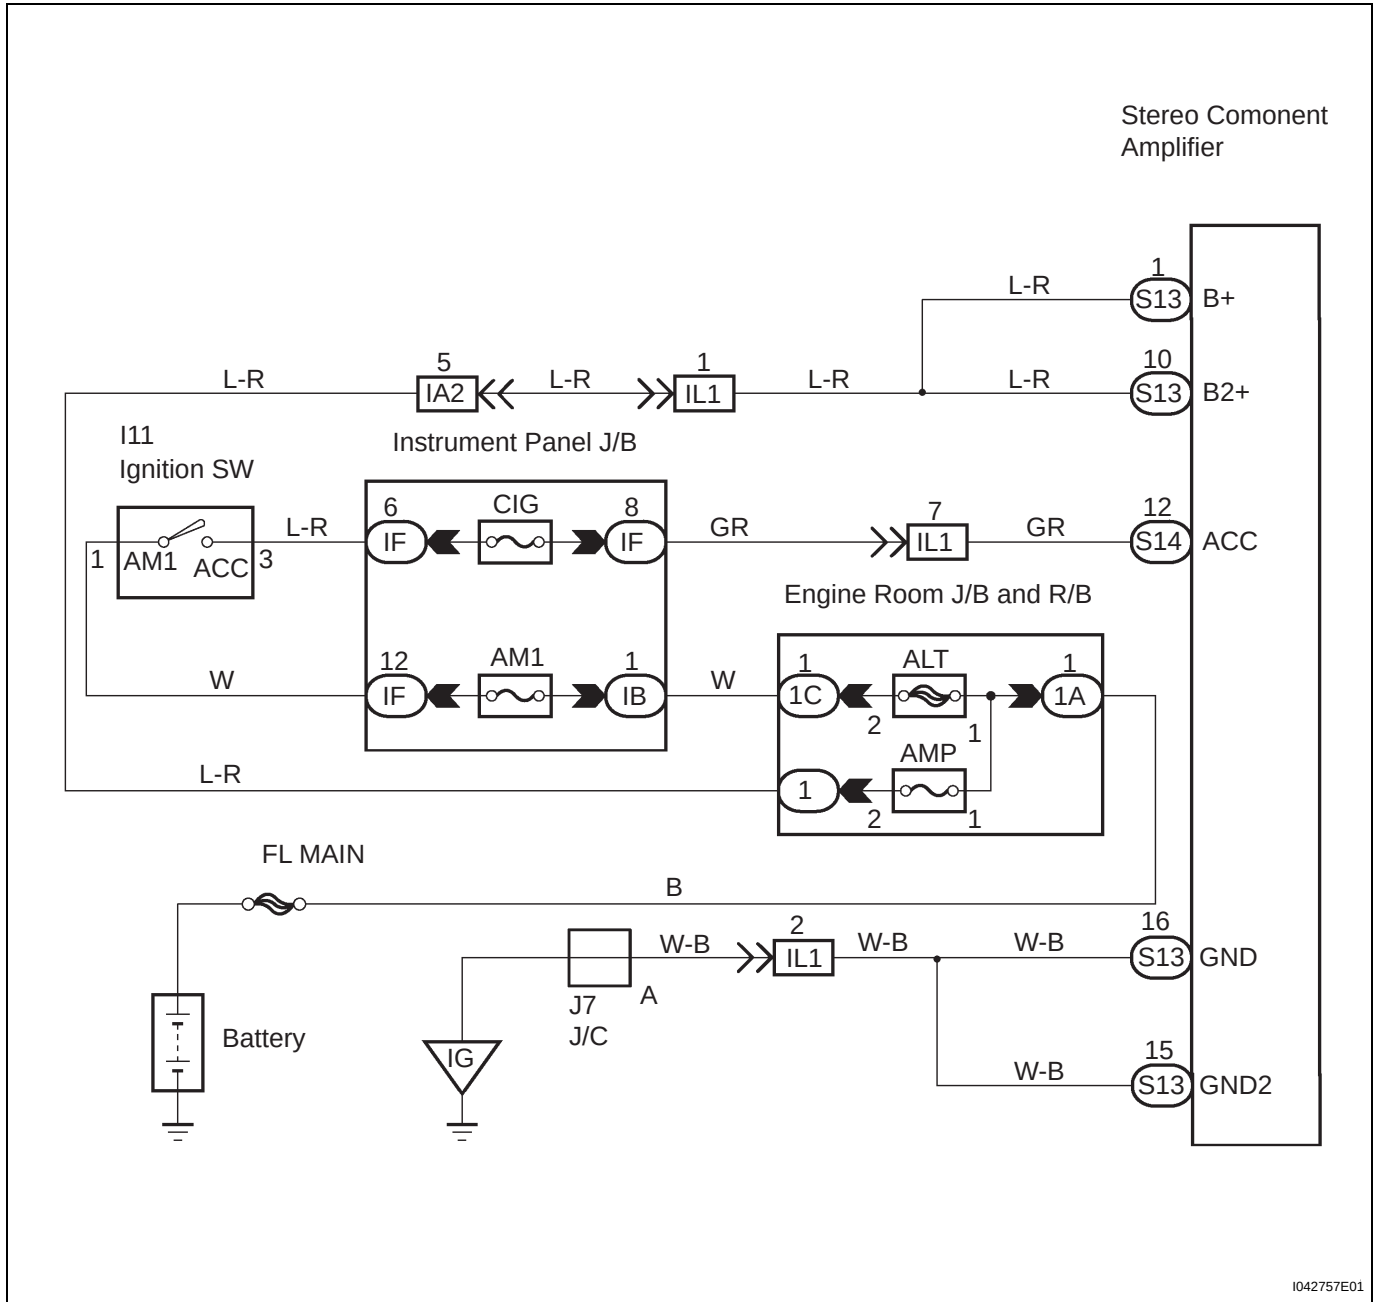

INSPECTION PROCEDURE

1 CHECK HARNESS AND CONNECTOR (BATTERY - STEREO COMPONENT AMPLIFIER)

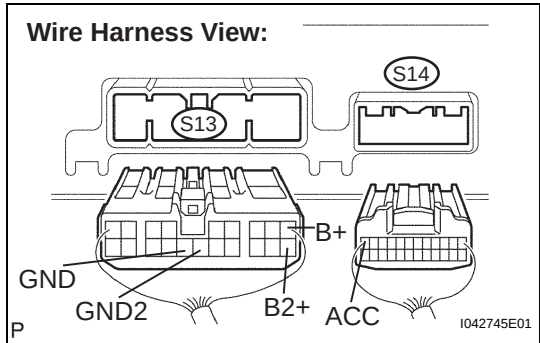

- (a) Disconnect the stereo component amplifier S13 and S14 connectors.
- (b) Measure the resistance according to the values in the table below.

Standard resistance

Tester Connection	Condition	Specified Condition
GND (S13-16) - Body ground	Always	Below 1 Ω
GND2 (S13-15) - Body ground	Always	Below 1 Ω

- (c) Measure the voltage according to the values in the table below.

Standard voltage

Tester Connection	Condition	Specified Condition
B+ (S13-1) - GND (S13-15)	Always	10 to 14 V
B2+ (S13-10) - GND (S13-15)	Always	10 to 14 V
ACC (S14-12) - GND (S13-15)	Ignition SW ACC	10 to 14 V

NG REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE