


HEATED OXYGEN SENSOR

COMPONENTS


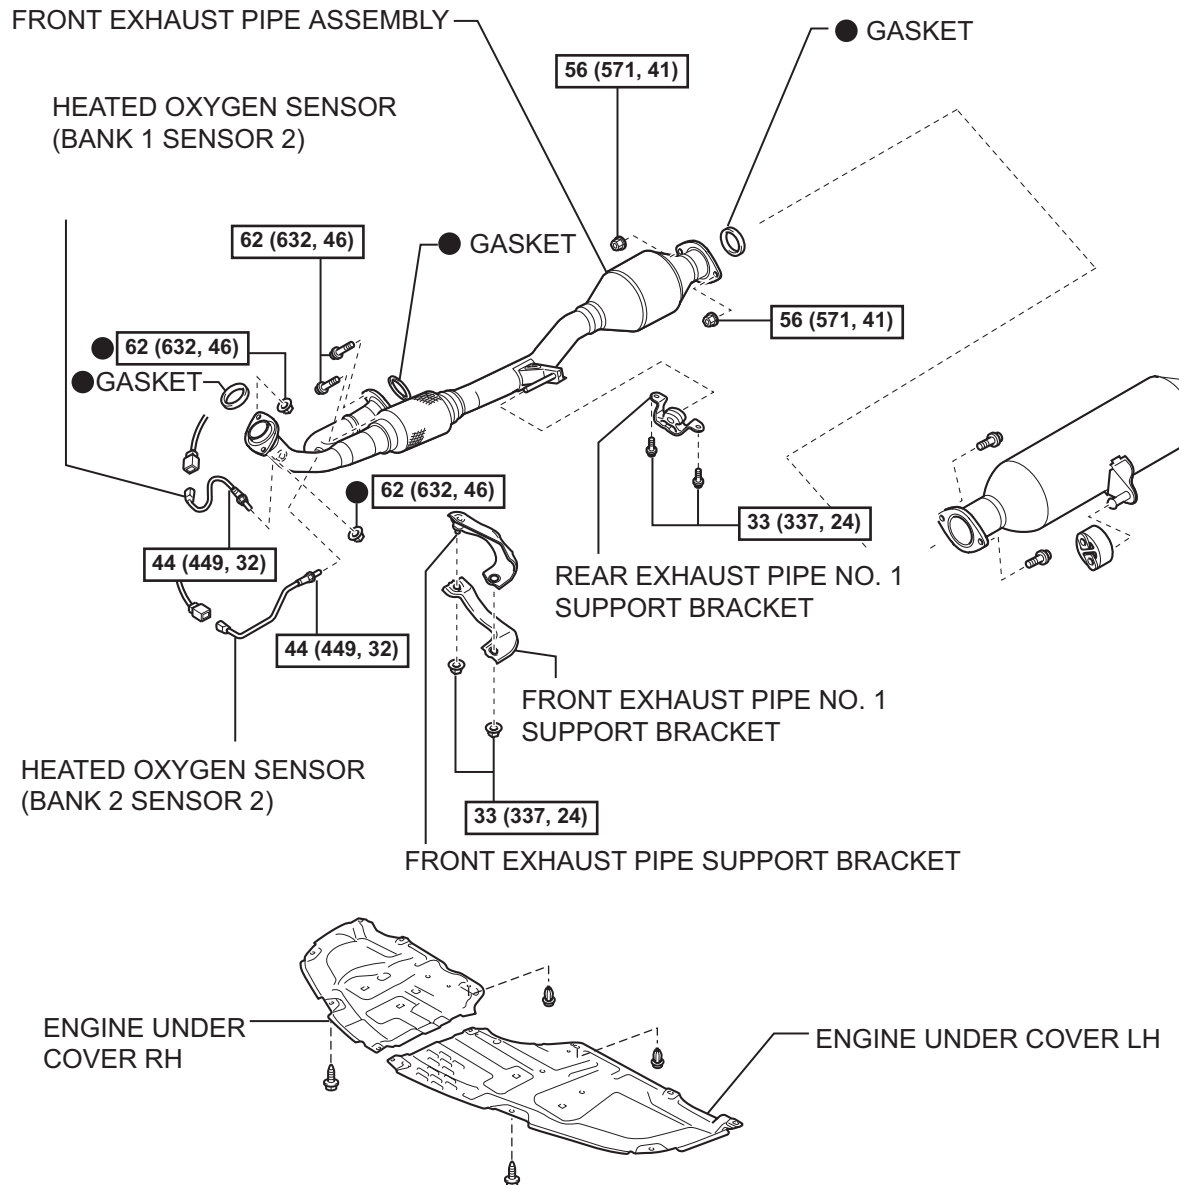


$\text{N}\cdot\text{m}$ (kgf $\cdot\text{cm}$, ft. $\cdot\text{lbf}$) : Specified torque ● Non-reusable part

EC

REMOVAL

- 1. REMOVE ENGINE UNDER COVER LH
- 2. REMOVE ENGINE UNDER COVER RH
- 3. REMOVE EXHAUST PIPE NO. 1 SUPPORT BRACKET (See page EX-3)
- 4. REMOVE FRONT EXHAUST PIPE ASSEMBLY (See page EX-3)
- 5. REMOVE HEATED OXYGEN SENSOR (for Bank 1)
 - (a) Using SST, remove the oxygen sensor.
SST 09224-00010

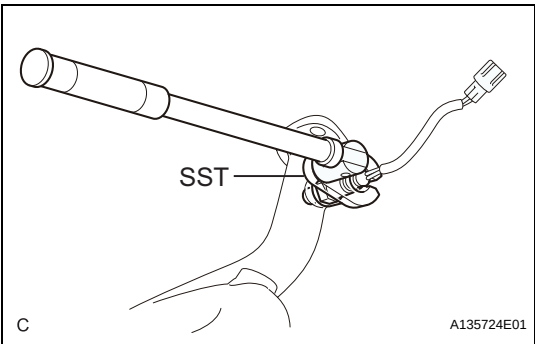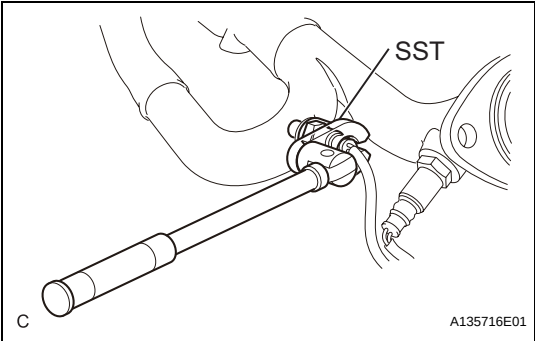

- 6. REMOVE HEATED OXYGEN SENSOR (for Bank 2)
 - (a) Using SST, remove the oxygen sensor.
SST 09224-00010

INSPECTION

- 1. INSPECT HEATED OXYGEN SENSOR
 - (a) Measure the resistance between terminals 1 (HT) and 2 (+B).
- Standard resistance**

Condition	Specified Condition
20°C (68°F)	11 to 16 Ω

If the result is not as specified, replace the sensor.

