


DTC	C0226 / 21 - C1228 / 28	ABS & VSC Actuator Solenoid Circuit
------------	--------------------------------	--

CIRCUIT DESCRIPTION

This solenoid goes on when signals are received from the ECU and controls the pressure acting on the wheel cylinders thus controlling the braking force.


DTC No.	DTC Detecting Condition	Trouble Area
C0226 / 21	Open or short in SFRR or SFRH circuit.	• ABS & VSC actuator • SFRR or SFRH circuit
C0236 / 22	Open or short in SFLR or SFLH circuit.	• ABS & VSC actuator • SFLR or SFLH circuit
C0246 / 23	Open or short in SRRR or SRRH circuit.	• ABS & VSC actuator • SRRR or SRRH circuit
C0256 / 24	Open or short in SRLR or SRLH circuit.	• ABS & VSC actuator • SRLR or SRLH circuit
C1225 / 25	Open or short circuit for SMC1 circuit.	• ABS & VSC actuator • SMC1 circuit
C1226 / 26	Open or short circuit for SMC2 circuit.	• ABS & VSC actuator • SMC2 circuit
C1227 / 27	Open or short circuit for SRC1 circuit.	• ABS & VSC actuator • SRC1 circuit
C1228 / 28	Open or short circuit for SRC2 circuit.	• ABS & VSC actuator • SRC2 circuit

WIRING DIAGRAM

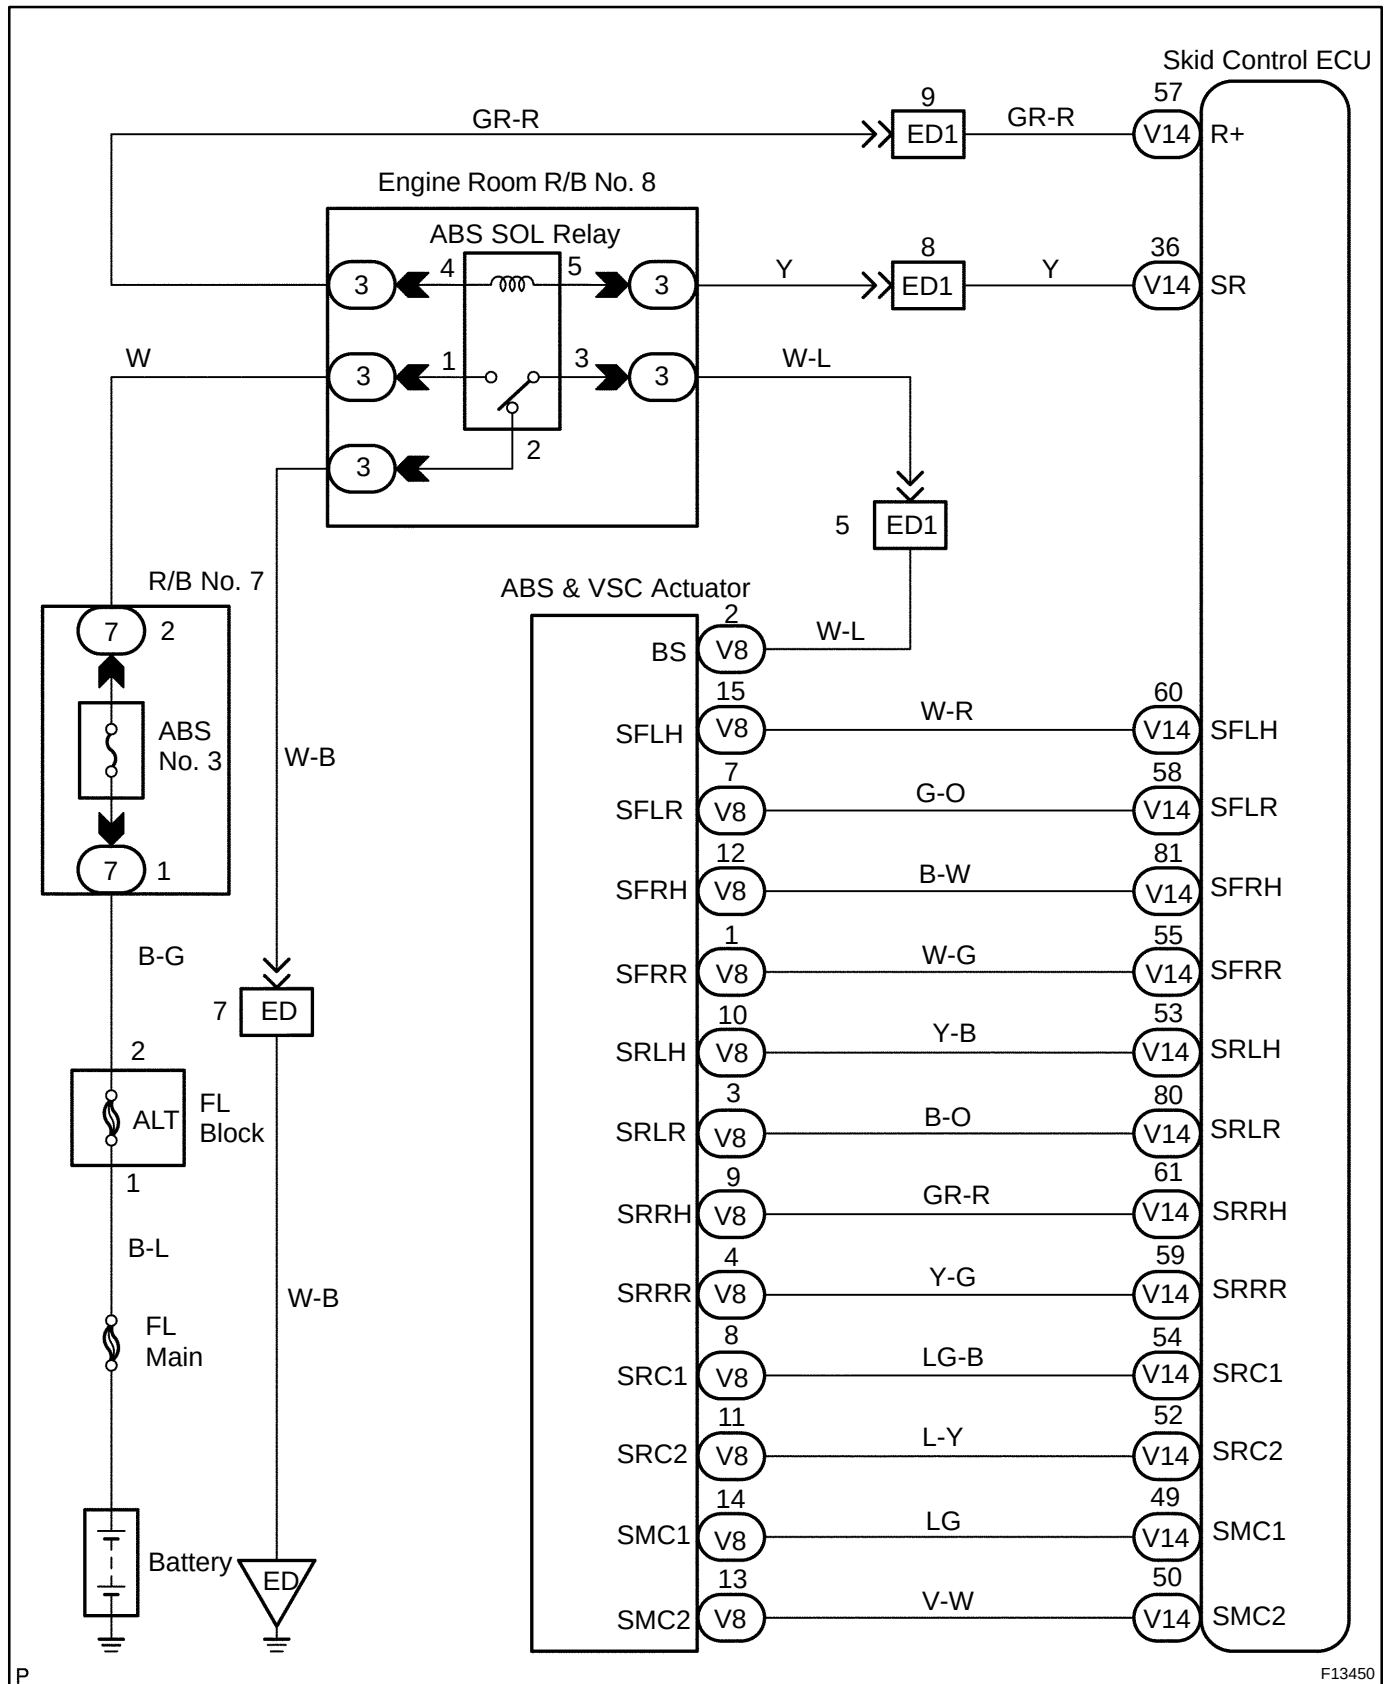

INSPECTION PROCEDURE

1 Check ABS & VSC actuator solenoid.

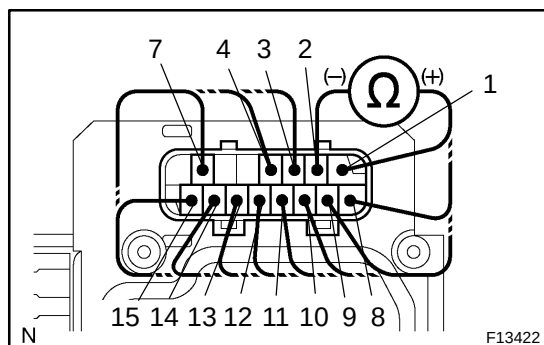**PREPARATION:**

Disconnect the connector from ABS & VSC actuator.

CHECK:

Check continuity between terminals 2 and each of 1, 3, 4, 7, 8, 9, 10, 11, 12, 13, 14, 15 of ABS & VSC actuator.

OK:

Continuity

NG

Replace ABS & VSC actuator.

OK

2 Check for open and short circuit in harness and connector between skid control ECU and ABS & VSC actuator (See page [IN-31](#)).

NG

Repair or replace harness or connector.

OK

If the same code is still output after the DTC is deleted, check the contact condition of each connection. If the connections are normal, the ECU may be defective.