


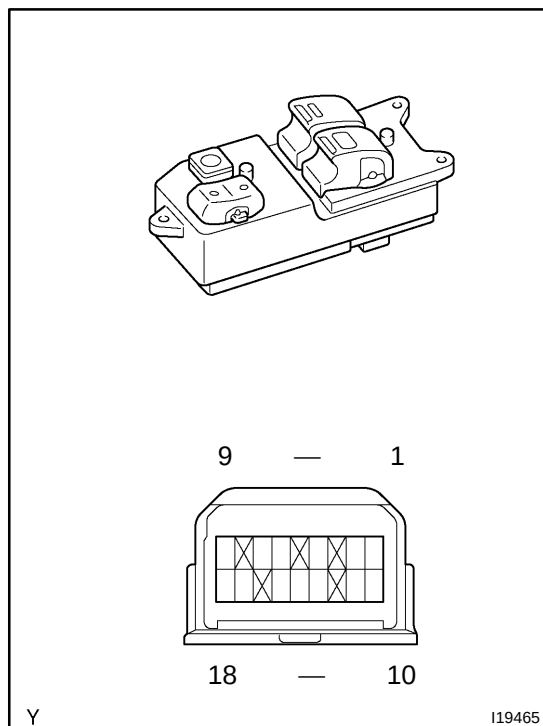


INSPECTION

1. INSPECT DRIVER'S DOOR LOCK CONTROL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	1 - 10	Continuity
OFF	-	No continuity
UNLOCK	1 - 18	Continuity


If continuity is not as specified, replace the switch.

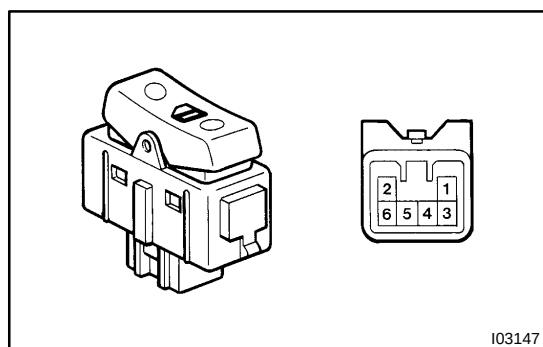

2. INSPECT PASSENGER'S DOOR LOCK CONTROL SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	3 - 6	Continuity
OFF	-	No continuity
UNLOCK	3 - 5	Continuity


If continuity is not as specified, replace the switch.

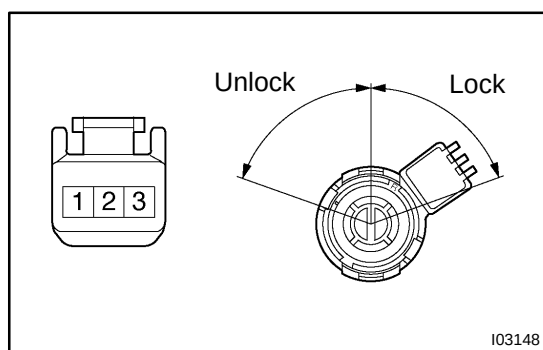

3. INSPECT FRONT DOOR KEY LOCK AND UNLOCK SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	2 - 1	Continuity
OFF	-	No continuity
UNLOCK	3 - 1	Continuity


If continuity is not as specified, replace the switch.

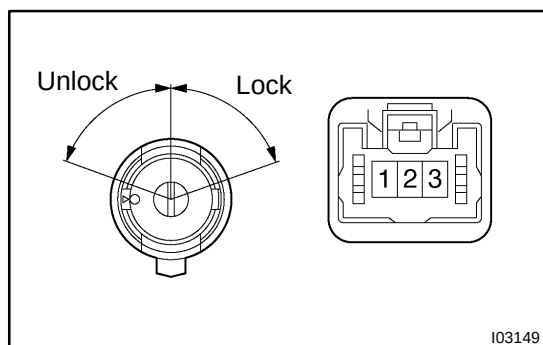

4. INSPECT BACK DOOR KEY LOCK AND UNLOCK SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	2 - 1	Continuity
OFF	-	No continuity
UNLOCK	3 - 1	Continuity


If continuity is not as specified, replace the switch.

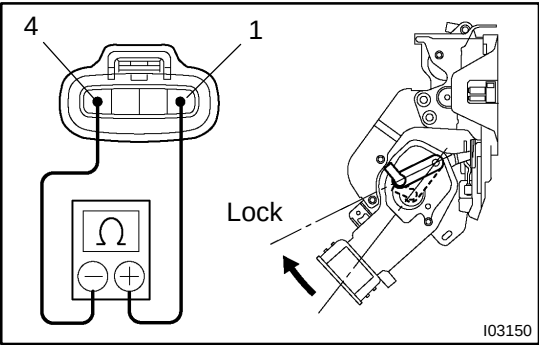

5. INSPECT FRONT DOOR UNLOCK DETECTION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Door Lock set to LOCK)	-	No continuity
ON (Door Lock set to UNLOCK)	1 - 4	Continuity


If continuity is not as specified, replace the switch.

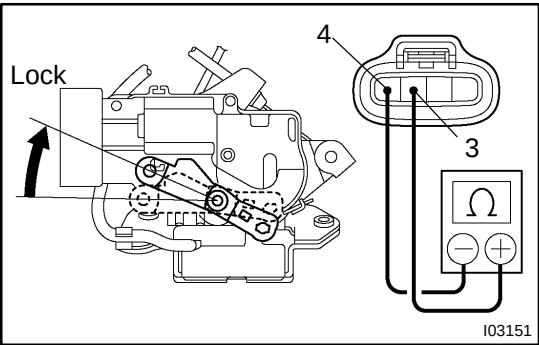

6. w/ Theft Deterrent System: INSPECT BACK DOOR UNLOCK DETECTION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (Door Lock set to LOCK)	-	No continuity
ON (Door Lock set to UNLOCK)	3 - 4	Continuity

If continuity is not as specified, replace the switch.

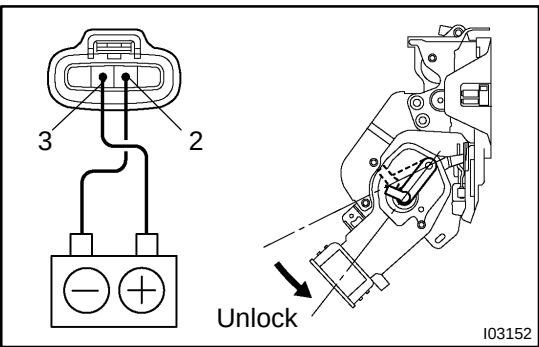


7. INSPECT FRONT DOOR LOCK MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 2, and check that the door lock link moves to UNLOCK position.


- (b) Reverse the polarity and check that the door lock link moves to LOCK position.


If operation is not as specified, replace the door lock assembly.

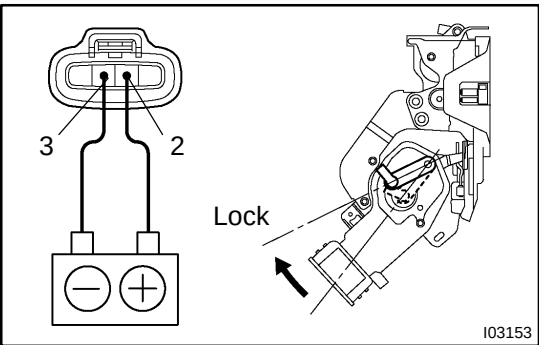

8. w/ Theft Deterrent System and LH Side Door: INSPECT SLID DOOR LOCK MOTOR OPERATION


- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, and check that the door lock link moves to UNLOCK position.

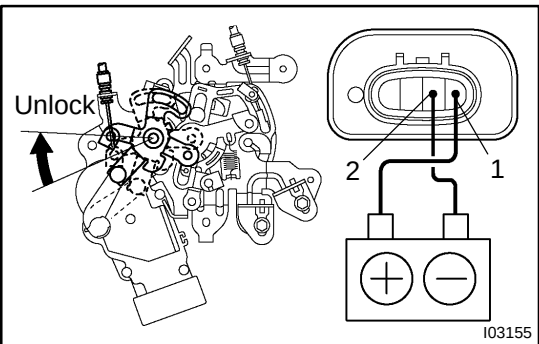

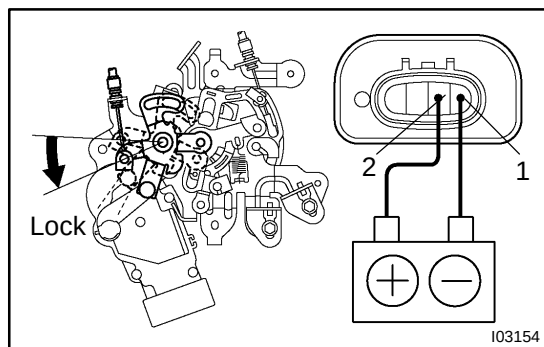


- (b) Reverse the polarity and check that the door lock link moves to LOCK position.

If operation is not as specified, replace the door lock assembly.

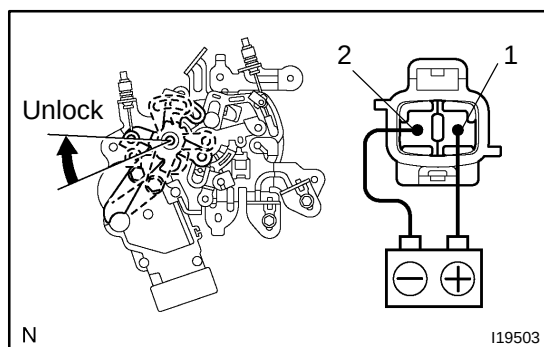


**9. w/o Theft Deterrent System and RH Side Door:
INSPECT SLID DOOR LOCK MOTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, and check that the door lock link moves to UNLOCK position.

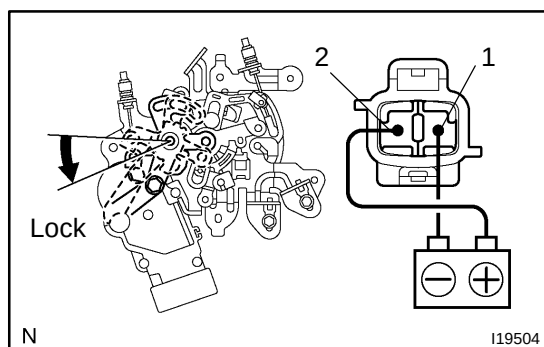


- (b) Reverse the polarity and check that the door lock link moves to LOCK position.

If operation is not as specified, replace the door lock assembly.

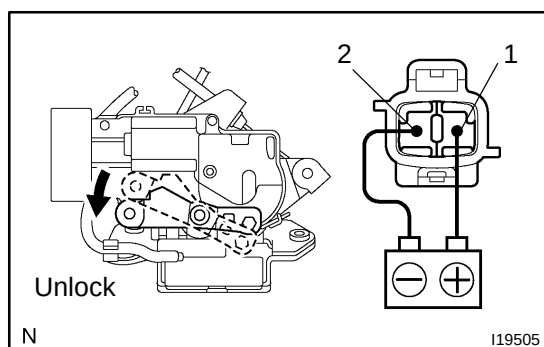


**10. w/o Theft Deterrent System:
INSPECT BACK DOOR LOCK MOTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, and check that the door lock link moves to UNLOCK position.

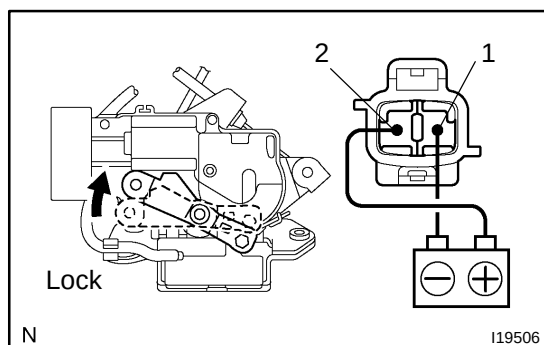


- (b) Reverse the polarity and check that the door lock link moves to LOCK position.

If operation is not as specified, replace the door lock assembly.

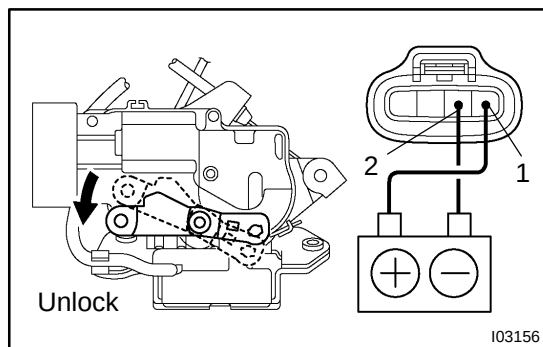
**11. w/ Theft Deterrent System:****INSPECT BACK DOOR LOCK MOTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, and check that the door lock link moves to UNLOCK position.

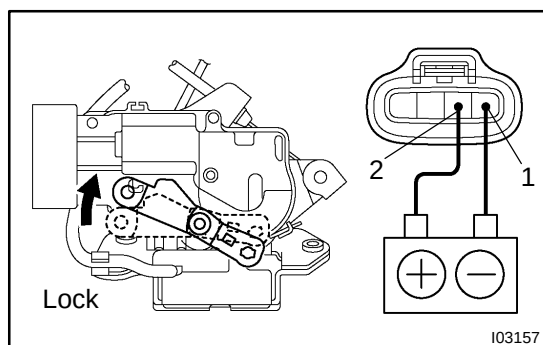


- (b) Reverse the polarity and check that the door lock link moves to LOCK position.

If operation is not as specified, replace the door lock assembly.

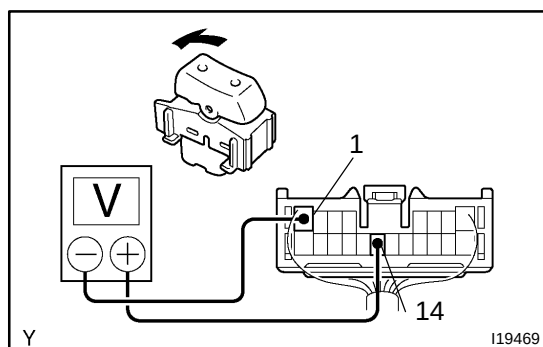**12. INSPECT INTEGRATION RELAY OPERATION****HINT:**

When the relay circuit is as specified, inspect the door lock signal.

- (a) Connect the positive (+) lead from the voltmeter to terminal 1 and the negative (-) lead to terminal 9.
- (b) Set the door lock control switch to UNLOCK and check that the voltage rises from 0 V to battery positive voltage for approximately 0.2 seconds.

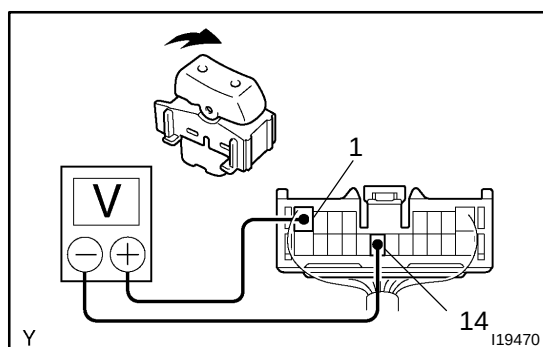

- (c) Reverse the polarity of the voltmeter leads.
- (d) Set the door lock control switch to LOCK and check that the voltage rises from 0 V to battery positive voltage for approximately 0.2 seconds.

If operation is not as specified, replace the relay.