


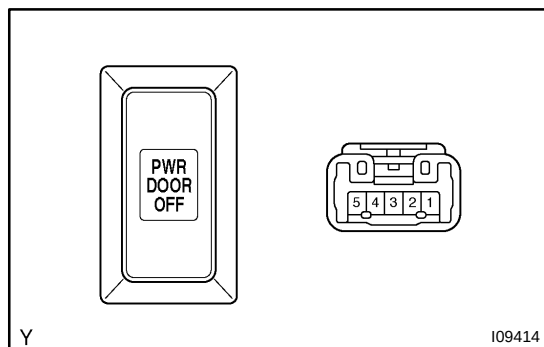


INSPECTION

1. INSPECT POWER SLIDE DOOR MAIN SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Switch ON	1 - 3	Continuity
Switch OFF	1 - 3	No Continuity
Illumination circuit	4 - 5	Continuity


If continuity is not as specified, replace the switch.

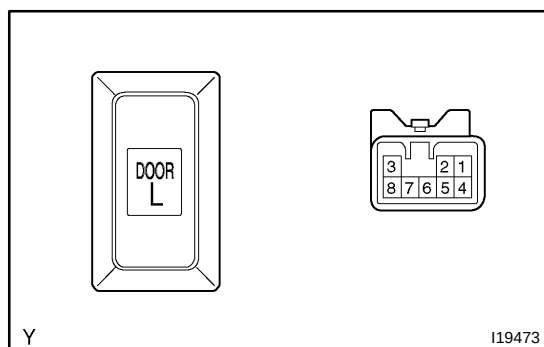

2. INSPECT POWER SLIDE DOOR RH SIDE CONTROL FRONT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Switch ON	5 - 8	Continuity
Switch OFF	5 - 8	No continuity
Illumination circuit	2 - 6	Continuity


If continuity is not as specified, replace the switch.

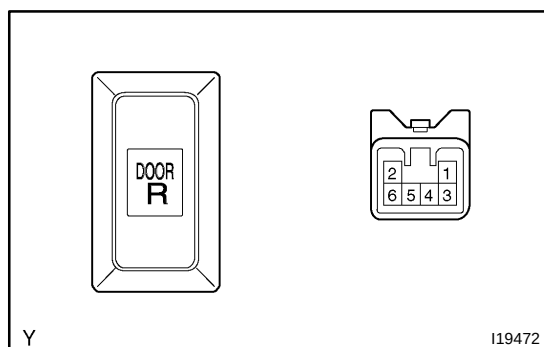

3. INSPECT POWER SLIDE DOOR LH SIDE CONTROL FRONT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Switch ON	3 - 6	Continuity
Switch OFF	3 - 6	No continuity
Illumination circuit	1 - 4	Continuity


If continuity is not as specified, replace the switch.

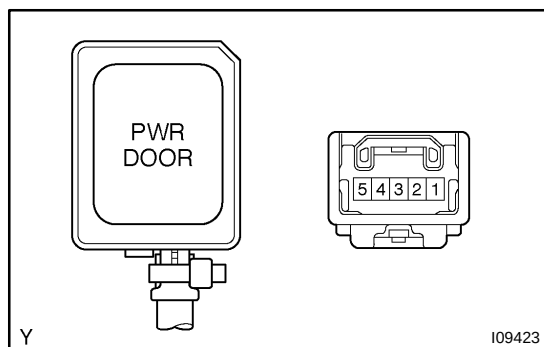

4. INSPECT POWER SLIDE DOOR CONTROL SWITCH CONTINUITY


Switch position	Tester connection	Specified condition
Switch ON	1 - 5	Continuity
Switch OFF	1 - 5	No continuity
Illumination circuit	2 - 4	Continuity

If continuity is not as specified, replace the switch.

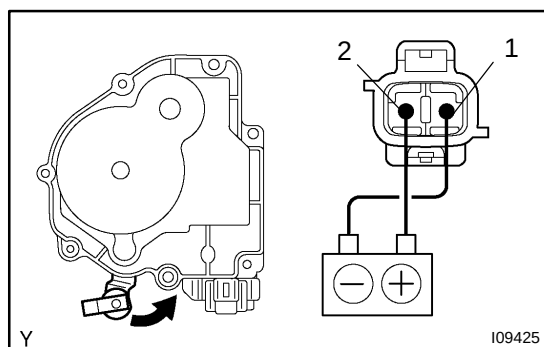

5. INSPECT SLIDE DOOR LOCK RELEASE ACTUATOR OPERATION


Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, and check the door lock release link moves to release position.

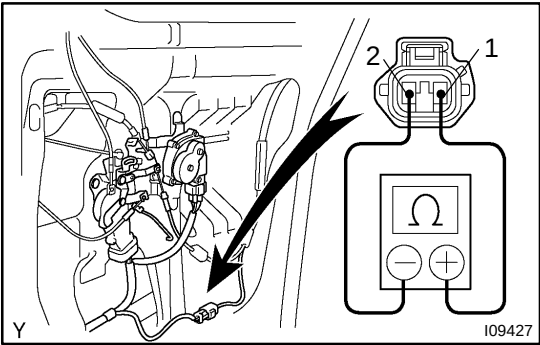

6. INSPECT LATCH SWITCH CONTINUITY

Slide door position	Tester connection	Specified condition
Open	1 - 2	No continuity
Closed	1 - 2	Continuity

If continuity is not as specified, replace the switch.

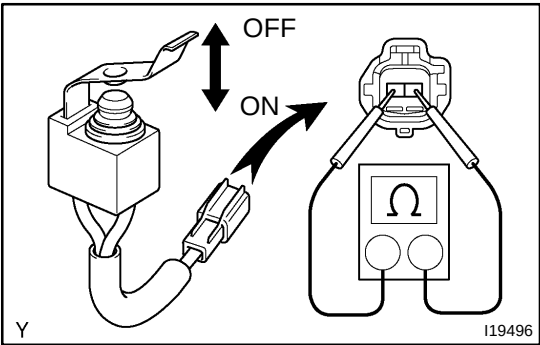

7. INSPECT FUEL LID COURTESY SWITCH CONTINUITY

- (a) Check that continuity exists between terminal 1 and terminal 2 with the switch ON (switch pin pushed).
- (b) Check that no continuity exists between terminal 1 and terminal 2 with the switch OFF (switch pin retracted).

If continuity is not as specified, replace the switch.