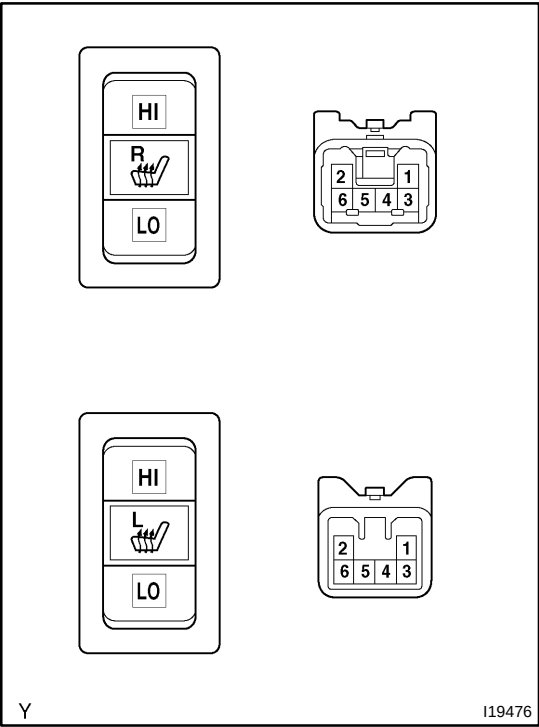


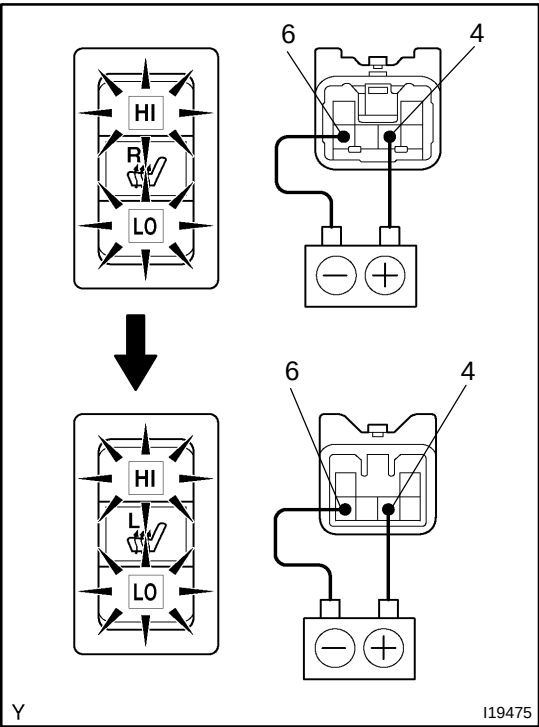


INSPECTION

1. INSPECT SEAT HEATER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Lo side	3 - 4	Continuity
OFF	-	No continuity
Hi side	2 - 4	Continuity
Illumination circuit	1 - 5	Continuity

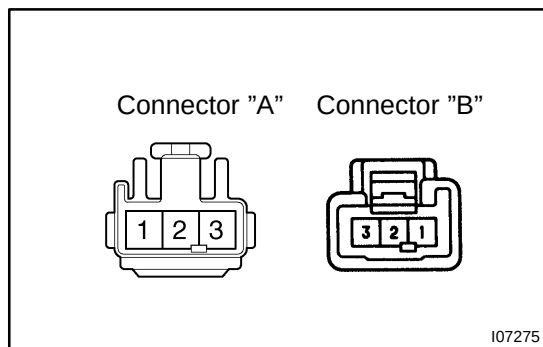
If continuity is not as specified, replace the switch.



2. INSPECT SEAT HEATER INDICATOR LIGHT OPERATION

- Connect the positive (+) lead from the battery to terminal 4 and the negative (-) lead to terminal 6.
- Push the seat heater switch Lo or Hi side and check that the indicator light lights up.

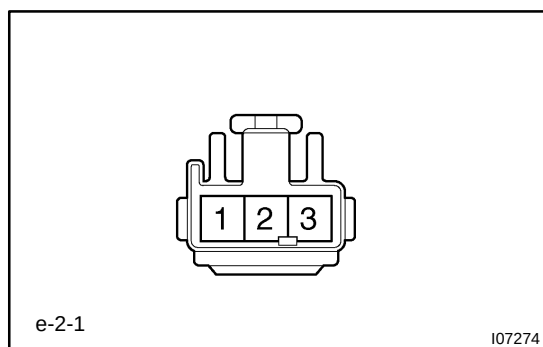
If operation is not as specified, replace the switch and inspect the circuits connected to other parts.

**3. INSPECT SEAT HEATER CUSHION CONTINUITY**

Inspect the seat cushion between terminals, as shown.

Tester connection	Condition	Specified condition
A1 - B2	25 °C (77 °F) - 45 °C (113 °F)	Continuity
A2 - B3	25 °C (77 °F) - 55 °C (131 °F)	Continuity
A3 - B1	Constant	Continuity

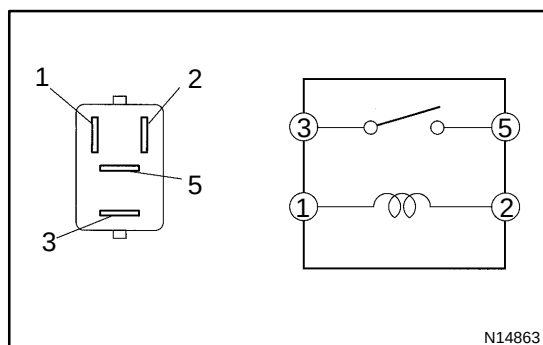
If continuity is not as specifies, replace the seat cushion pad.

**4. INSPECT SEAT BACK CONTINUITY**

Inspect the seat heater back and front cushion continuity between terminals, as shown.

Tester connection	Condition	Specified condition
1 - 2 - 3	Constant	Continuity

If continuity is not as specified, replace the seat back pad.

**5. INSPECT SEAT HEATER RELAY CONTINUITY**

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the switch.