

BODY

REFER TO 1988 CELICA REPAIR MANUAL (Pub. No. RM071U)


NOTE: The following pages contain only the points which differ from the above listed manual.

	Page
MOULDING	BO-2
SEAT BELT	BO-3
BODY DIMENSIONS	BO-4


MOULDING

Side Body Moulding

COMPONENTS





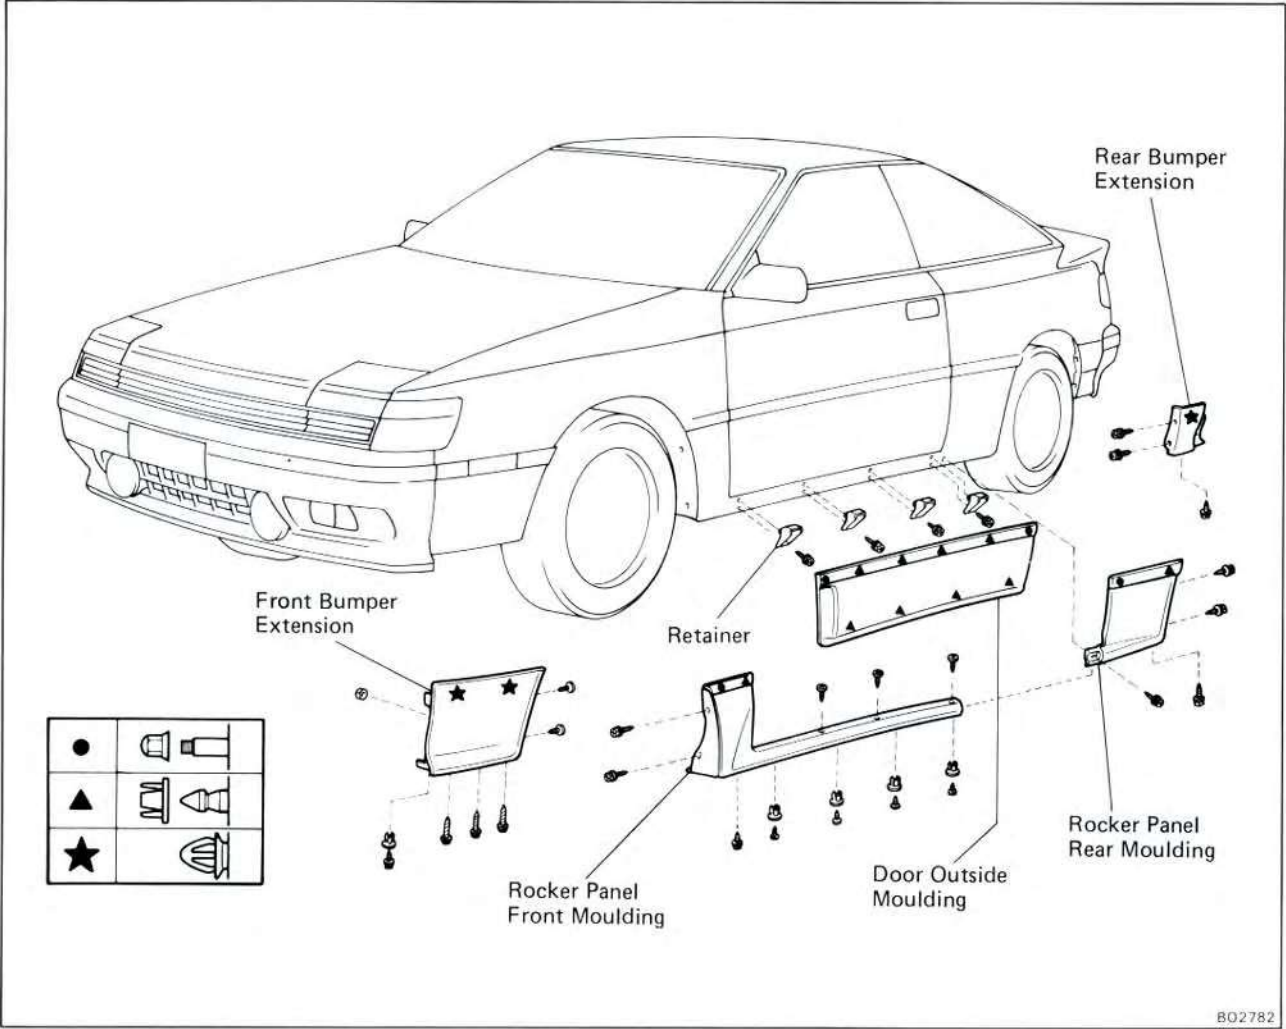


SEAT BELT
COMPONENTS

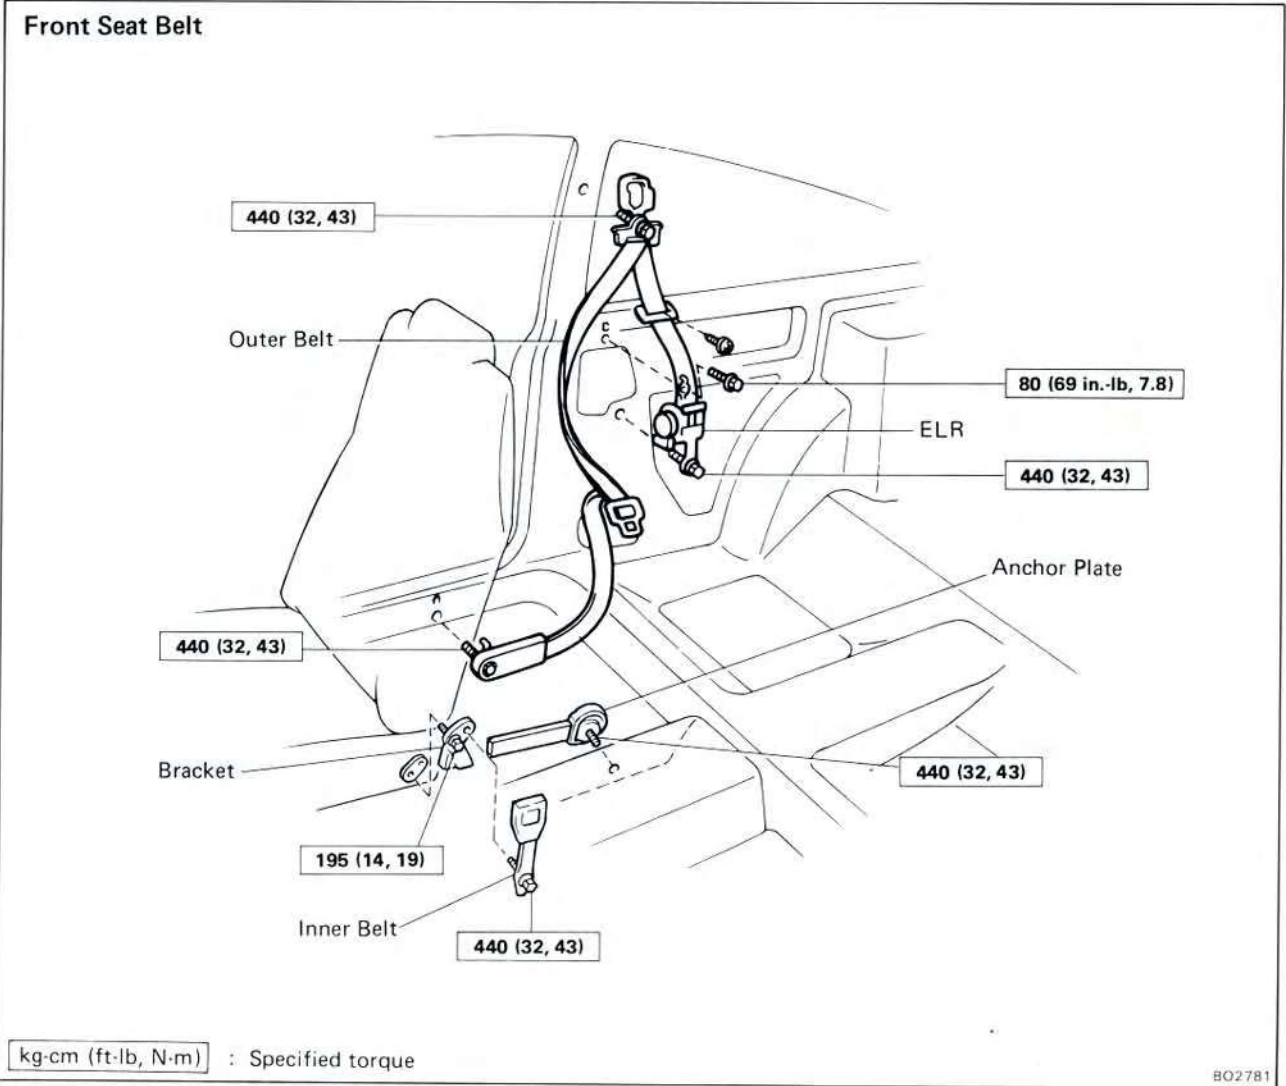

BO-4

BODY — Body Dimentions

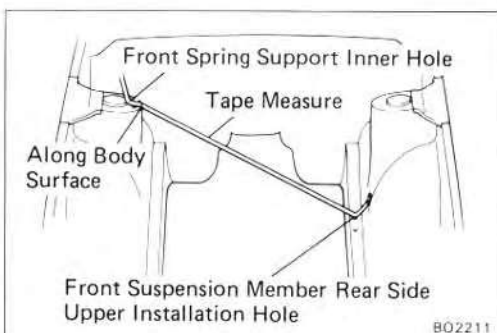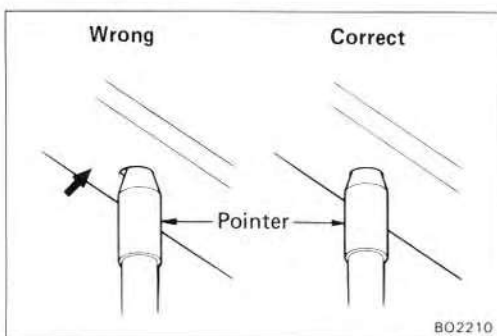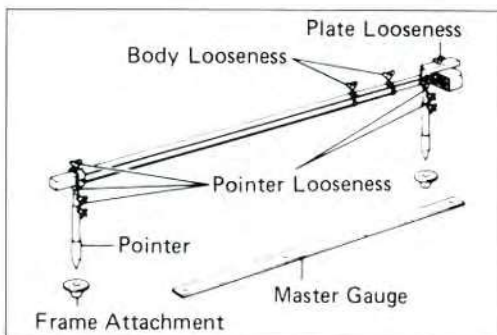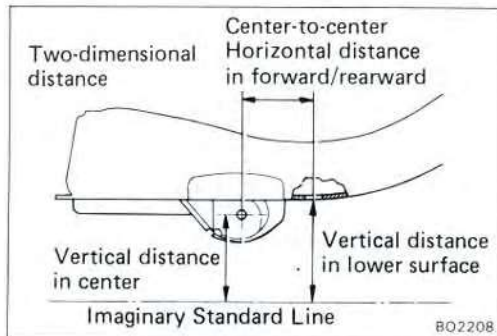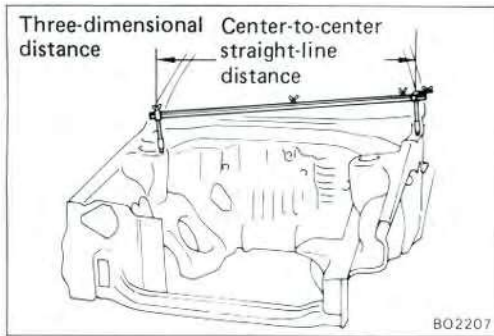

BODY DIMENSIONS

General Information

1. BASIC DIMENSIONS

- (a) There are two types of dimensions in the diagram. (Three-dimensional distance)
- Straight-line distance between the centers of two measuring points.

(Two-dimensional distance)

- Horizontal distance in forward/rearward between the centers of two measuring points.
 - The height from an imaginary standard line.
- (b) Incases in which only one dimension is given, left and right are symmetrical.
- (c) The dimensions in the following drawing indicates actual distance. Therefore, please use the dimensions as a reference.

2. MEASURING

- (a) Basically, all measurments are to be done with a tracking gauge. For portion at which it is not possible to use to tracking gauge, a tape measure should be used.
- (b) Use only a tracking gauge that has no looseness in the body, measuring plate, or pointers.

NOTE:


1. The height of the left and right pointers must be equal.
2. Always calibrate the tracking gauge before measuring or after adjusting the pointer height.
3. Take care not to drop the tracking gauge or otherwise shock it.
4. Confirm that the pointers are securely in the holes.

- (c) When using a tape measure, avoid twists and bends in the tape.
- (d) When tracking a diagonal measurement from the front spring support inner hole to the suspension member upper rear installation hole, measure along the front spring support panel surface.

BODY DIMENSION DRAWINGS

ENGINE COMPARTMENT

(Three-dimensional Distance)

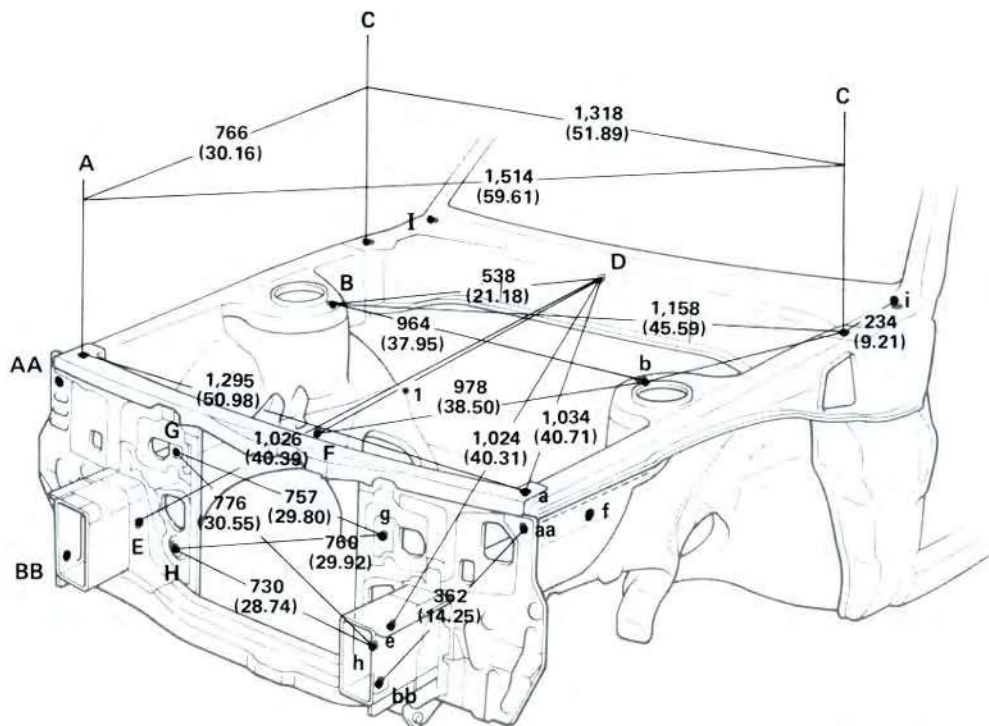

*1: 655 (25.79)


mm (in.)

Symbol	Nomenclature	Hole dia.
A, a	Front fender installation nut — front	6 (0.24)
B, b	Front spring support hole — inner	11 (0.43)
C, c	Front fender installation nut — rear	6 (0.24)
D	Cowl top panel center mark	—
E, e	Front side member standard hole	15 (0.59)
F, f	Front side member working hole	15 (0.59)
G	Cooler pipe installation nut	6 (0.24)
g	Radiator support standard hole	9 (0.35)
H, h	Cooler condenser installation hole	10 (0.39)
I, i	Cowl top side panel standard hole	10 (0.39)
AA, aa	Front fender installation nut	6 (0.24)
BB, bb	Front side member extension standard hole	11 (0.39)


BO2775

UNDER BODY


(Three-dimensional Distance)

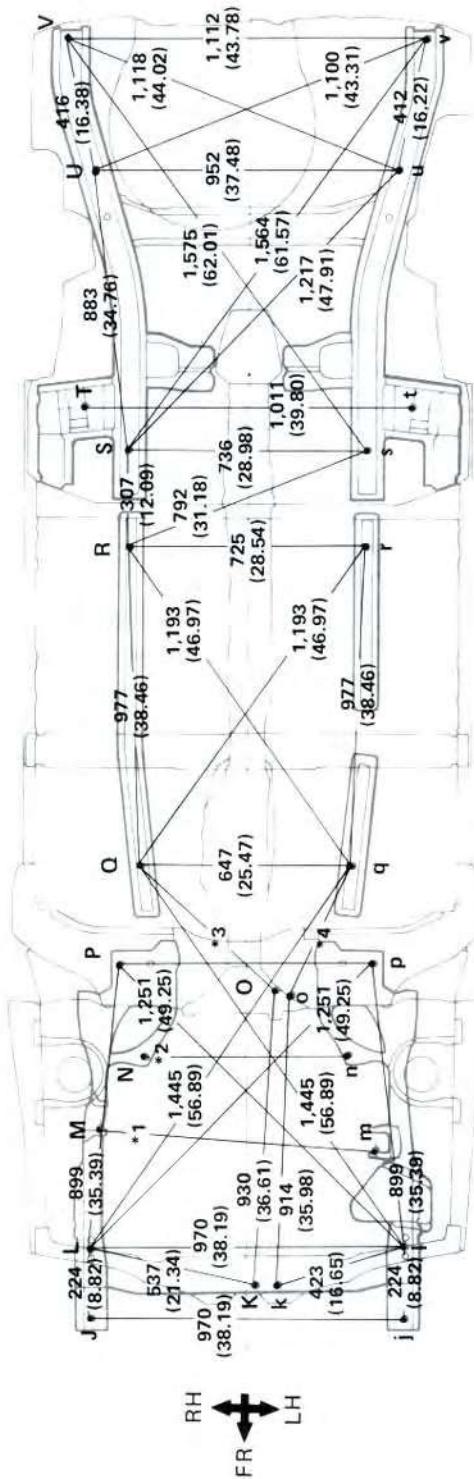

* ¹ M-m	864 (34.01)	* ² N-n	650 (25.59)
* ³ O-Q	570 (22.44)	* ⁴ o-q	440 (17.32)

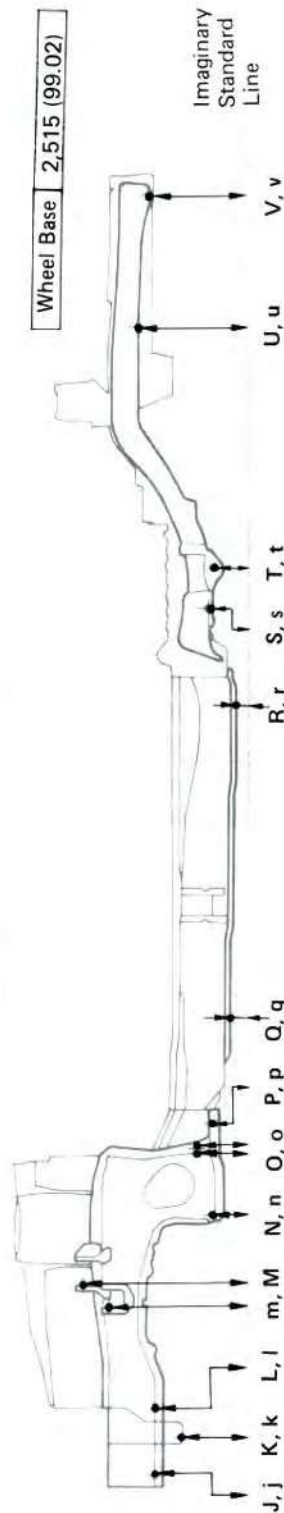


Symbol	Nomenclature	Hole dia.	Symbol	Nomenclature	Hole dia.
J, j	Front side member bumper installation hole	RH 13 (0.51) LH 16 (0.63)	P, p	Lower arm installation nut	12 (0.47)
K, k	Engine mounting member installation nut — front	10 (0.39)	Q, q	Front floor under reinforcement standard hole	15 (0.59)
L, l	Front side member standard hole	15 (0.59)	R, r	Front floor under reinforcement standard hole	15 (0.59)
M, m	Engine mounting bracket hole — front	13 (0.51)	S, s	Rear floor side member standard hole	18 (0.71)
N, n	Lower arm installation nut	12 (0.47)	T, t	Strut bar installation hole — inner	12 (0.47)
O, o	Engine mounting member installation nut	10 (0.39)	U, u	Rear floor side member standard hole	12 (0.47)
			V	Rear floor side member standard hole	18 (0.71)

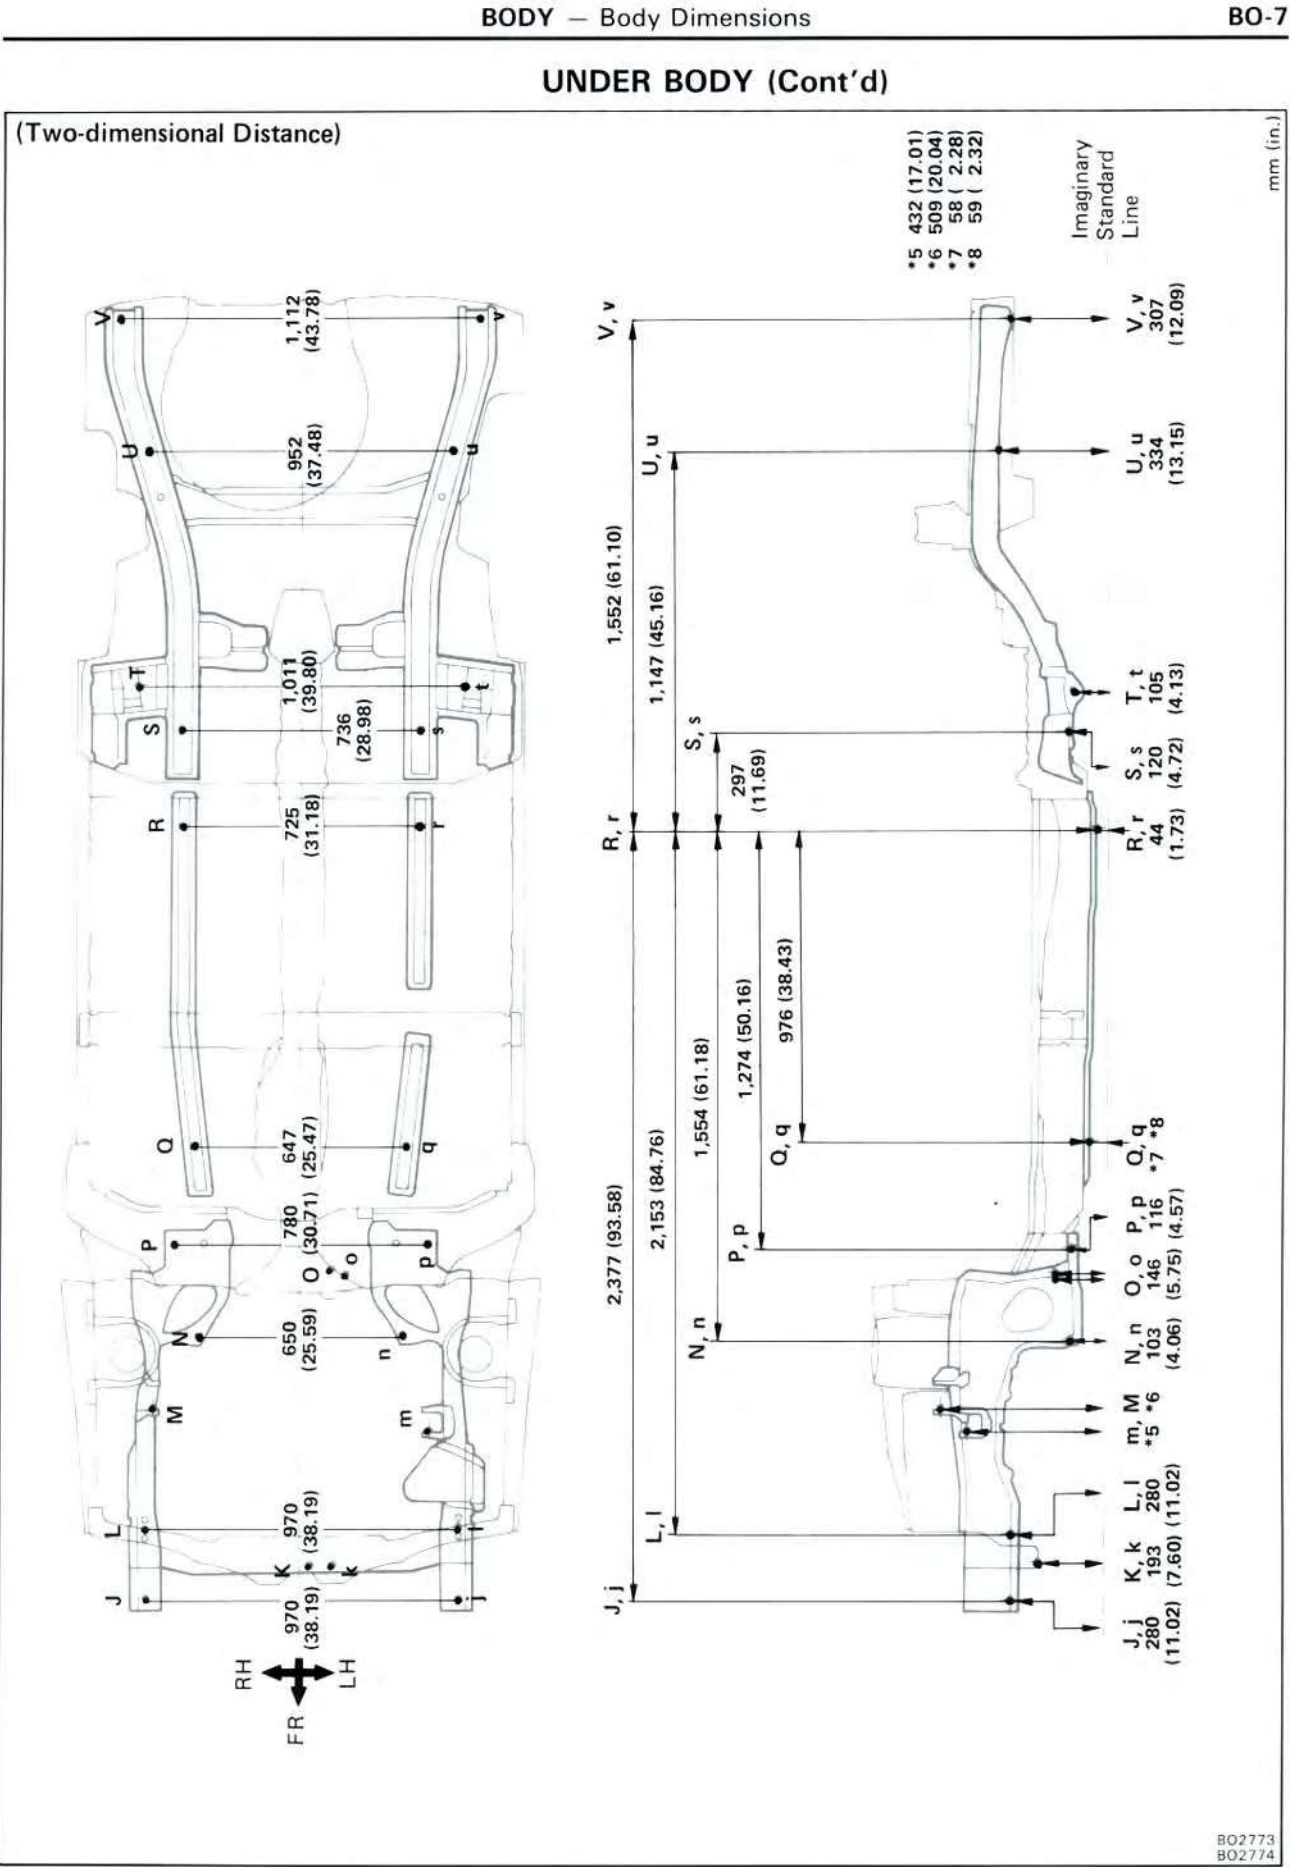


LUGGAGE COMPARTMENT


(Three-dimensional Distance)

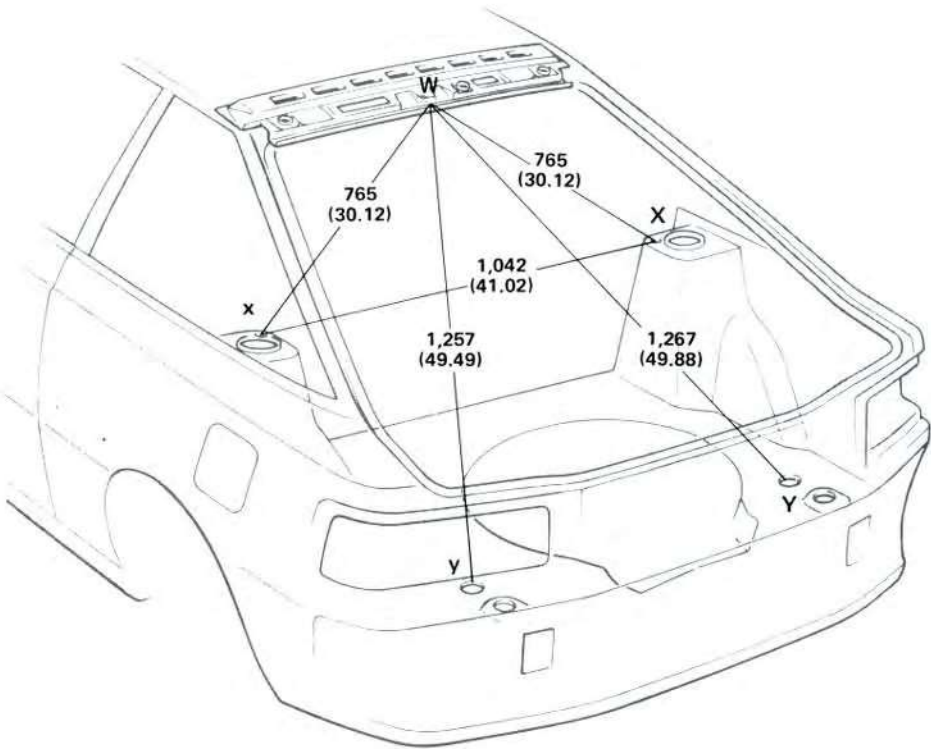

W Point

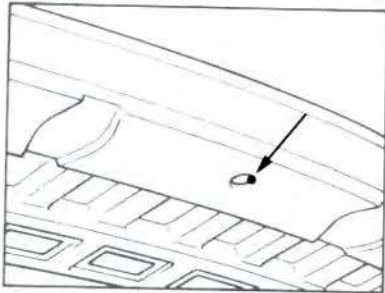

Y, y Points

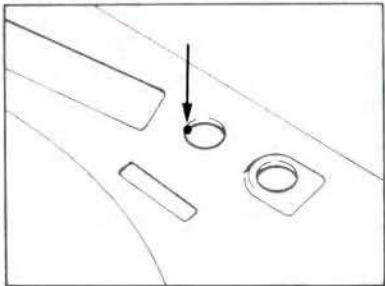

NOTE: The luggage compartment measurement is performed between the two dot marked points as shown in the above figure.

mm (in.)		
Symbol	Nomenclature	Hole dia.
W	Back door opening frame standard hole	9 (0.35)
X, x	Rear spring support hole — front	9.5 (0.374)
Y, y	Rear floor pan bumper installation hole — front	40 (1.57)

BO2772