

WIRING SYSTEM SECTION

WIRING SYSTEM

WI

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

WIRING SYSTEM



	Page
1. Basic Diagnostics Procedure	3
2. Working Precautions	14
3. Power Supply Routing	15
4. Ground Distribution	29
5. Airbag System	47
6. Air Conditioning System	53
7. Anti-lock Brake System	65
8. AT Control System	71
9. Audio System	83
10. Charging System	87
11. Combination Meter	89
12. Cruise Control System	97
13. Engine Coolant Temperature Gauge System	100
14. Engine Electrical System	102
15. Fuel Gauge System	177
16. Full-Time Dual-Range System	179
17. Front Accessory Power Supply System	181
18. Headlight Beam Leveler System	182
19. Horn System	183
20. Immobilizer System	184
21. Keyless Entry System	188
22. Back-up Light System	197
23. Clearance Light and Illumination Light System	198
24. Front Fog Light System	210
25. Headlight System	213
26. In Compartment Light System	215
27. Stop Light System	219
28. Turn Signal Light and Hazard Light System	220
29. Oil Pressure Warning Light System	224
30. Outside Temperature Display System	226
31. Parking Brake and Brake Fluid Level Warning System	228
32. Power Window System	230
33. Radiator Fan System	238
34. Rear Fog Light System	240
35. Rear Window Defogger System	242
36. Remote Controlled Rearview Mirror System	244
37. Seat Belt Warning System	246
38. Seat Heater System	250
39. Security System	251
40. Starter System	253
41. Sunroof System	255
42. Wiper and Washer System (Front)	256
43. Wiper and Washer System (Rear)	258

WIRING SYSTEM

44.	Intercooler Water Spray System	260
45.	Driver's Control Center Differential Control System	262
46.	Rear Differential Oil Temperature Warning Light System	266
47.	Harness Components Location	268
48.	Front Wiring Harness	270
49.	Bulkhead Wiring Harness (In Engine Room)	274
50.	Bulkhead Wiring Harness (In Compartment)	282
51.	Engine Wiring Harness and Transmission Cord	288
52.	Instrument Panel Wiring Harness	294
53.	Rear Wiring Harness, Bulkhead Wiring Harness, Roof Cord and Fuel Tank Cord.....	298
54.	Door Cord.....	304
55.	Rear Wiring Harness and Trunk Lid Cord	308
56.	Rear Wiring Harness and Rear Gate Cord	310

1. Basic Diagnostics Procedure

A: BASIC PROCEDURES

1. GENERAL

The most important purpose of diagnostics is to determine which part is malfunctioning quickly, to save time and labor.

2. IDENTIFICATION OF TROUBLE SYMPTOM

Determine what the problem is based on symptom.

3. PROBABLE CAUSE OF TROUBLE

Look at the wiring diagram and check system's circuit. Then check the switch, relay, fuse, ground, etc.

4. LOCATION AND REPAIR OF TROUBLE

- 1) Using the diagnostics narrow down the causes.
- 2) If necessary, use a voltmeter, ohmmeter, etc.
- 3) Before replacing certain component parts (switch, relay, etc.), check the power supply, ground, for open wiring harness, poor connectors, etc. If no problems are encountered, check the component parts.

5. CONFIRMATION OF SYSTEM OPERATION

After repairing, ensure that the system operates properly.

B: BASIC INSPECTION


1. VOLTAGE MEASUREMENT

1) Using a voltmeter, connect the negative lead to a good ground point or negative battery terminal and the positive lead to the connector or component terminal.

2) Contact the positive probe of the voltmeter on connector (A).

The voltmeter will indicate a voltage.

3) Shift the positive probe to connector (B). The voltmeter will indicate no voltage.

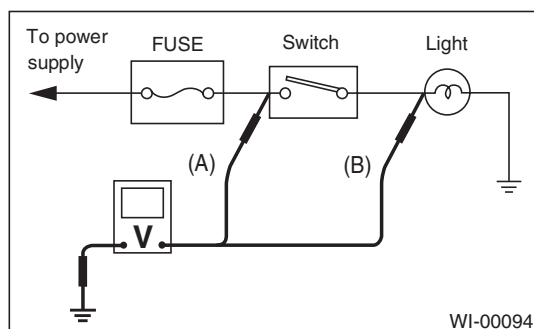

4) With test set-up held as it is, turn the switch ON. The voltmeter will indicate a voltage and, at the same time, the light will come on.

5) The circuit is in good order. If a problem such as a lamp failing to light occurs, use the procedures outlined above to track down malfunction.

2. CIRCUIT CONTINUITY CHECKS


1) Disconnect the battery cable or connector so there is no voltage between check points.

Contact the two leads of an ohmmeter to each of the check points.

If the circuit has diodes, reverse the two leads and check again.

2) Use an ohmmeter to check for the diode continuity. When contacting the negative lead to diode positive side and positive lead to negative side, there should be continuity.

When contacting the two leads in reverse, there should be no continuity.

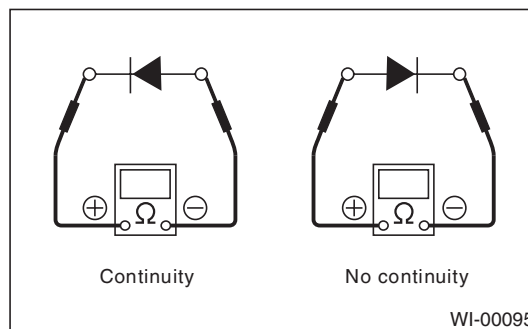

3) Symbol "○—○" indicates that continuity exists between two points or terminals. For example, when a switch position is "3", continuity exists among terminals 1, 3 and 6, as shown in table below.

Terminal	1	2	3	4	5	6
Switch Position						
OFF						
1	○—○				○—○	
2	○—○			○—○		○—○
3	○—○		○—○			○—○
4	○—○	○—○				○—○

WI-00096


Basic Diagnostics Procedure

WIRING SYSTEM

3. HOW TO DETERMINE AN OPEN CIRCUIT


1) Voltmeter Method:

An open circuit is determined by measuring the voltage between respective connectors and ground using a voltmeter, starting with the connector closest to power supply. The power supply must be turned ON so that current flows in the circuit. If voltage is not present between a particular connector and ground, the circuit between that connector and previous connector is open.

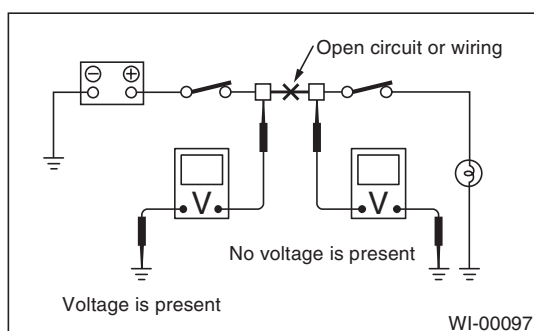

2) Ohmmeter method:


Disconnect all connectors affected, and check the continuity in wiring between adjacent connectors. When the ohmmeter indicates "infinite", the wiring is open.

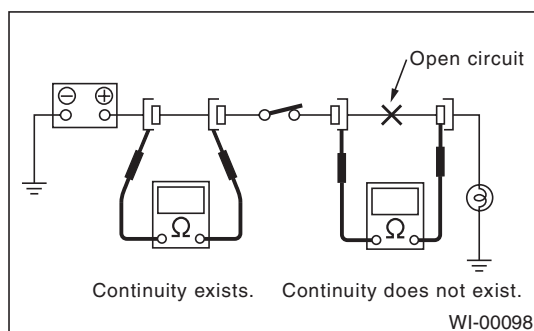

4. HOW TO DETERMINE A SHORT CIRCUIT


1) Test lamp method:

Connect a test lamp (rated at approx. 3 watts) in place of the blown fuse and allow current to flow through the circuit. Disconnect one connector at a time from the circuit, starting with the one located farthest from power supply. If the test lamp goes out when a connector is disconnected, the wiring between that connection and next connector (farther from the power supply) is shorted.

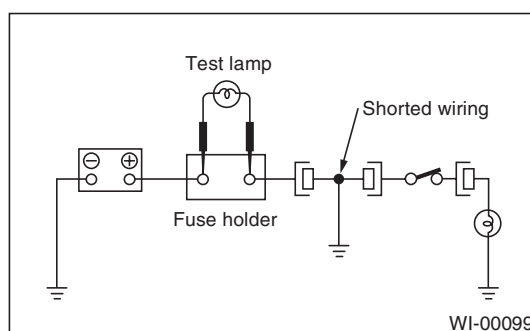

2) Ohmmeter method:

Disconnect all affected connectors, and check the continuity between each connector and ground. When the ohmmeter indicates continuity between a particular connector and ground, that the connector is shorted.

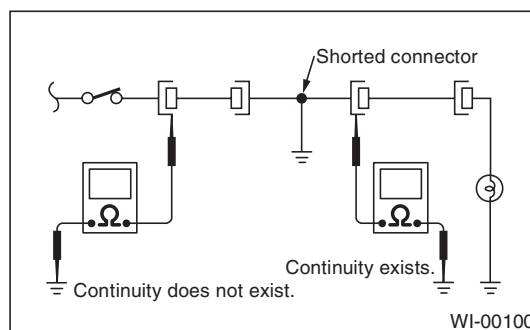


C: HOW TO READ WIRING DIAGRAMS

1. WIRING DIAGRAM




The wiring diagram of each system is illustrated so that you can understand the path through which electric current flows from battery.

Sketches and codes are used in the diagrams. They should read as follows:

- Each connector and its terminal position are indicated by a sketch of the connector in a disconnected state which is viewed from front.

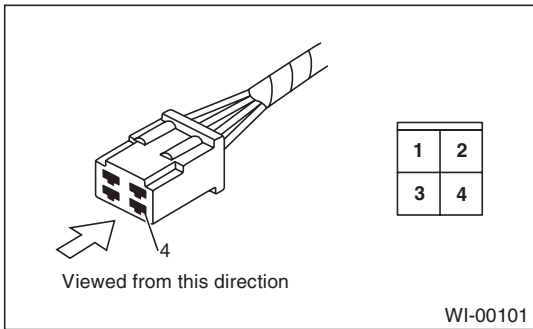

- The number of poles or pins, presence of a lock, and pin number of each terminal are indicated in the sketch of each connector. In the sketch, the highest pole number refers to the number of poles which connector has. For example, the sketch of connector shown in the figure indicates the connector has 9 poles.

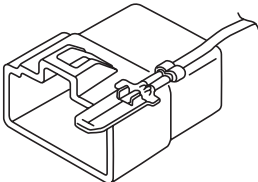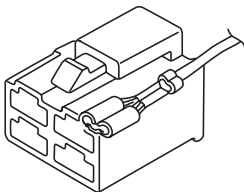
Connector used in vehicle	Connector shown in wiring diagram												
	Sketch	Symbol	Number of poles										
	Double frames Indicates a lock is included. <table border="1"><tr><td>4</td><td>3</td><td></td><td>2</td><td>1</td></tr><tr><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td></tr></table> Indicates the number of poles.	4	3		2	1	9	8	7	6	5		Numbered in order from upper right to lower left.
4	3		2	1									
9	8	7	6	5									
	Indicates a lock is included. <table border="1"><tr><td>1</td><td>2</td><td></td><td>3</td><td>4</td></tr><tr><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td></tr></table> Single frame	1	2		3	4	5	6	7	8	9		Numbered in order from upper left to lower right
1	2		3	4									
5	6	7	8	9									

WI-00102

Basic Diagnostics Procedure

WIRING SYSTEM


- When one set of connectors is viewed from the front side, the pole numbers of one connector are symmetrical to those of other. When these two connectors are connected as a unit, the poles which have the same number are joined.

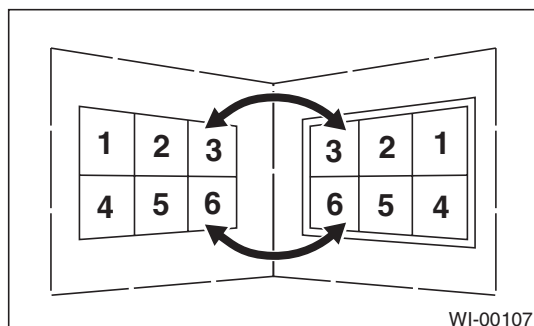


- Electrical wiring harness:**
The connectors are numbered along with the number of poles, external colors, and mating connections in accompanying list.
- The sketch of each connector in the wiring diagram usually shows (A) side of the connector. The relationship between wire color, terminal number and connector is described in figure.

NOTE:

A wire which runs in one direction from a connector terminal sometimes may have a different color from that which runs in the other direction from that terminal.

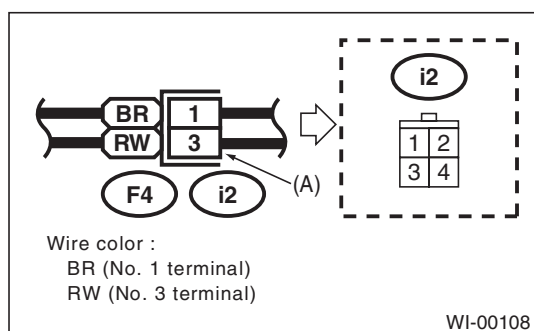


- In wiring diagram, connectors which have no terminal number refer to one-pole types. Sketches of these connectors are omitted intentionally.

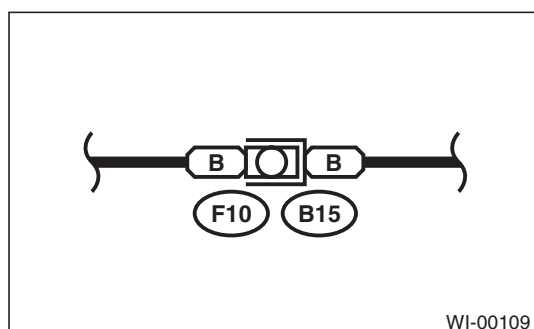

- The following color codes are used to indicate the colors of the wires used.


Color code	Color
L	Blue
B	Black
Y	Yellow
G	Green
R	Red
W	White
Br	Brown
Lg	Light green
Gr	Gray
P	Pink
Or	Orange
Lb	Light Blue
V	Violet
SA	Sealed (Inner)
SB	Sealed (Outer)

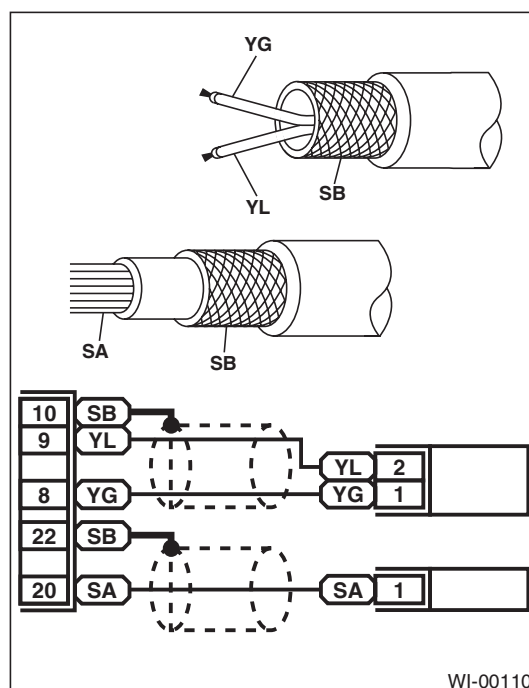

Basic Diagnostics Procedure

WIRING SYSTEM

- The wire color code, which consists of two letters (or three letters including Br or Lg), indicates the standard color (base color of the wire covering) by its first letter and stripe marking by its second letter.

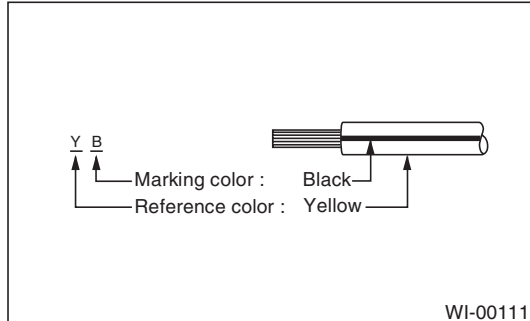

- The table lists the nominal sectional areas and allowable currents of wires.

CAUTION:


When replacing or repairing a wire, be sure to use the same size and type of wire which was originally used.

NOTE:

- The allowable current in the table indicates tolerable amperage of each wire at an ambient temperature of 40°C (104°F).
- The allowable current changes with ambient temperature. Also, it changes if a bundle of more than two wires is used.

Nominal sectional area mm ²	No. of strands/ strand diameter	Outside diameter of finished wiring mm	Allowable current Amps/ 40°C (104°F)
0.3	7/0.26	1.8	7
0.5	7/0.32	2.2 (or 2.0)	12
0.75	30/0.18	2.6 (or 2.4)	16
0.85	11/0.32	2.4 (or 2.2)	16
1.25	16/0.32	2.7 (or 2.5)	21
2	26/0.32	3.1 (or 2.9)	28
3	41/0.32	3.8 (or 3.6)	38
5	65/0.32	4.6 (or 4.4)	51
8	50/0.45	5.5	67


- Each unit is directly grounded to the body or indirectly grounds through a harness ground terminal. Different symbols are used in the wiring diagram to identify the two grounding systems.

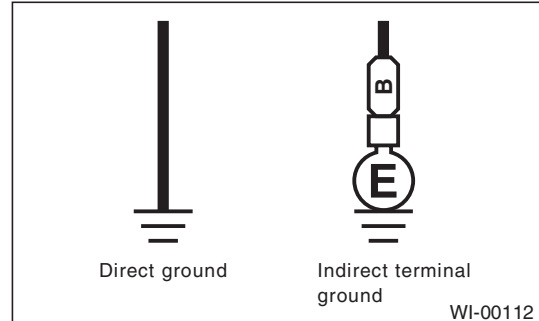

- The ground points shown in the wiring diagram refer to the following:

NOTE:

All wiring harnesses are provided with a ground point which should be securely connected.

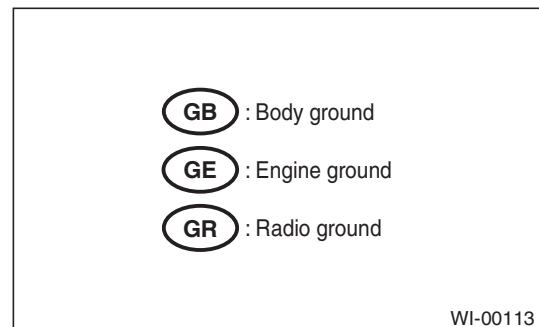

- Relays are classified as normally-open or normally-closed. The normally-closed relay has one or more contacts.

Basic Diagnostics Procedure

WIRING SYSTEM

The wiring diagram shows the relay mode when energizing circuit is OFF.

Relay type		Energizing circuit OFF	Energizing circuit ON
Normally-open type	4-pole		
	6-pole		
Normally-closed type	4-pole		
Mixed type	6-pole		


Key to symbols:
○ —▶ : Current flows.
X —▶ : Current does not flow.

WI-00114

- Each connector number shown in the wiring diagram corresponds to that in wiring harness. The location of each connector in actual vehicle is determined by reading the first character of the connector (for example, a "F" for F8, "i" for i16, etc.) and type of wiring harness.

The first character of each connector number refers to the area or system of the vehicle.

Symbol	Wiring harness and cord
F	Front wiring harness
B	Bulkhead wiring harness
E	Engine wiring harness
T	Transmission cord, Rear oxygen sensor cord
D	Door cord LH & RH, Rear door cord LH & RH, Rear gate cord
i	Instrument panel wiring harness
R	Rear wiring harness, Fuel tank cord, Roof cord, Trunk lid cord
AB	Airbag wiring harness

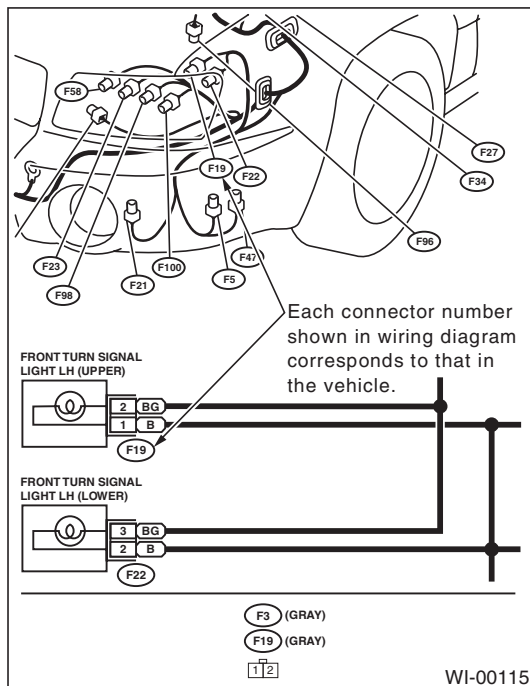


Basic Diagnostics Procedure

WIRING SYSTEM

D: SYMBOLS IN WIRING DIAGRAMS

A number of symbols are used in each wiring diagram to easily identify parts or circuits.

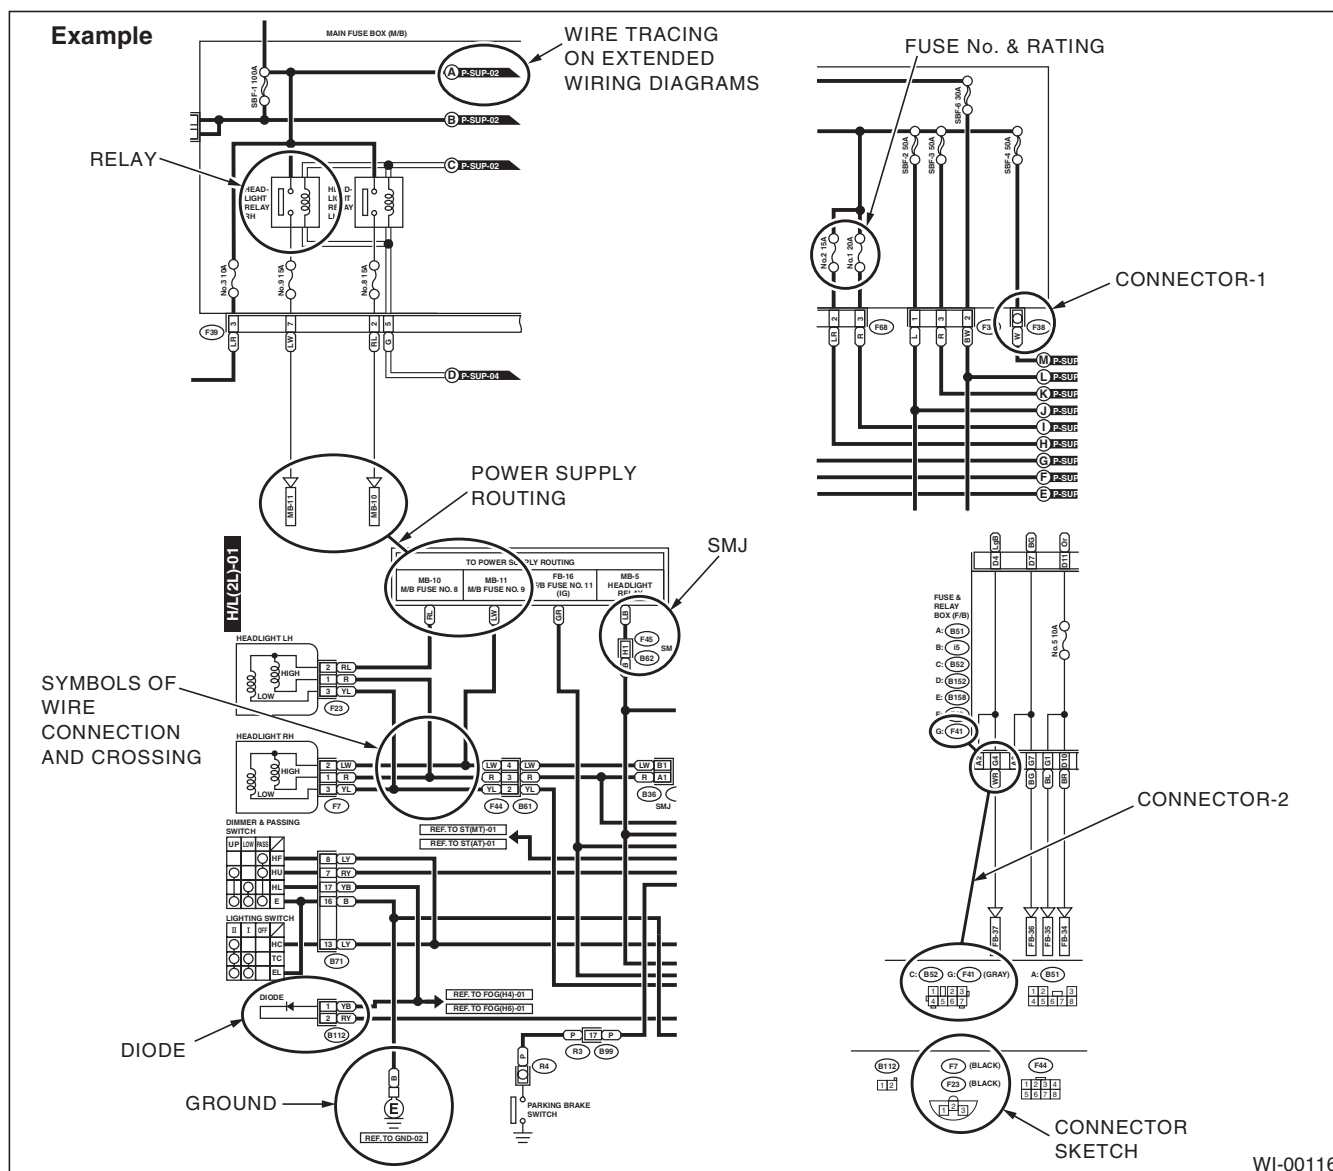

1. RELAY

A symbol used to indicate a relay.

2. CONNECTOR-1

The sketch of the connector indicates one-pole types.

3. WIRING CONNECTION

Some wiring diagrams are indicated in foldouts for convenience. Wiring destinations are indicated where necessary by corresponding symbols (as when two pages are needed for clear indication).

4. FUSE No. & RATING

The "FUSE No. & RATING" corresponds with that used in fuse box (main fuse box, fuse and joint box).

5. CONNECTOR-2

- Each connector is indicated by a symbol.
- Each terminal number is indicated in the corresponding wiring diagram in an abbreviated form.
- For example, terminal number "G4" refers to No. 4 terminal of connector (G: F41) shown in the connector sketch.

6. CONNECTOR SKETCH

- Each connector sketch clearly identifies the shape and color of a connector as well as terminal locations. Non-colored connectors are indicated in natural color.
- When more than two types of connector number are indicated in a connector sketch, it means that the same type connectors are used.

7. GROUND

Each grounding point can be located easily by referring to the corresponding wiring harness.

8. DIODE


A symbol is used to indicate a diode.

9. WIRE TRACING ON EXTENDED WIRING DIAGRAMS

For a wiring diagram extending over at least two pages, a symbol (consisting of the same characters with arrows), facilitates wire tracing from one page to the next.

A ↔ A, B ↔ B

10. SYMBOLS OF WIRE CONNECTION AND CROSSING

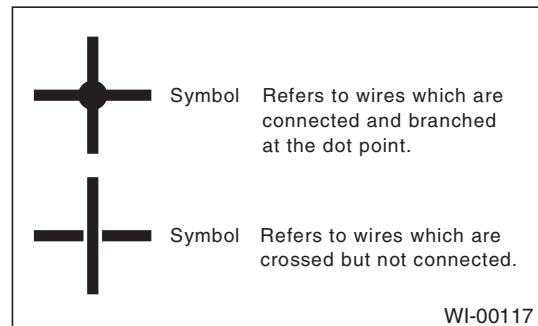

11. POWER SUPPLY ROUTING

A symbol is used to indicate the power supply in each wiring diagram.

"MB-5", "MB-6", etc., which are used as power-supply symbols throughout the text, correspond with those shown in POWER SUPPLY ROUTING in the wiring diagram.

Accordingly, using the POWER SUPPLY ROUTING and wiring diagrams permits service personnel to understand the entire electrical arrangement of a system.

12. CLASSIFICATION BY SPECIFICATION


When the wiring diagrams differ according to vehicle specifications, the specification difference is described by using abbreviations.



Basic Diagnostics Procedure

WIRING SYSTEM

E: CONNECTOR SYMBOL IN WIRING HARNESS

Main symbols of connector (in wiring harness) are indicated in below.

Water proof type	Female		
	Pole: From 1 to 8	Pole: From 9 to 20	Pole: More than 21
			
			
	Male		
			
			

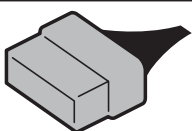Standard type	Female		
	Pole: From 1 to 8	Pole: From 9 to 20	Pole: More than 21
			
			
	Male		
			
			

WI-02445

F: ABBREVIATION IN WIRING DIAGRAMS

Abbreviation	Full name
ABS	Antilock Brake System
ACC	Accessory
A/C	Air Conditioning
AD	Auto Down
AT	Automatic Transmission
AU	Auto Up
+B	Battery
DCCD	Driver's Control Center Differential
DIFF	Differential
DN	Down
E	Ground
F/B	Fuse & Joint Box
FL1.5	Fusible link 1.5 mm ²
IG	Ignition
Illumi.	Illumination
LH	Left Hand
Lo	Low
M	Motor
M/B	Main Fuse Box
MG	Magnet
Mi	Middle
OP	Optional Parts
PASS	Passing
RH	Right Hand
SBF	Slow Blow Fuse
ST	Starter
SW	Switch
UP	Up
WASH	Washer

Working Precautions

WIRING SYSTEM


2. Working Precautions

A: PRECAUTIONS WHEN WORKING WITH THE PARTS MOUNTED ON THE VEHICLE

- 1) When working under a vehicle which is jacked-up, always be sure to use safety stands.
- 2) The parking brake must always be applied during working. Also, in automatic transmission models, keep the select lever set to P (Parking) range.
- 3) Be sure the workshop is properly ventilated when running the engine. Further, be careful not to touch the belt or fan while the engine is operating.
- 4) Be careful not to touch hot metal parts, especially the radiator and exhaust system immediately after the engine has been shut off.


B: PRECAUTIONS IN TROUBLE DIAGNOSIS AND REPAIR OF ELECTRIC PARTS

- 1) The battery cable must be disconnected from battery's (-) terminal, and the ignition switch must be set to OFF position, unless otherwise required by the diagnostics.
- 2) Securely fasten the wiring harness with clamps and slips so that the harness does not interfere with body end parts or edges and bolts or screws.
- 3) When installing the parts, be careful not to catch them on the wiring harness.
- 4) When disconnecting a connector, do not pull the wires, but pull while holding the connector body.

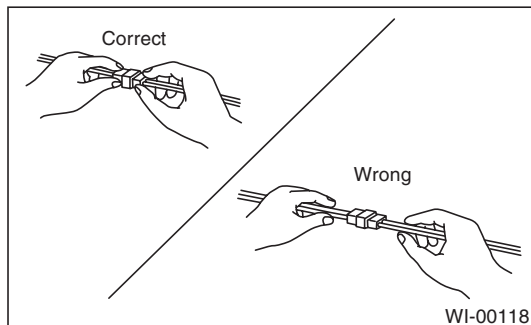


- 5) Some connectors are provided with a lock. One type of such a connector is disconnected by pushing the lock, and the other, by moving the lock up. In either type the lock shape must be identified before attempting to disconnect the connector.

To connect, insert the connector until it snaps and confirm that it is tightly connected.

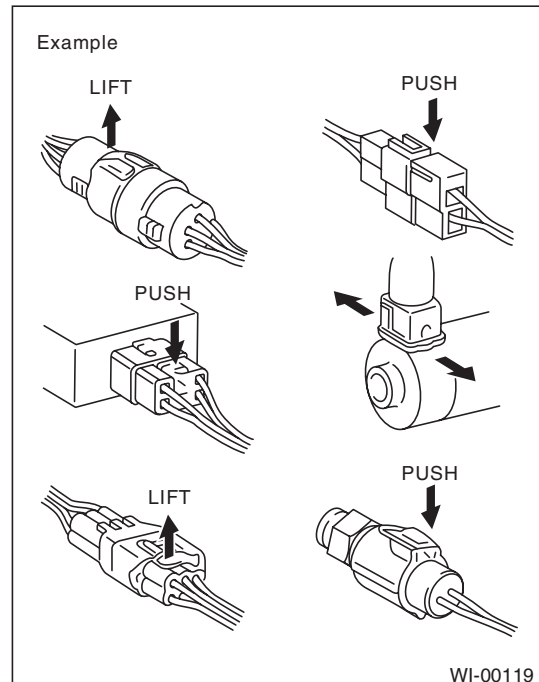

- 6) When checking continuity between connector terminals, or measuring the voltage across the terminal and ground, always contact tester probe(s) on terminals from the wiring connection side. If the probe is too thick to gain access to the terminal, use "mini" test leads.

To check water-proof connectors (which are not accessible from the wiring side), contact test probes on the terminal side being careful not to bend or damage terminals.

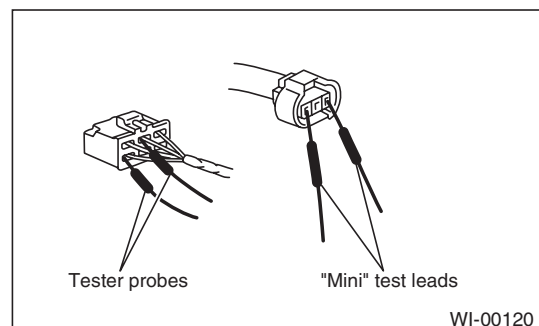

- 7) Sensors, relays, electrical unit, etc., are sensitive to strong impacts. Handle them with care so that they are not dropped or mishandled.



3. Power Supply Routing

A: WIRING DIAGRAM

1. LHD MODEL

P-SUP(L)-01


P-SUP(L)-01

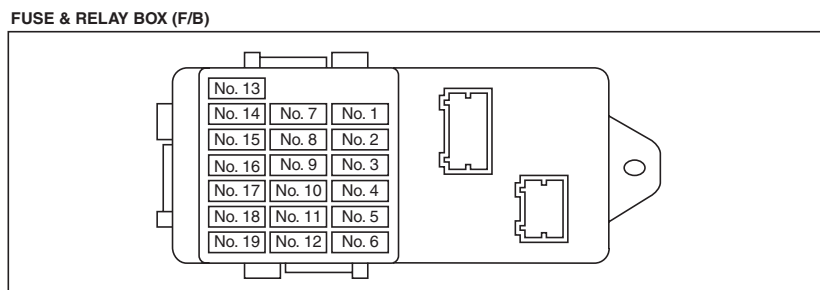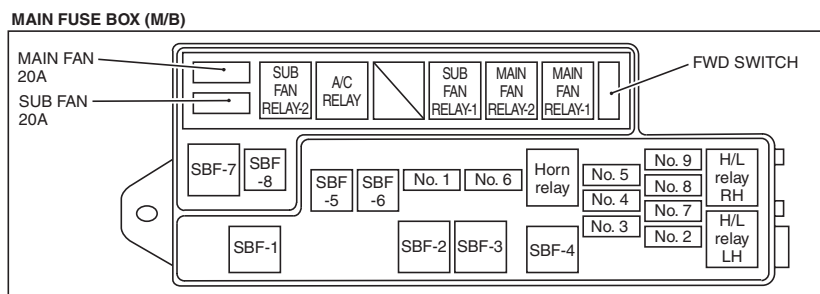


Power Supply Routing

WIRING SYSTEM

P-SUP(L)-02

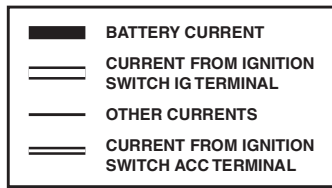

P-SUP(L)-02

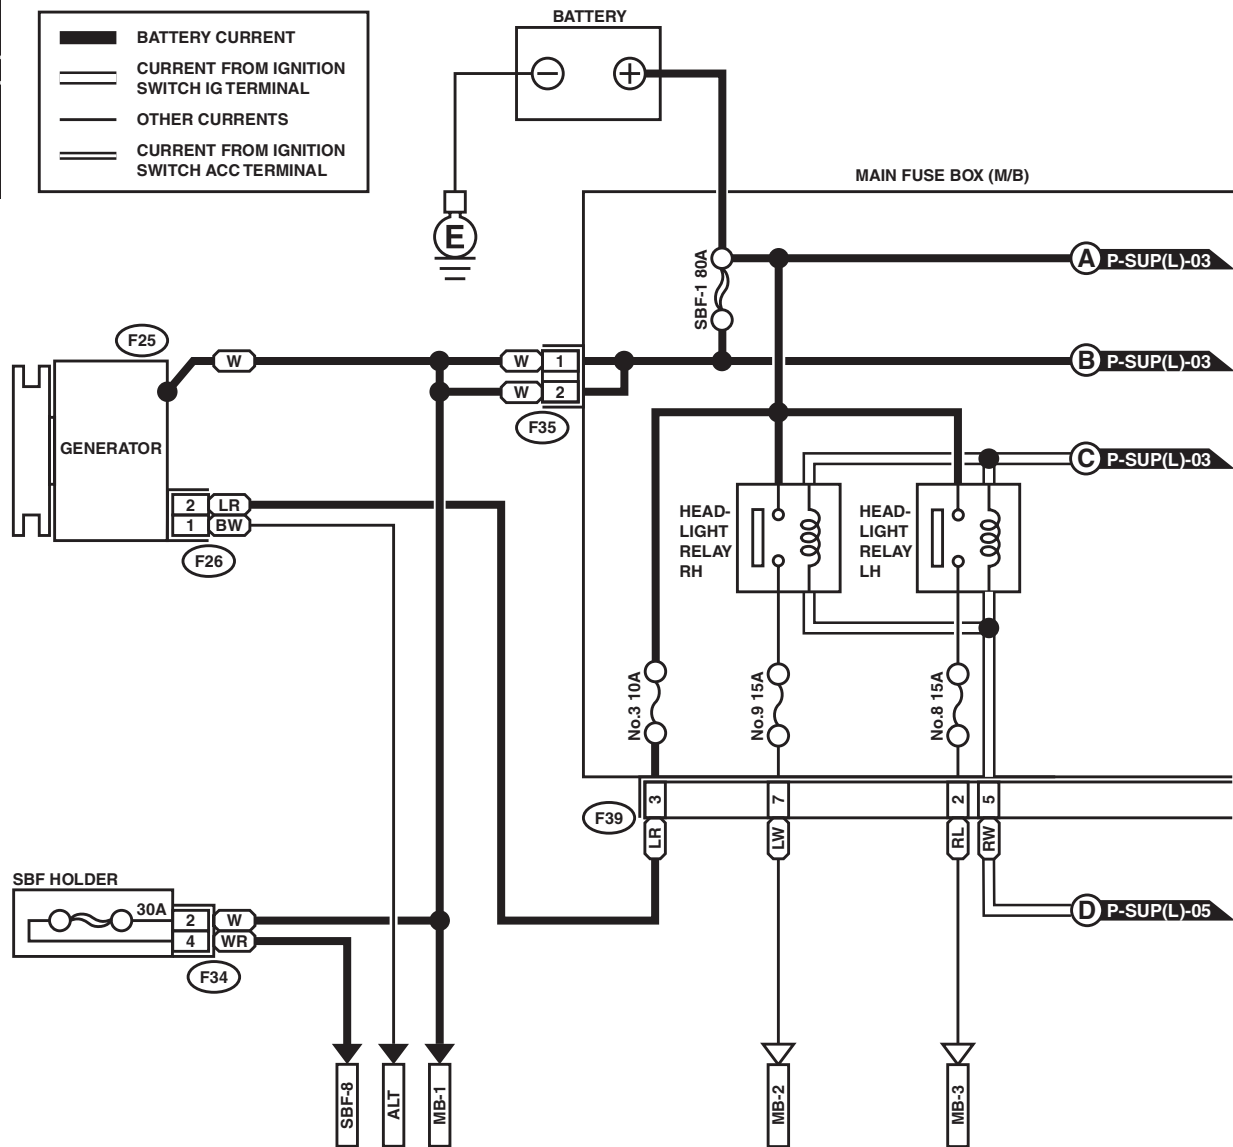

F35 (BLACK)



F26 (GREEN)



F34 (BLACK)




F39 (BLACK)



WI-02234

Power Supply Routing


WIRING SYSTEM

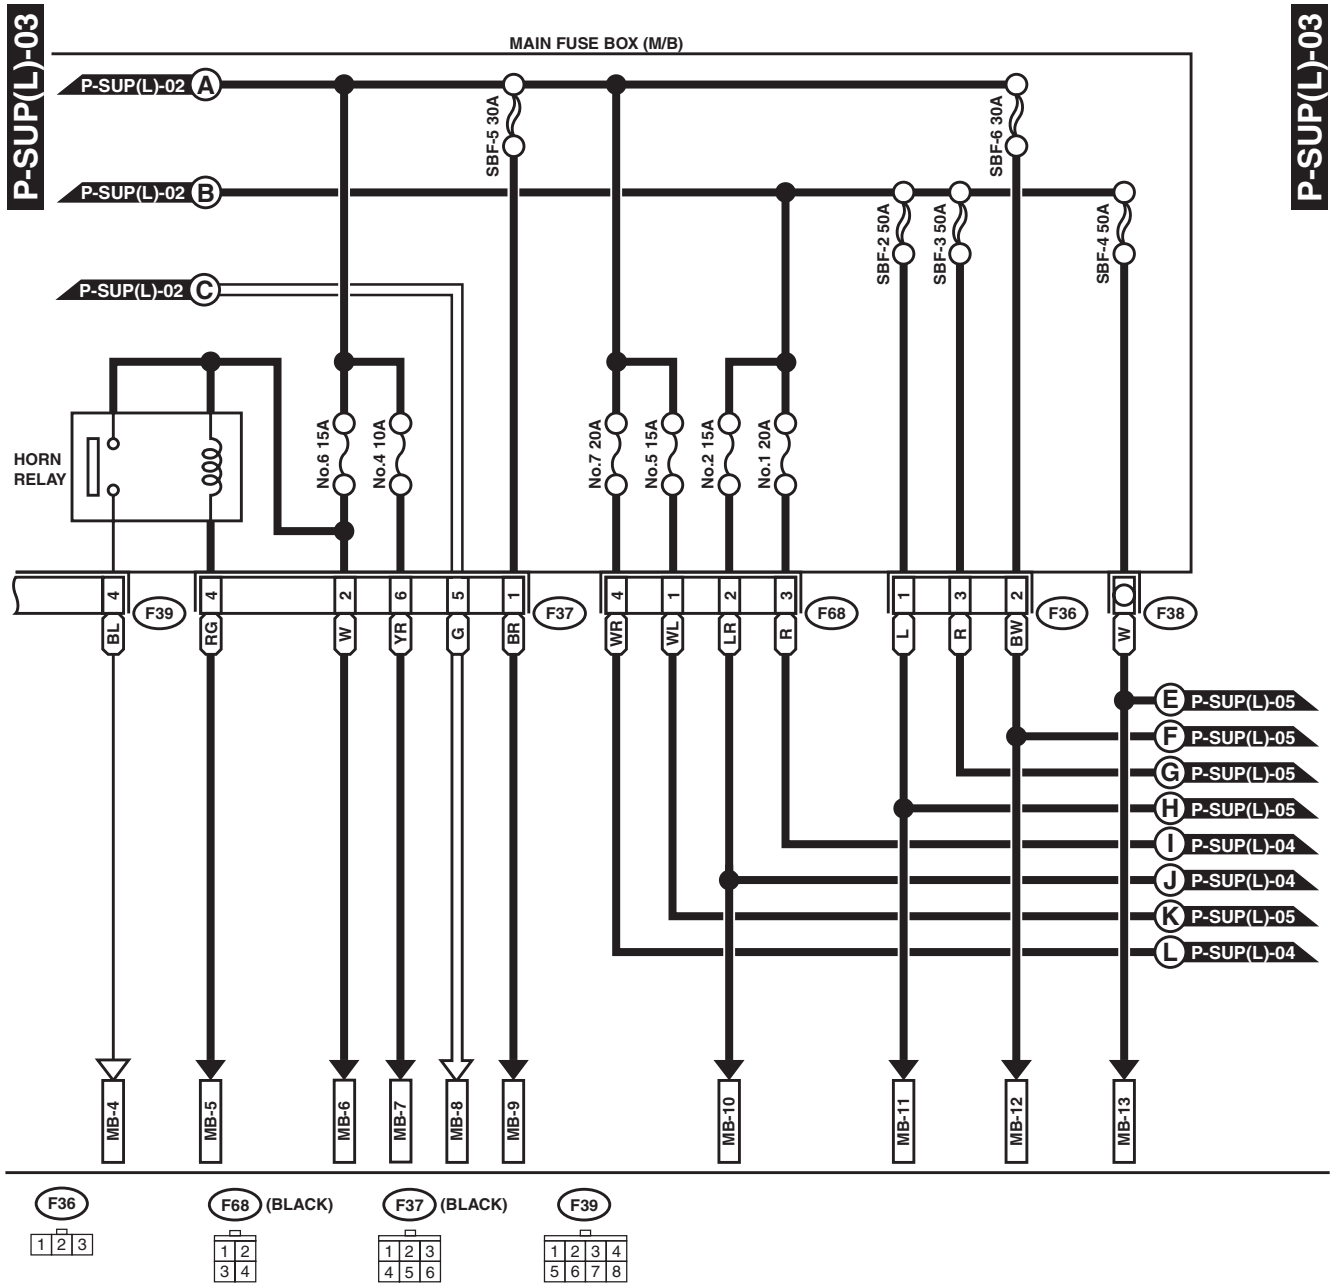

WI-04535

Power Supply Routing


WIRING SYSTEM

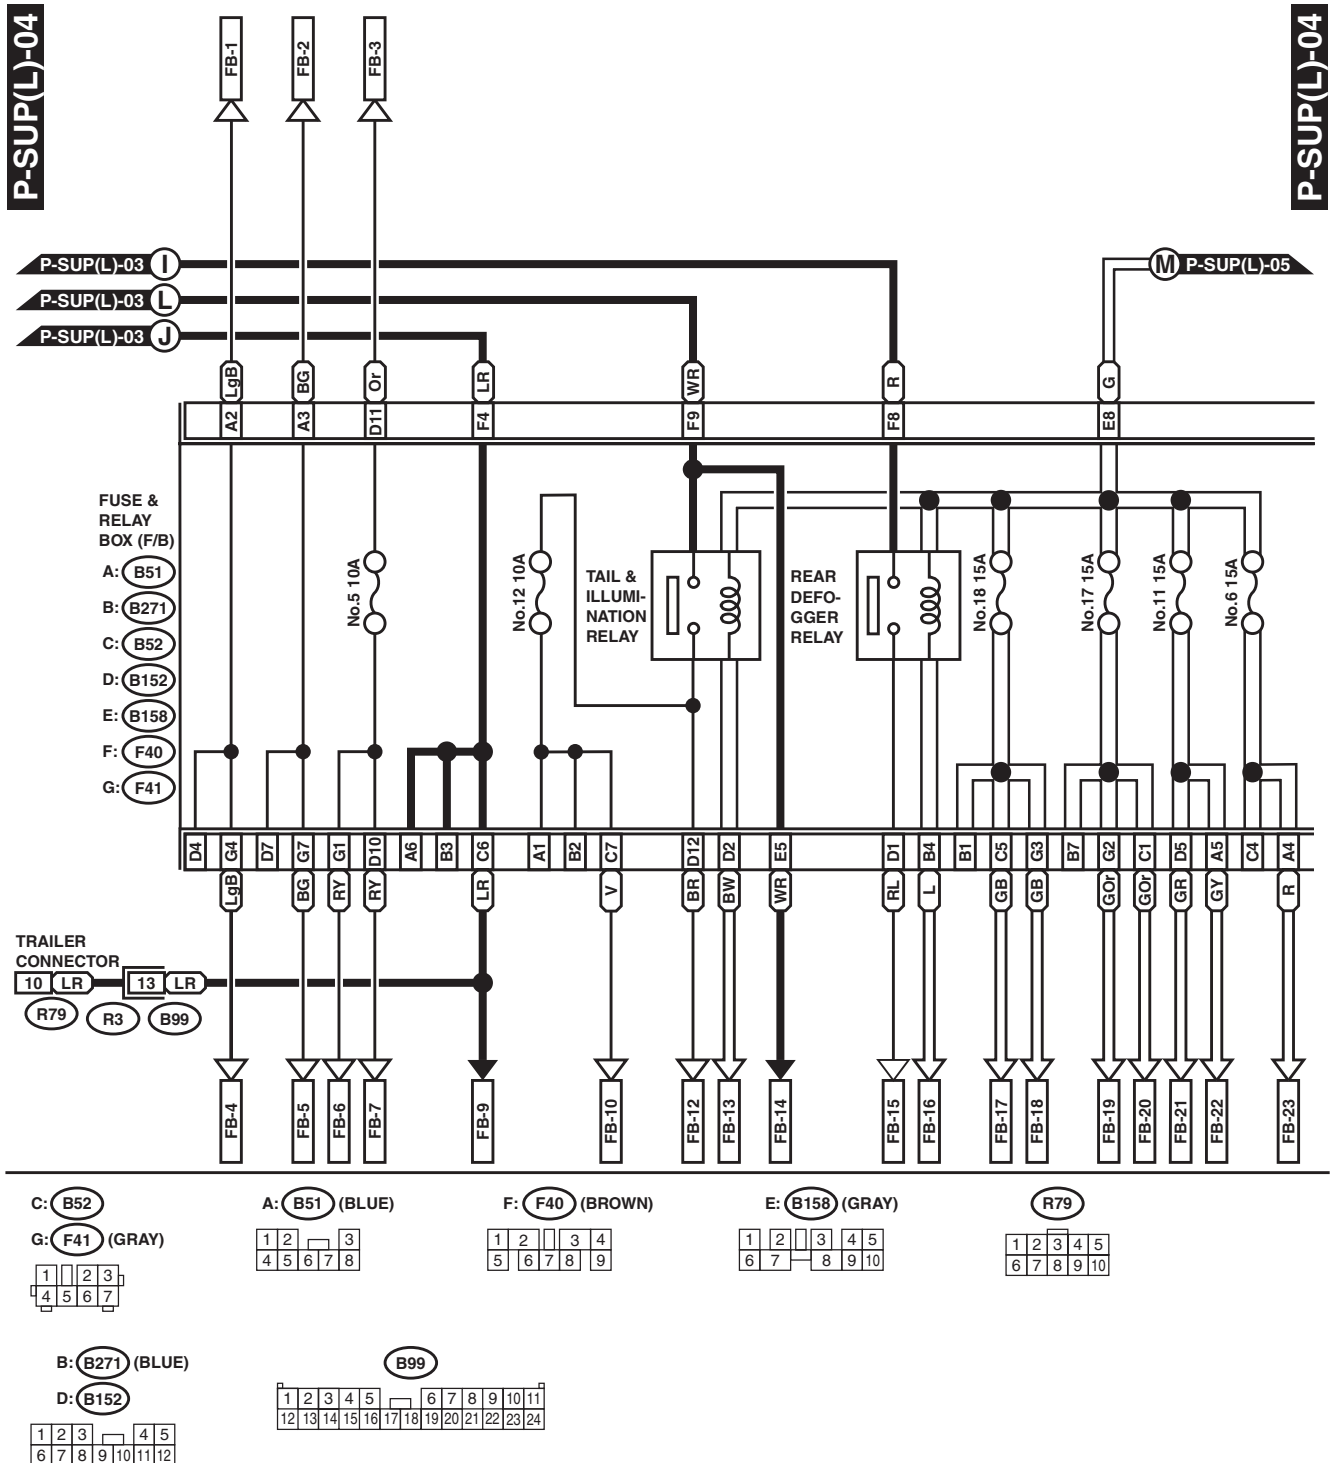

WI-02236

Power Supply Routing

WIRING SYSTEM

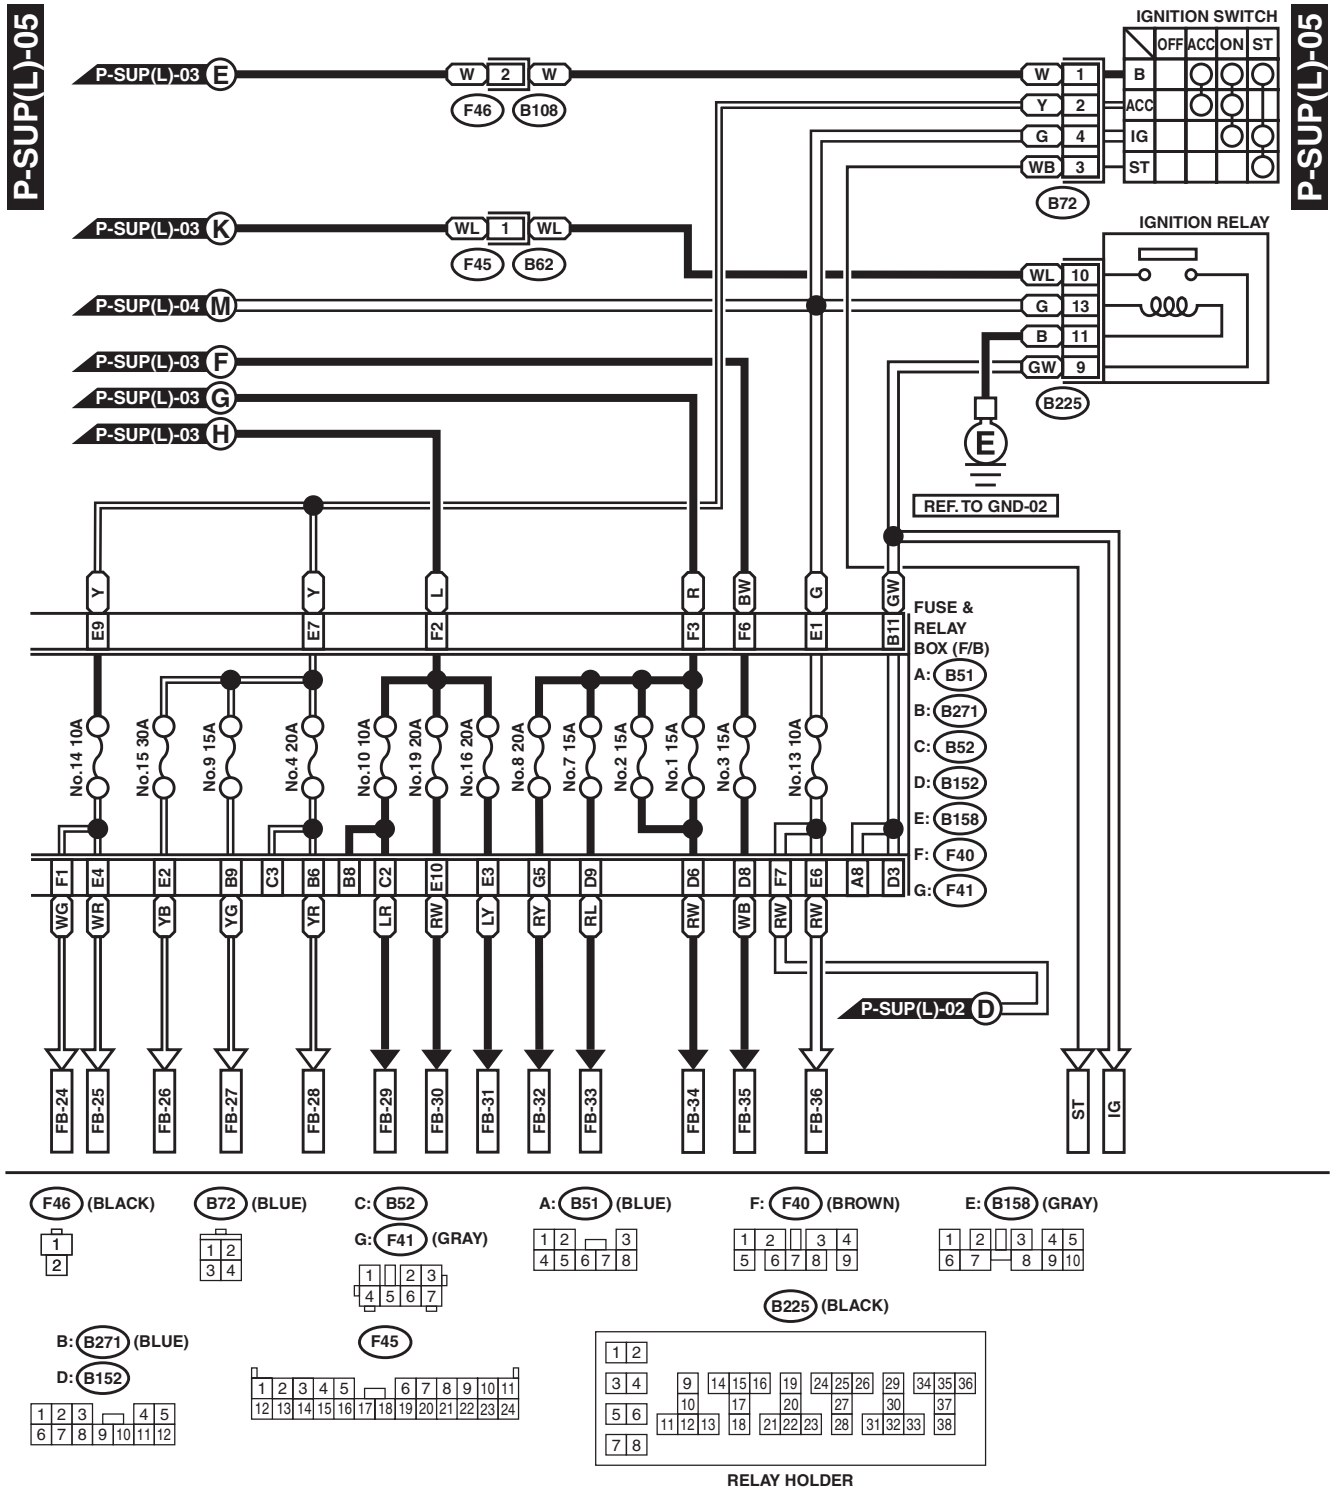

WI-04431

Power Supply Routing

WIRING SYSTEM

No.	Load
MB-1	Air conditioning relay holder
MB-2	Combination meter Headlight RH
MB-3	Headlight LH
MB-4	Horn
MB-5	Cruise control sub switch Horn switch
MB-6	Hazard switch Key warning switch
MB-7	Driver's control center differential control module Driver's control center differential relay Transmission control module
MB-8	Diode (With rear fog light model) Lighting switch
MB-9	Data link connector Engine control module Fuel pump relay Immobilizer control module Main relay
MB-11	Fuse (Seat heater)
MB-12	Power window circuit breaker
MB-13	Relay holder
SBF-8	ABS control module
IG	Hazard switch Power window relay
ST	Engine control module Inhibitor switch (AT) Starter motor (MT)
FB-1	Hazard switch Rear turn signal light RH Trailer connector Turn signal switch
FB-2	Hazard switch Rear turn signal light LH Trailer connector Turn signal switch
FB-3	Parking switch
FB-4	Front turn signal light RH Side turn signal light RH
FB-5	Front turn signal light LH Side turn signal light LH
FB-6	Front clearance light LH Front clearance light RH
FB-7	License plate light Tail light LH Tail light RH Trailer connector
FB-9	Auto A/C control module Combination meter Keyless entry control module Luggage room light (Wagon) Radio Room light Spot light Trunk room light (Sedan)

No.	Load
FB-10	Bright switch Combination meter Front fog light relay Front fog light switch Headlight leveling switch Illumination light Rear fog light relay Rear fog light switch
FB-12	Parking switch
FB-13	Engine control module Lighting switch
FB-14	Parking switch
FB-15	Mirror heater relay Rear defogger Rear defogger switch
FB-16	Engine control module Rear defogger timer
FB-17	ABS relay Back-up light switch (MT) Check connector Cruise control actuator Cruise control main switch Cruise control module Inhibitor switch (AT) Seat belt timer Vehicle speed sensor (MT)
FB-18	Headlight leveler LH Headlight leveler RH
FB-19	Air conditioning relay Sub fan relay Pressure switch (A/C)
FB-20	AUTO A/C control module Blower motor relay Mode control panel Rear defogger timer
FB-21	Driver's control center differential control module Driver's control center differential relay Engine control module Fuel pump relay Ignition coil and ignitor Immobilizer control module Transmission control module
FB-22	Airbag control module
FB-23	Airbag control module
FB-24	Rear washer motor
FB-25	Rear wiper intermittent module Rear wiper motor
FB-26	Front washer motor Front wiper motor Front wiper switch
FB-27	Auto A/C control module Radio
FB-28	Front accessory power supply socket Remote controlled rearview mirror switch Intercooler water spray switch Intercooler water spray timer Seat heater relay

Power Supply Routing

WIRING SYSTEM



No.	Load
FB-29	Rear fog light relay
FB-30	Mirror heater relay
FB-31	Stop light switch
FB-32	ABS control module
FB-33	Front fog light relay
FB-34	Blower motor relay
FB-35	Keyless entry control module
FB-36	Combination meter

Power Supply Routing

2. RHD MODEL

P-SUP(R)-01

P-SUP(R)-01

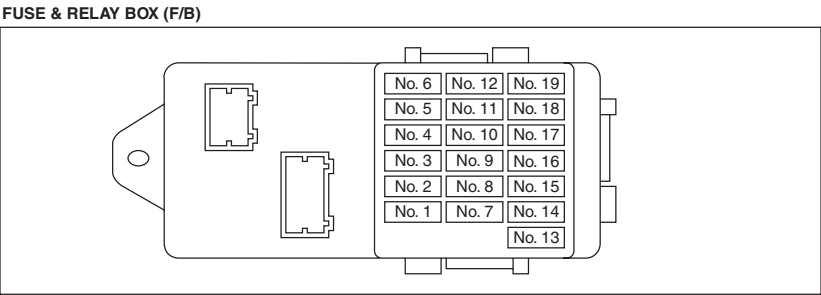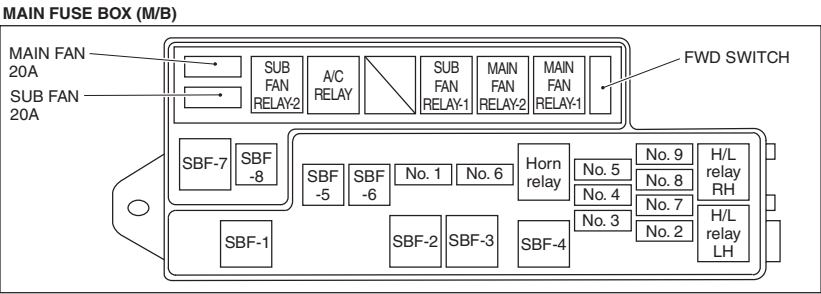


Power Supply Routing

WIRING SYSTEM

P-SUP(R)-02


P-SUP(R)-02

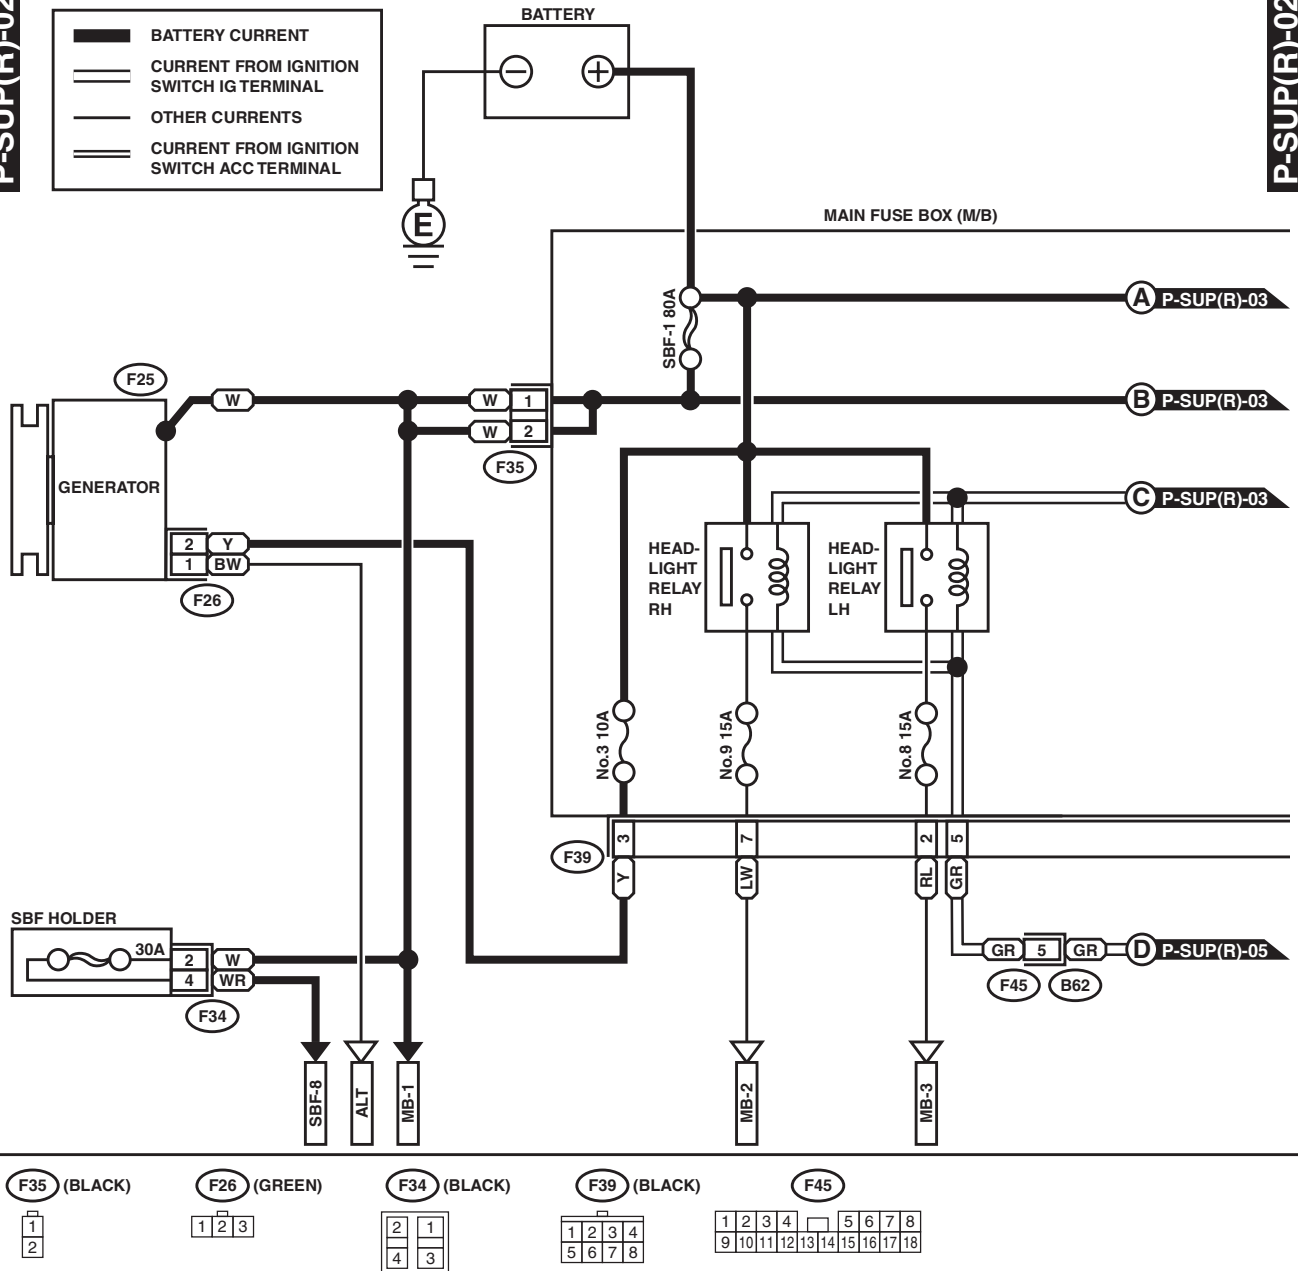

WI-02239

Power Supply Routing

WIRING SYSTEM

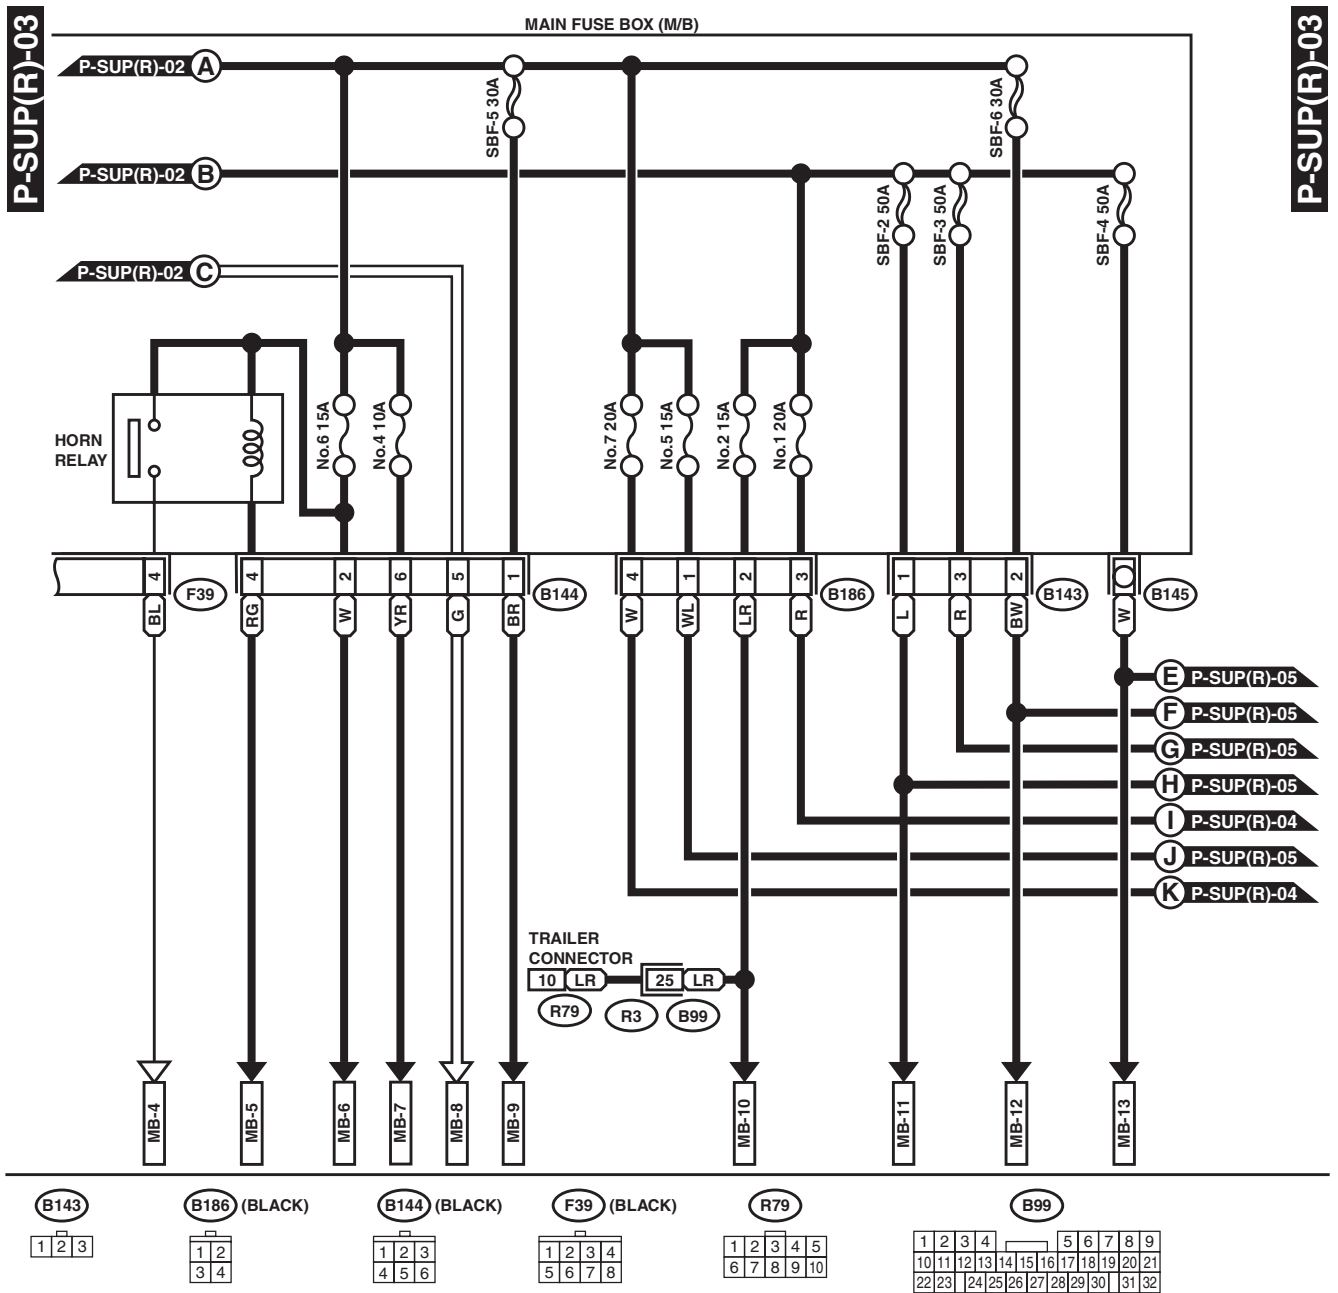


WI-02240

Power Supply Routing

WIRING SYSTEM

P-SUP(R)-04


P-SUP(R)-04

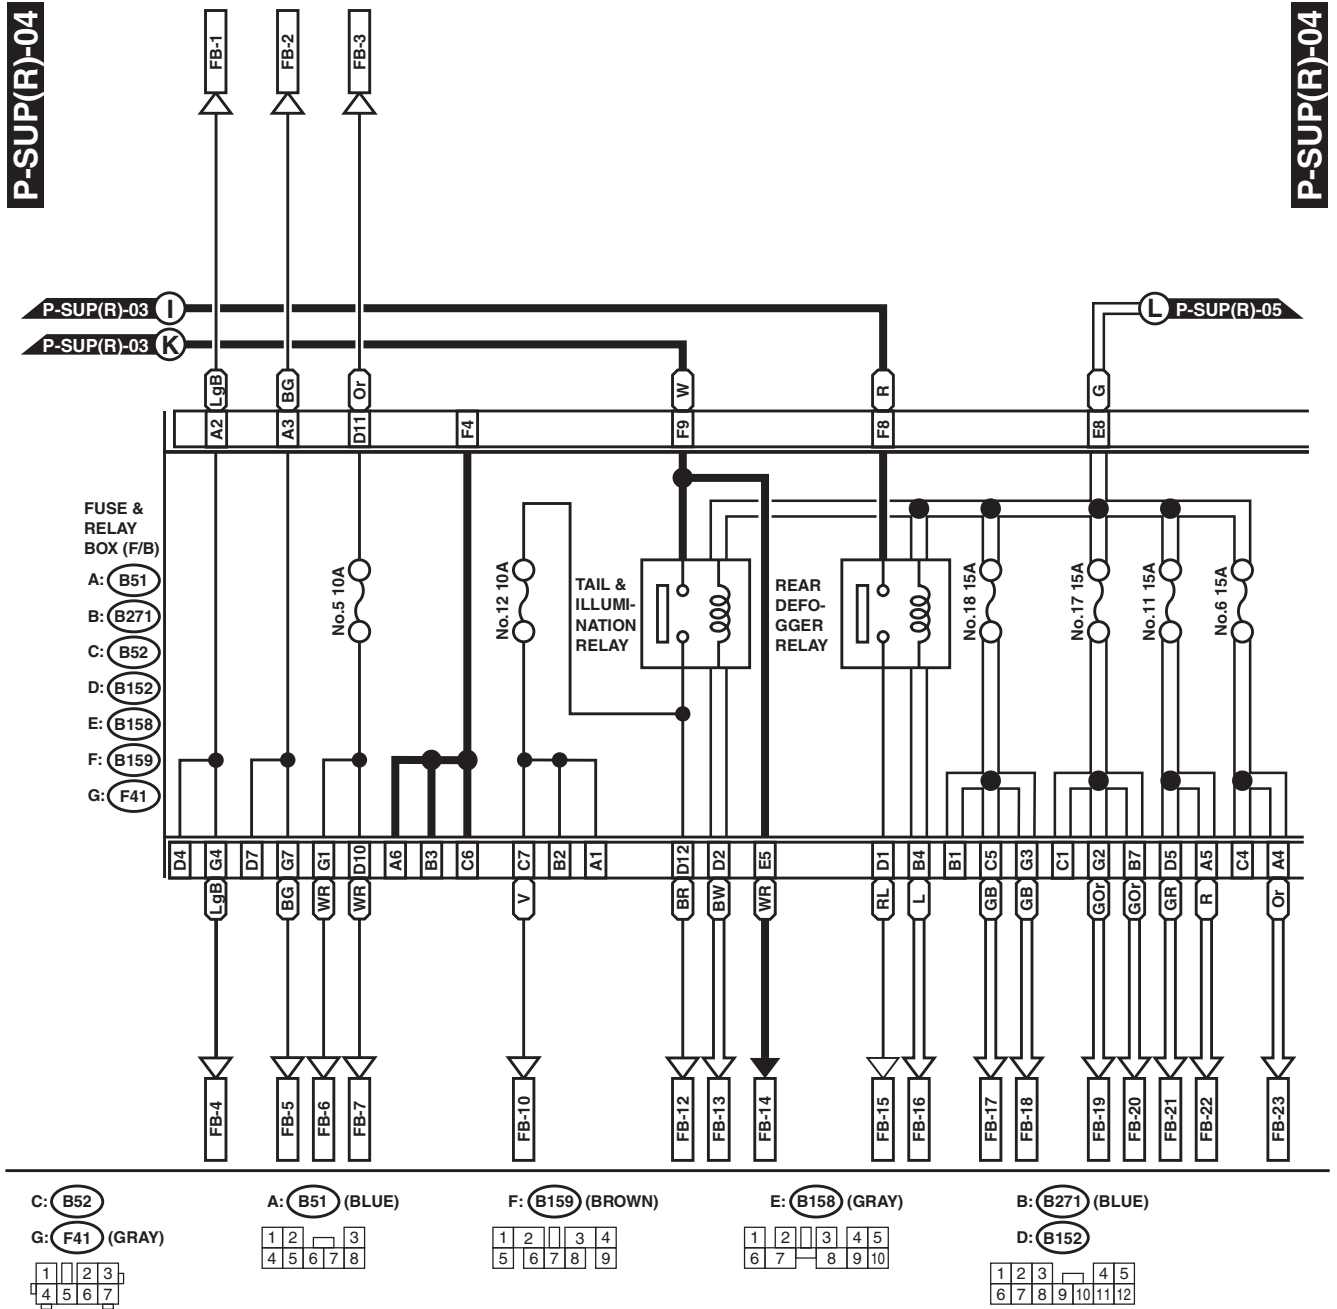

WI-02241

Power Supply Routing

WIRING SYSTEM

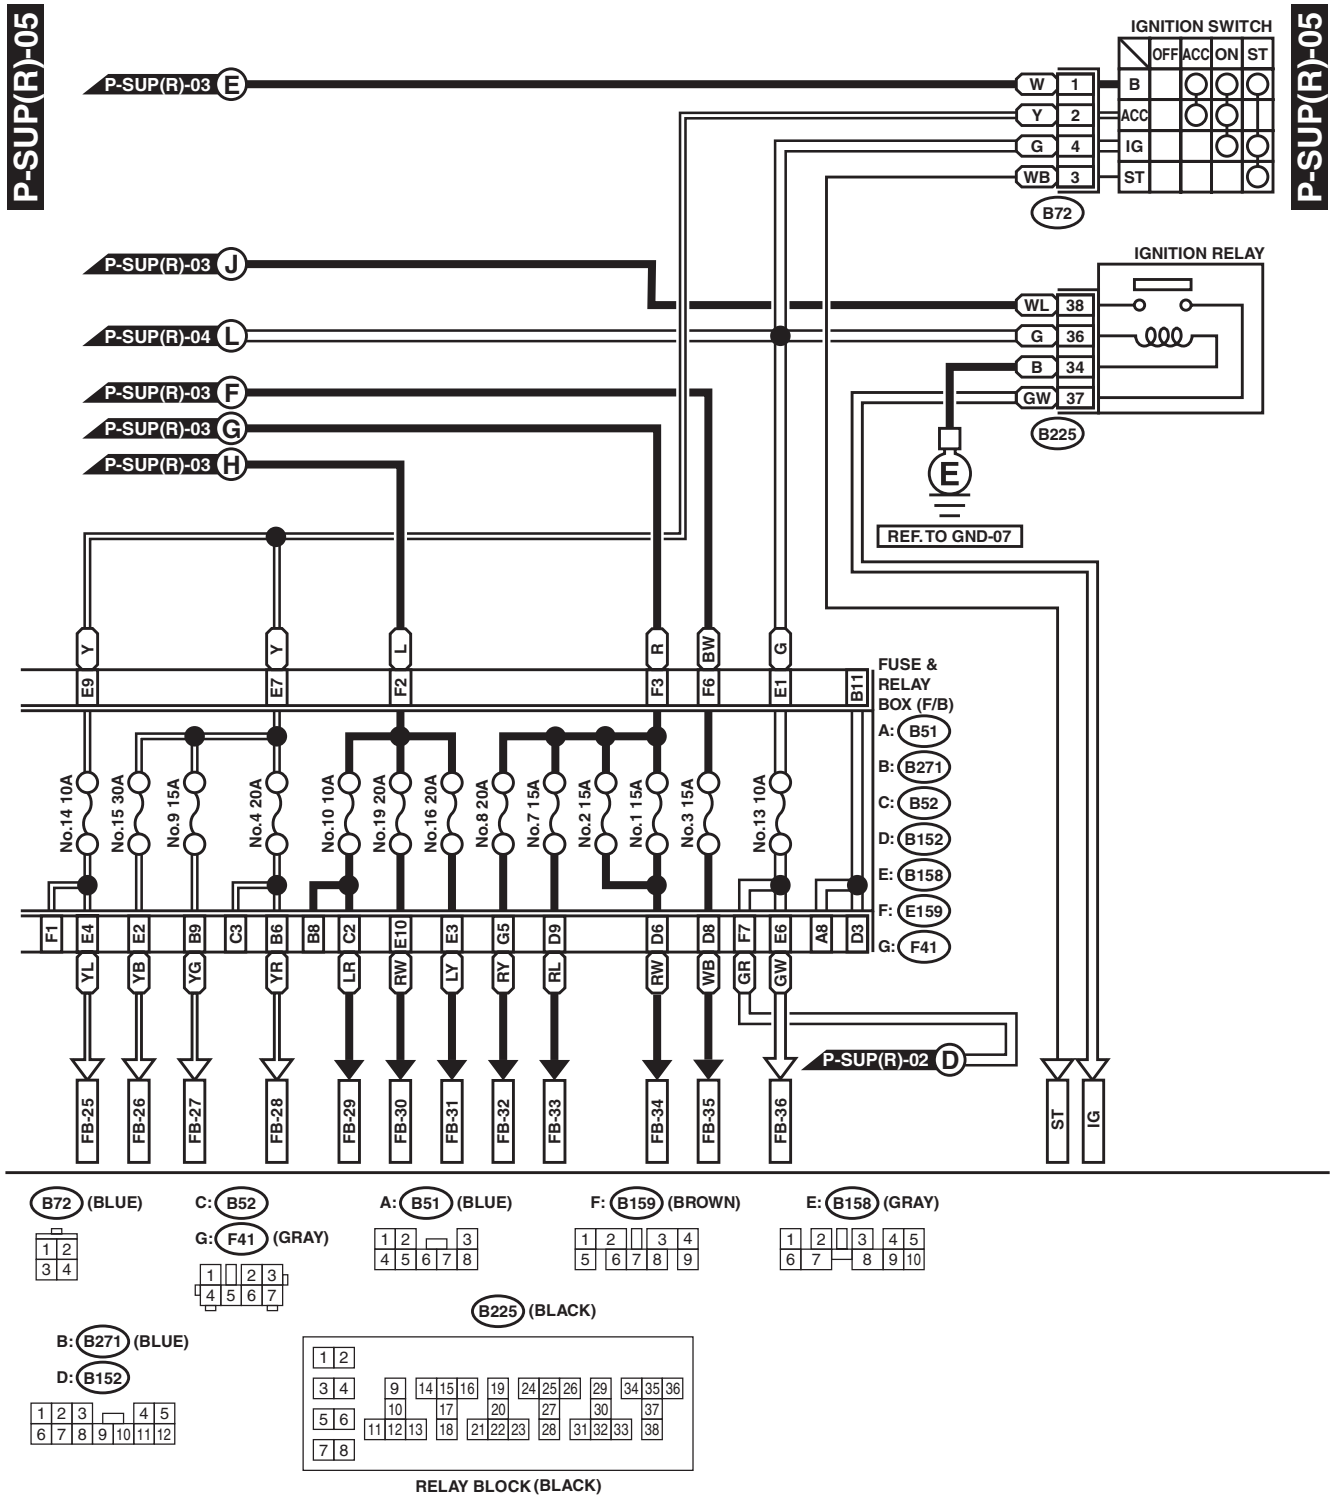

WI-04536

Power Supply Routing

WIRING SYSTEM

No.	Load
MB-1	Air conditioning relay holder
MB-2	Combination meter Headlight RH
MB-3	Headlight LH
MB-4	Horn
MB-5	Cruise control sub switch Horn switch
MB-6	Hazard switch Keyless entry control module Key warning switch Security control module
MB-7	Driver's control center differential control module Driver's control center differential relay Transmission control module
MB-8	Diode (With rear fog light model) Lighting switch
MB-9	Data link connector Engine control module Fuel pump relay Immobilizer control module Main relay
MB-10	Auto A/C Control module Combination meter Ignition switch illumination light Keyless entry control module Luggage room light (Wagon) Radio Room light Security control module Security relay Spot light Trunk room light (Sedan)
MB-11	Fuse (Seat heater)
MB-12	Power window circuit breaker
MB-13	Relay holder
SBF-8	ABS control module
IG	Hazard switch
ST	Engine control module Inhibitor switch (AT) Security relay Starter motor (MT)
FB-1	Hazard switch Rear turn signal light RH Trailer connector Turn signal switch
FB-2	Hazard switch Rear turn signal light LH Side turn signal light LH Trailer connector Turn signal switch
FB-3	Parking switch
FB-4	Front turn signal light RH Side turn signal light RH
FB-5	Front turn signal light LH
FB-6	Front clearance light LH Front clearance light RH

No.	Load
FB-7	License plate light Tail light LH Tail light RH Trailer connector
FB-10	Bright switch Combination meter Front fog light relay Front fog light switch Headlight leveling switch Illumination control module Illumination light Rear fog light relay Rear fog light switch
FB-12	Parking switch
FB-13	Engine control module Lighting switch
FB-14	Parking switch
FB-15	Mirror heater relay Rear defogger Rear defogger switch
FB-16	Engine control module Rear defogger timer
FB-17	ABS relay Back-up light switch (MT) Check connector Cruise control actuator Cruise control main switch Cruise control module Inhibitor switch (AT) Power window relay Rear defogger timer Seatbelt timer Vehicle speed sensor (MT)
FB-18	Headlight leveler LH Headlight leveler RH
FB-19	Air conditioning relay Pressure switch Sub fan relay
FB-20	AUTO A/C control module Blower motor relay Mode control panel Double lock control module
FB-21	Driver's control center differential control module Driver's control center differential relay Engine control module Fuel pump relay Ignition coil and ignitor Immobilizer control module Security control module Transmission control module
FB-22	Airbag control module
FB-23	Airbag control module
FB-25	Rear washer motor Rear wiper intermittent module Rear wiper motor

Power Supply Routing


WIRING SYSTEM

No.	Load
FB-26	Front washer motor Front wiper motor Front wiper switch
FB-27	Auto A/C control module Radio
FB-28	Front accessory power supply socket Remote controlled rearview mirror switch Intercooler water spray switch Intercooler water spray timer Seat heater relay
FB-29	Rear fog light relay
FB-30	Mirror heater relay
FB-31	Stop light switch
FB-32	ABS control module
FB-33	Front fog light relay
FB-34	Blower motor relay
FB-35	Double lock control module Keyless entry control module
FB-36	Combination meter

4. Ground Distribution



A: WIRING DIAGRAM

1. CHASSIS GROUND LHD MODEL

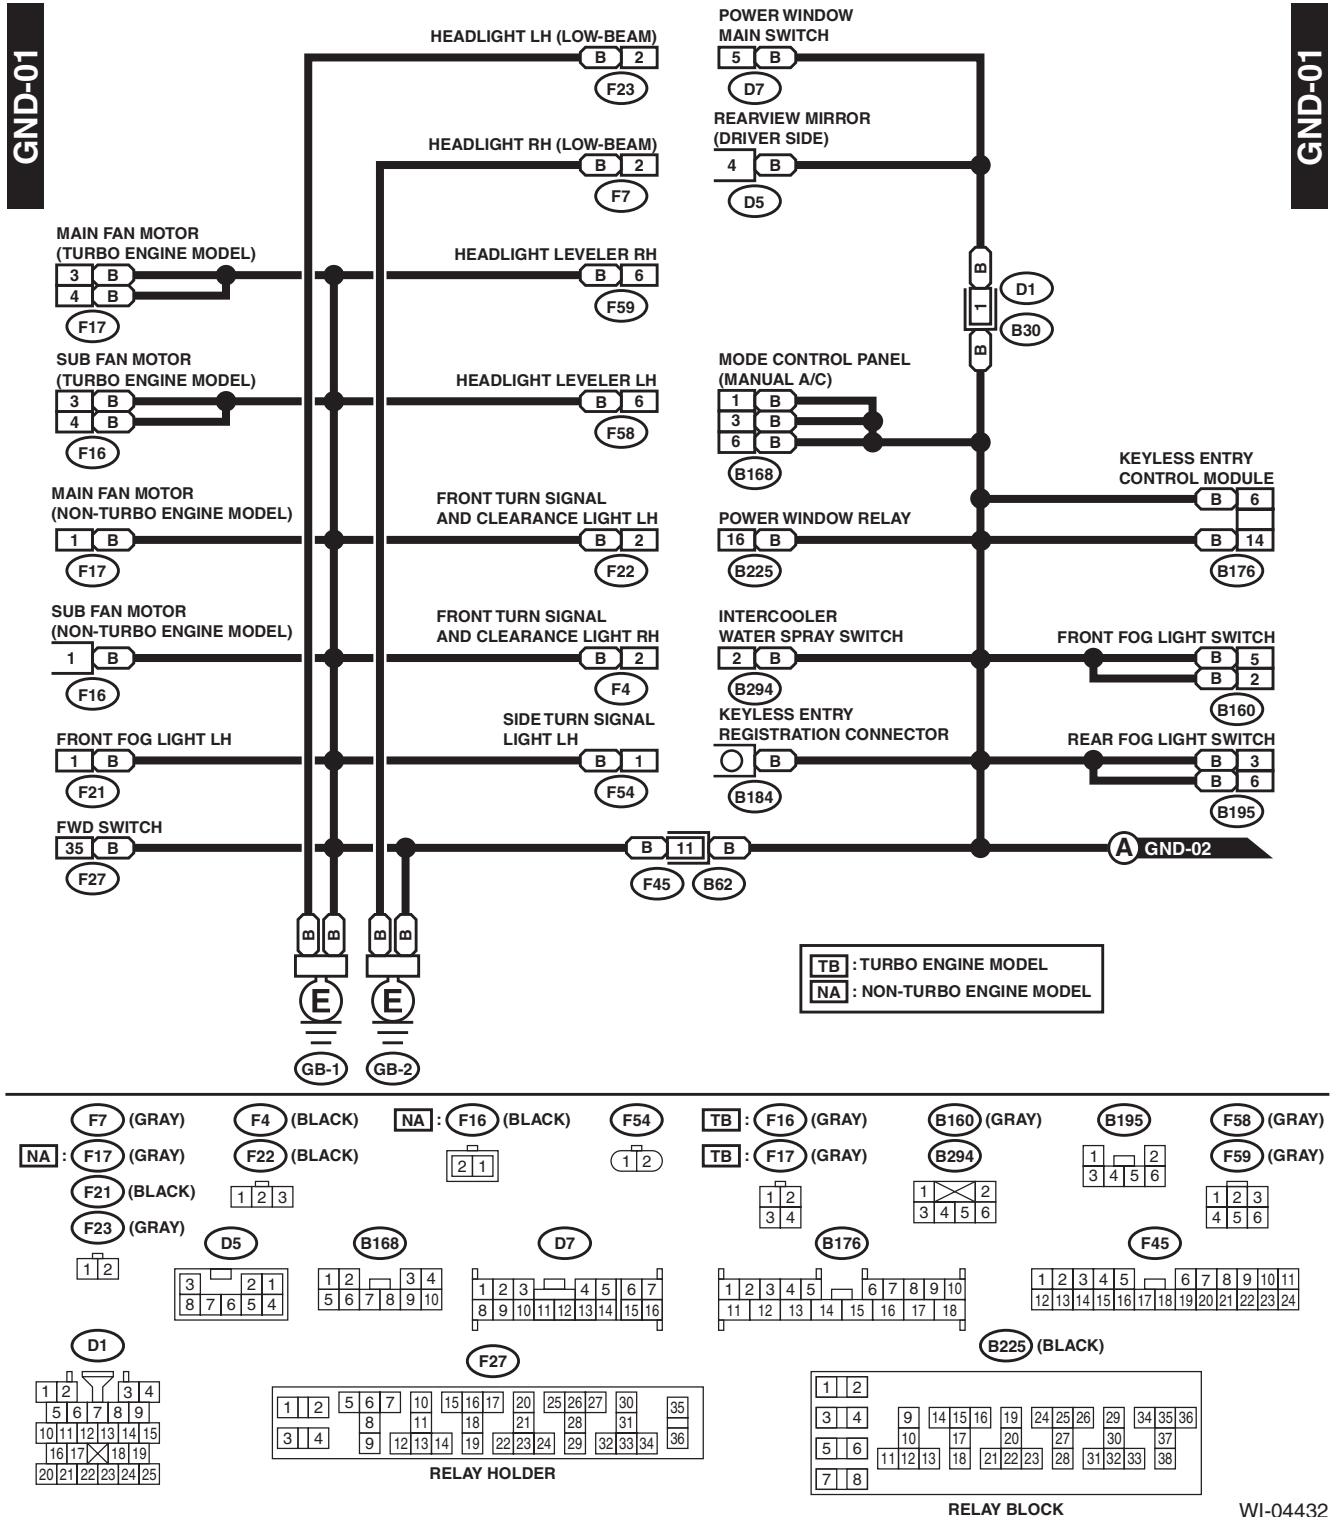

Ground Distribution

WIRING SYSTEM

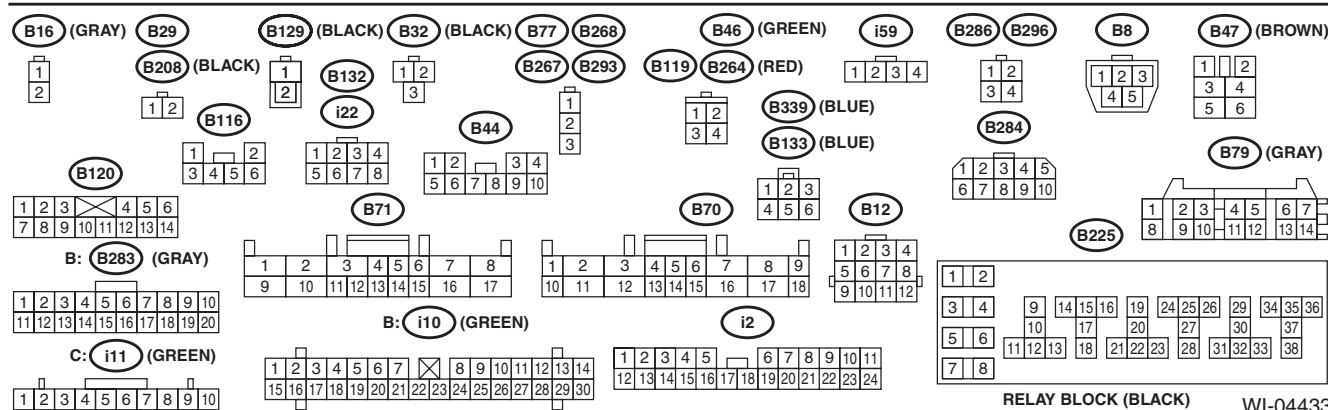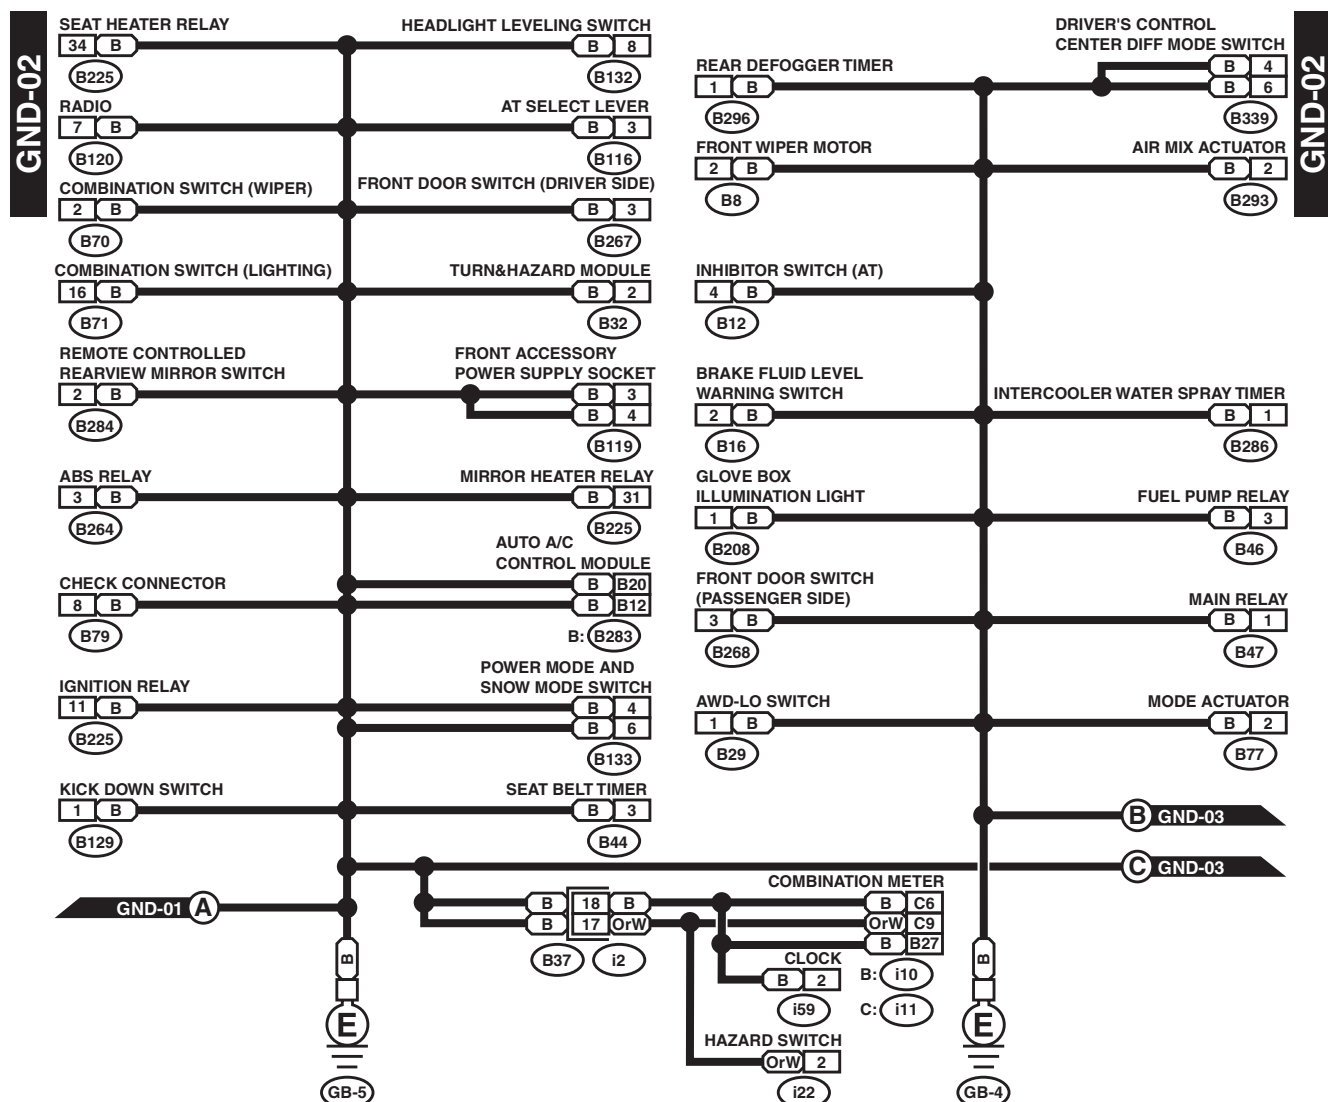


WIRING SYSTEM



Ground Distribution

WIRING SYSTEM

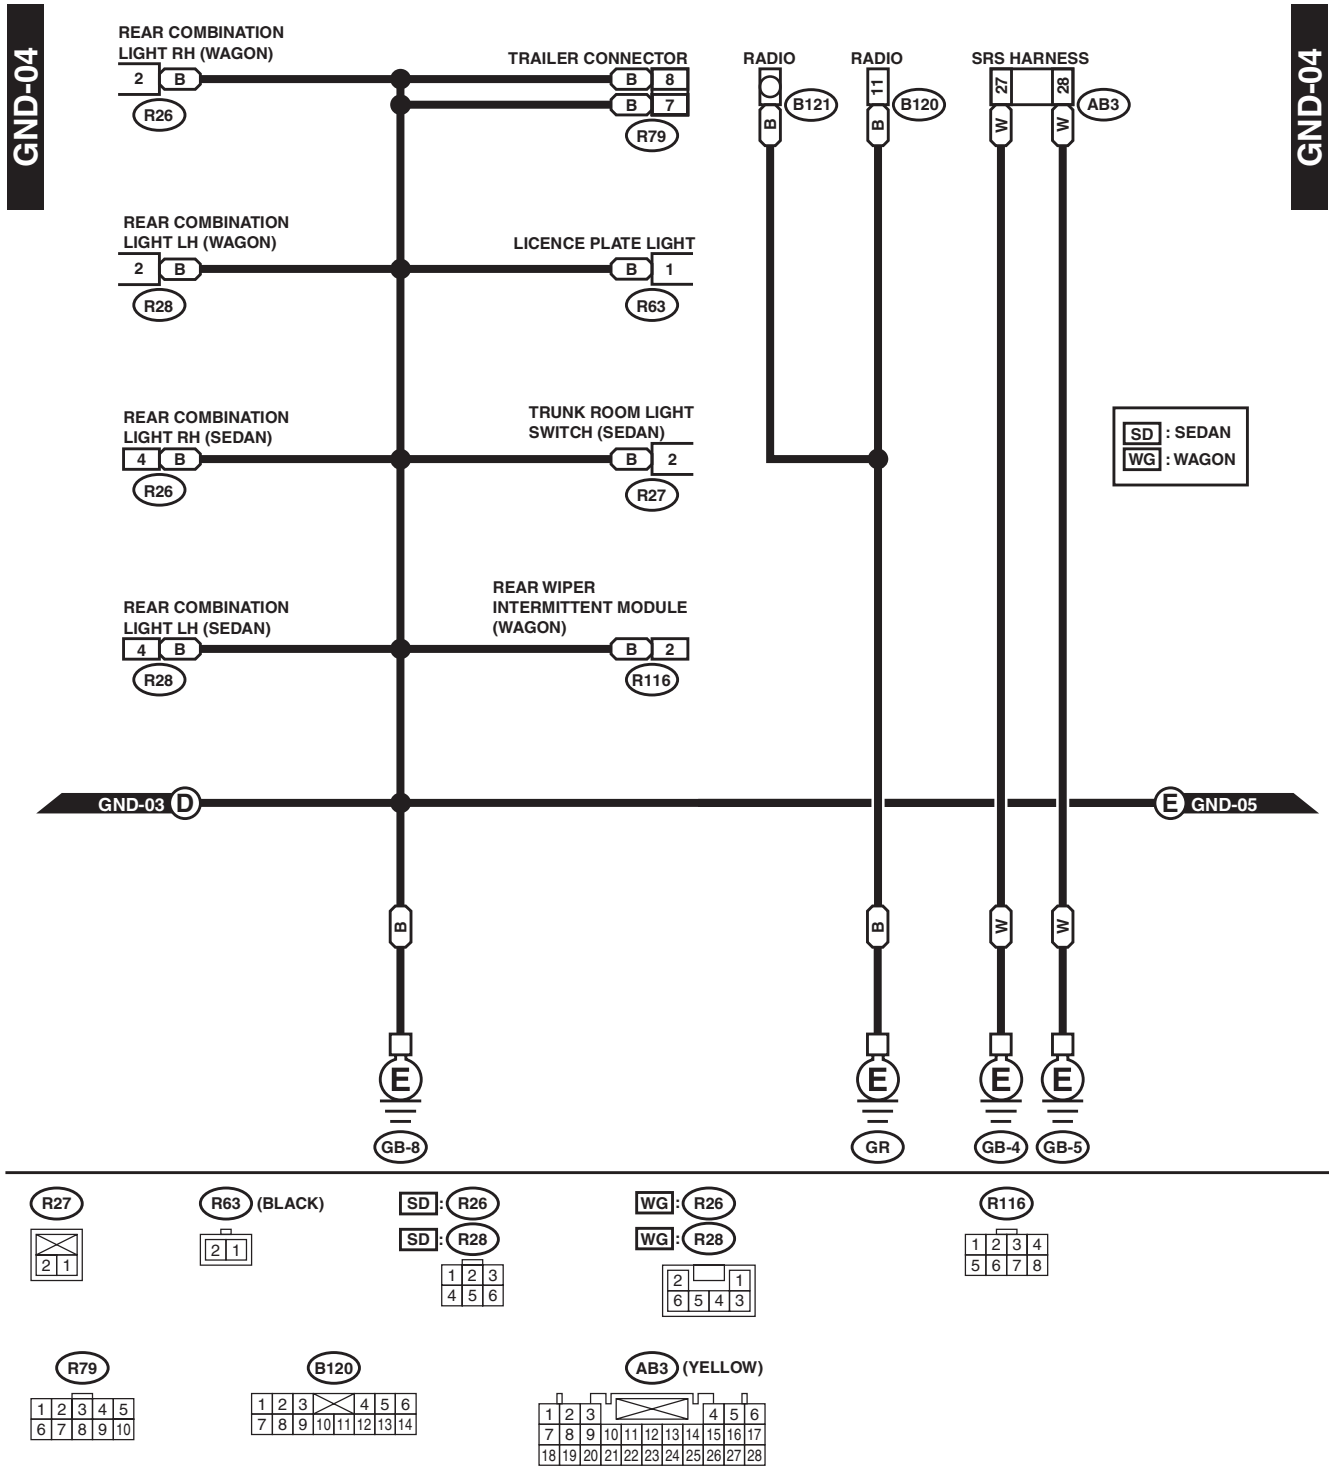


WI-04537

Ground Distribution

WIRING SYSTEM

GND-05

GND-05


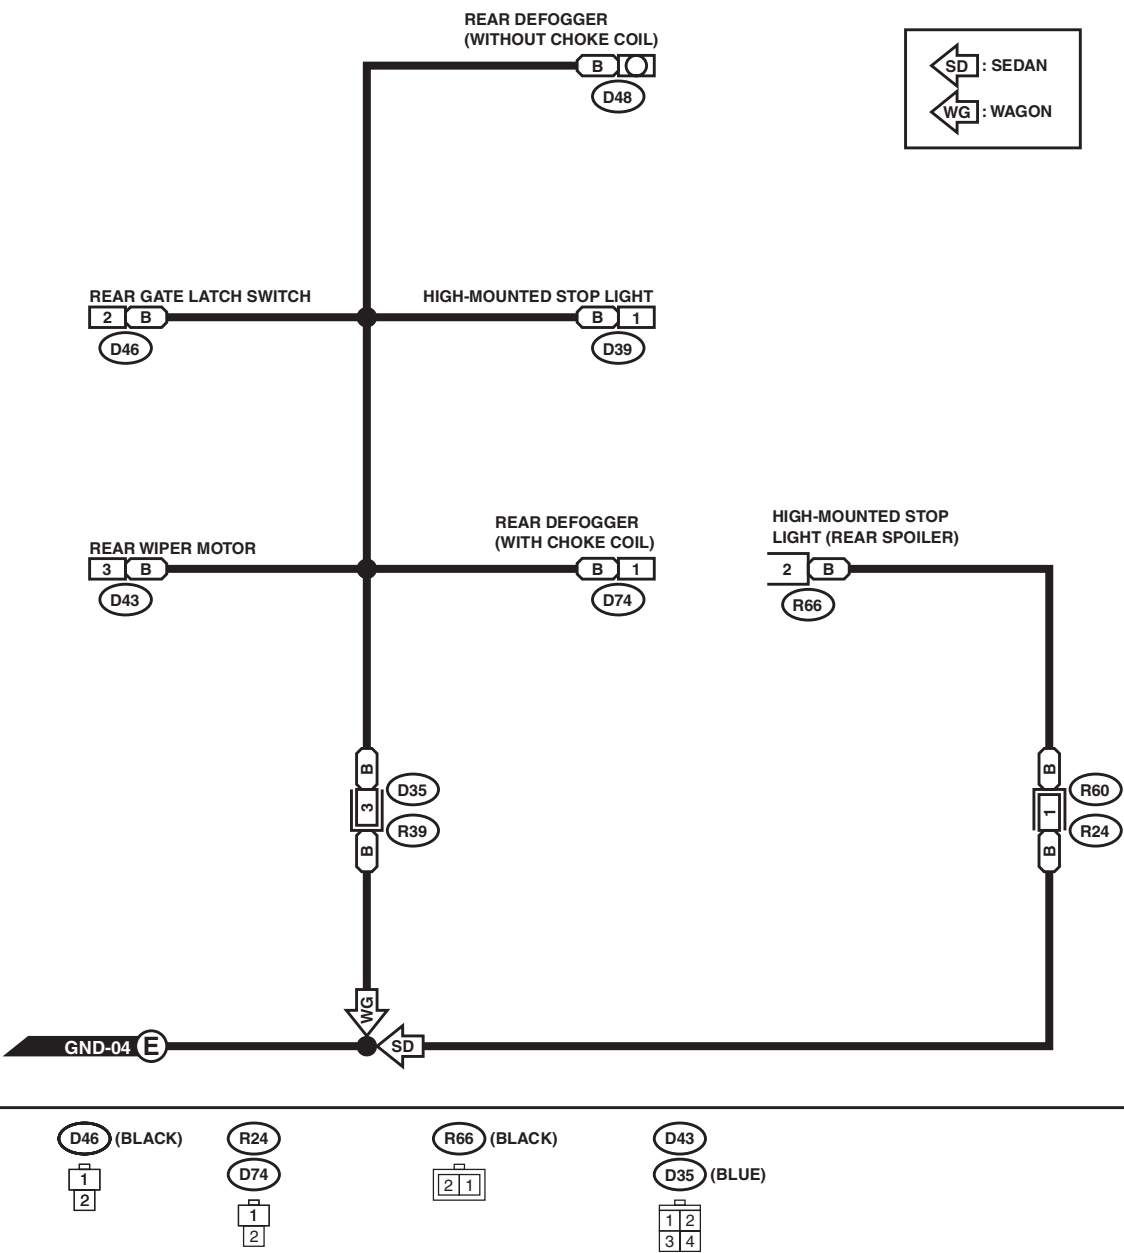


WI-04538

Ground Distribution

WIRING SYSTEM



2. CHASSIS GROUND RHD MODEL

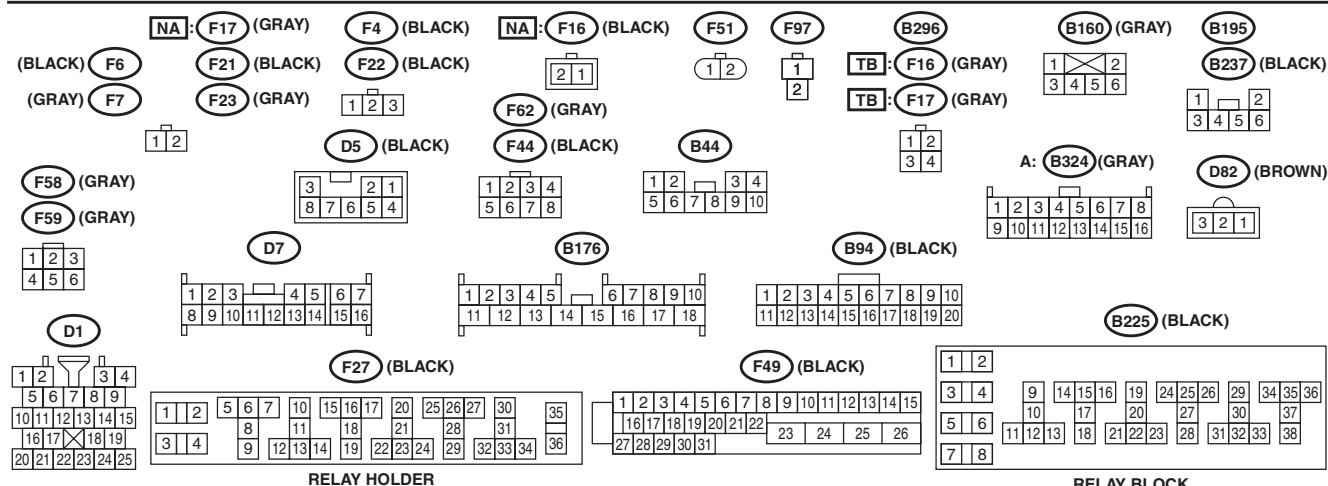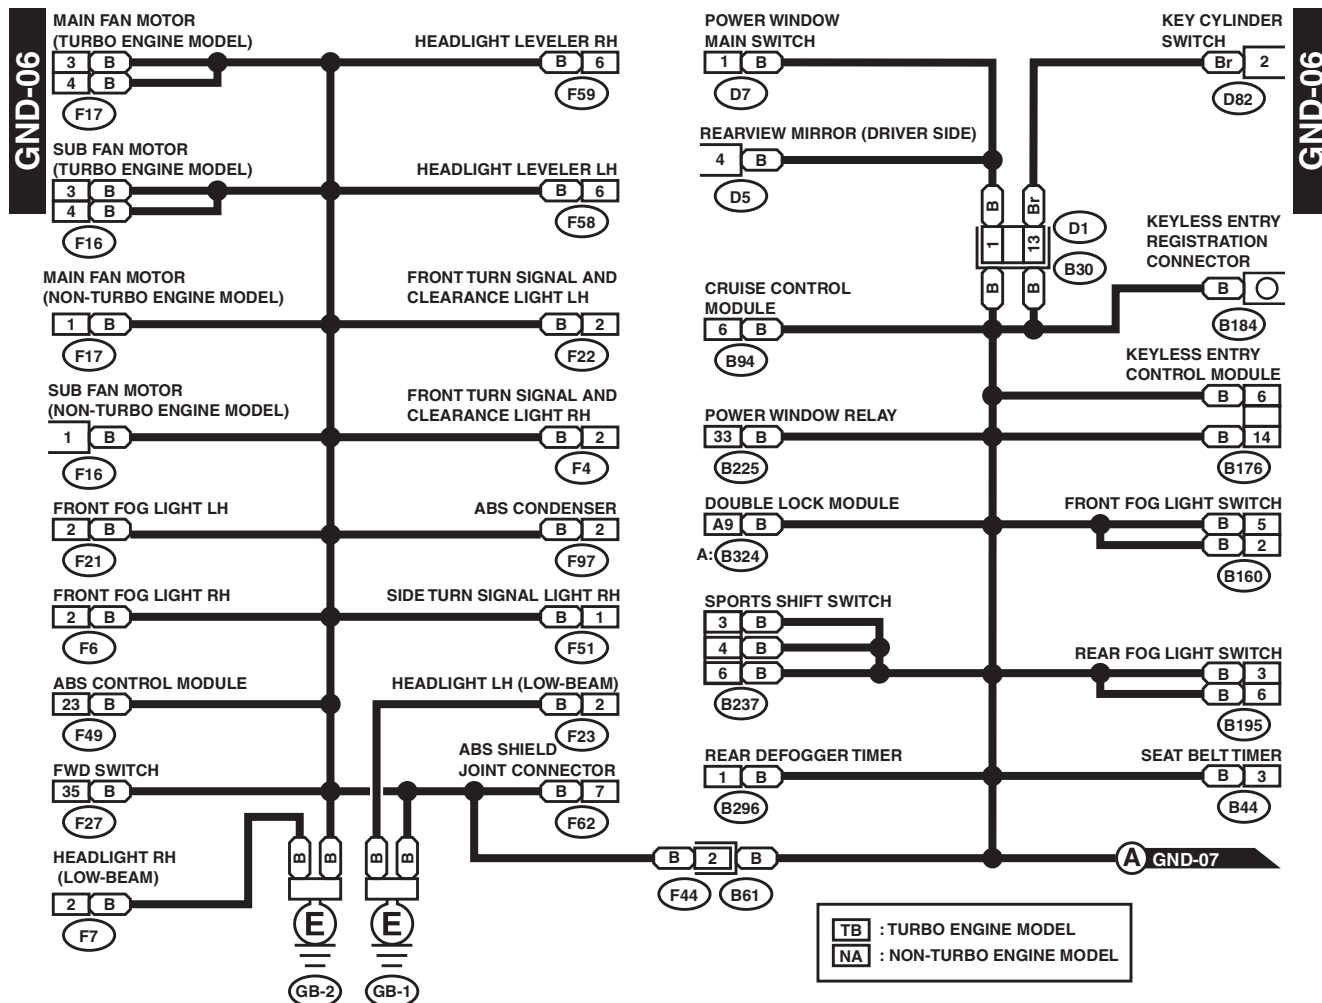

WI-04435


Ground Distribution

WIRING SYSTEM

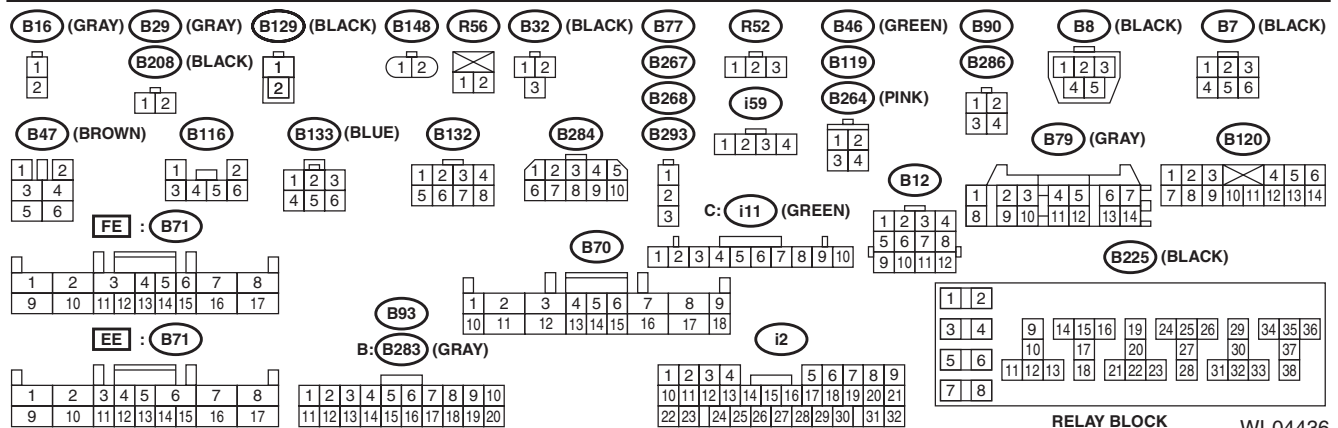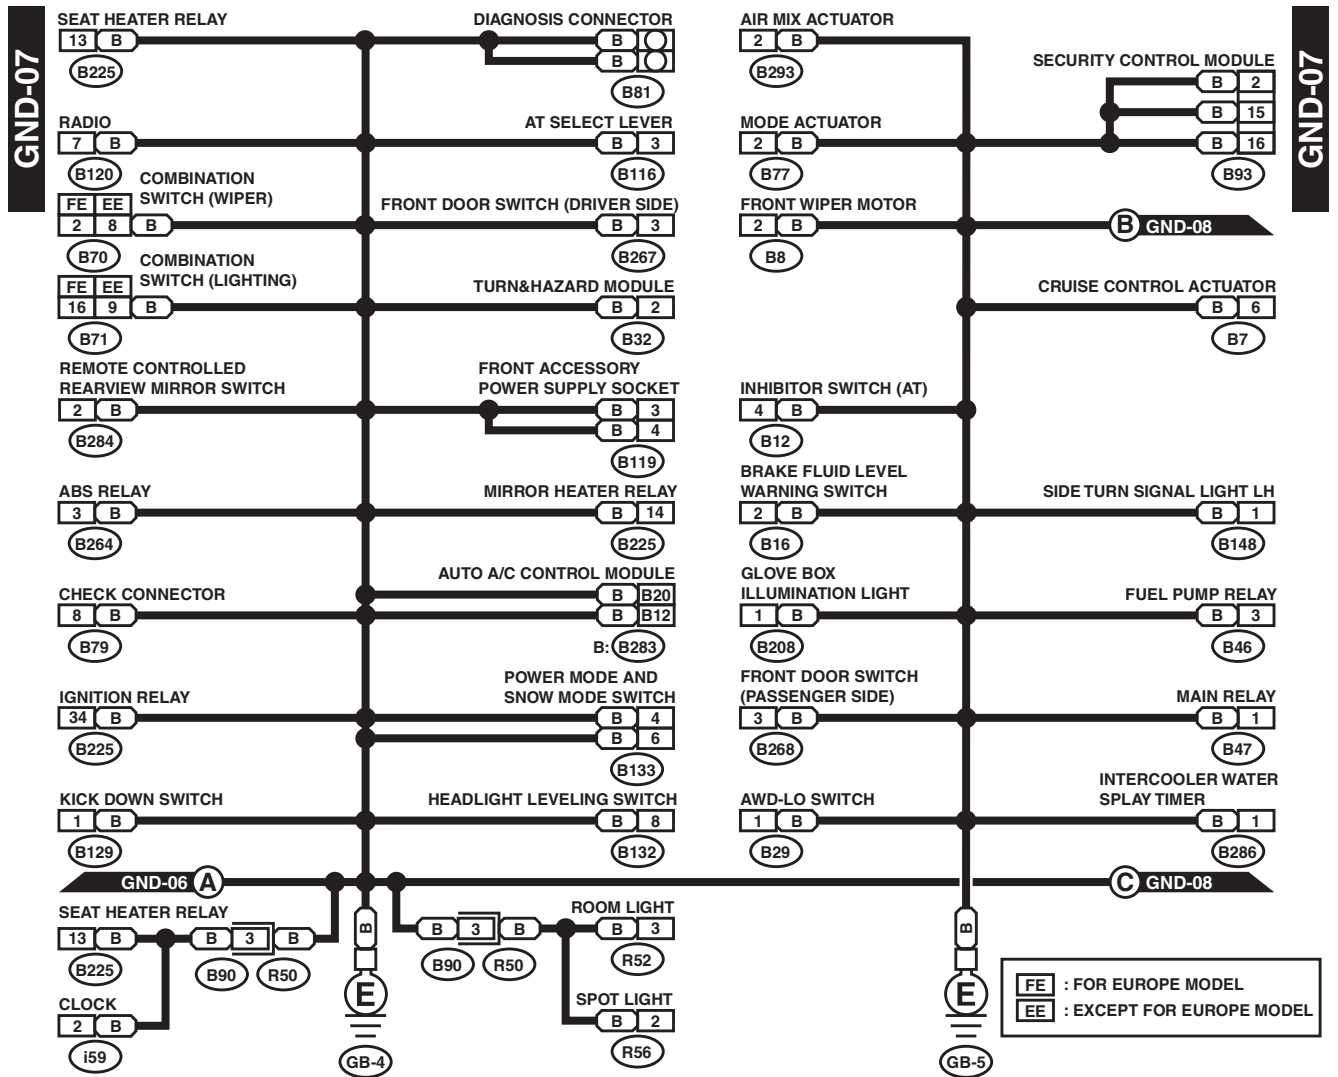

Ground Distribution


WIRING SYSTEM

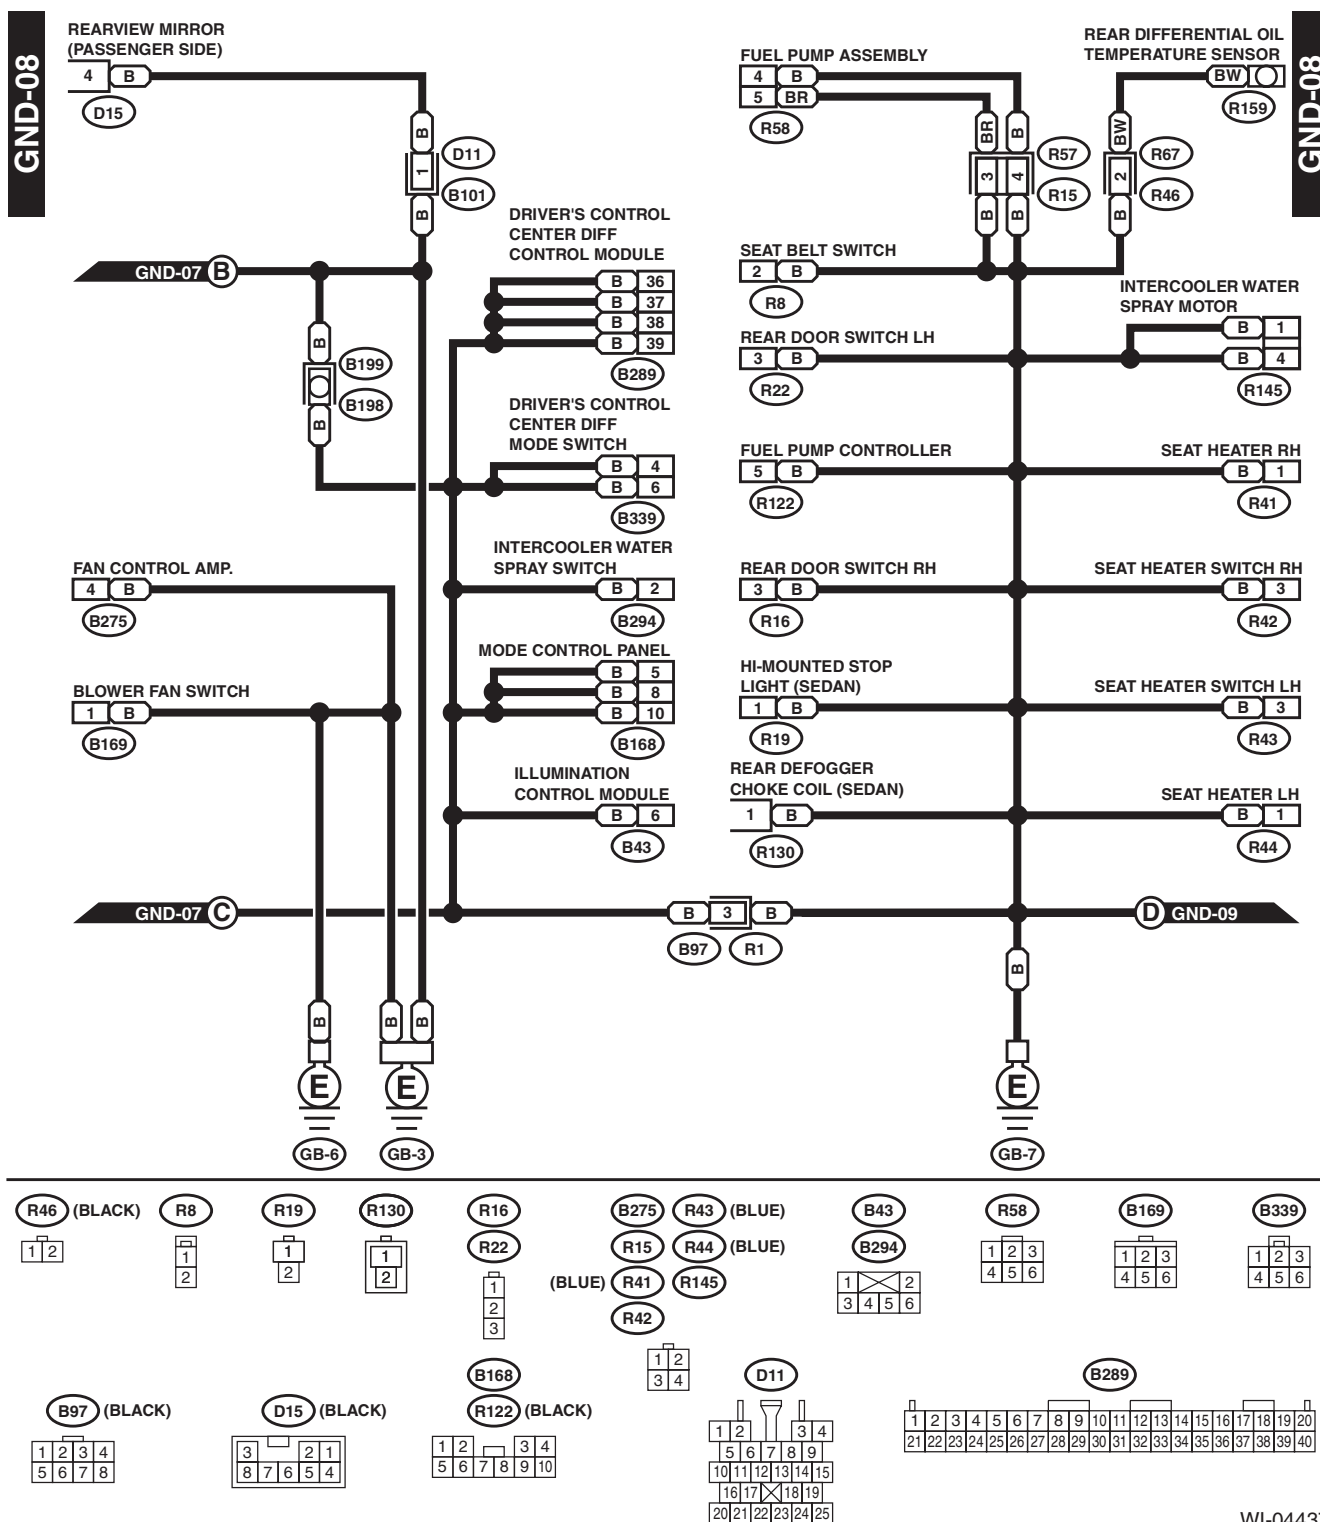

WI-04437

Ground Distribution


WIRING SYSTEM

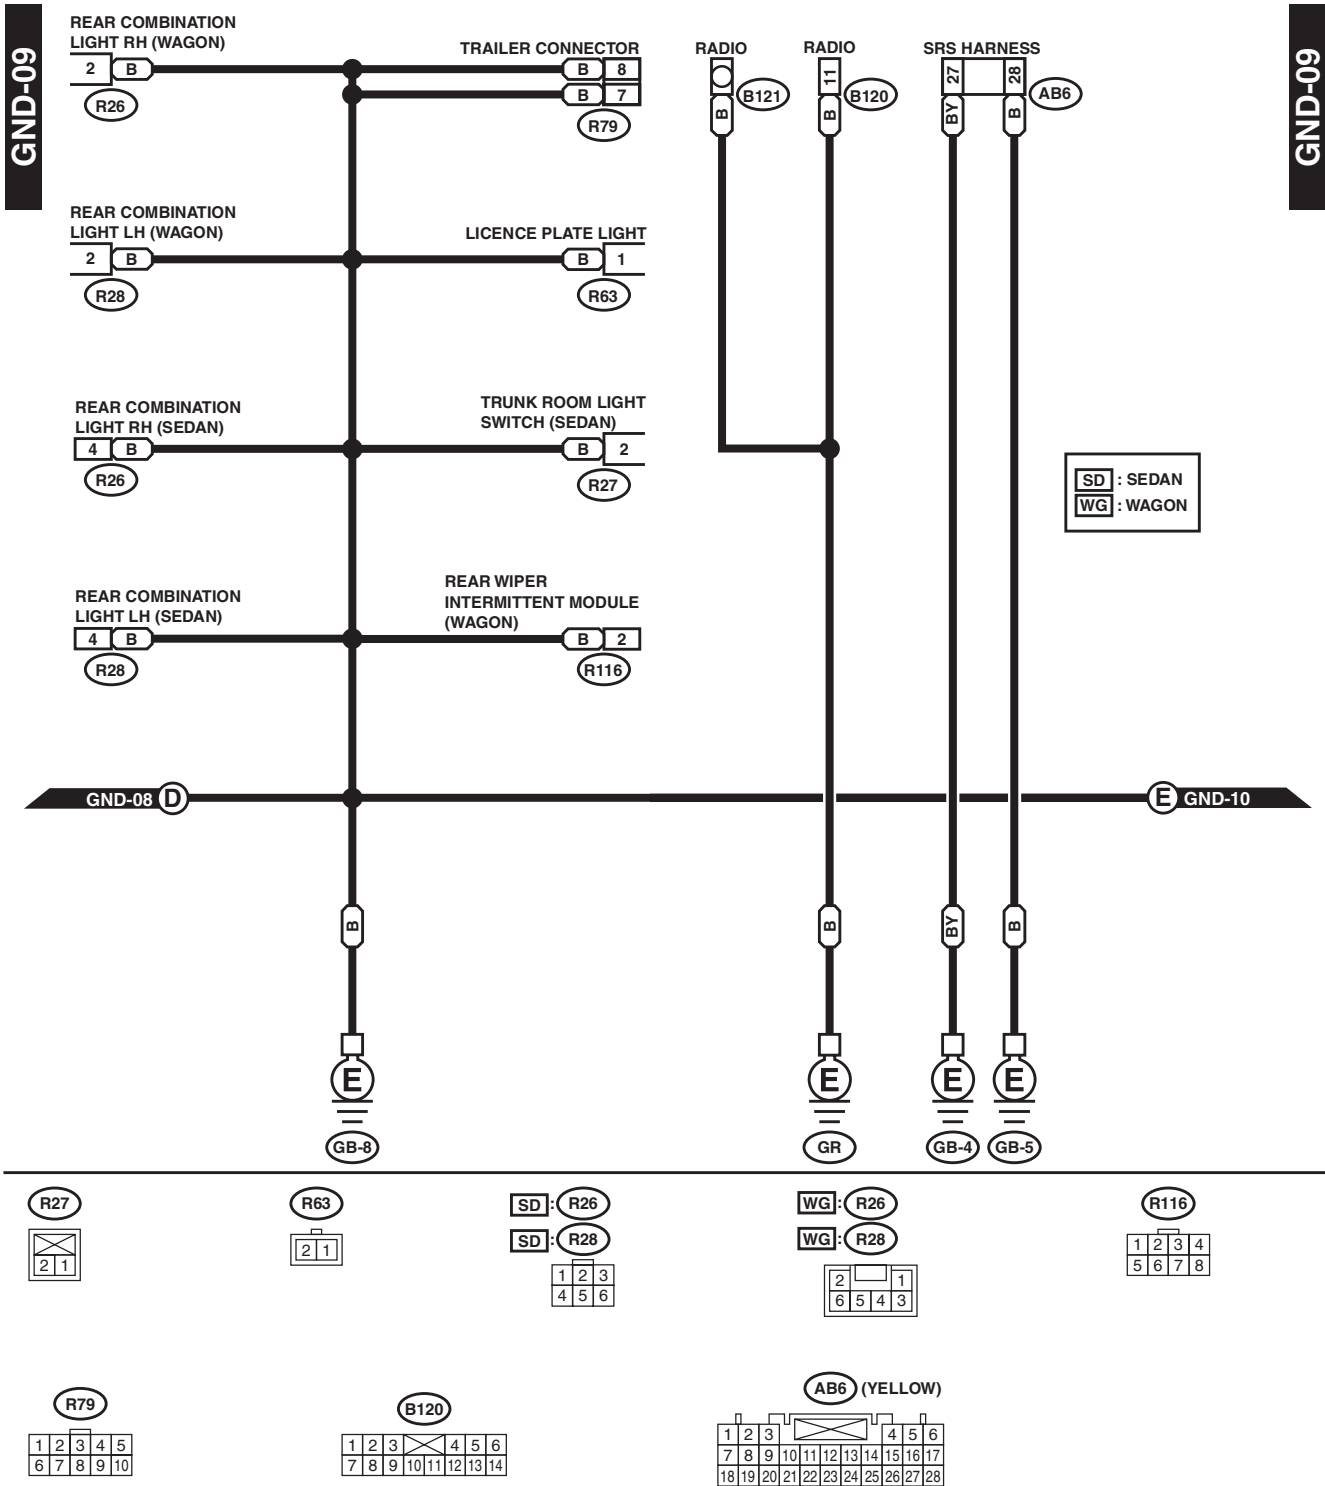

WI-02251

Ground Distribution

WIRING SYSTEM

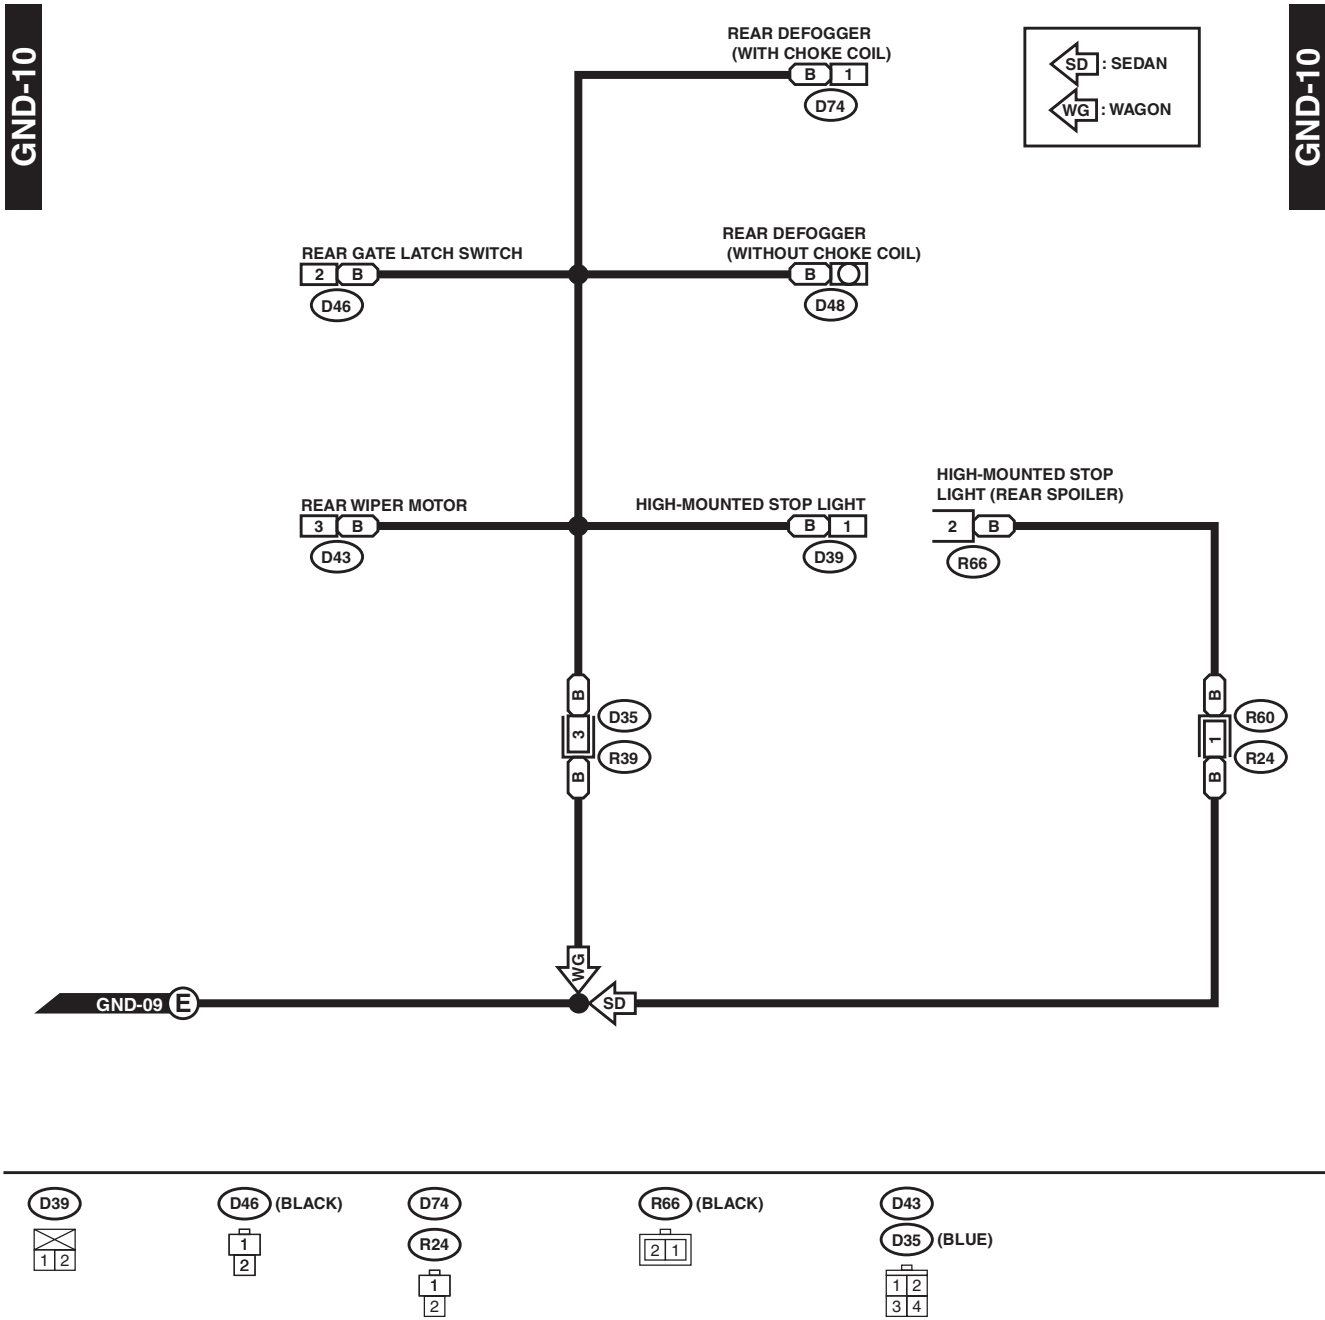


WI-04539

Ground Distribution

WIRING SYSTEM

3. ENGINE GROUND LHD SOHC W/O OBD ENGINE MODEL

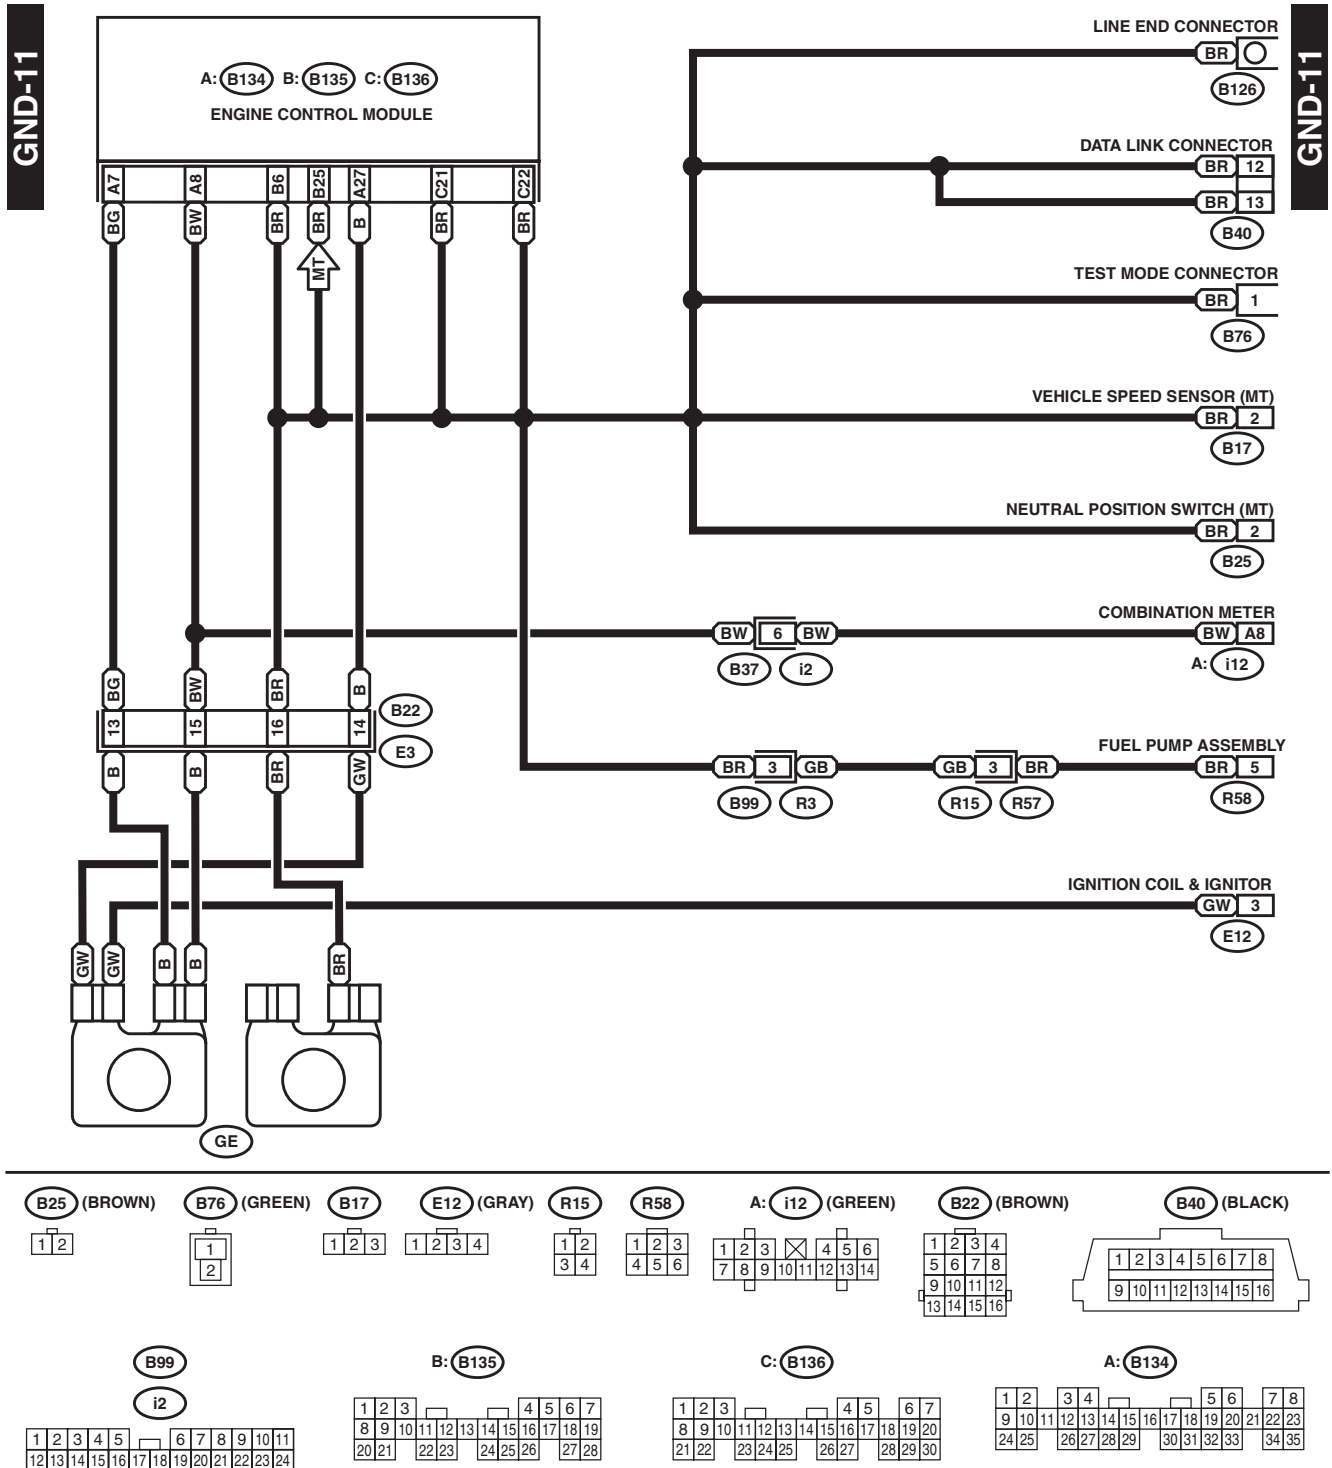

WI-04540

WIRING SYSTEM

GND-12

ENGINE CONTROL MODULE
 A: (B134) B: (B135) C: (B136)

DATA LINK CONNECTOR
 GW 12
 GW 13
 (B40)

TEST MODE CONNECTOR
 GW 1
 (B76)

VEHICLE SPEED SENSOR (MT)
 GW 2
 (B17)


NEUTRAL POSITION SWITCH (MT)
 GW 2
 (B25)

FRONT OXGEN SENSOR
 BW 1
 (B18)

COMBINATION METER
 BW A8
 A: (i12)

IGNITION COIL & IGNITOR
 B 3
 (E12)

Wiring Details:
 - **BY A7** connects to **BY 13** and **BY** on the left.
 - **BW A8** connects to **BW 15** and **BW** on the left.
 - **GW B6** connects to **GW 16** and **BR** on the left.
 - **GW B25** connects to **MT** (arrow pointing up) and **GW** on the left.
 - **BL A27** connects to **BL 14** and **B** on the left.
 - **GW C21** connects to **GW** on the left.
 - **GW C22** connects to **GW** on the left.
 - **Left Side Connections:** **BY 13**, **BW 15**, **BR 16**, **B 14** are connected to a common ground line. **BY**, **BW**, **BR**, and **B** are connected to the left side of the diagram. **B22**, **E3**, and **B37** are also connected to this common ground line.

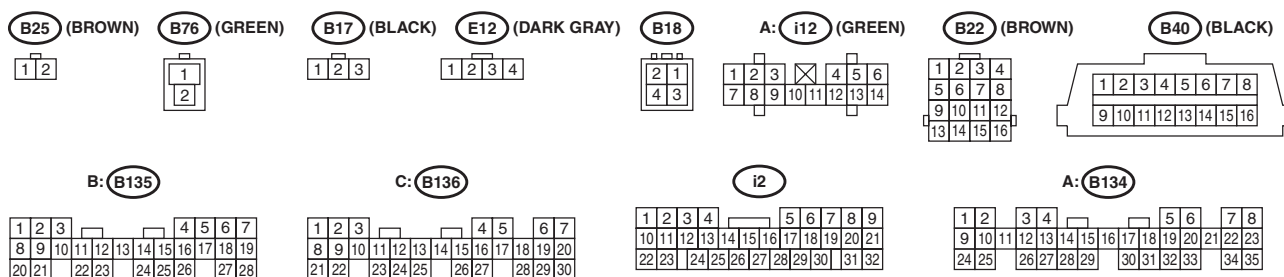


WI-02254

Ground Distribution

WIRING SYSTEM


5. ENGINE GROUND LHD SOHC WITH OBD ENGINE MODEL

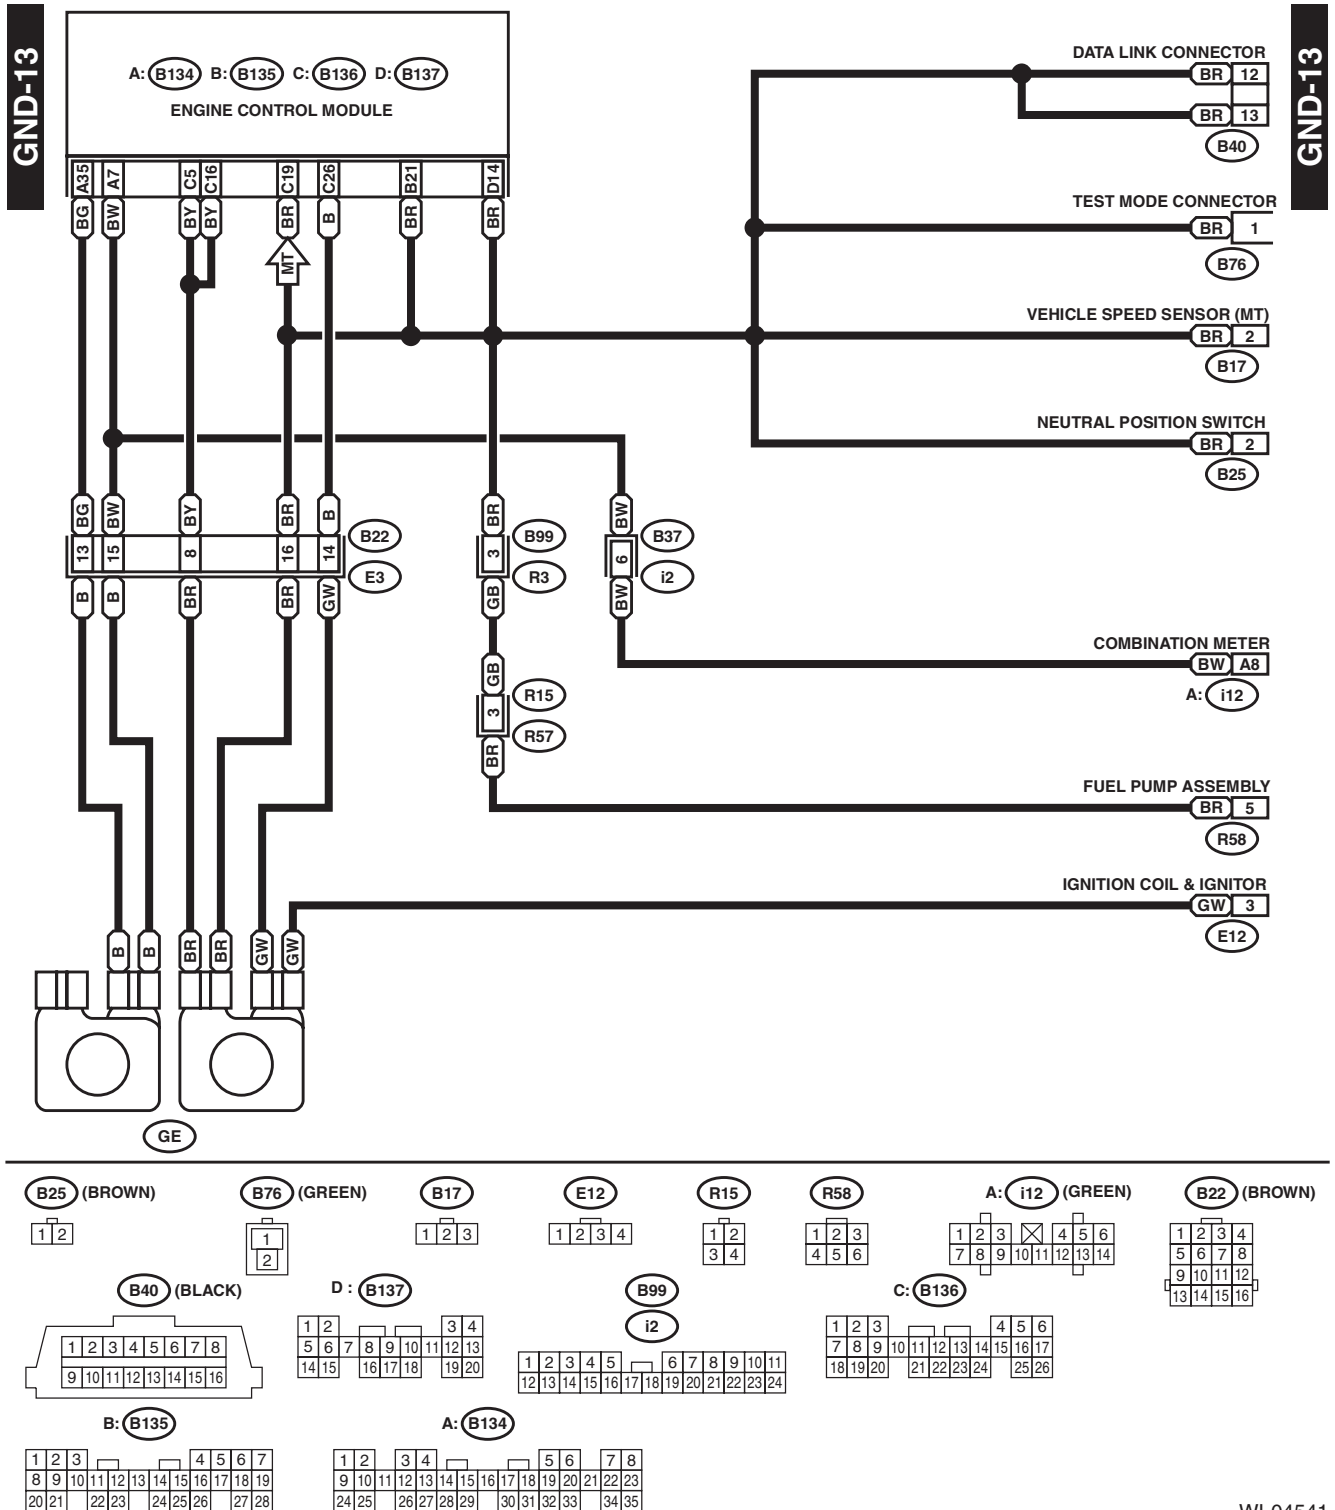

Ground Distribution

WIRING SYSTEM

6. ENGINE GROUND RHD SOHC WITH OBD ENGINE MODEL

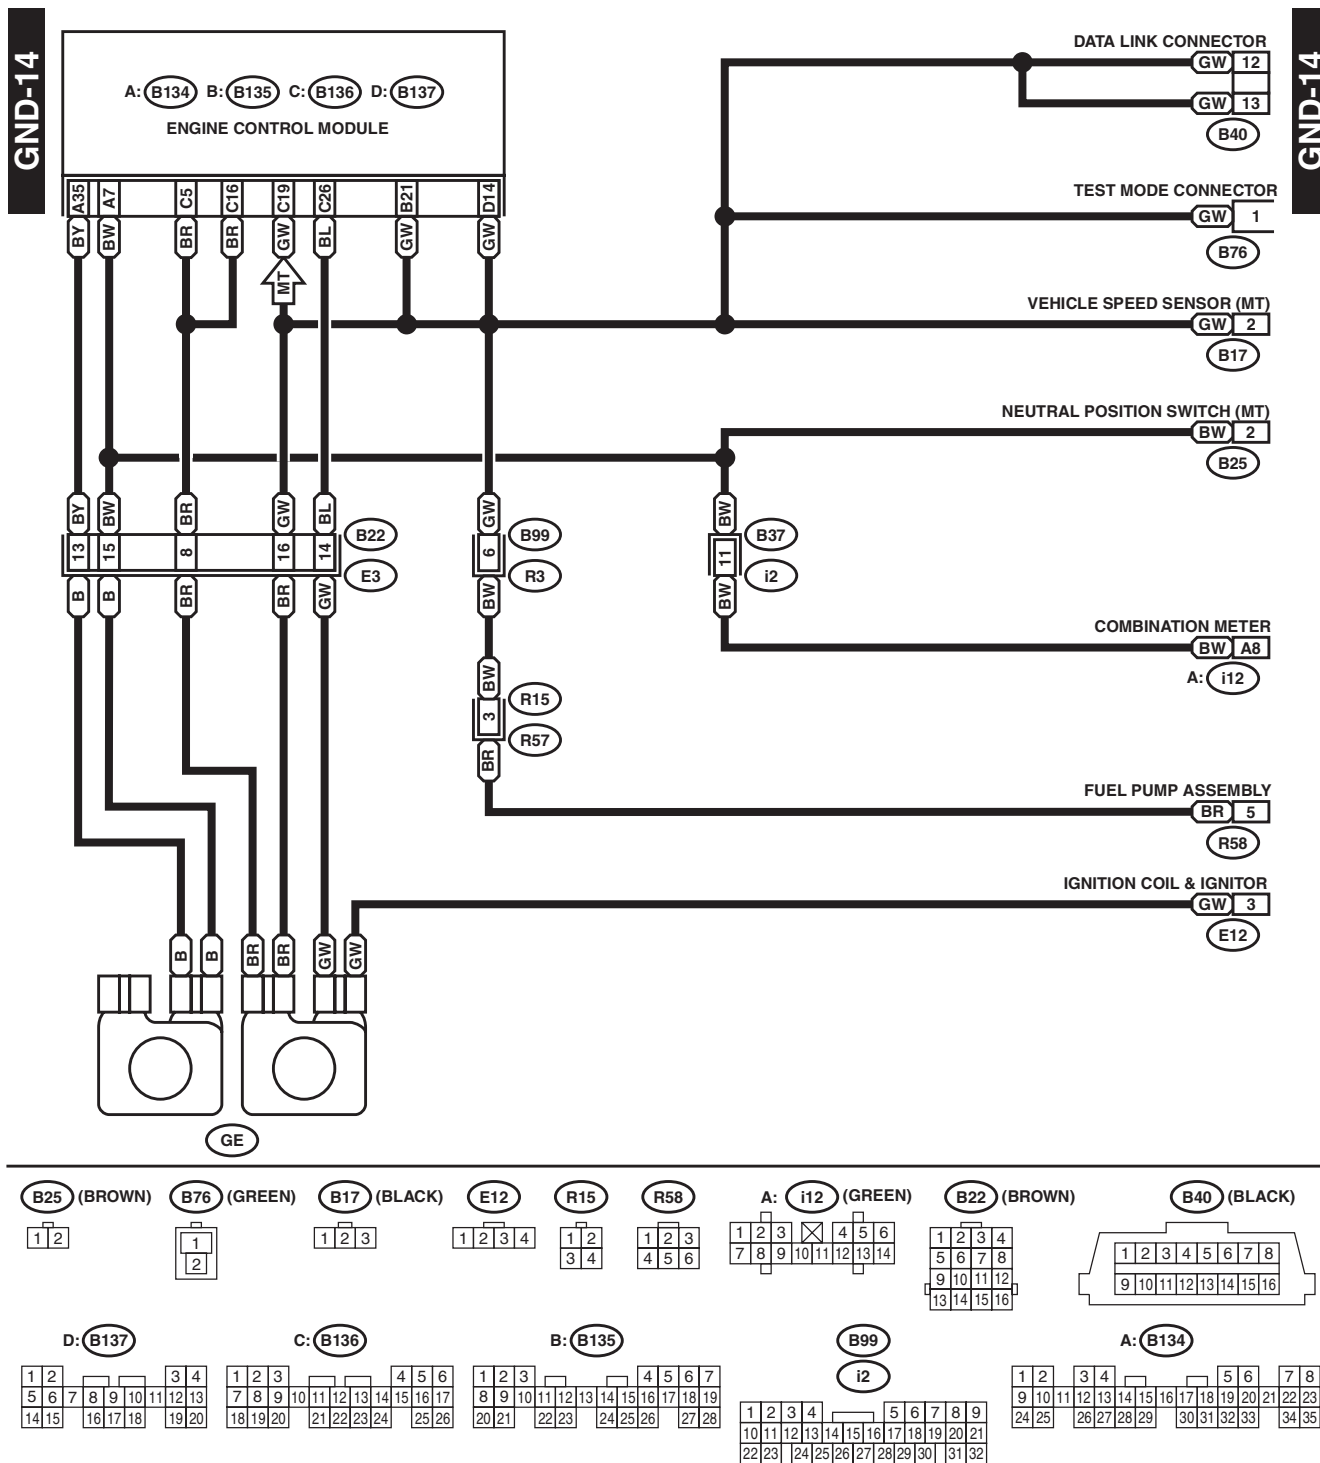


WI-02256

Ground Distribution

WIRING SYSTEM

7. ENGINE GROUND LHD TURBO ENGINE MODEL

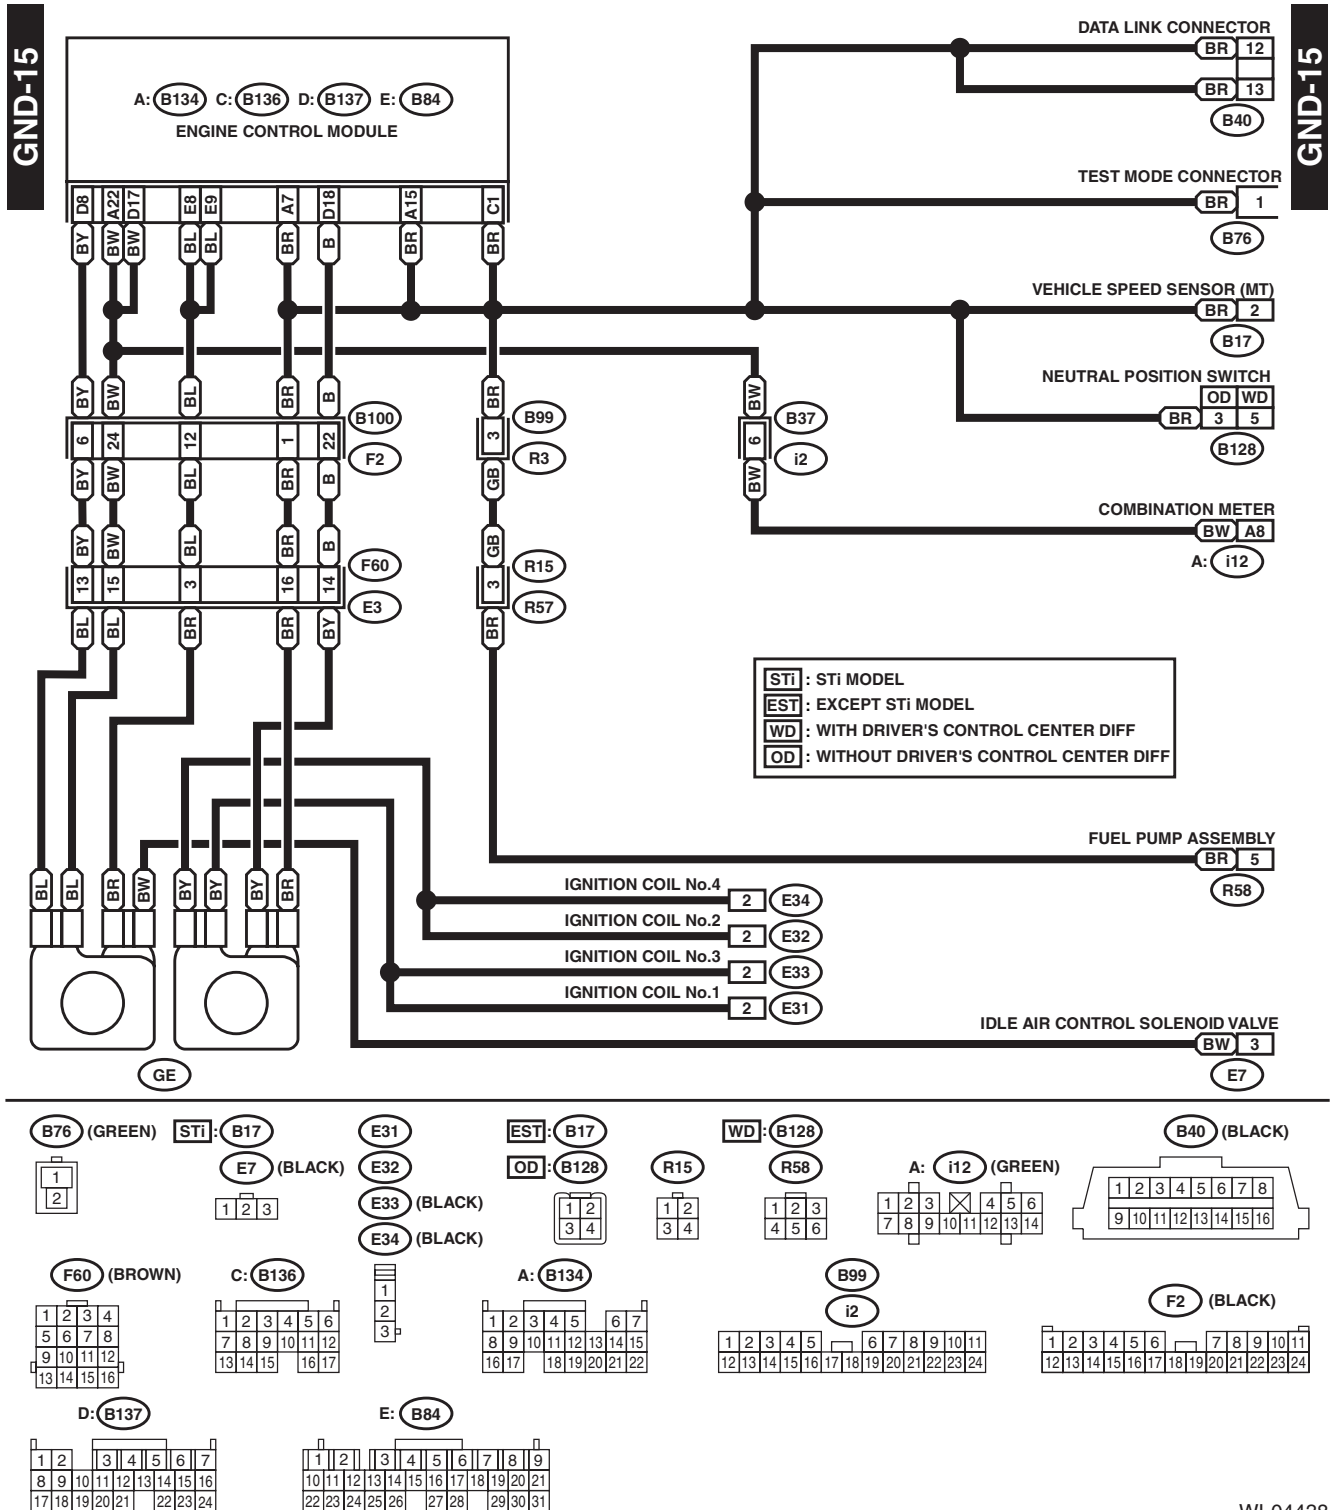


WI-04438

Ground Distribution

WIRING SYSTEM

8. ENGINE GROUND RHD TURBO ENGINE MODEL

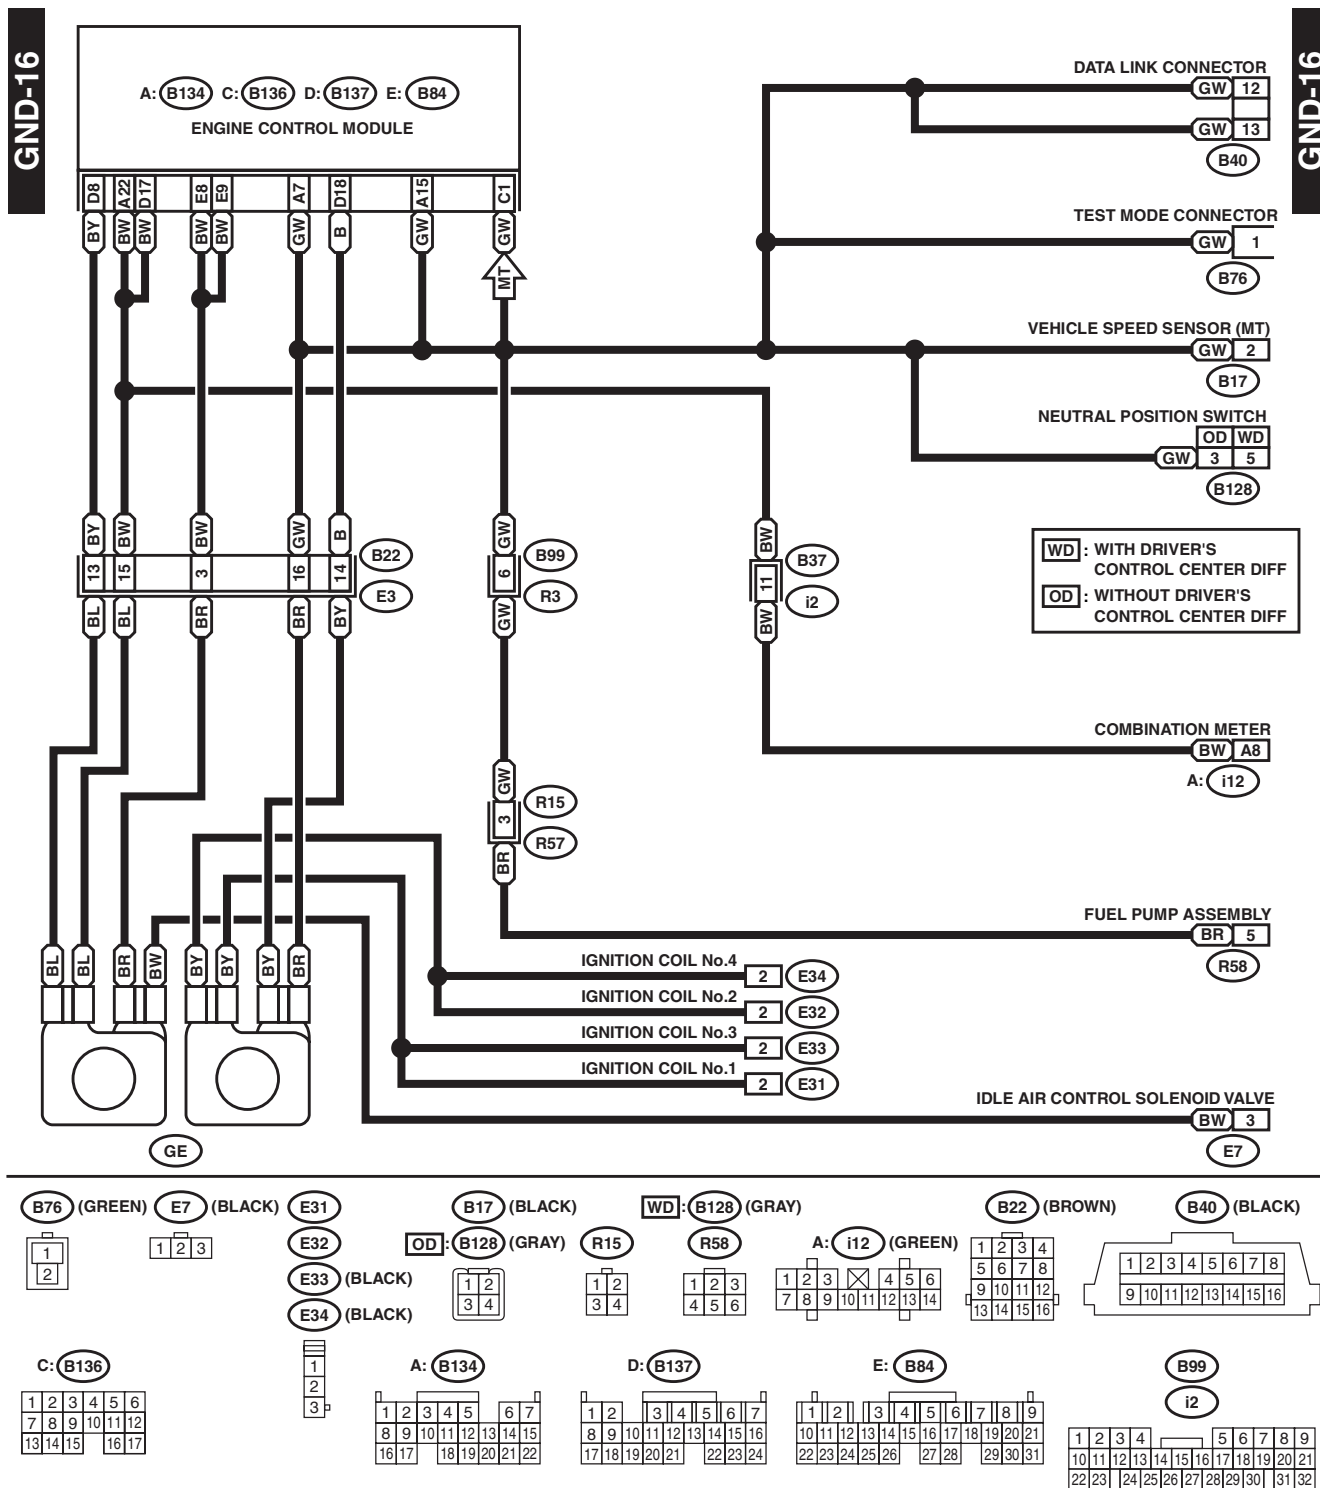


WI-04439

Ground Distribution

WIRING SYSTEM

10.TRANSMISSION GROUND RHD MODEL

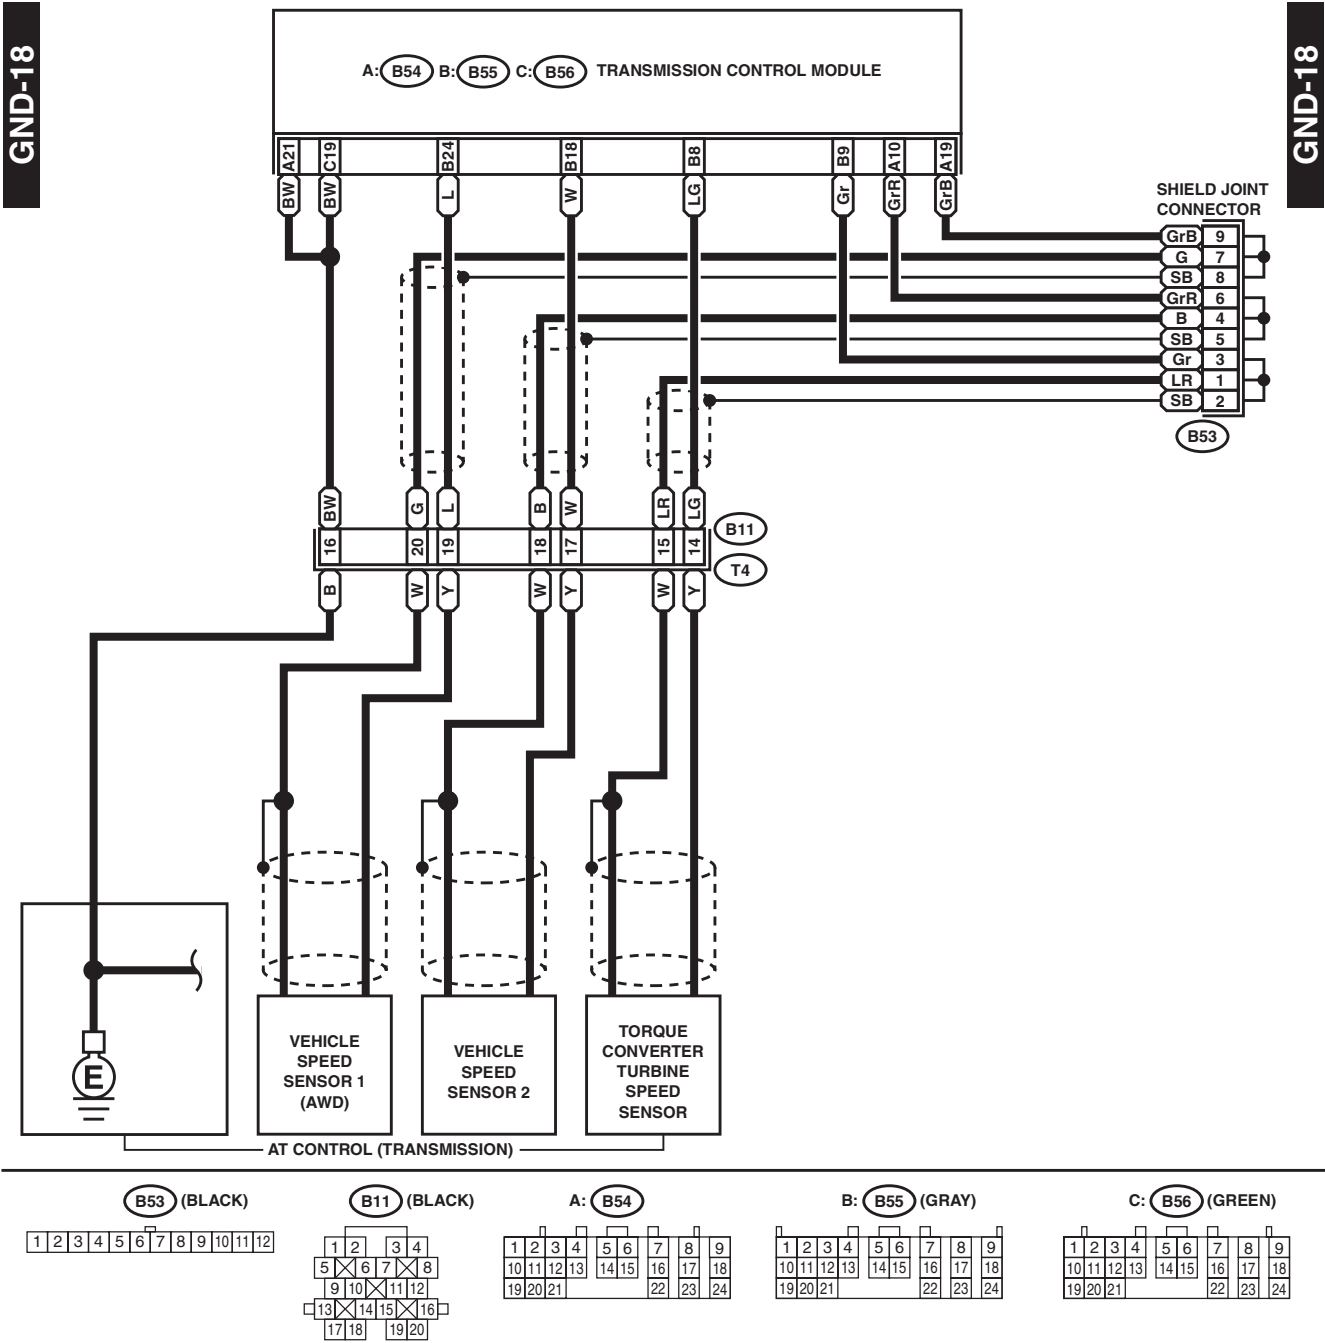


WI-04542

WIRING SYSTEM

A: WIRING DIAGRAM

1. LHD MODEL

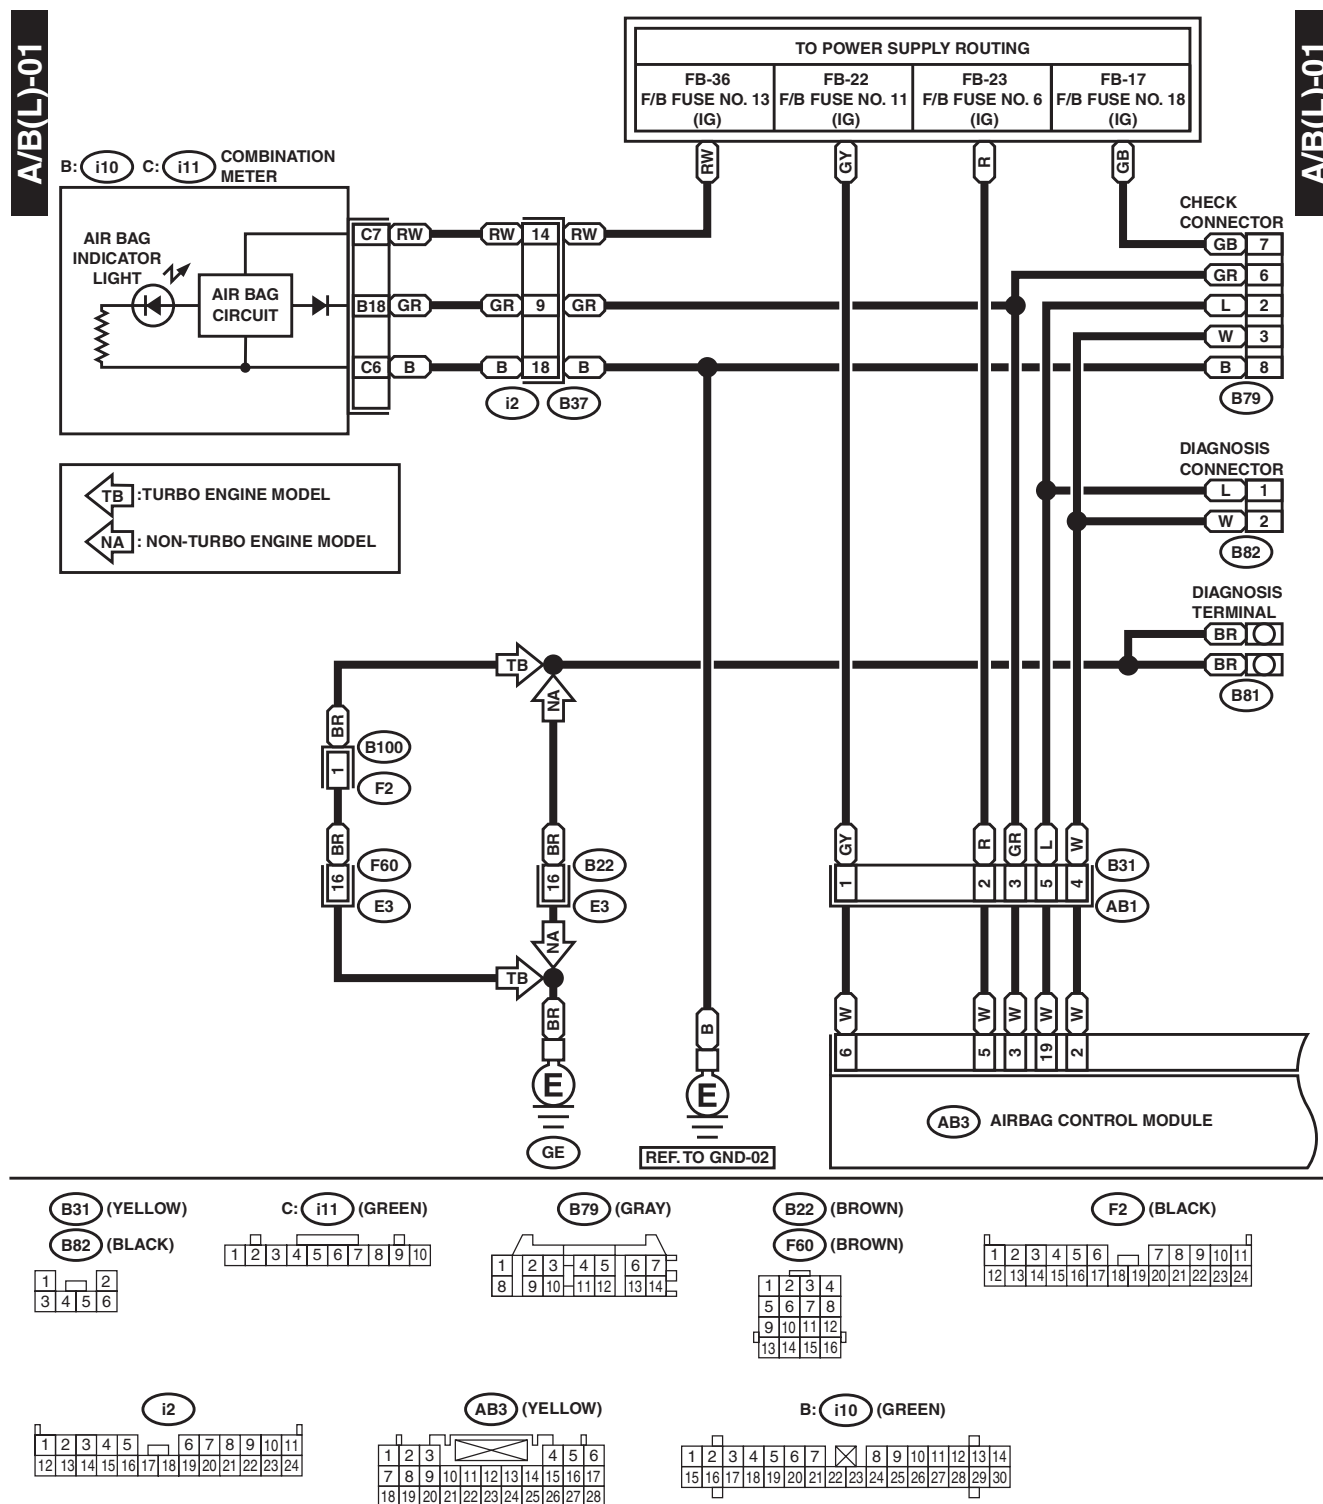


WI-02261

Airbag System

WIRING SYSTEM

A/B(L)-02


A/B(L)-02

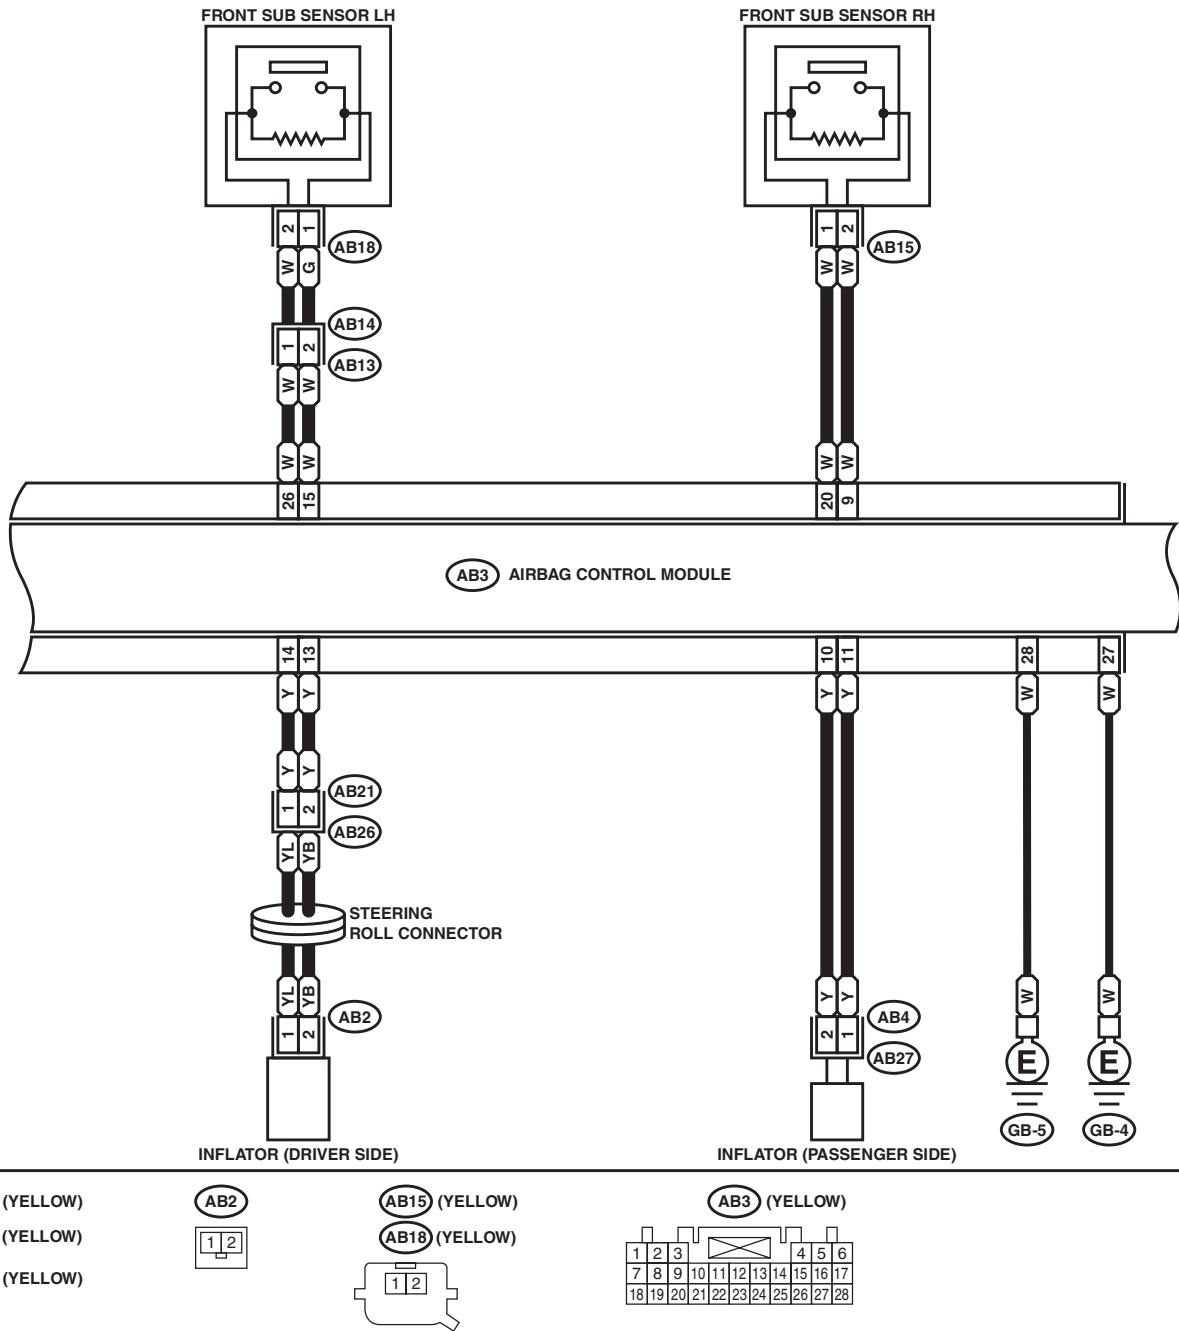

WI-02262

Airbag System

WIRING SYSTEM

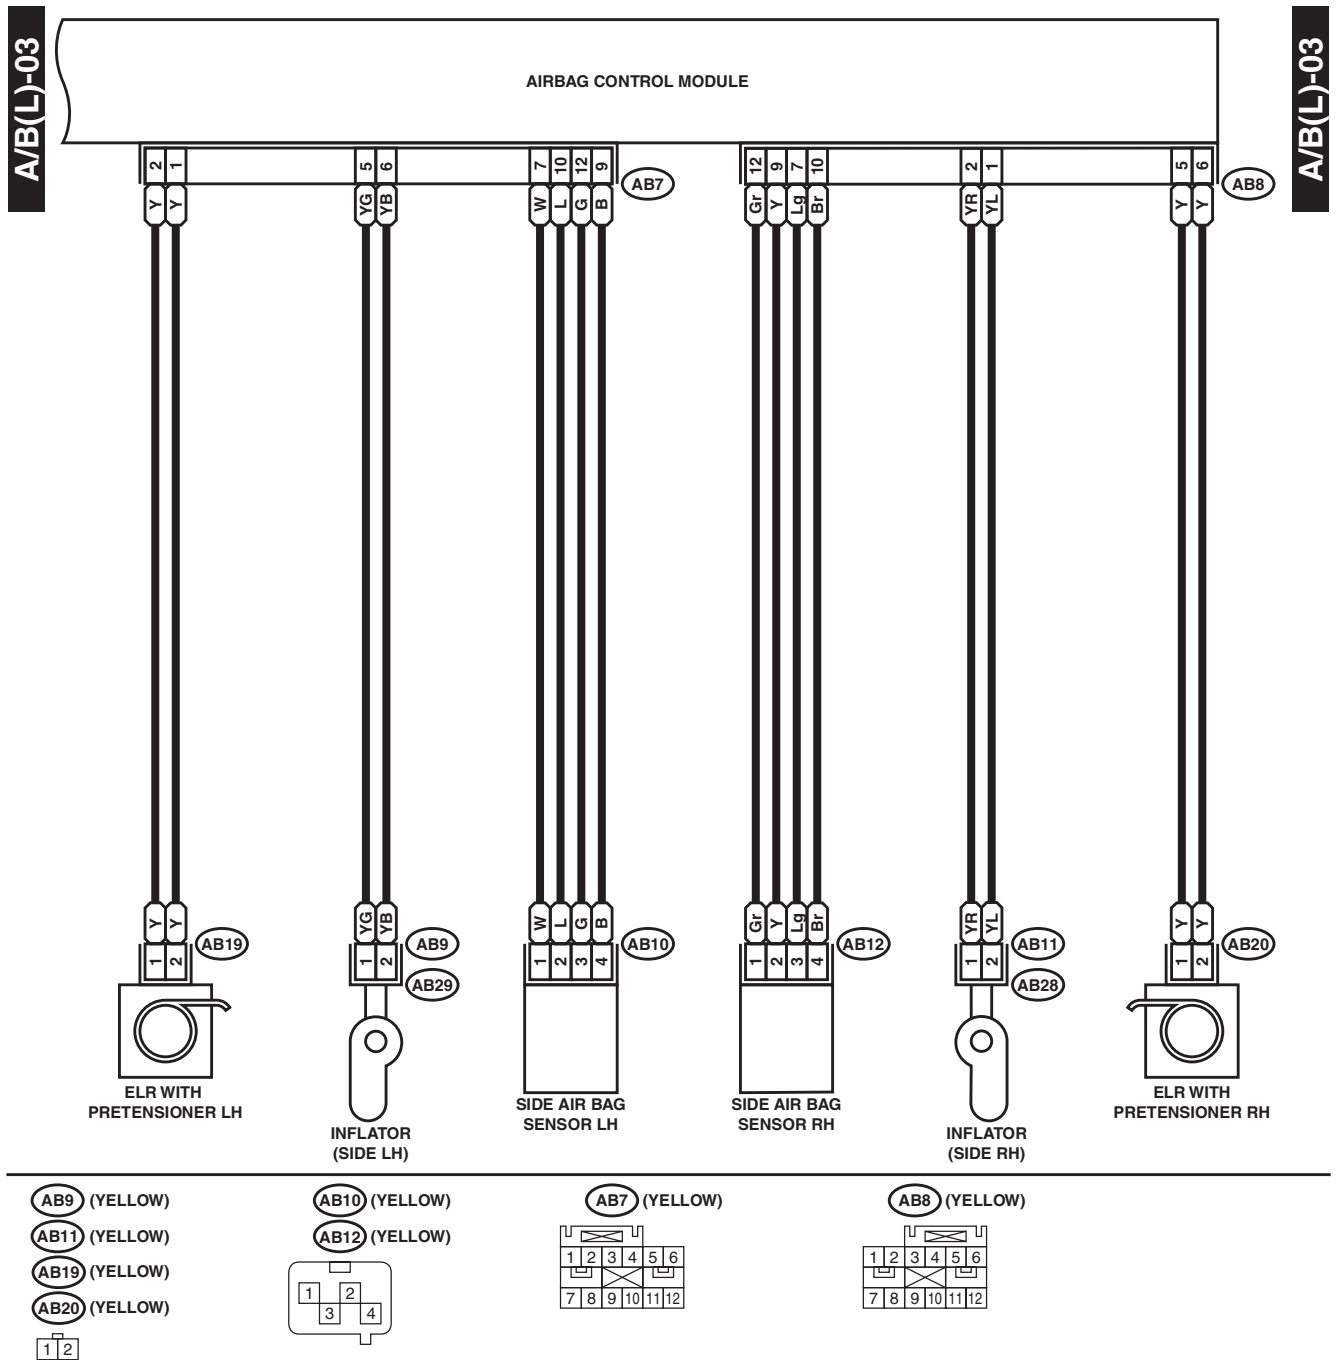


WI-02263

Airbag System

WIRING SYSTEM

2. RHD MODEL

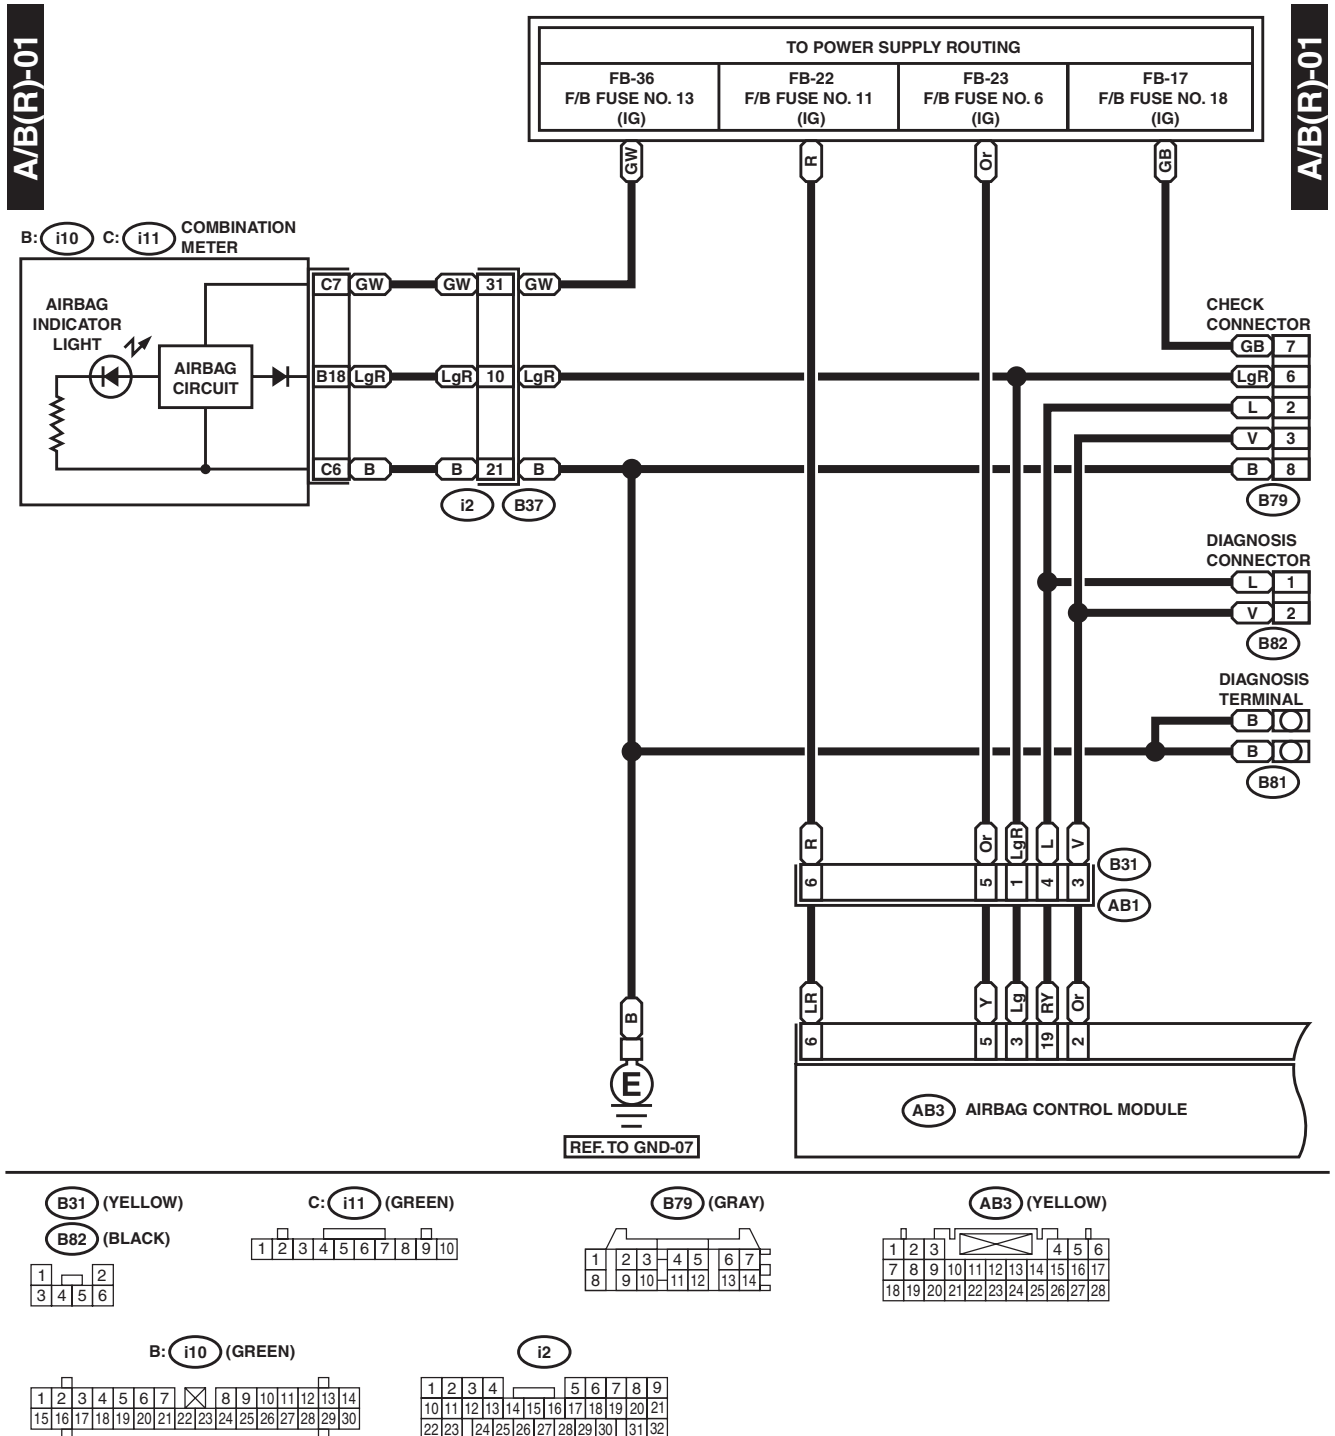


WI-02264

Airbag System

WIRING SYSTEM

A/B(R)-02


A/B(R)-02

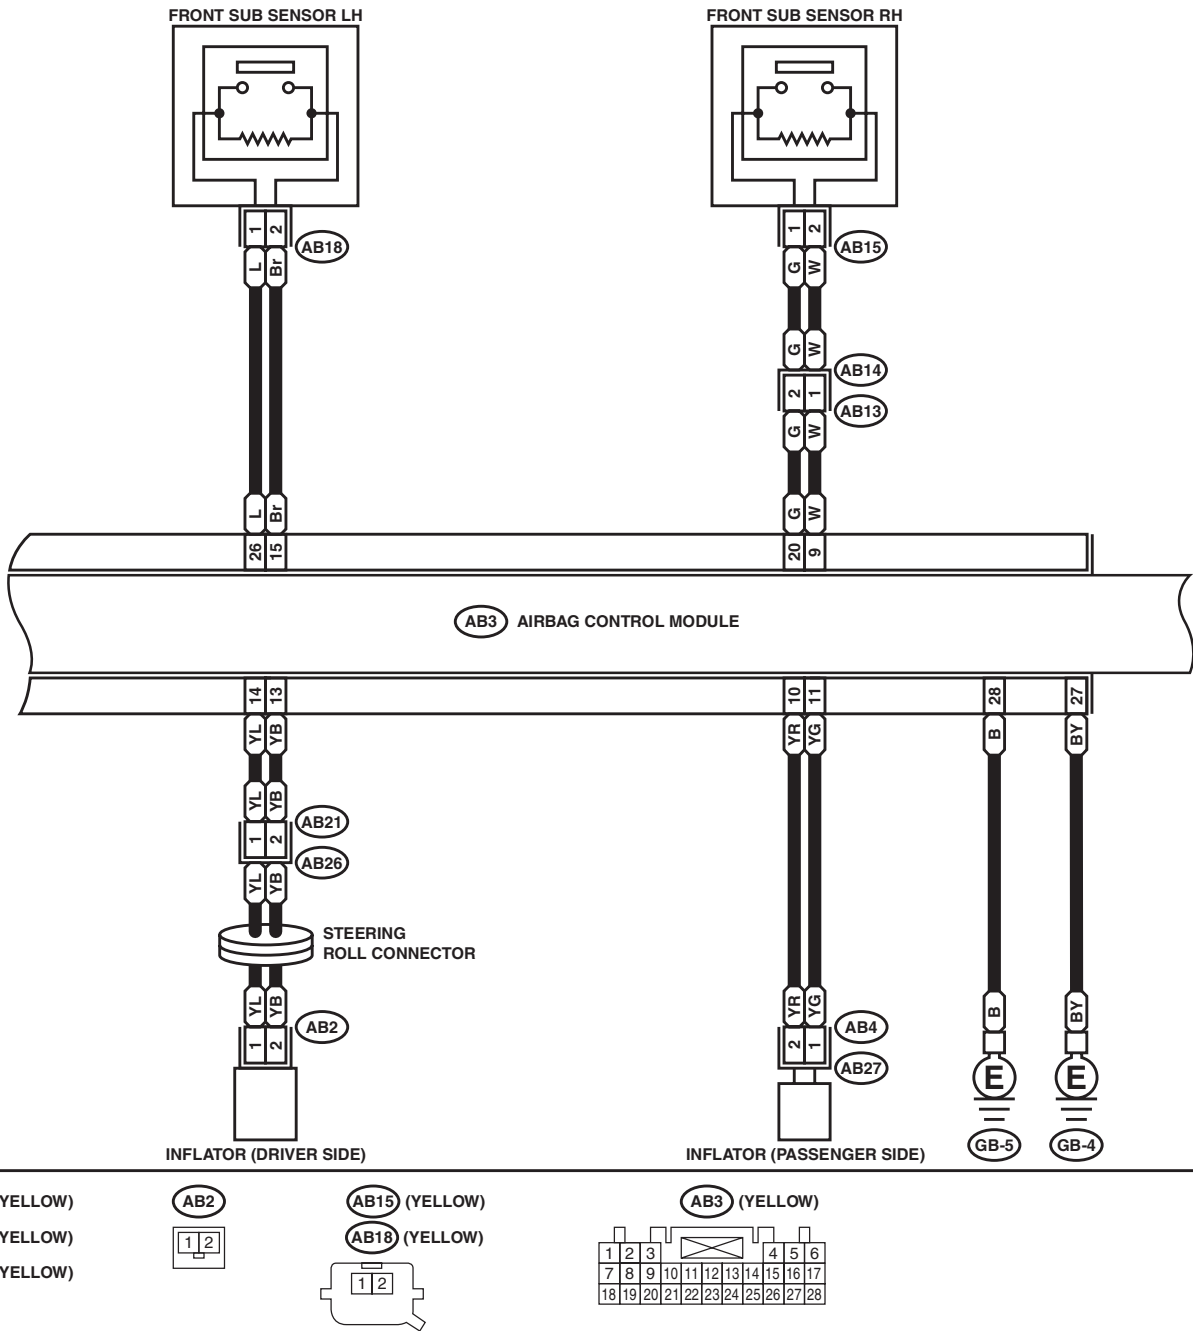

WI-02265

Airbag System

WIRING SYSTEM

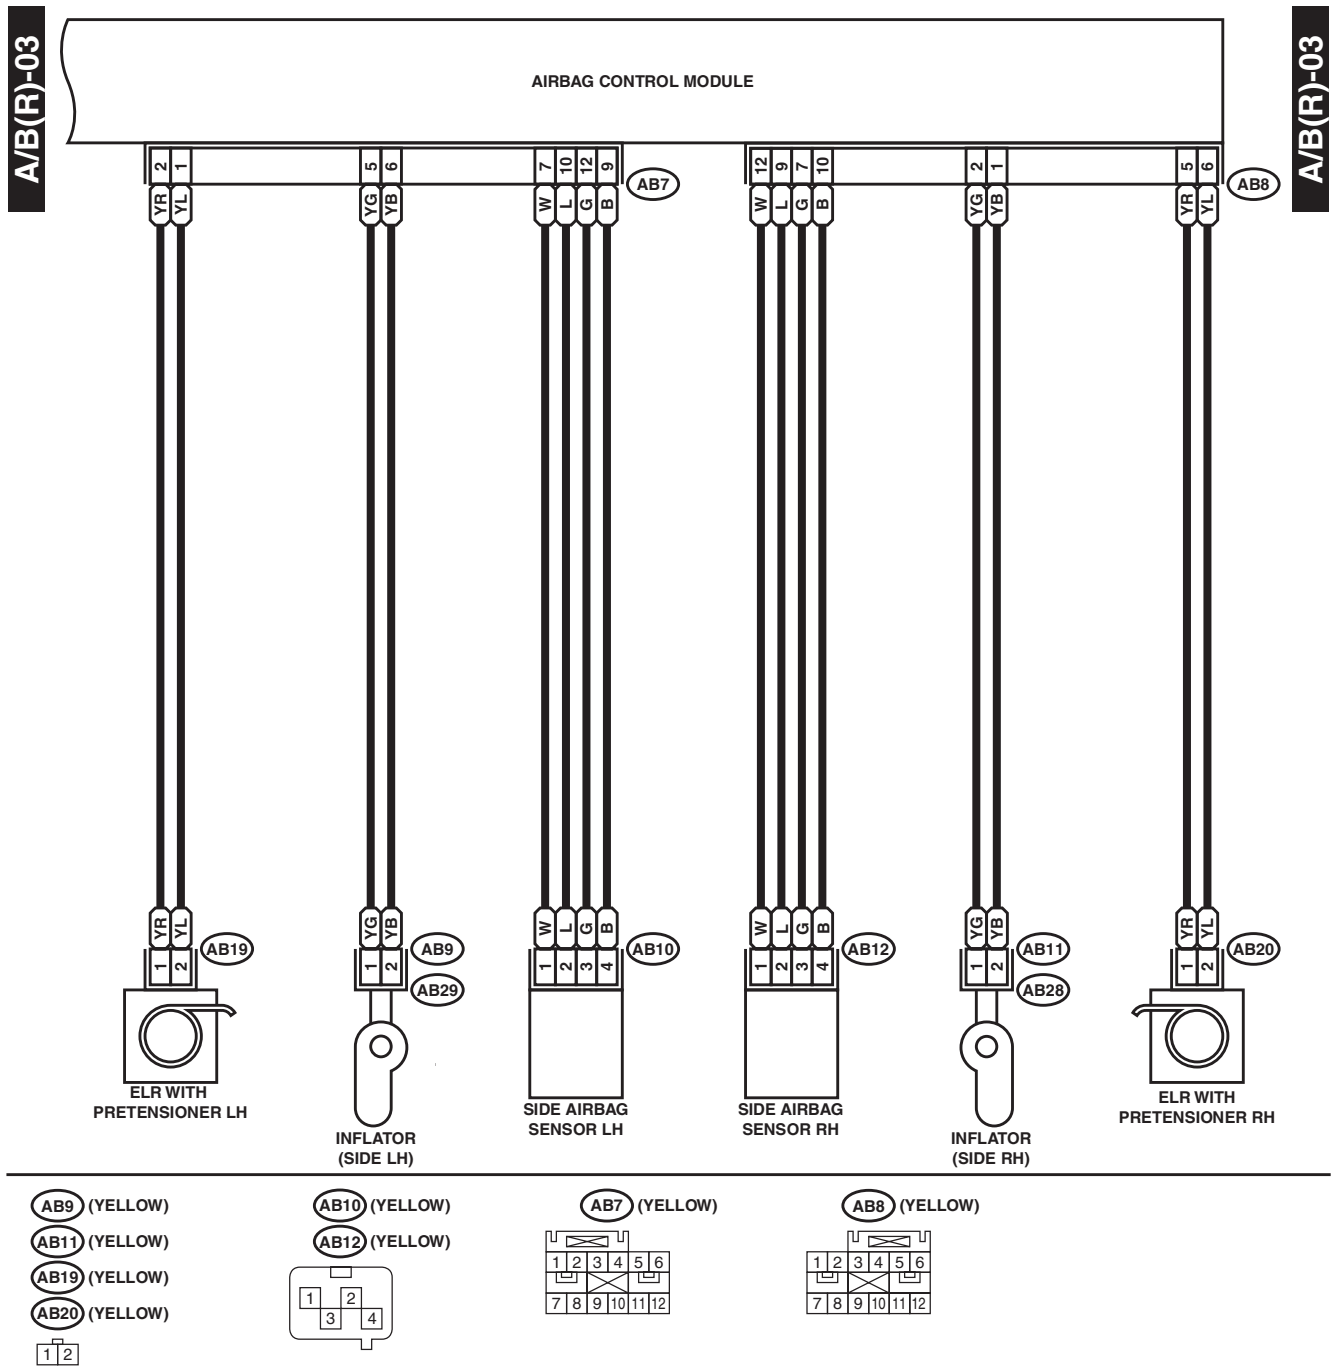


WI-02266

6. Air Conditioning System

A: WIRING DIAGRAM


1. MANUAL A/C LHD MODEL

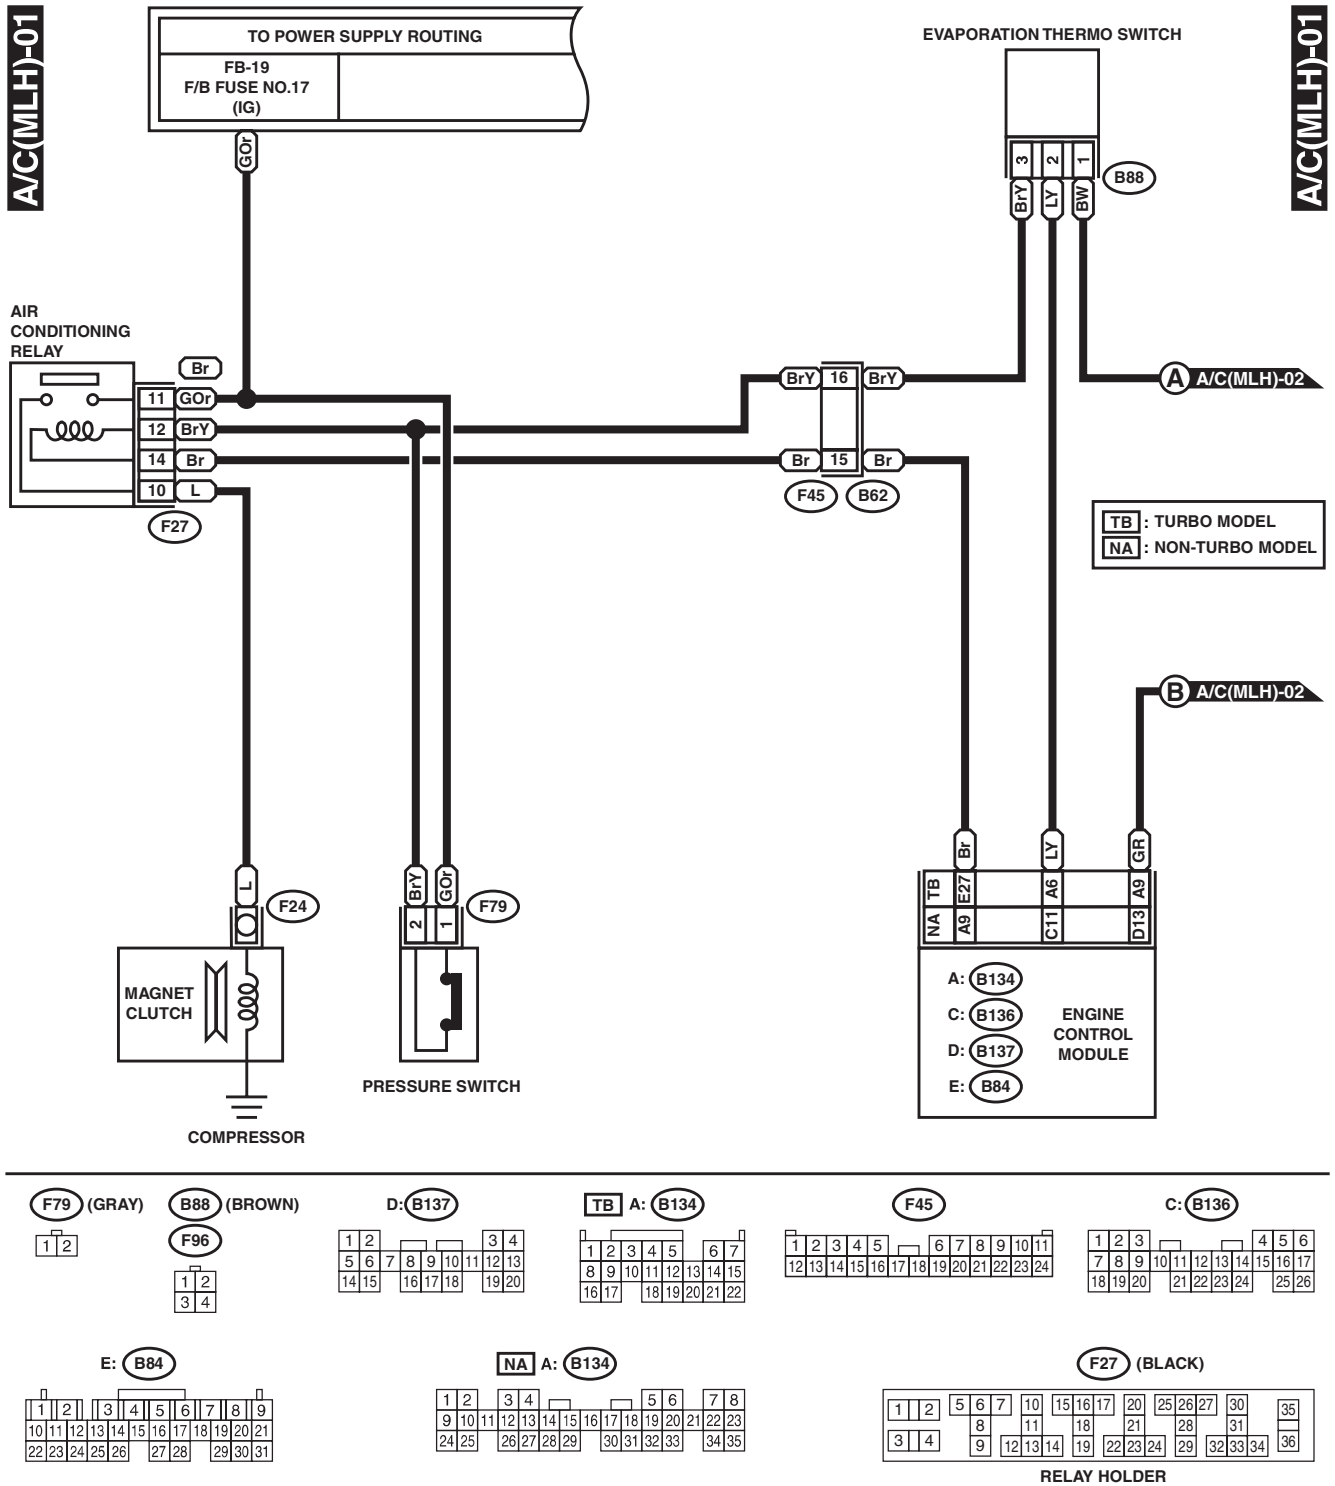

WI-04440

Air Conditioning System

WIRING SYSTEM

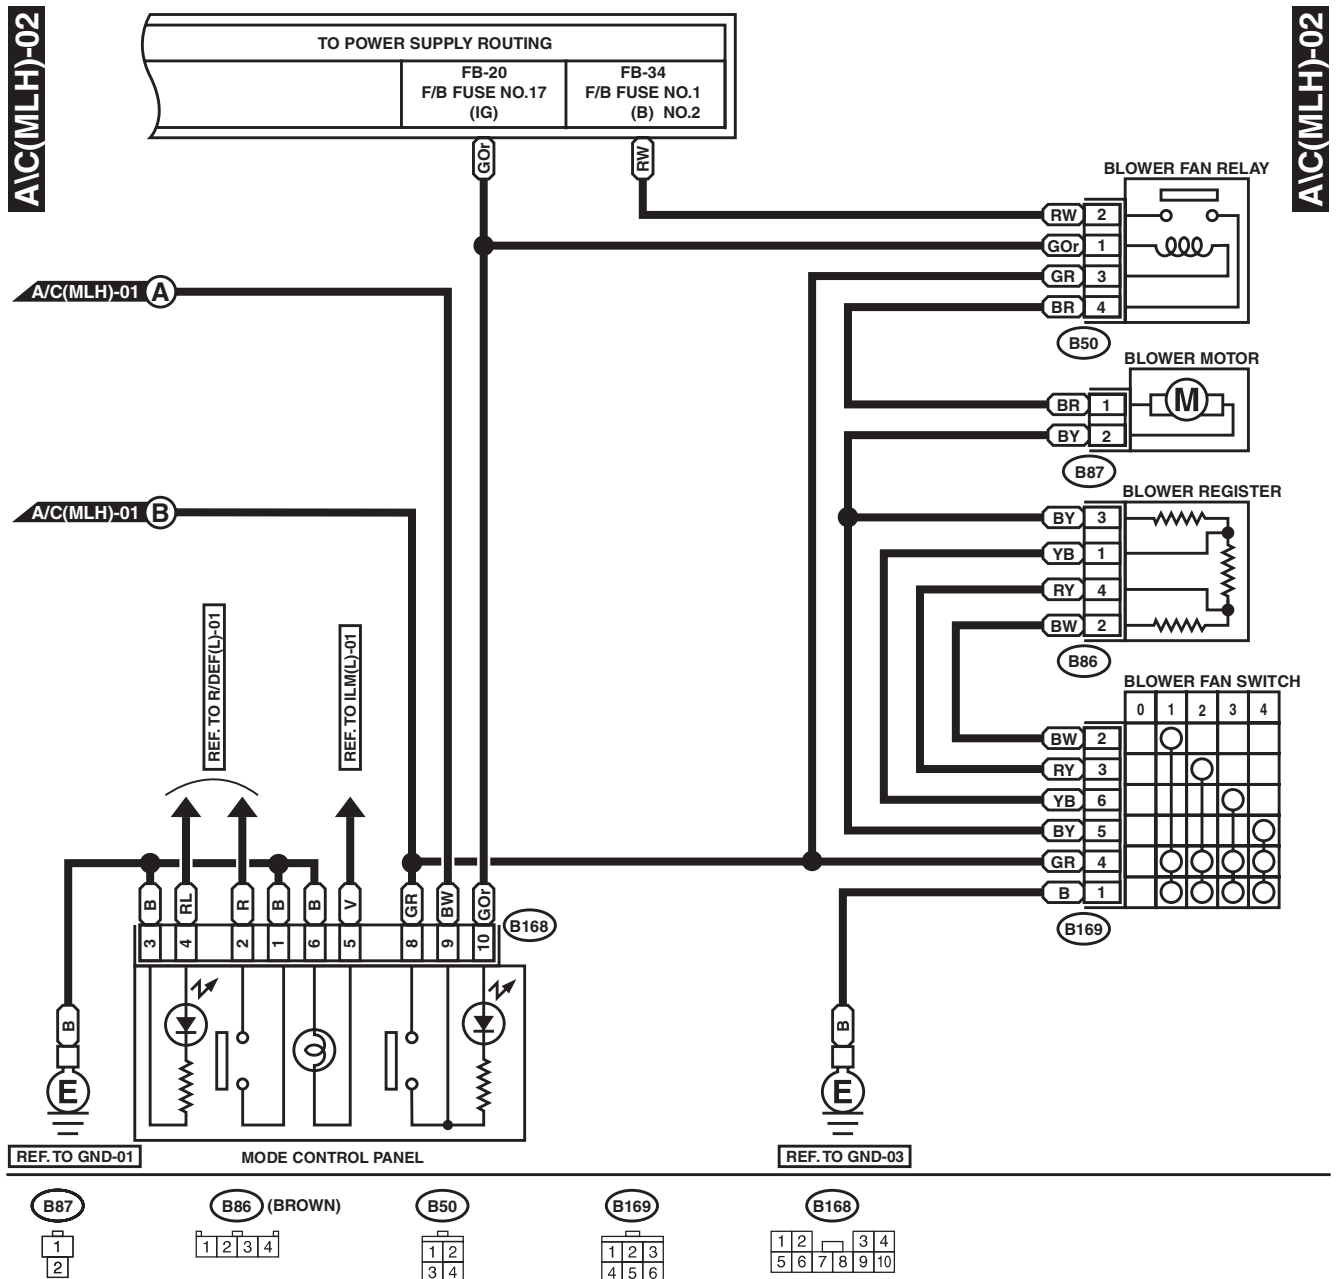


WI-04441

Air Conditioning System

WIRING SYSTEM

2. AUTO A/C LHD MODEL






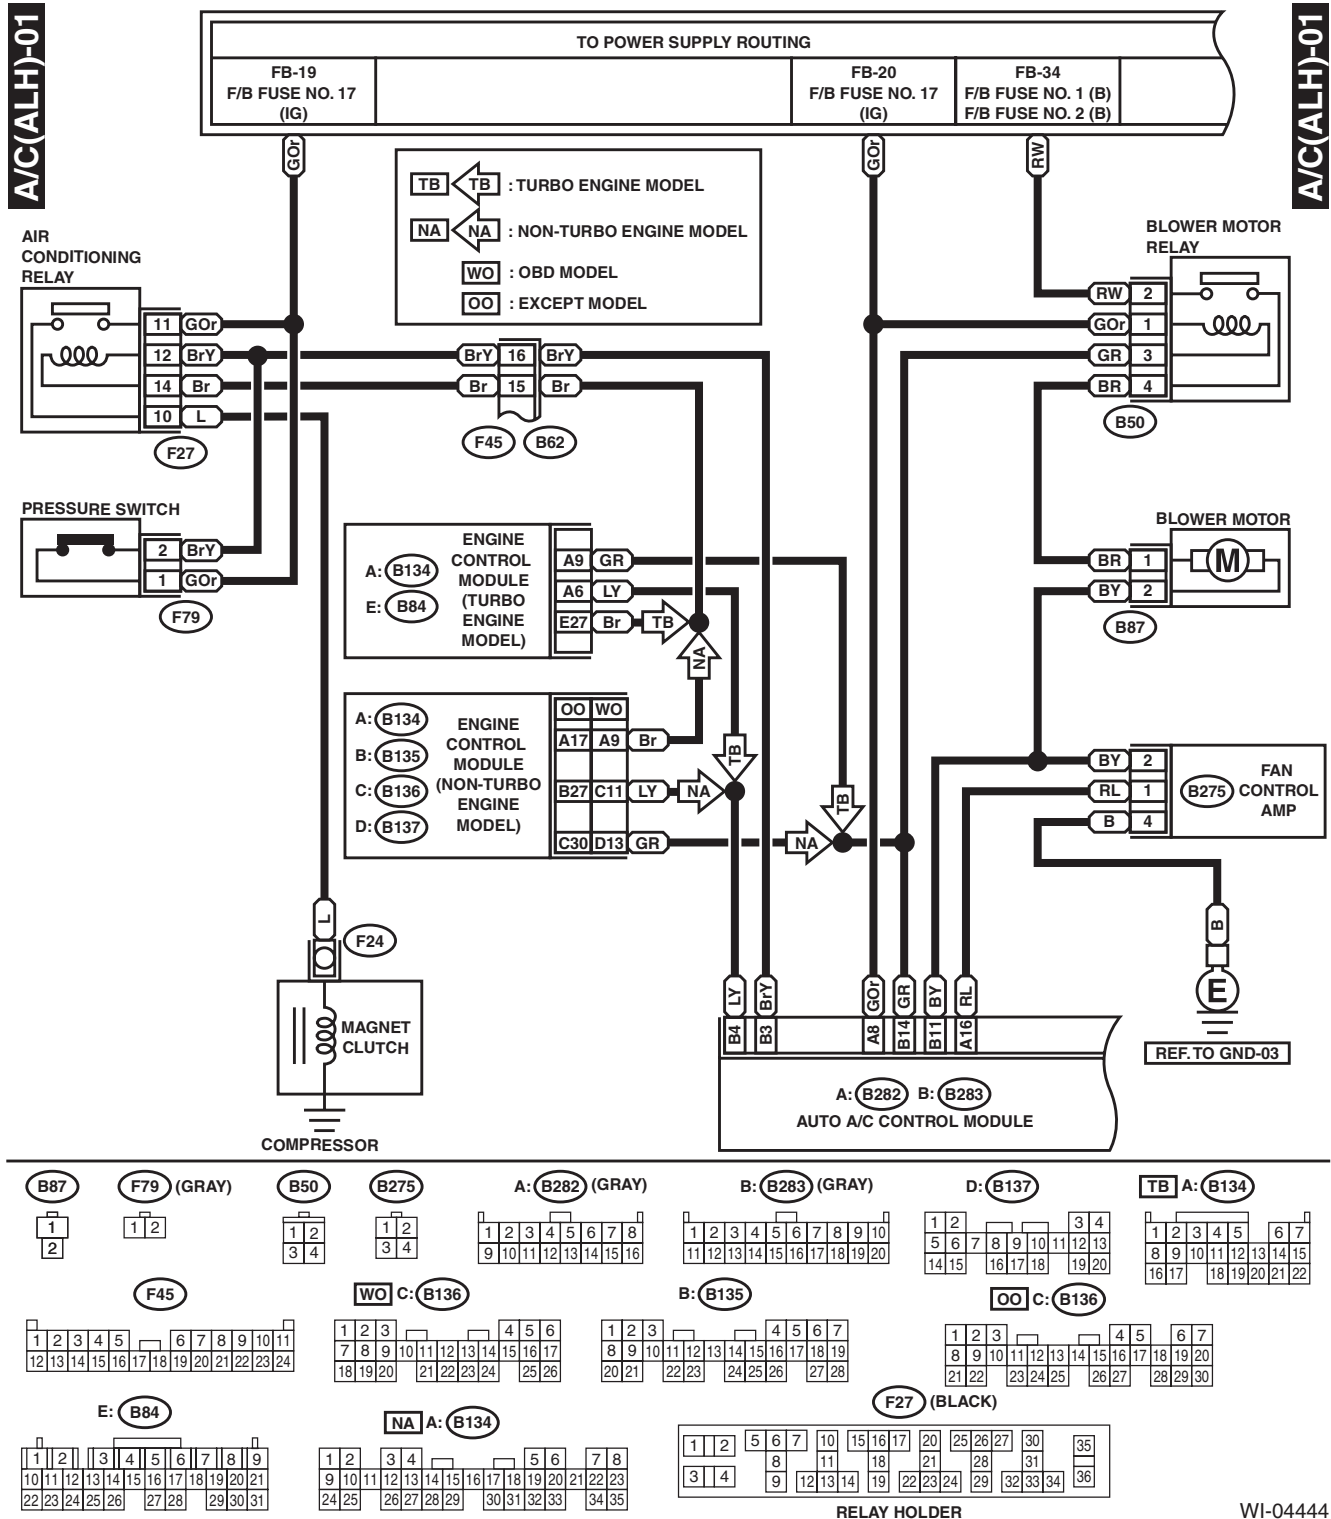


Air Conditioning System

WIRING SYSTEM

A/C(ALH)-02


A/C(ALH)-02

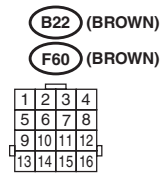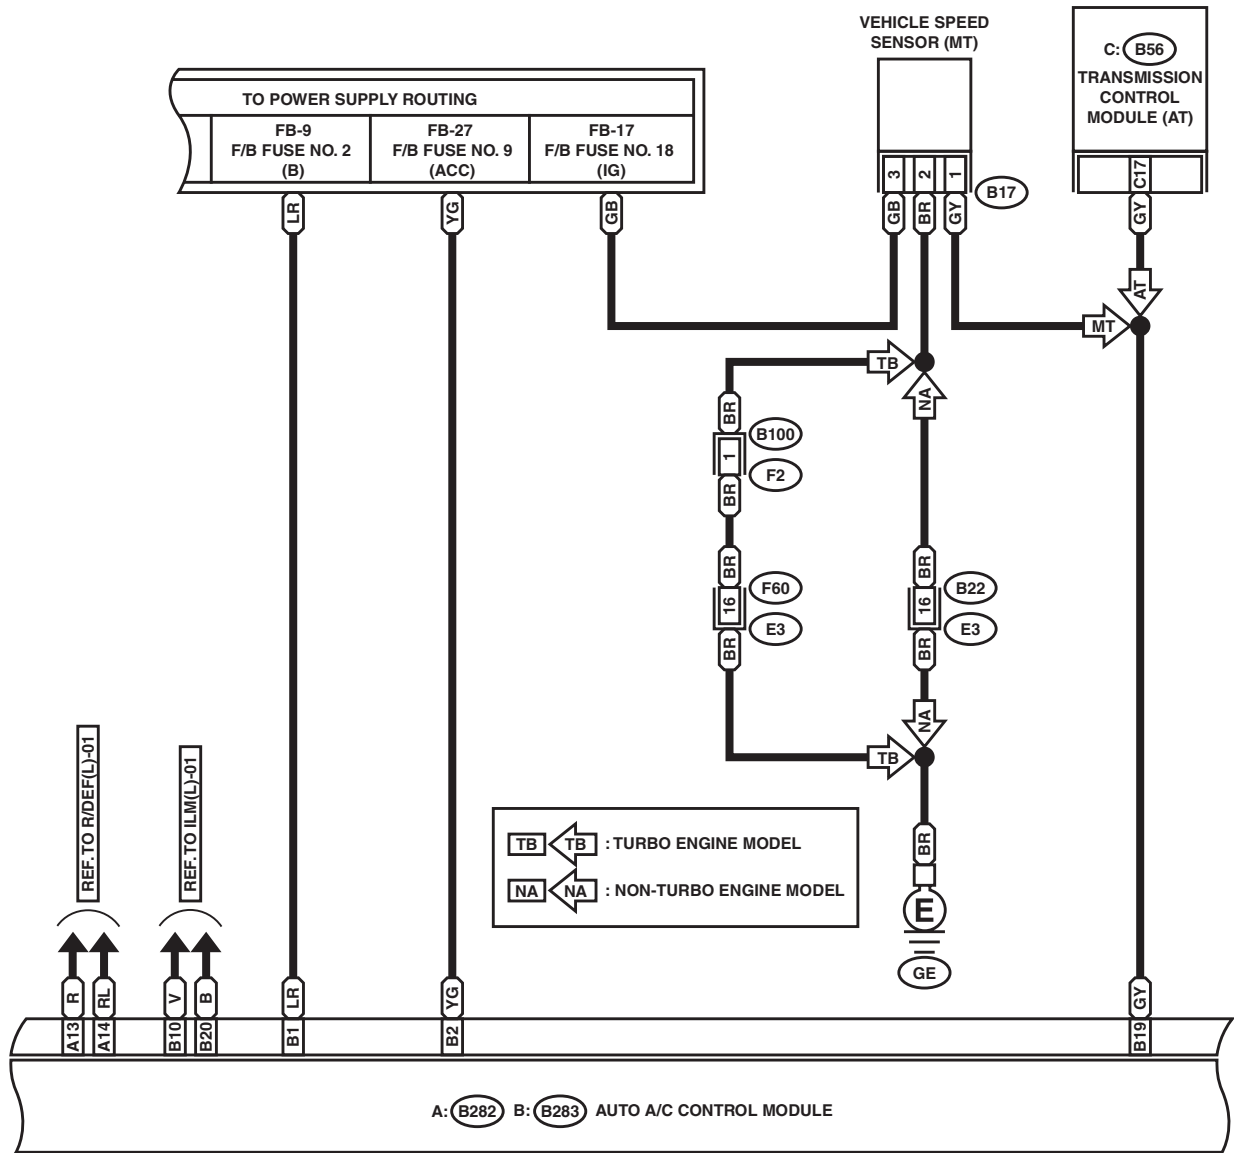

WI-02272

Air Conditioning System


WIRING SYSTEM

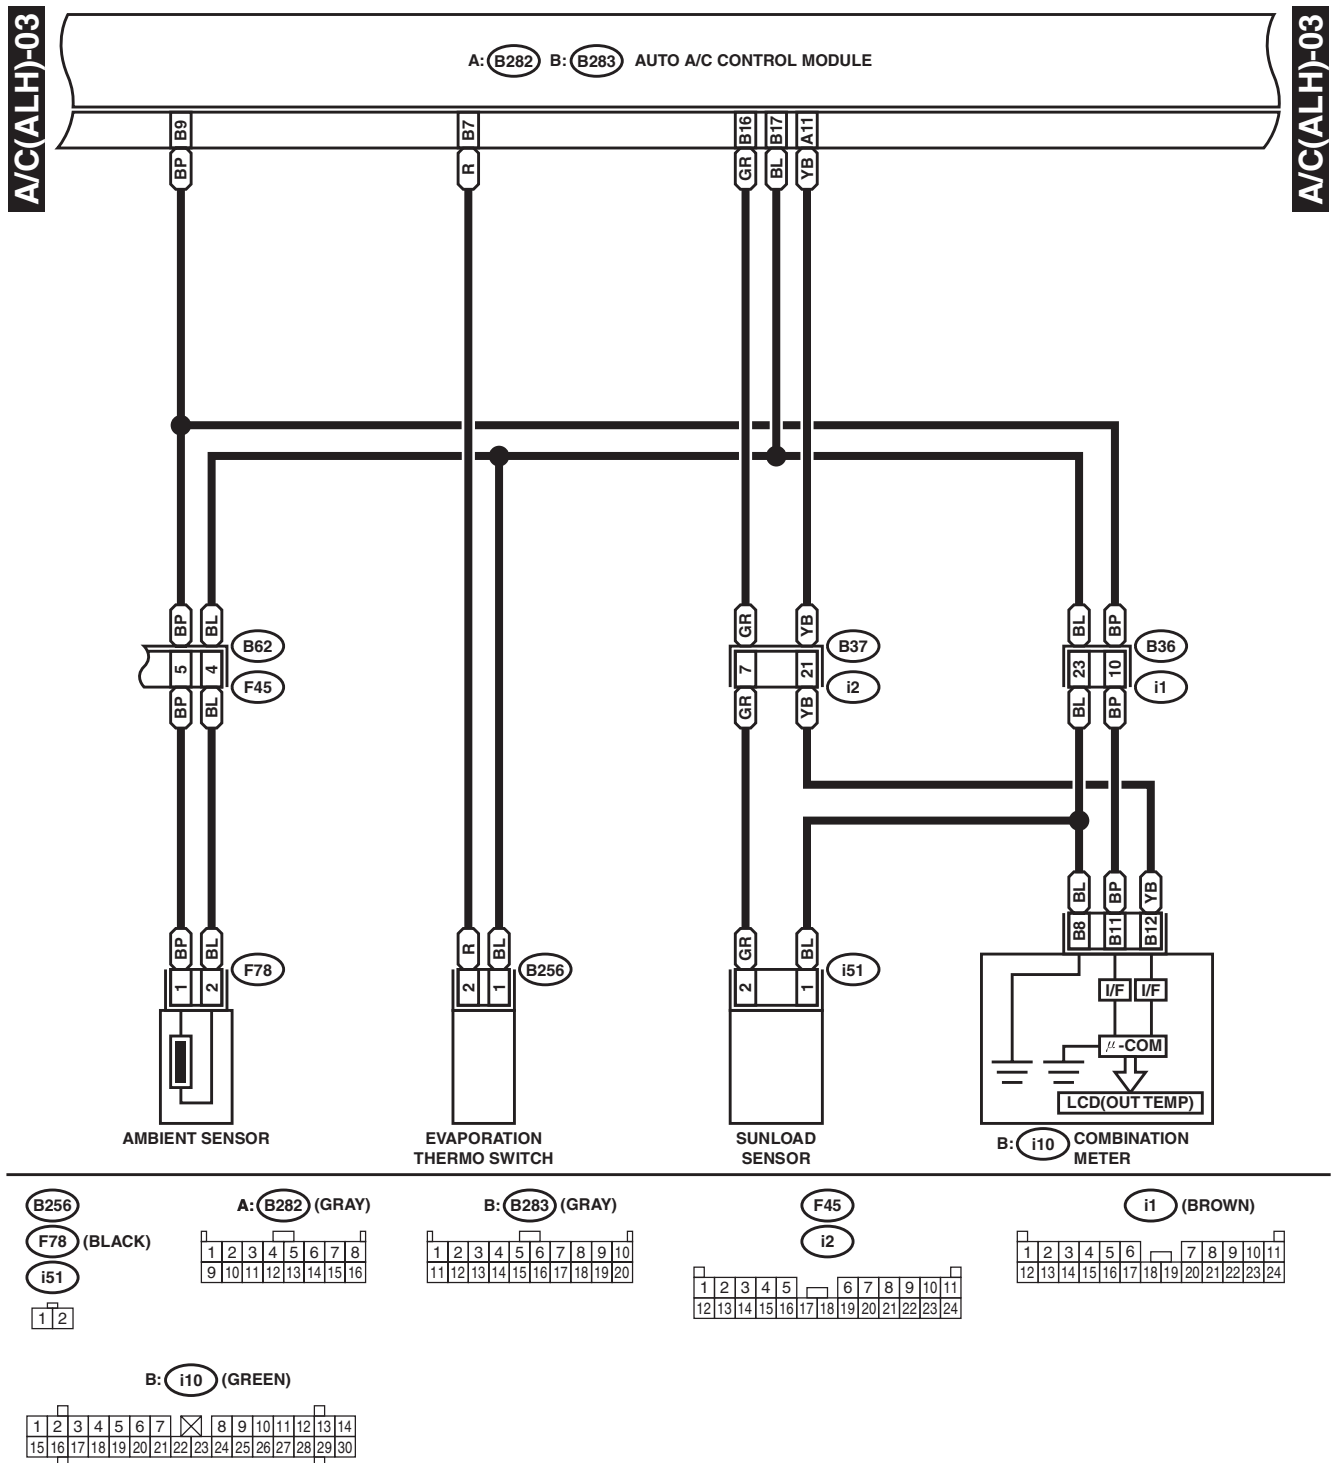

WI-02273

Air Conditioning System

WIRING SYSTEM


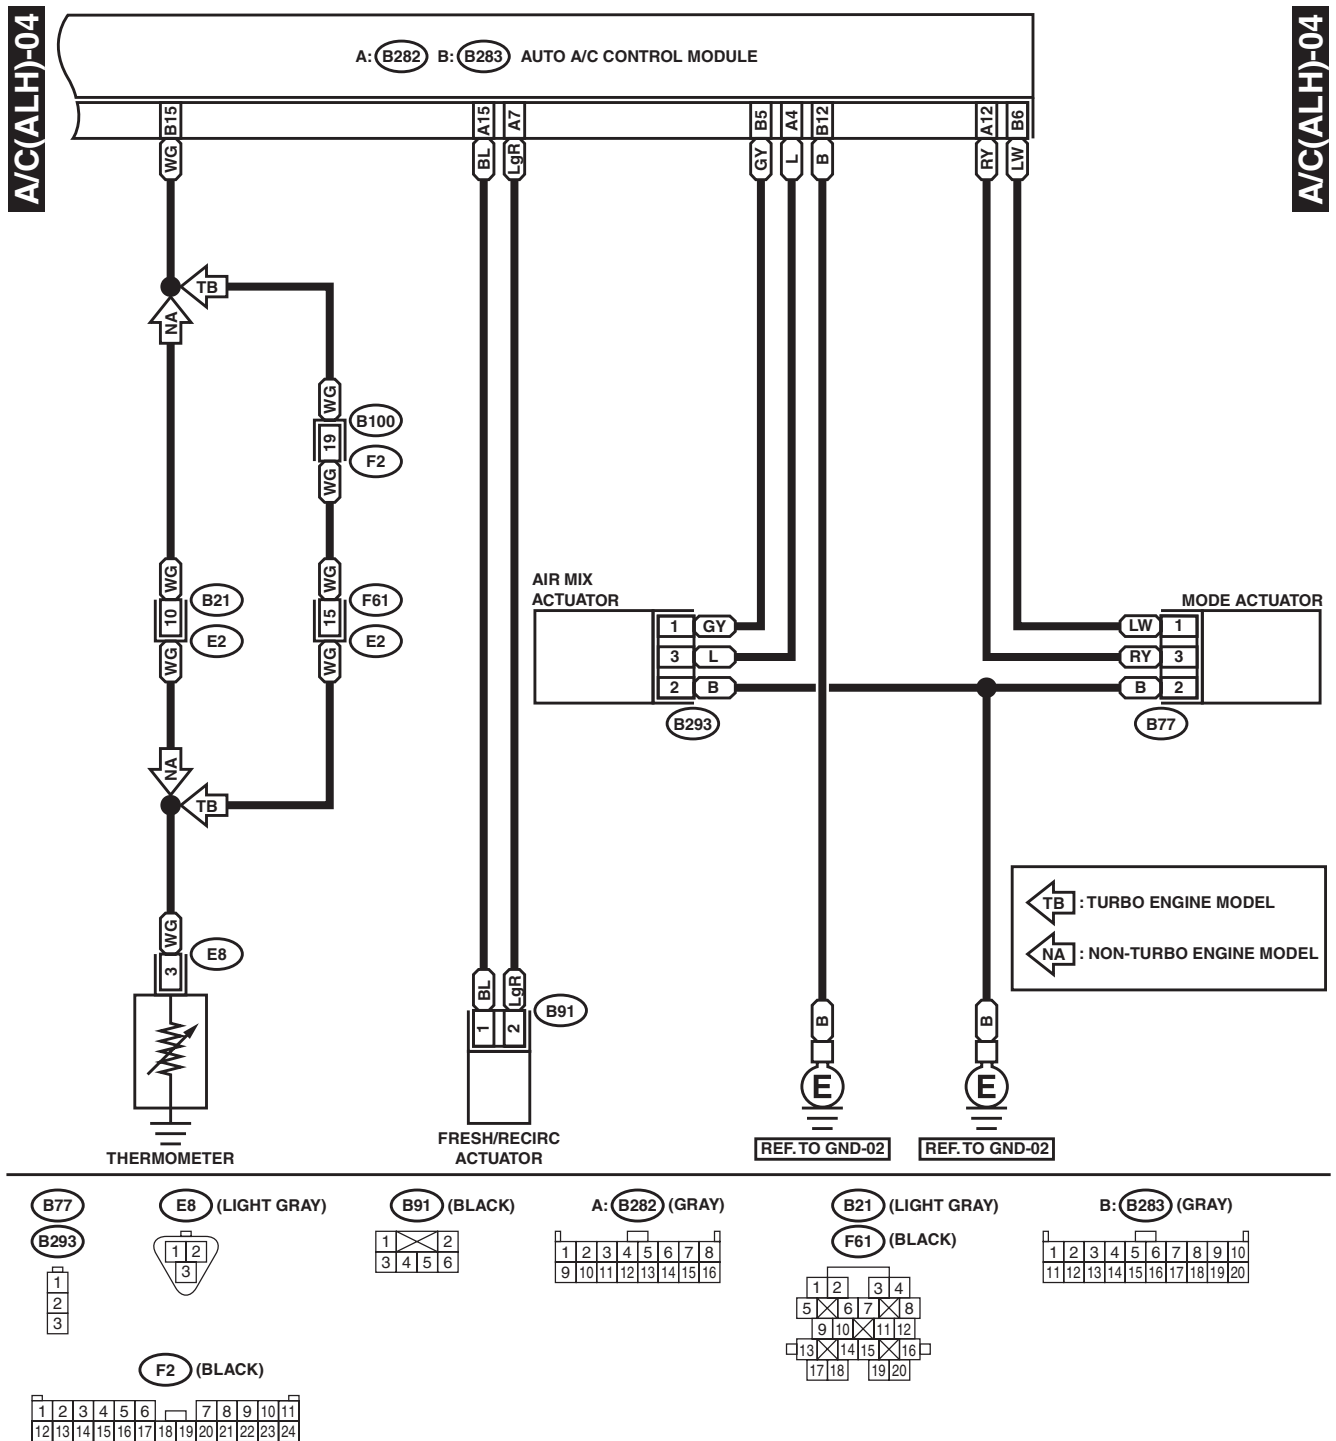


WI-02274

Air Conditioning System


WIRING SYSTEM

3. MANUAL A/C RHD MODEL

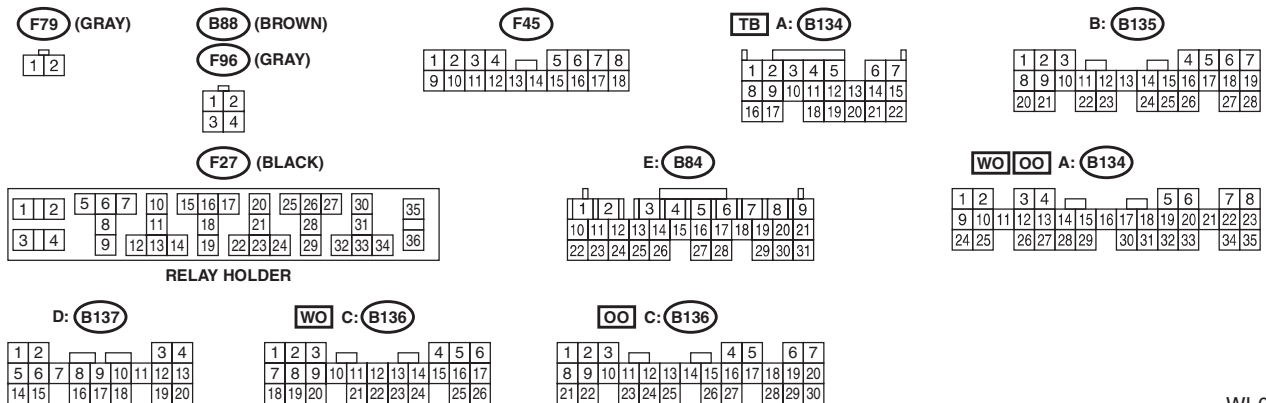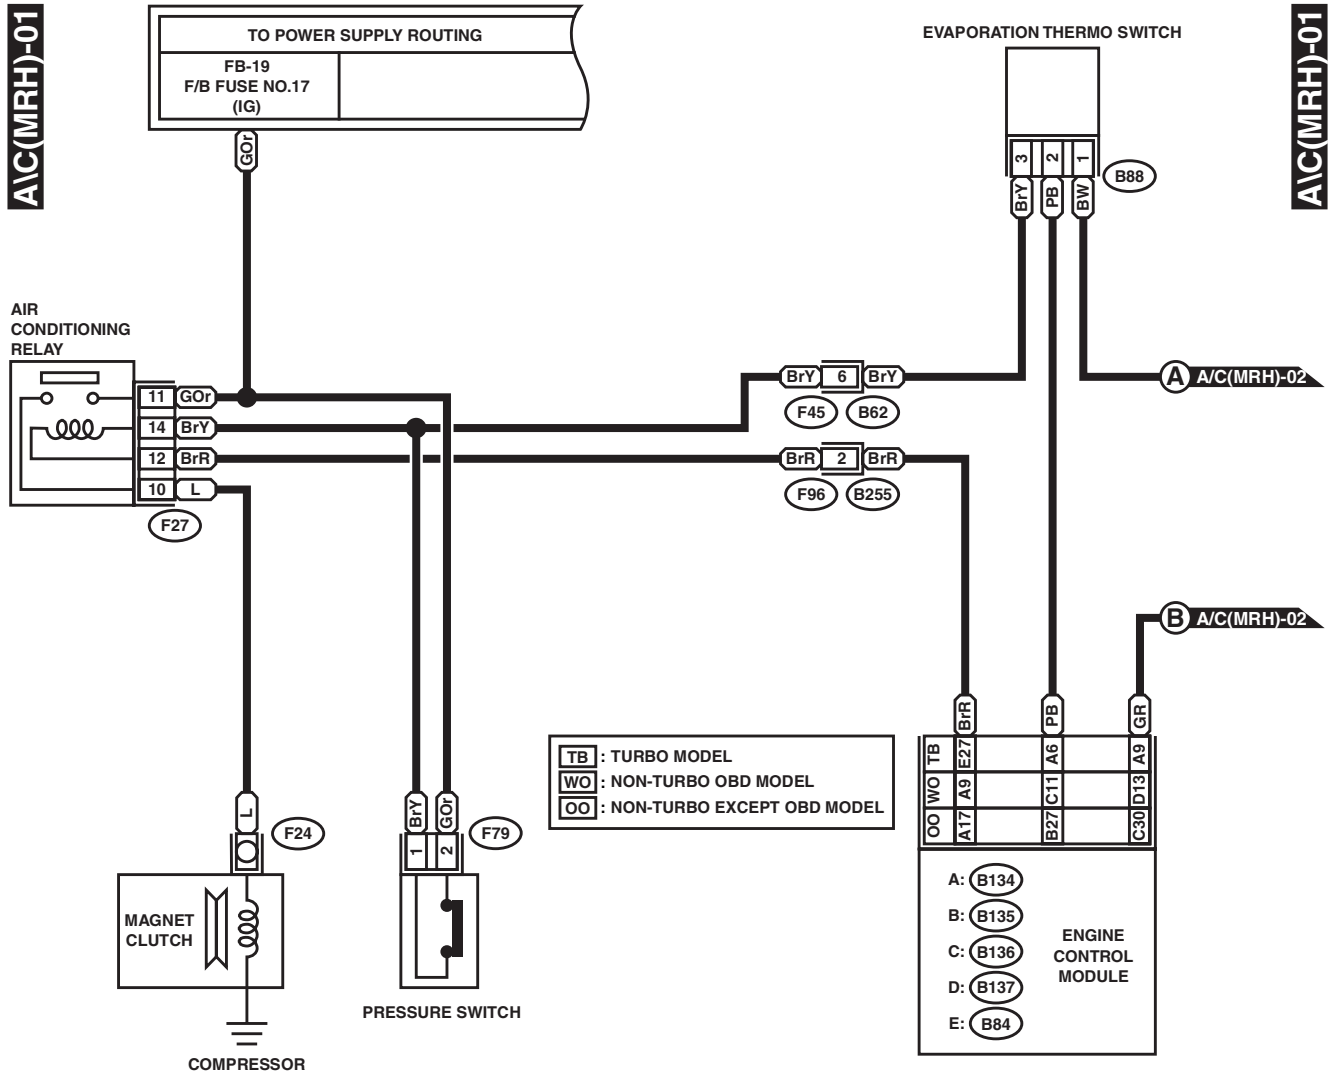

WI-04442

WIRING SYSTEM

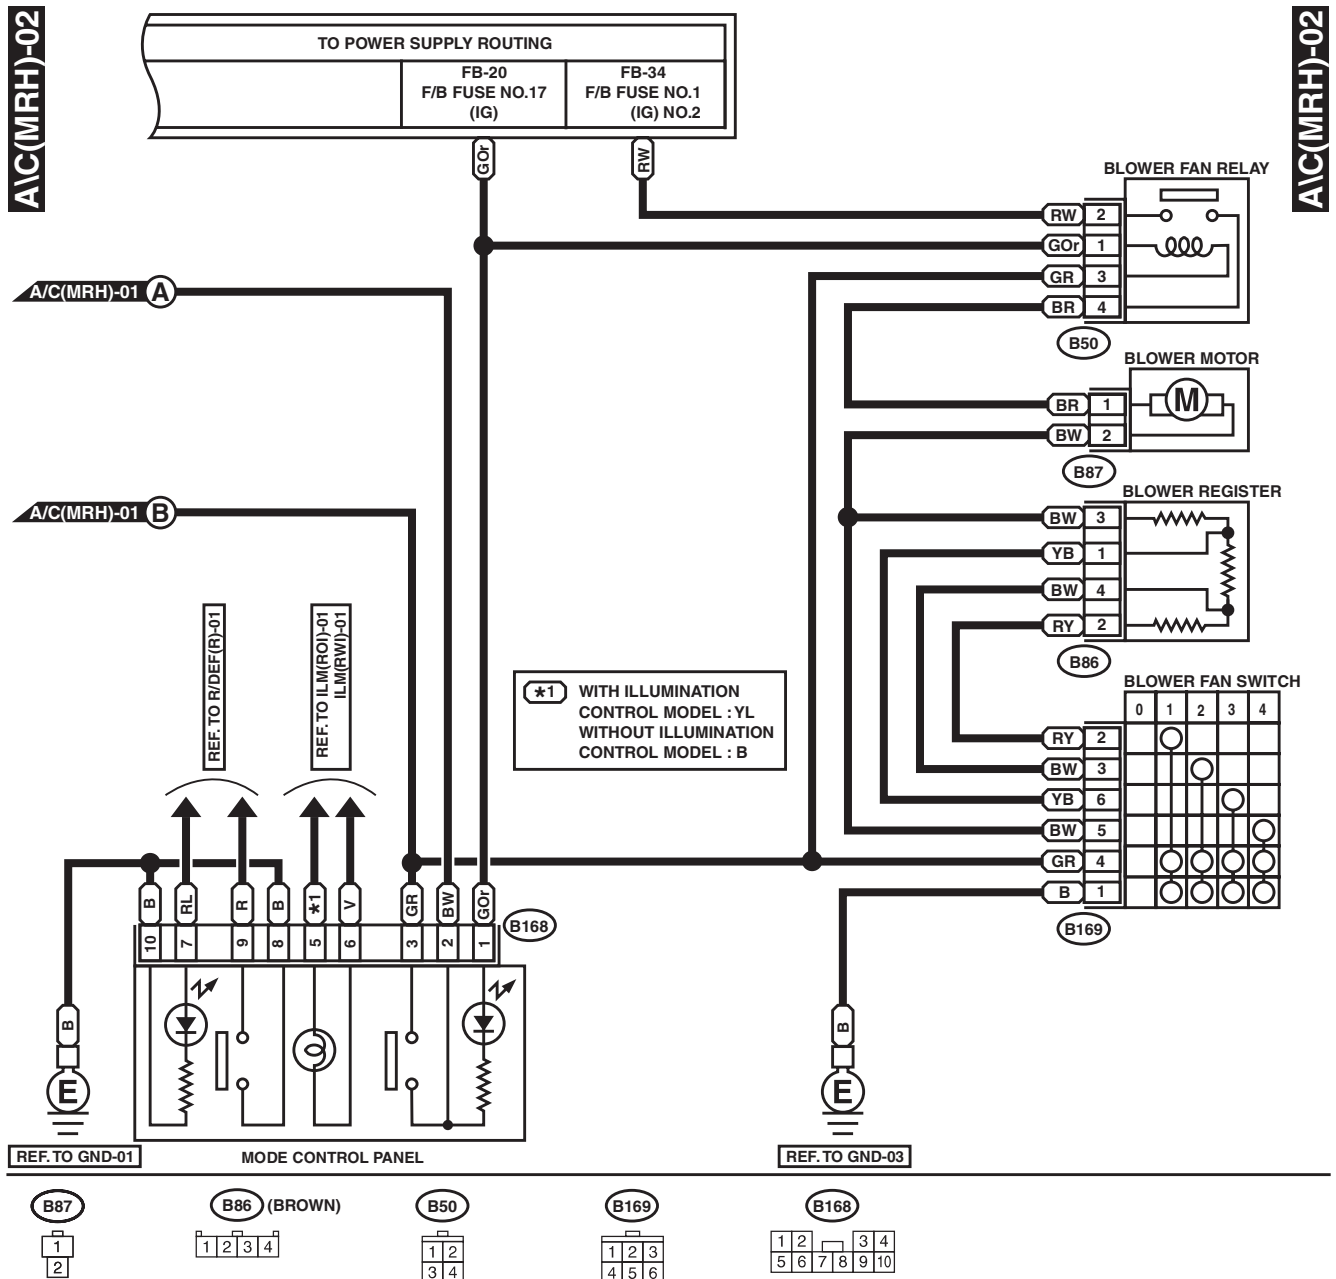


WI-04443

Air Conditioning System

WIRING SYSTEM


4. AUTO A/C RHD MODEL

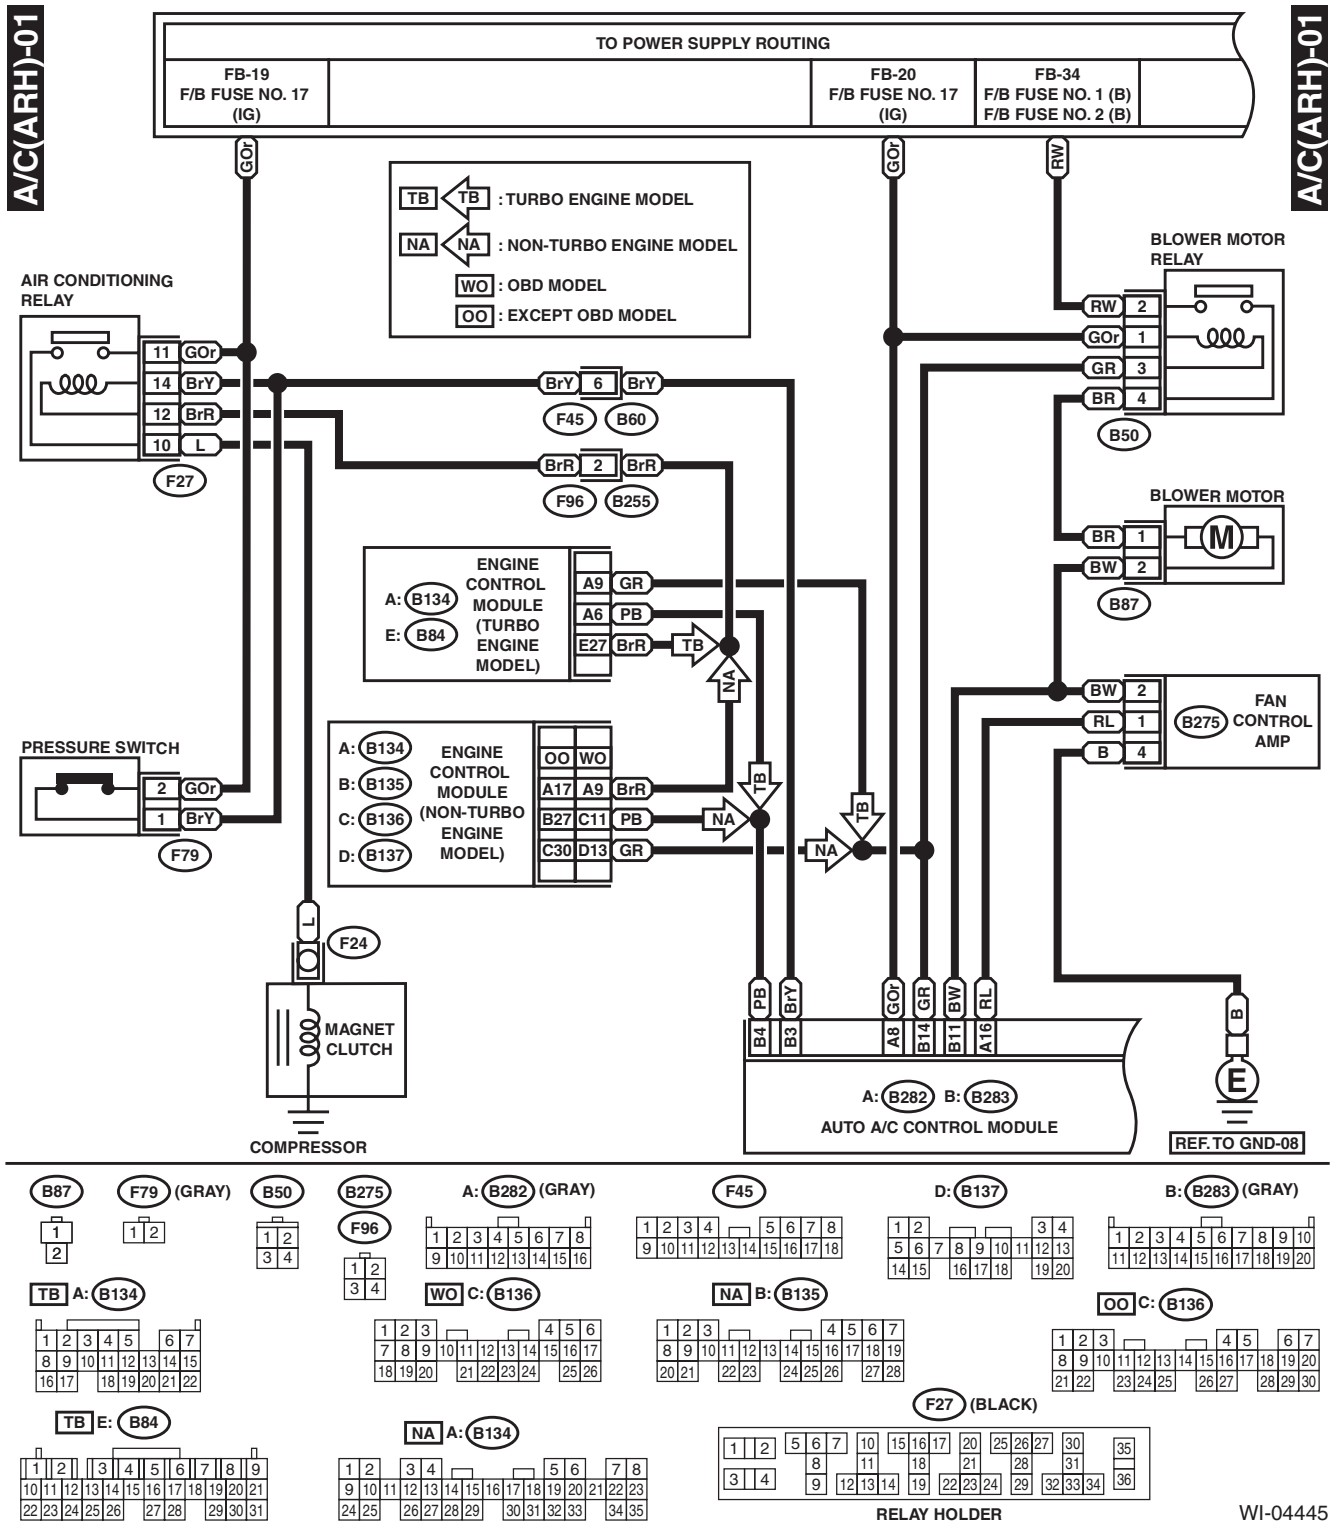

WI-04445

Air Conditioning System


WIRING SYSTEM

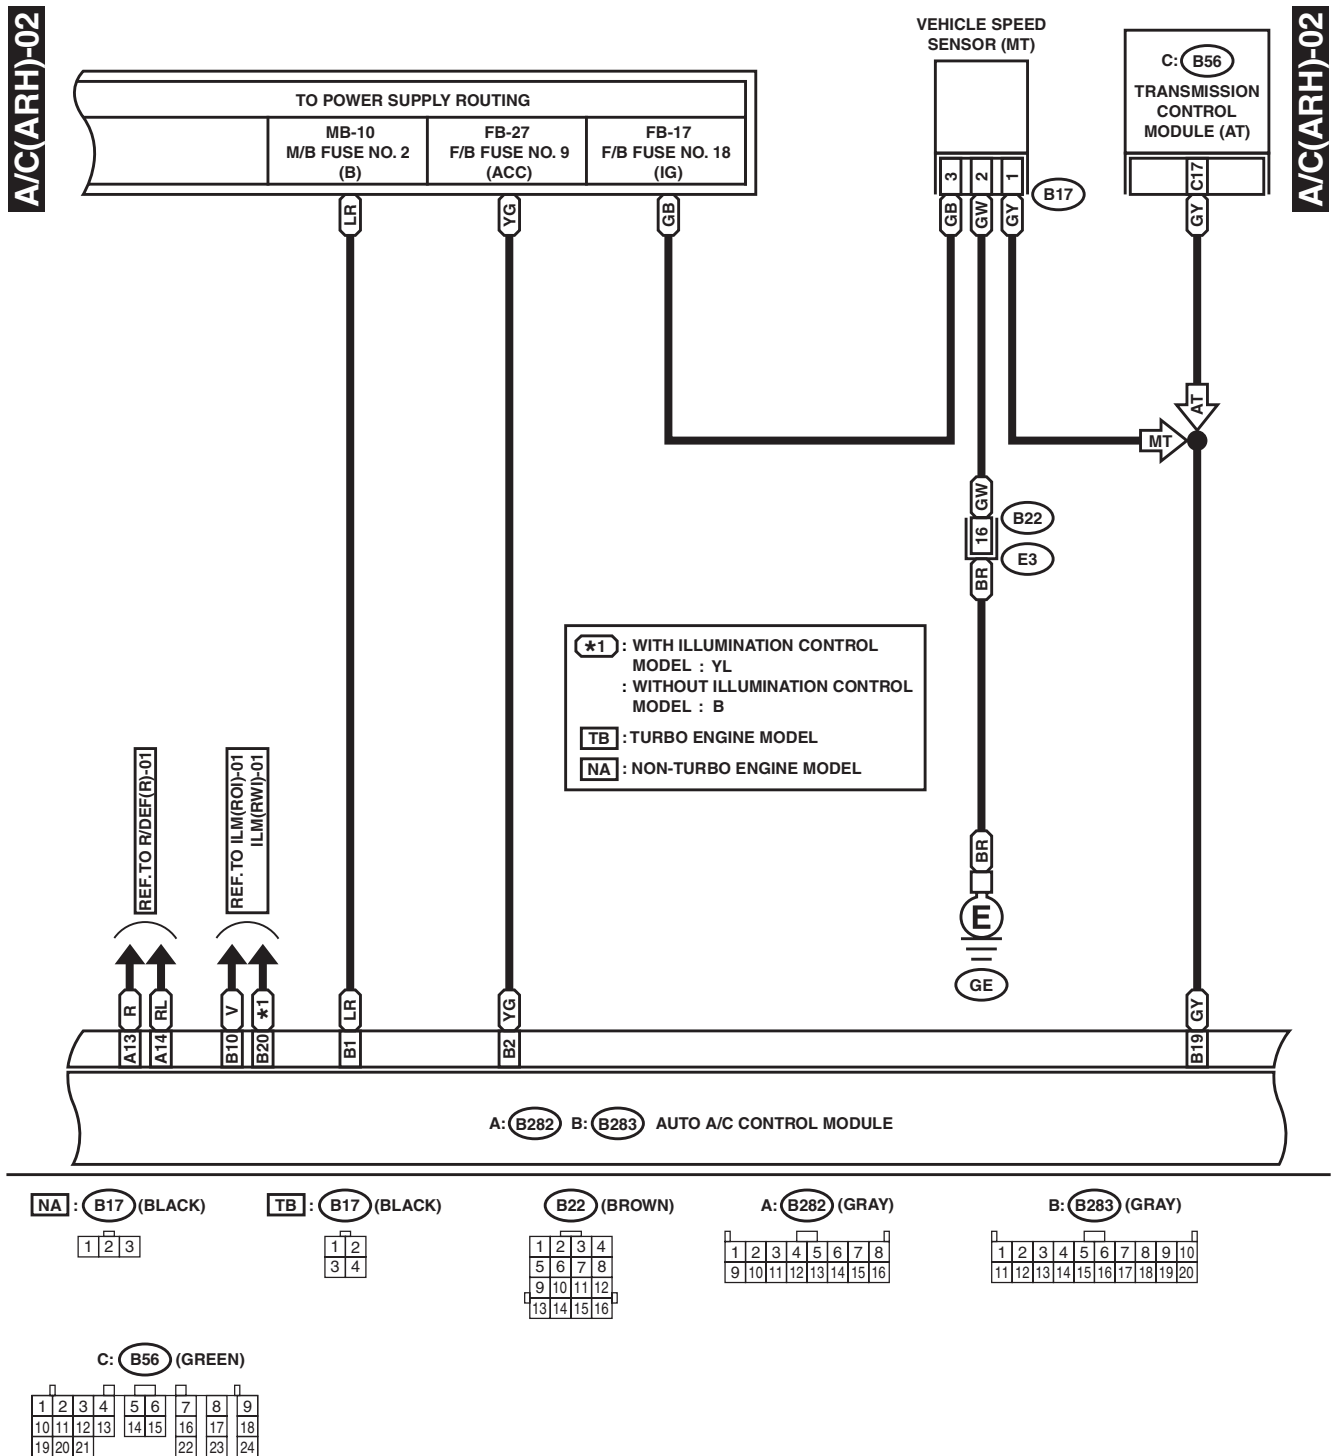

WI-02276

Air Conditioning System


WIRING SYSTEM

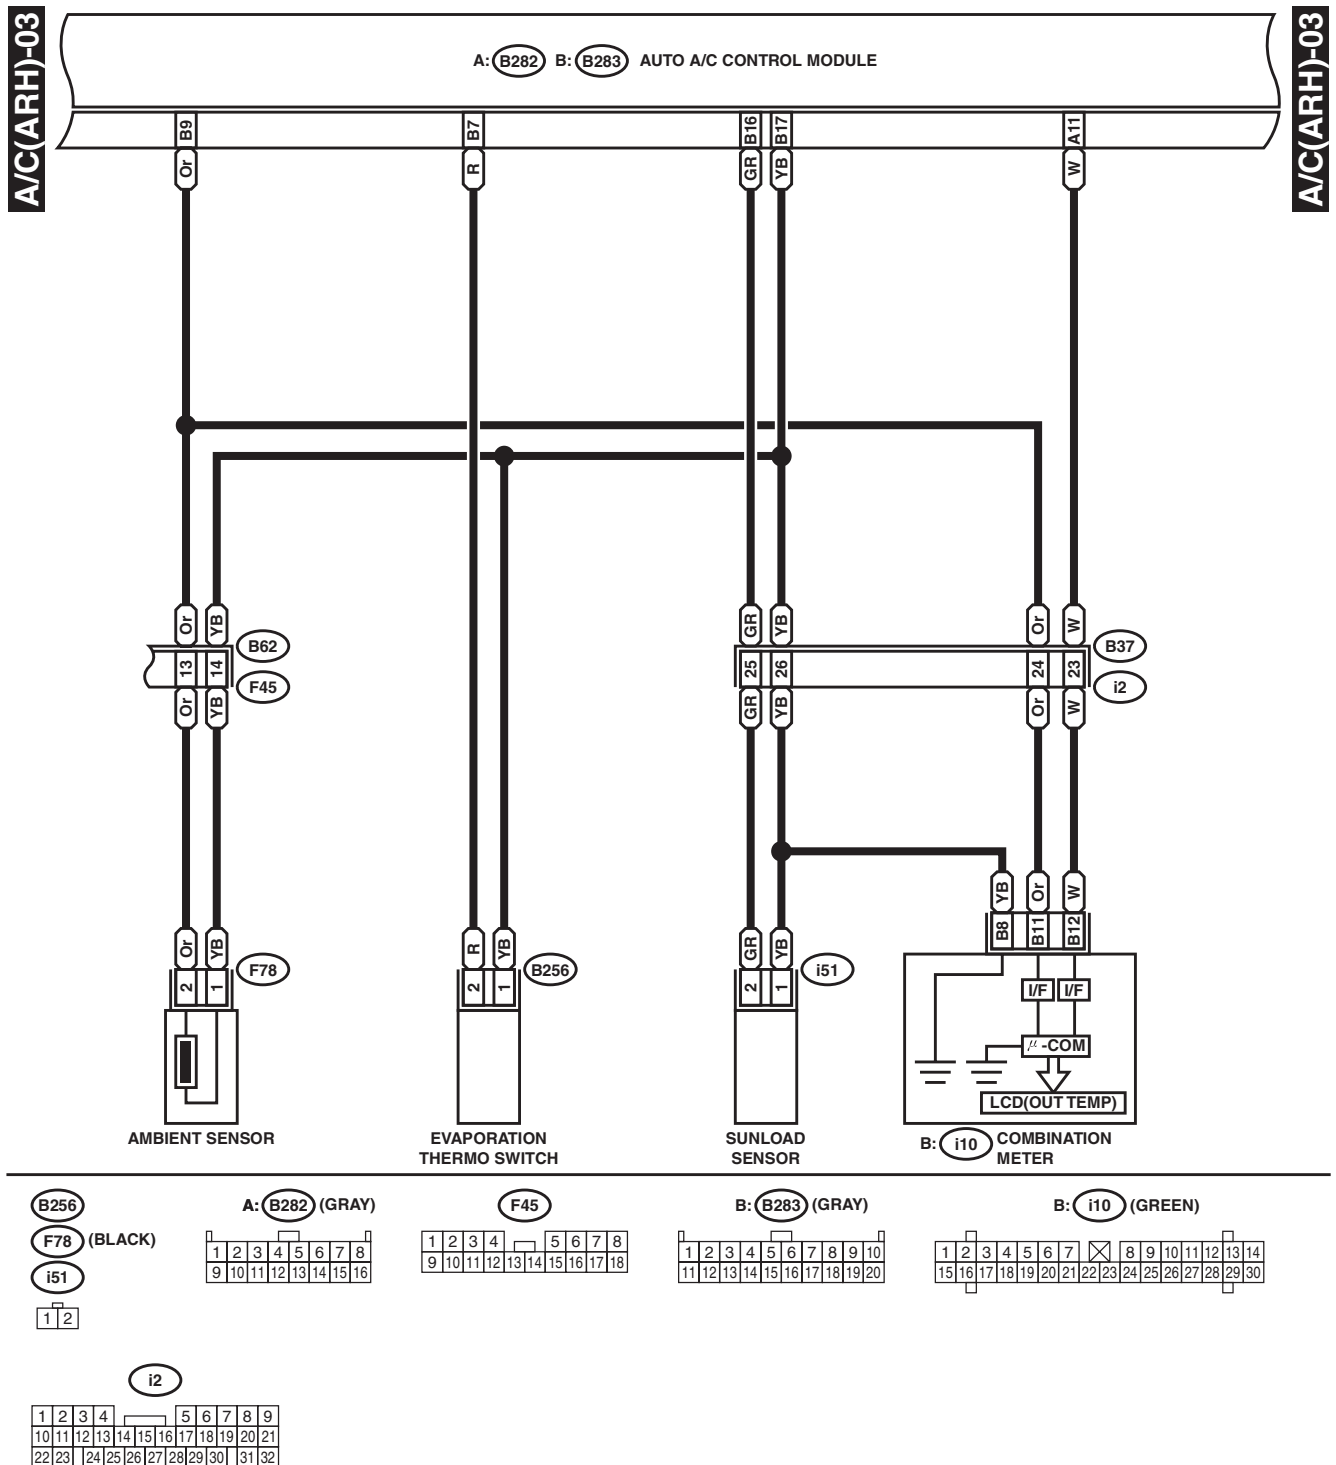

WI-02277

Air Conditioning System

WIRING SYSTEM

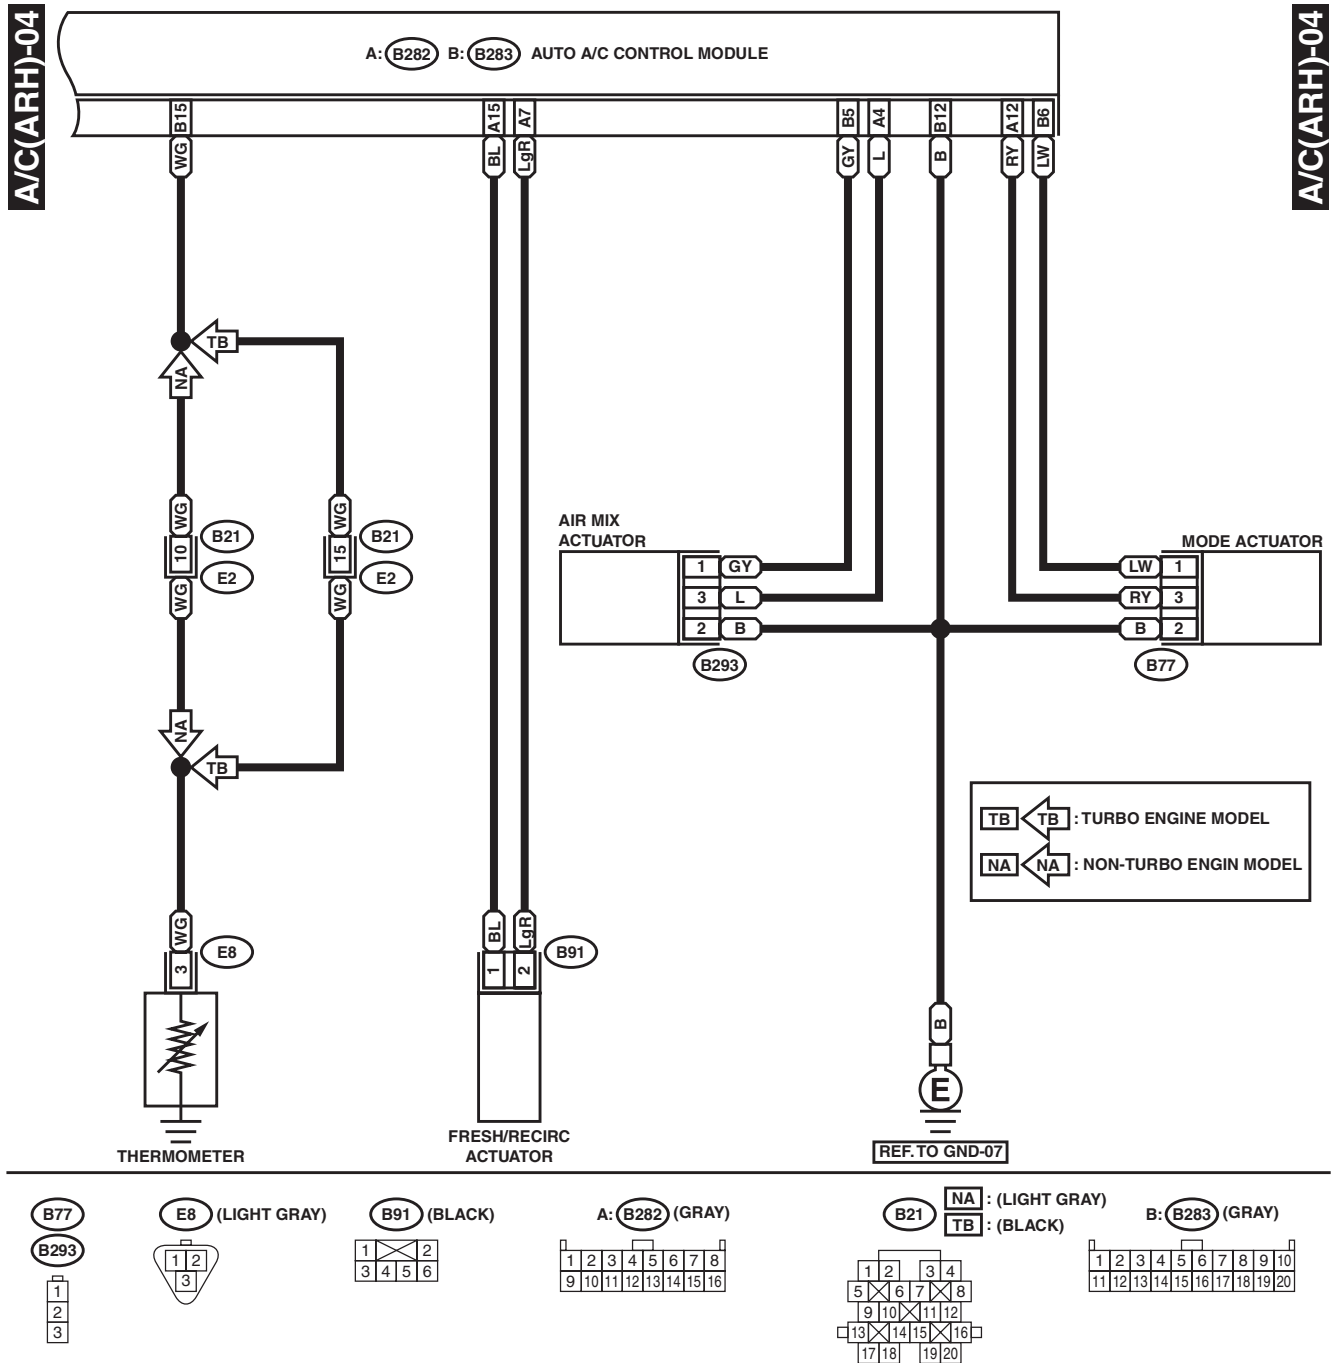

WI-02278


Anti-lock Brake System

WIRING SYSTEM

7. Anti-lock Brake System

A: WIRING DIAGRAM


1. LHD MODEL

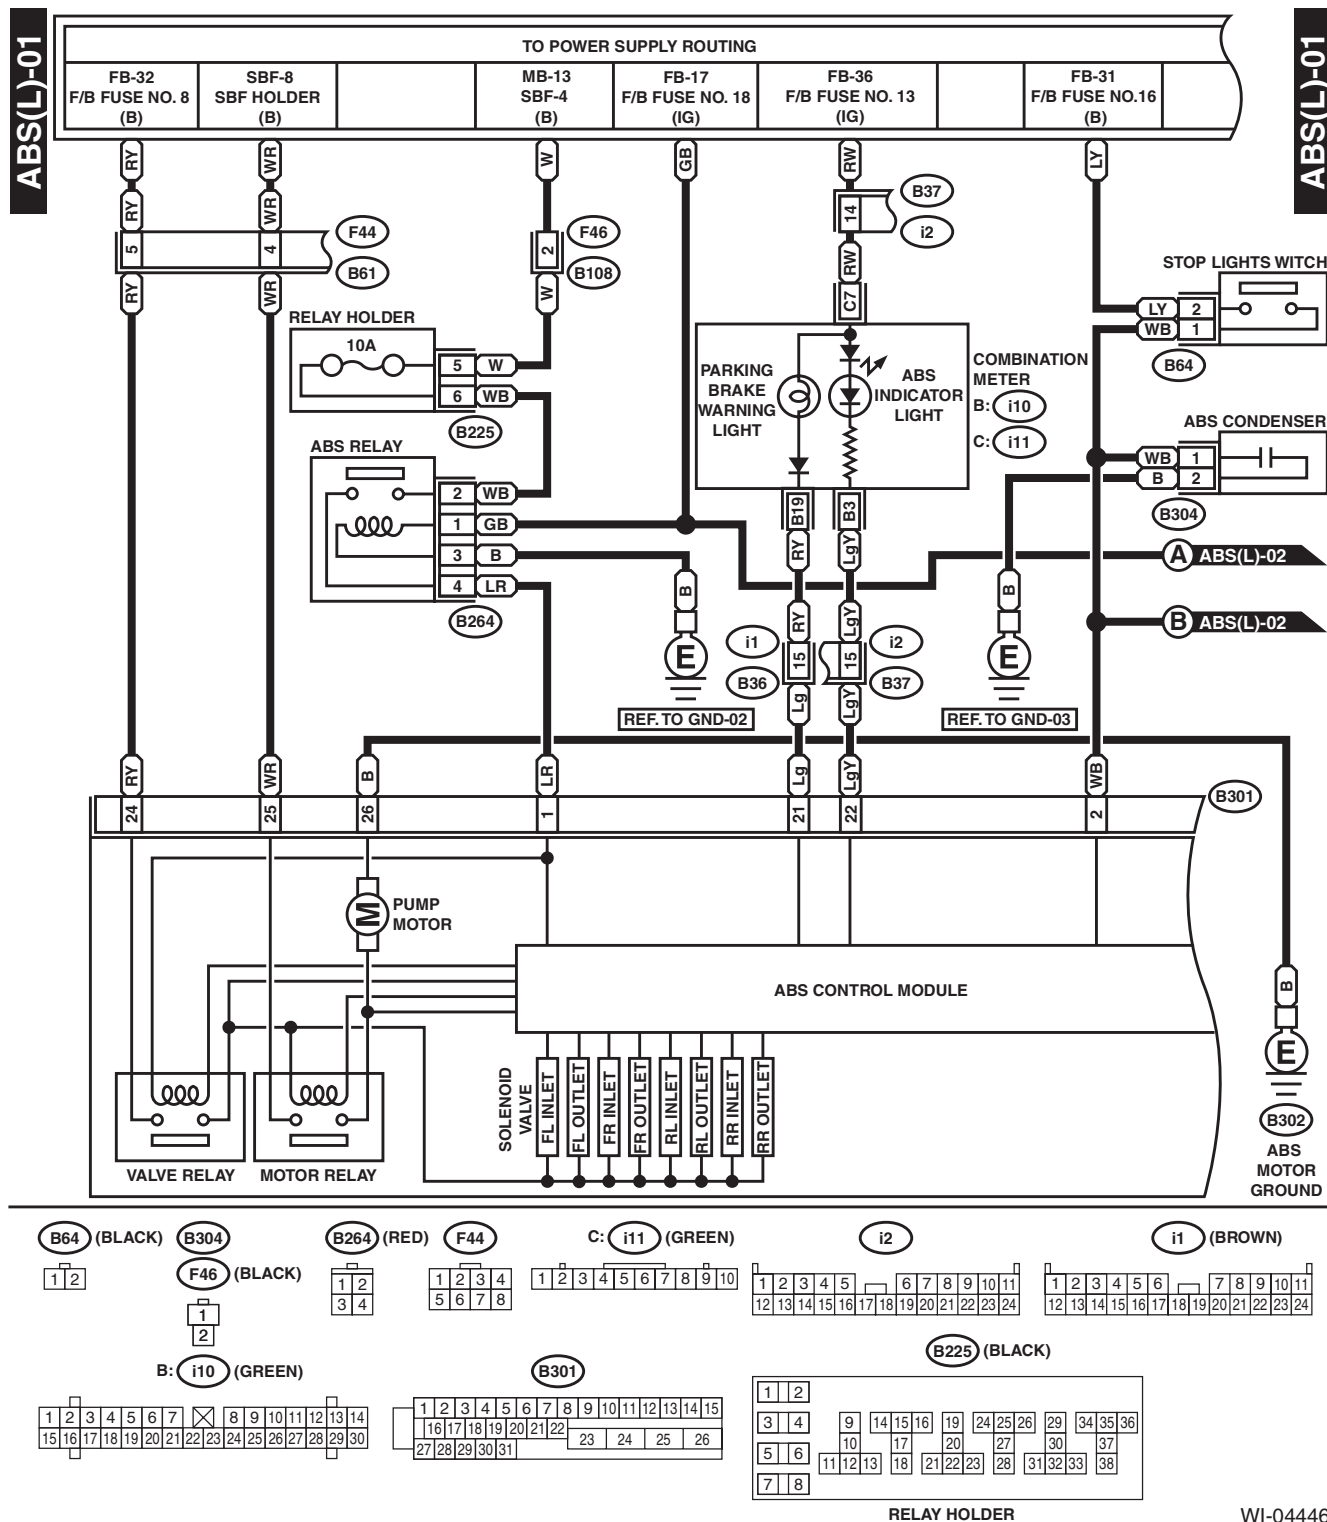

WI-04446

Anti-lock Brake System


WIRING SYSTEM

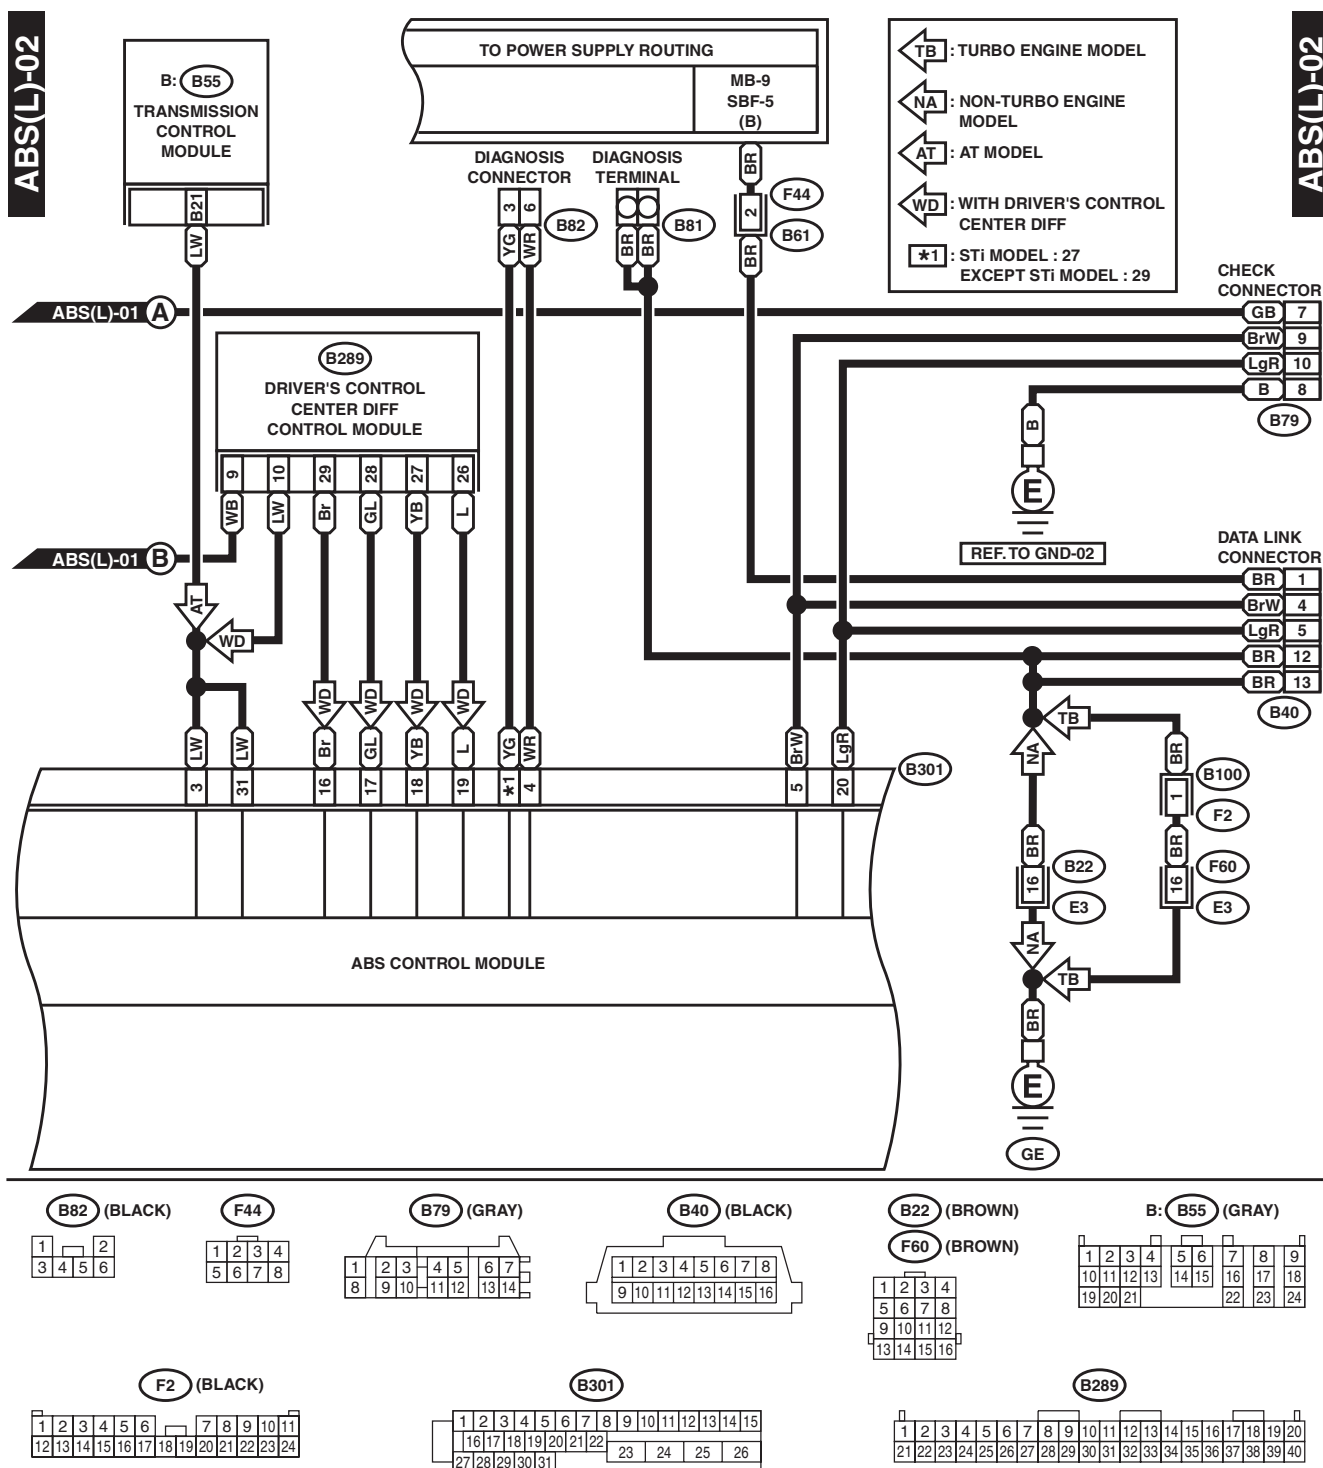

WI-04447

Anti-lock Brake System

WIRING SYSTEM

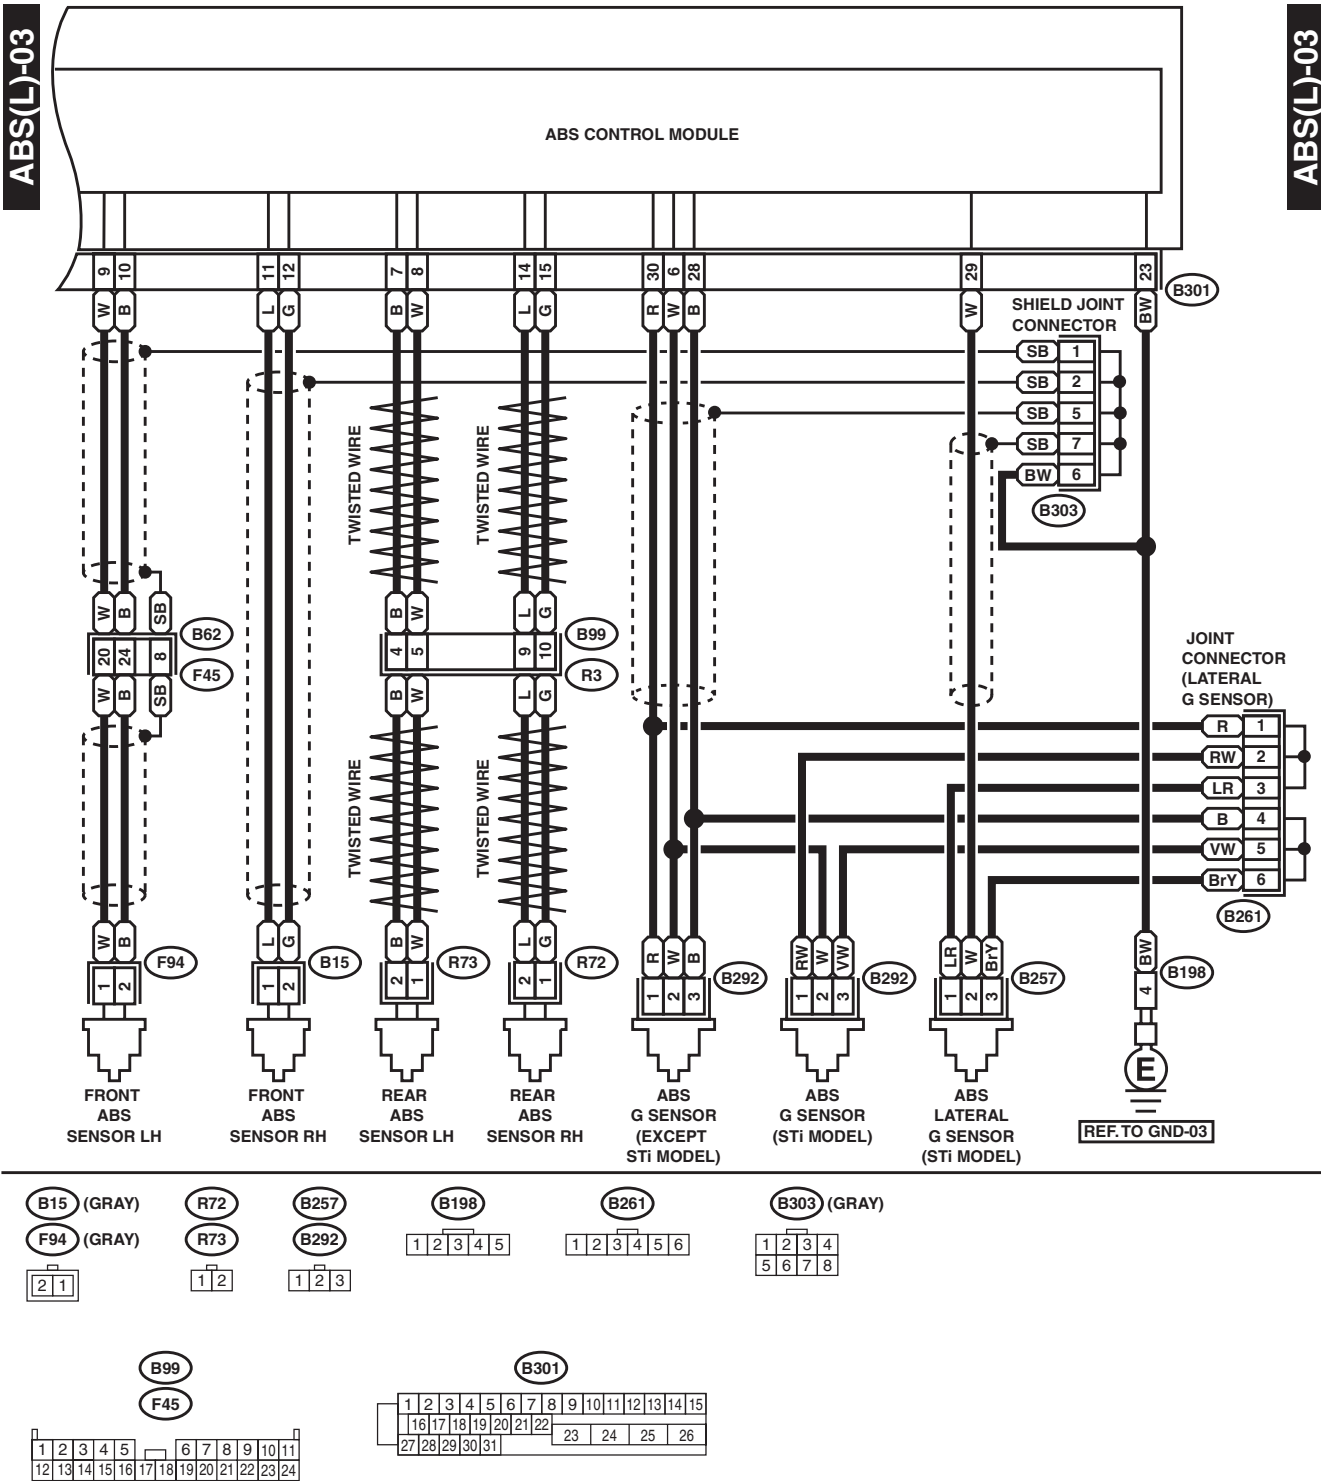



WI-02281

Anti-lock Brake System

WIRING SYSTEM


2. RHD MODEL

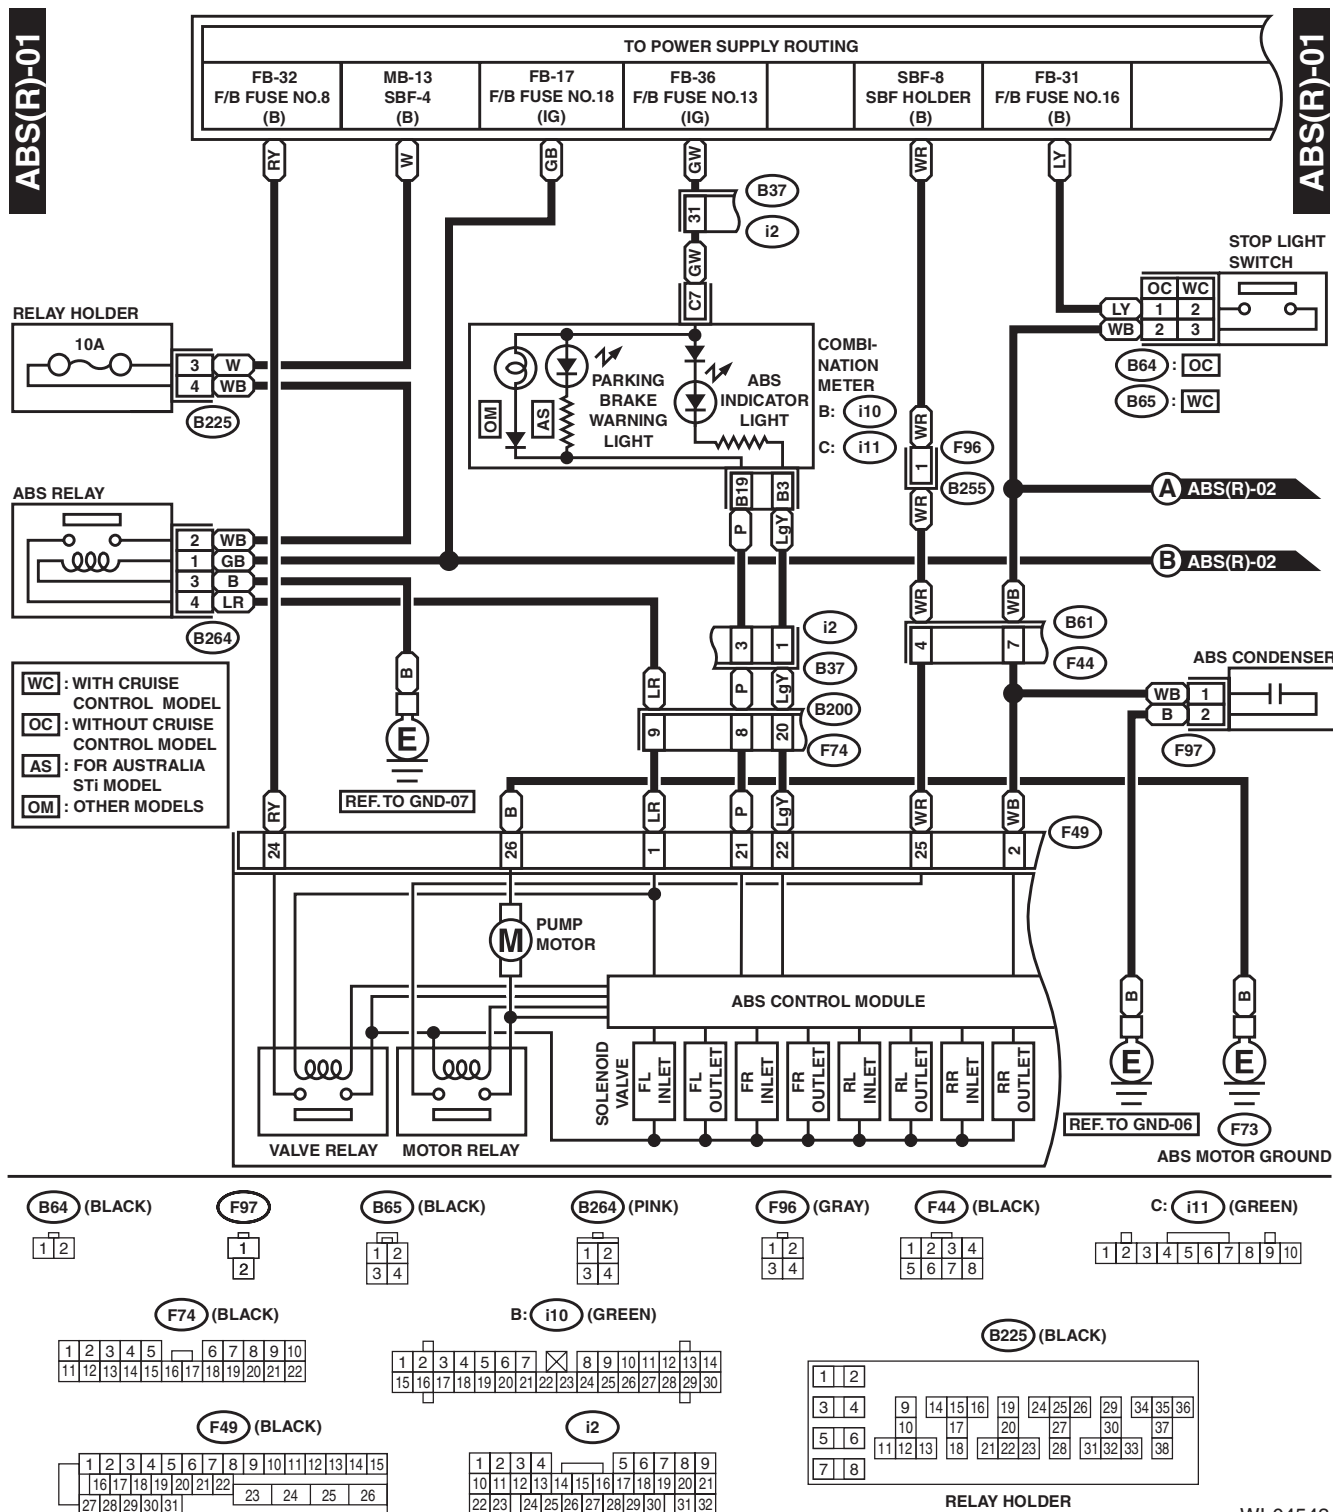

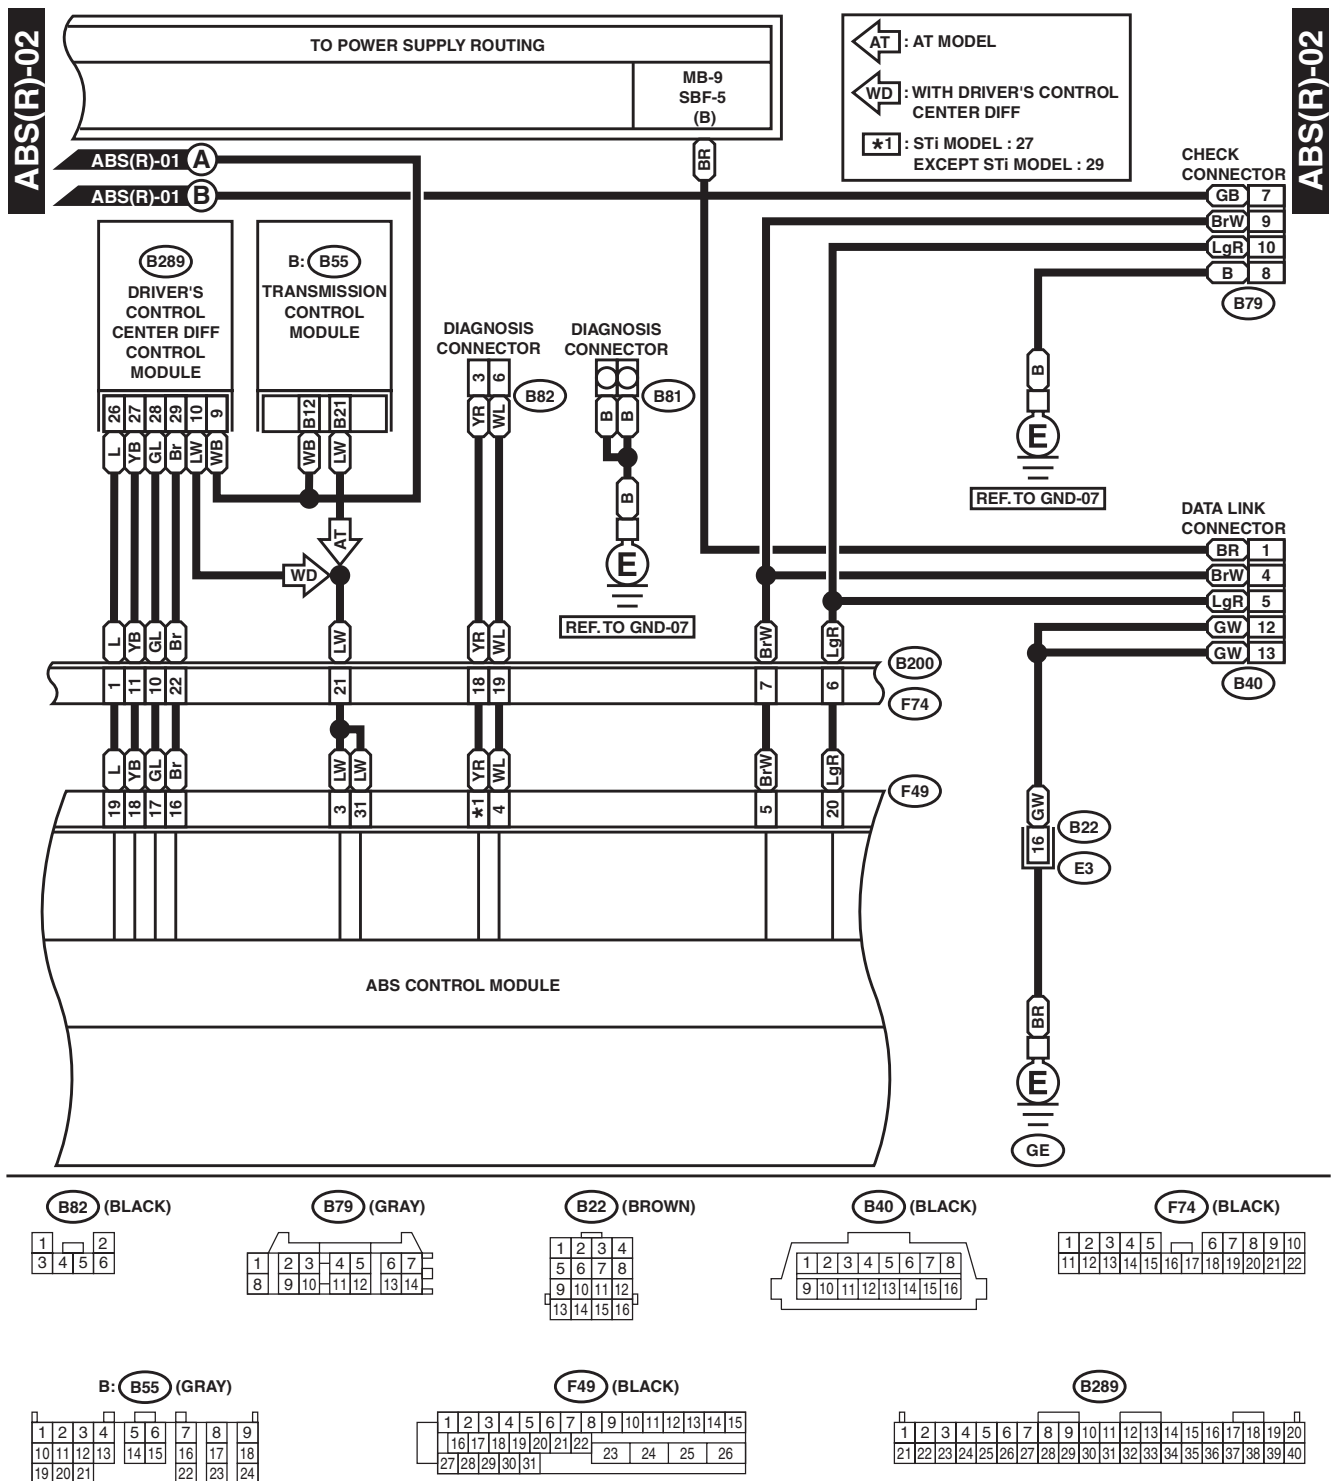

WI-04448


WIRING SYSTEM



8. AT Control System

A: WIRING DIAGRAM

1. LHD MODEL

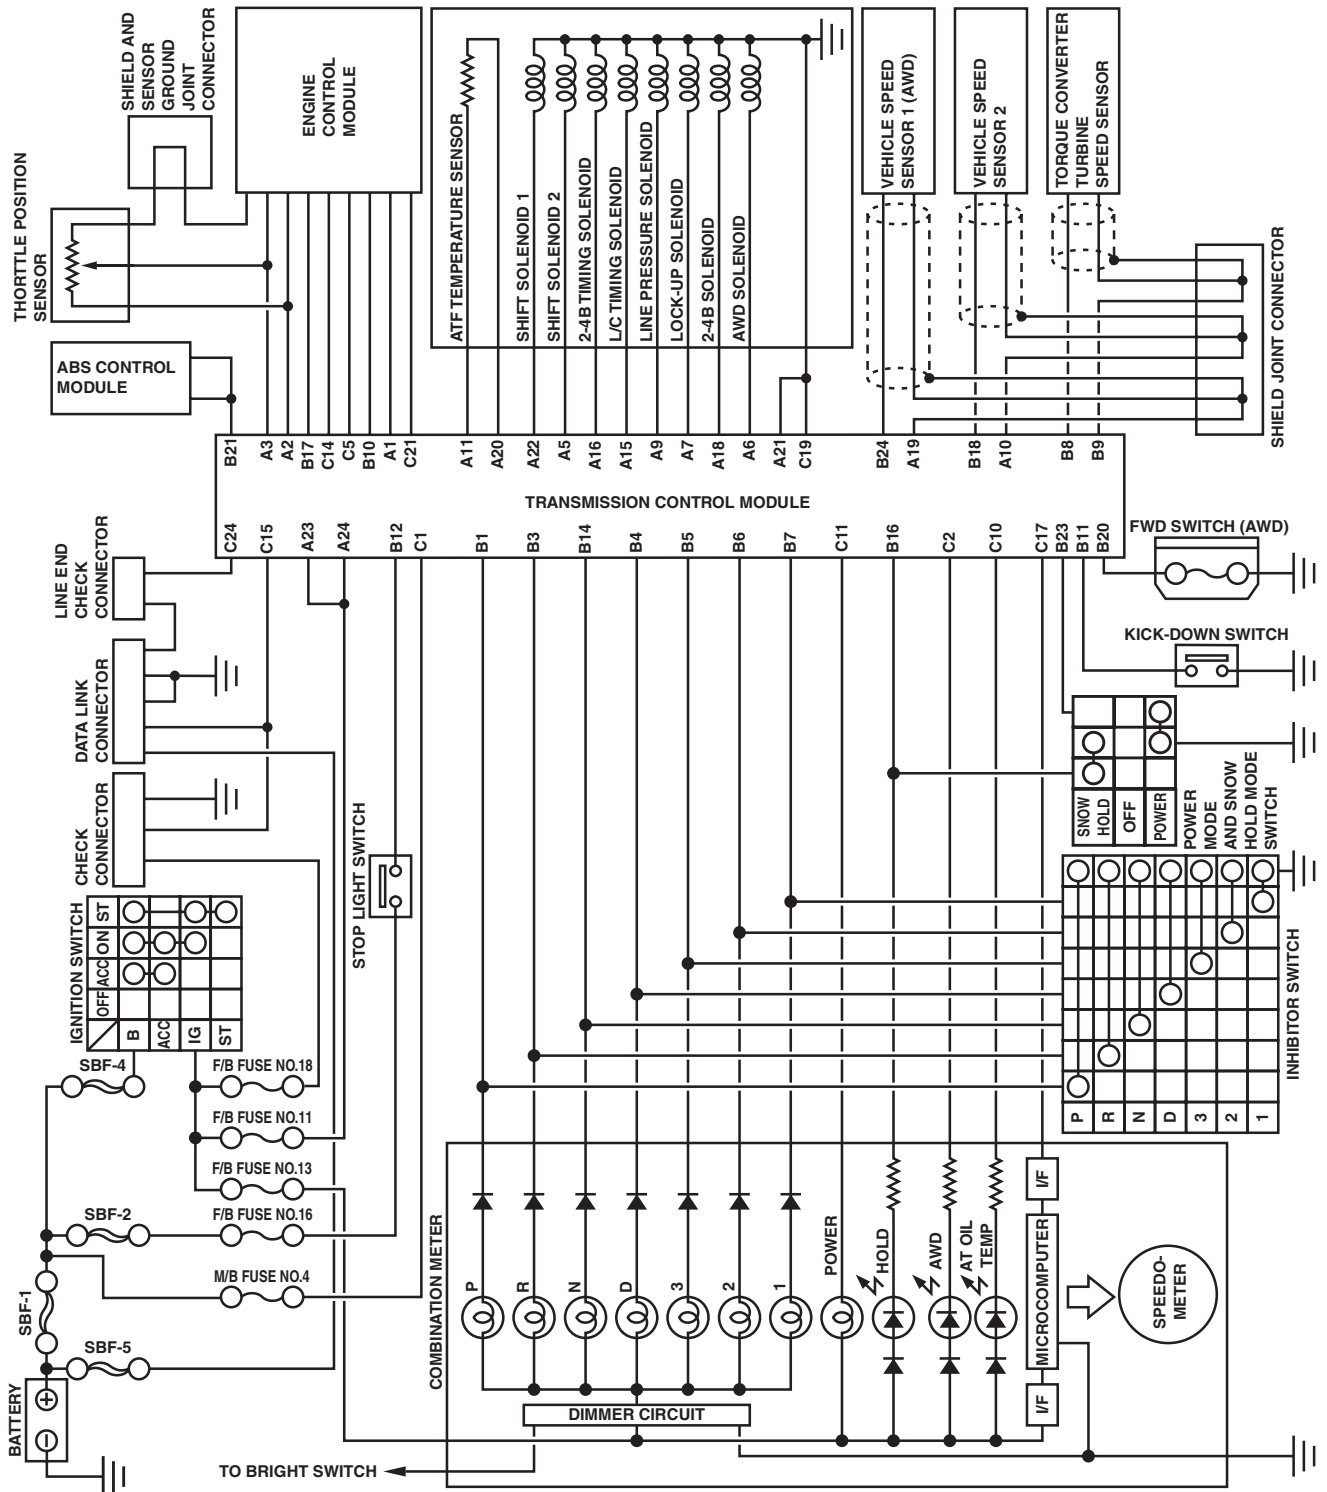


WI-04450

AT Control System


WIRING SYSTEM

AT(L)-01

AT(L)-01

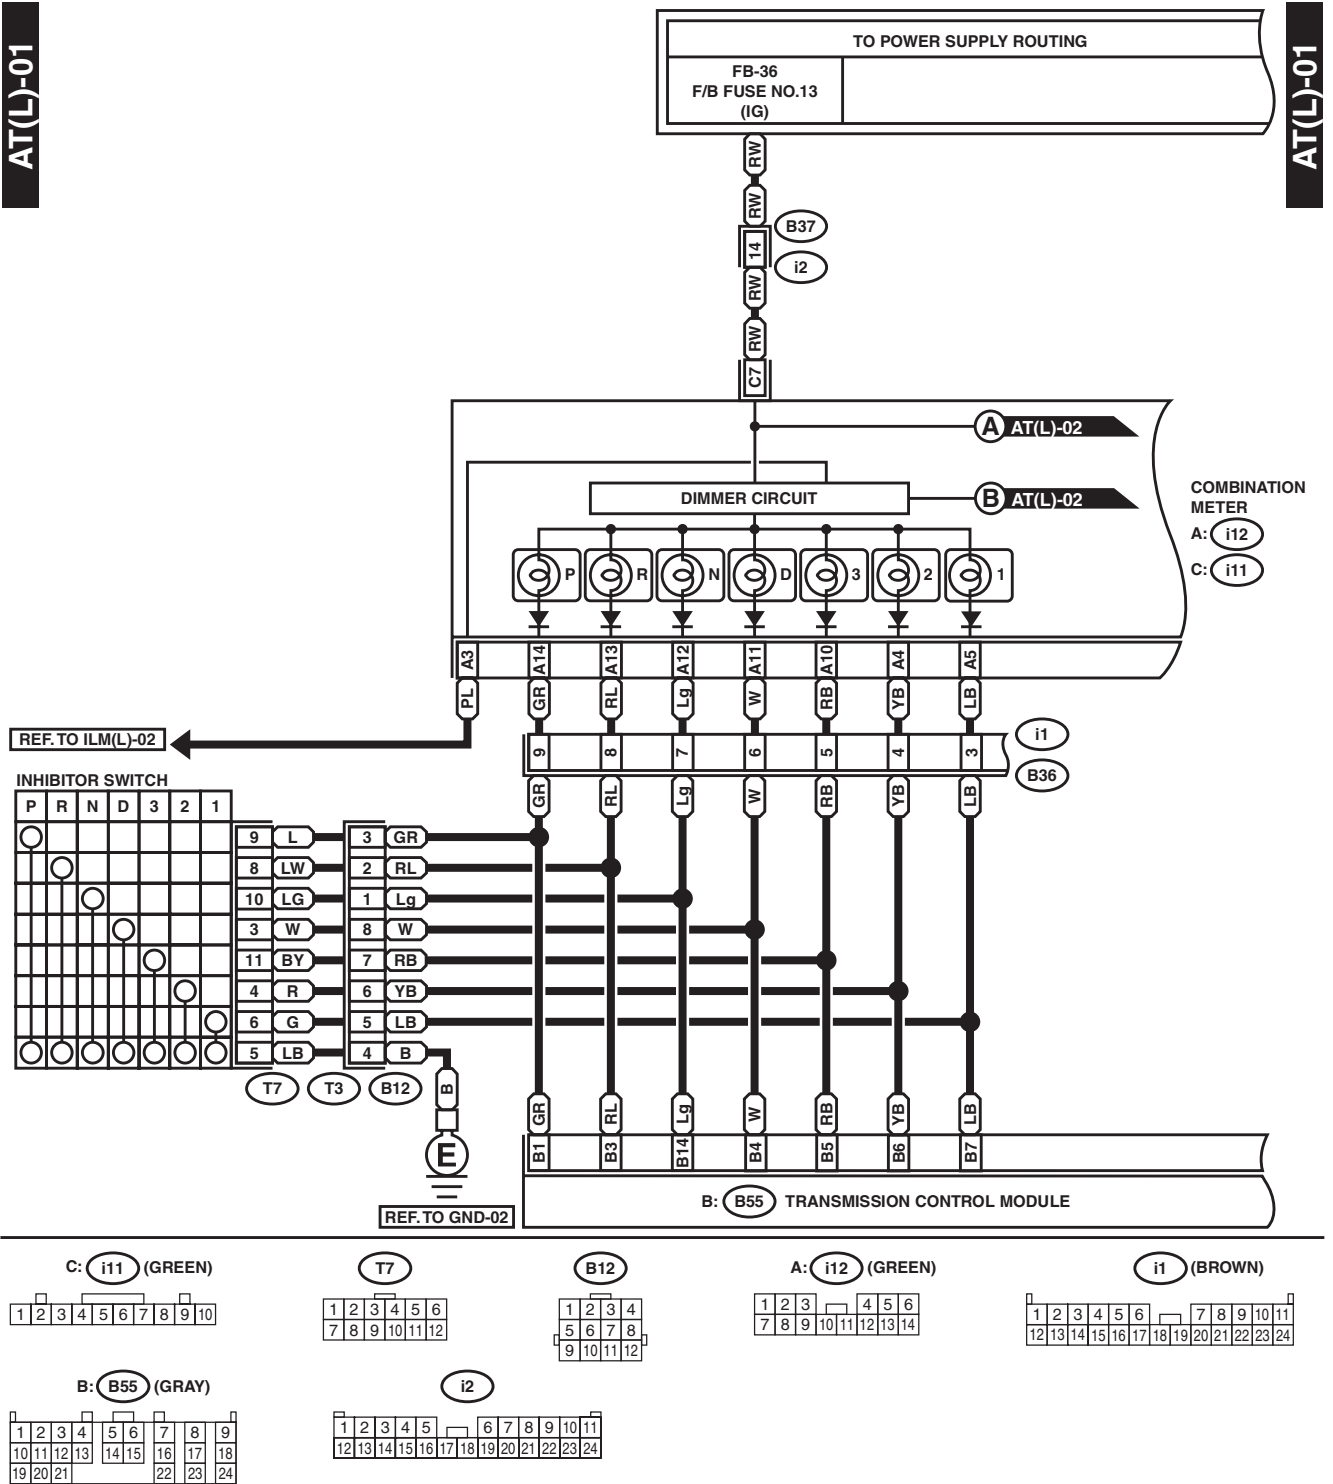


WI-02285

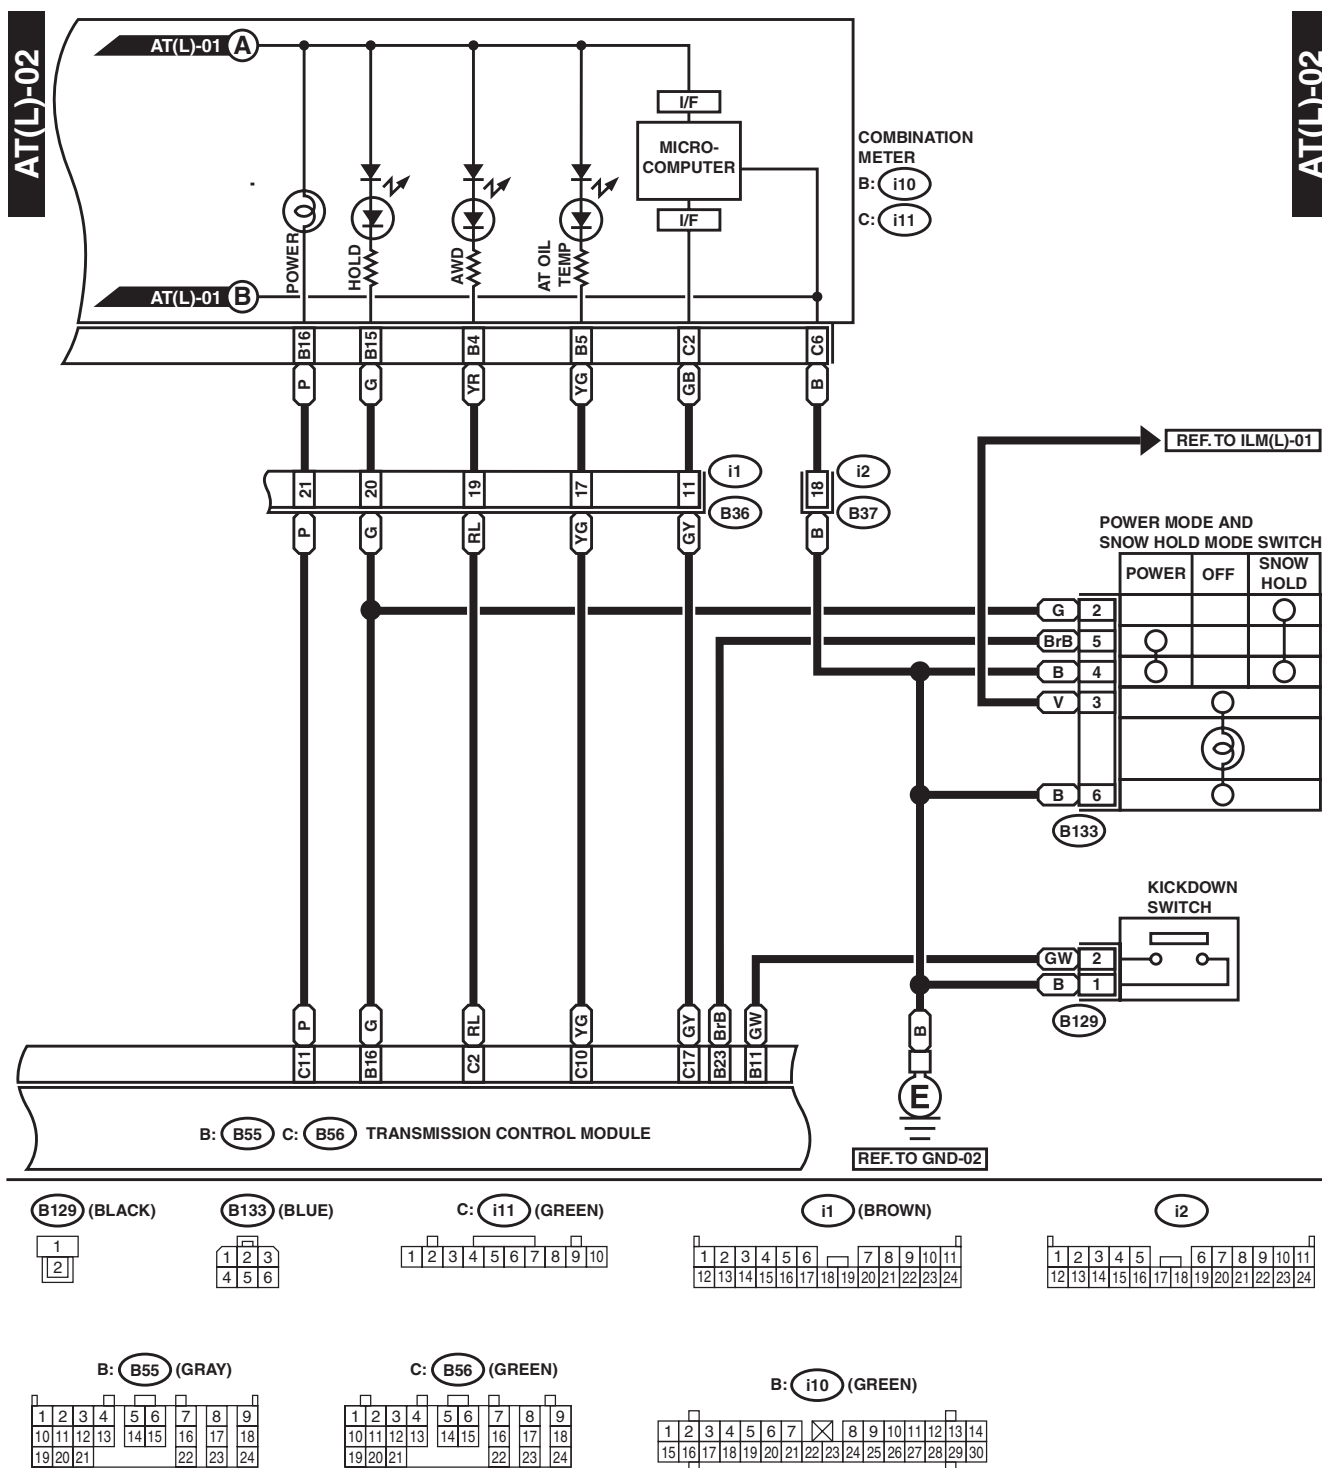

WI-04451

AT Control System


WIRING SYSTEM

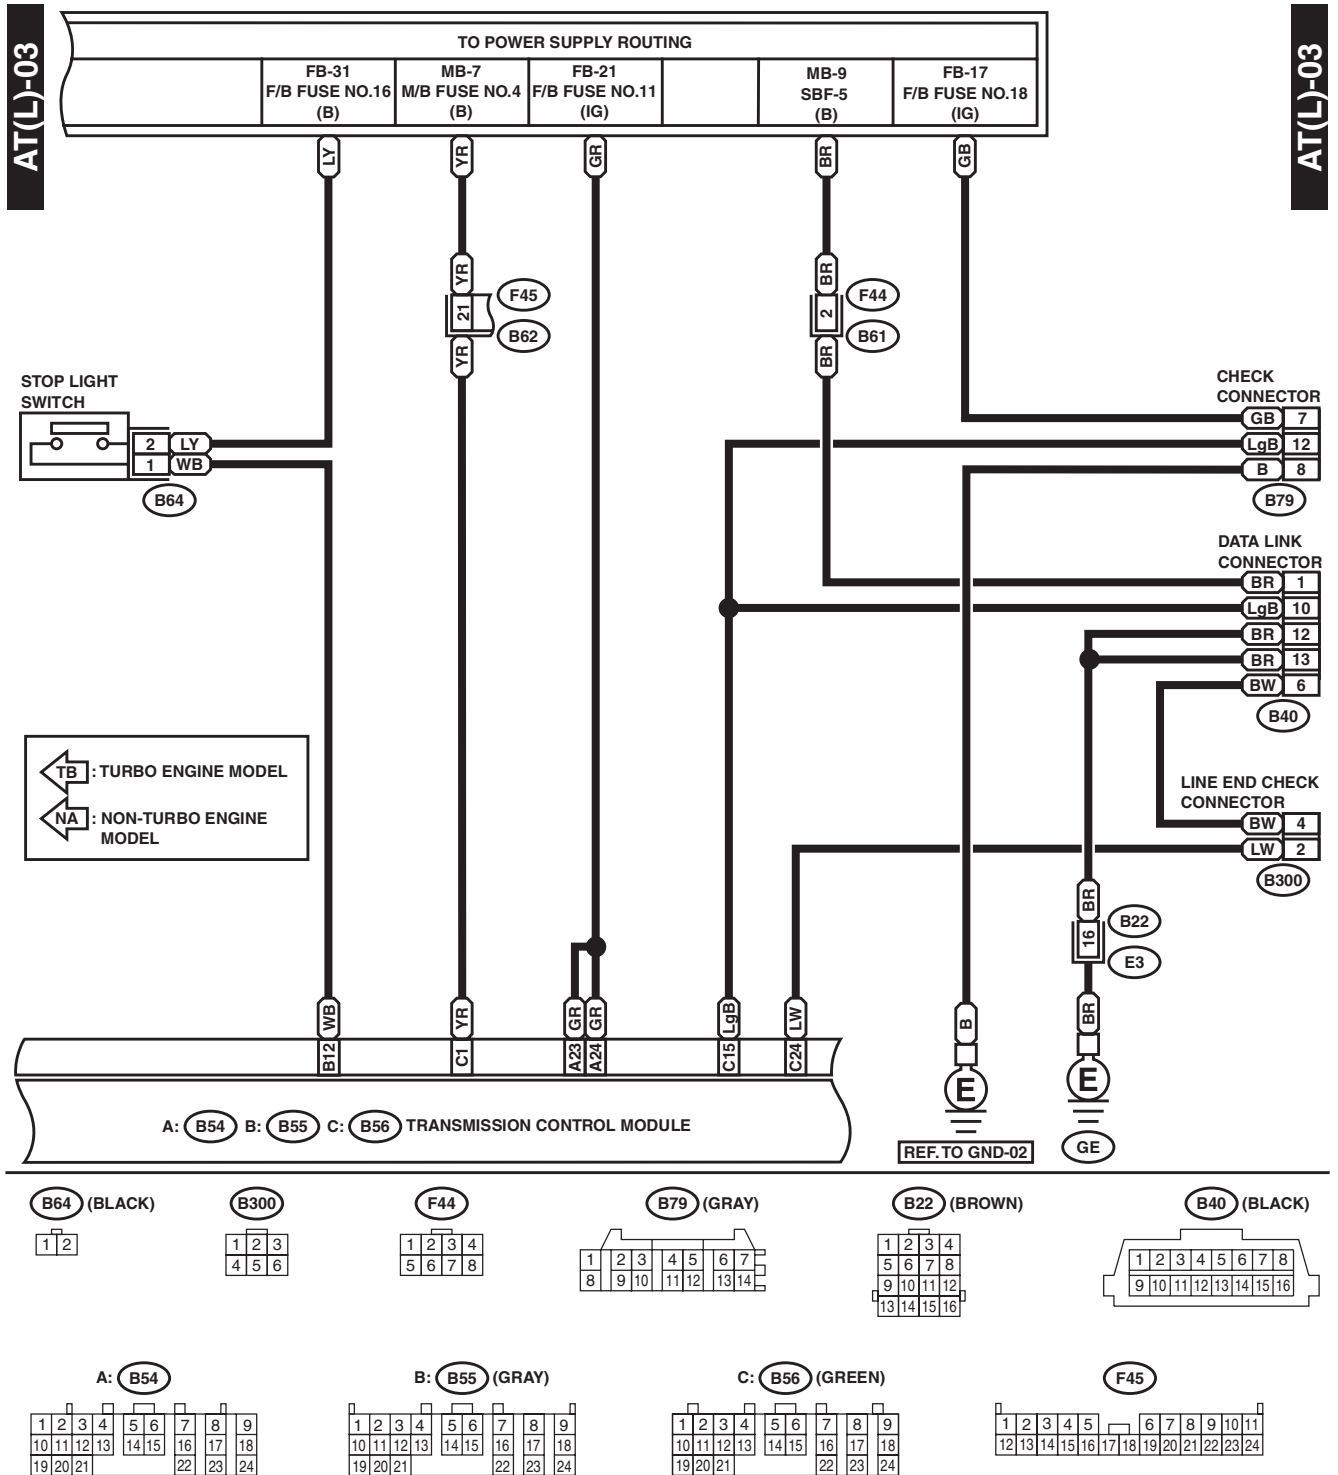

WI-02287

AT Control System


WIRING SYSTEM

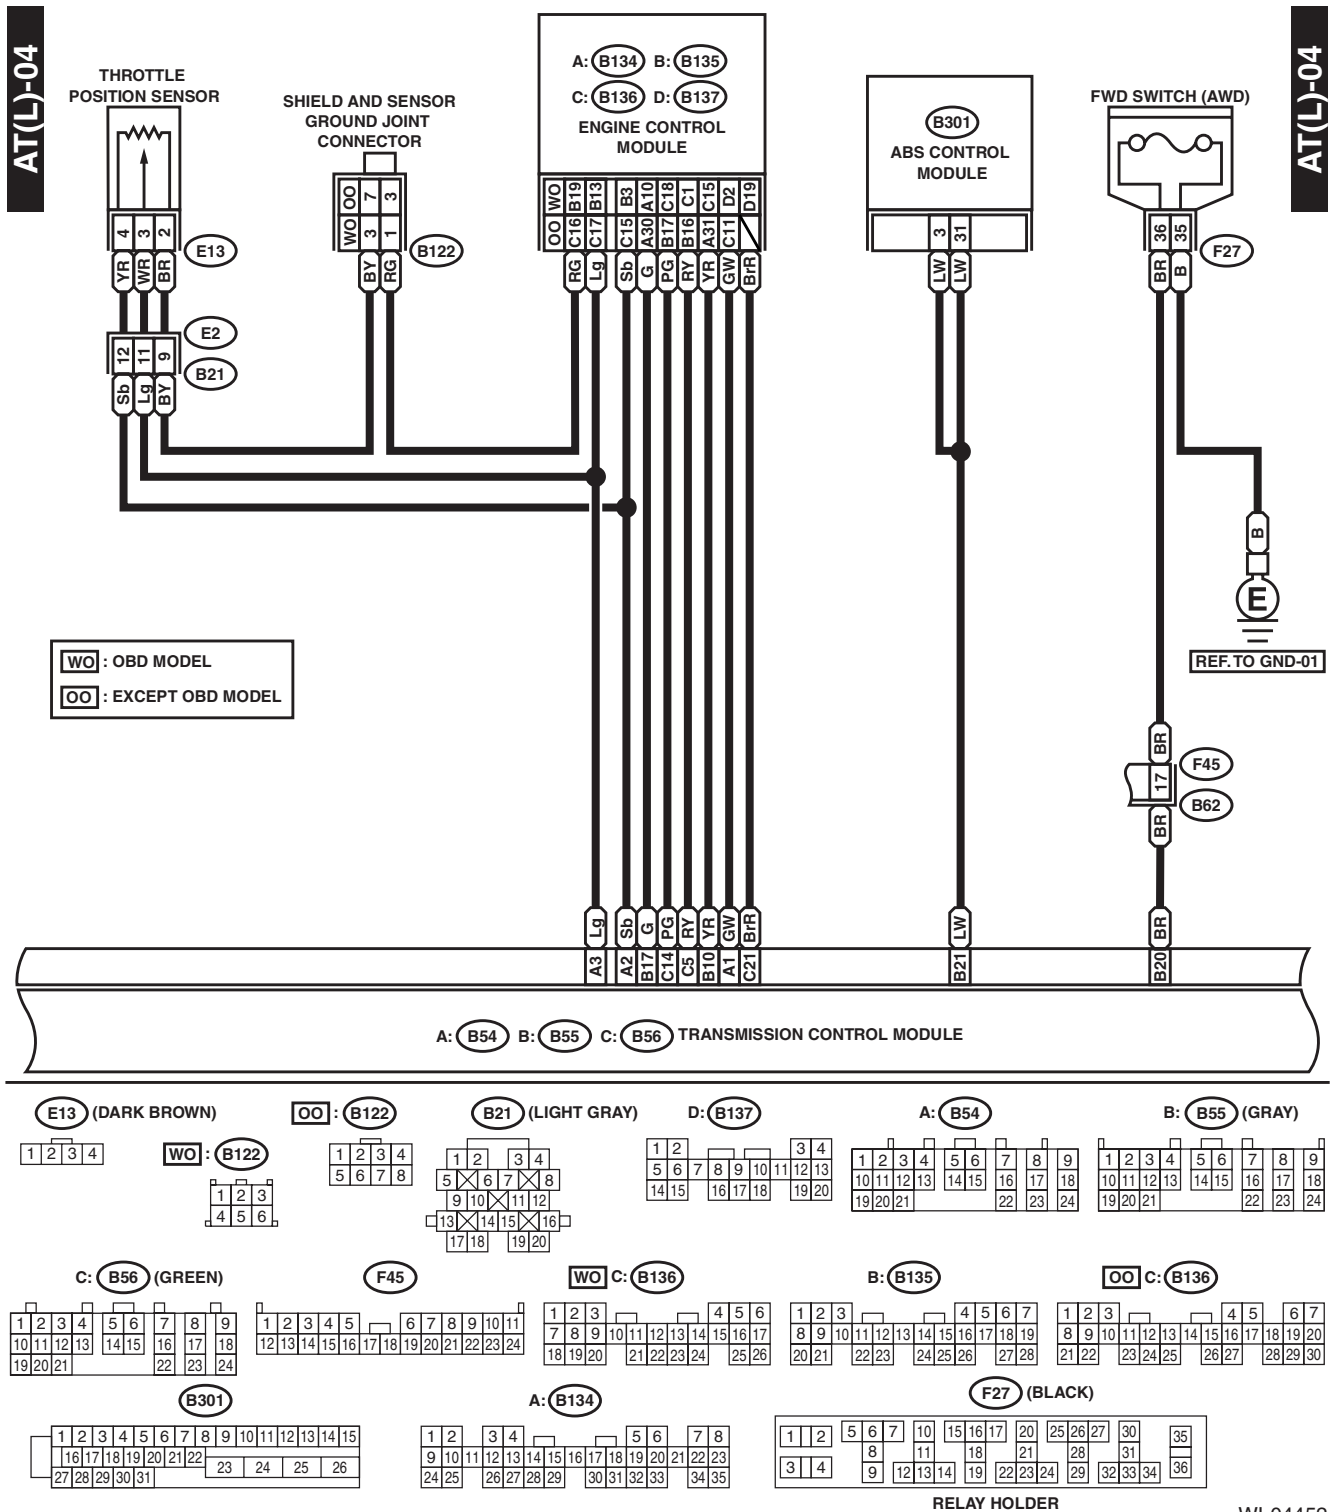

WI-04452

AT Control System

WIRING SYSTEM

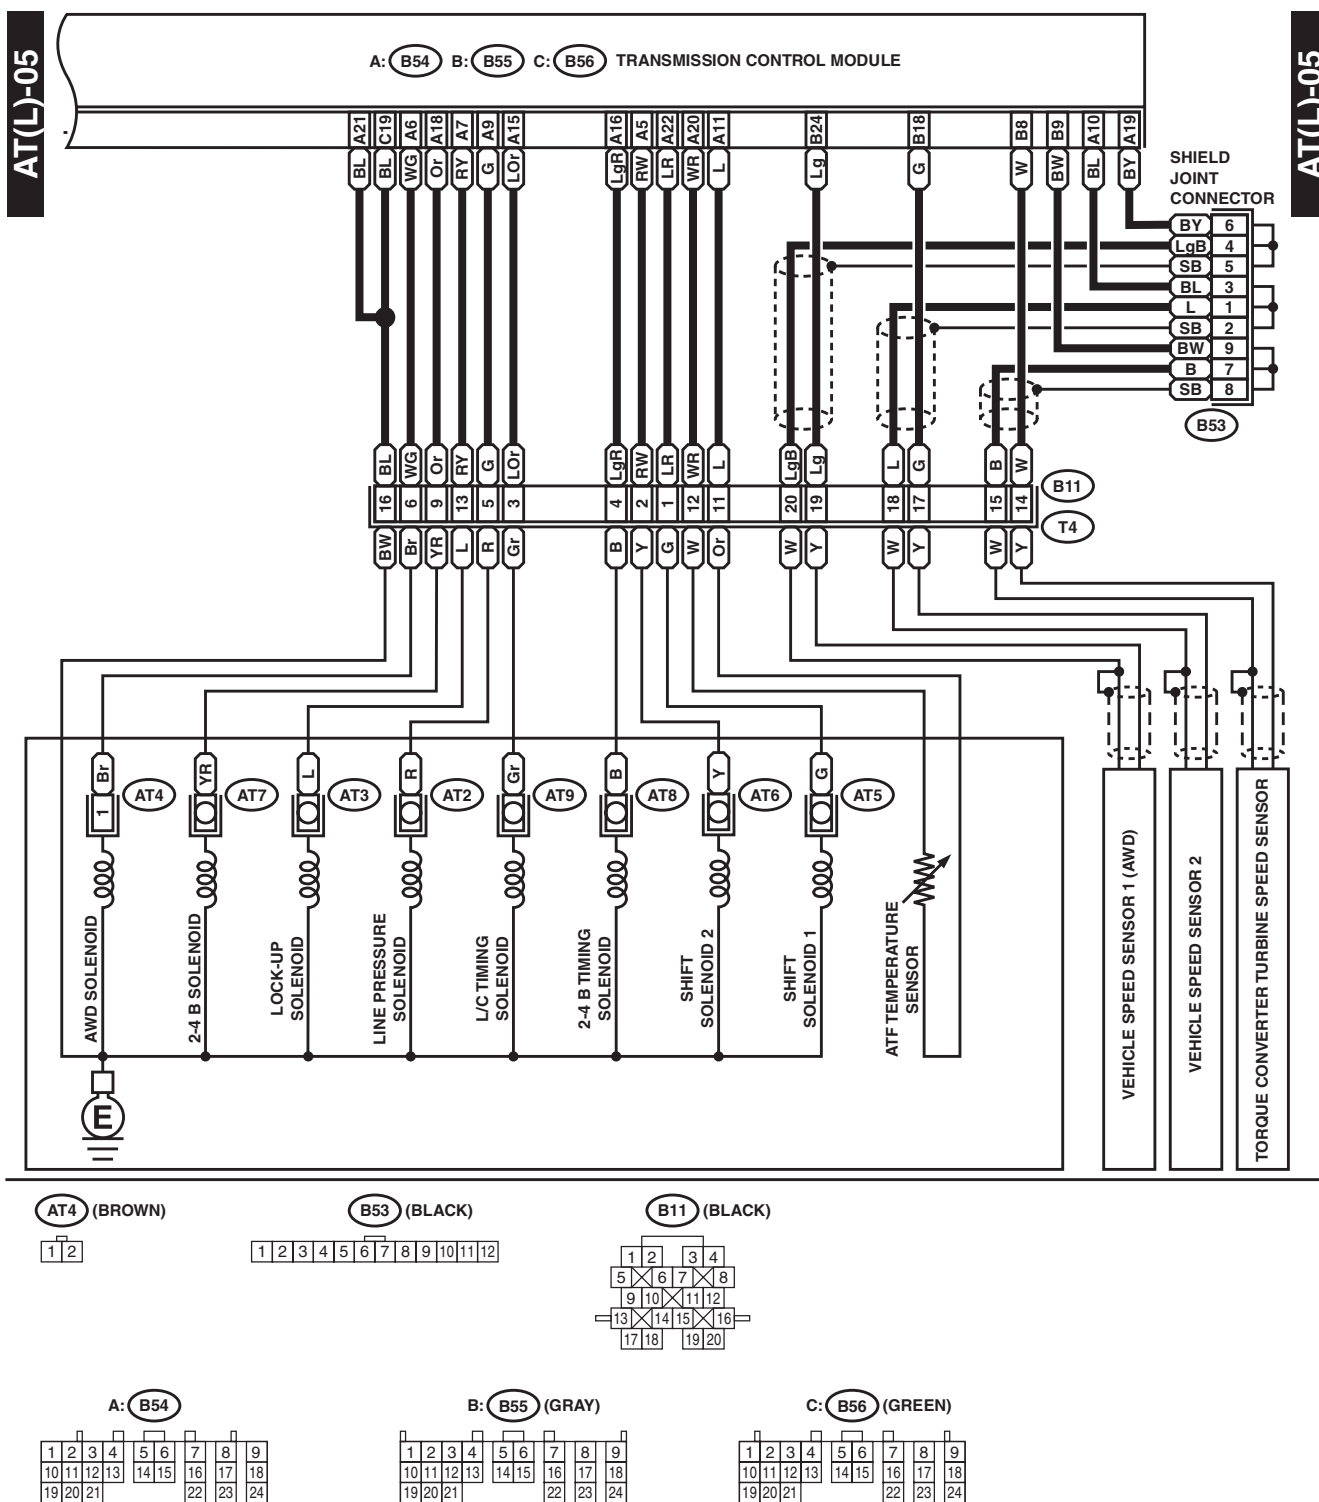


WI-02289

AT Control System

WIRING SYSTEM

2. RHD MODEL

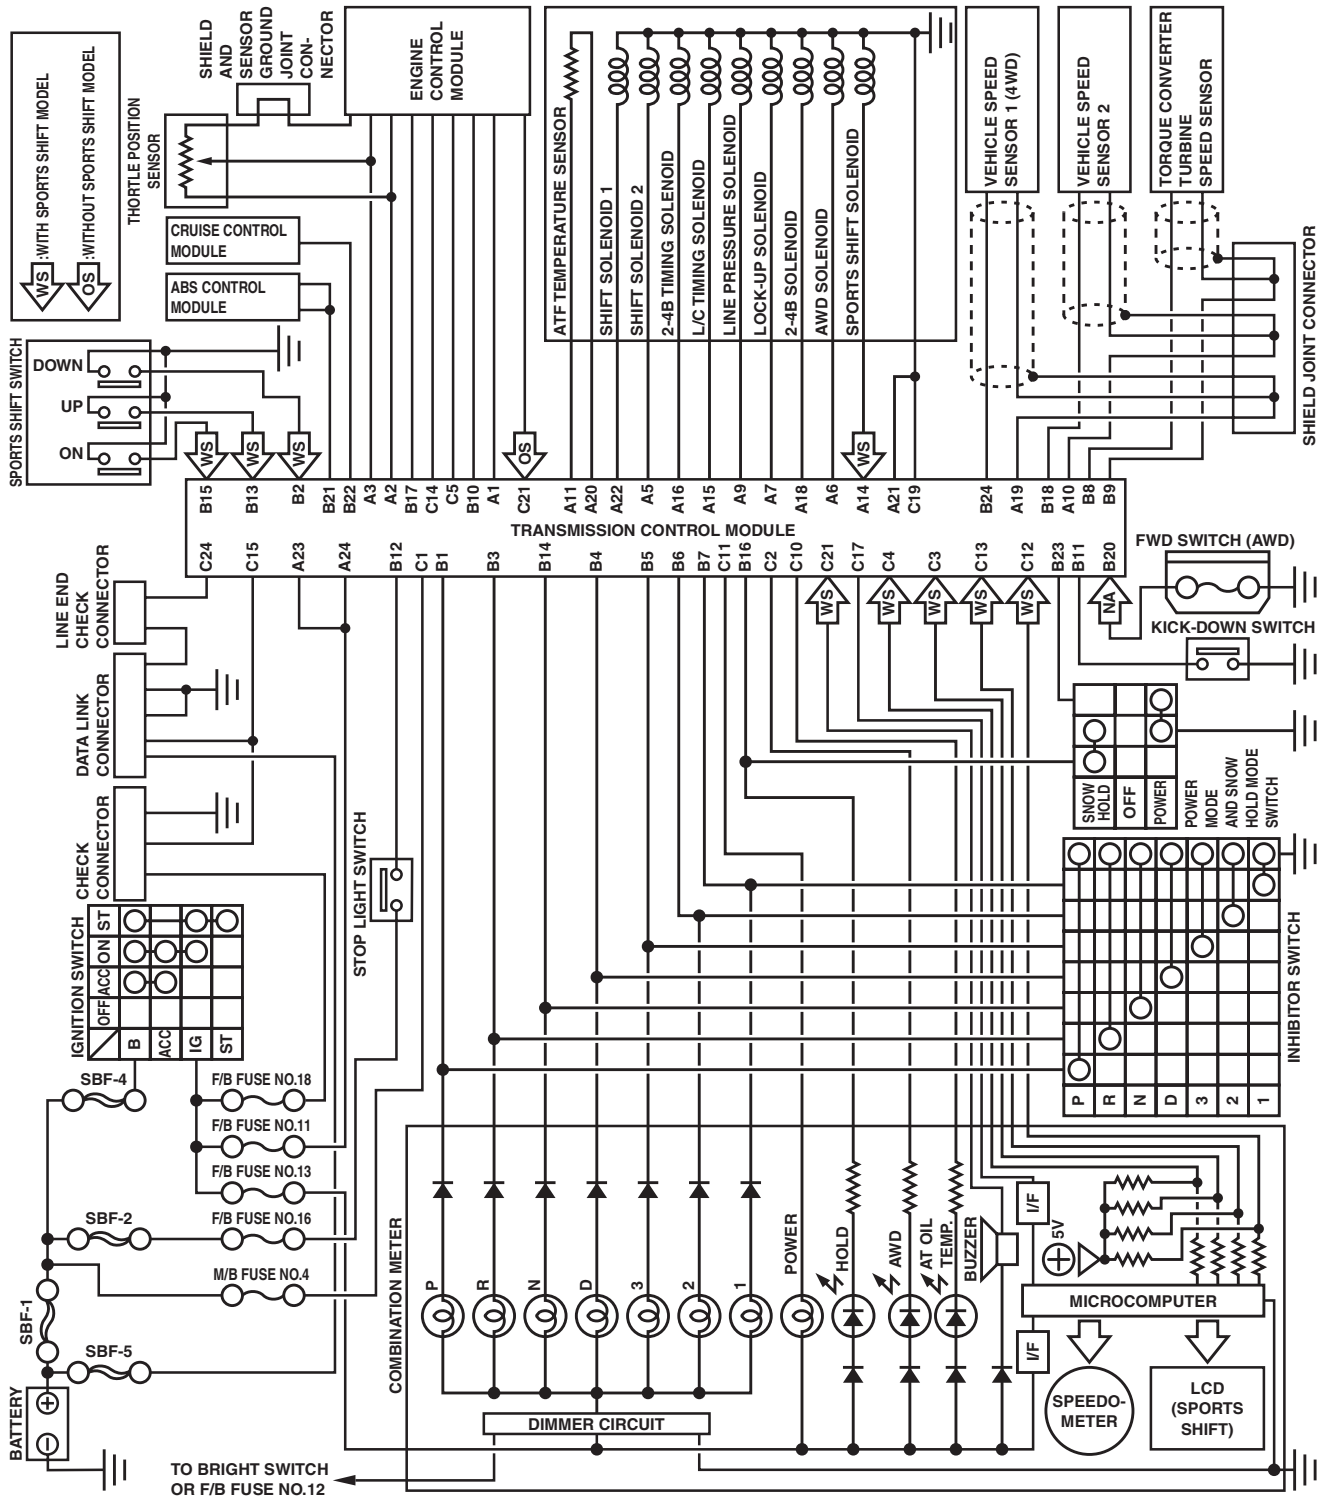

WI-04453

WIRING SYSTEM




WIRING SYSTEM



AT Control System



WIRING SYSTEM

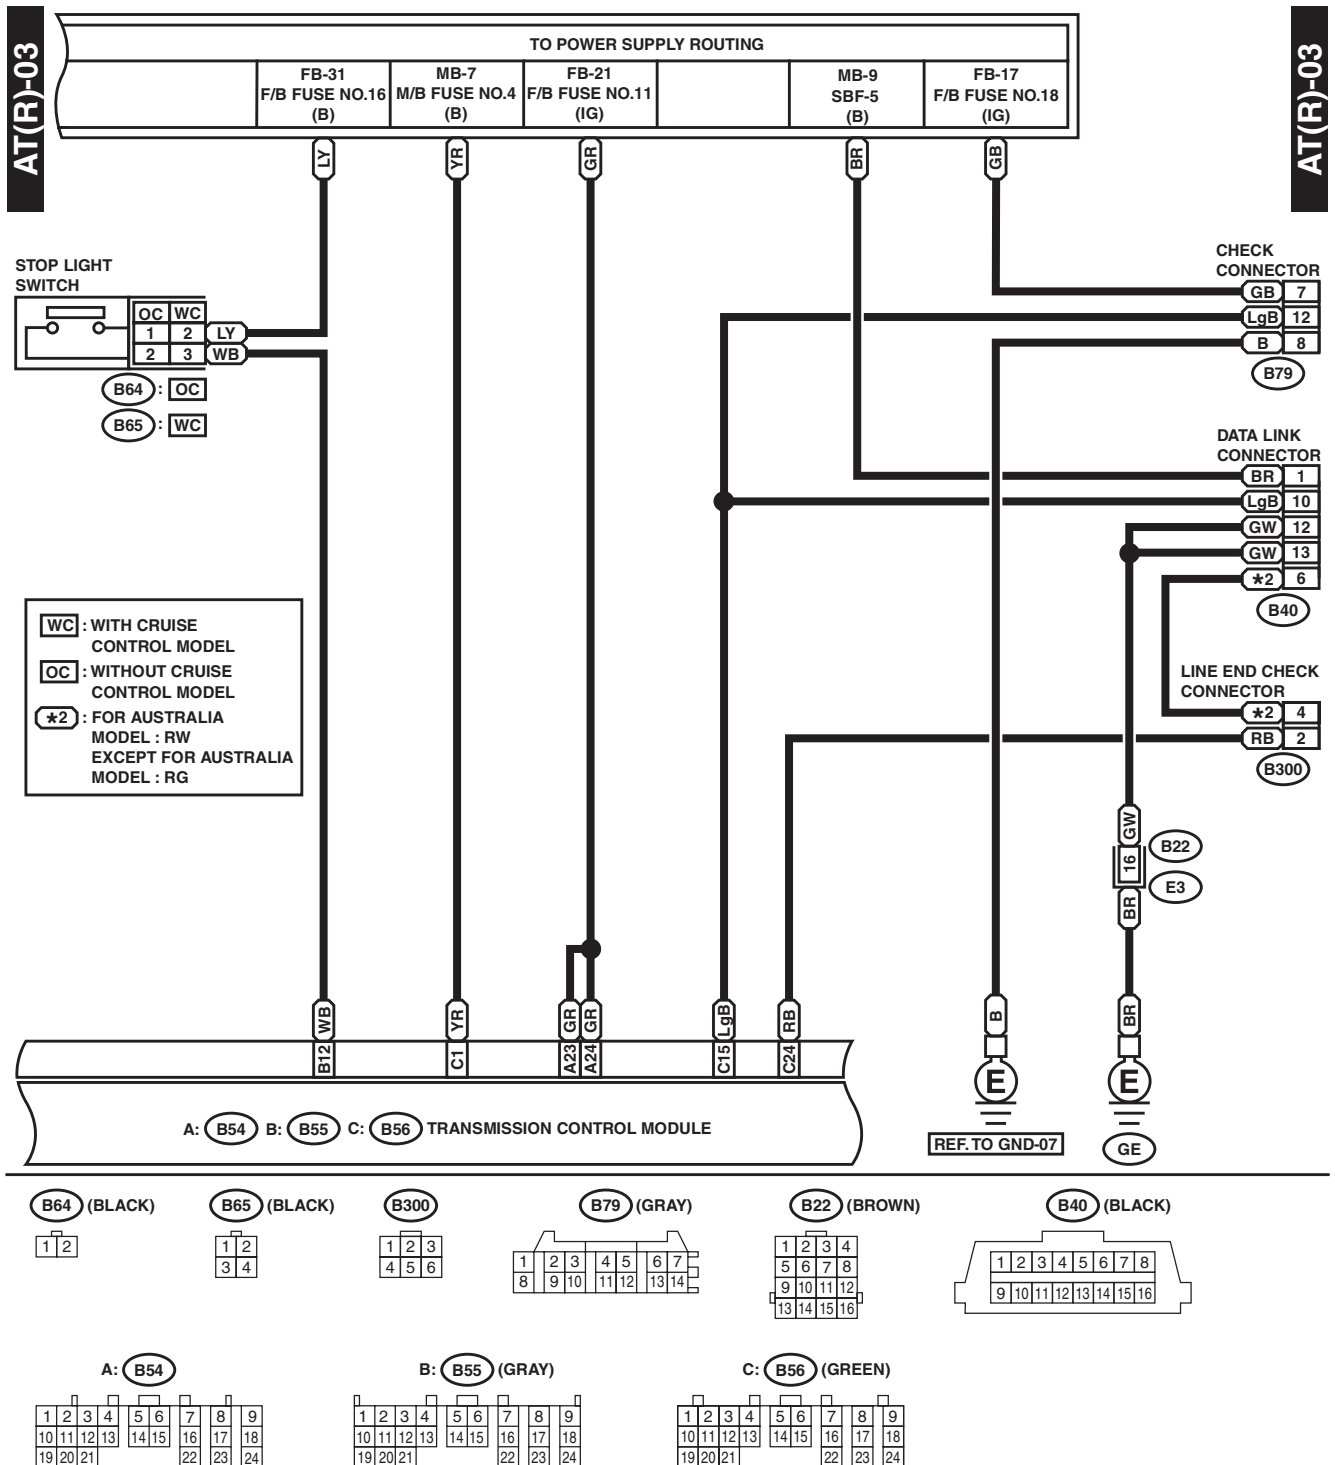

WI-02292


AT Control System

WIRING SYSTEM

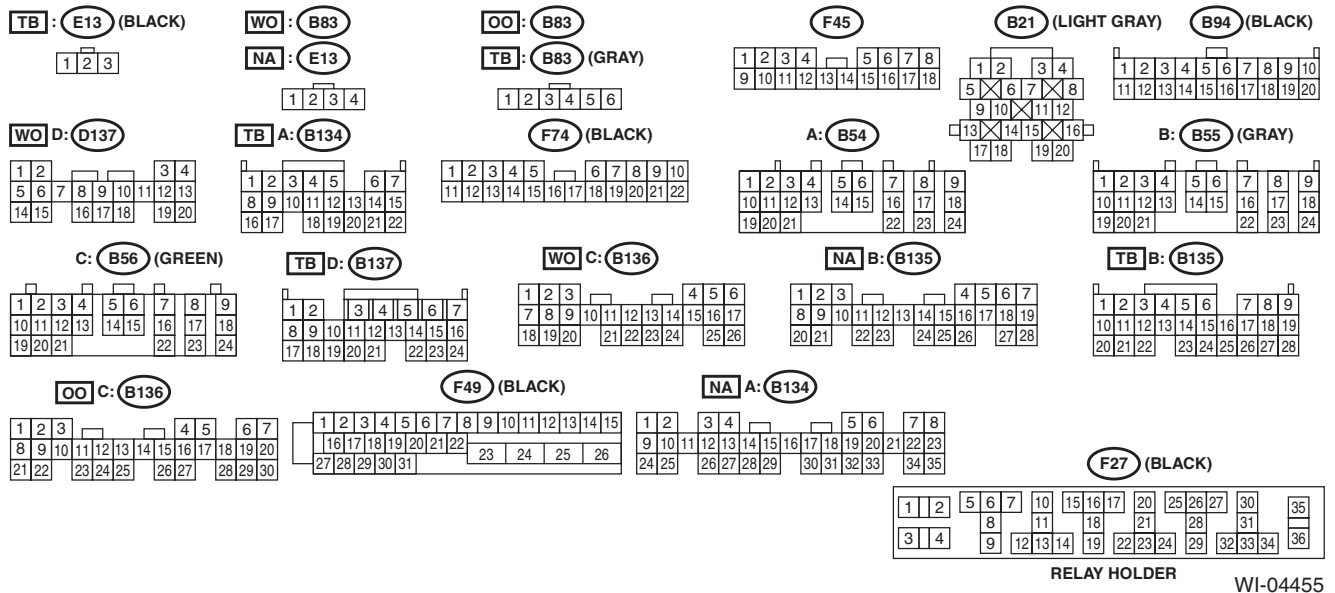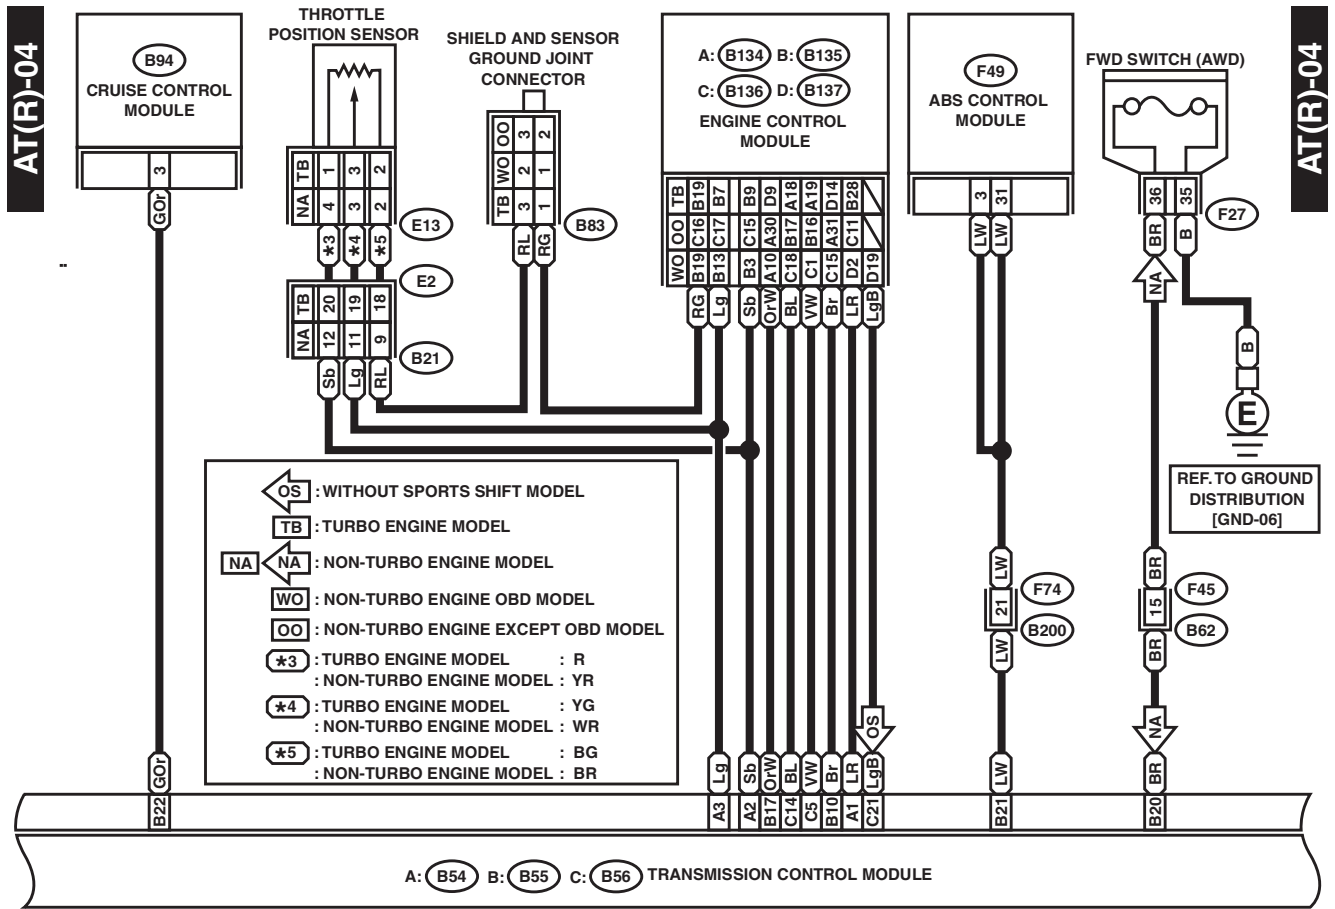

AT Control System

WIRING SYSTEM

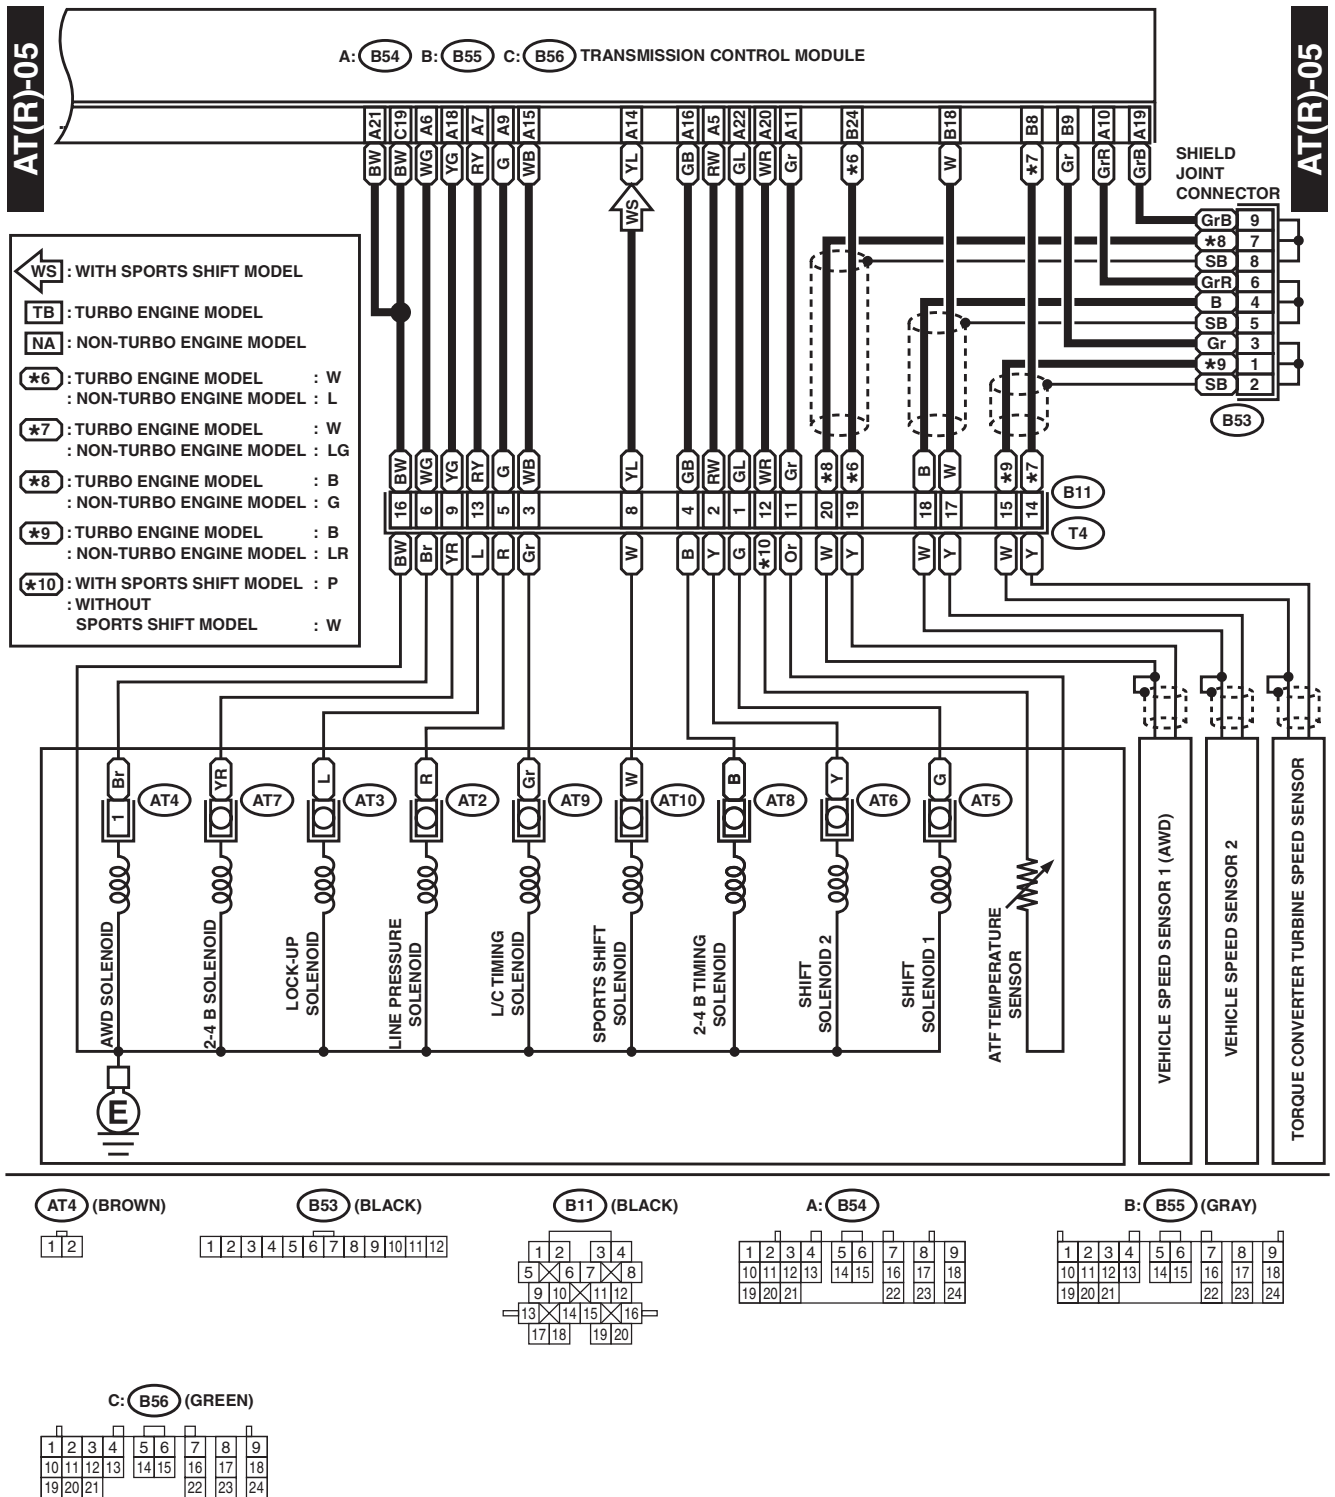

WI-04545


Audio System

WIRING SYSTEM

9. Audio System

A: WIRING DIAGRAM


1. LHD MODEL

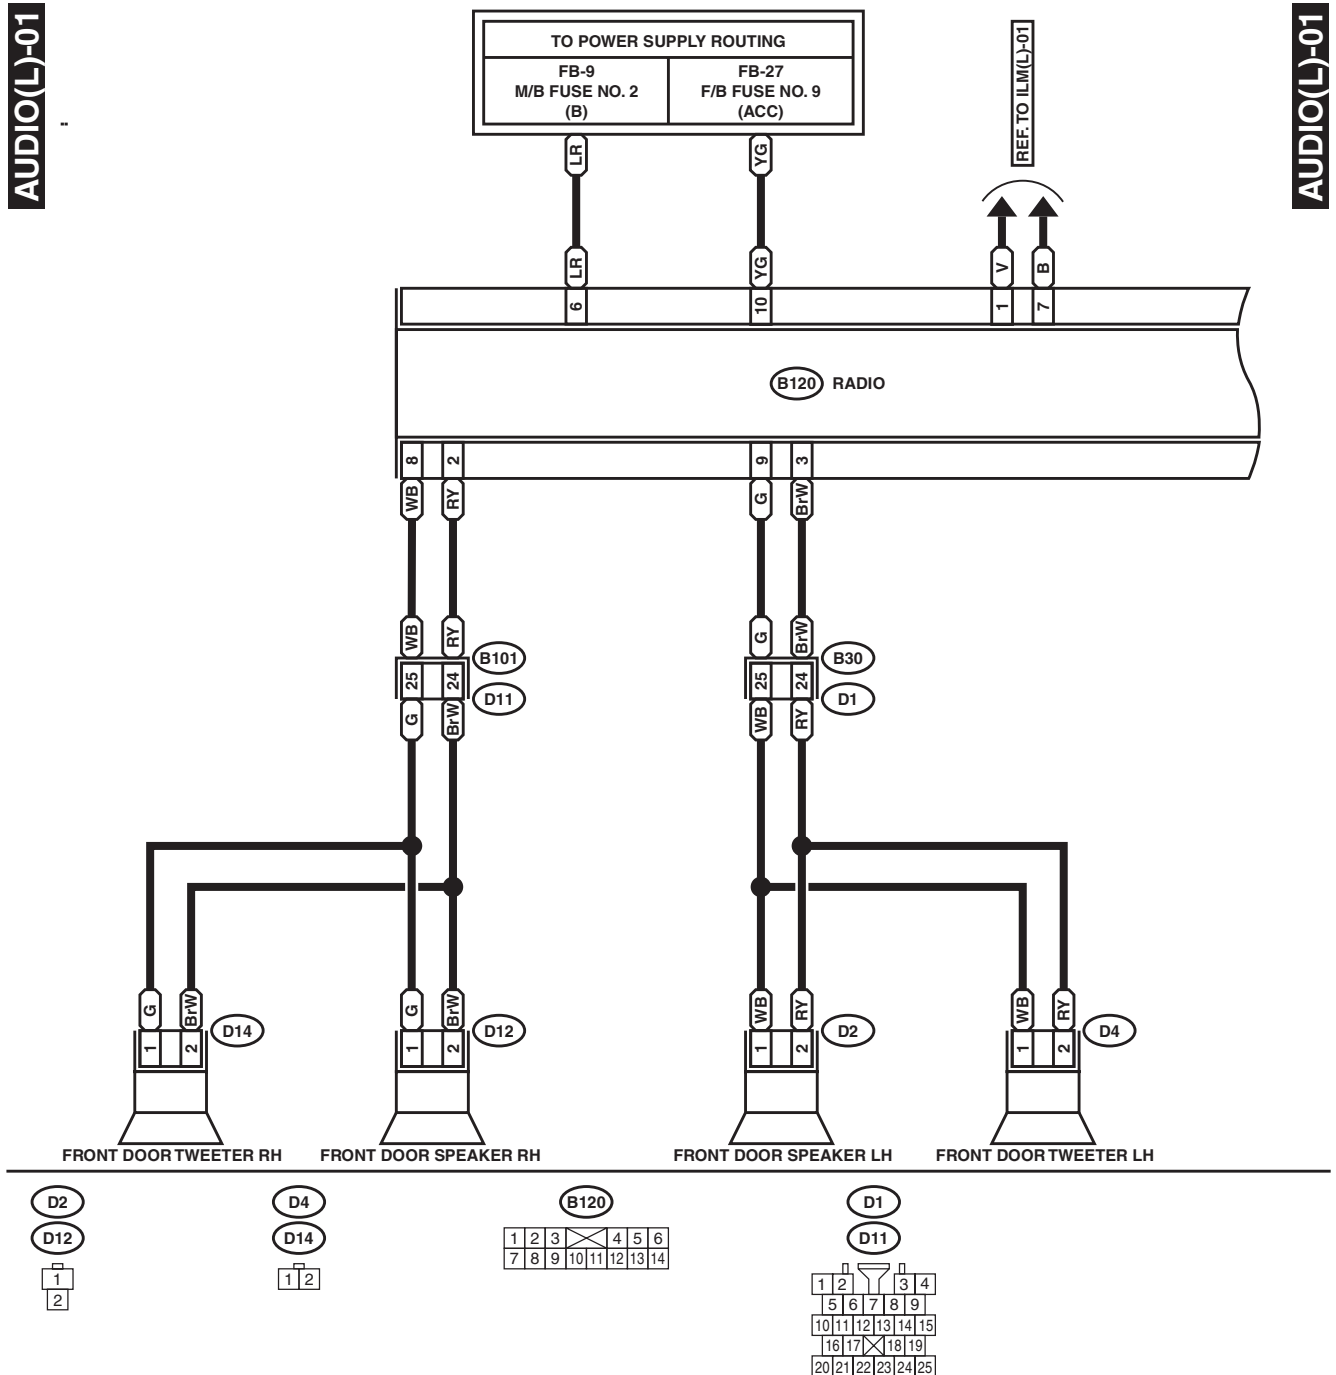

WI-02295

Audio System

WIRING SYSTEM

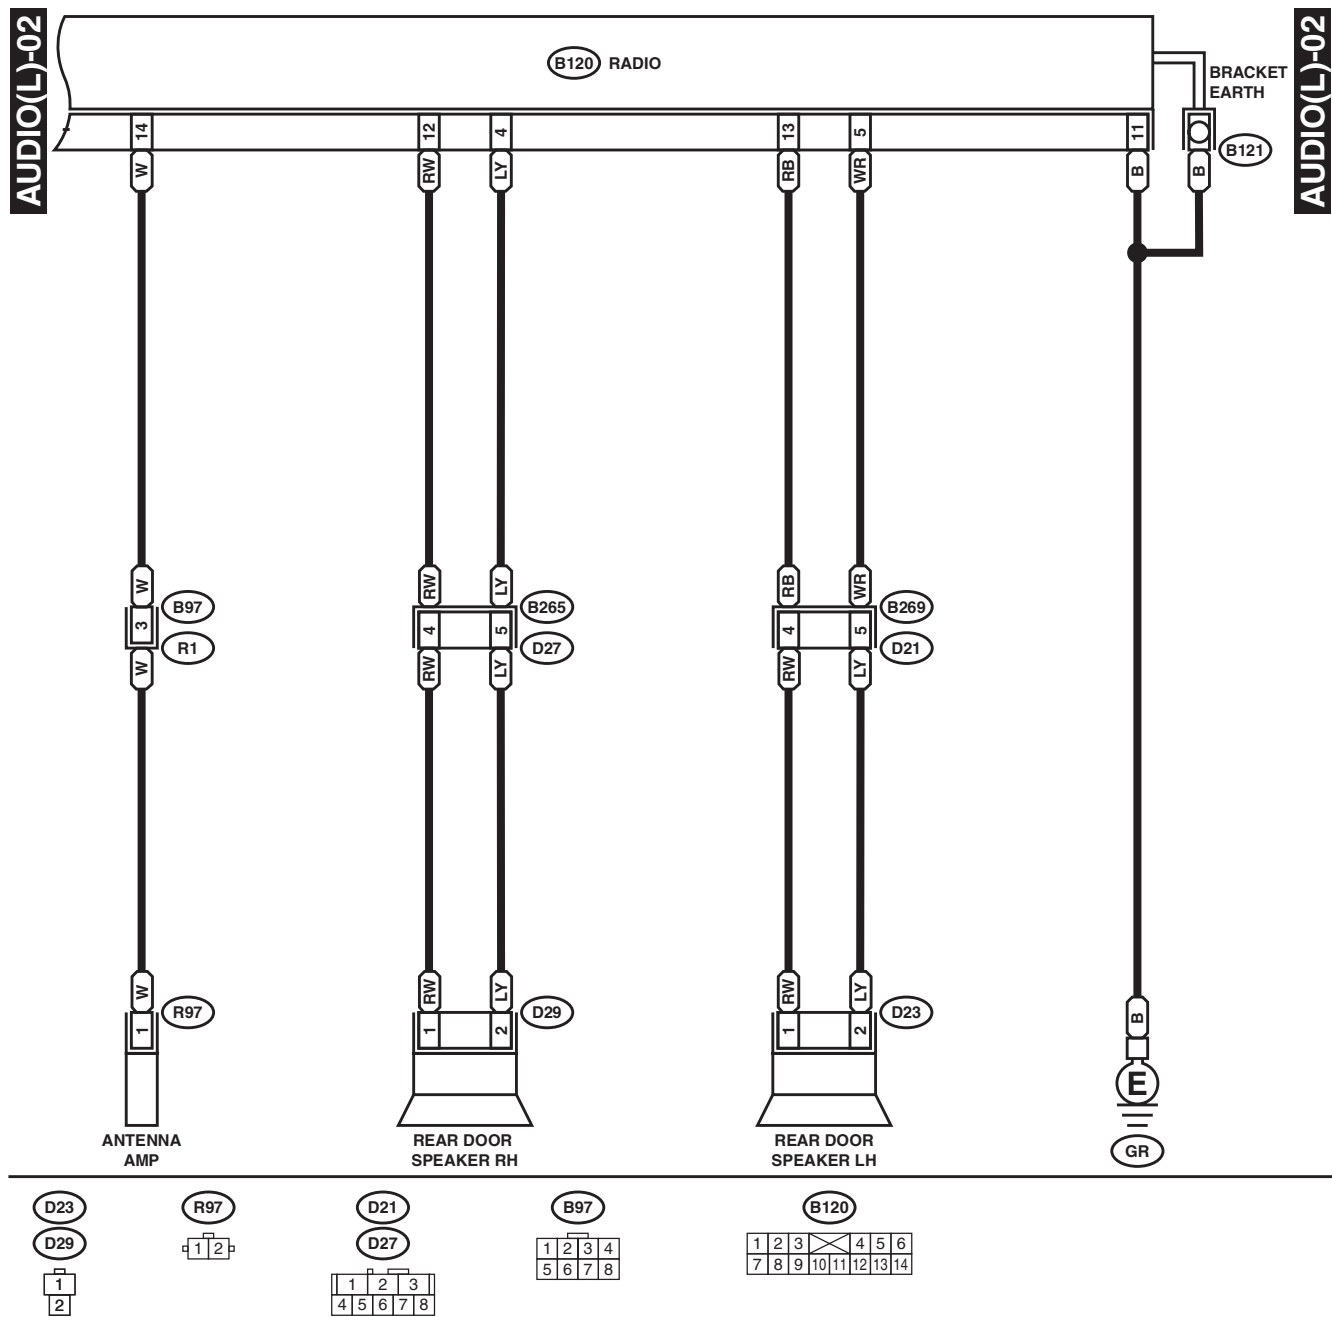


WI-04456

Audio System

WIRING SYSTEM


2. RHD MODEL

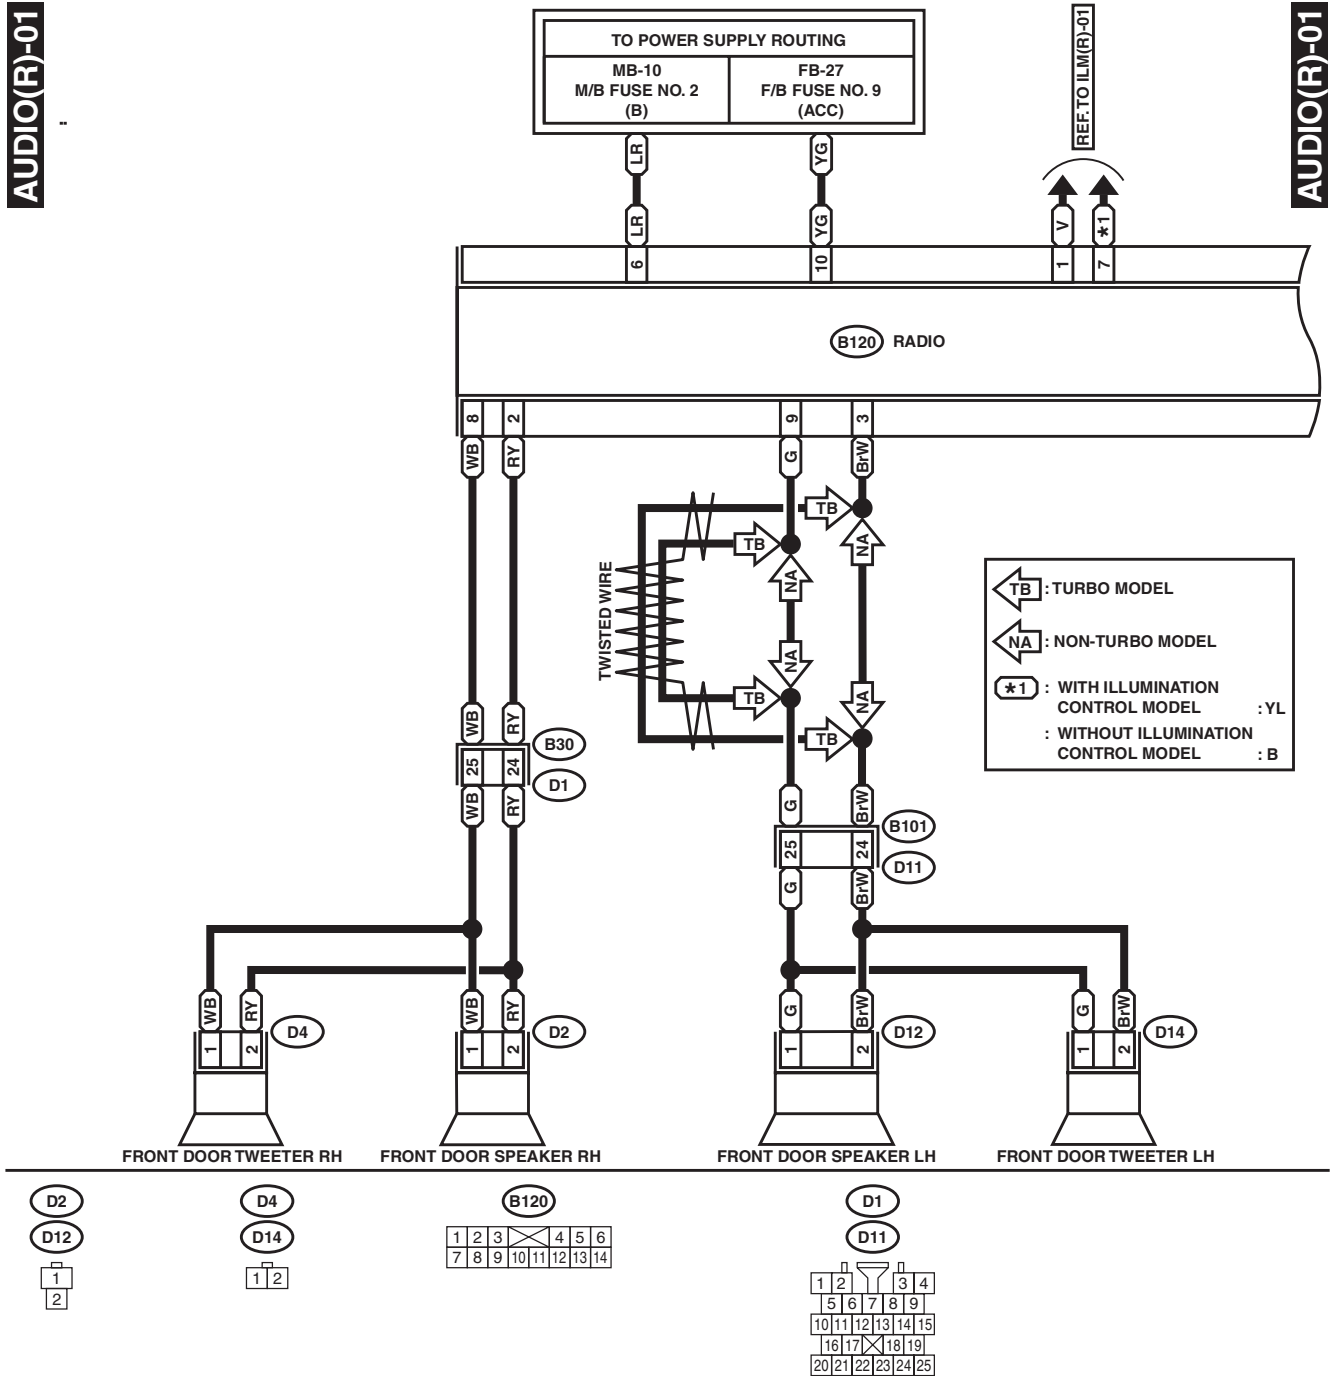

WI-02297

Audio System

WIRING SYSTEM

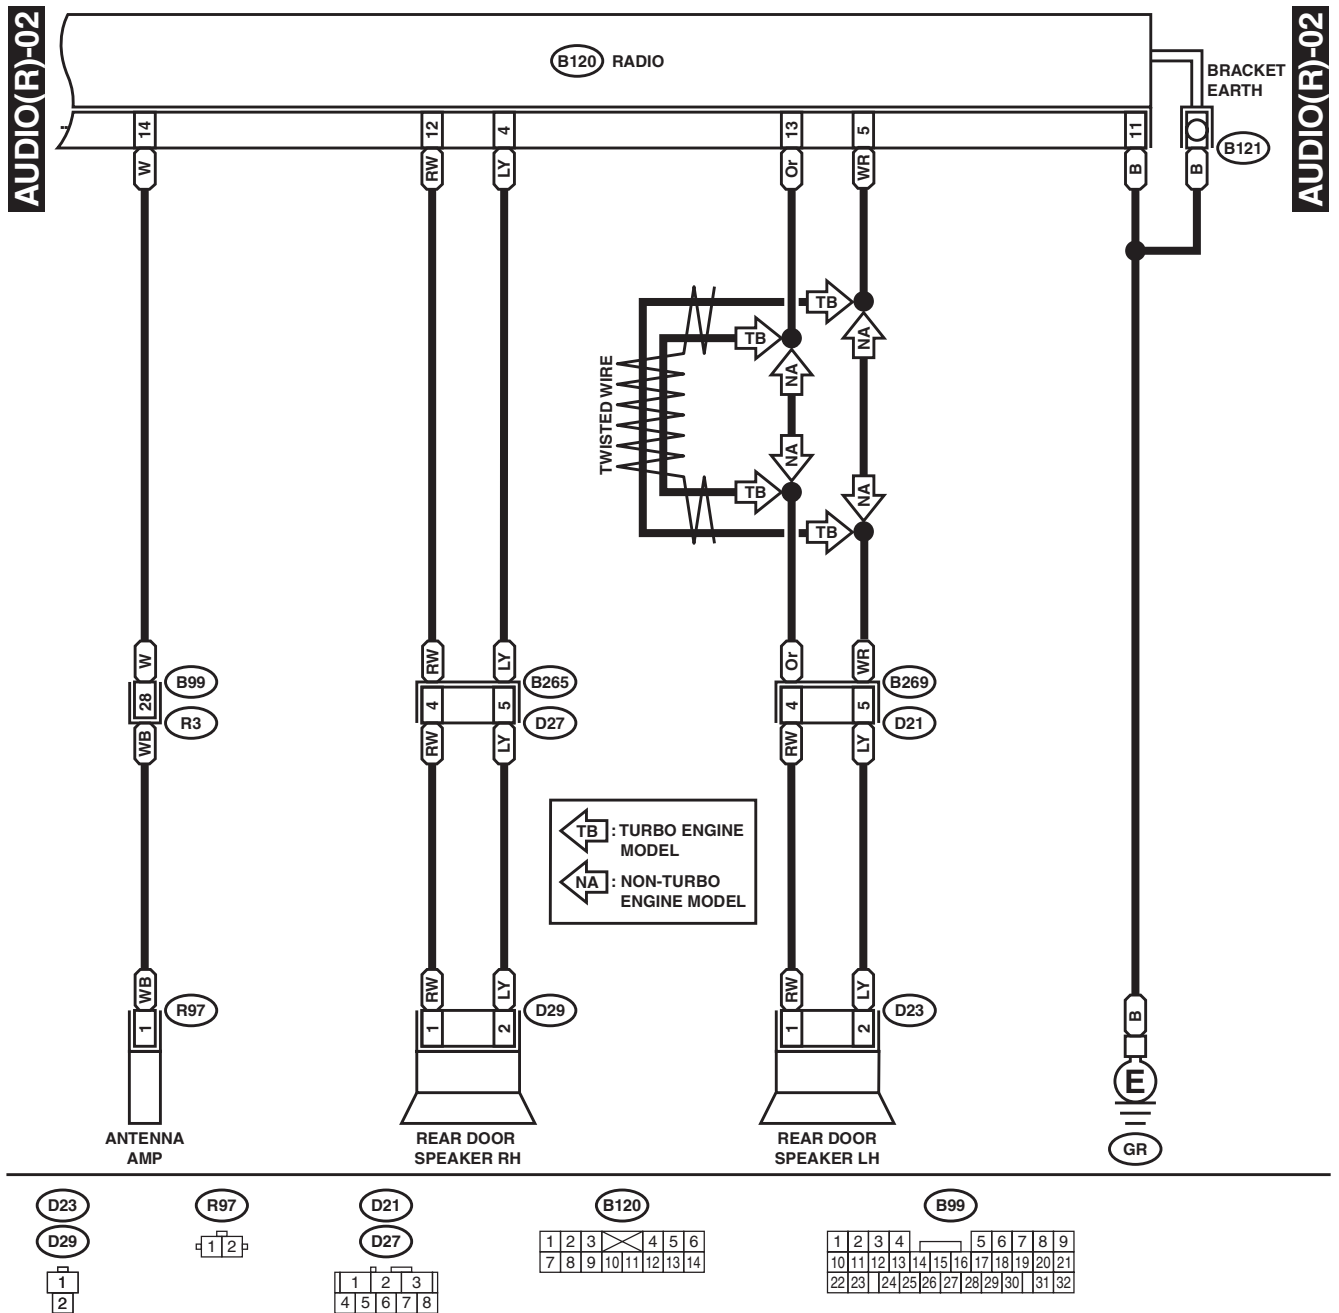


WI-04457

10.Charging System

A: WIRING DIAGRAM

1. LHD MODEL

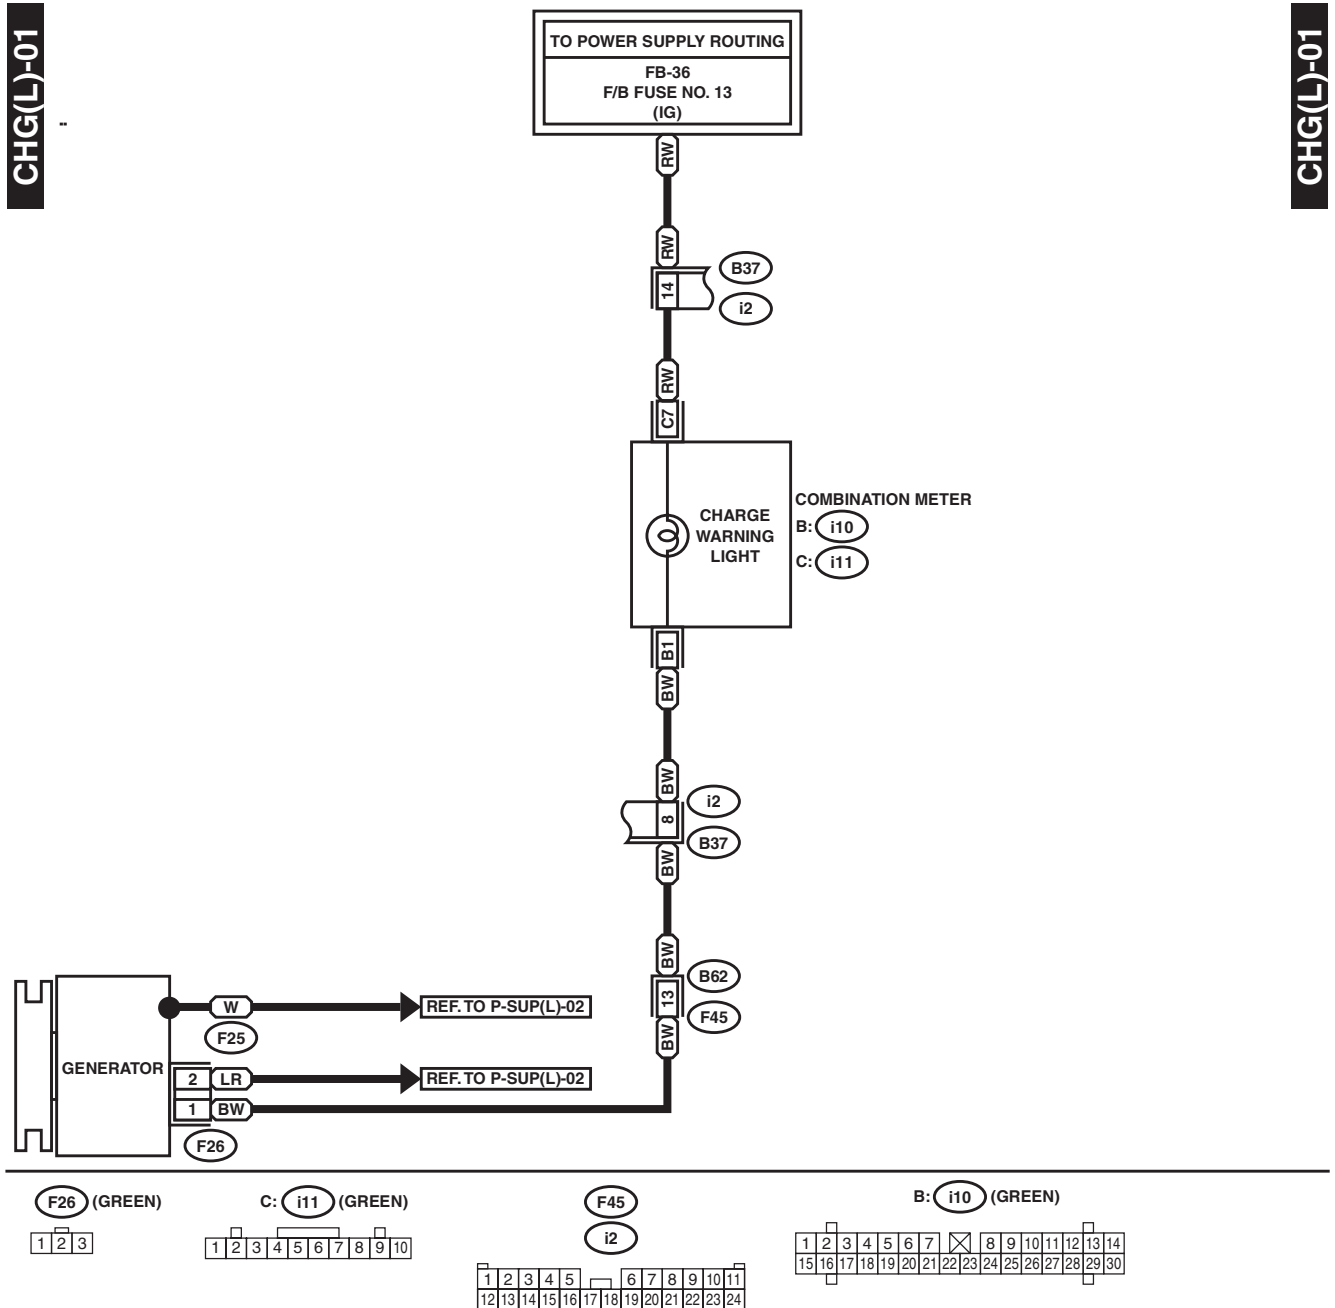

WIRING SYSTEM

CHG(R)-01




11. Combination Meter

A: WIRING DIAGRAM

1. EXCEPT FOR AUSTRALIA STi MODEL

CM(EA)-01

CM(EA)-01

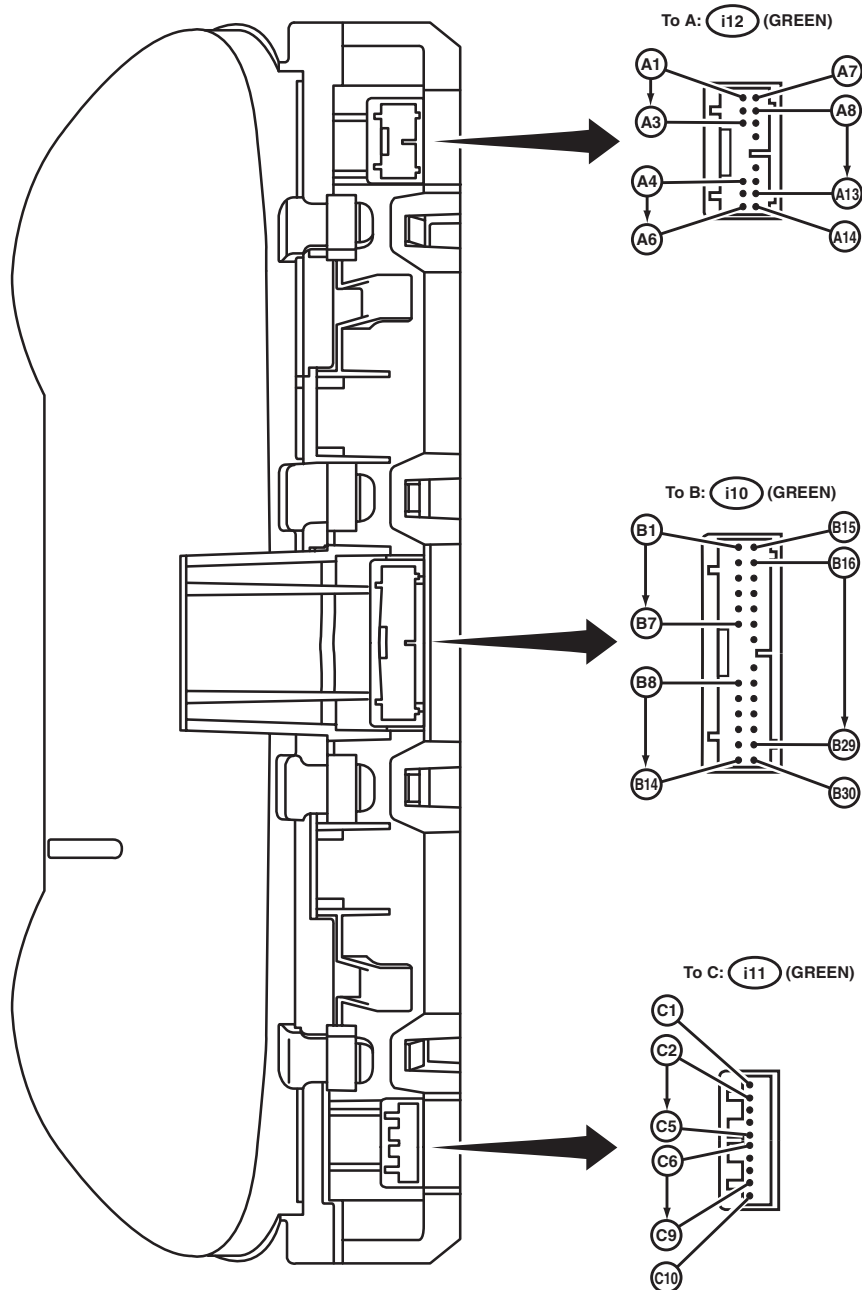


WI-02301

Combination Meter

WIRING SYSTEM

CM(EA)-02


CM(EA)-02

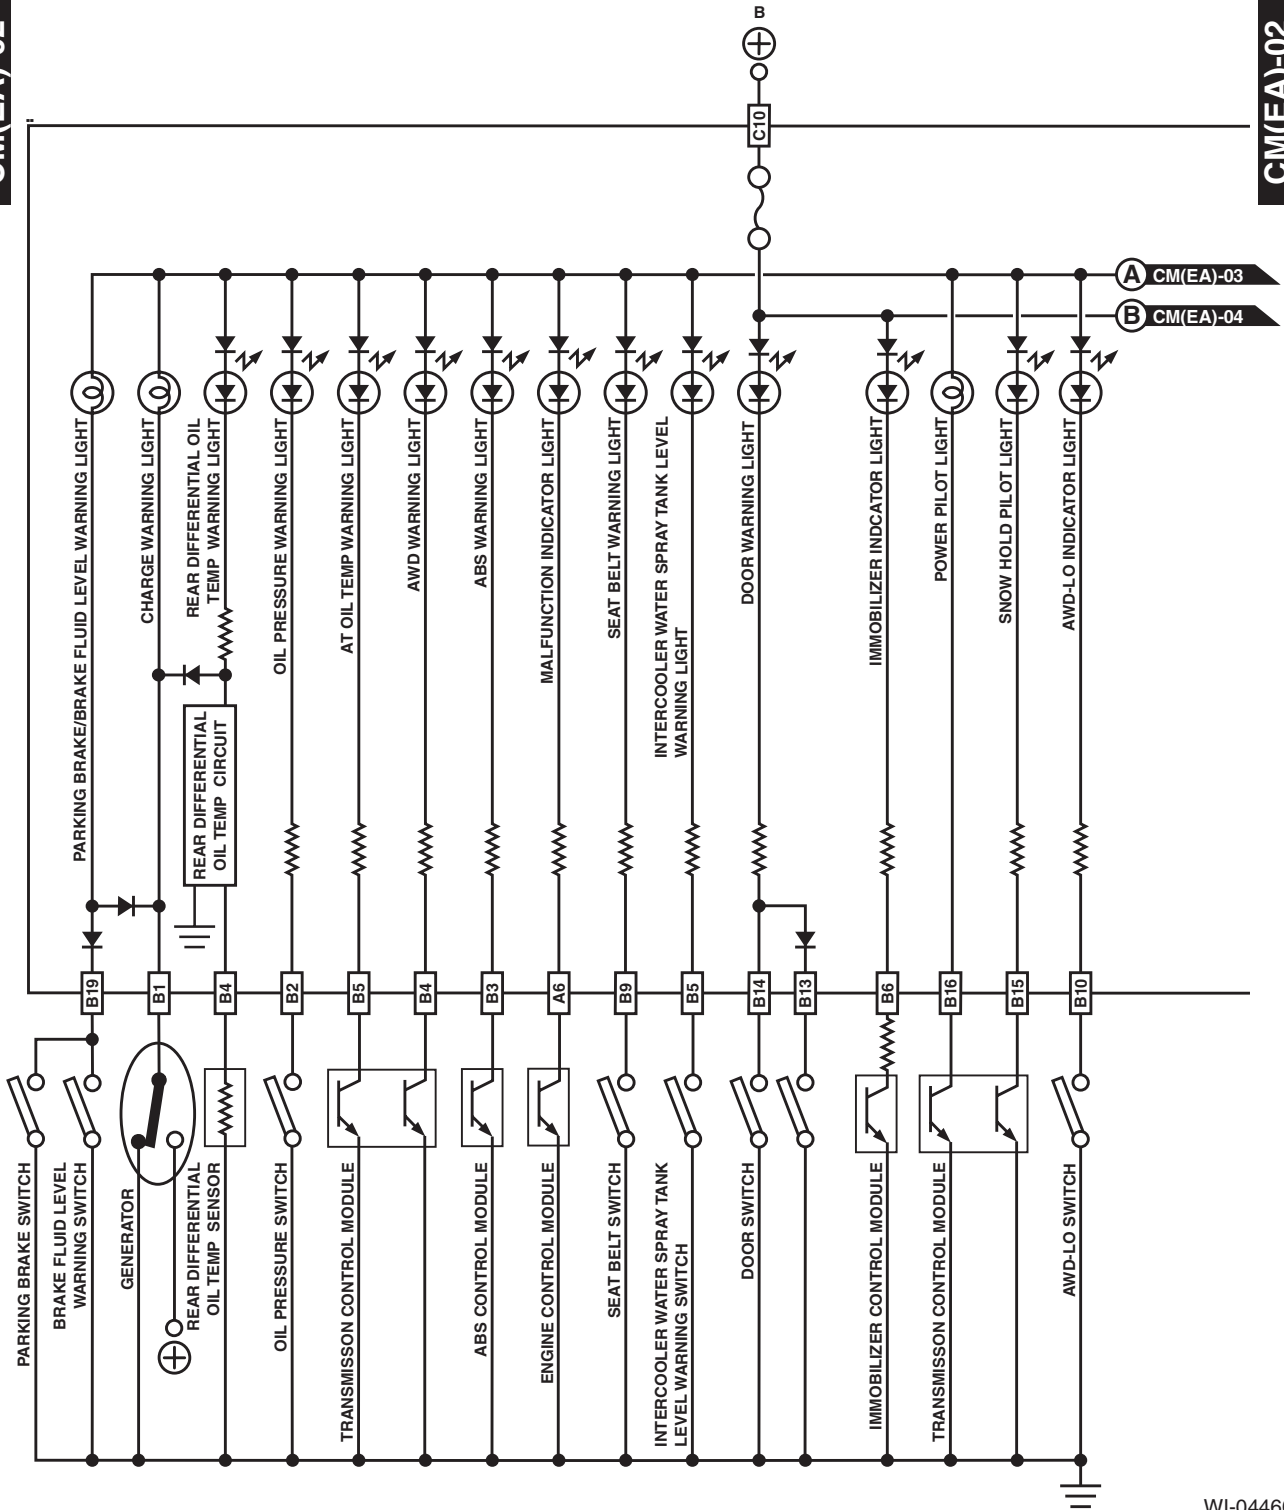

WI-04460


Combination Meter

WIRING SYSTEM

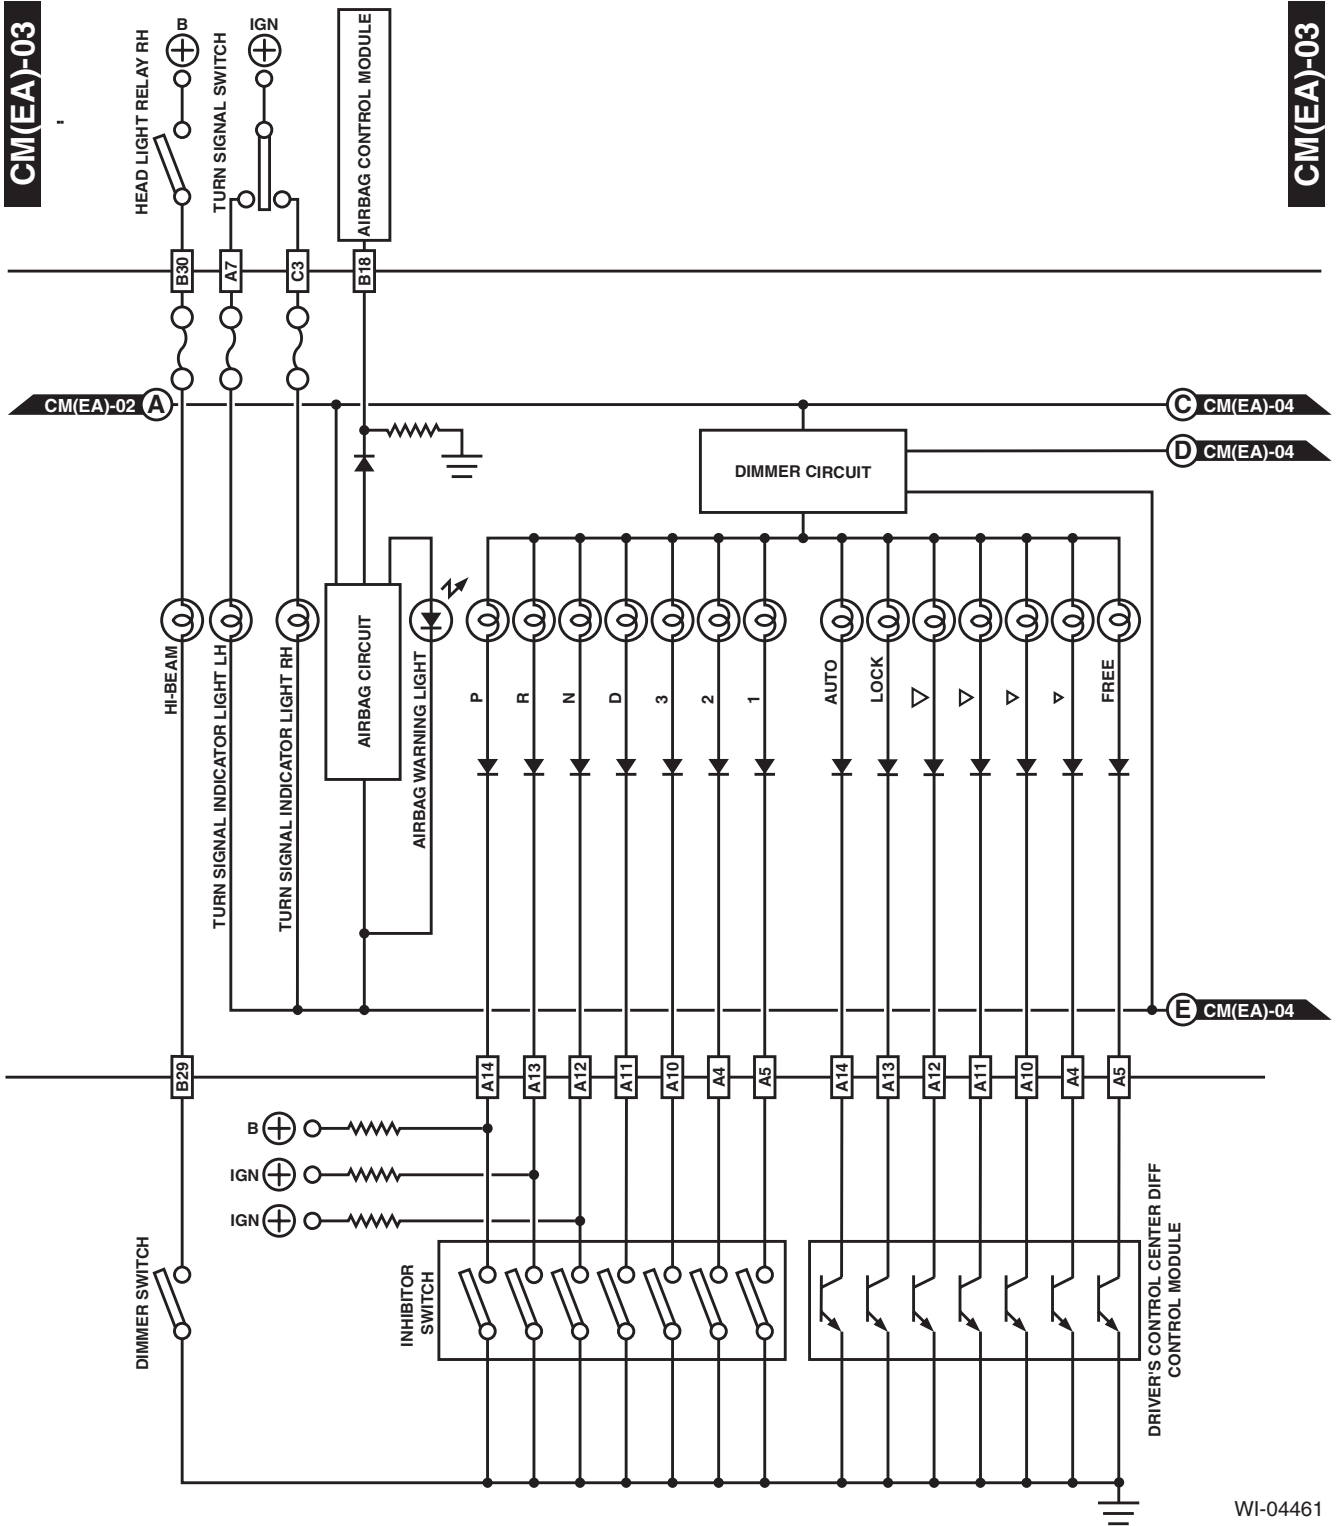

WI-04461

WIRING SYSTEM

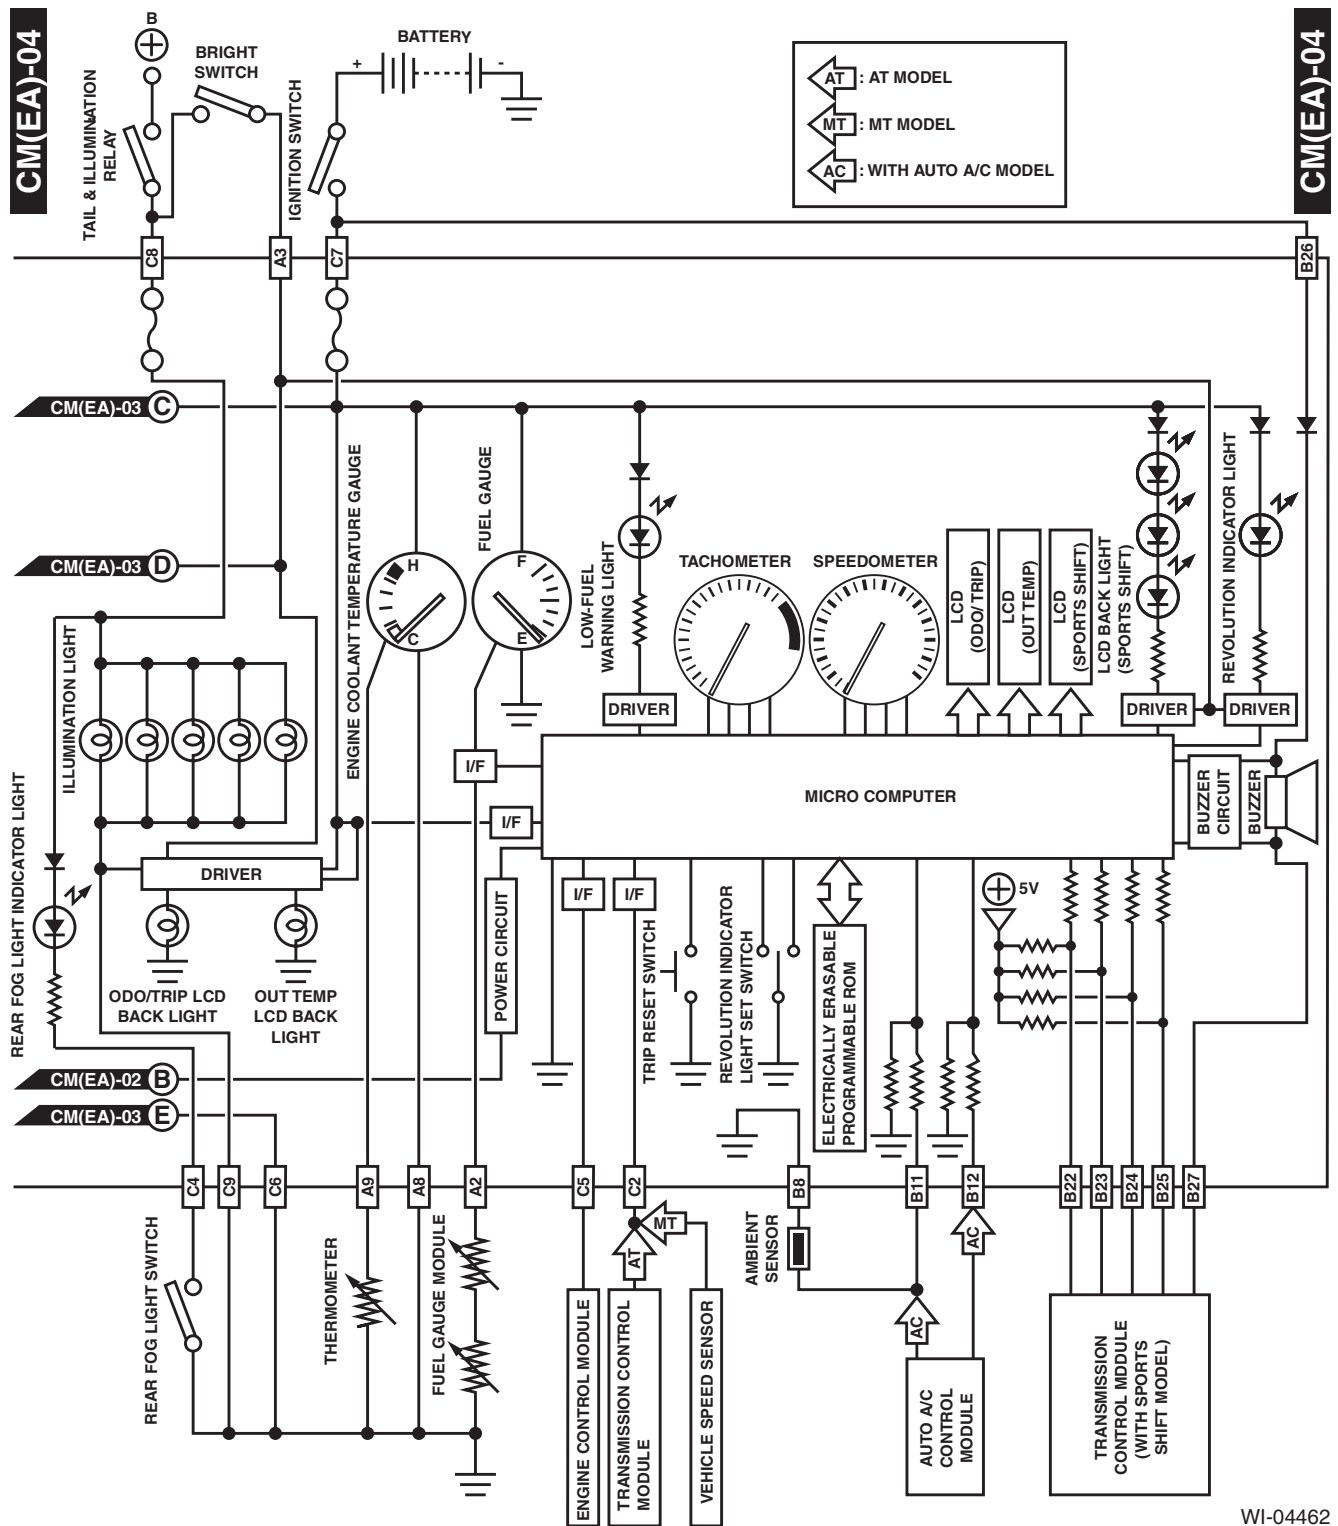


Combination Meter

WIRING SYSTEM

2. FOR AUSTRALIA STi MODEL

CM(FA)-01


CM(FA)-01

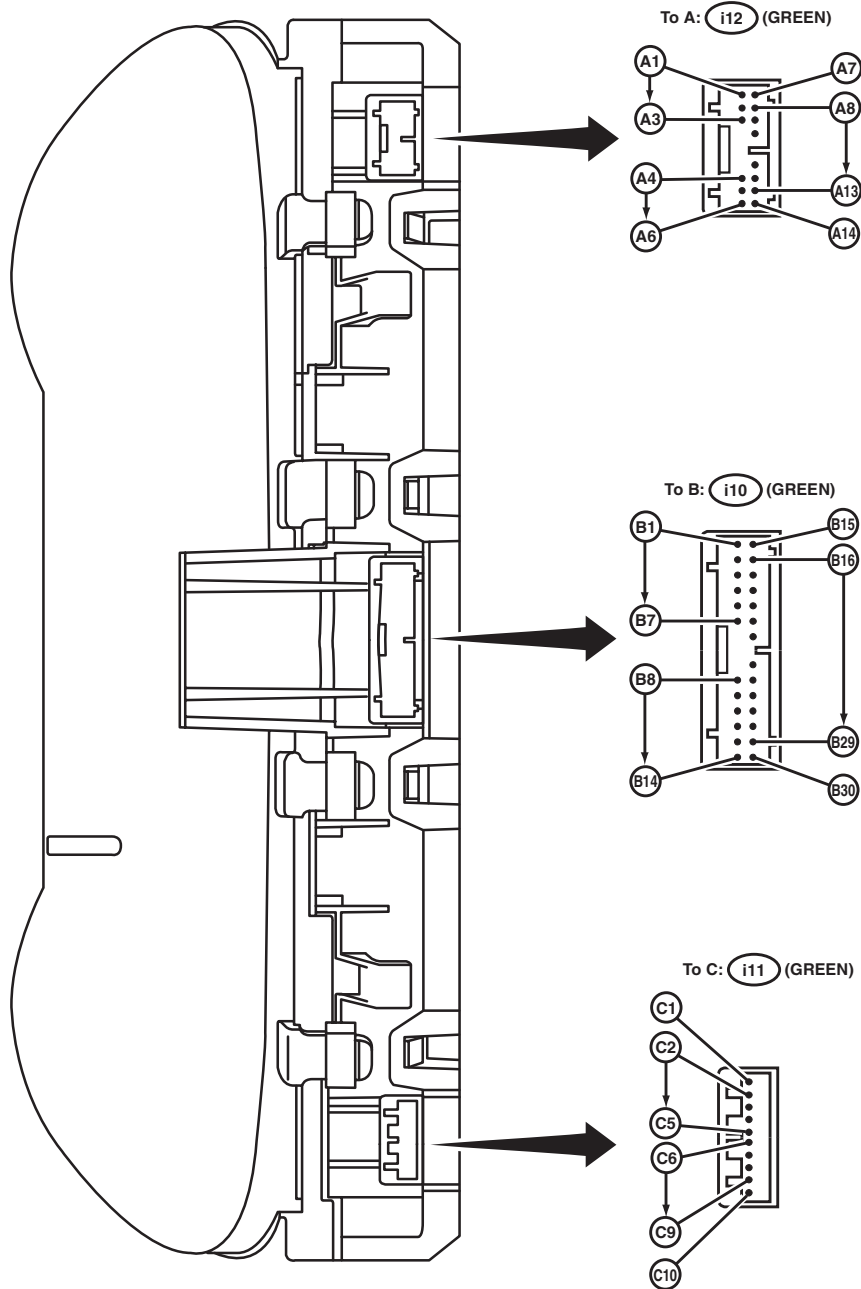

WI-02547

Combination Meter


WIRING SYSTEM

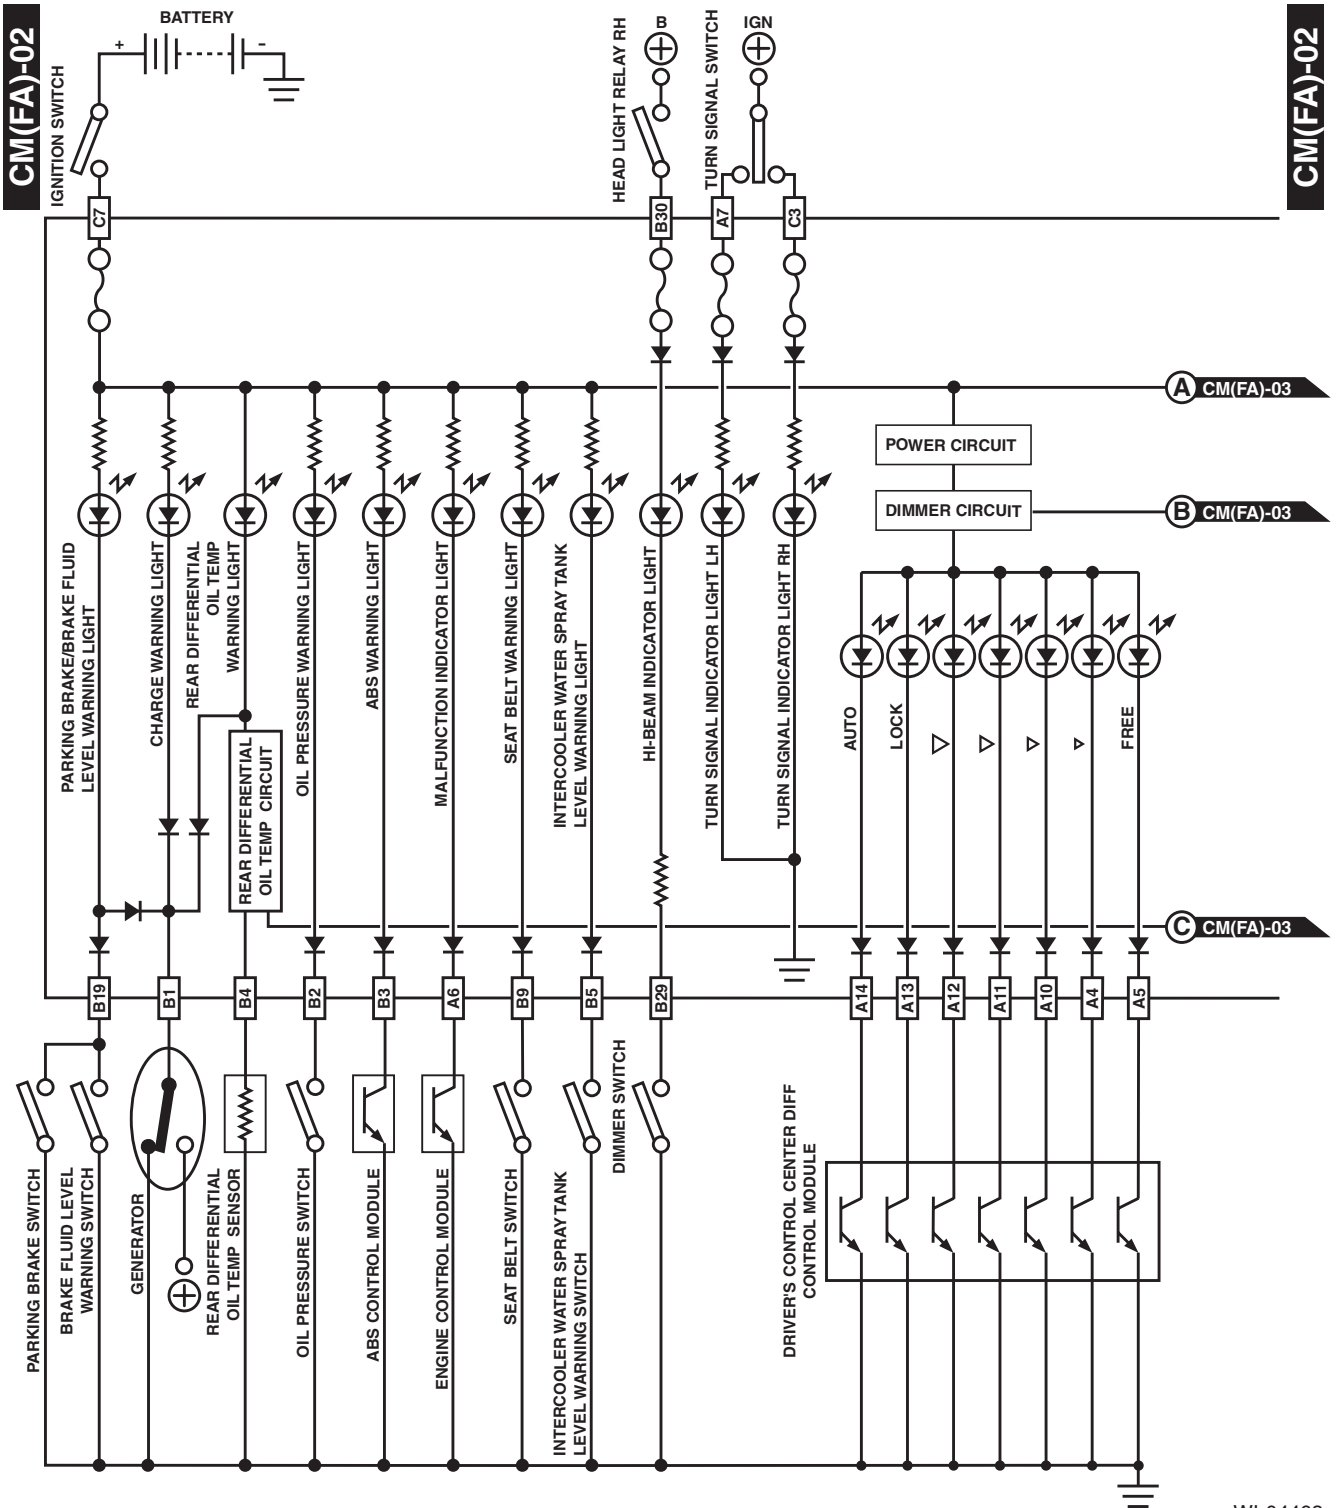

WI-04463

Combination Meter


WIRING SYSTEM

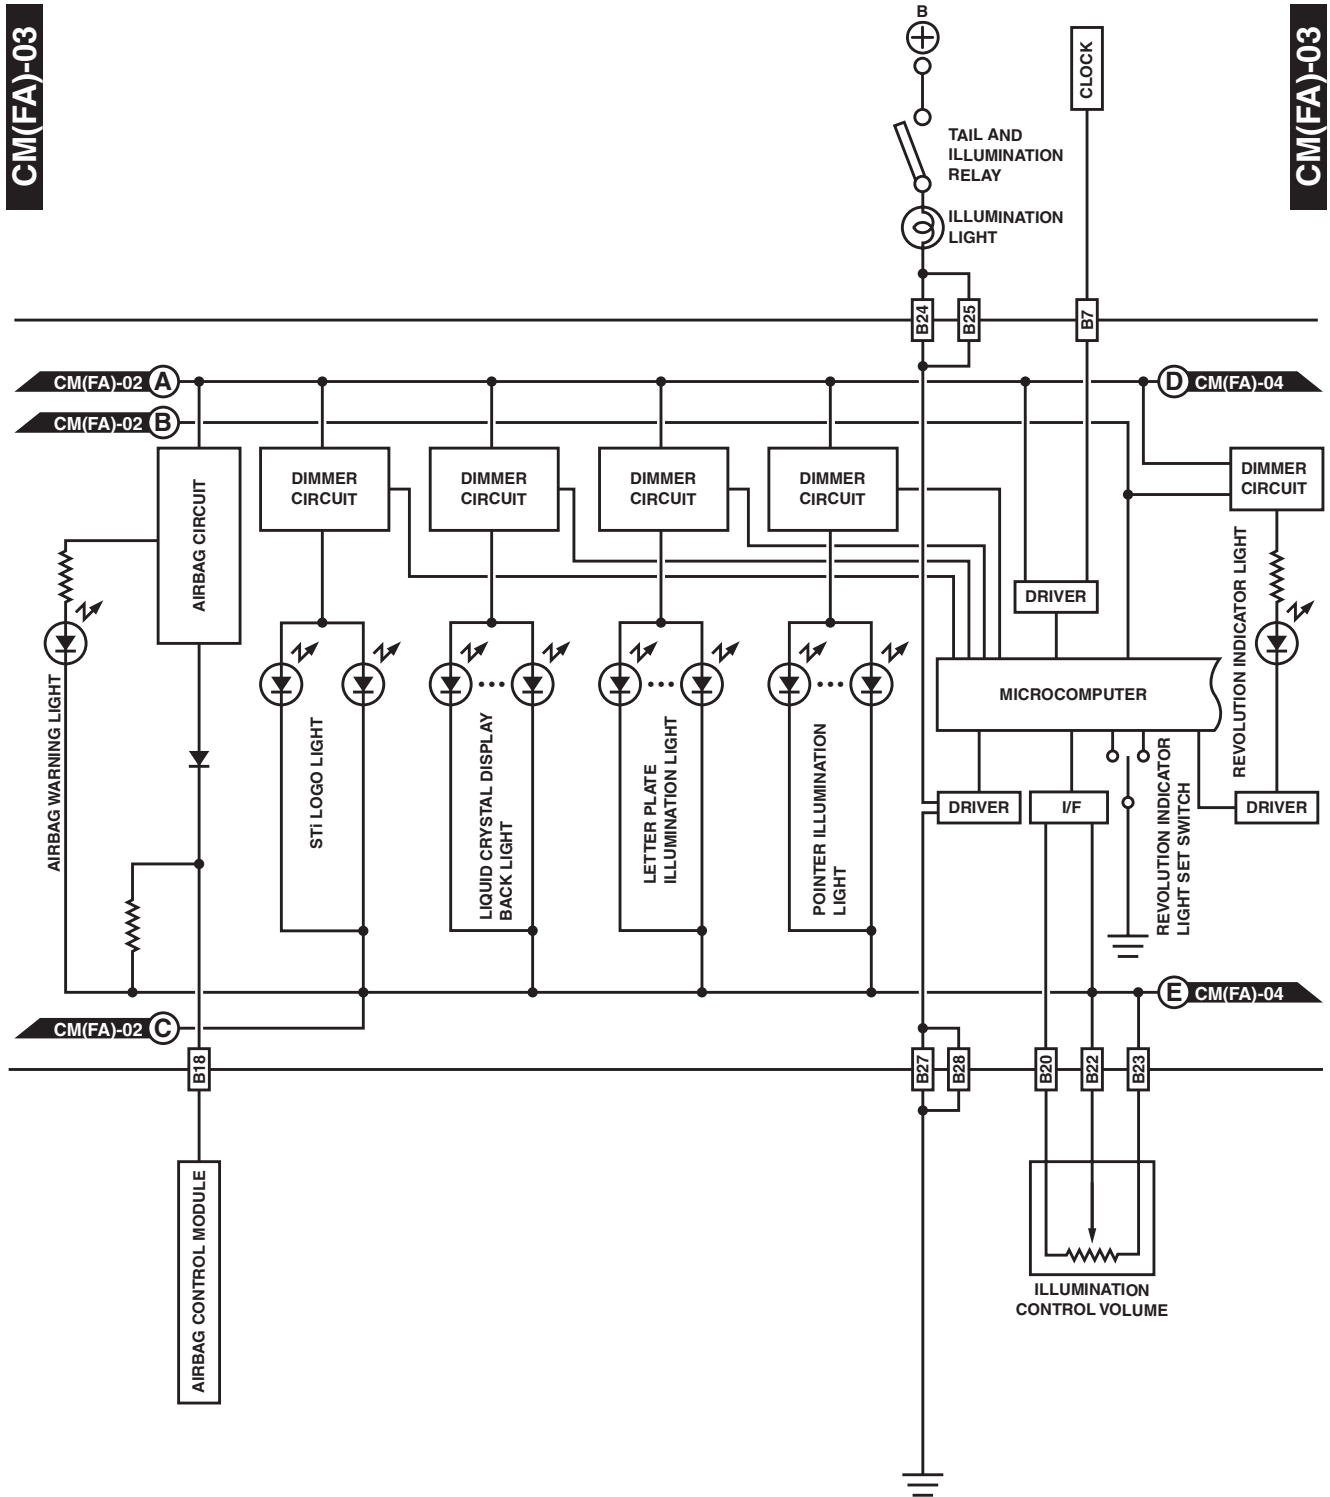

WI-04464

Combination Meter


WIRING SYSTEM

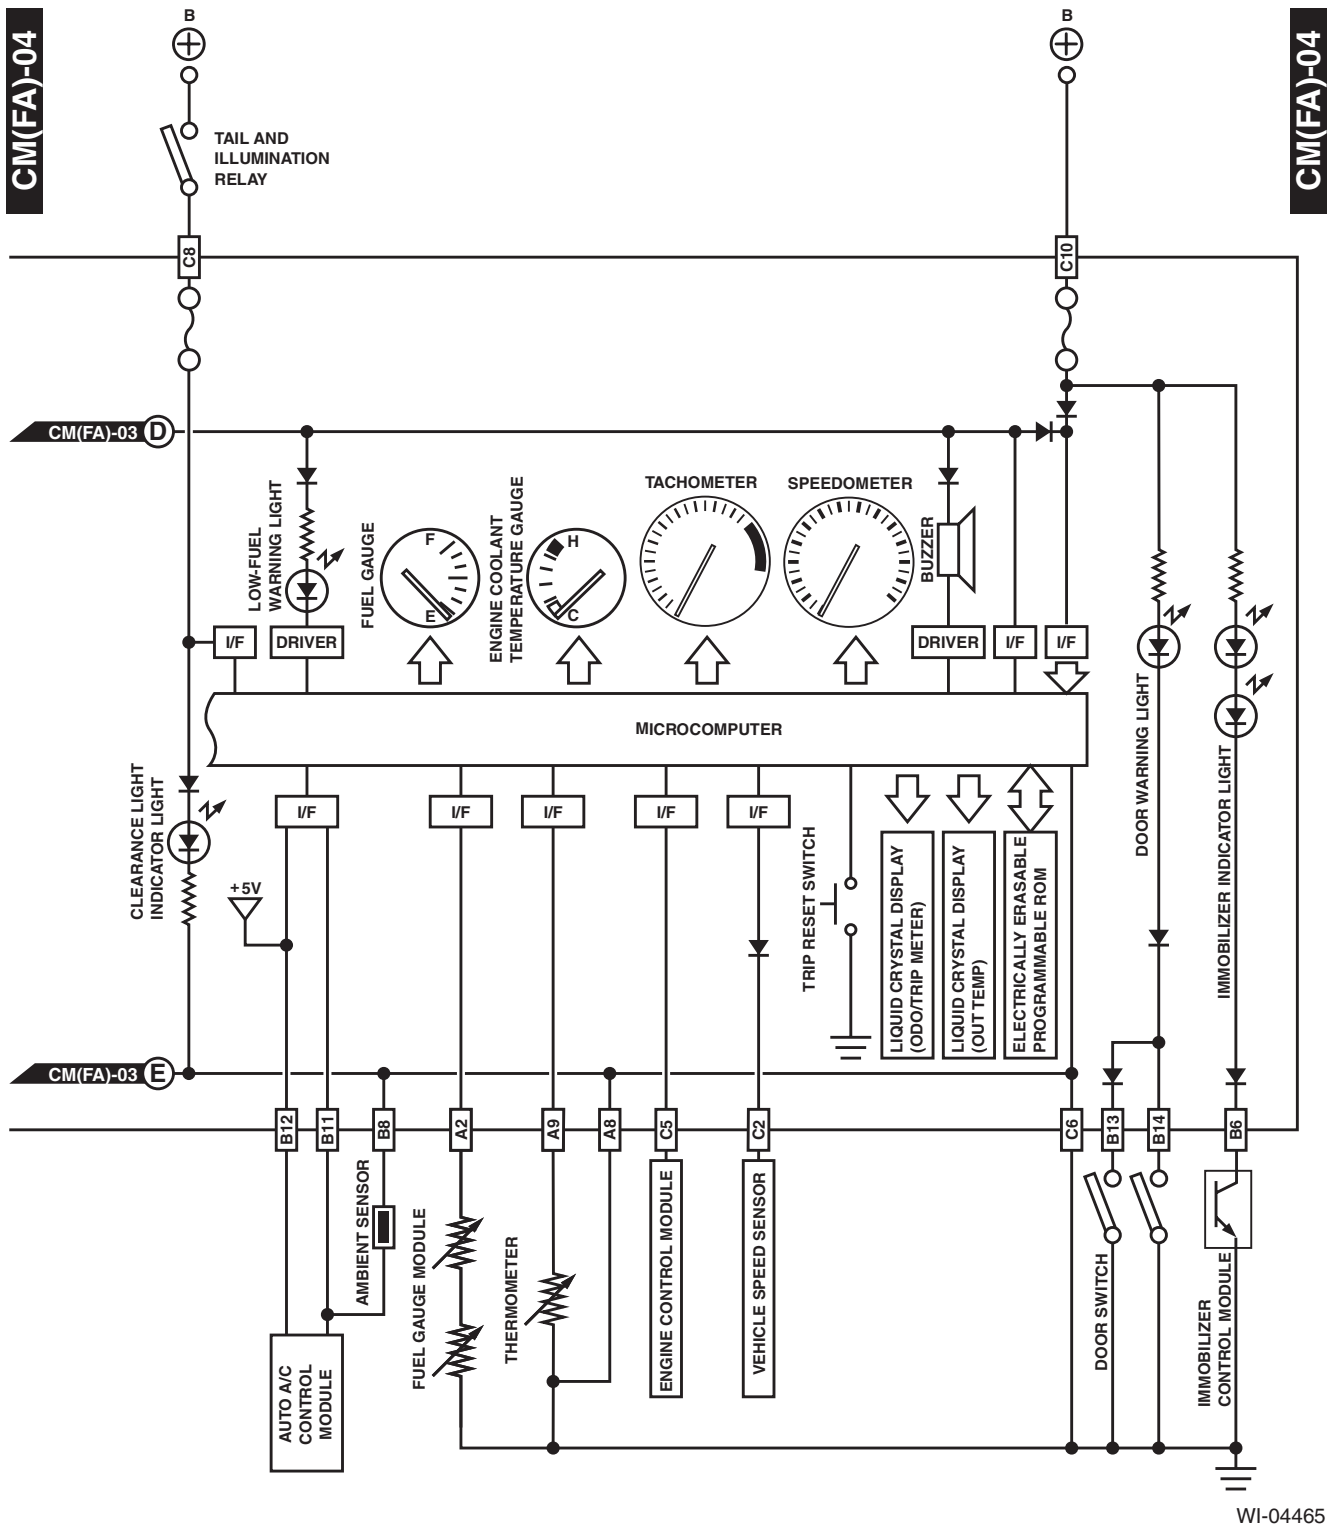


WI-04465

12.Cruise Control System

A: WIRING DIAGRAM

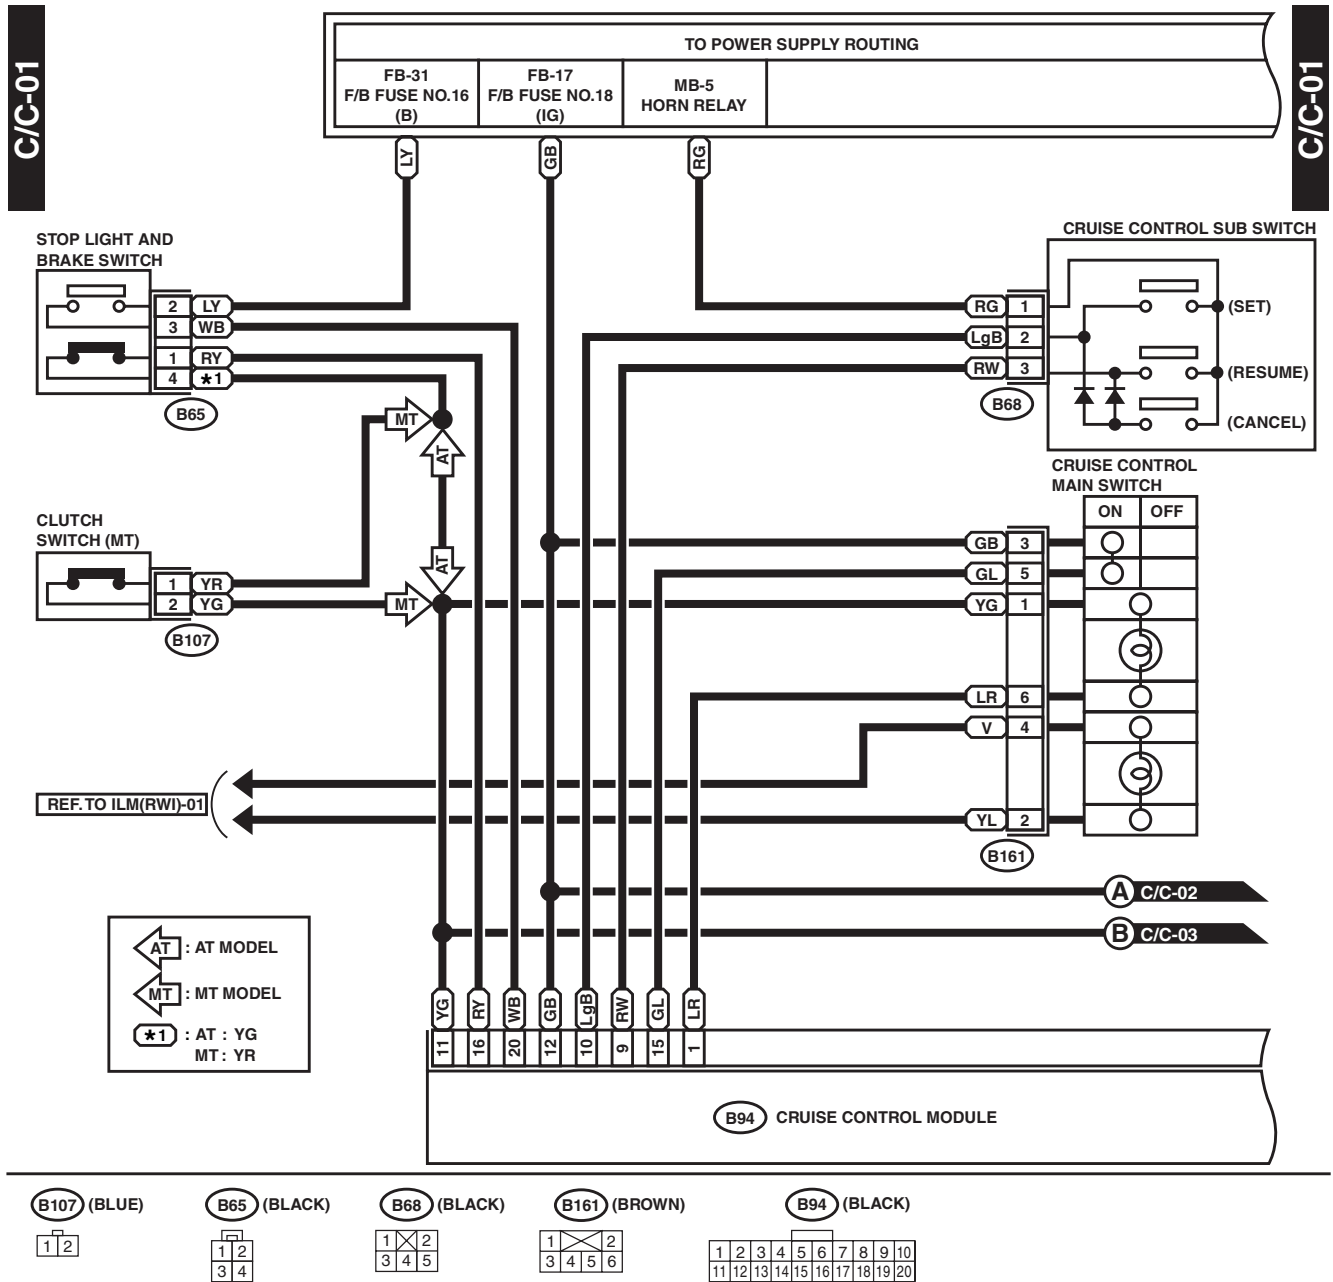


WIRING SYSTEM



Cruise Control System

WIRING SYSTEM

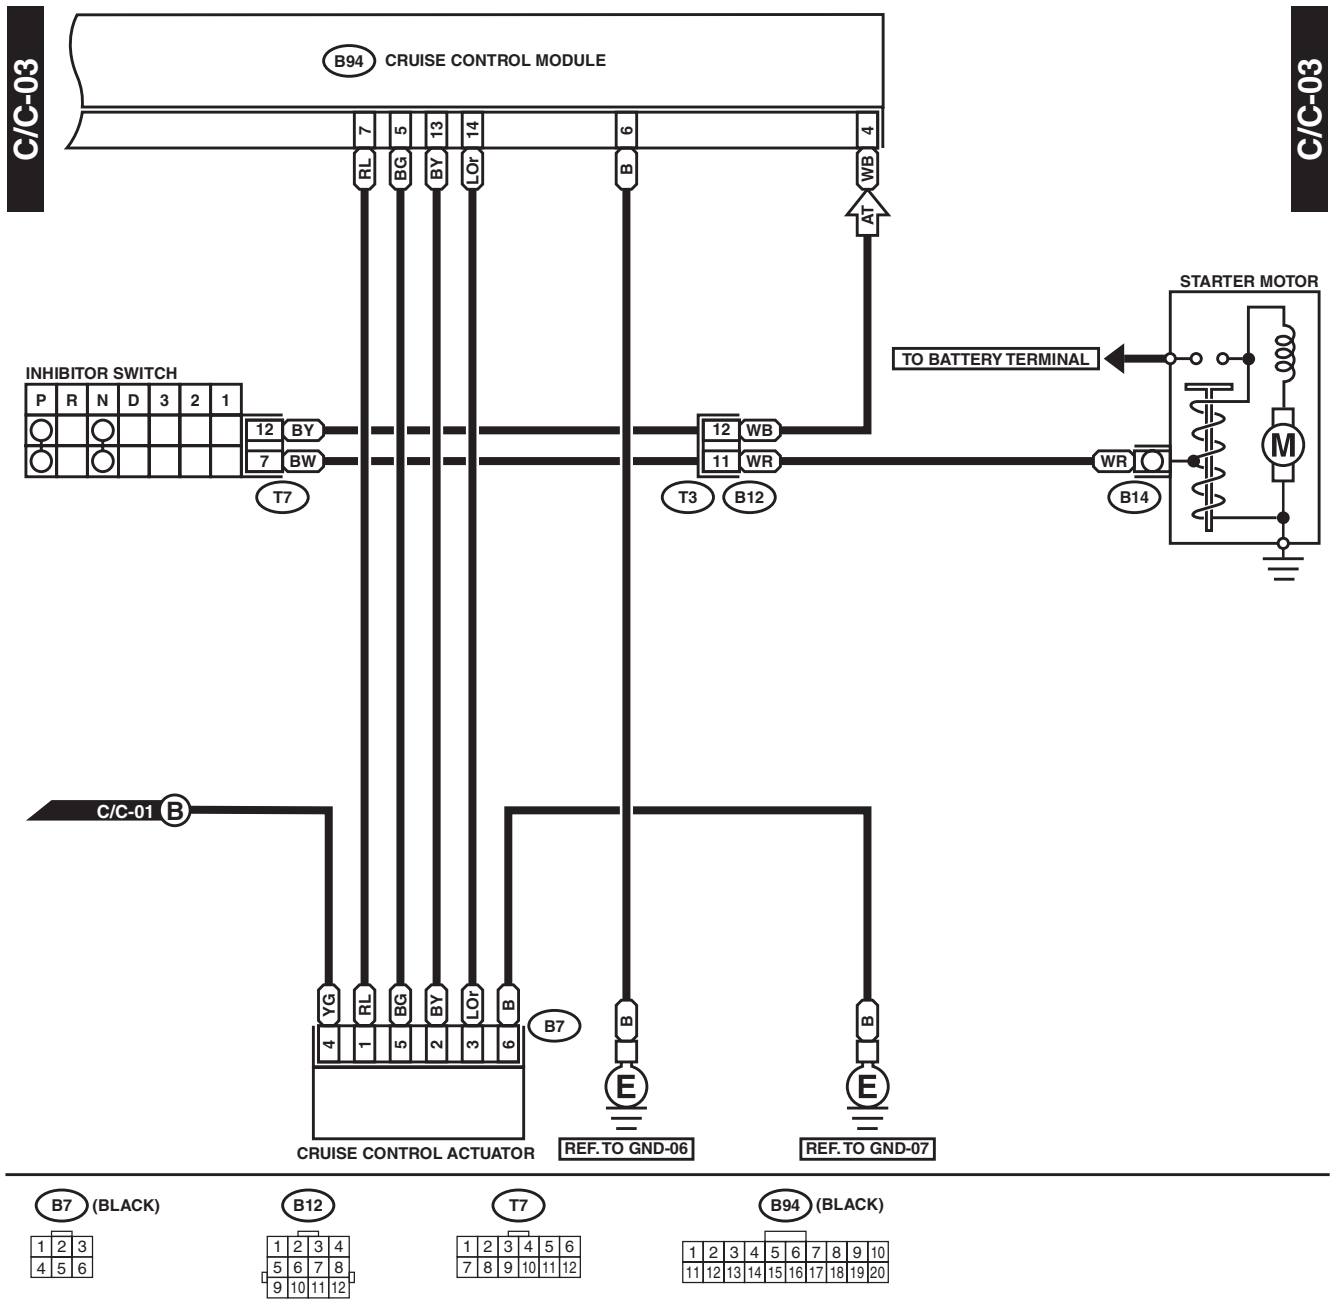

WI-02528


Engine Coolant Temperature Gauge System

WIRING SYSTEM

13.Engine Coolant Temperature Gauge System

A: WIRING DIAGRAM

1. LHD MODEL

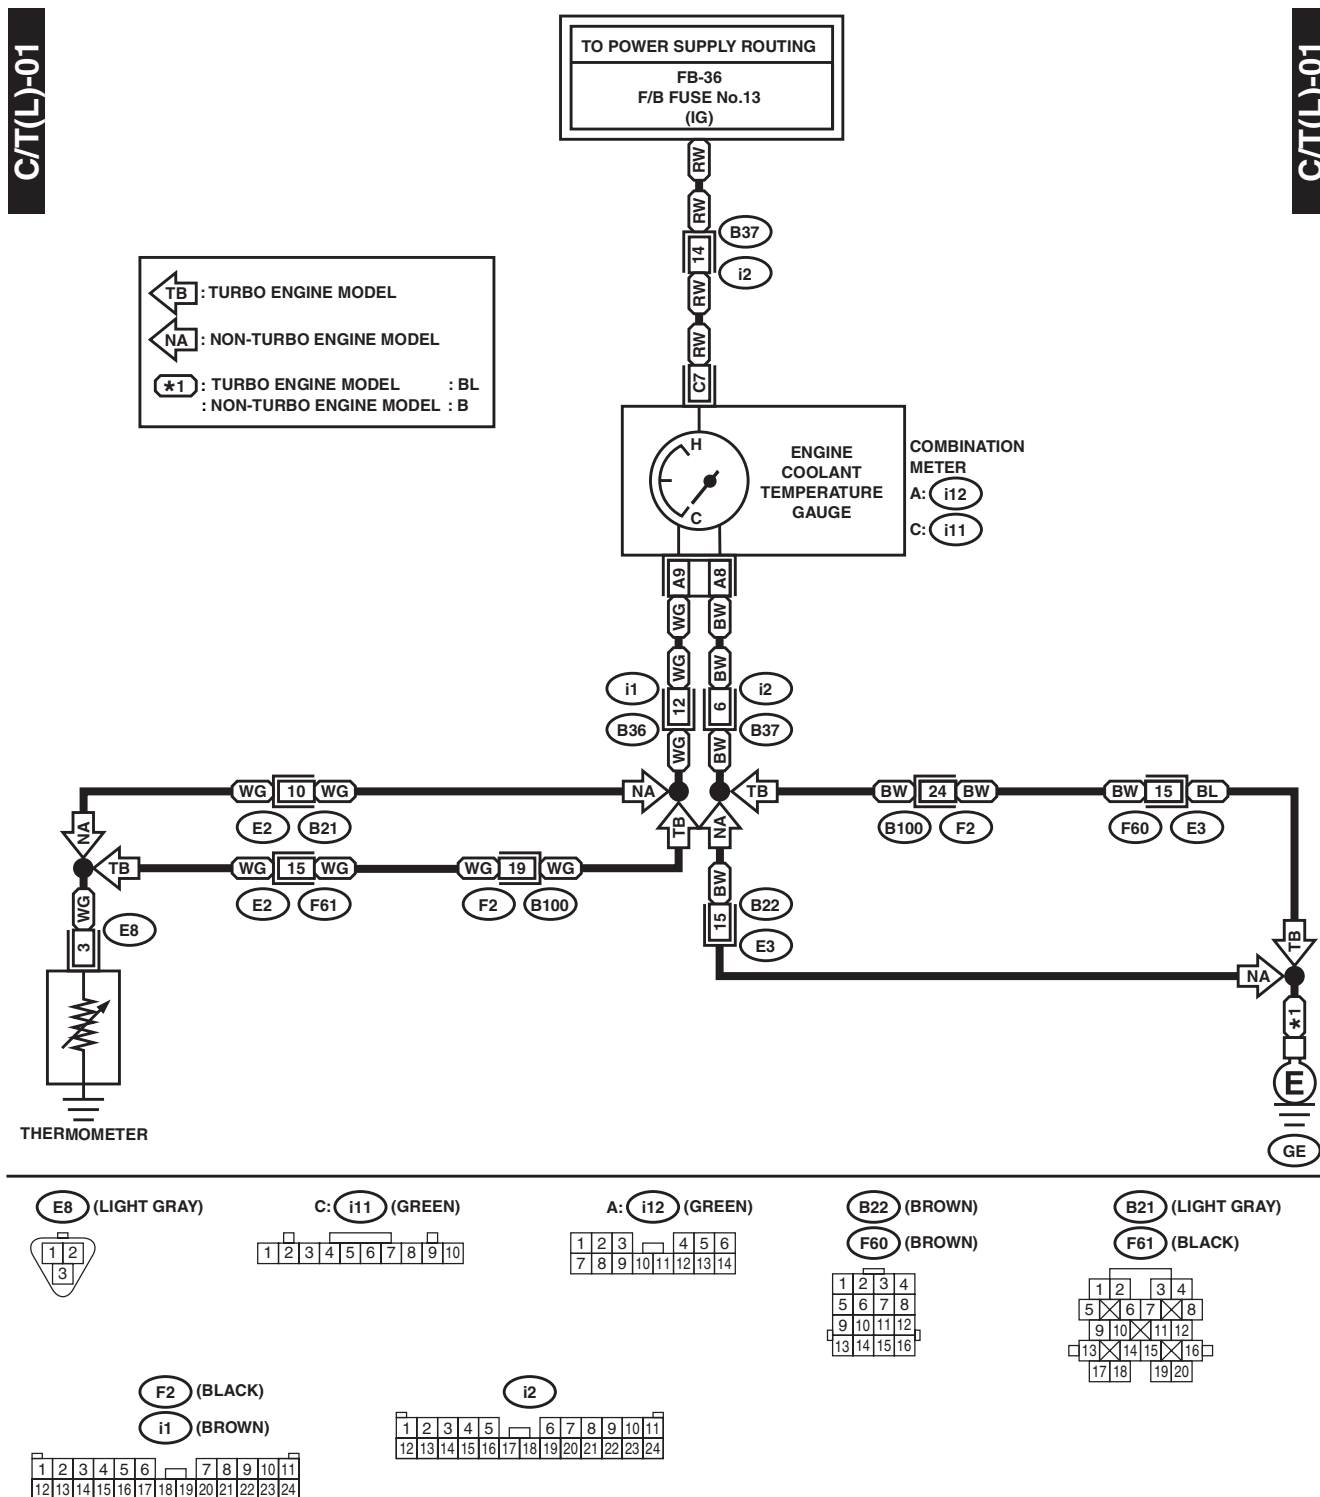


WI-04546

Engine Coolant Temperature Gauge System

WIRING SYSTEM

2. RHD MODEL

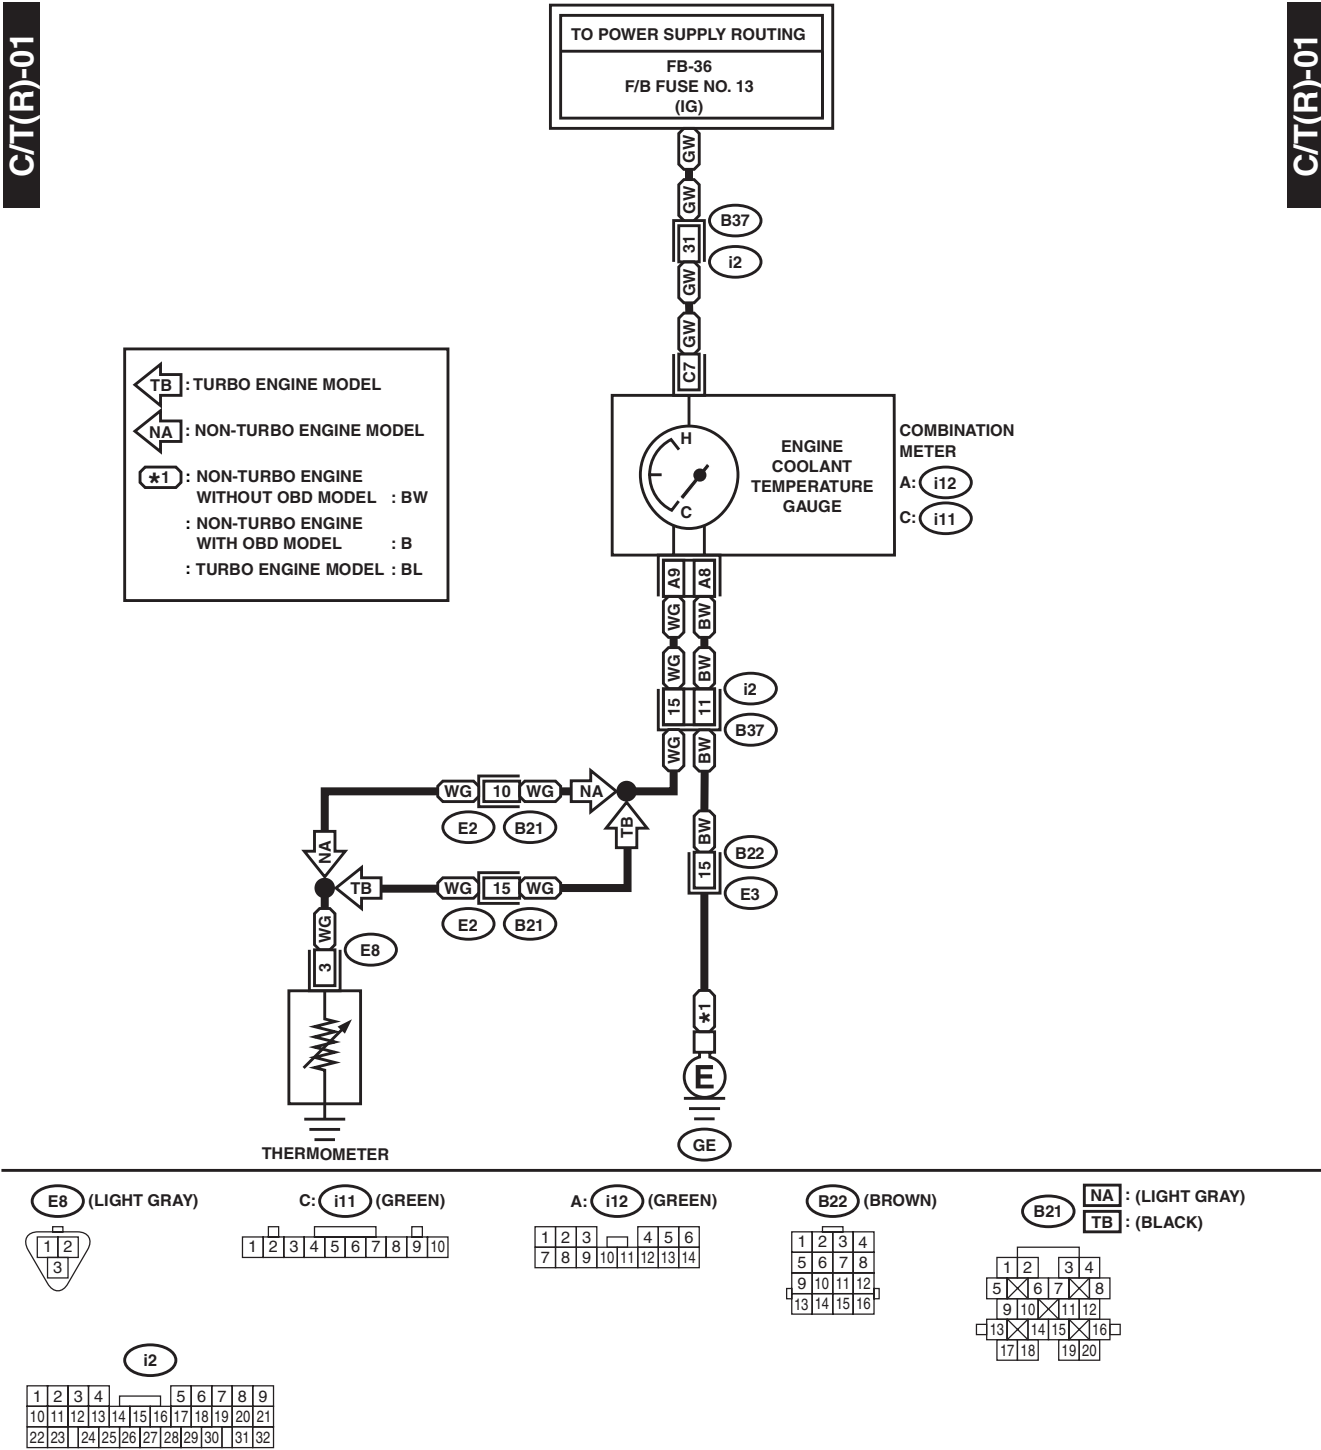

WI-02306


Engine Electrical System

WIRING SYSTEM

14.Engine Electrical System

A: WIRING DIAGRAM


1. LHD SOHC W/O OBD MODEL

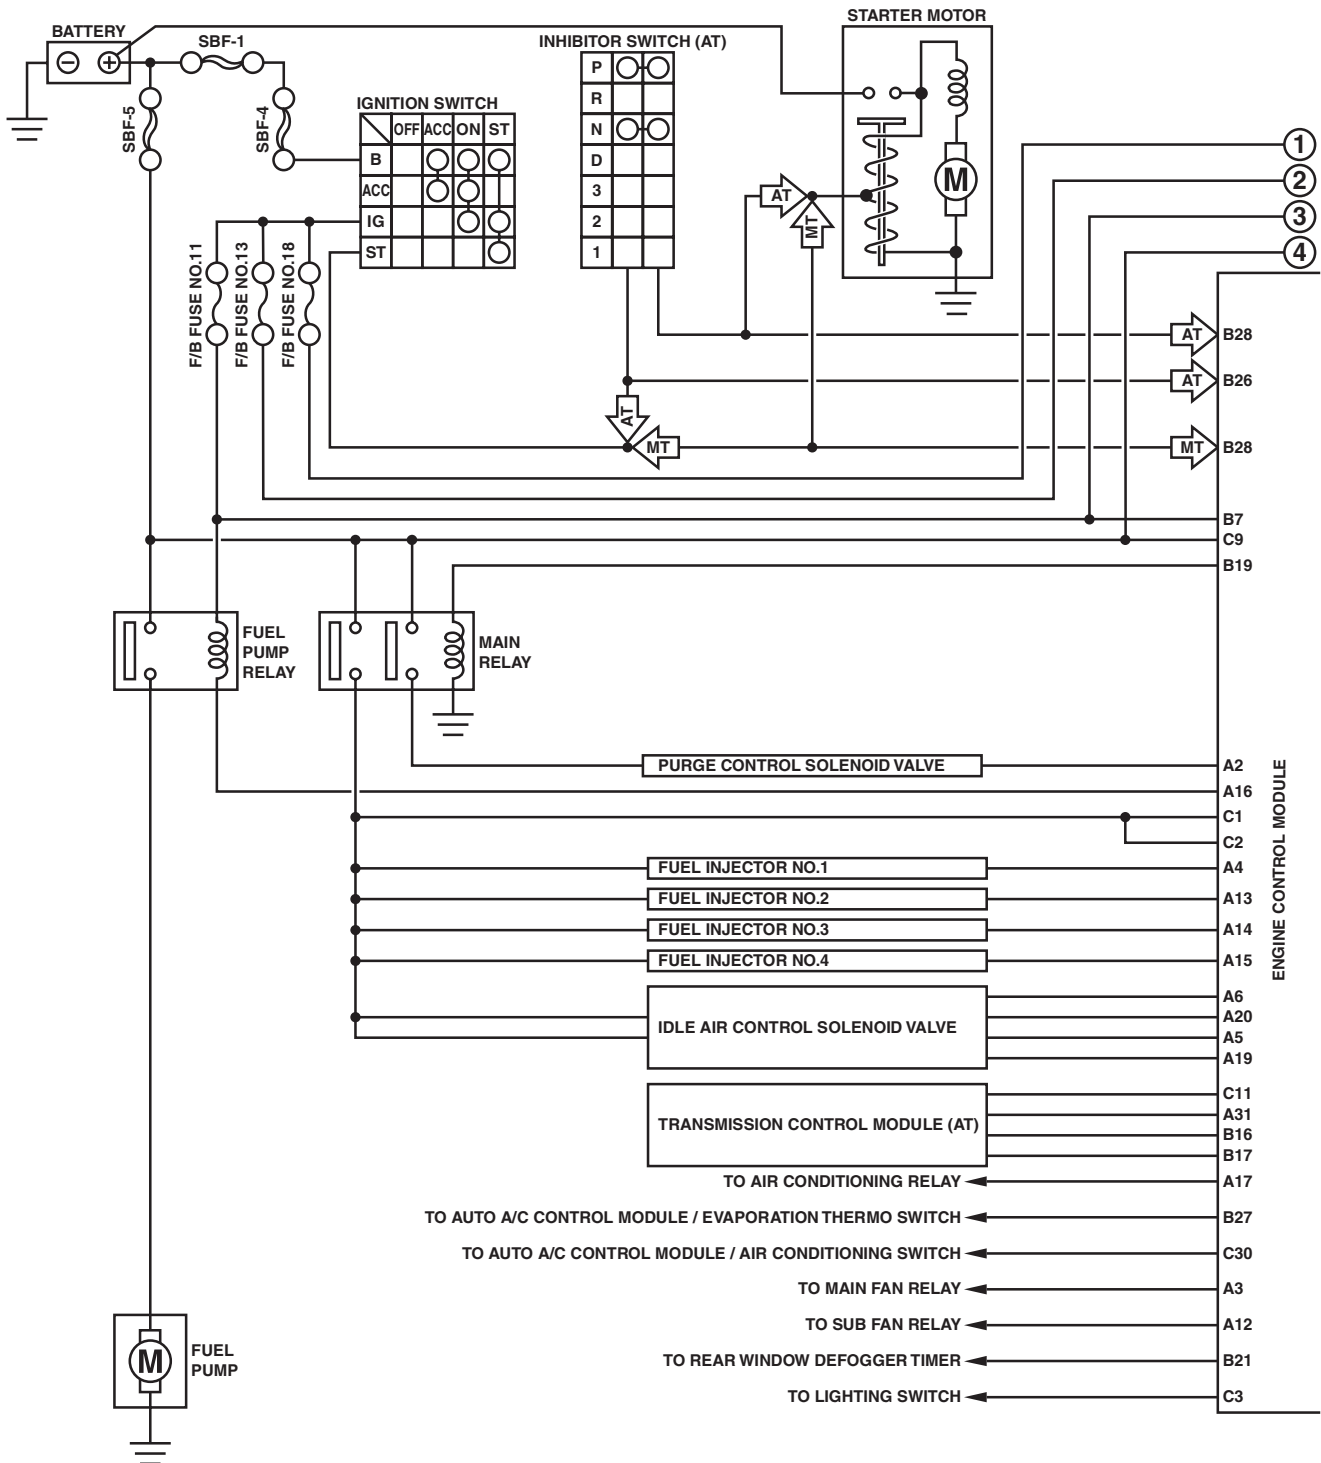

WI-04466

Engine Electrical System


WIRING SYSTEM

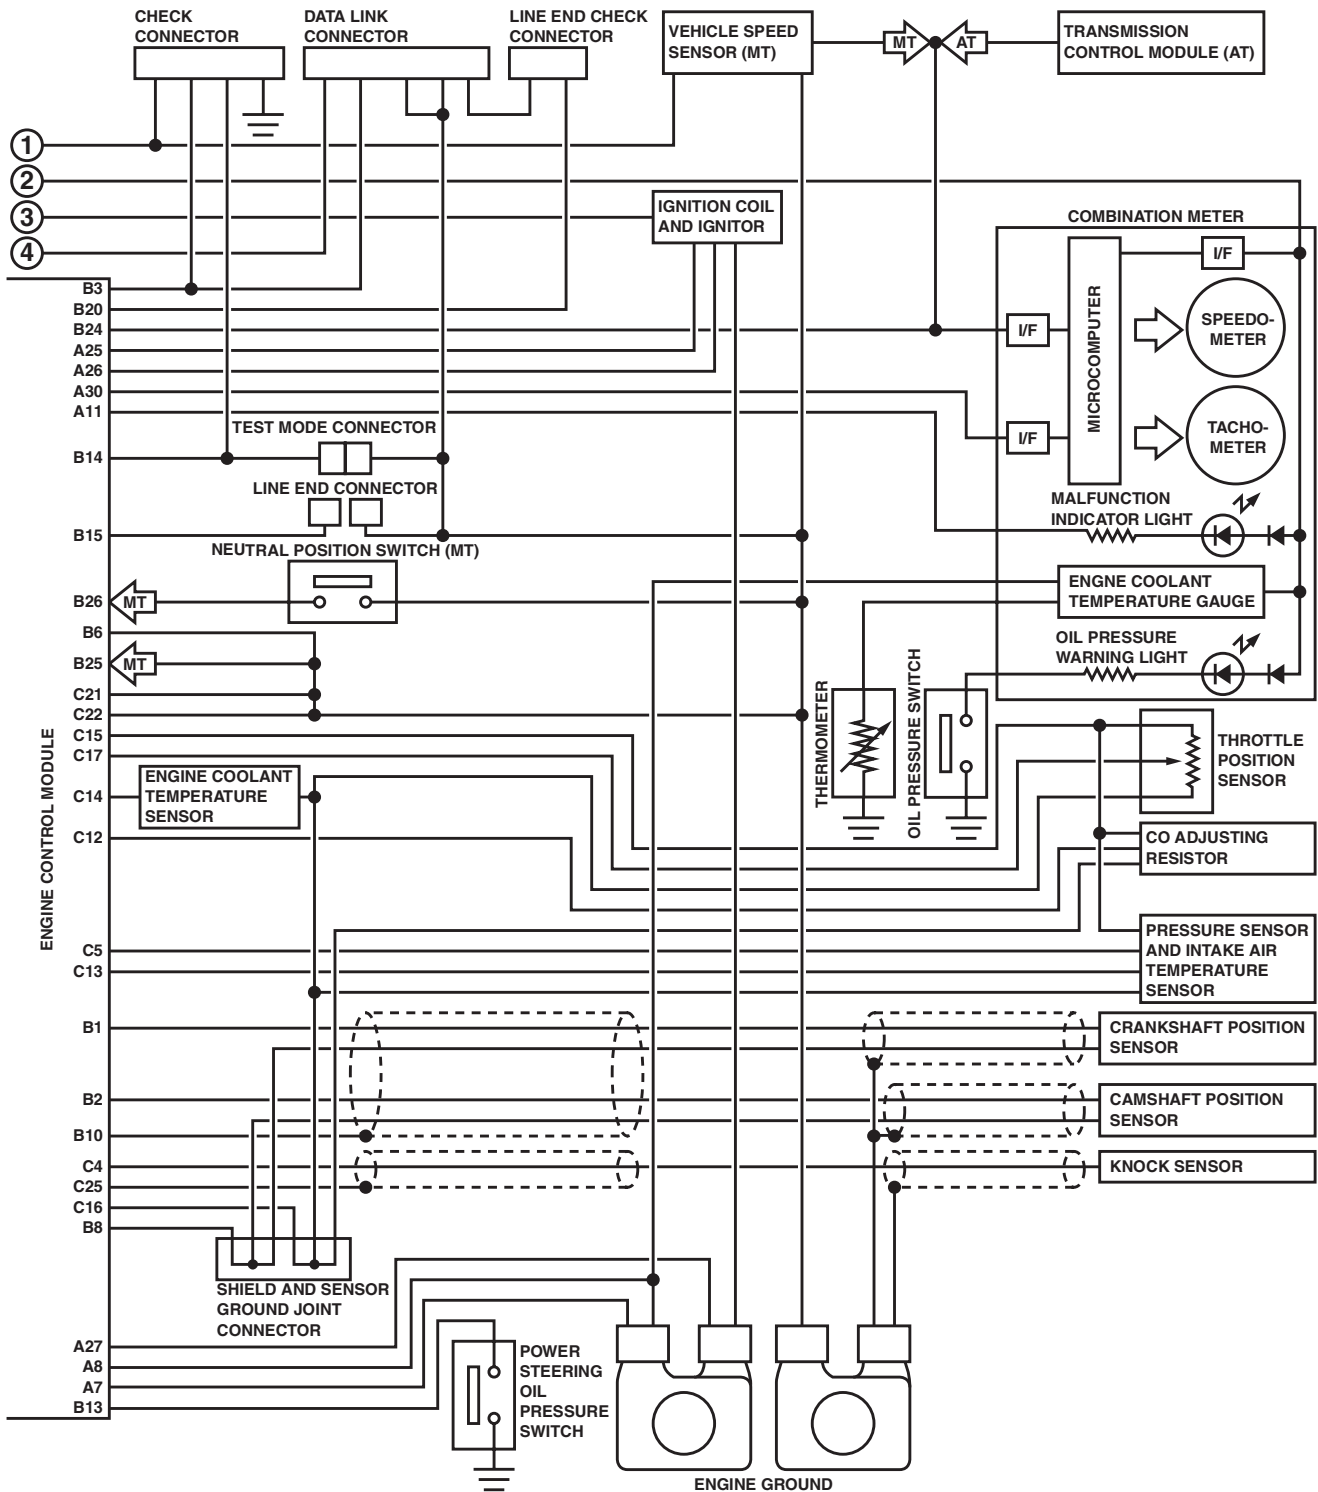

WI-02560

Engine Electrical System


WIRING SYSTEM

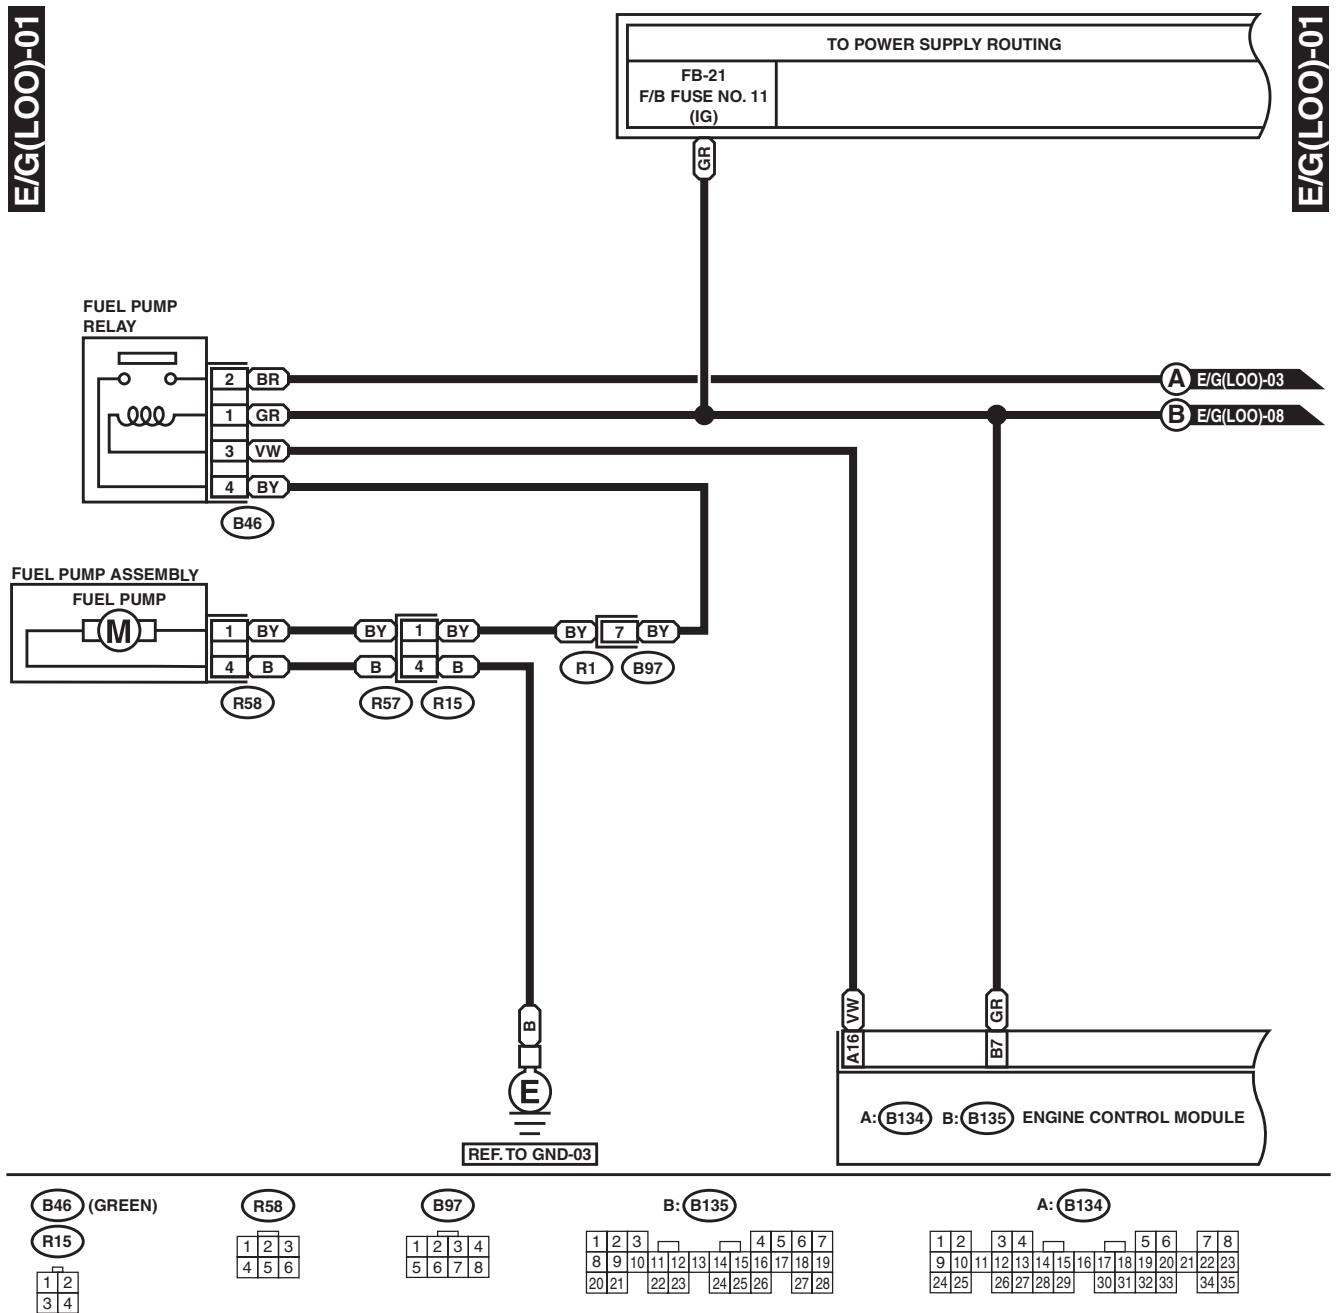

WI-02307

Engine Electrical System


WIRING SYSTEM

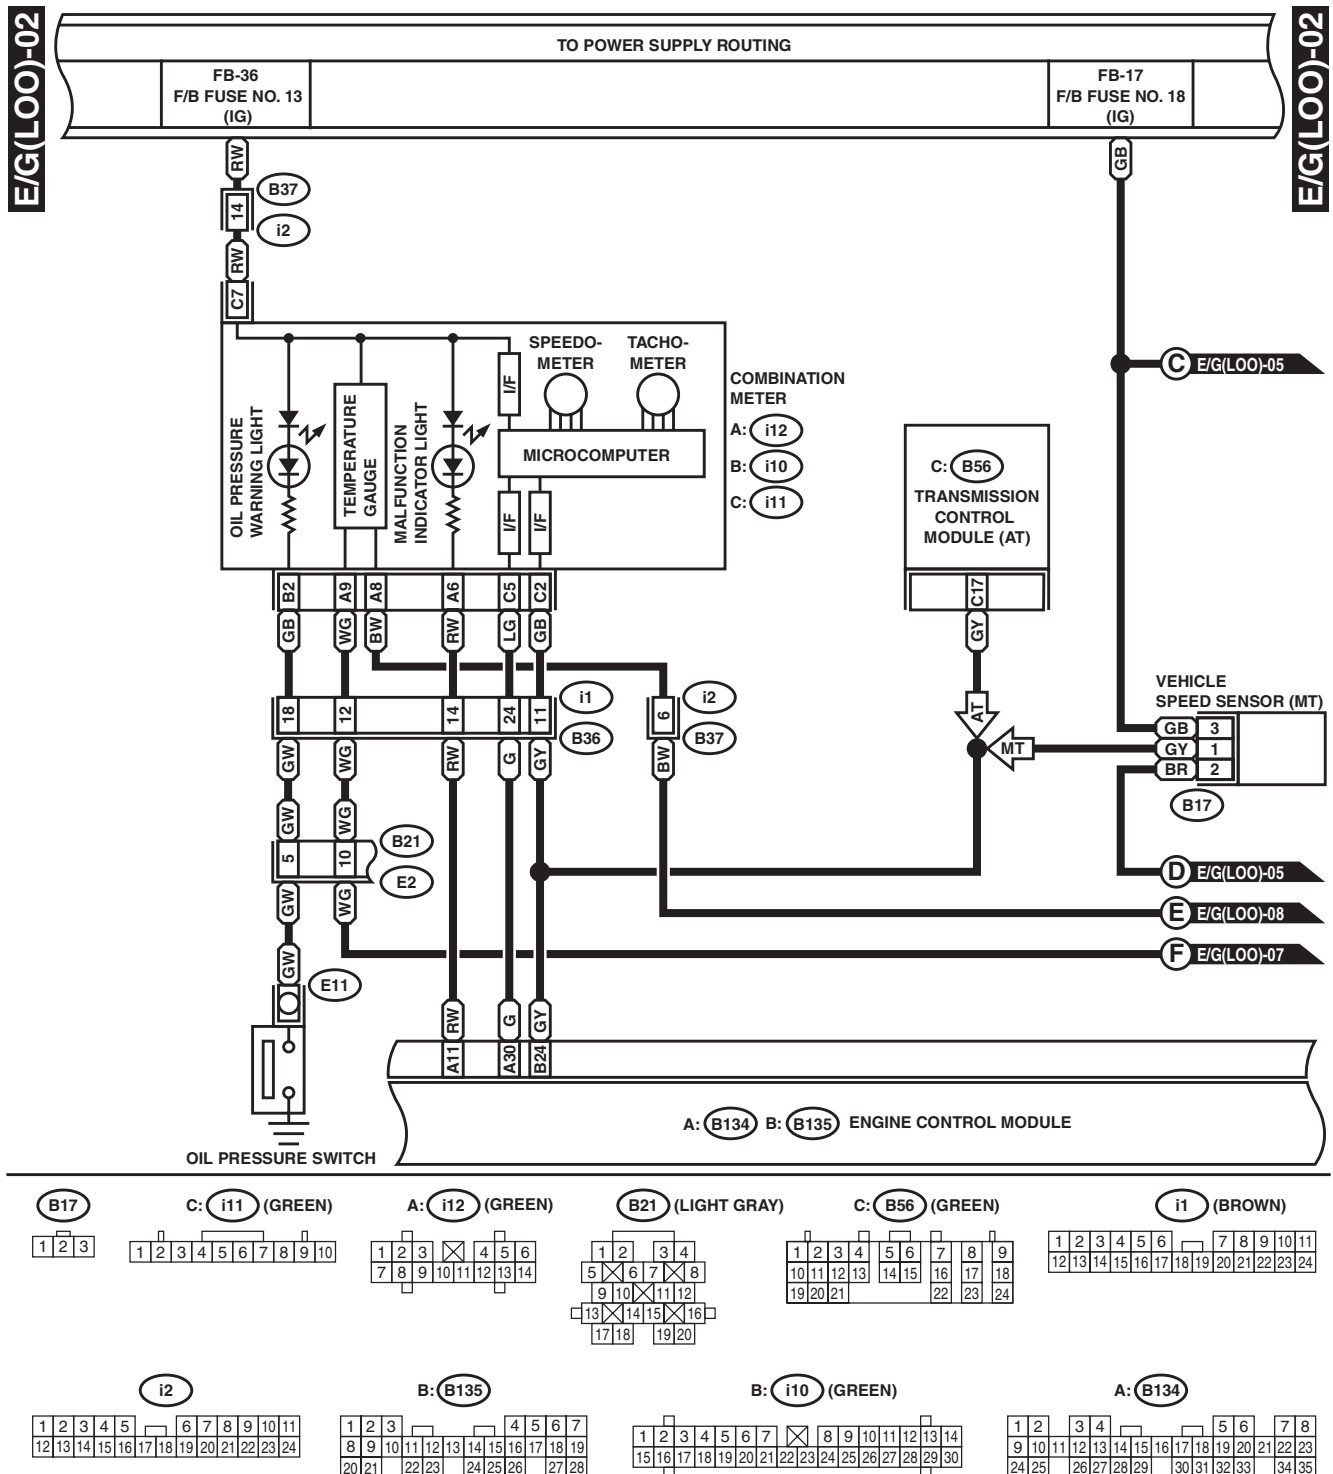

WI-02308

Engine Electrical System


WIRING SYSTEM

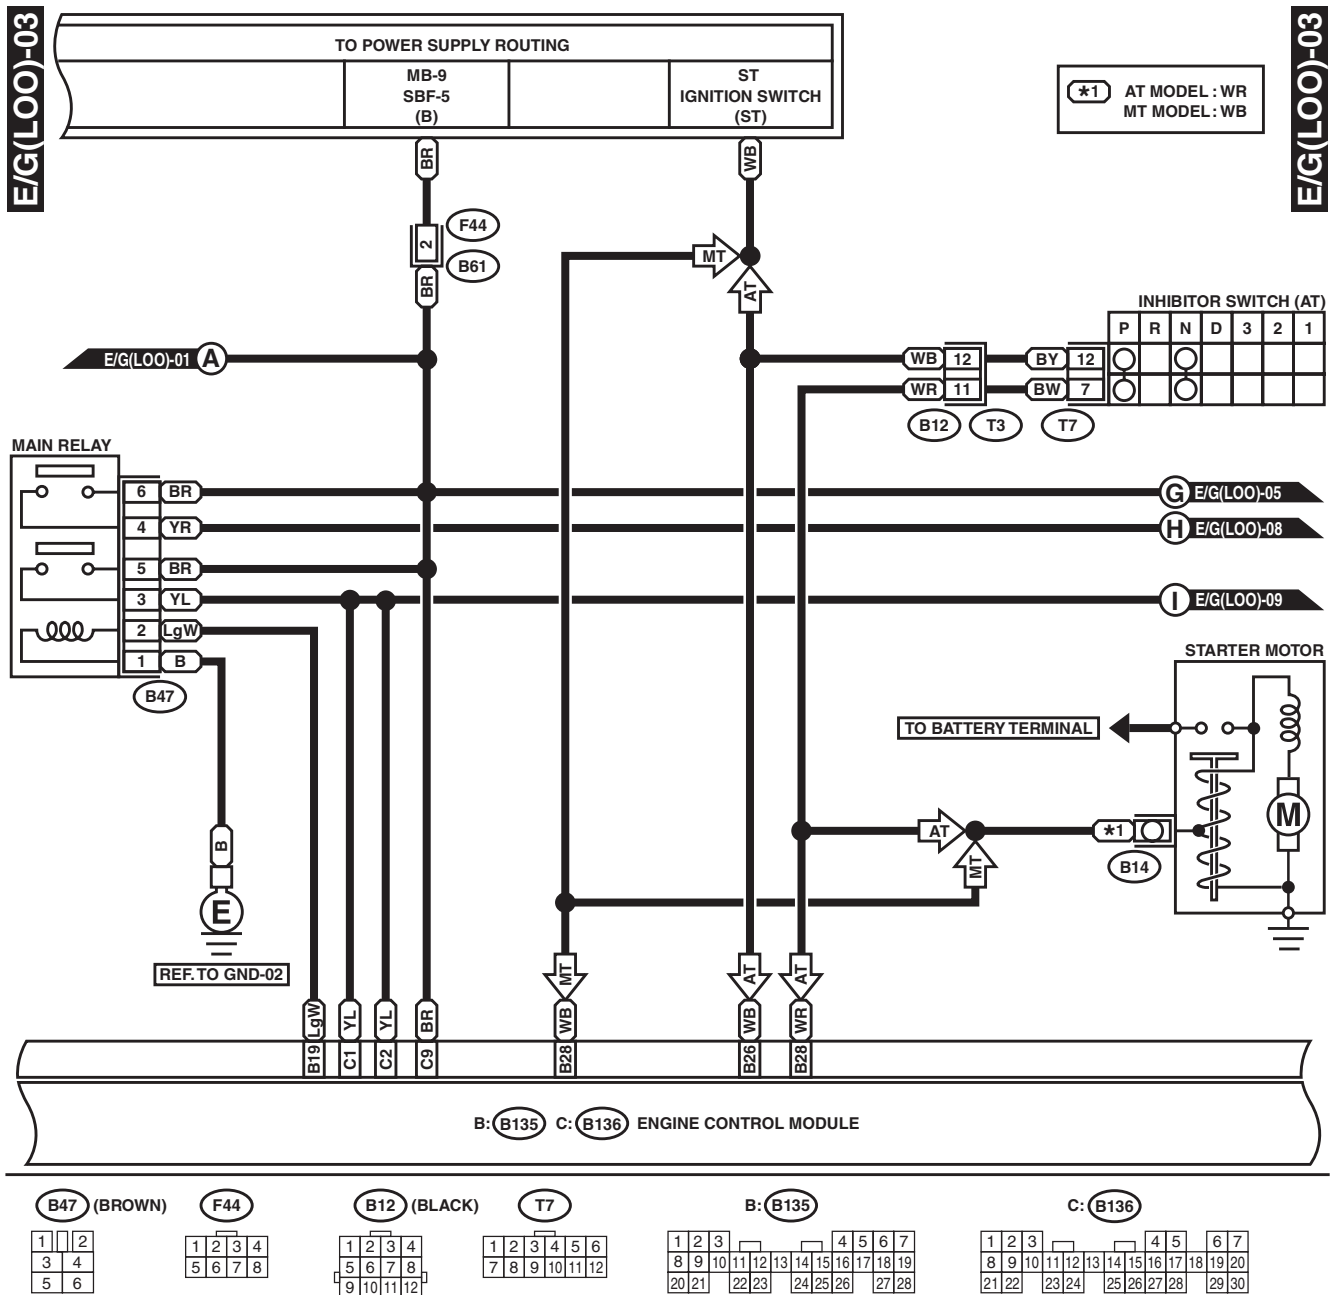

WI-02309

E/G(LOO)-04

E/G(LOO)-04

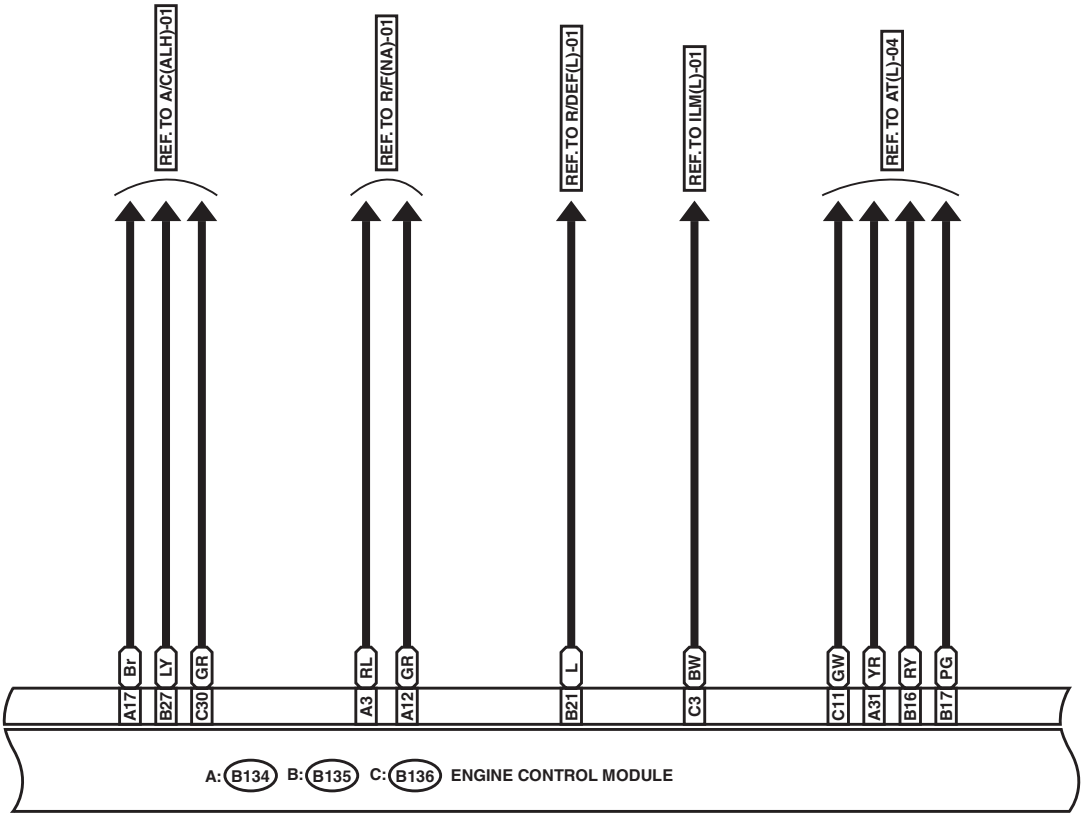

B: B135

1	2	3			4	5	6	7
8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25
26	27	28						

C: B136


1	2	3			4	5	6	7
8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25
26	27	28	29	30				

A: B134

1	2	3	4			5	6	7	8
9	10	11	12	13	14	15	16	17	18
19	20	21	22	23	24	25	26	27	28
29	30	31	32	33	34	35			

Engine Electrical System


WIRING SYSTEM

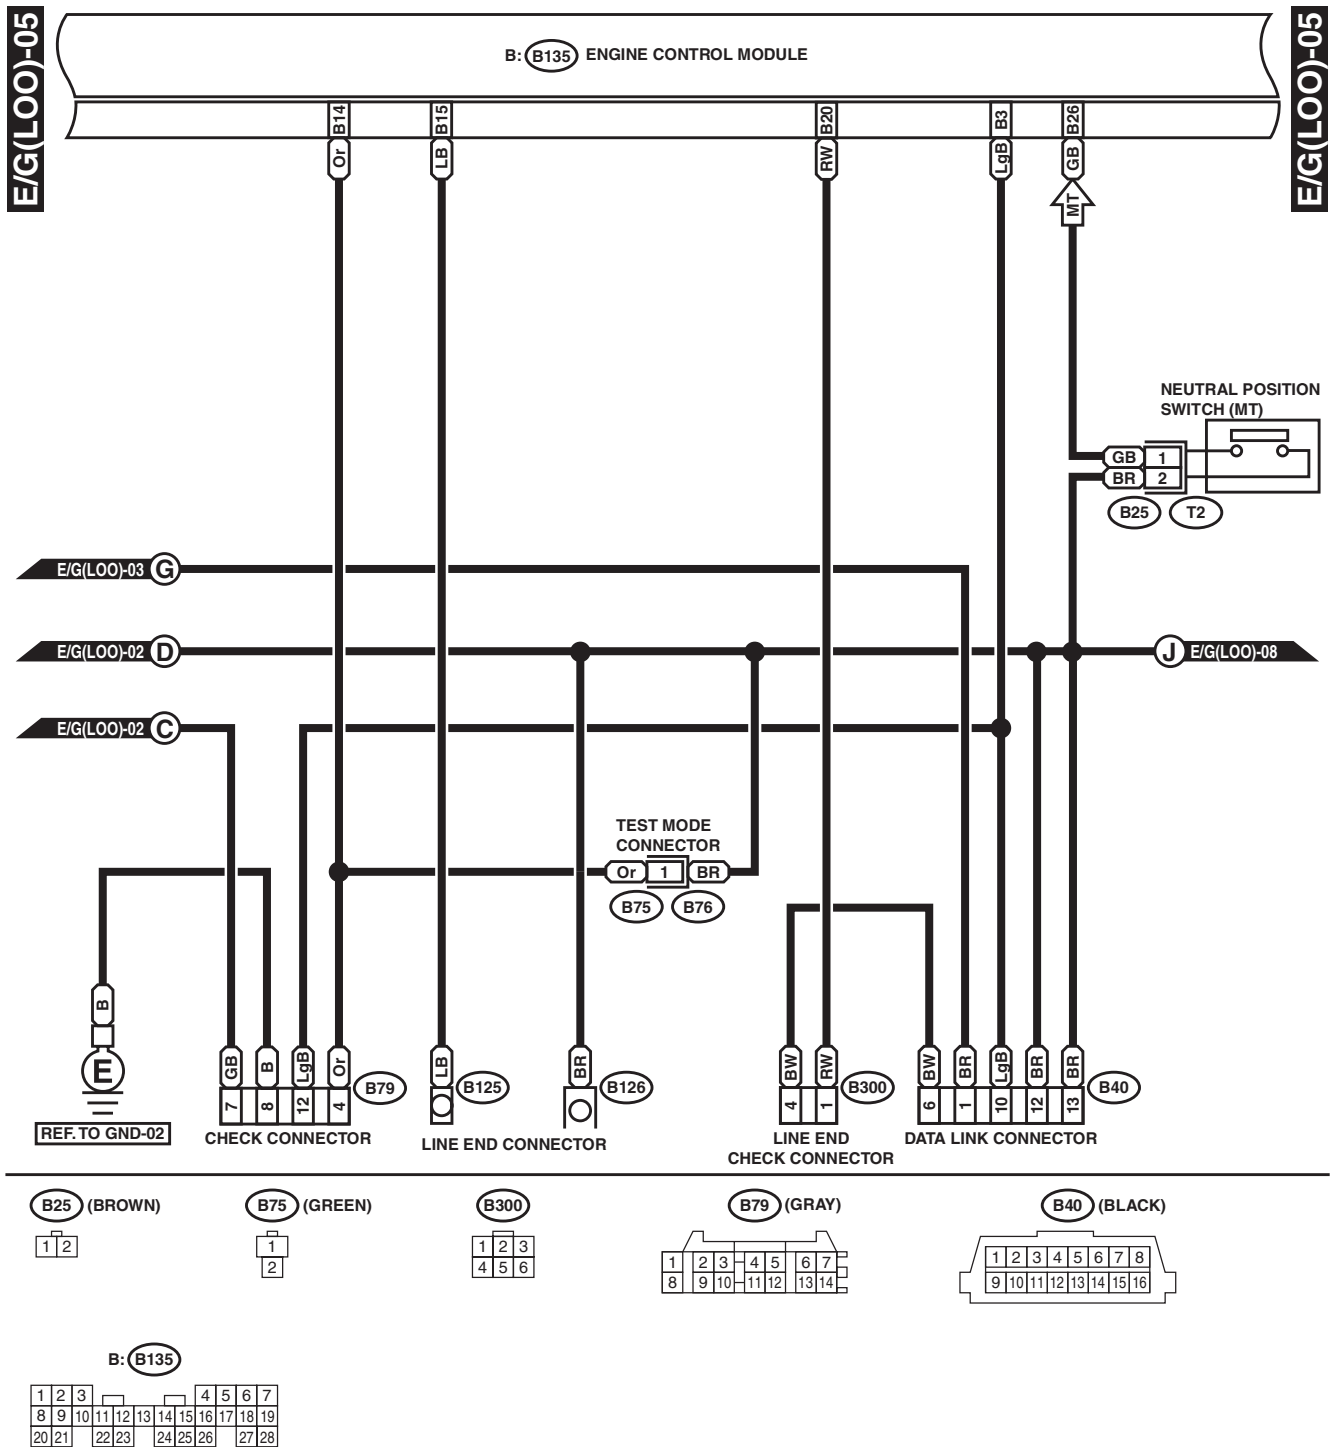

WI-02311


Engine Electrical System

WIRING SYSTEM

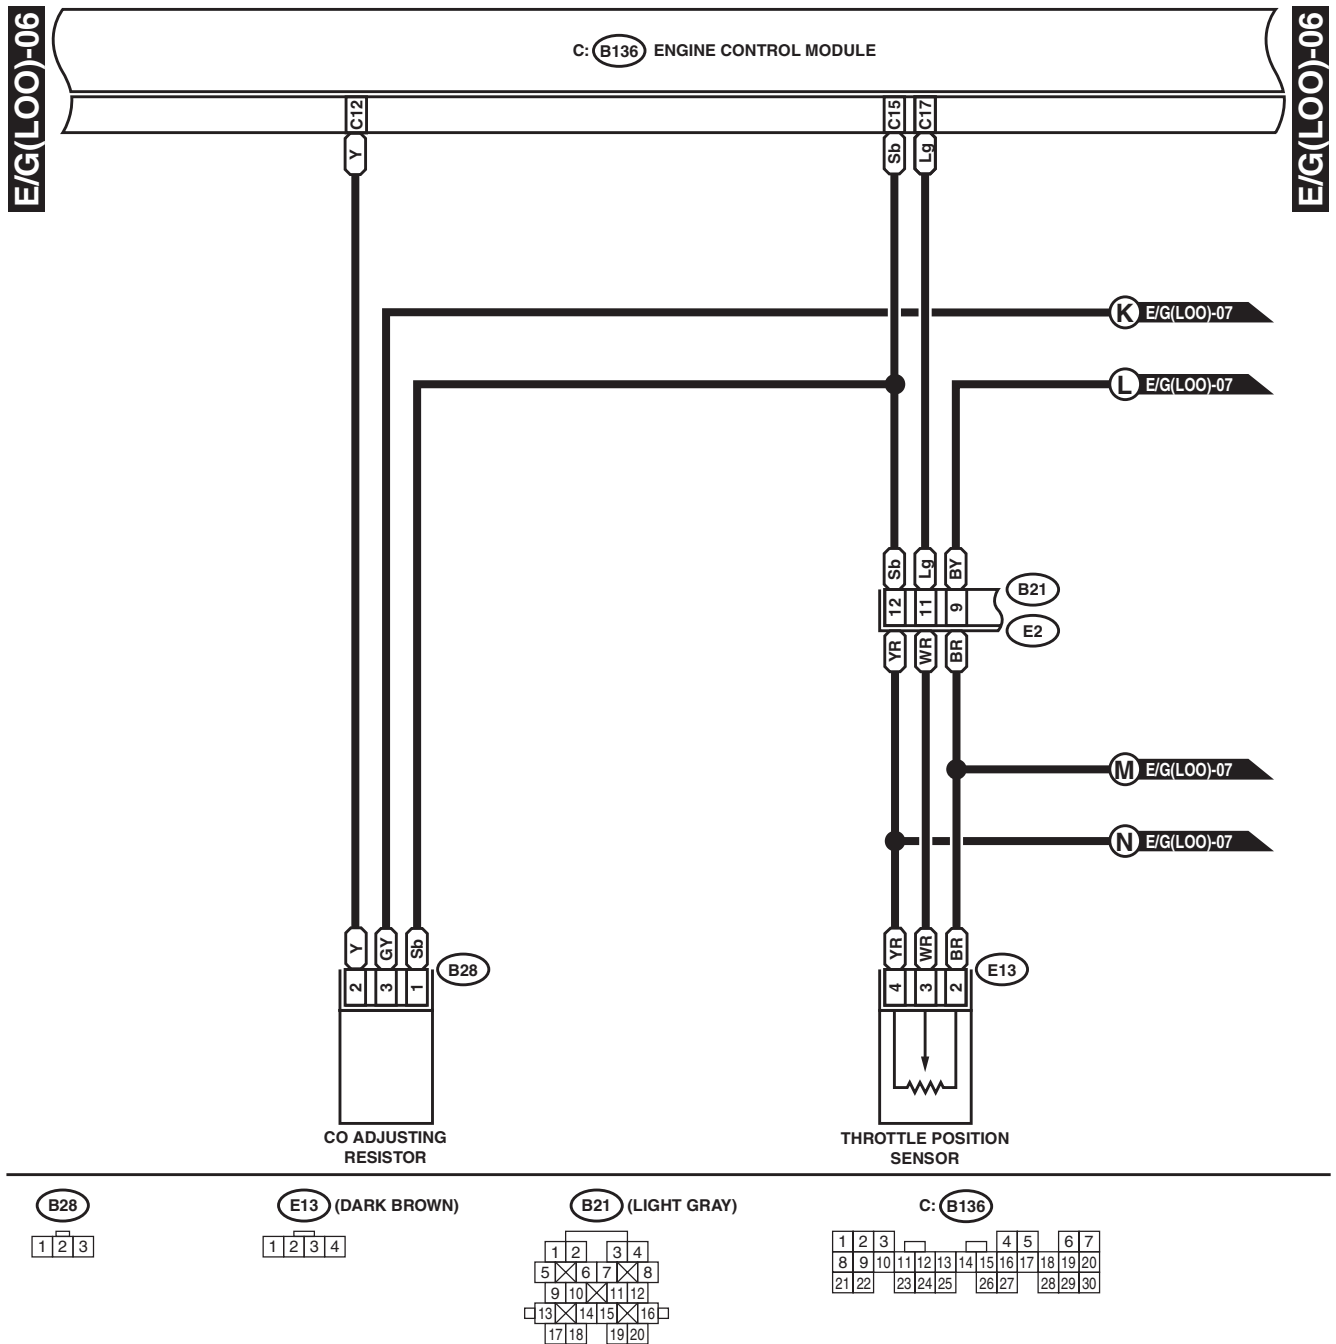


WI-04547

WIRING SYSTEM

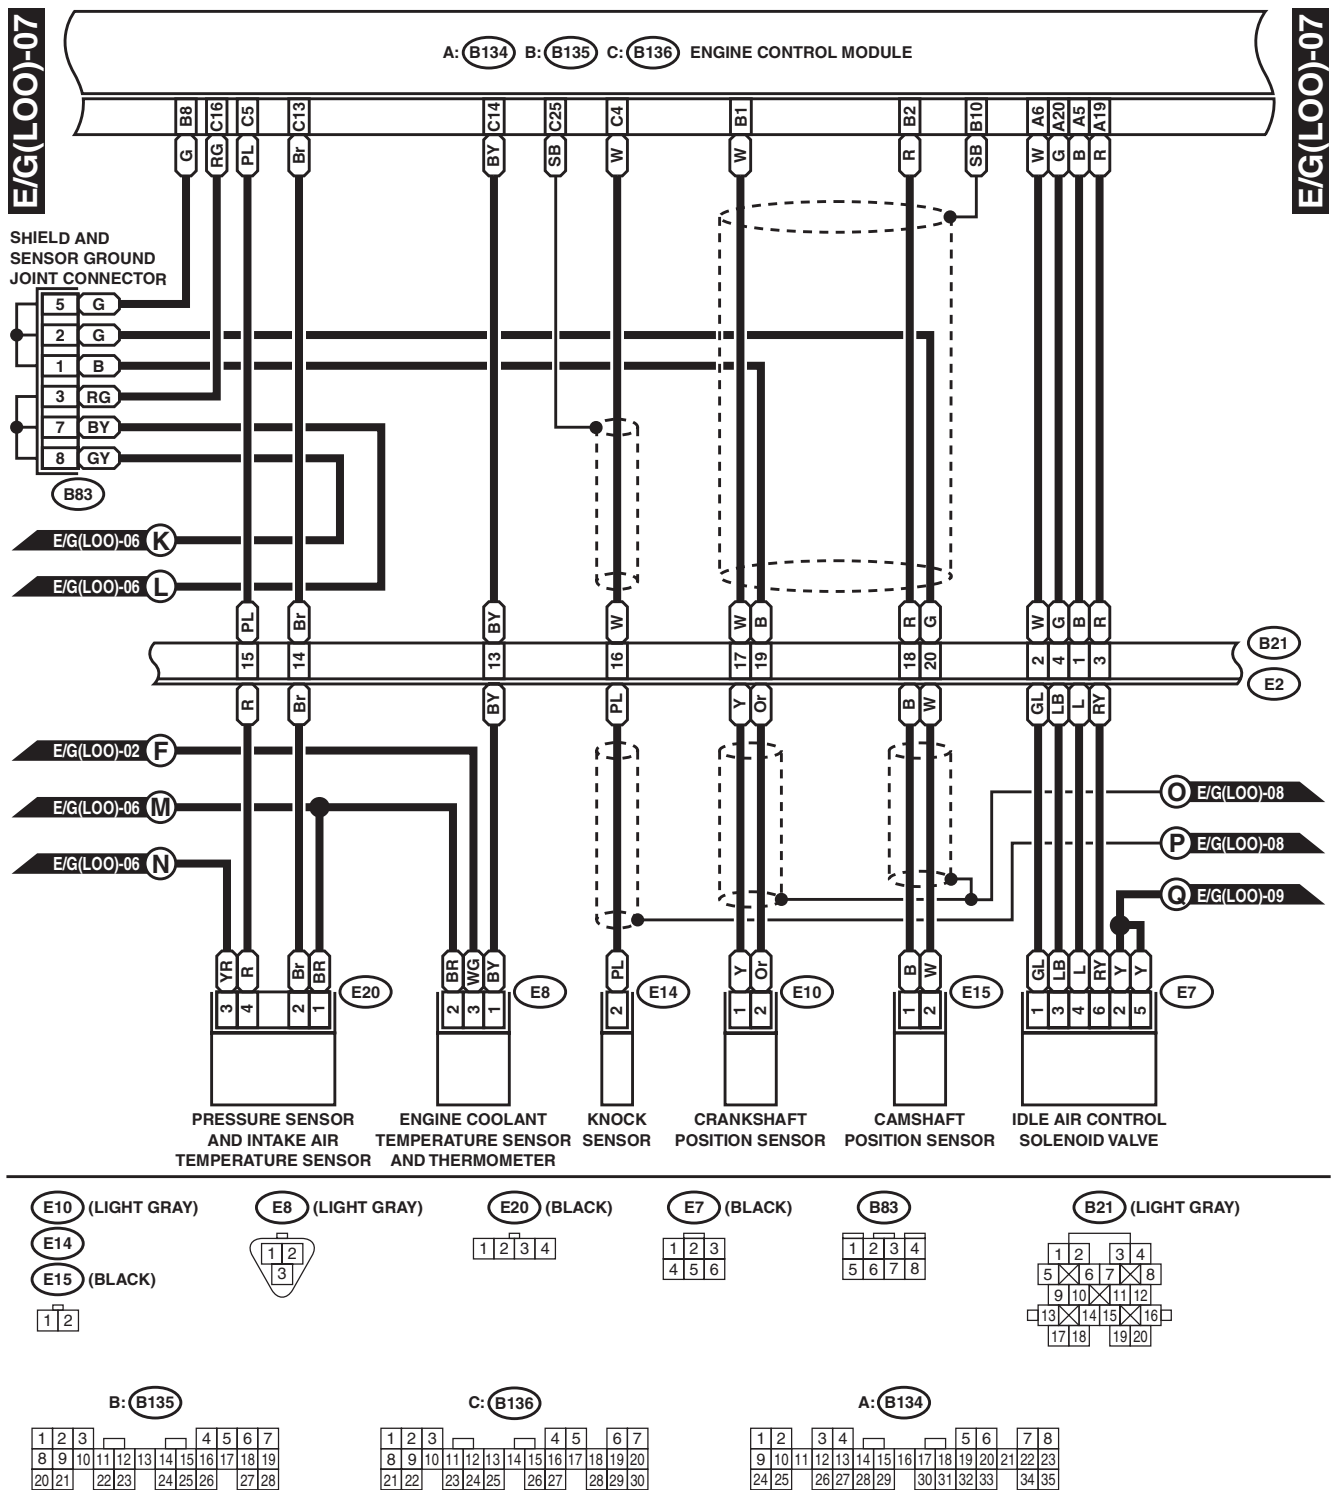

Engine Electrical System


WIRING SYSTEM

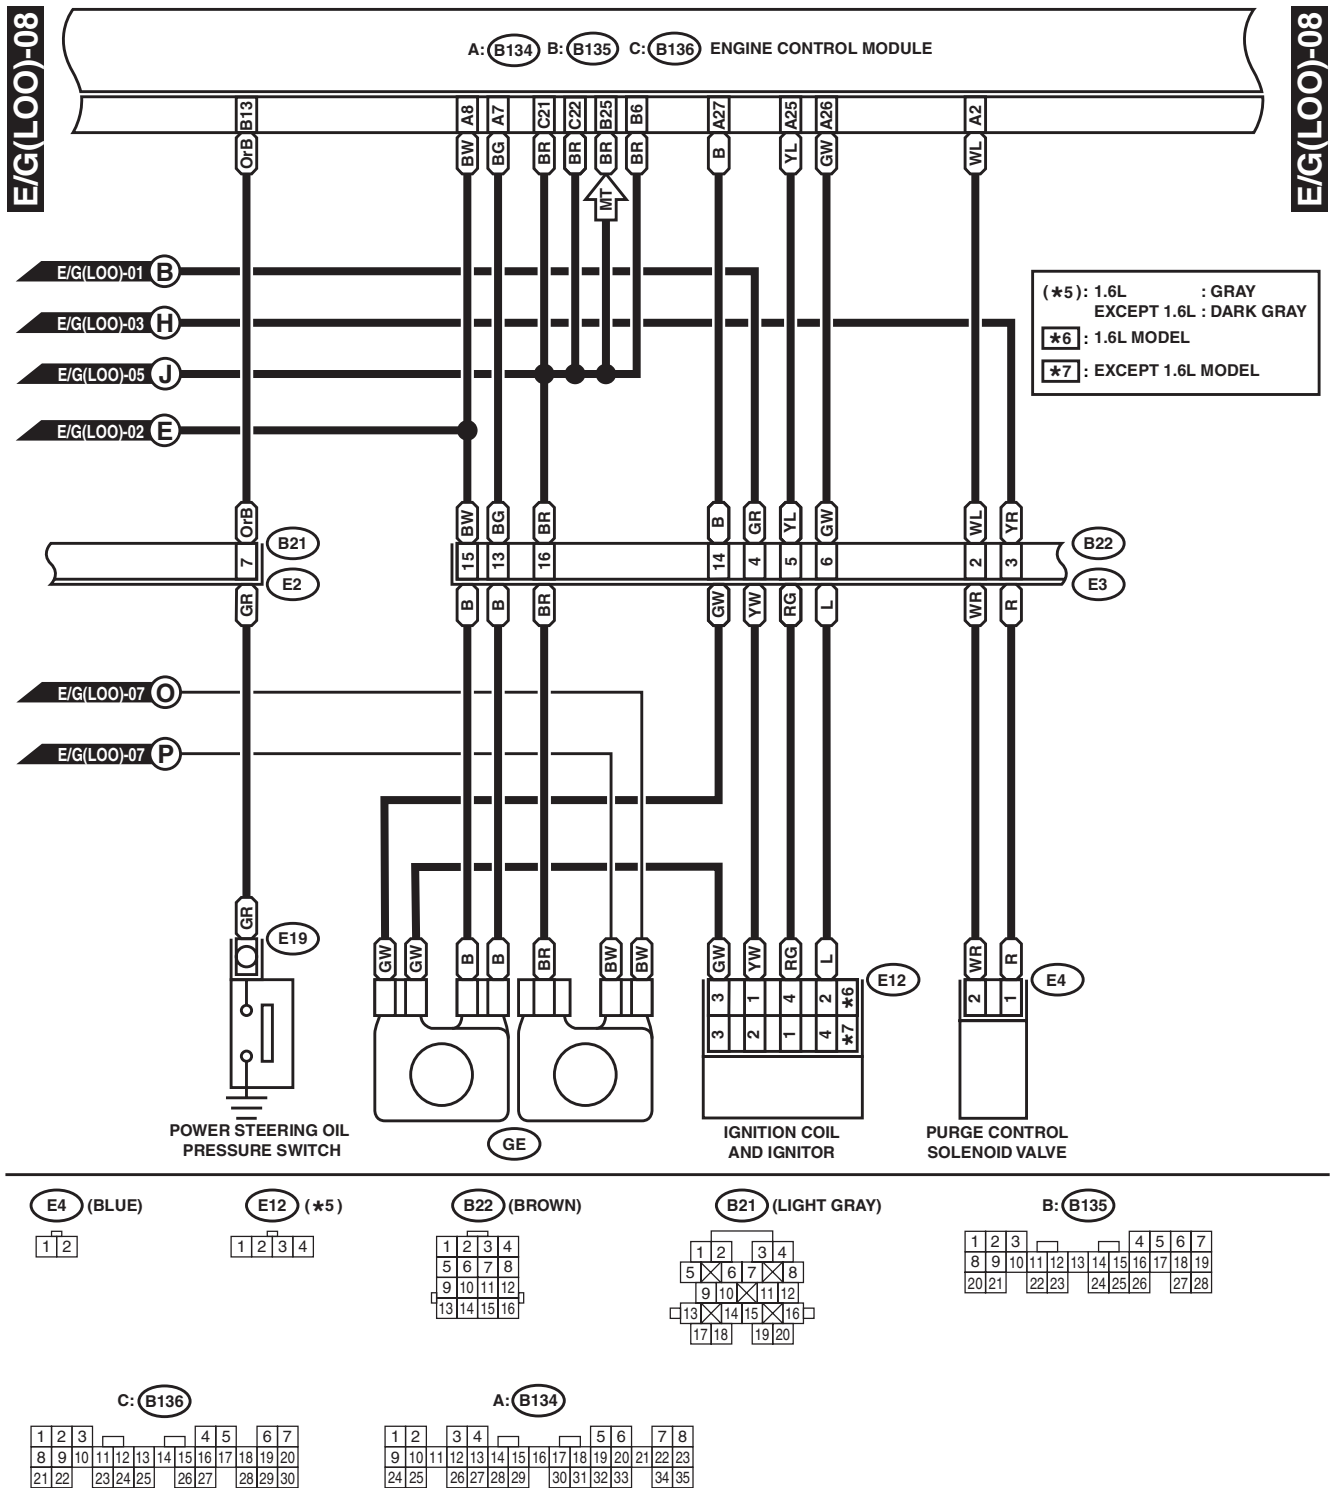

WI-02314

Engine Electrical System

WIRING SYSTEM

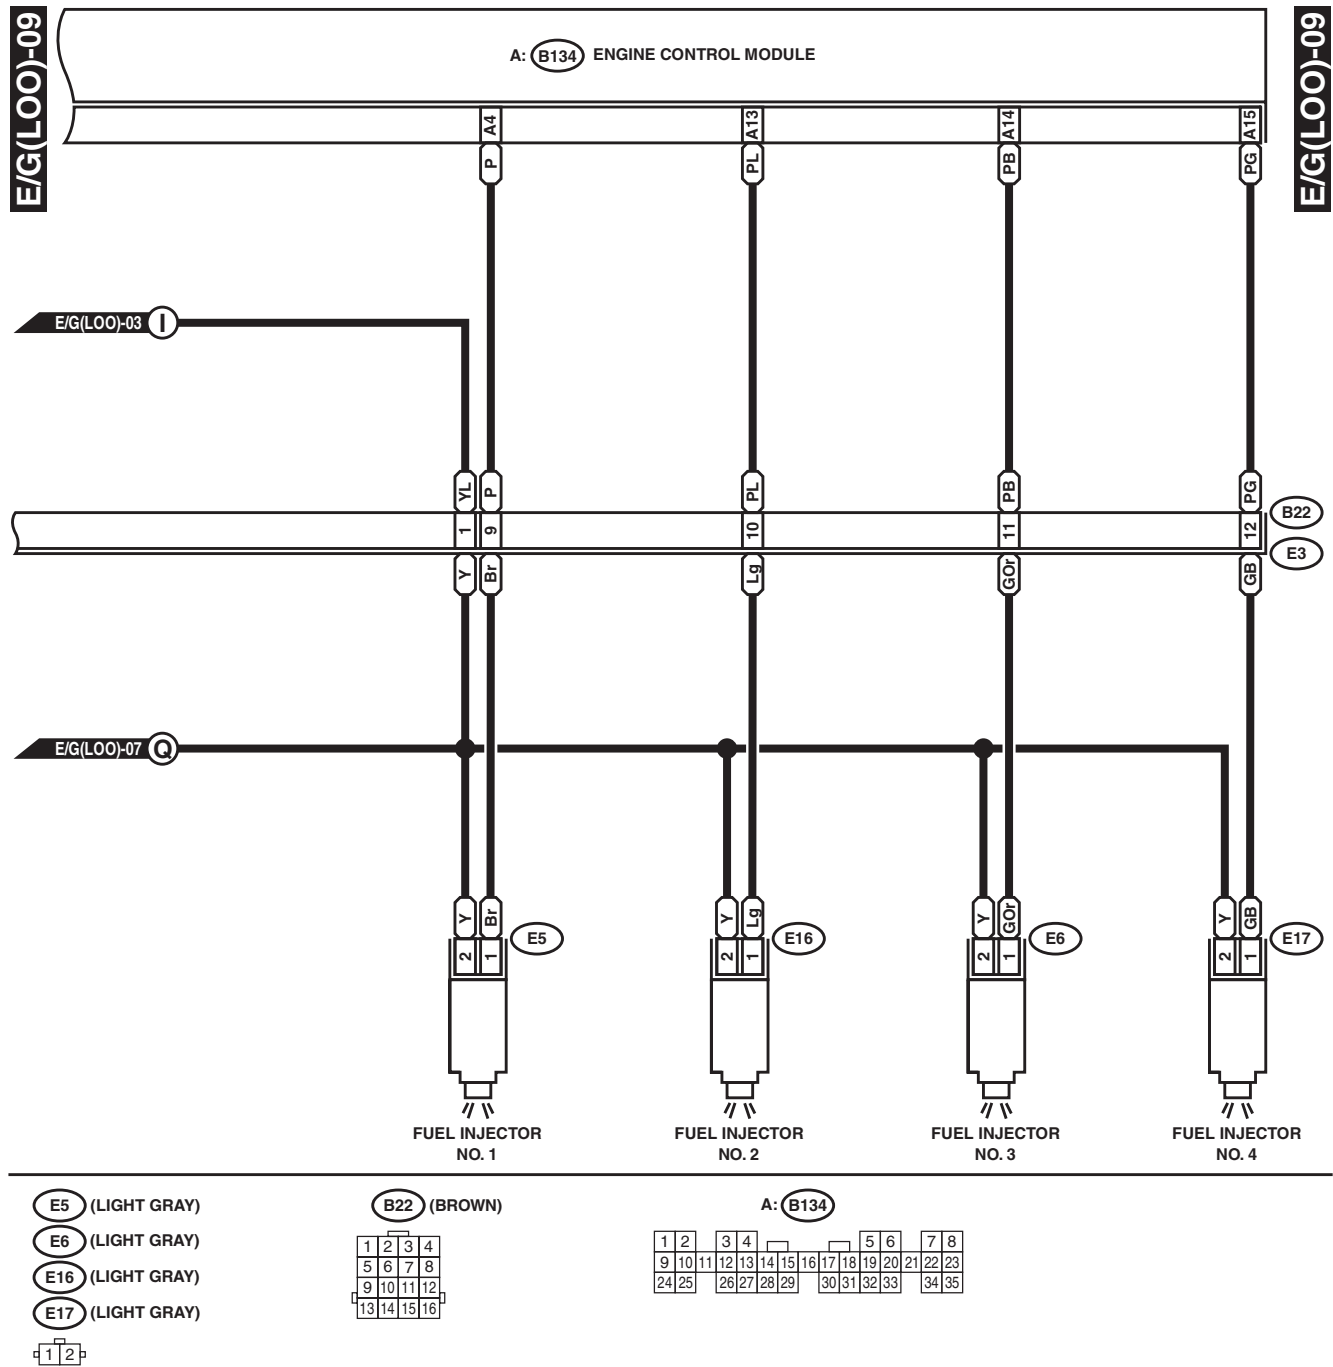


WI-02315

Engine Electrical System

WIRING SYSTEM


2. LHD SOHC WITH OBD MODEL

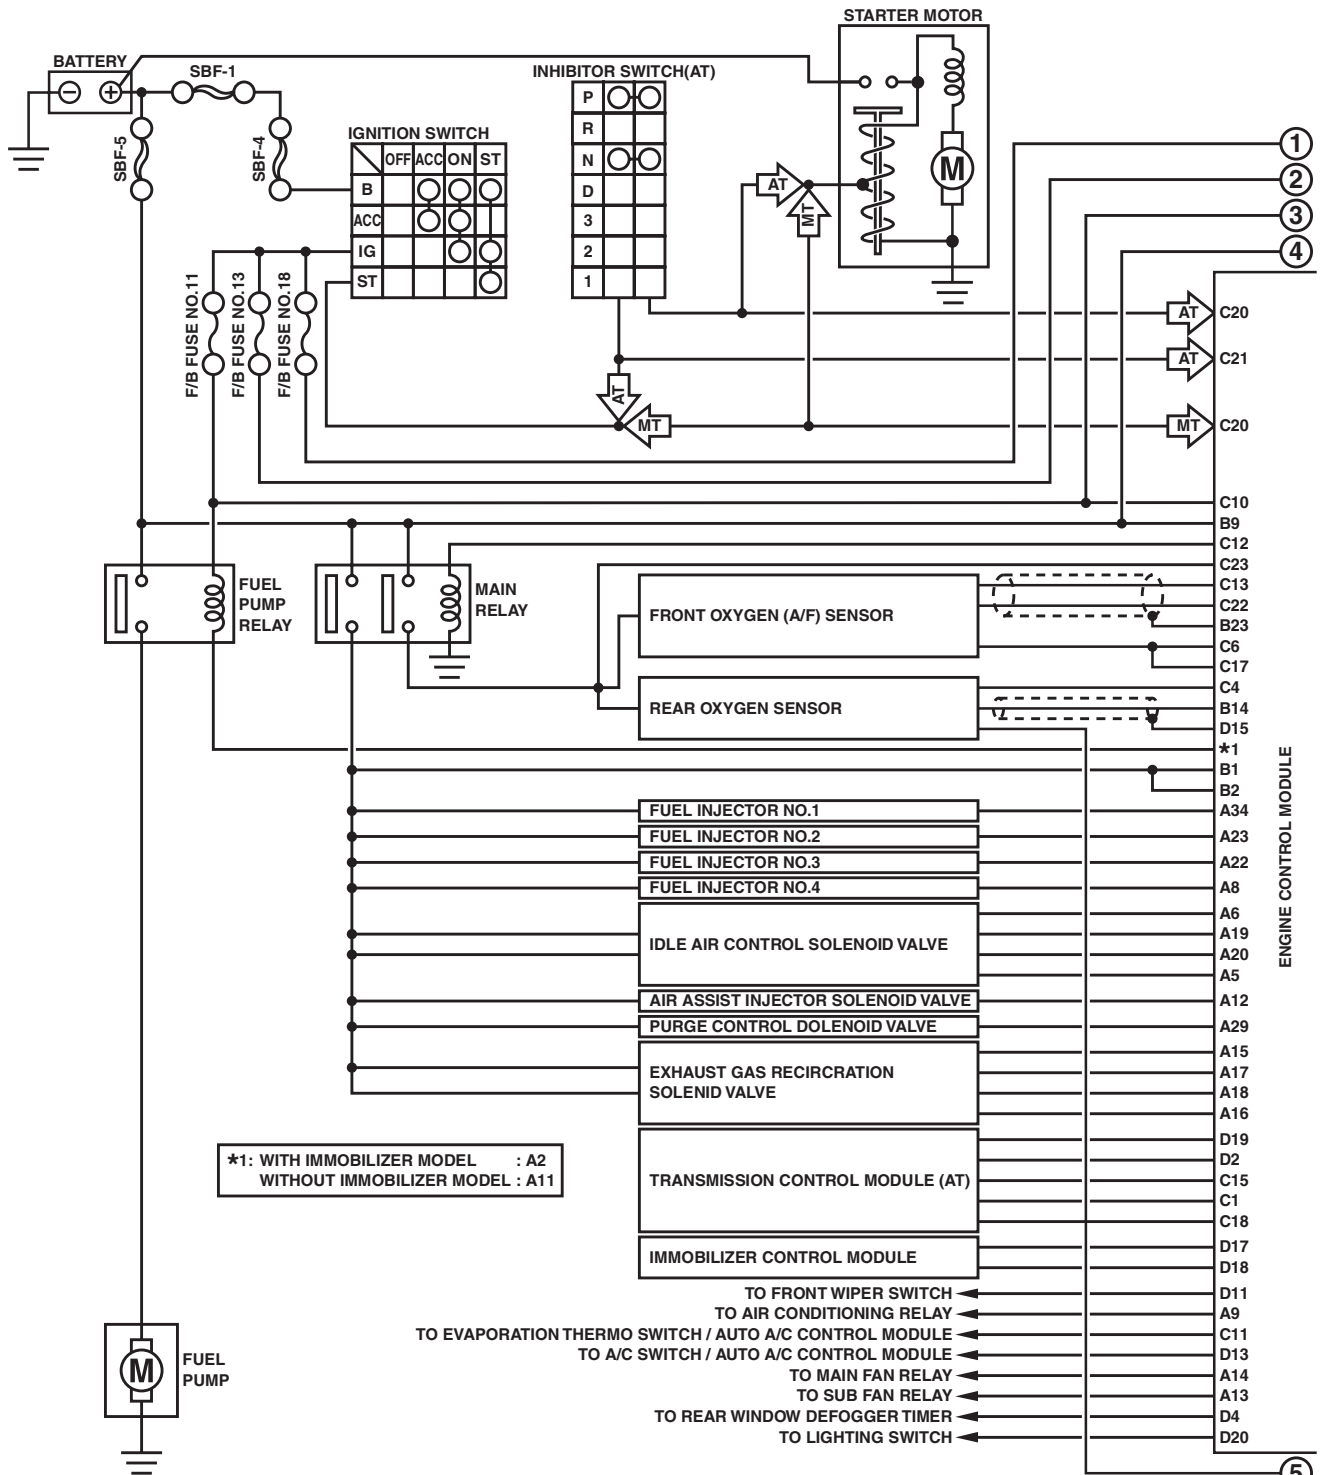

WI-04467

Engine Electrical System


WIRING SYSTEM

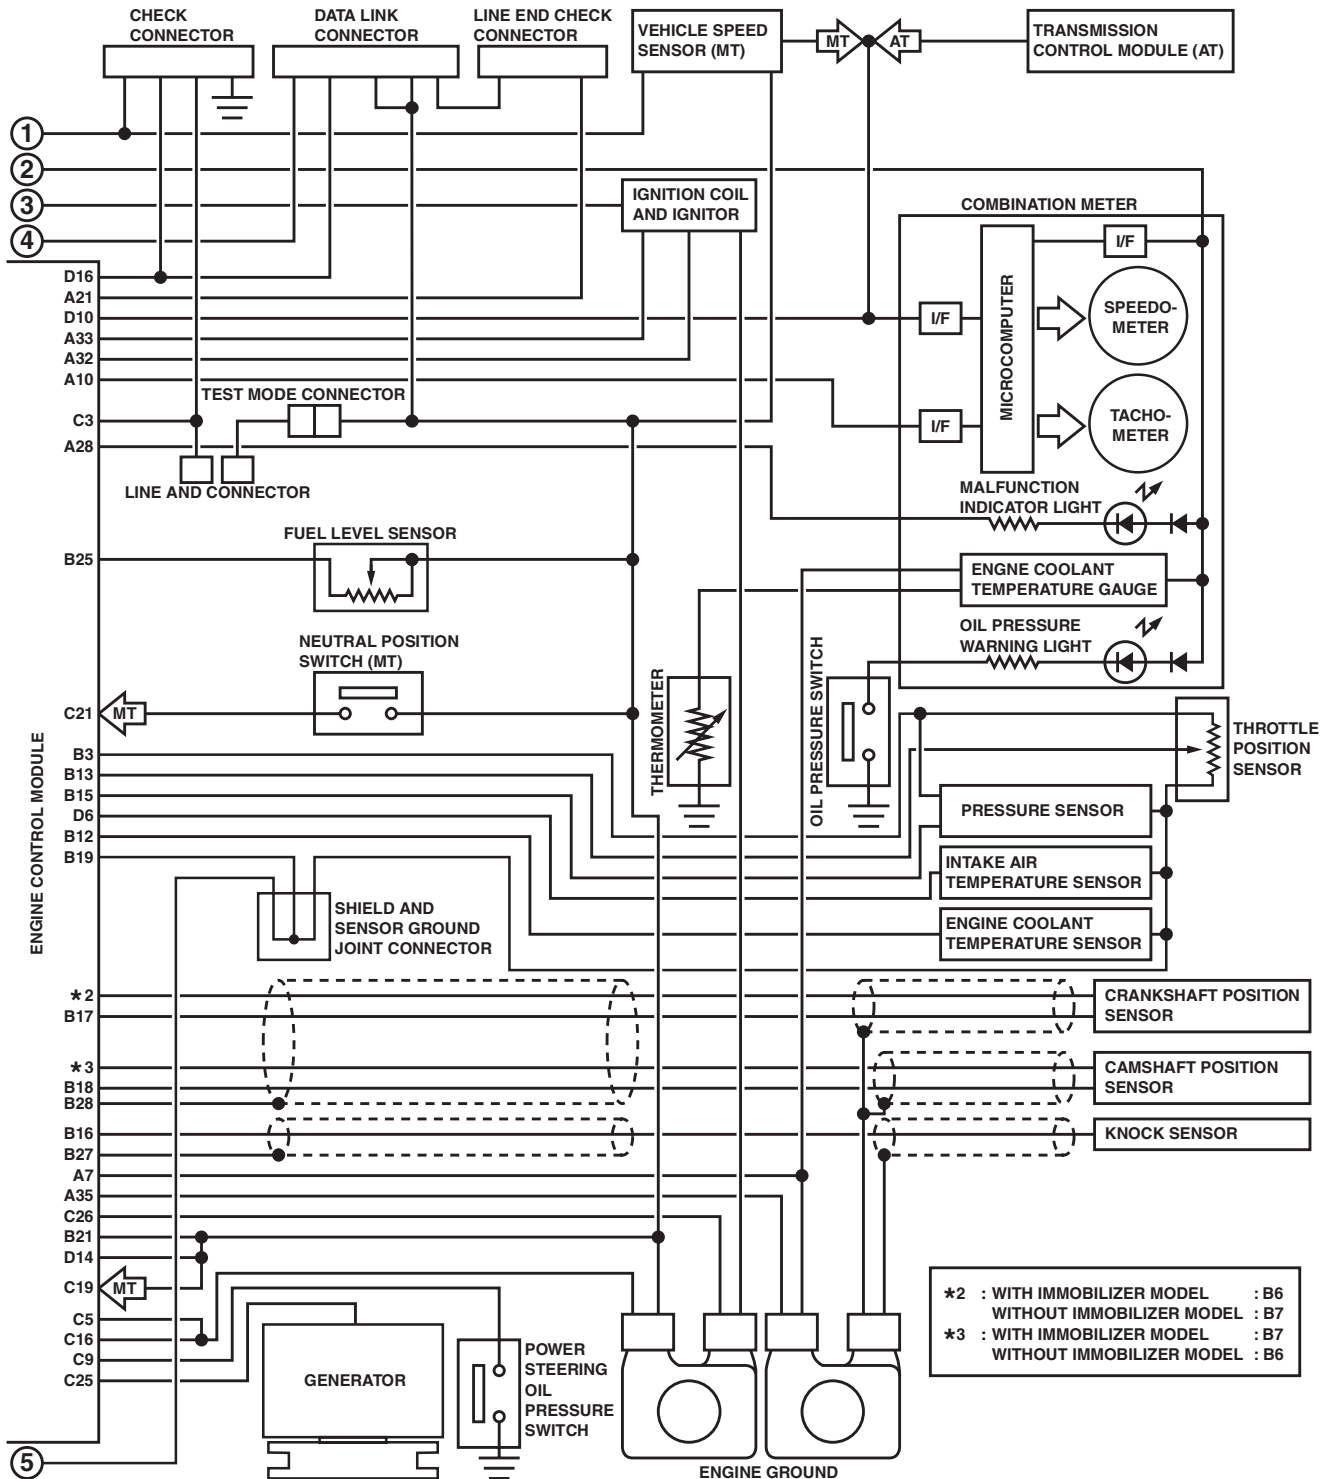

WI-02562

Engine Electrical System


WIRING SYSTEM

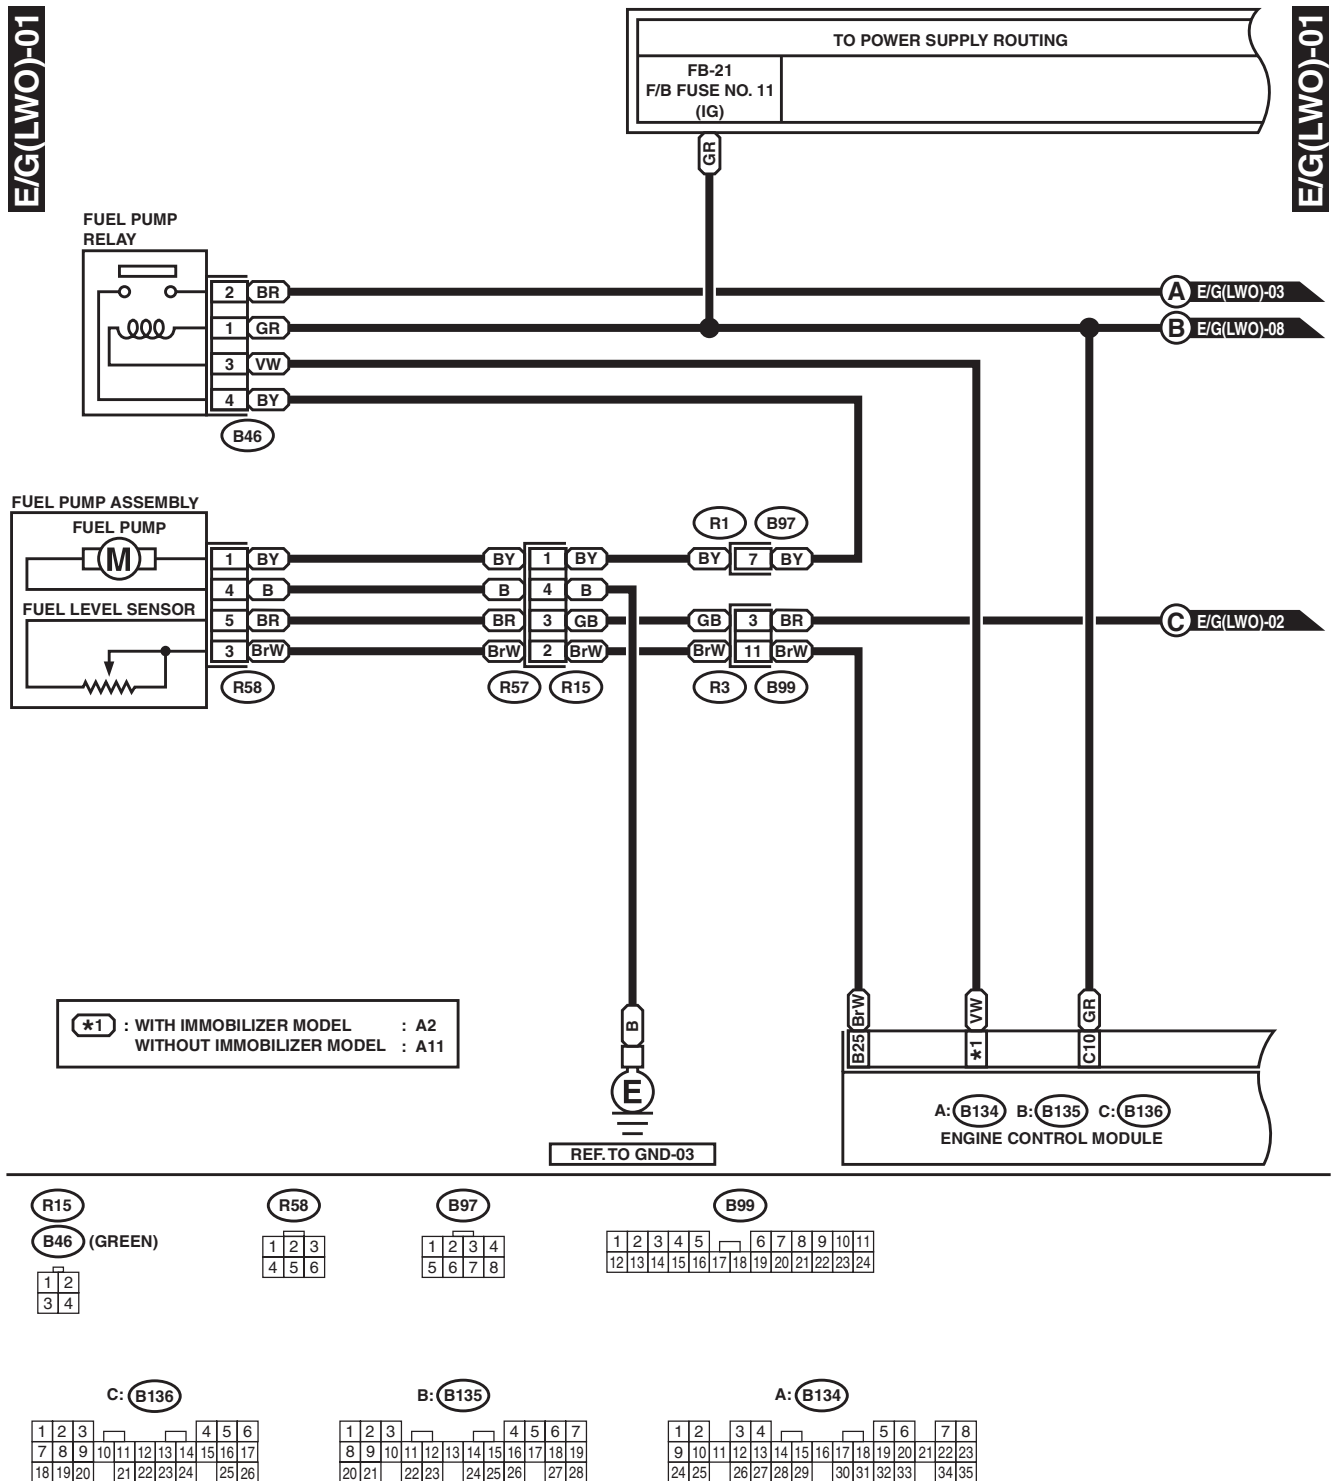

WI-02316

Engine Electrical System


WIRING SYSTEM

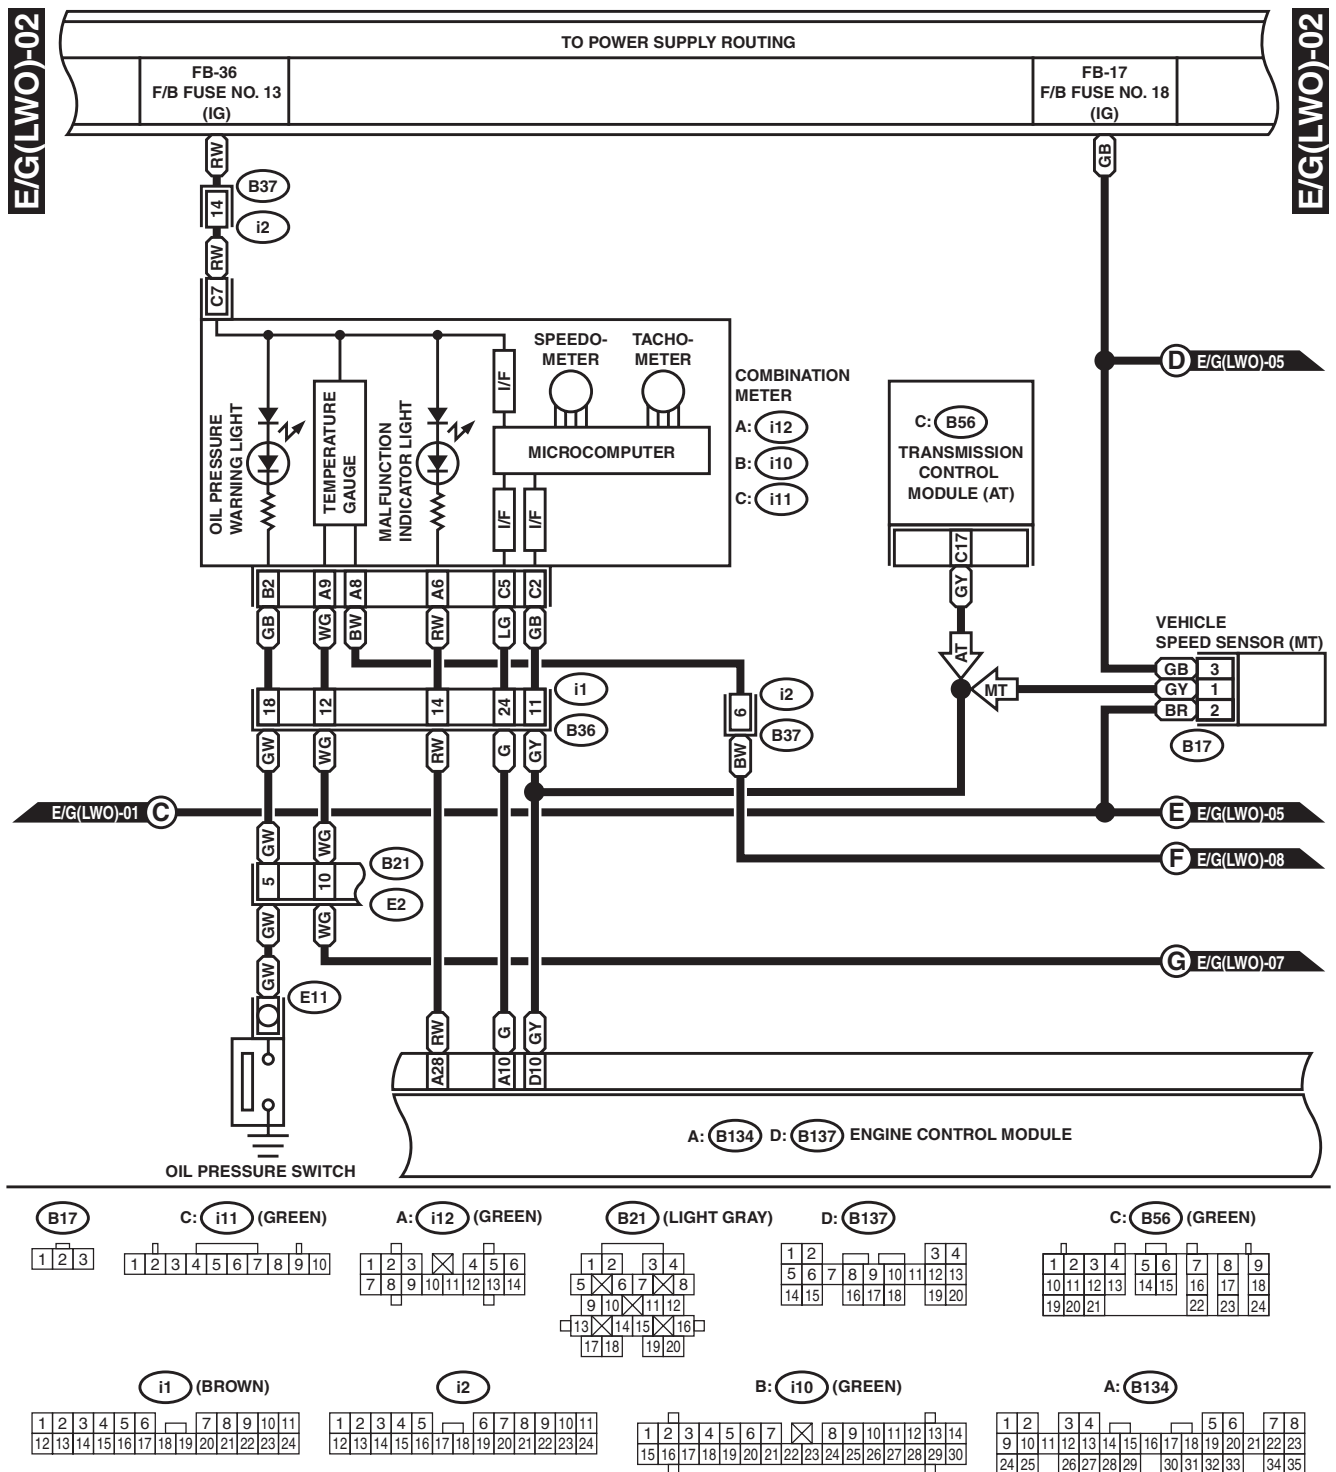

WI-02317

Engine Electrical System


WIRING SYSTEM

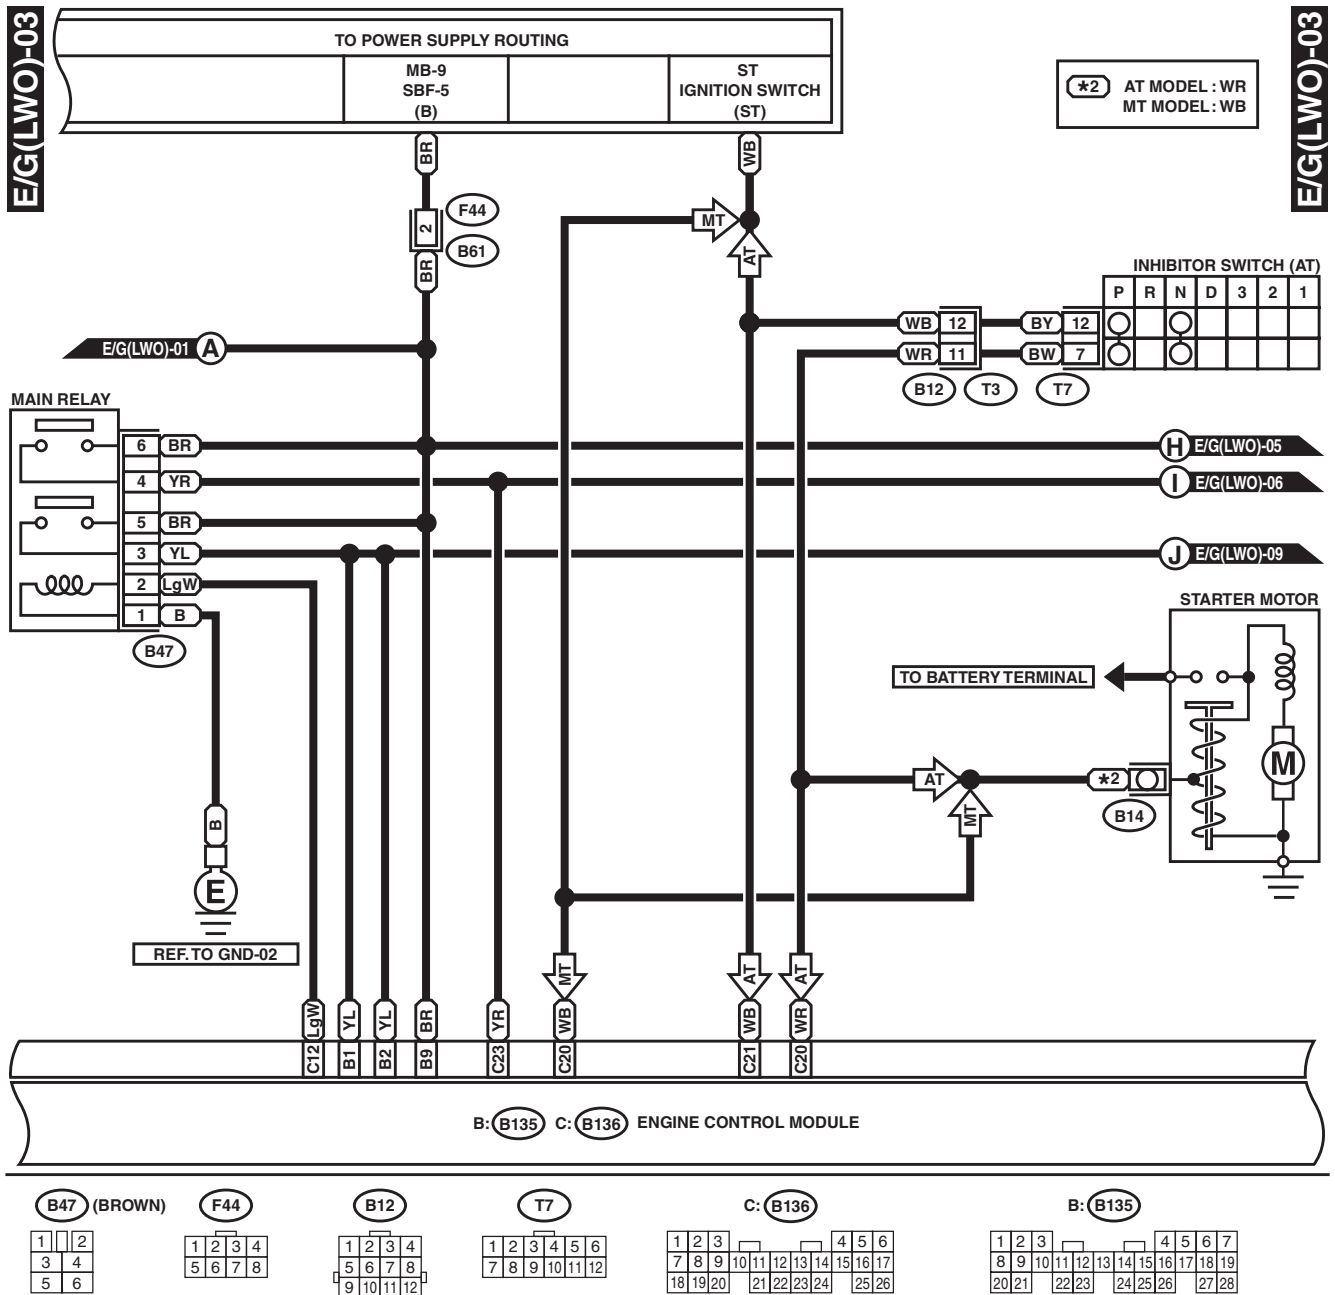

WI-02318


E/G(LWO)-04

E/G(LWO)-04

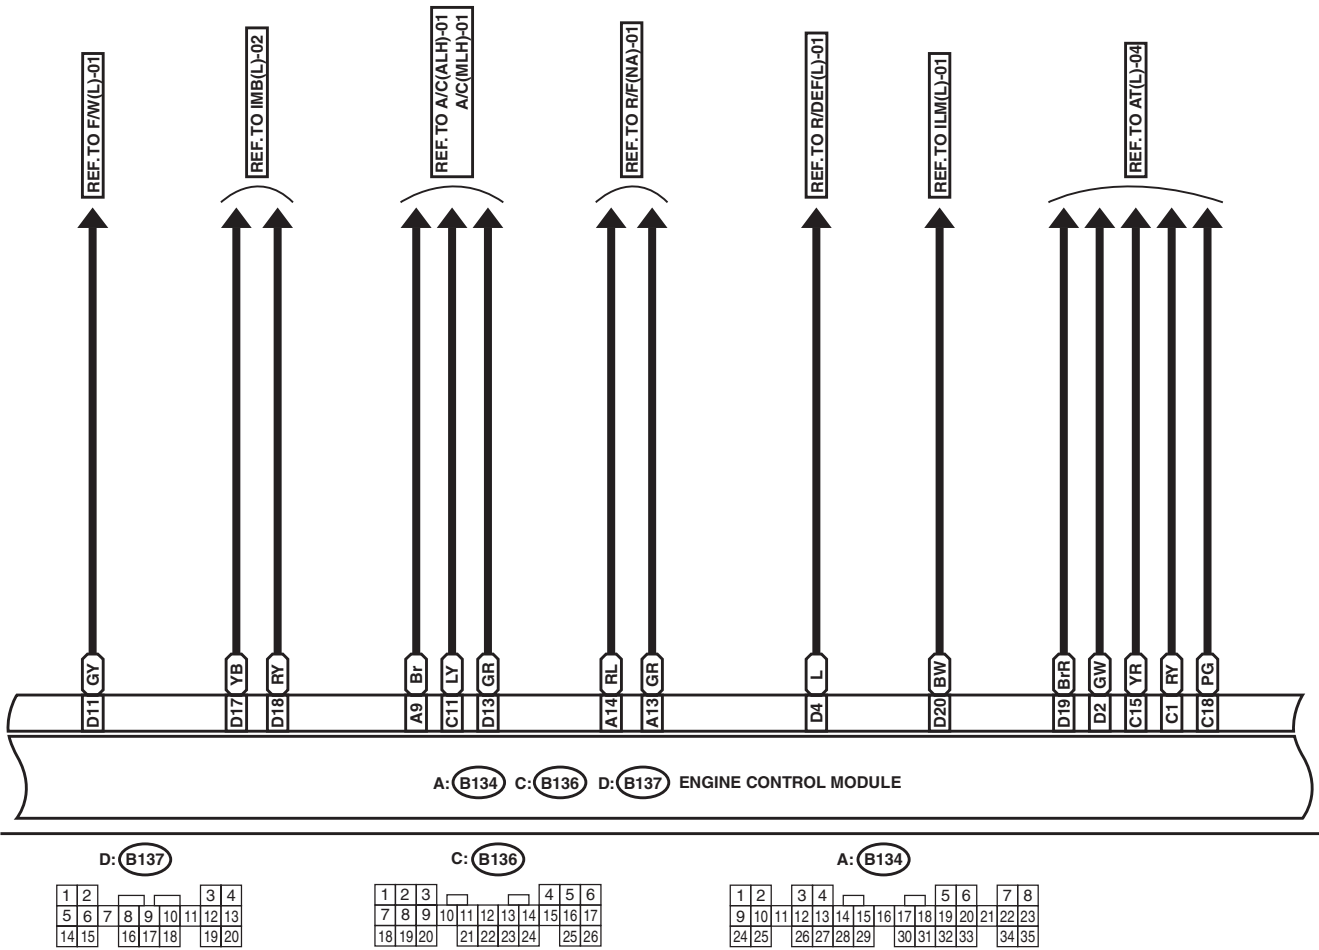


Engine Electrical System

WIRING SYSTEM

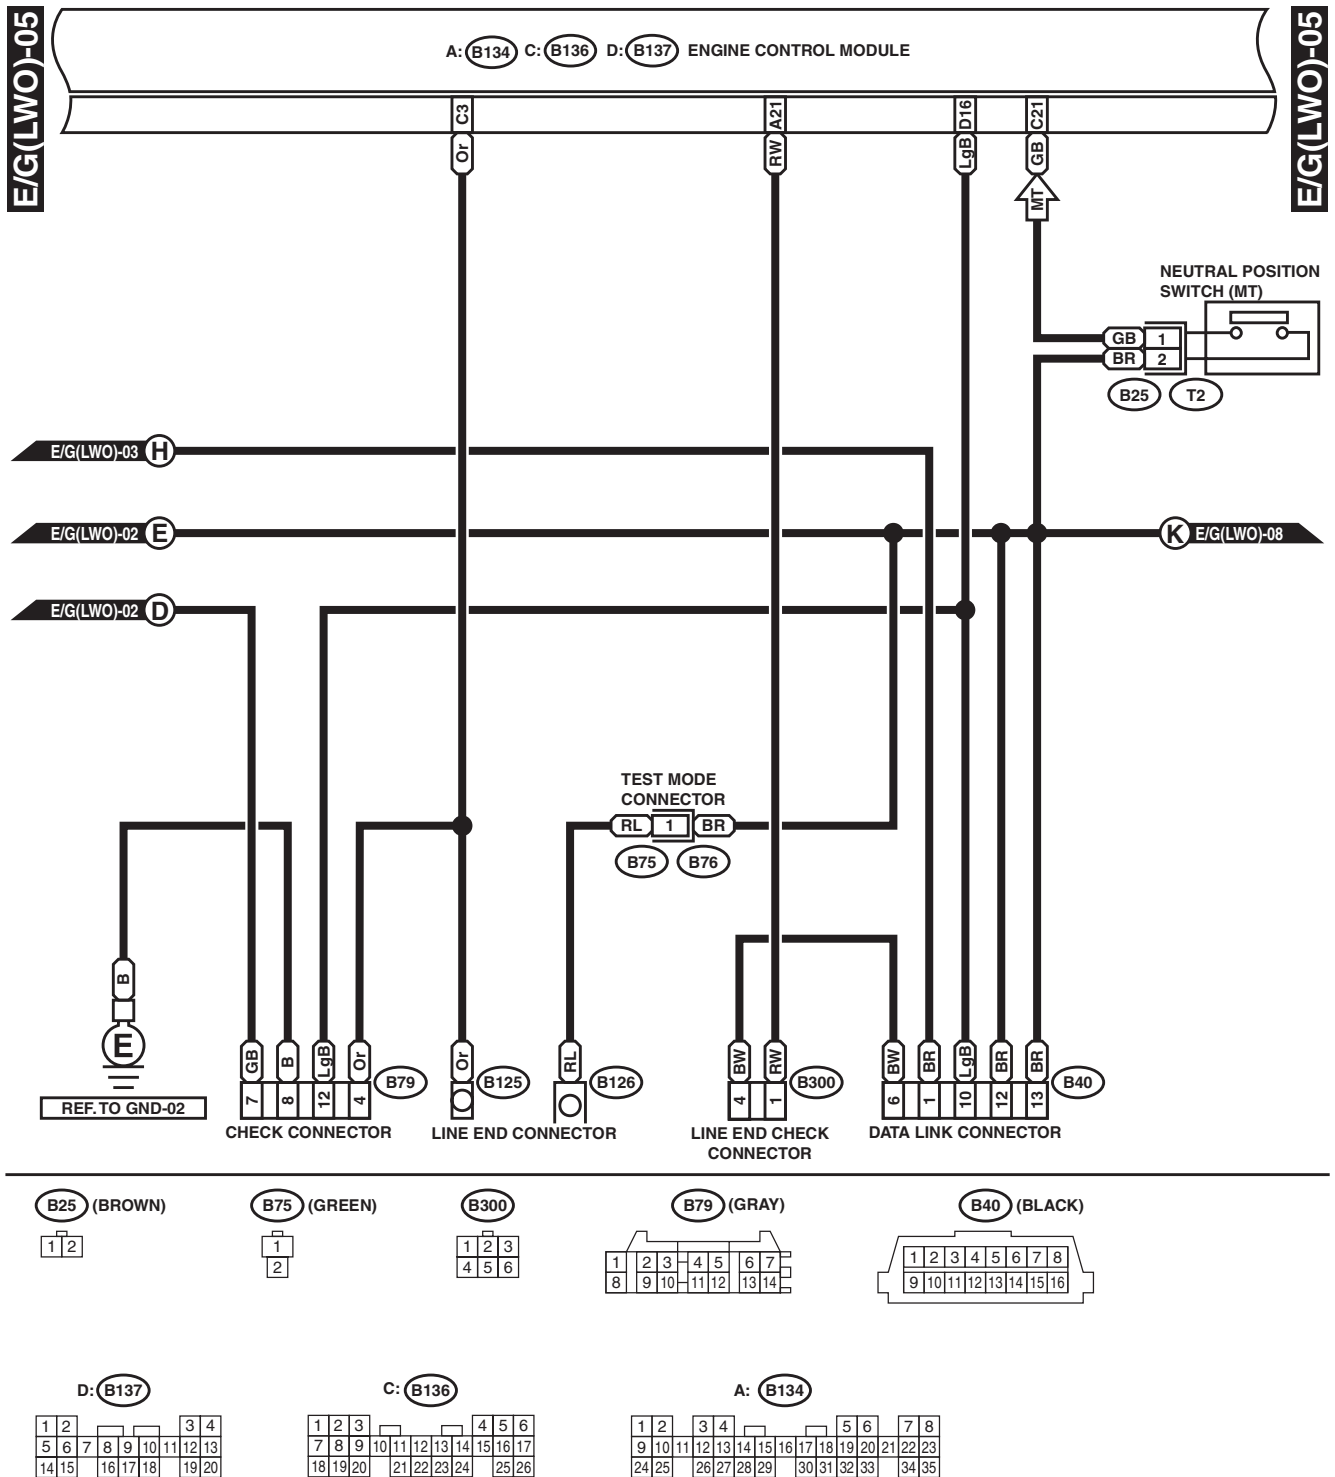


WI-04548

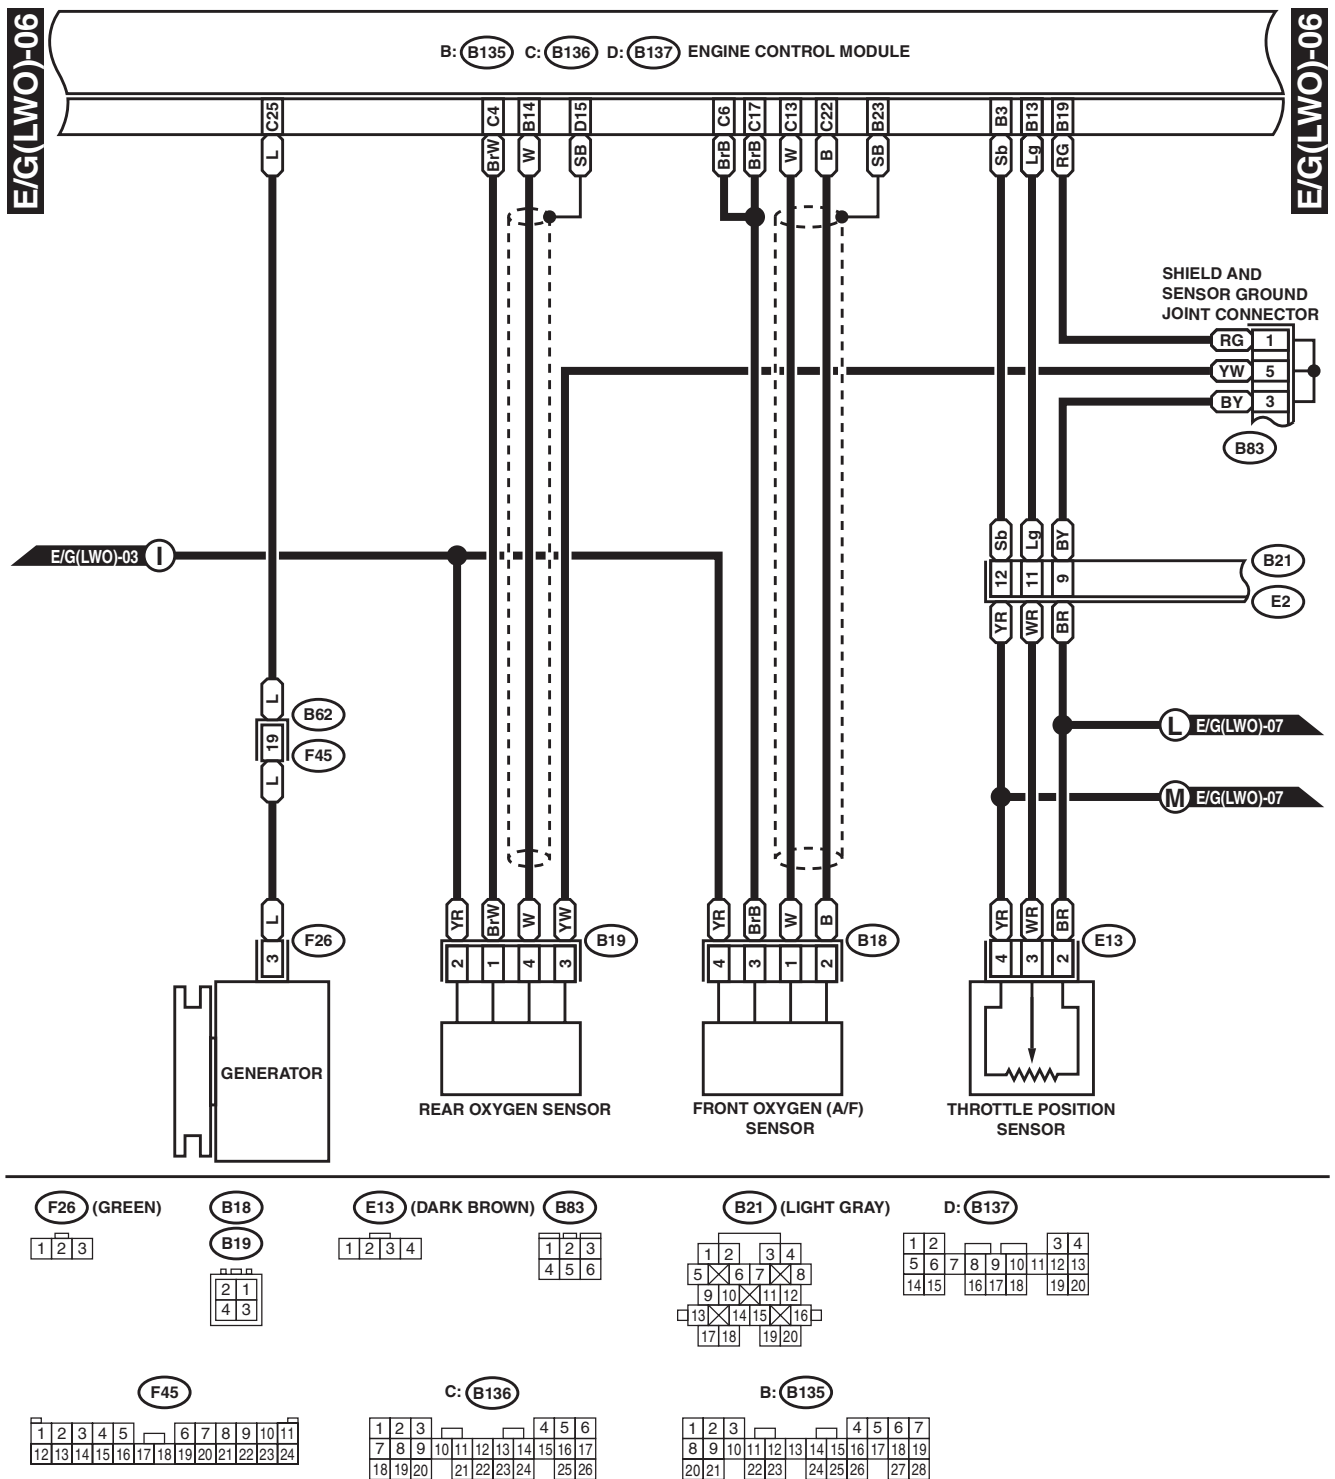

WI-04549

Engine Electrical System


WIRING SYSTEM

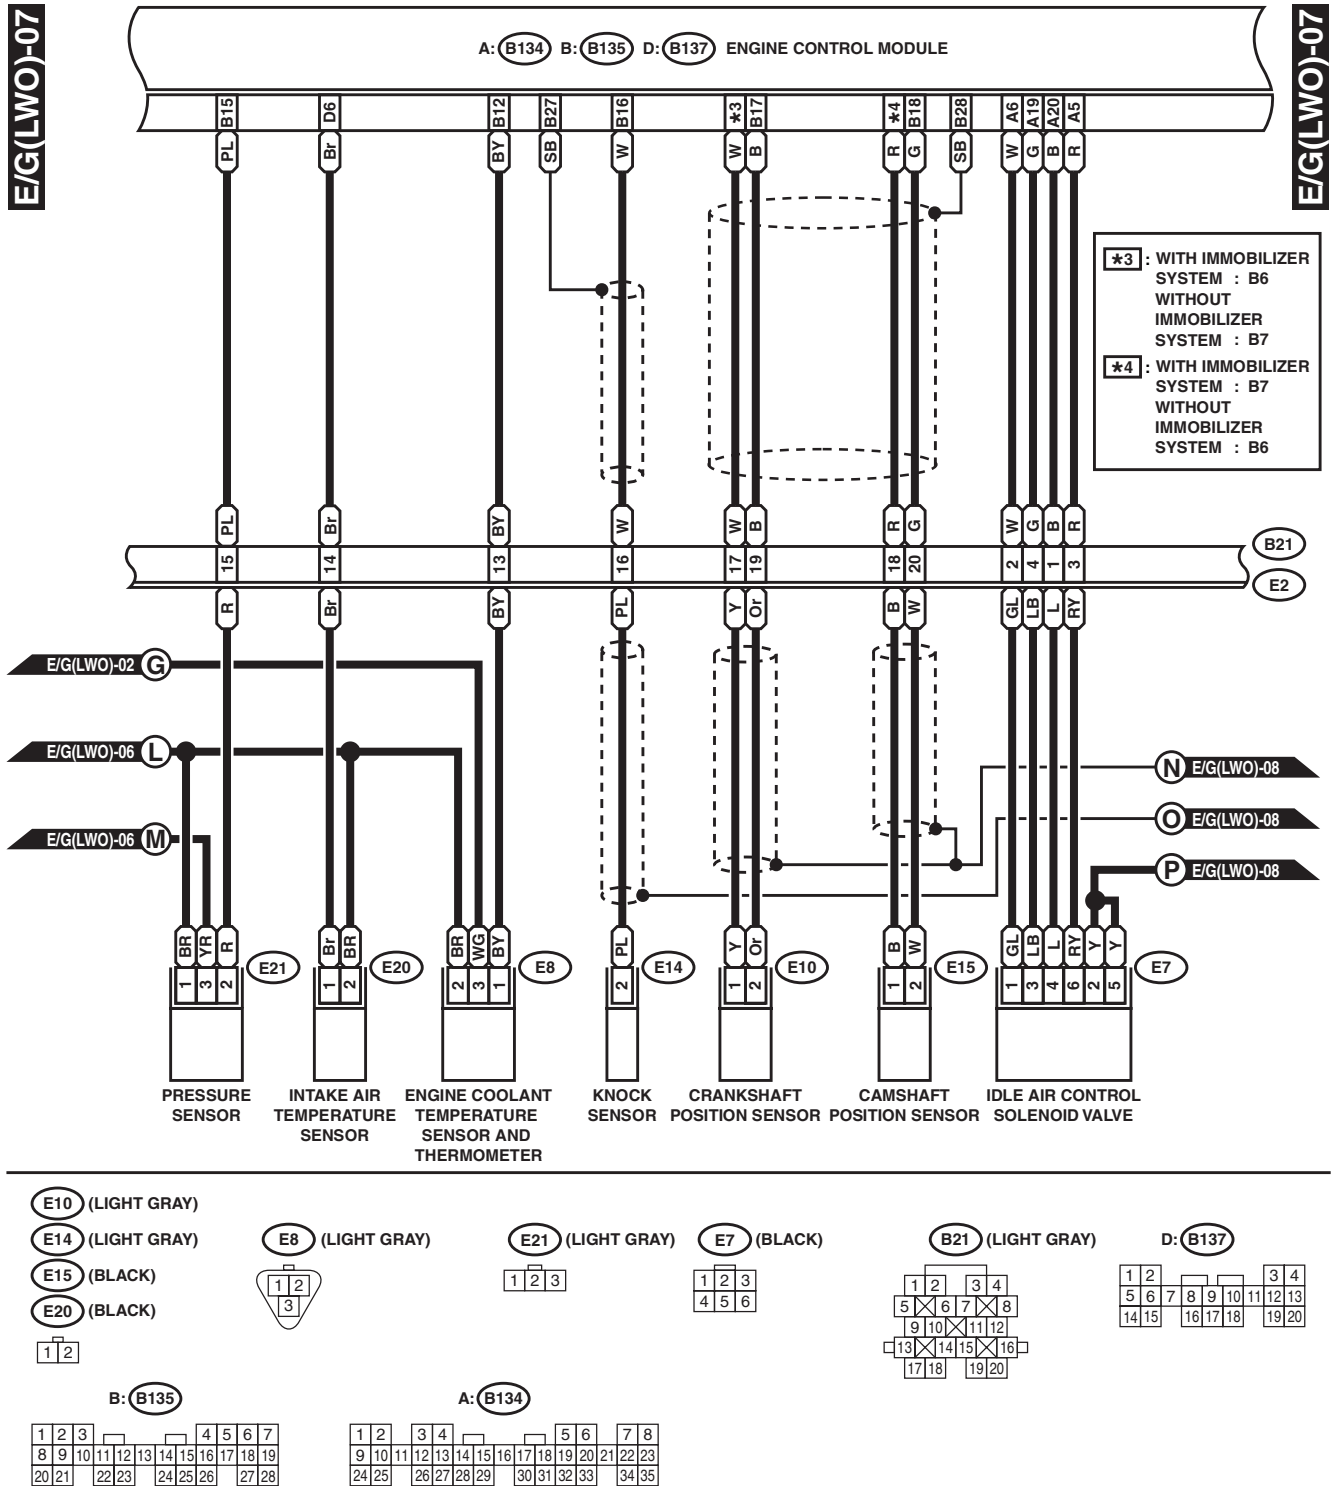

WI-02322

Engine Electrical System


WIRING SYSTEM

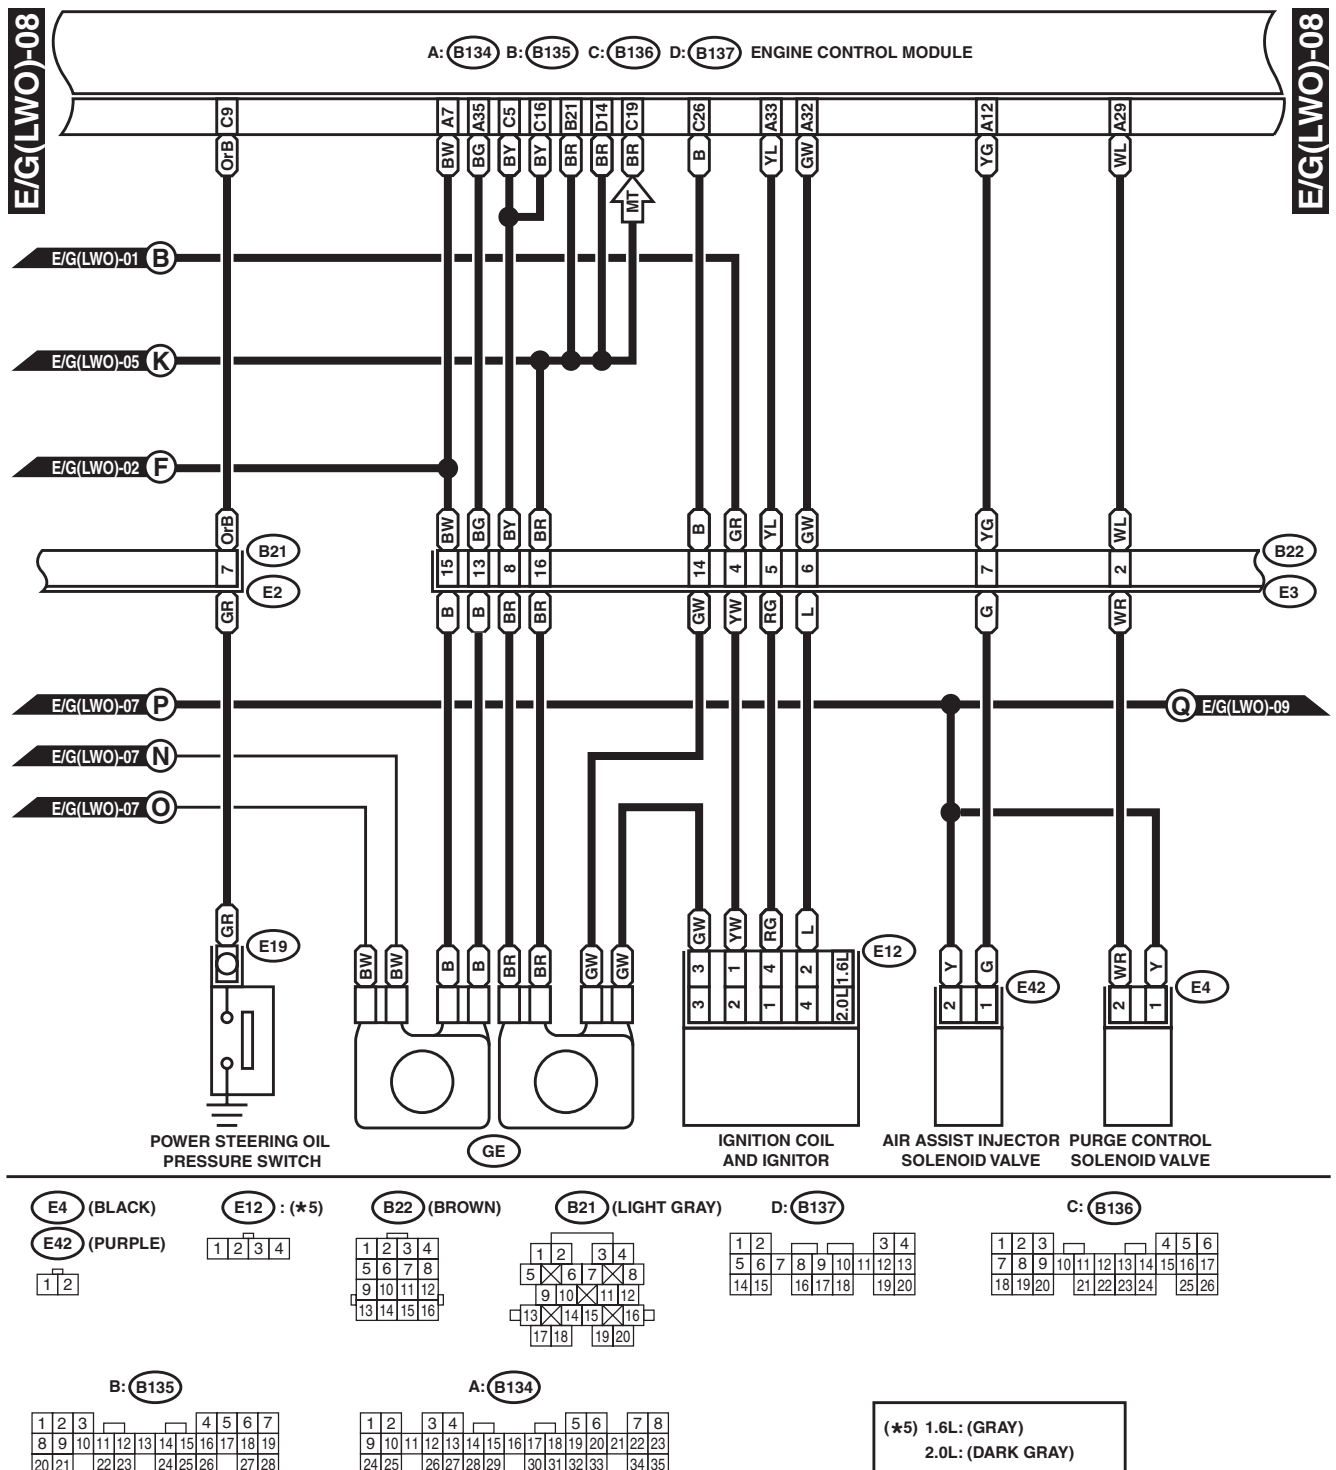

WI-04550

Engine Electrical System

WIRING SYSTEM

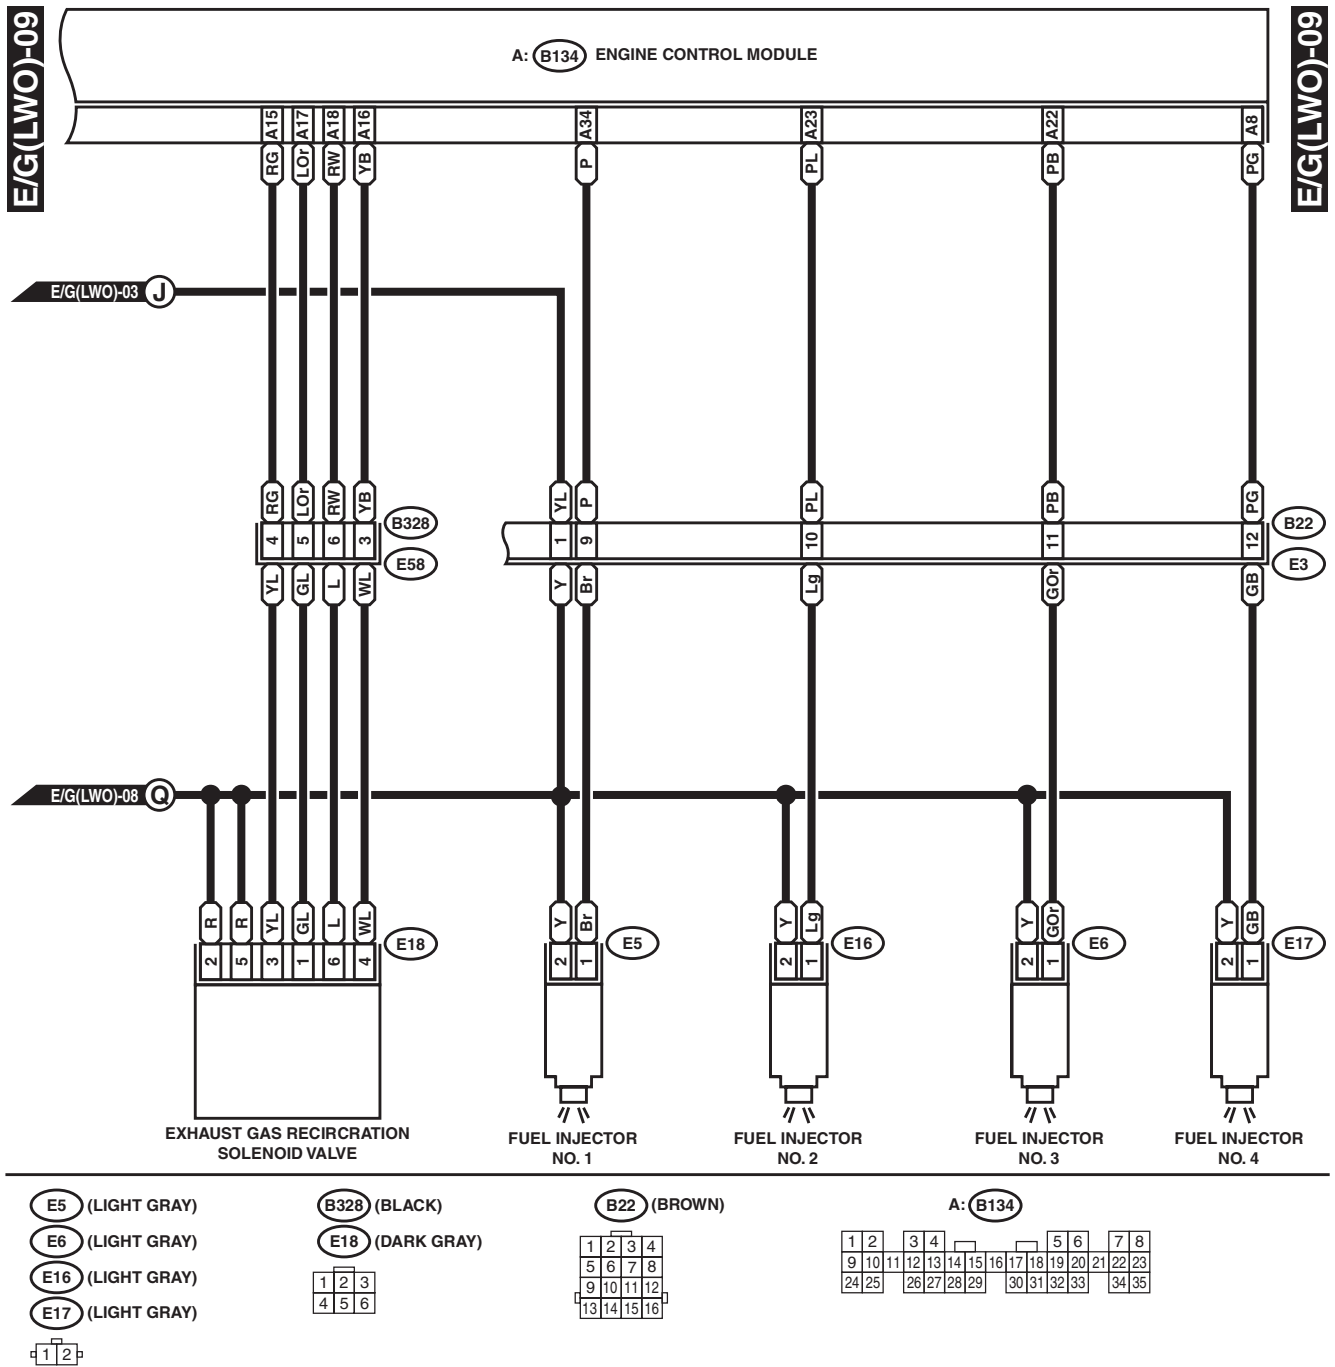


WI-02324

Engine Electrical System

WIRING SYSTEM


3. LHD TURBO MODEL

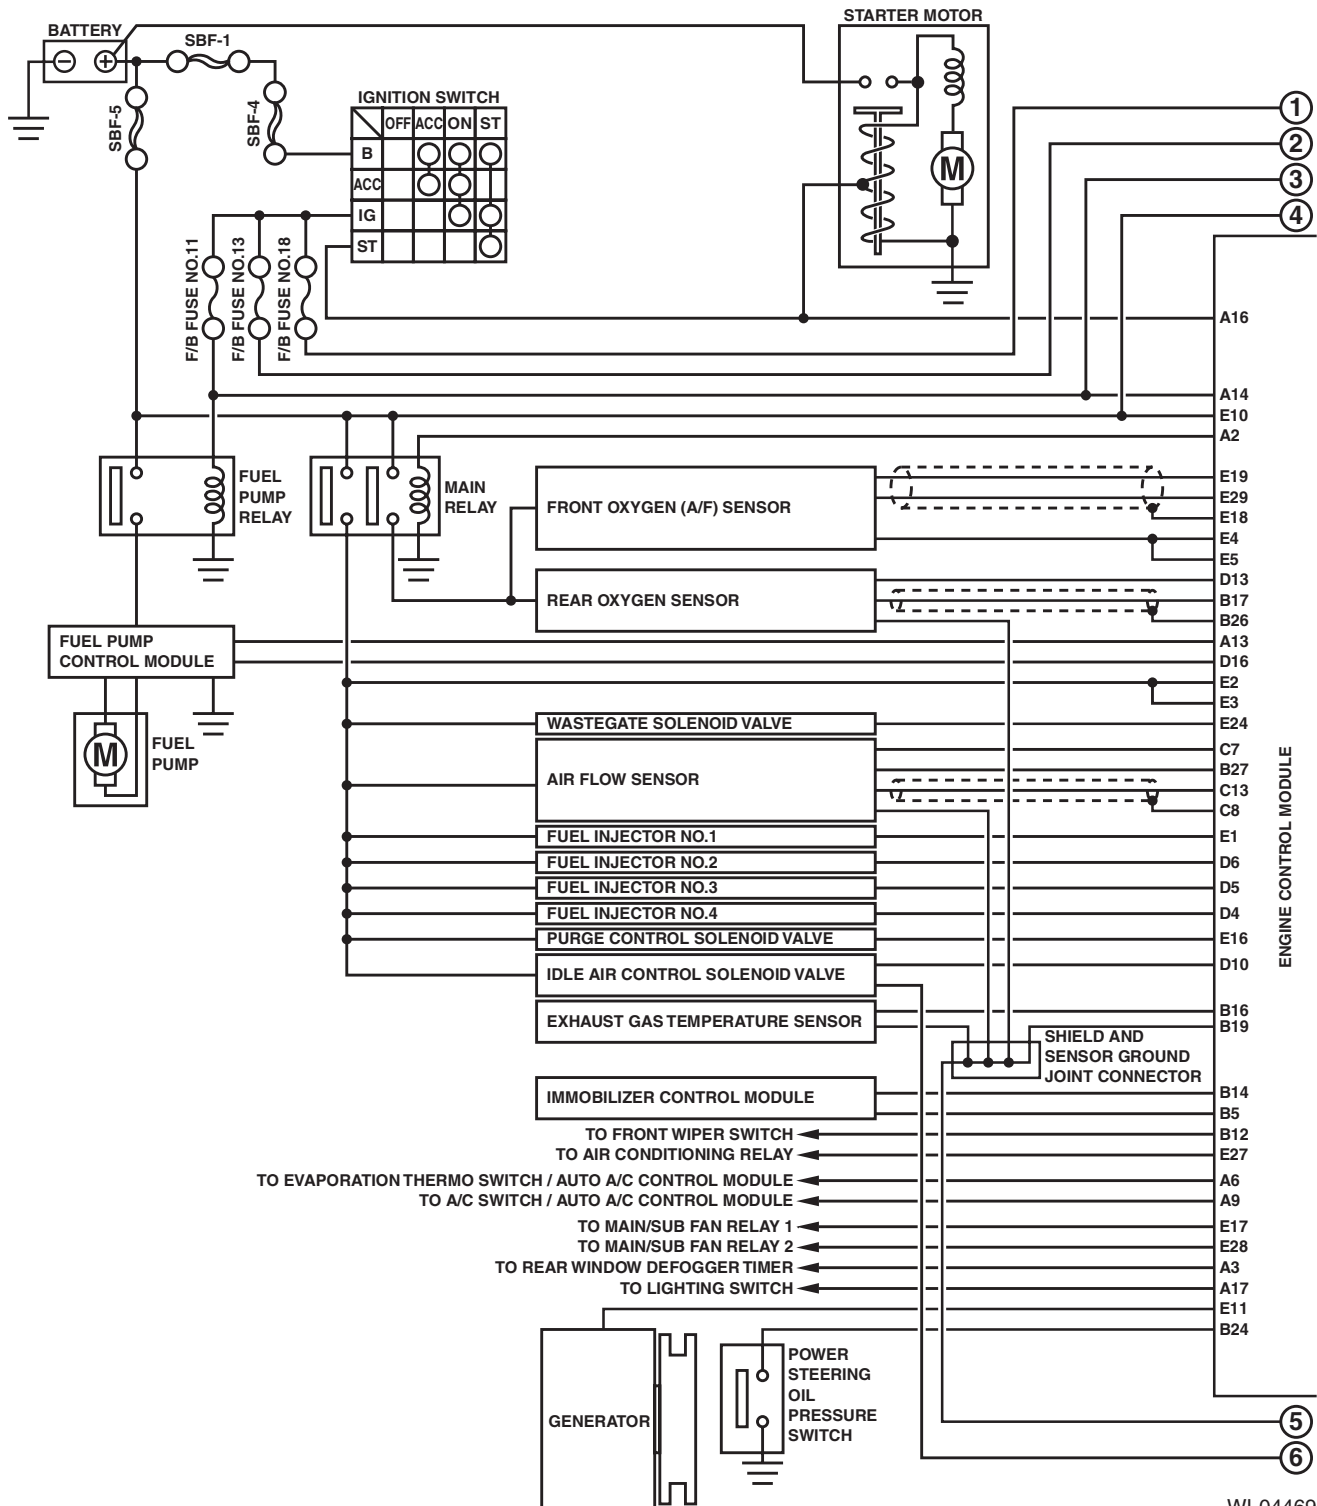

WI-04469

Engine Electrical System


WIRING SYSTEM

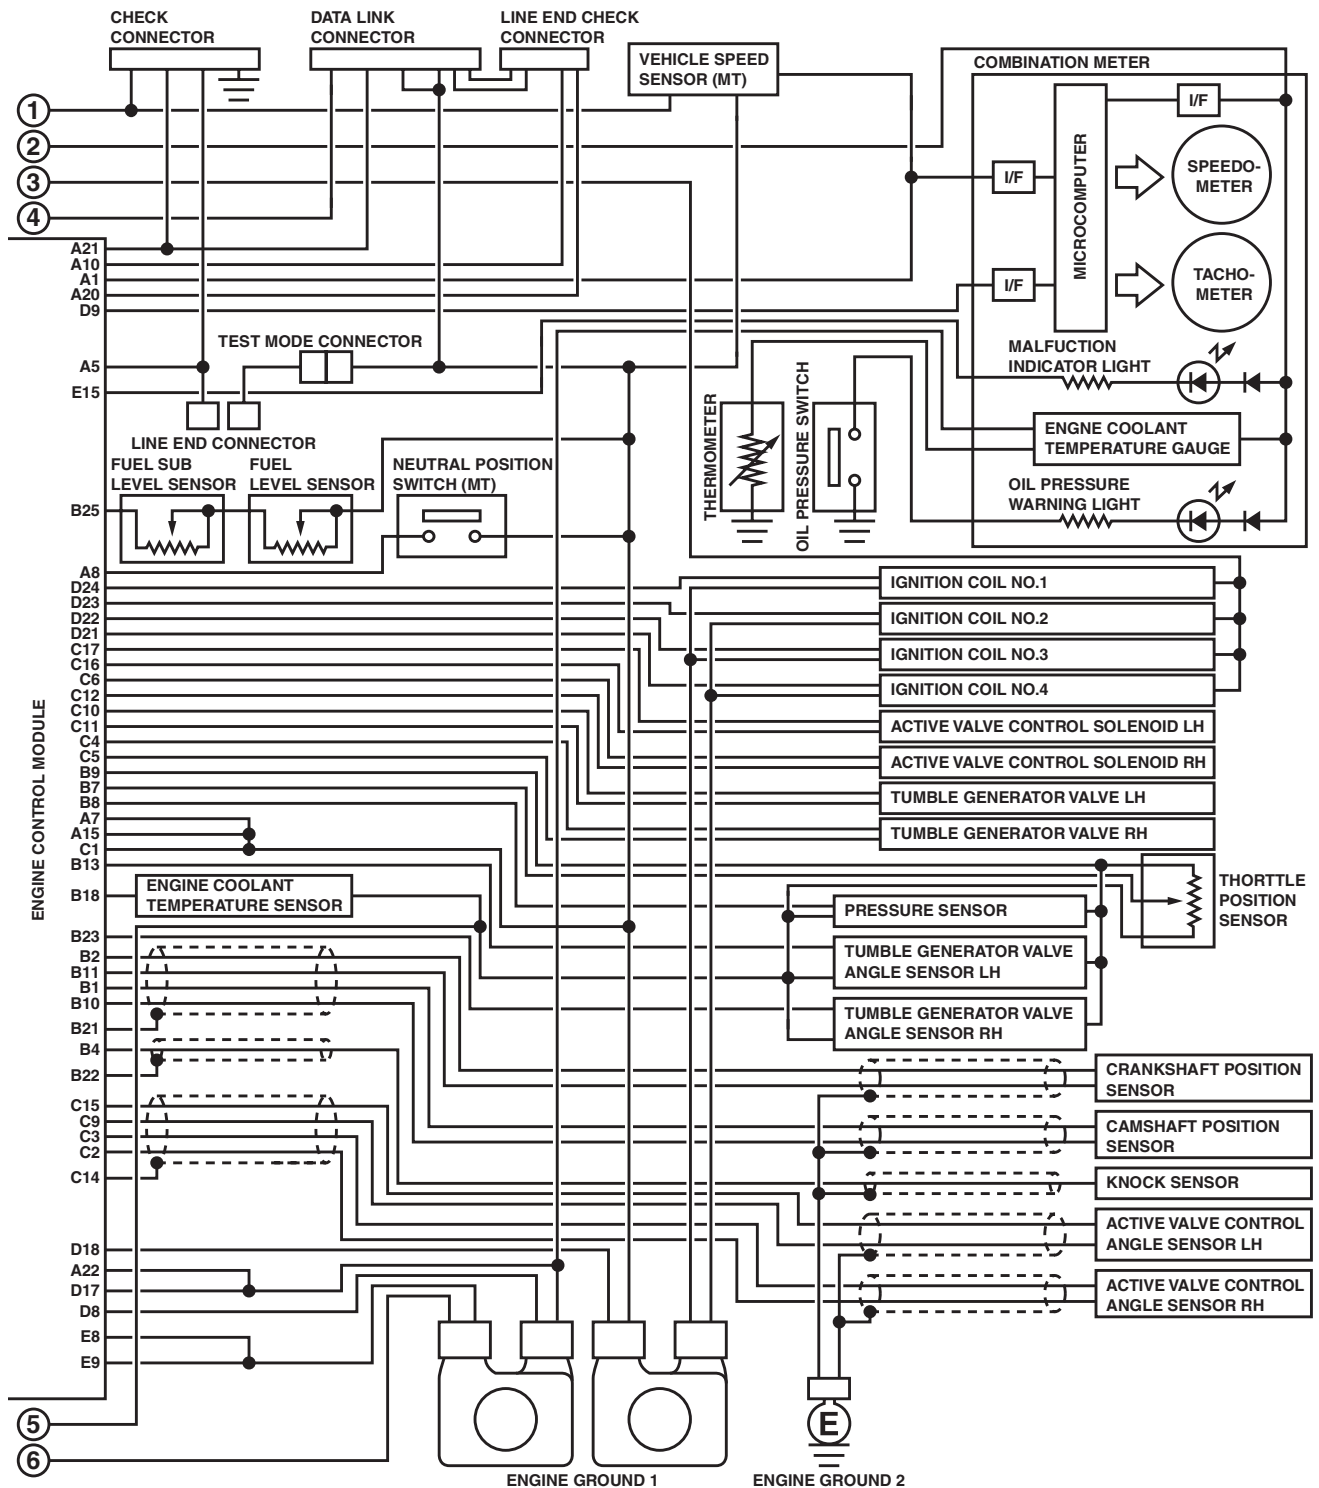

WI-02564

Engine Electrical System


WIRING SYSTEM

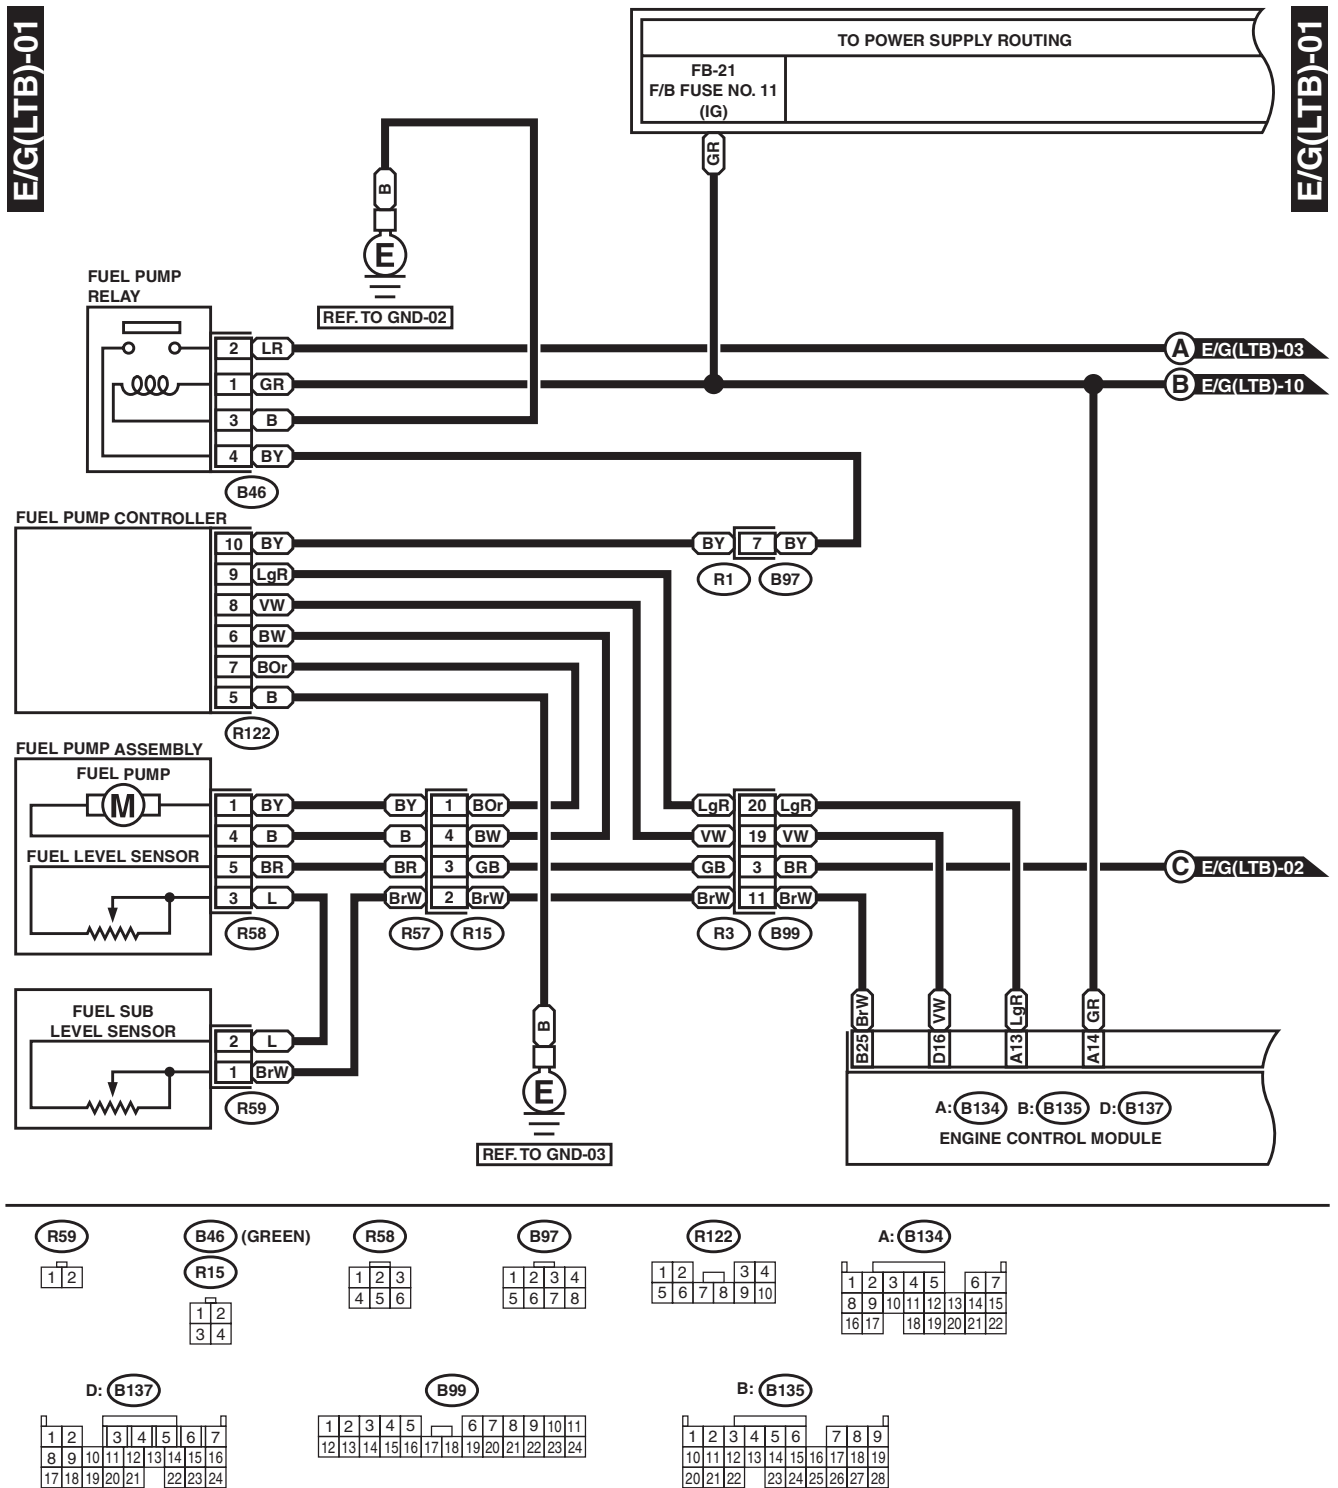

WI-02325

Engine Electrical System


WIRING SYSTEM

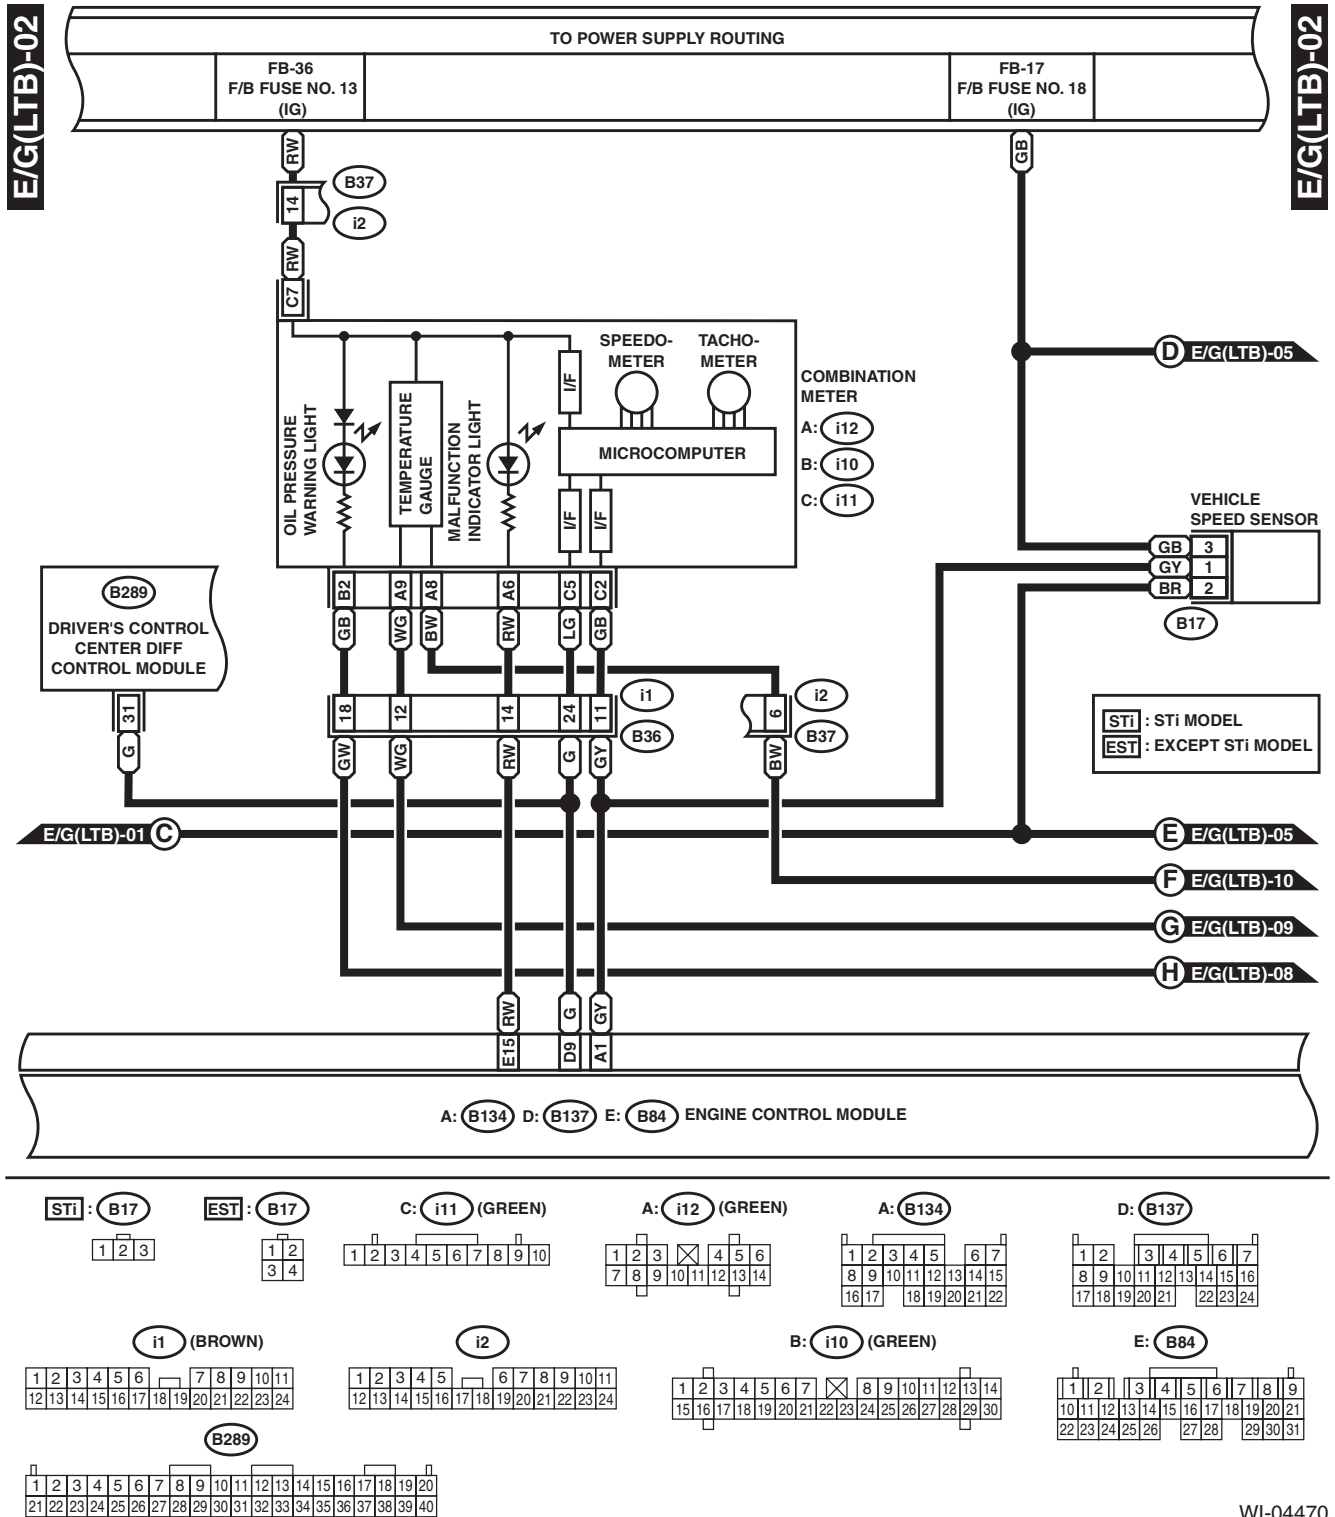

WI-04470

Engine Electrical System


WIRING SYSTEM

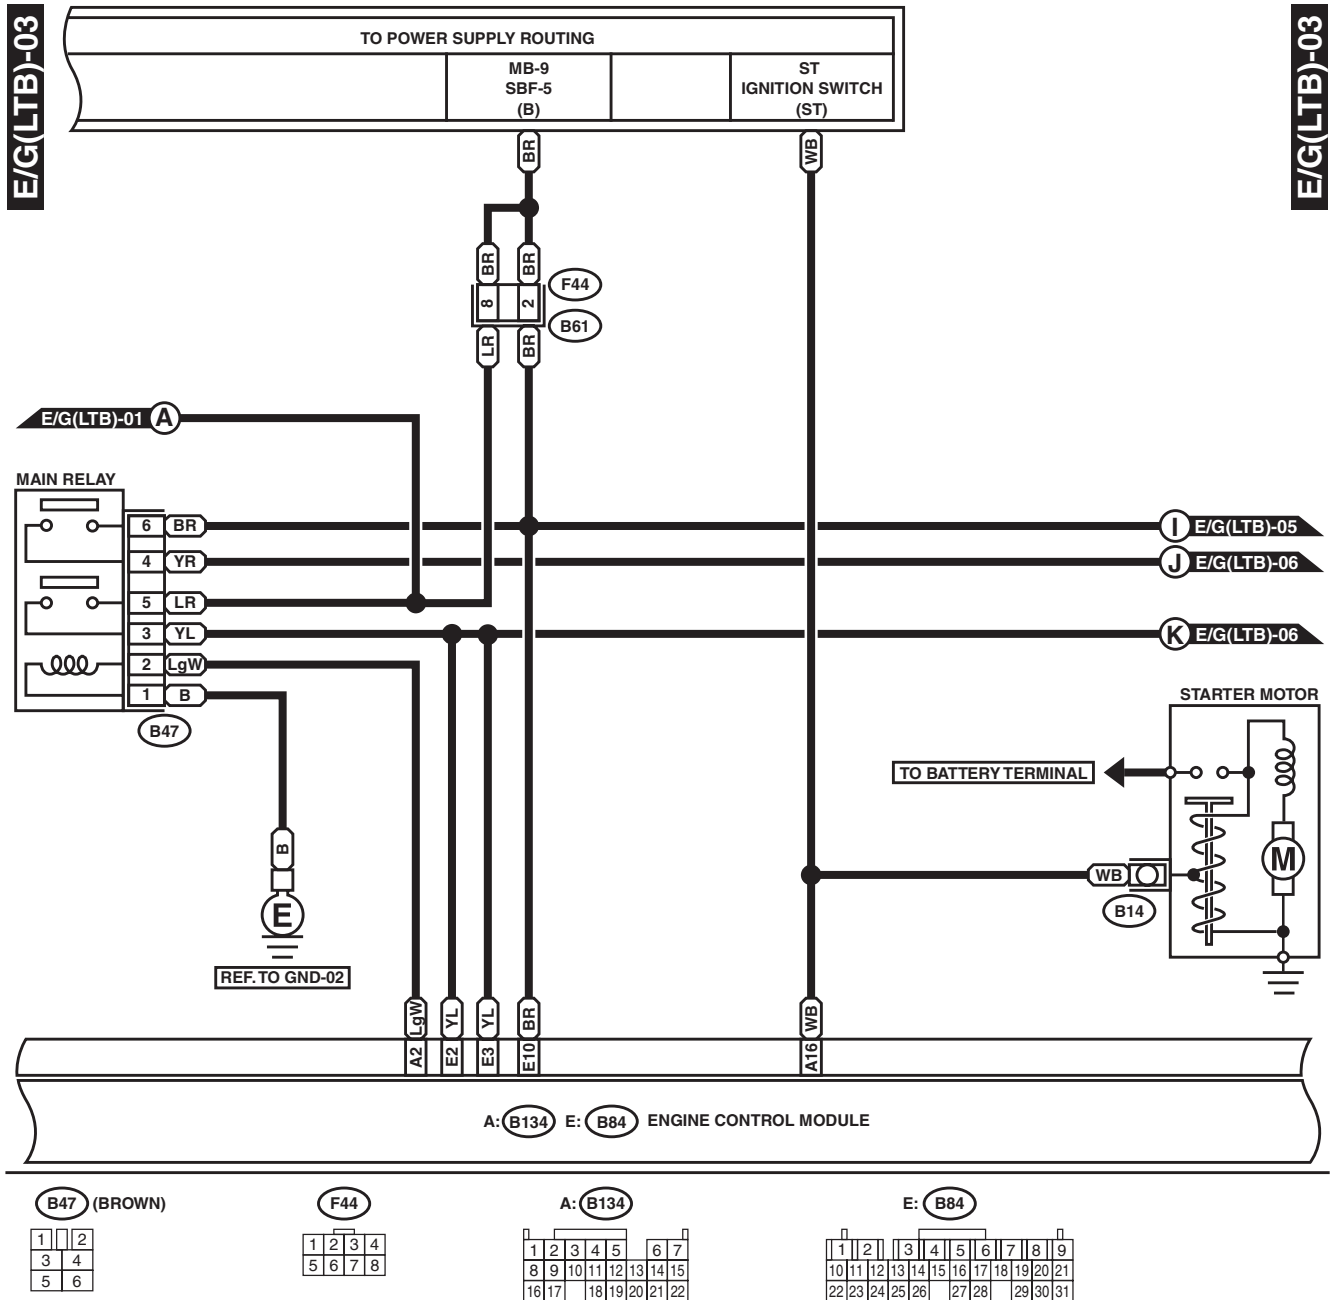

WI-02327


E/G(LTB)-04

E/G(LTB)-04

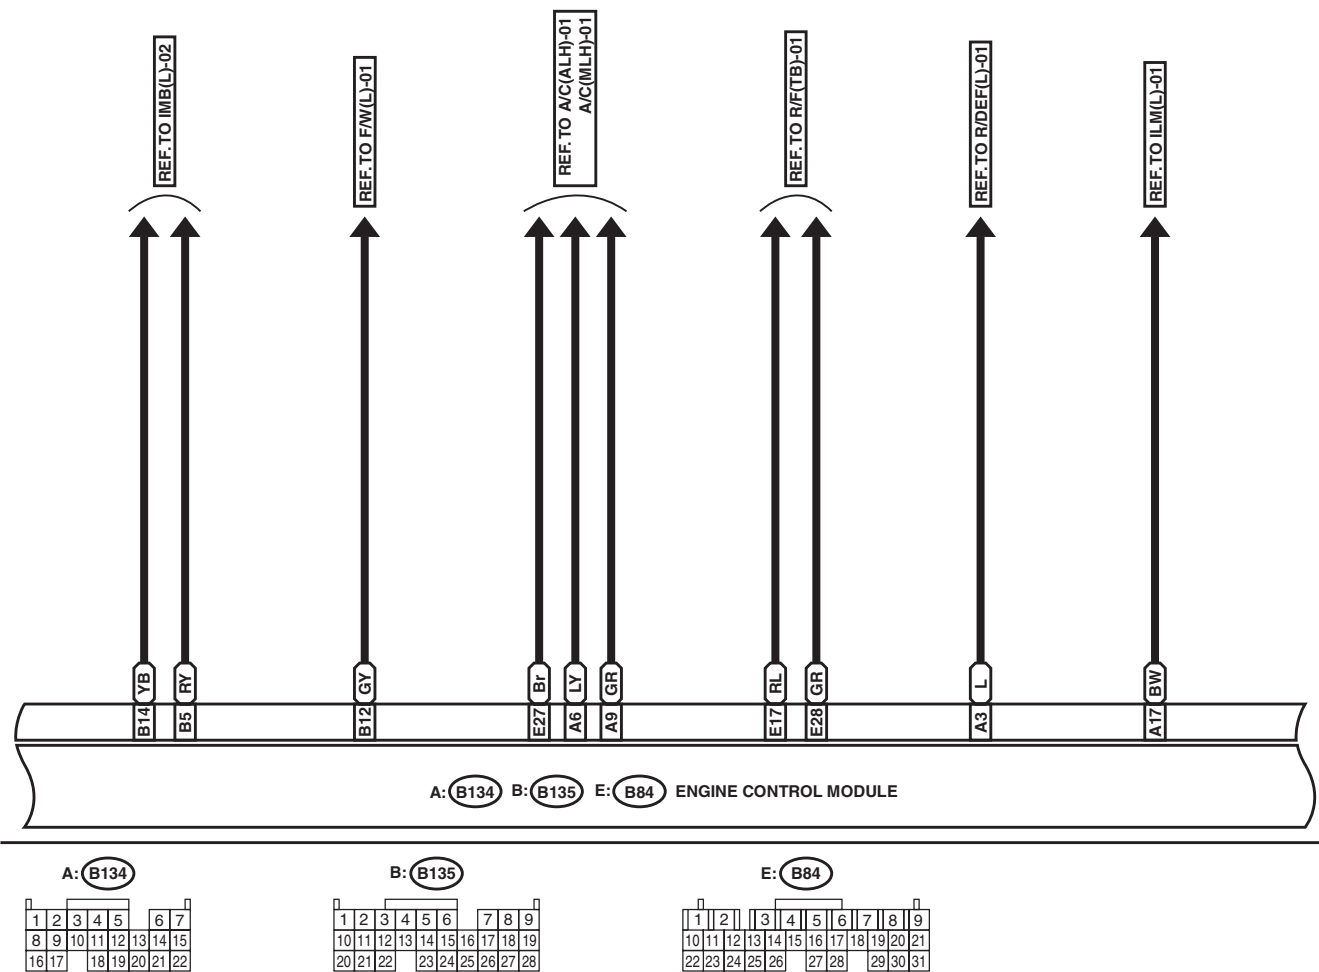

Engine Electrical System


WIRING SYSTEM

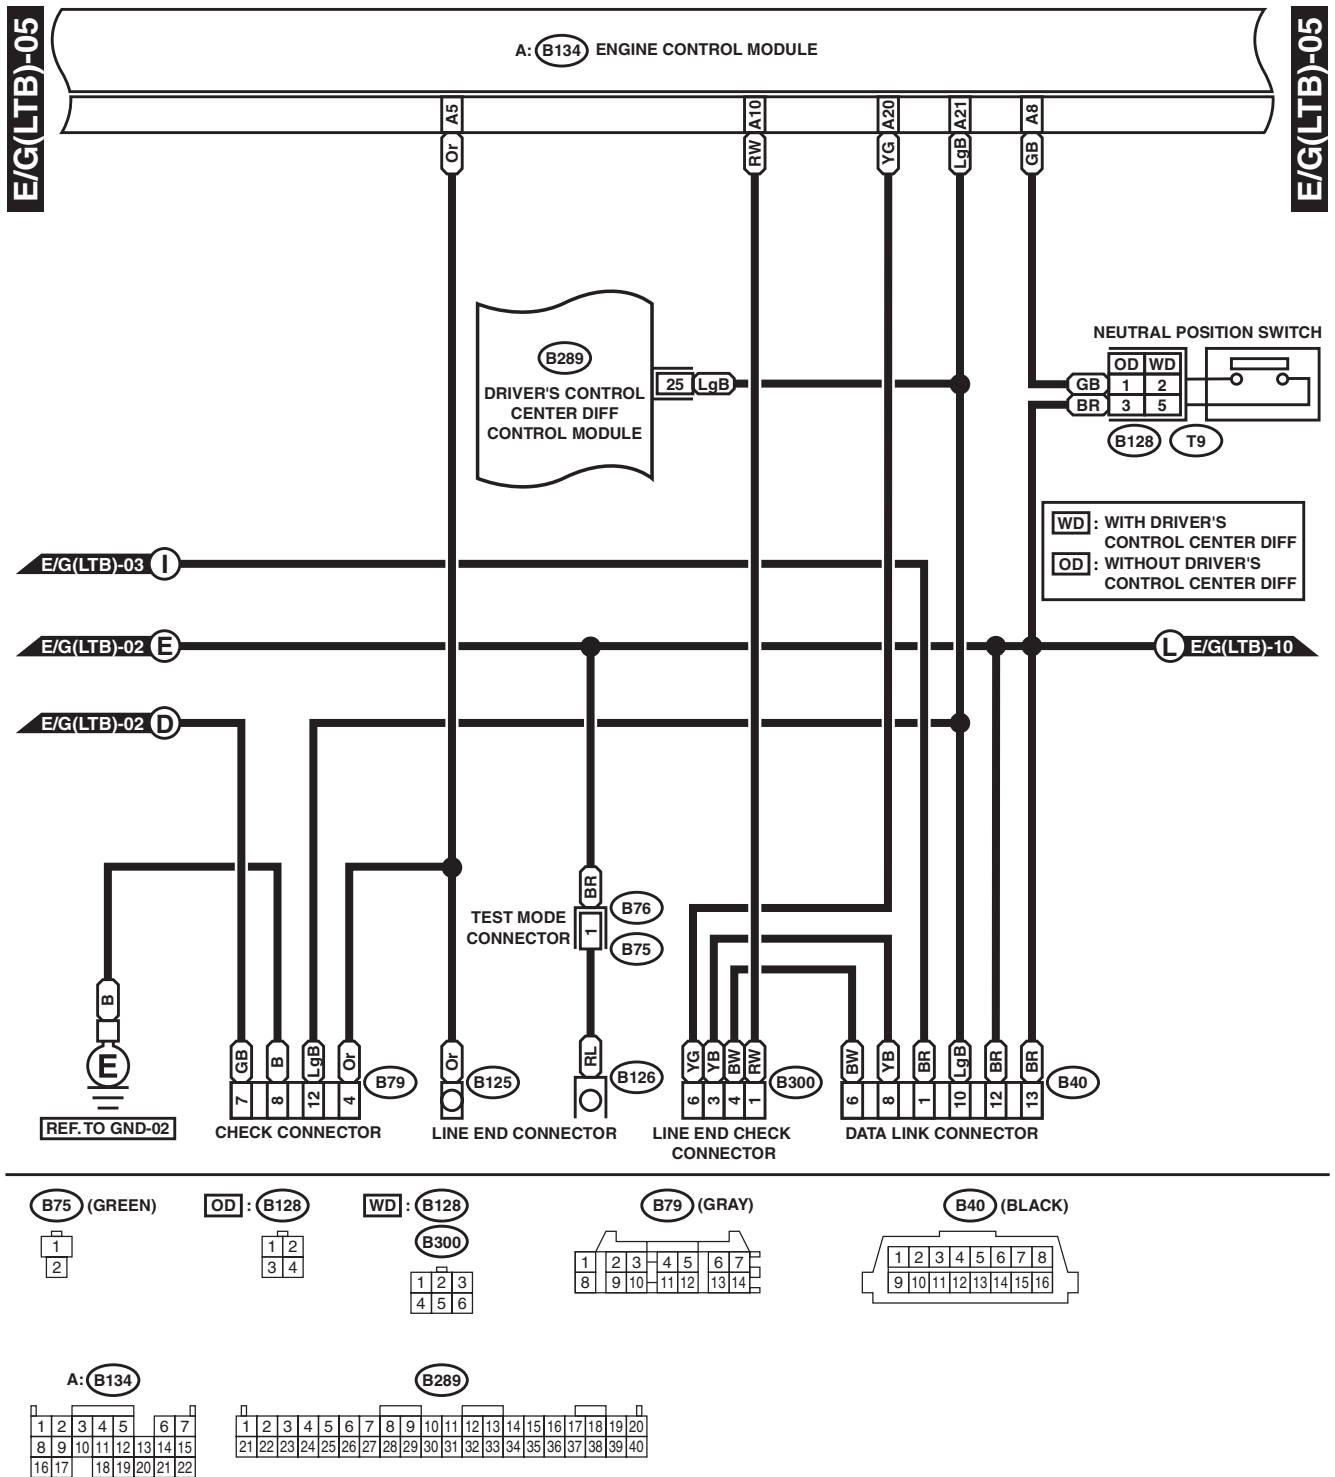

WI-04472

Engine Electrical System


WIRING SYSTEM

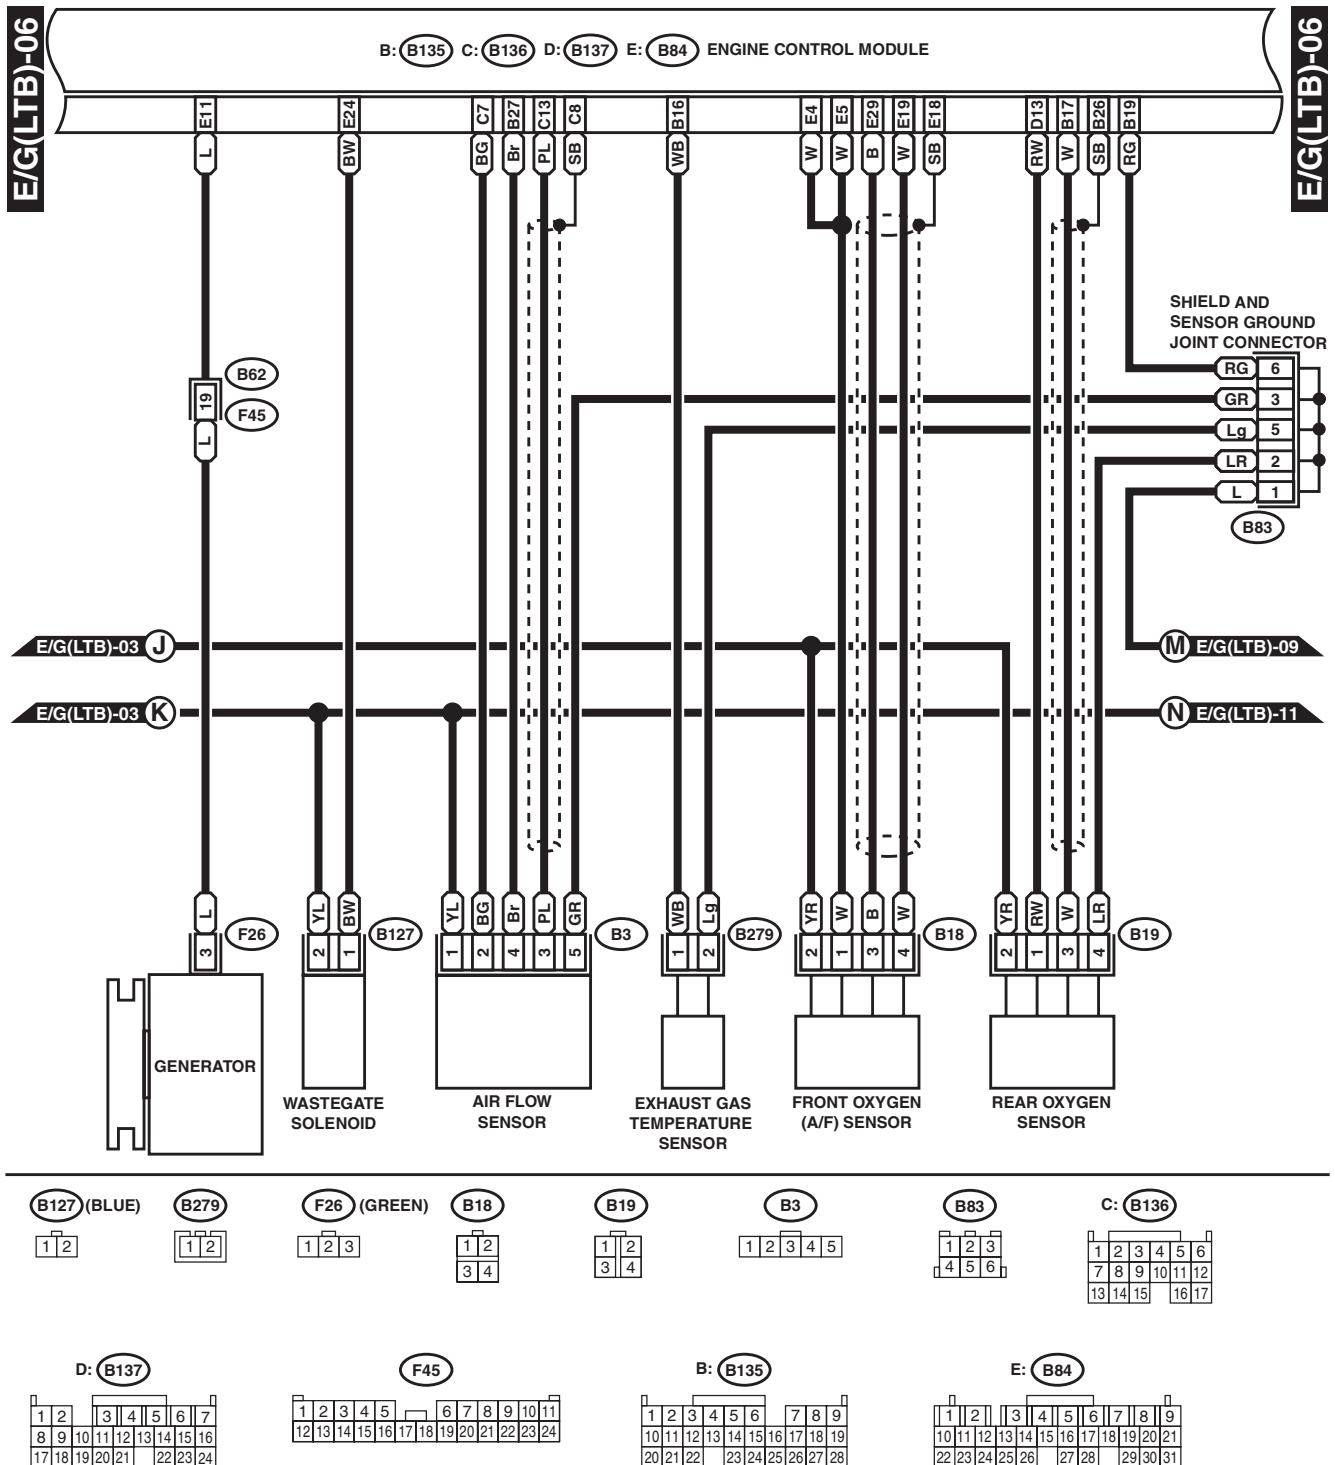


WI-02330

Engine Electrical System

WIRING SYSTEM

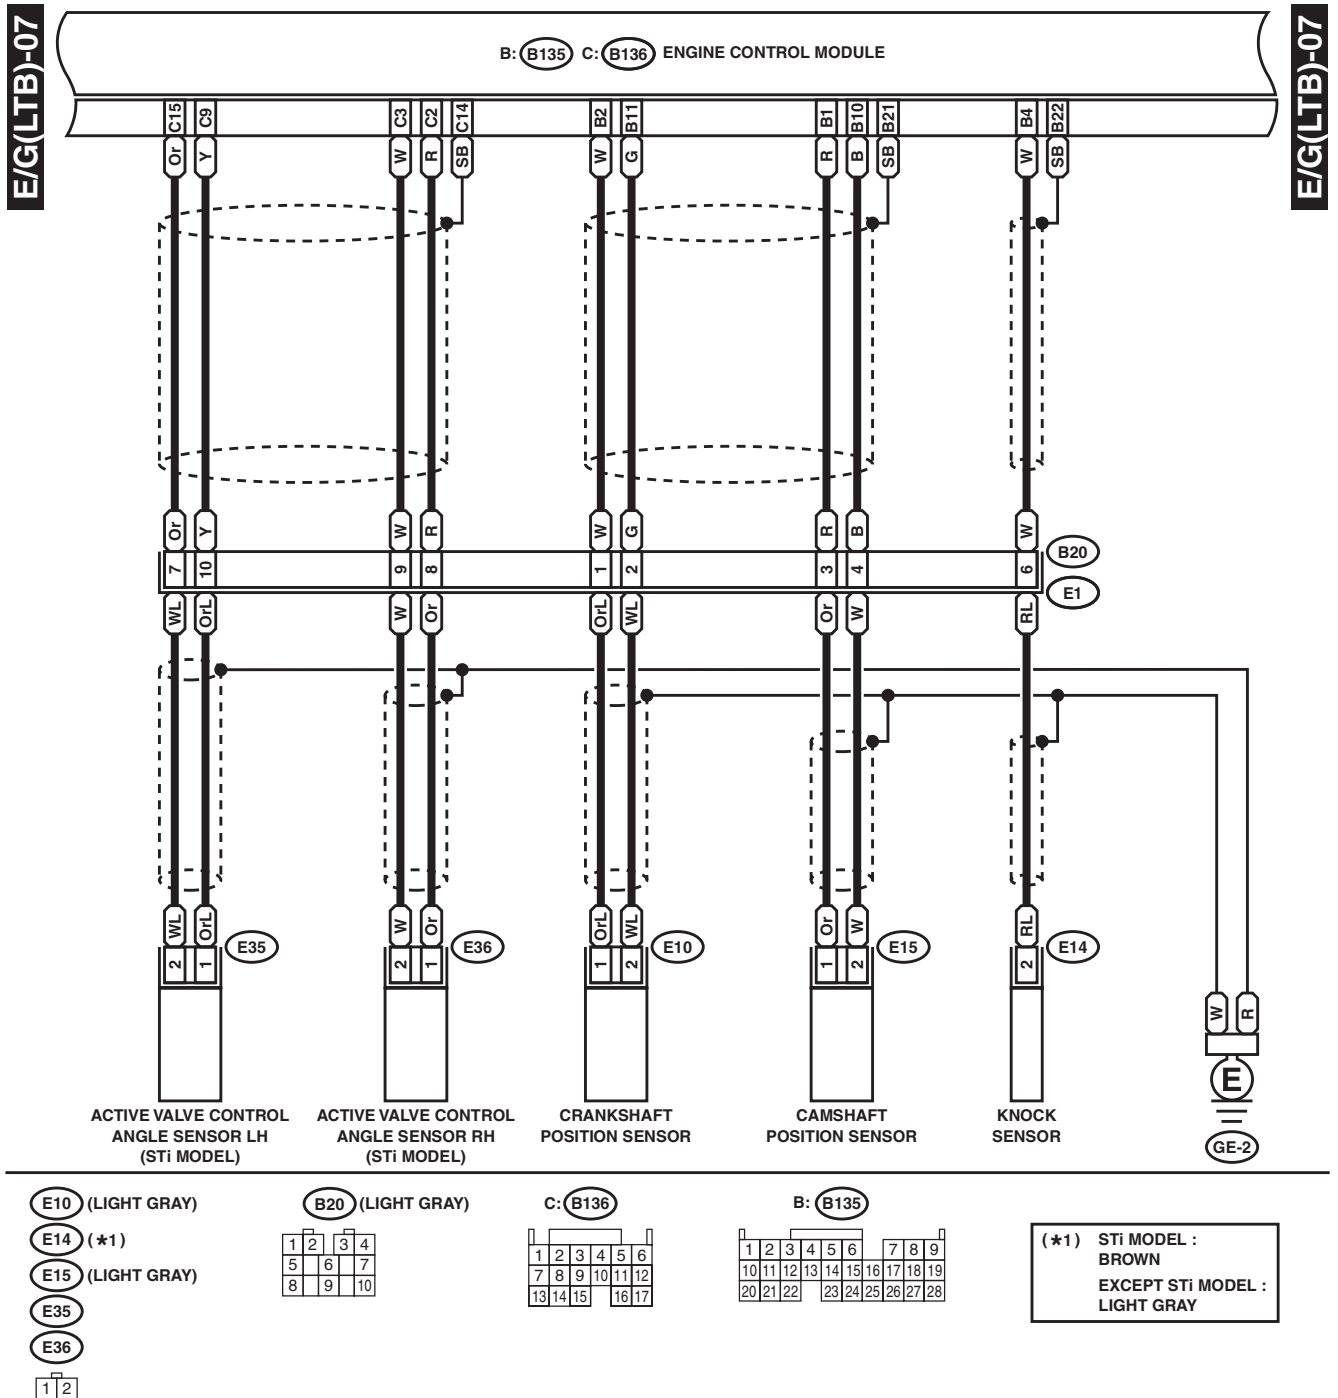


WI-02331

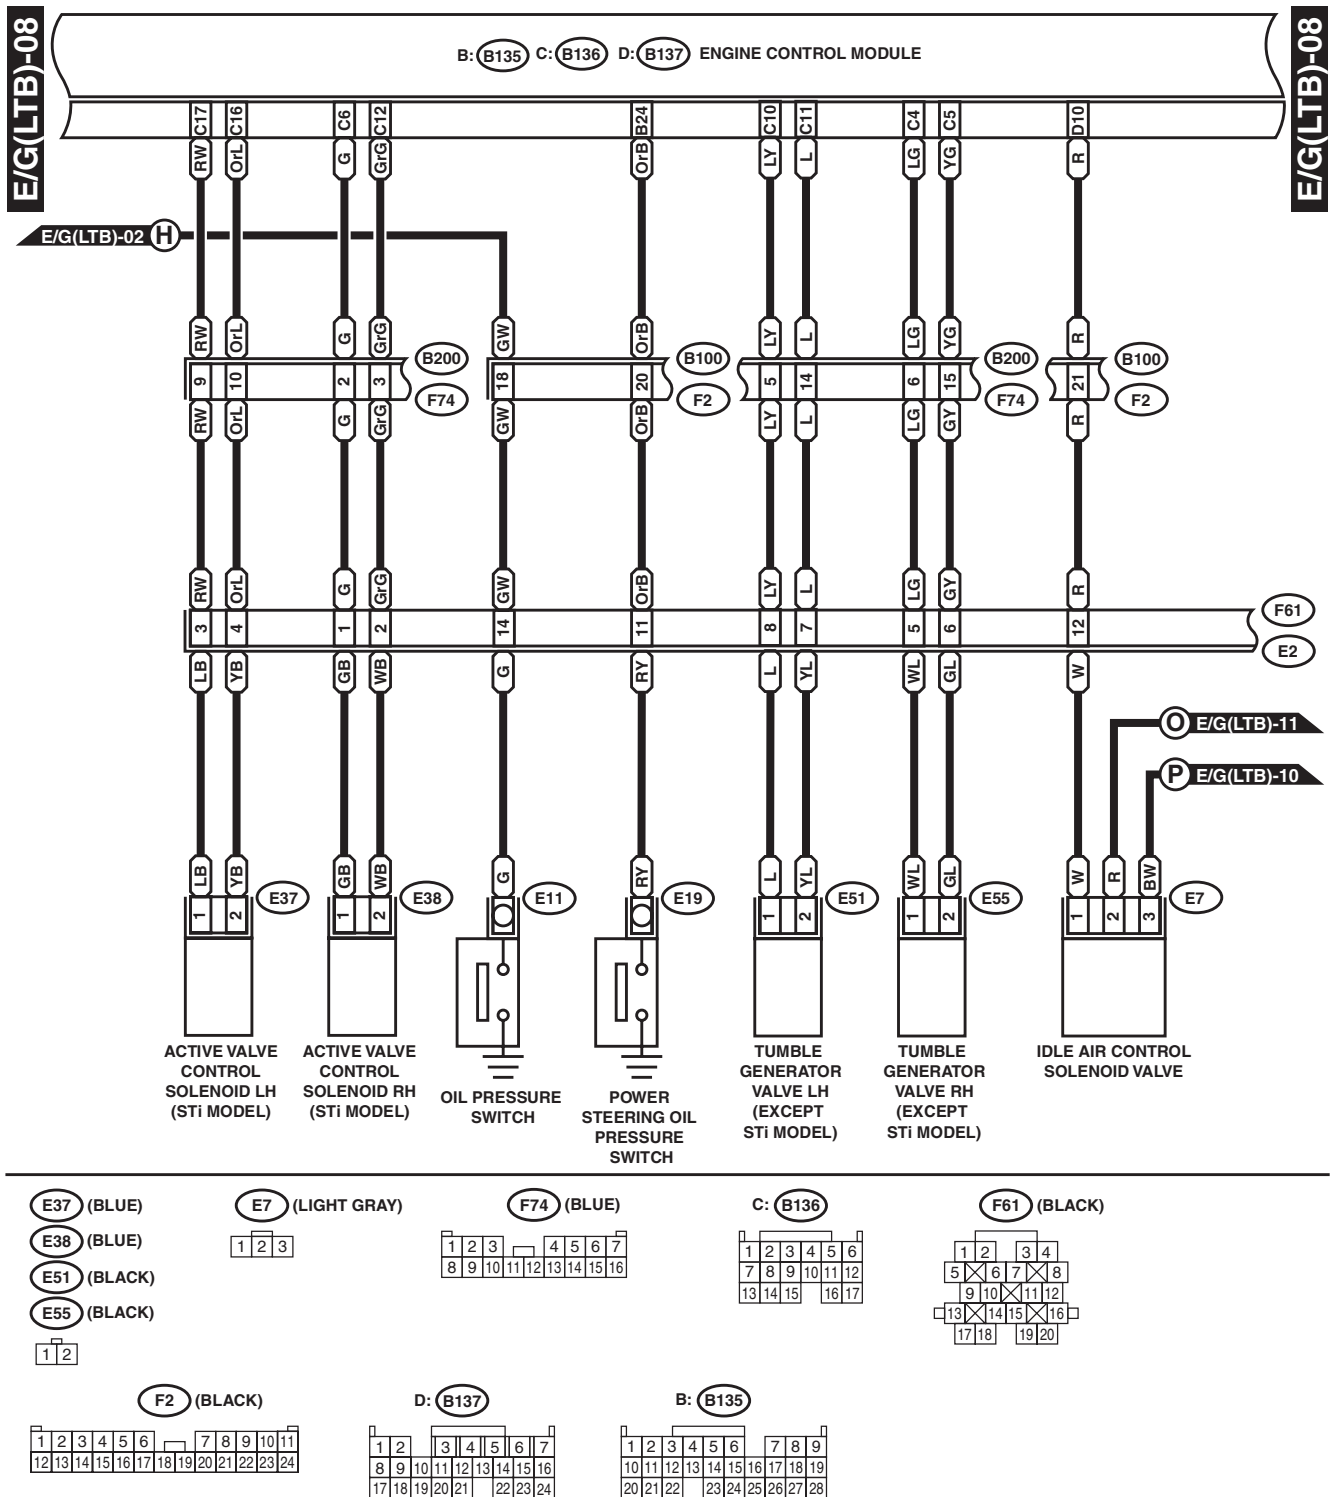

WI-02332

Engine Electrical System


WIRING SYSTEM

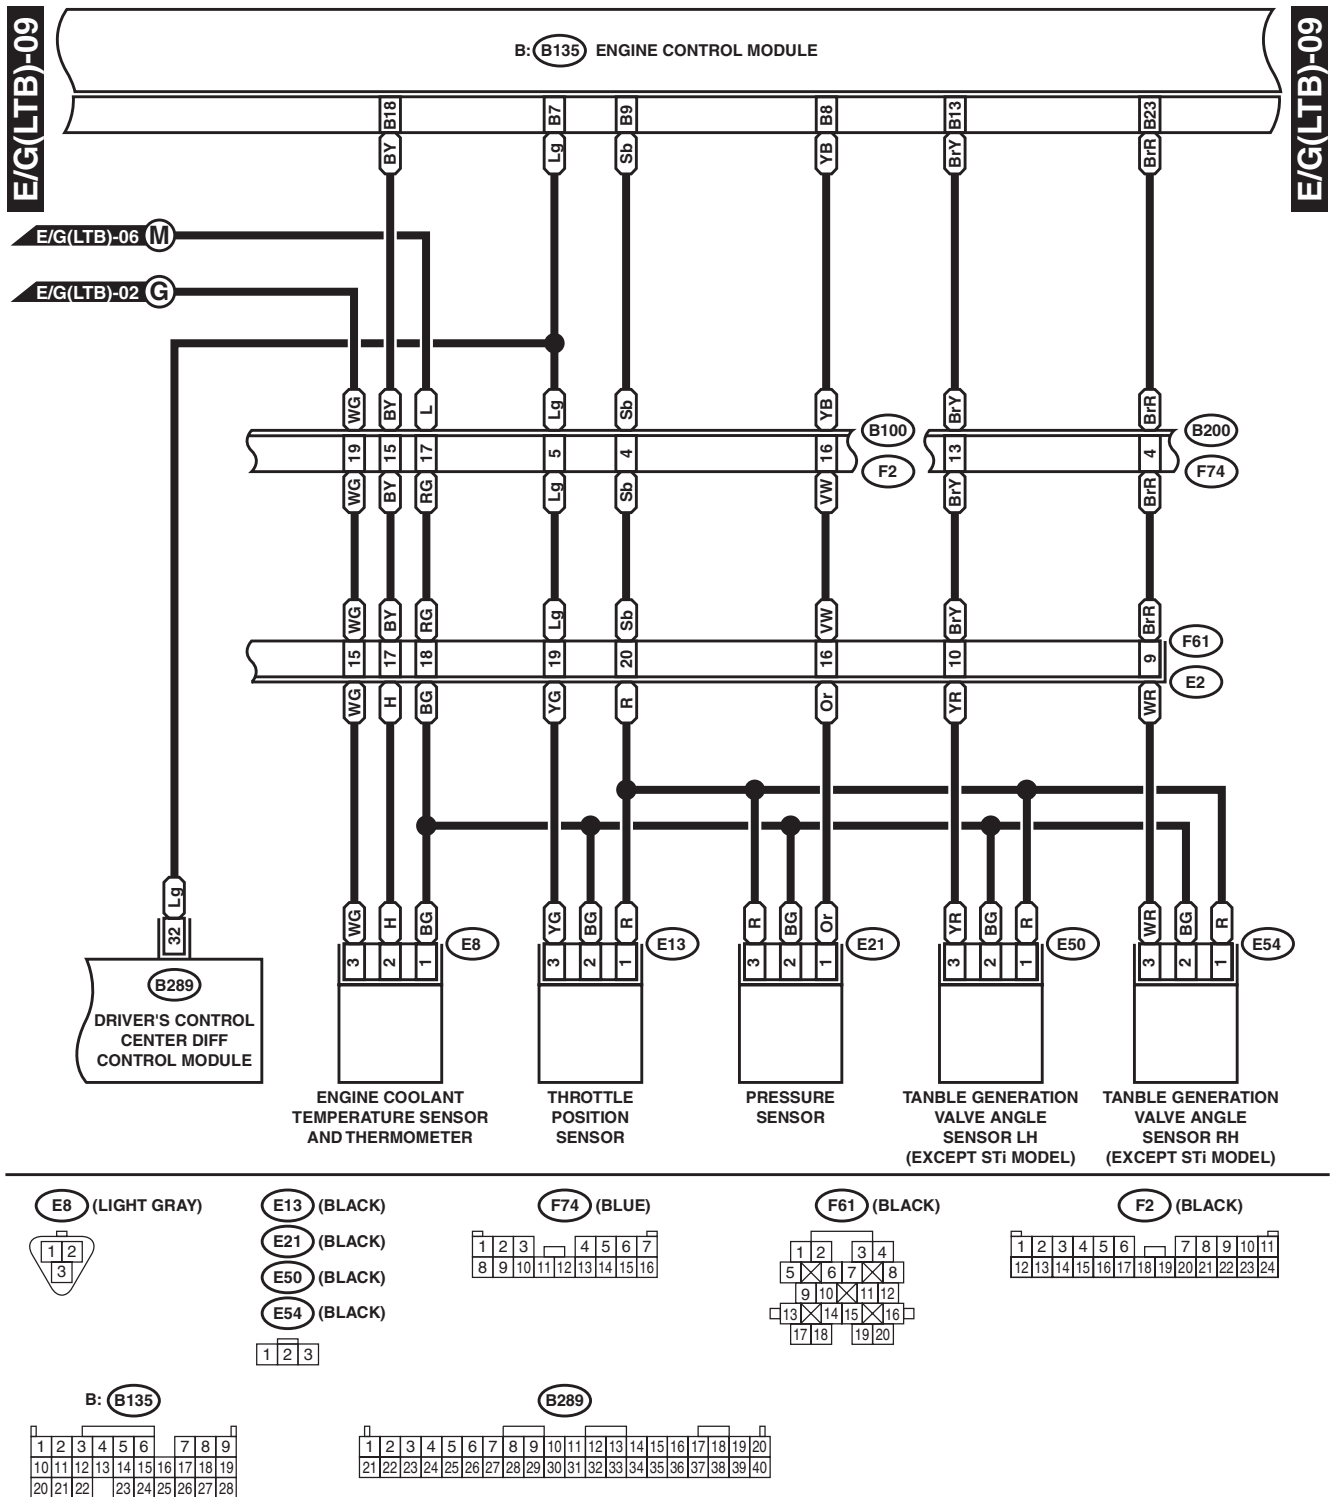

WI-04473

Engine Electrical System


WIRING SYSTEM

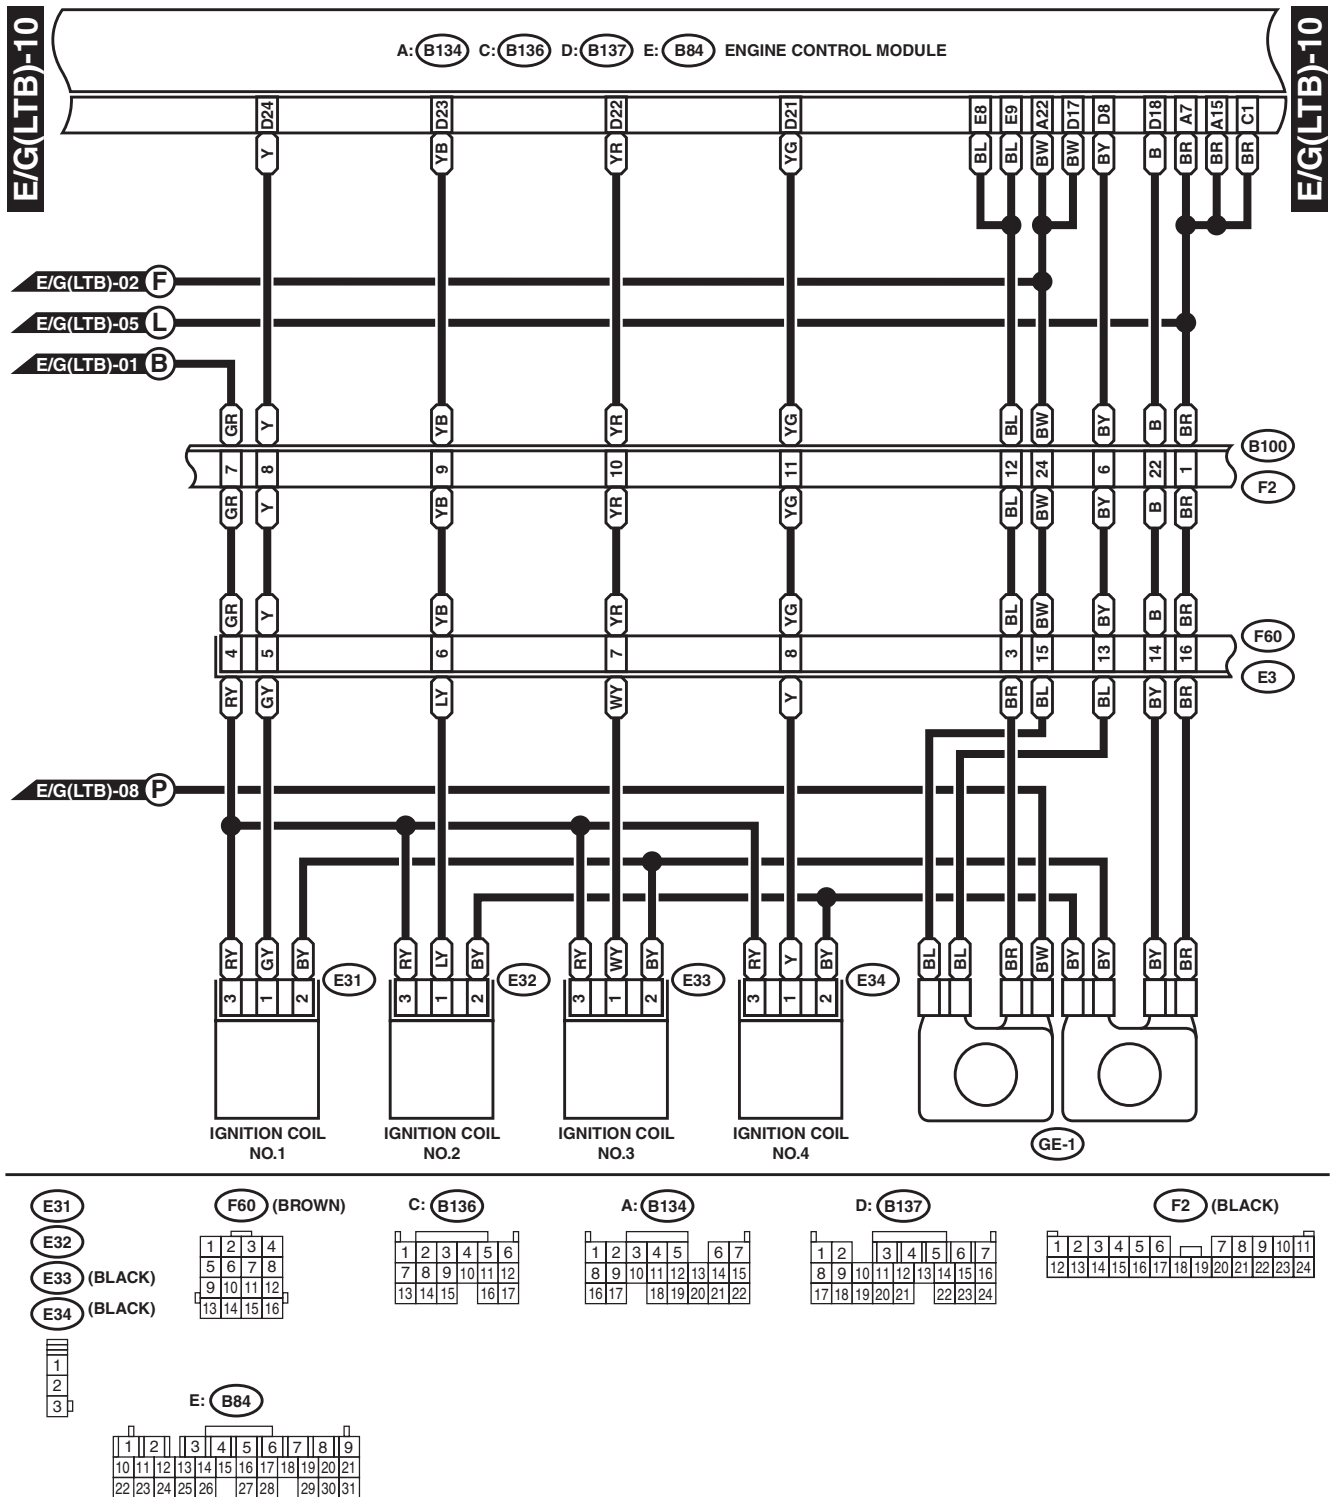

WI-02334

Engine Electrical System

WIRING SYSTEM

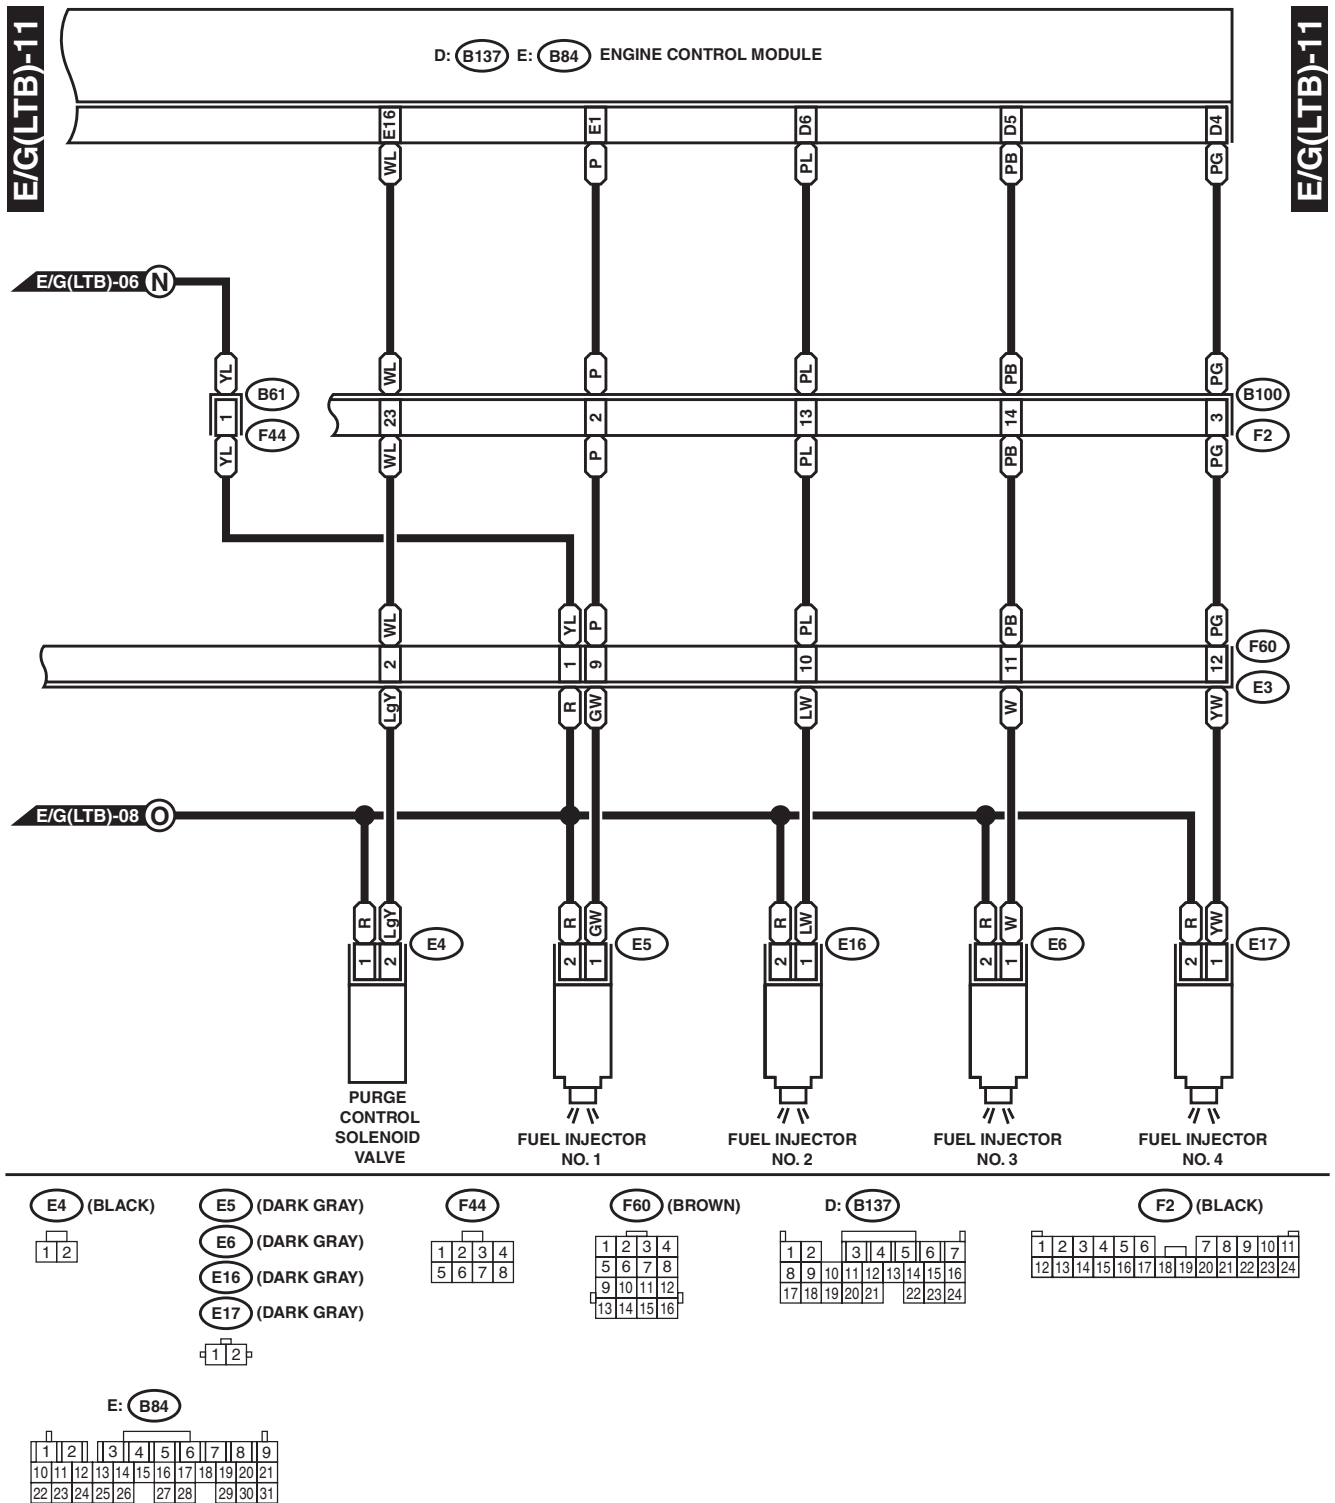


WI-02335

Engine Electrical System

WIRING SYSTEM


4. RHD SOHC W/O OBD MODEL

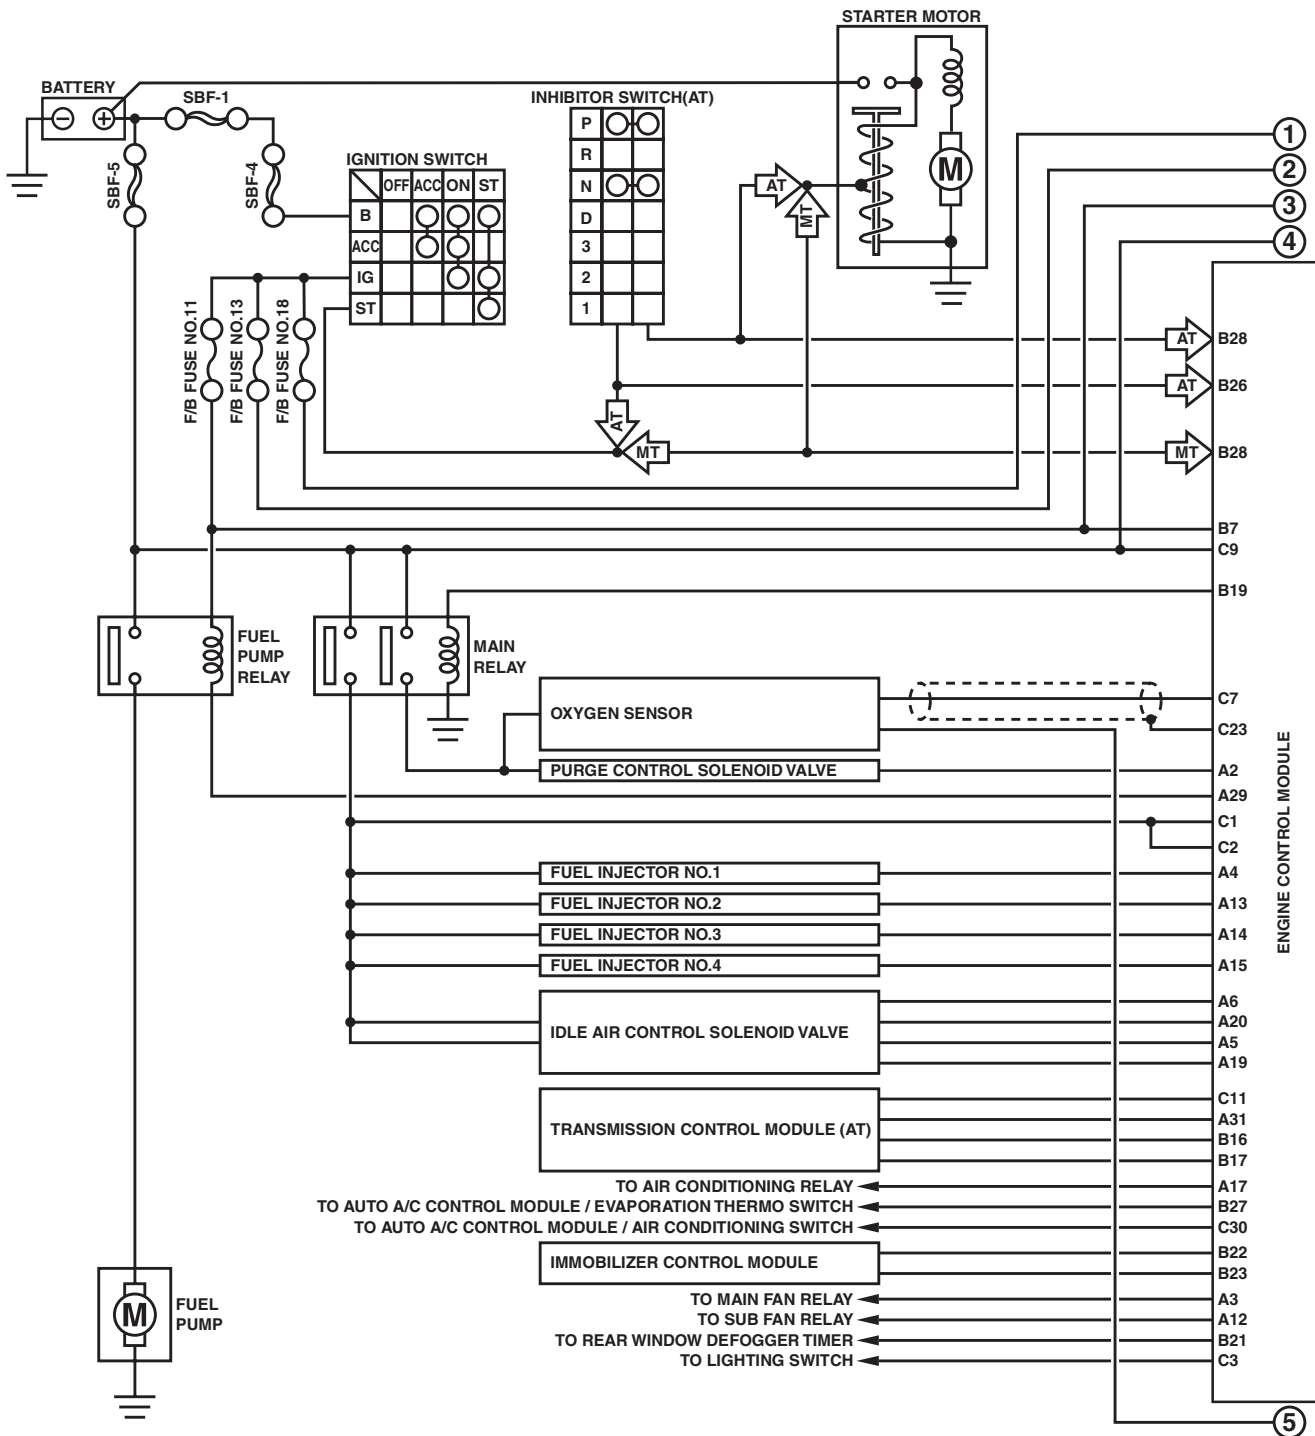

WI-04474


Engine Electrical System

WIRING SYSTEM

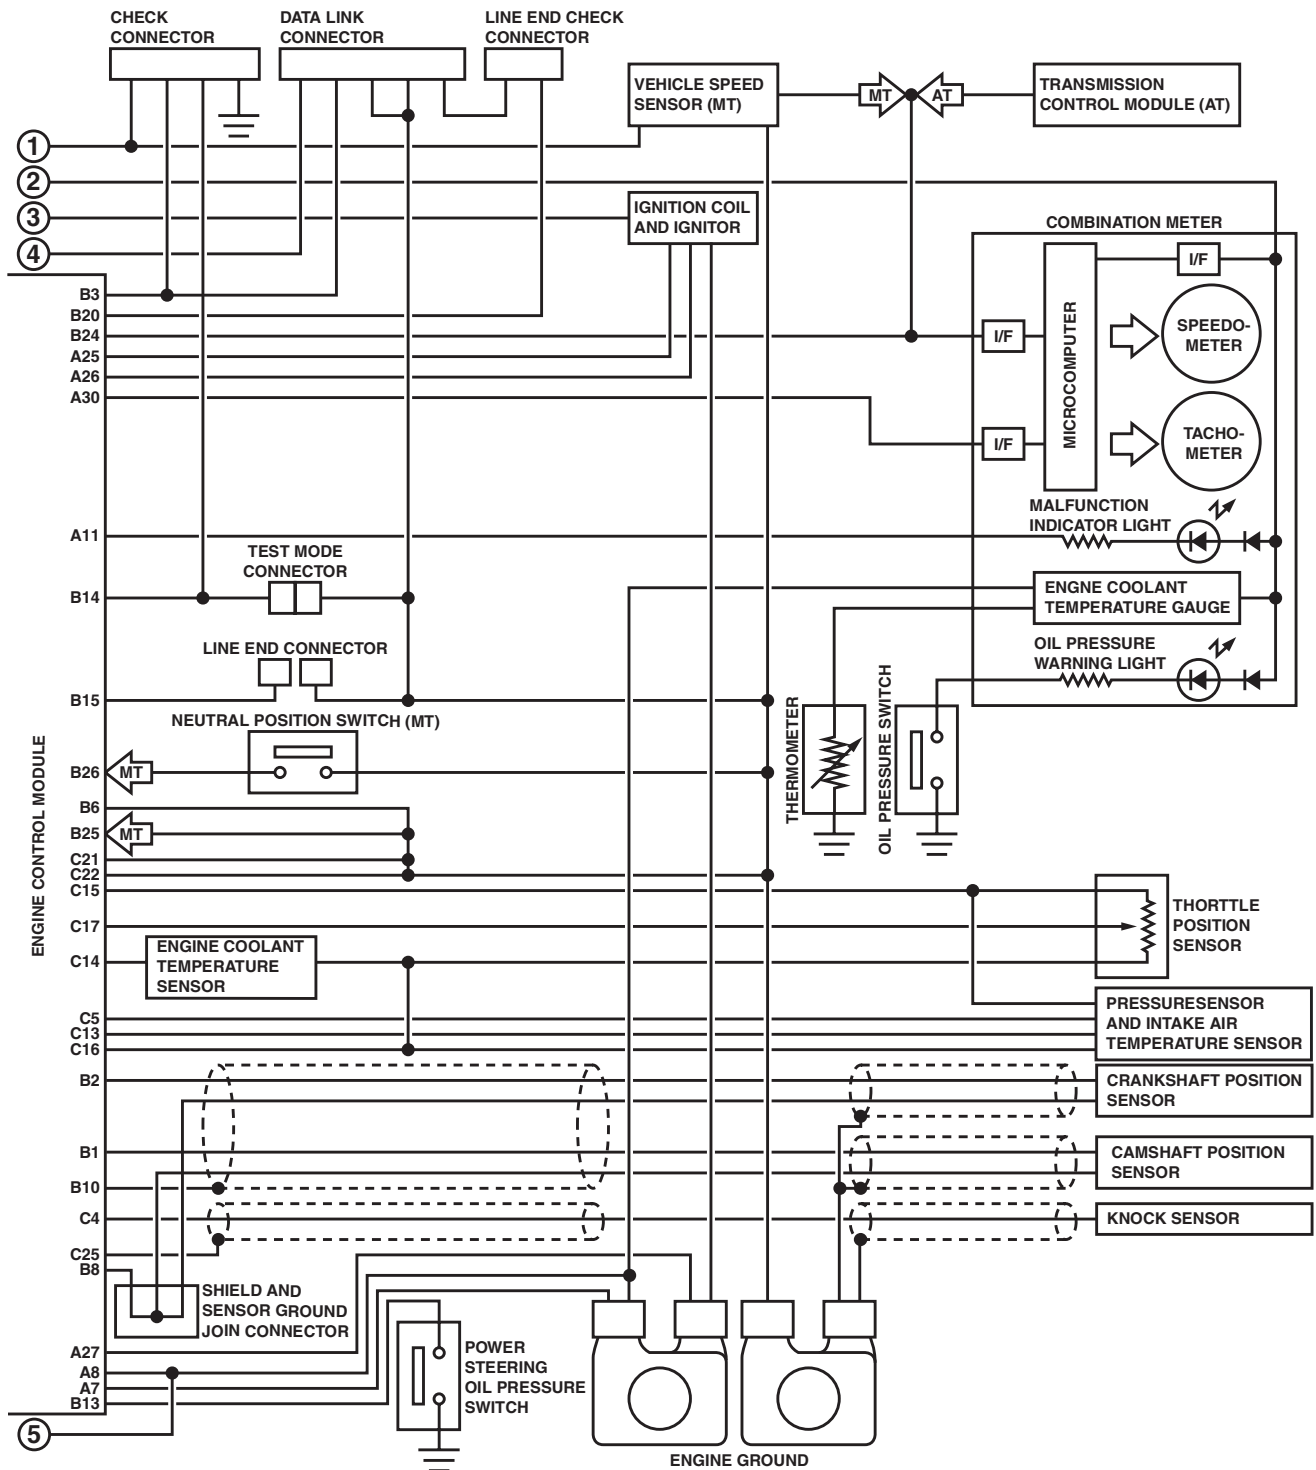

WI-02566


WIRING SYSTEM

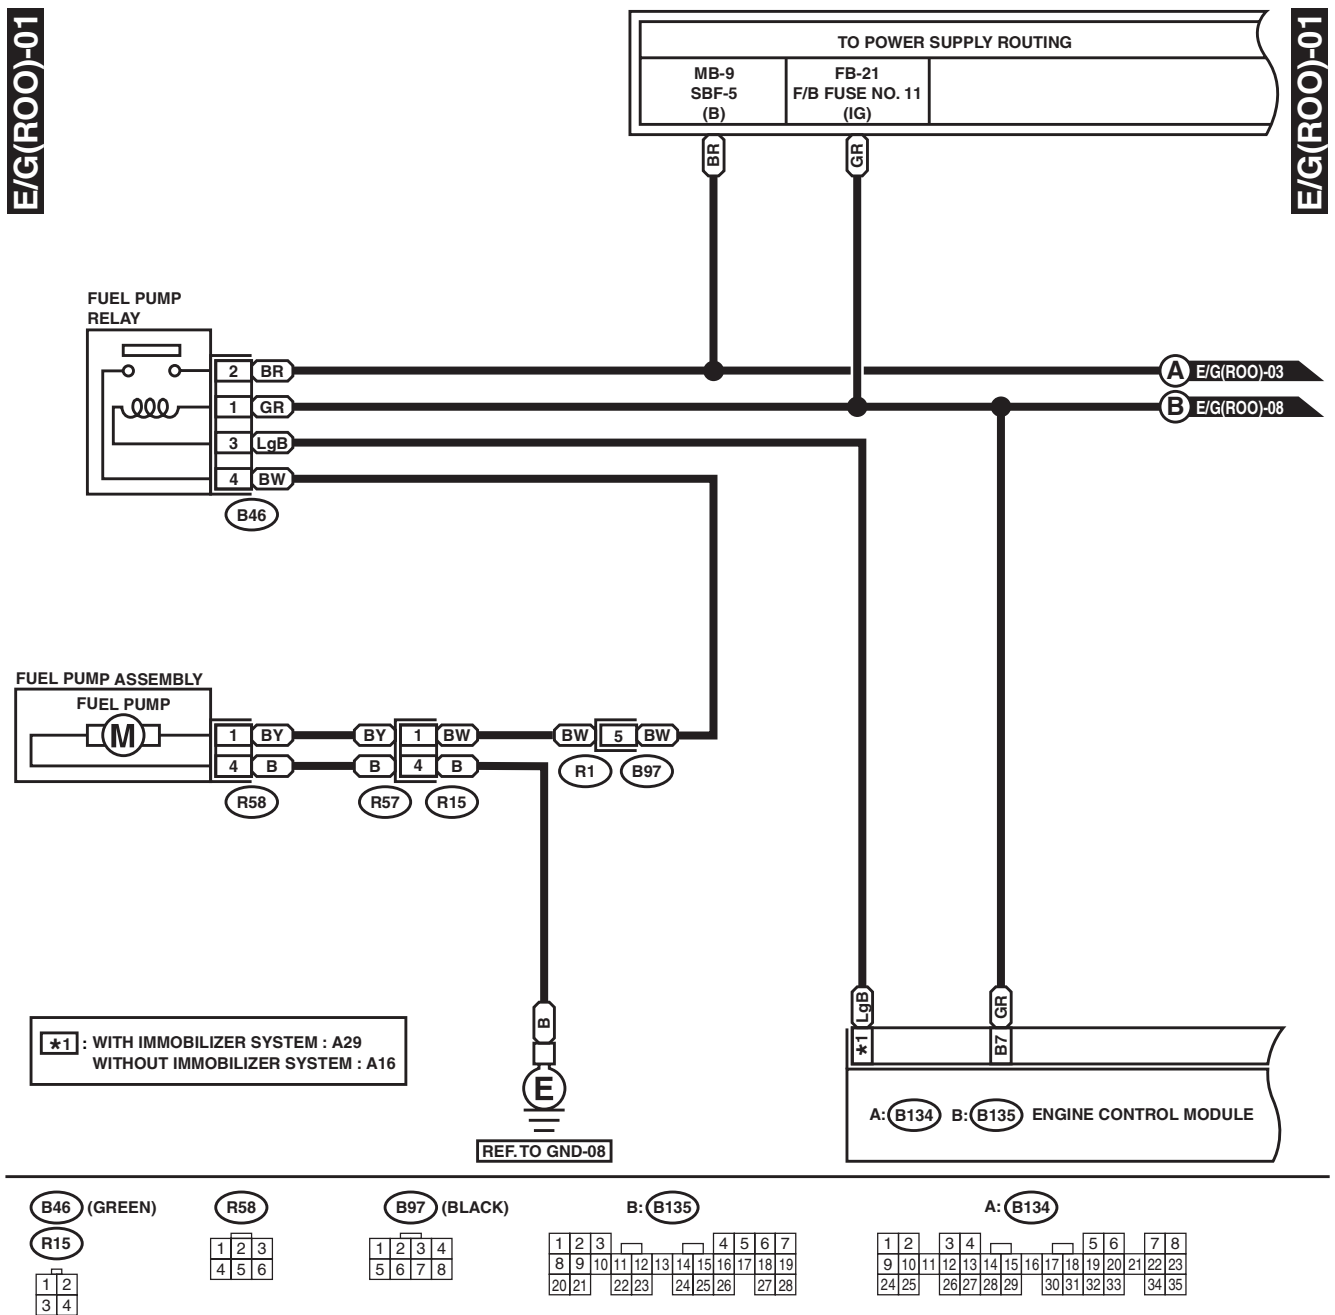

WI-02336

Engine Electrical System


WIRING SYSTEM

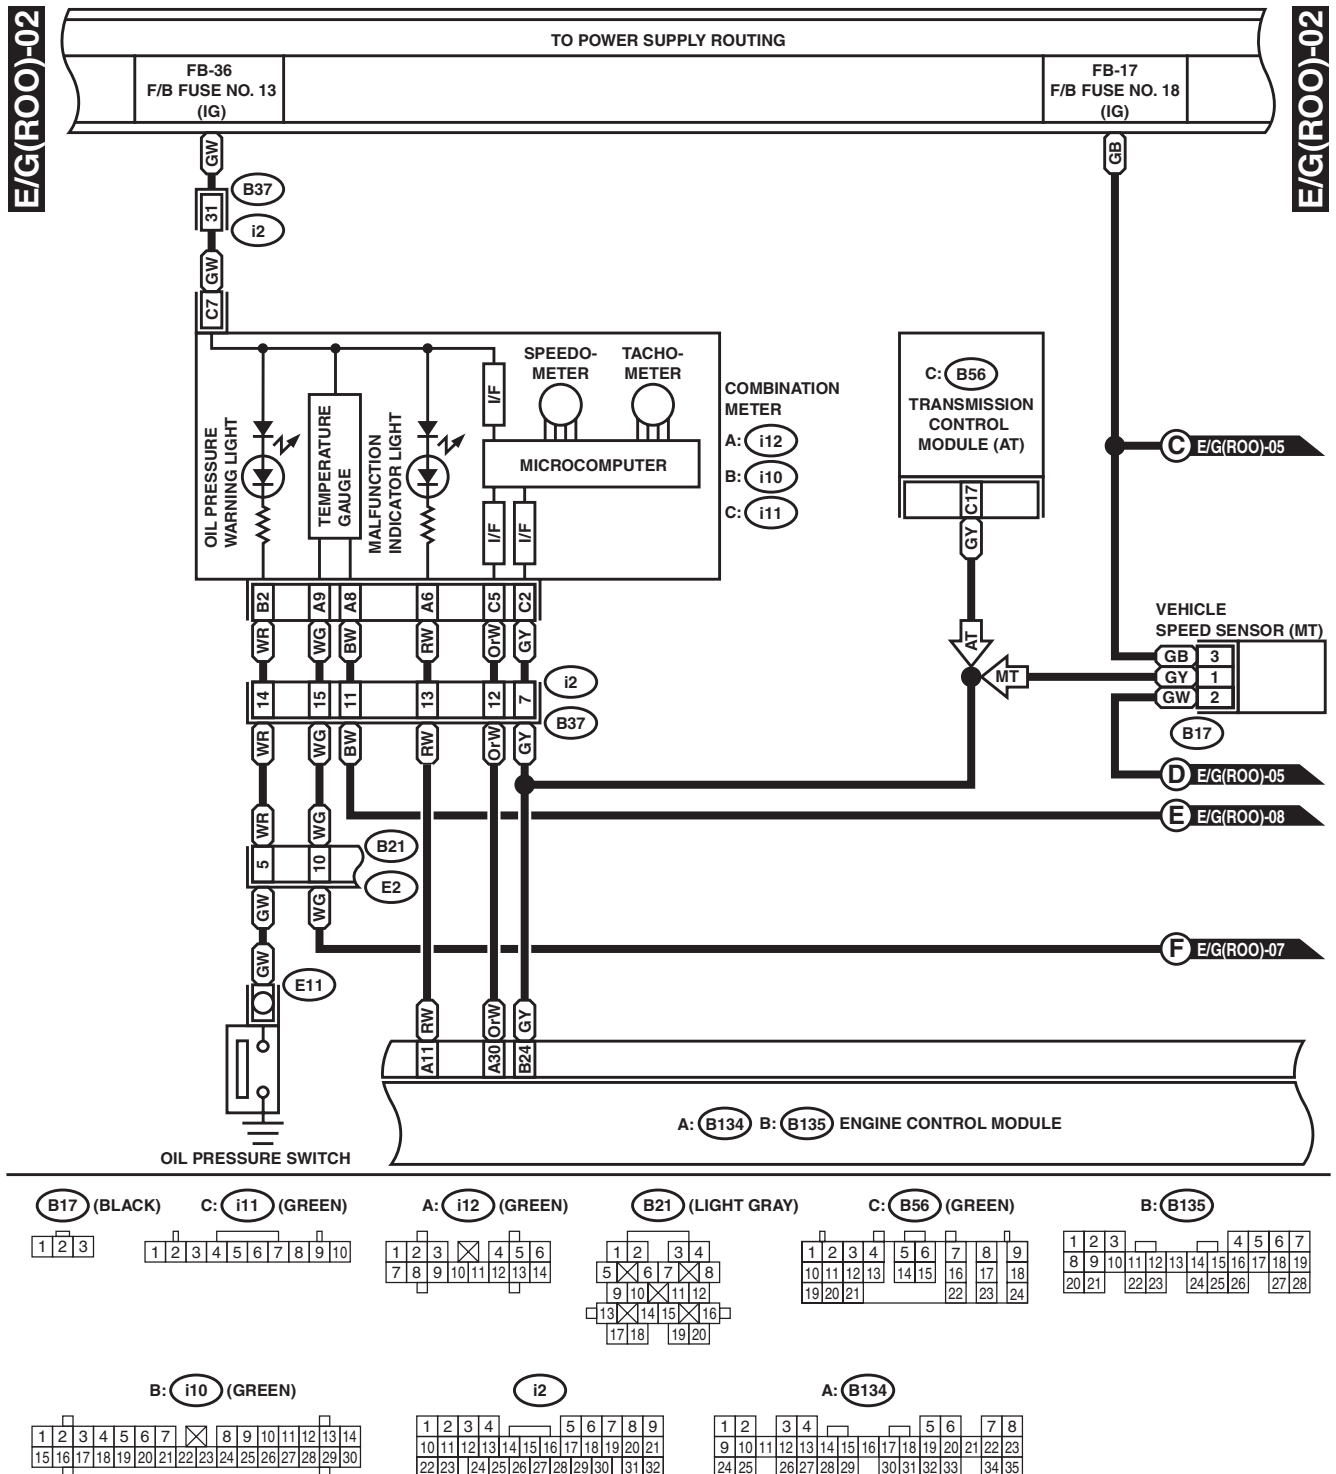

WI-02337

Engine Electrical System


WIRING SYSTEM

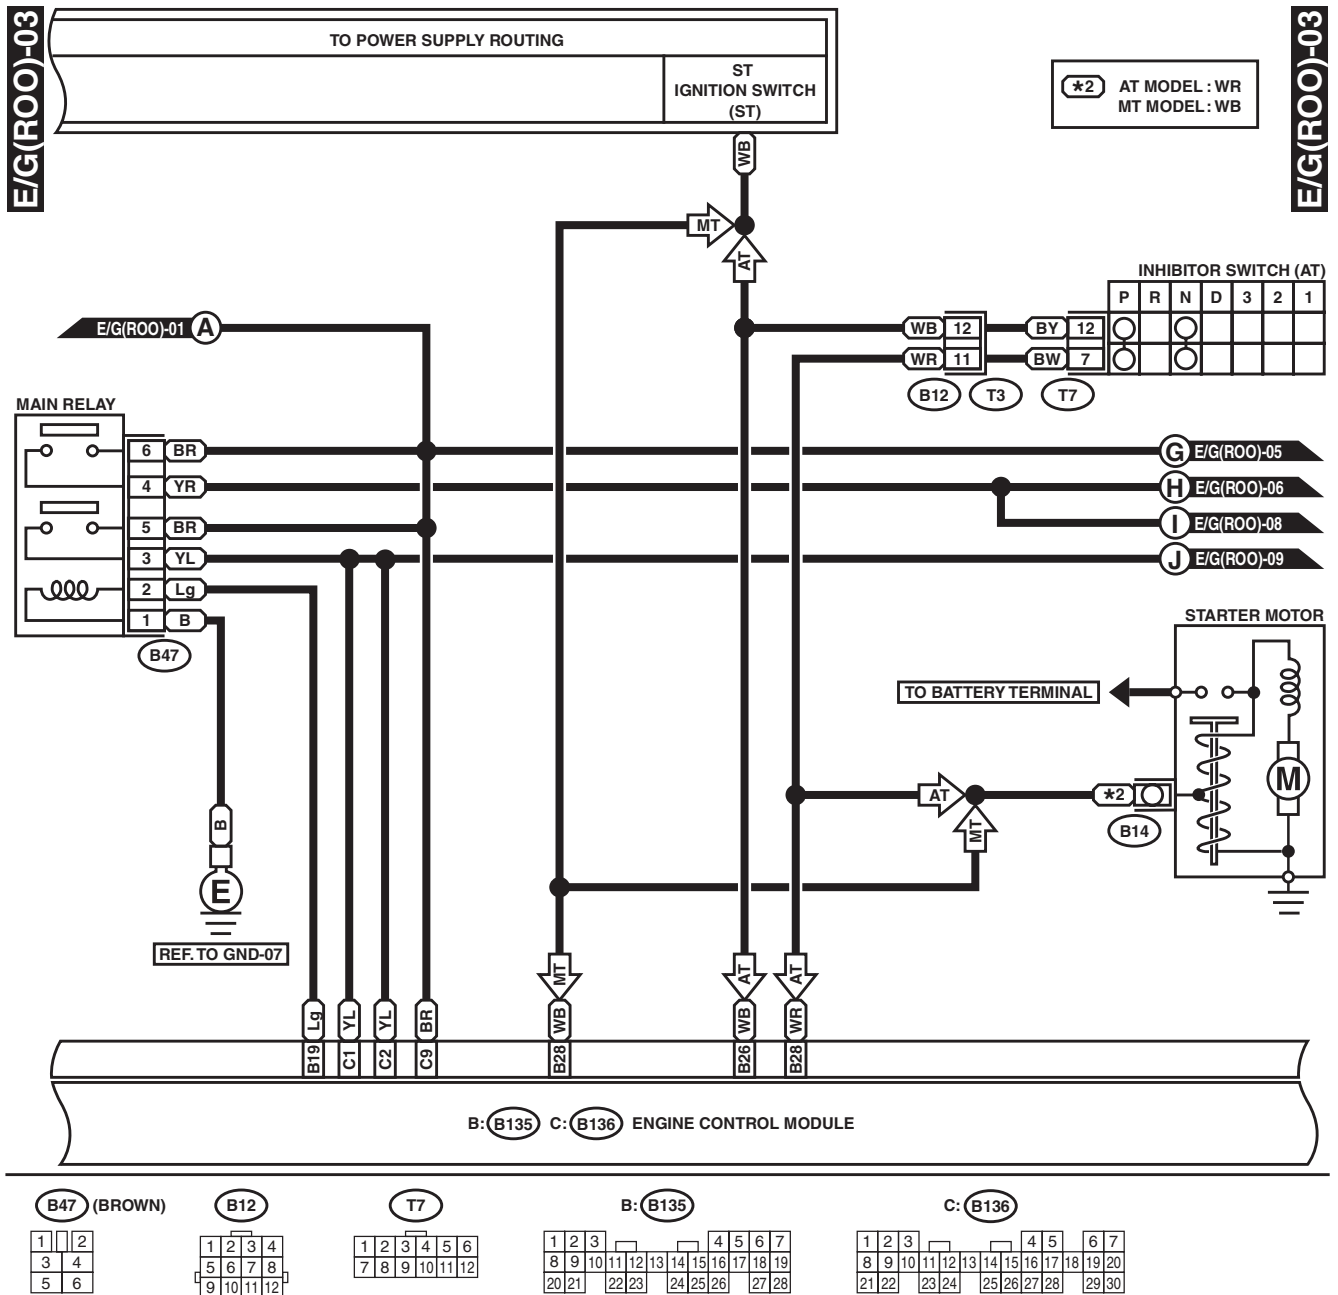

WI-02338


E/G(ROO)-04

E/G(ROO)-04

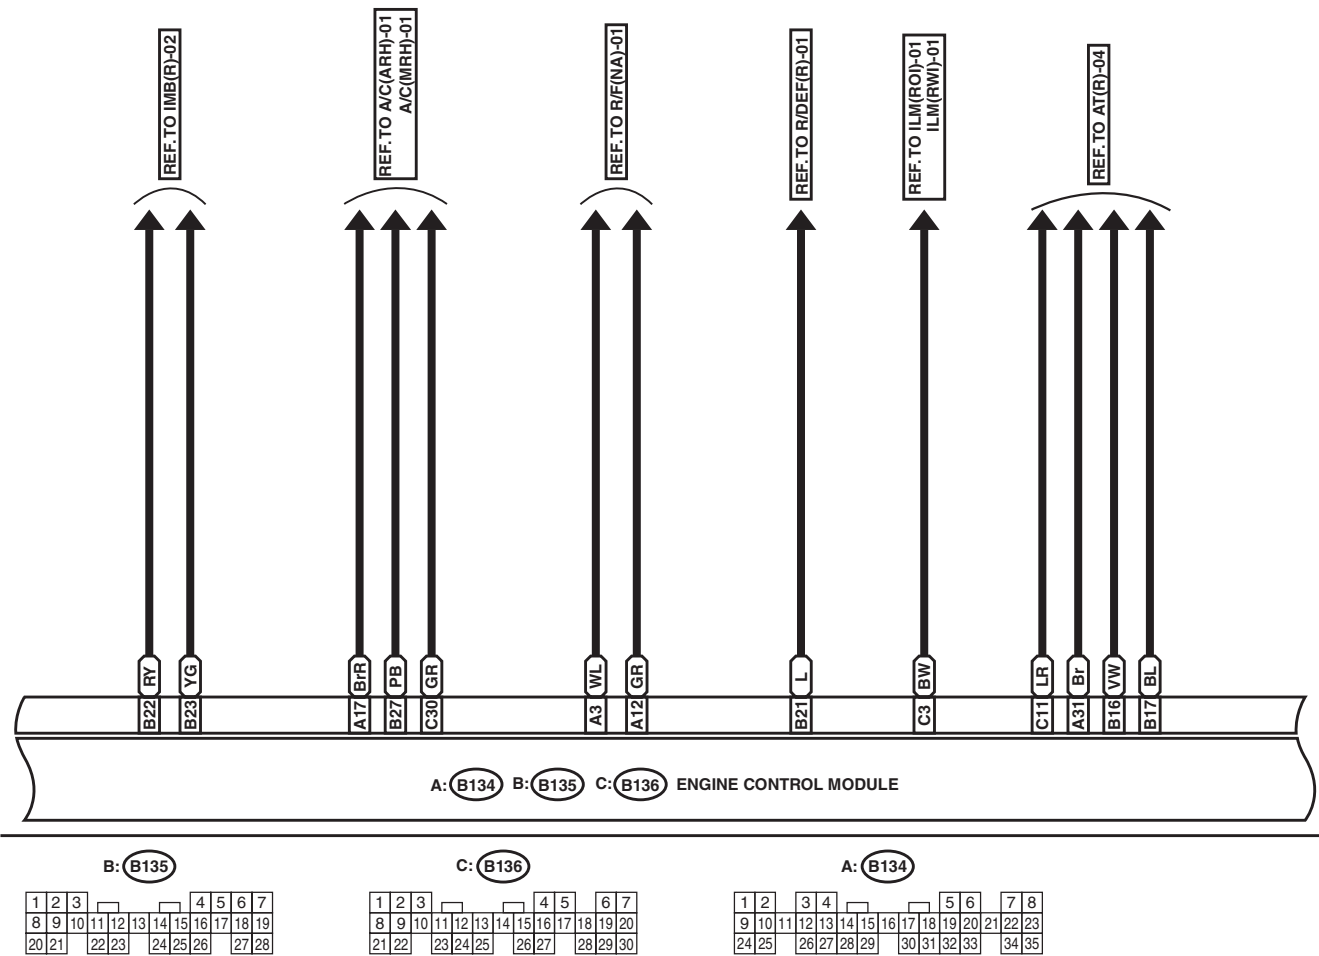

Engine Electrical System


WIRING SYSTEM

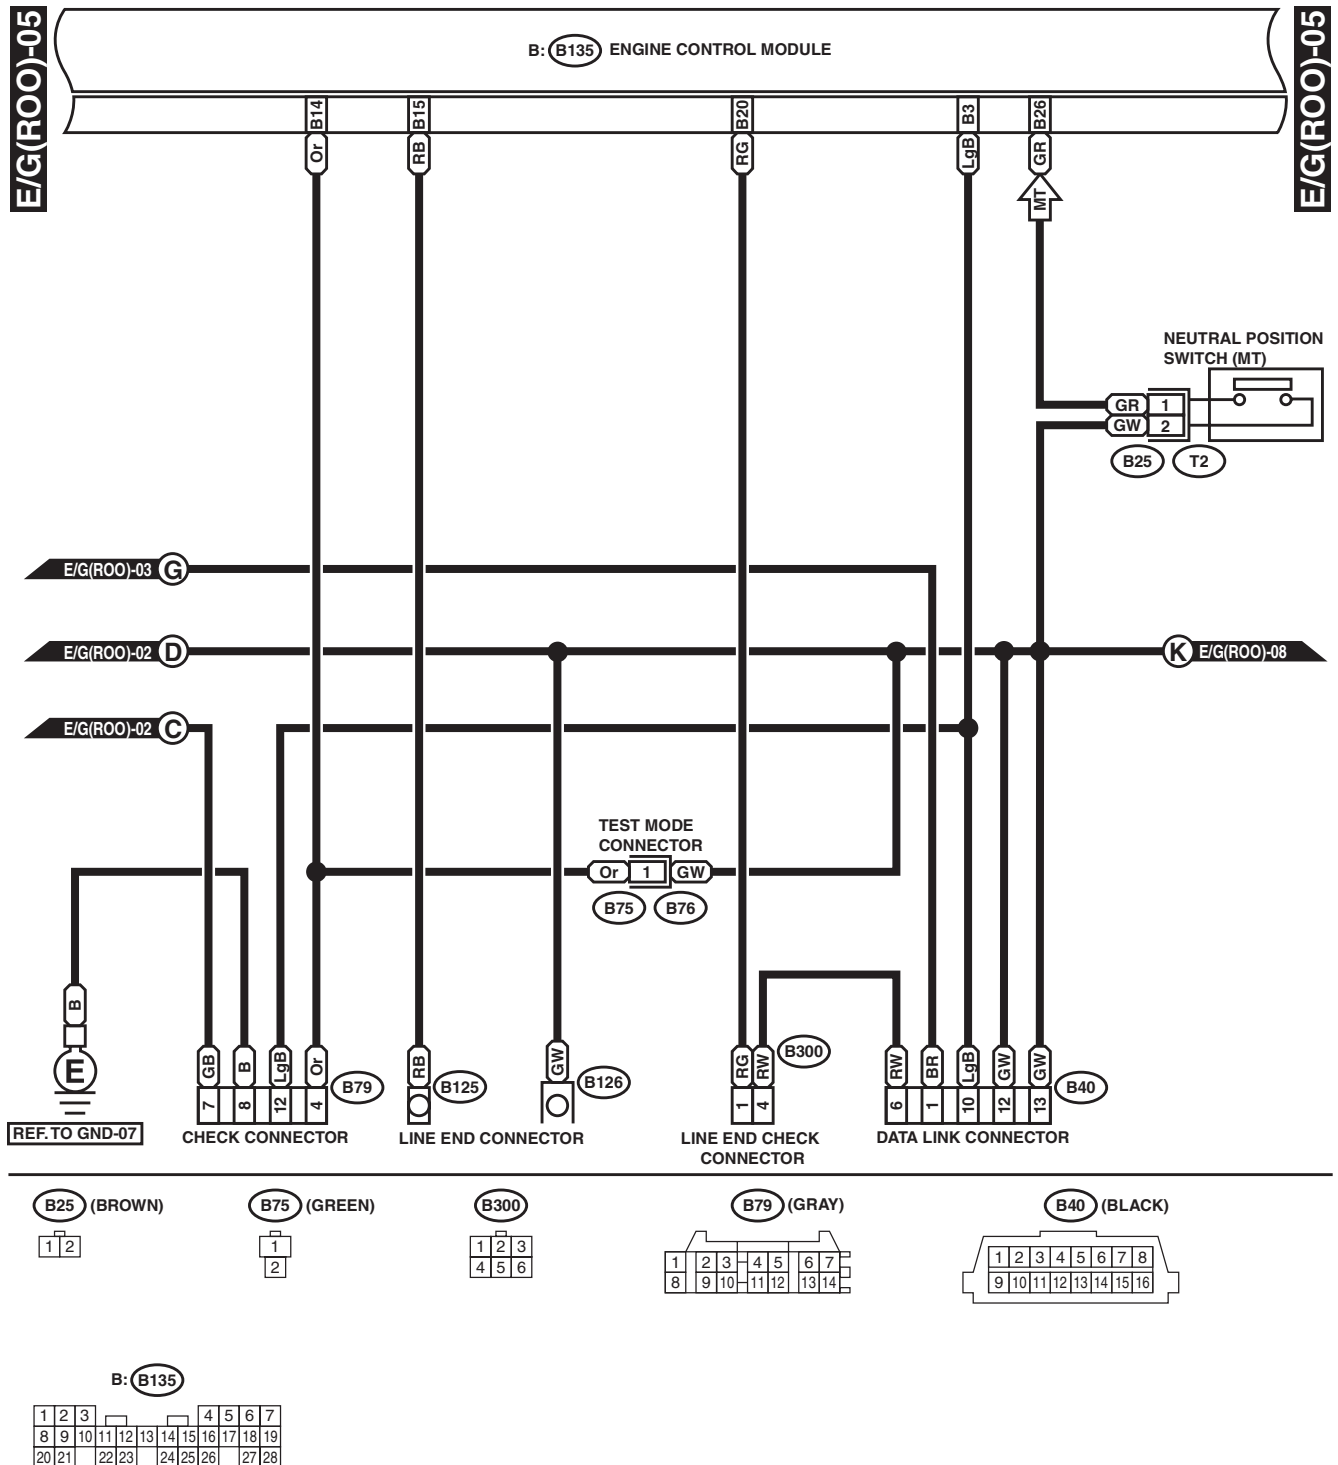

WI-02340

Engine Electrical System


WIRING SYSTEM

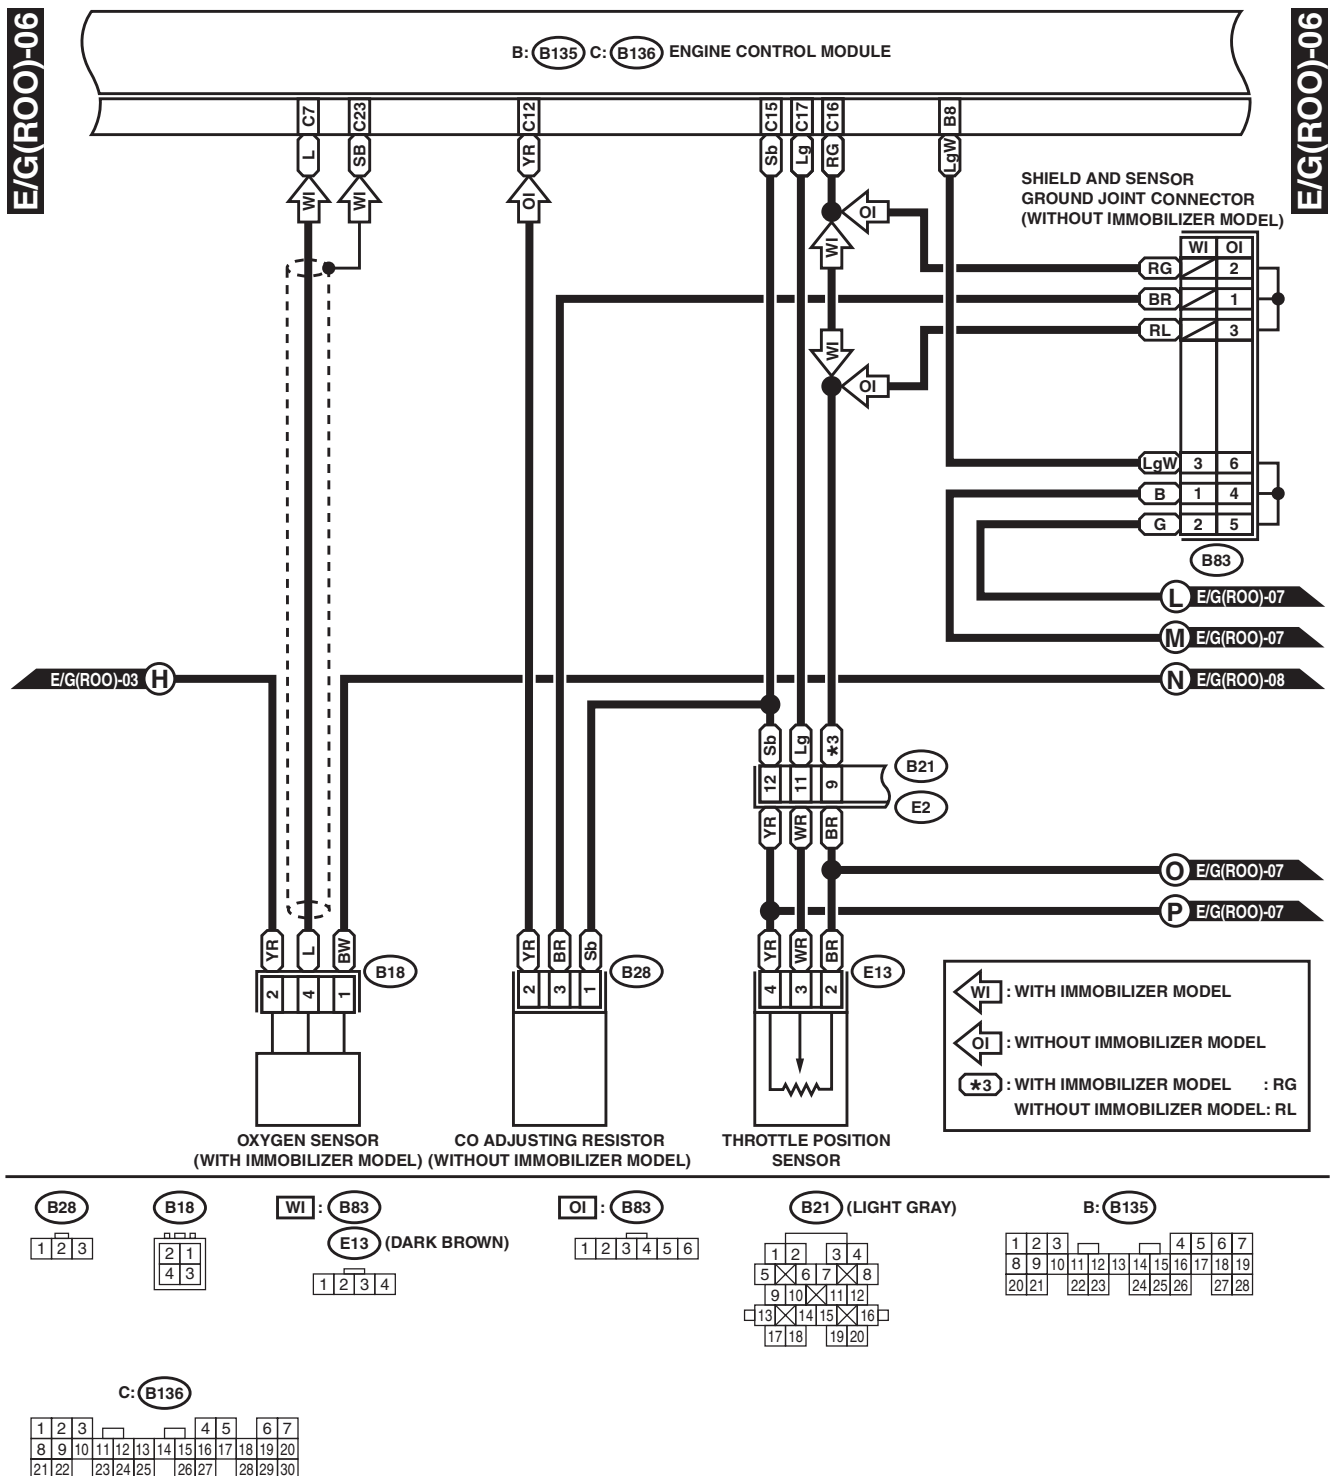

WI-04476

Engine Electrical System


WIRING SYSTEM

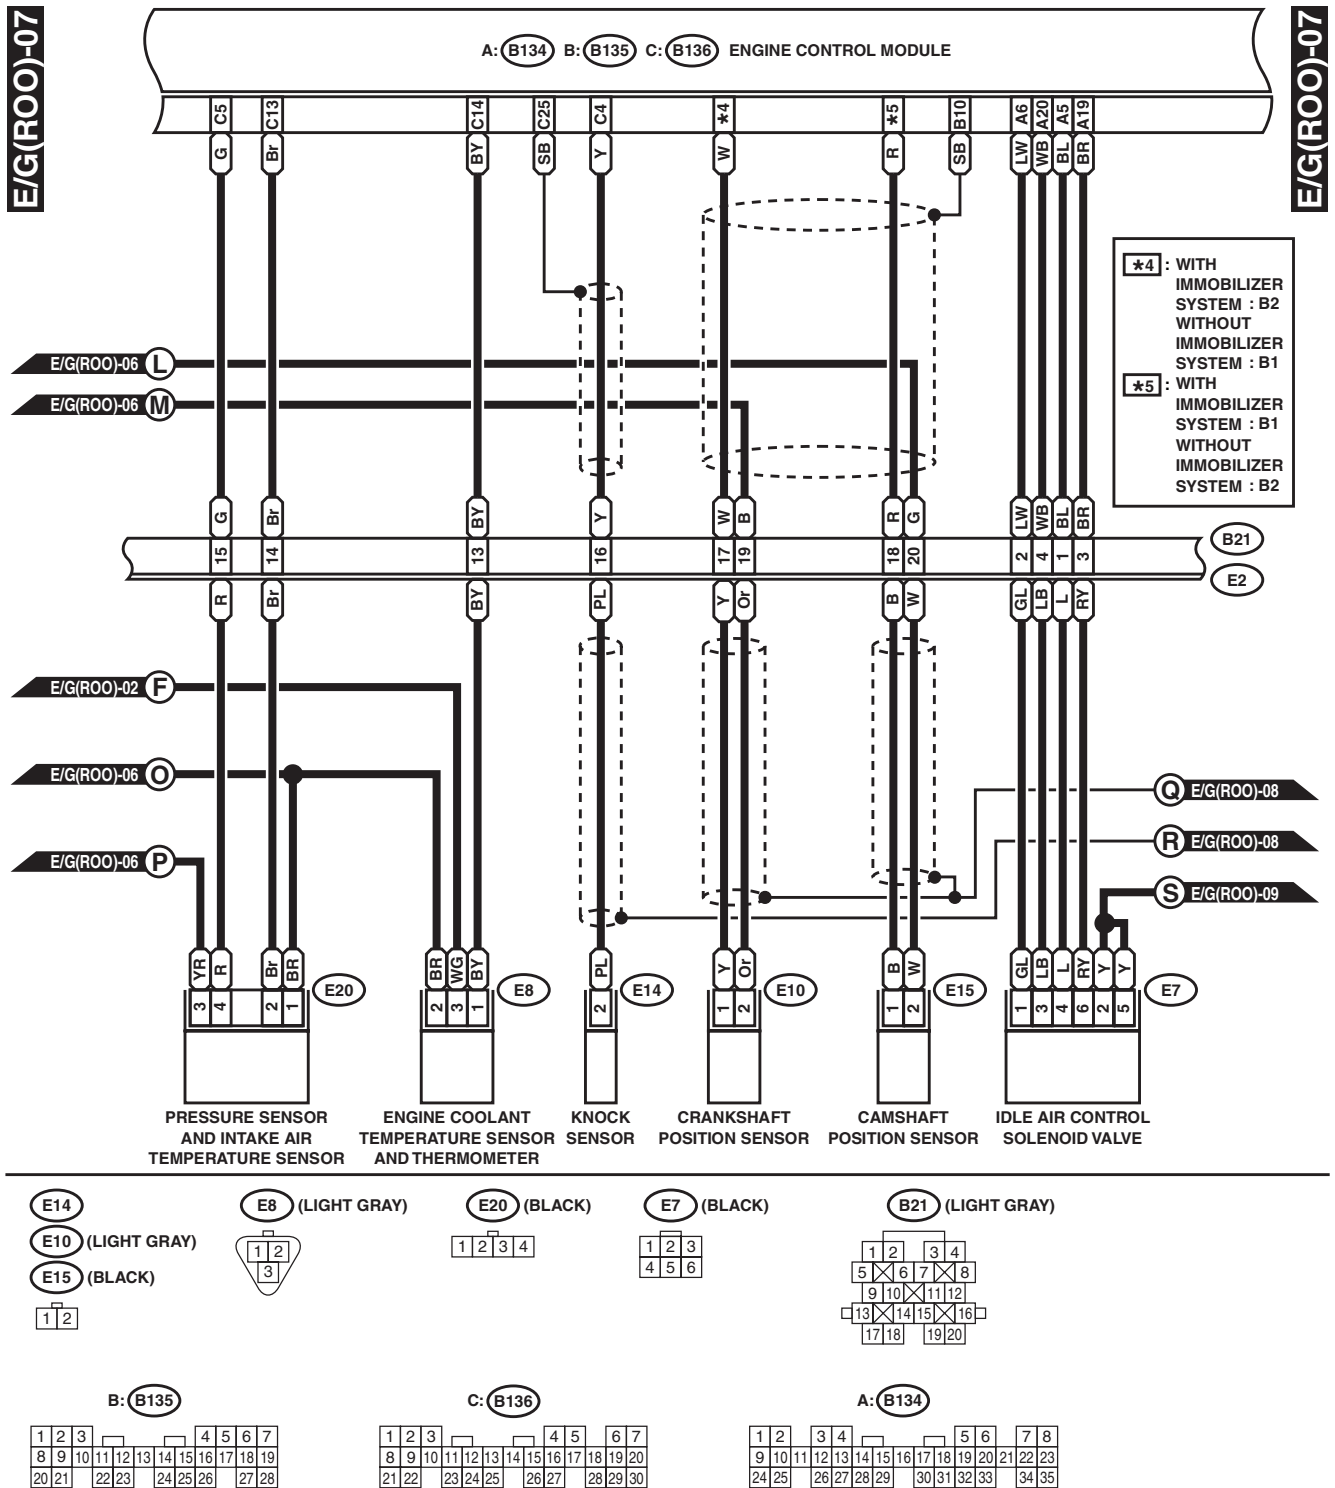

WI-02342

Engine Electrical System


WIRING SYSTEM

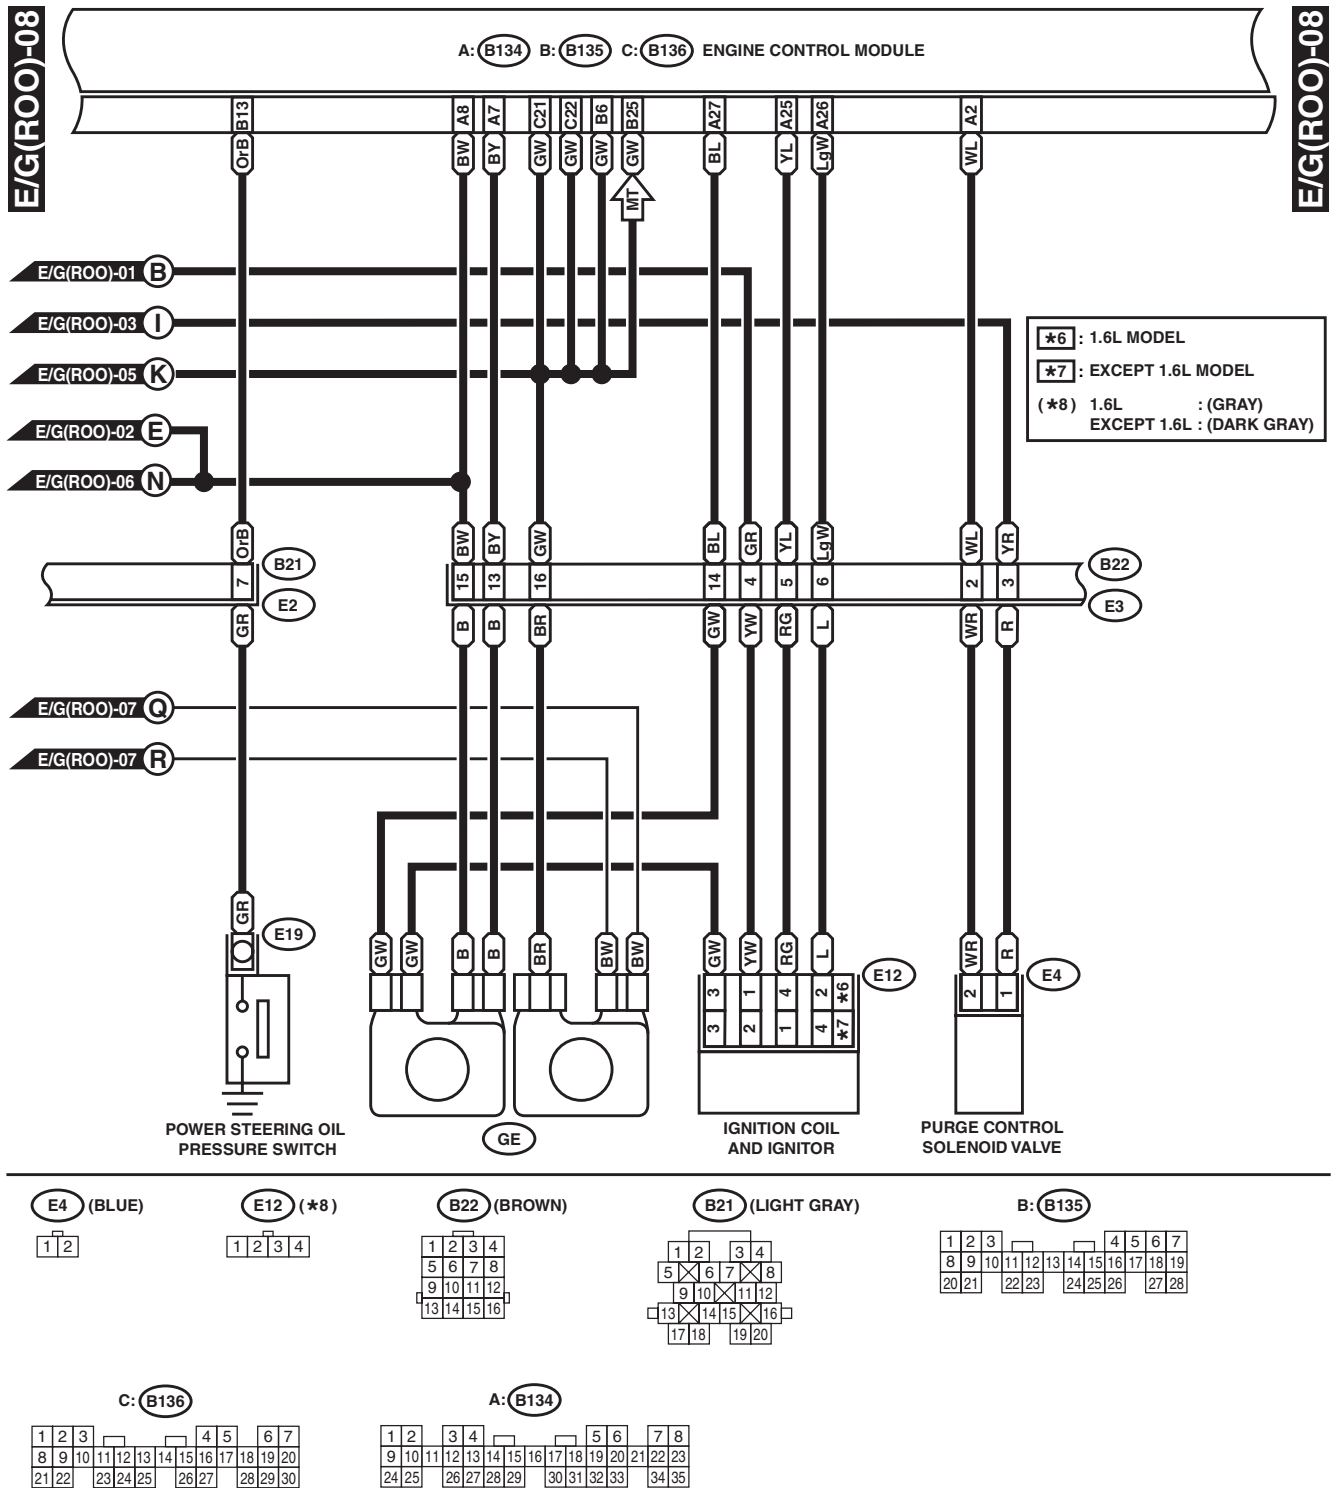

WI-02343

Engine Electrical System

WIRING SYSTEM

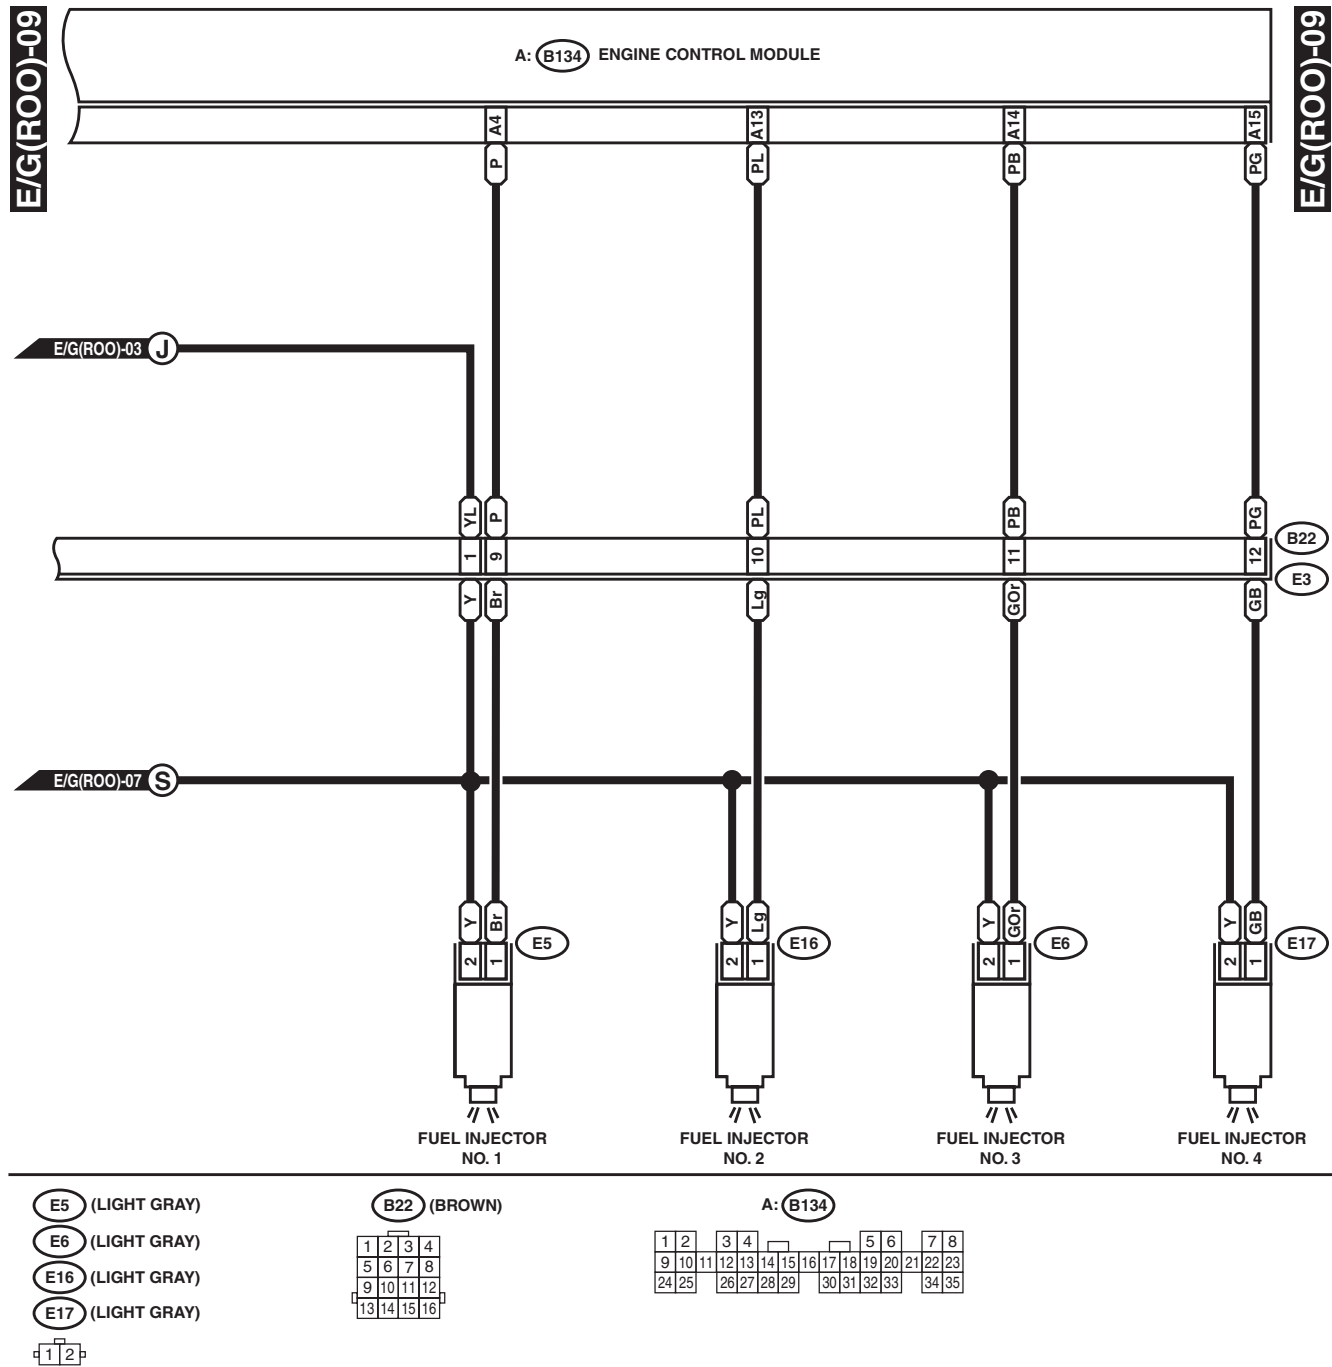


WI-02344

Engine Electrical System


WIRING SYSTEM

5. RHD SOHC WITH OBD MODEL

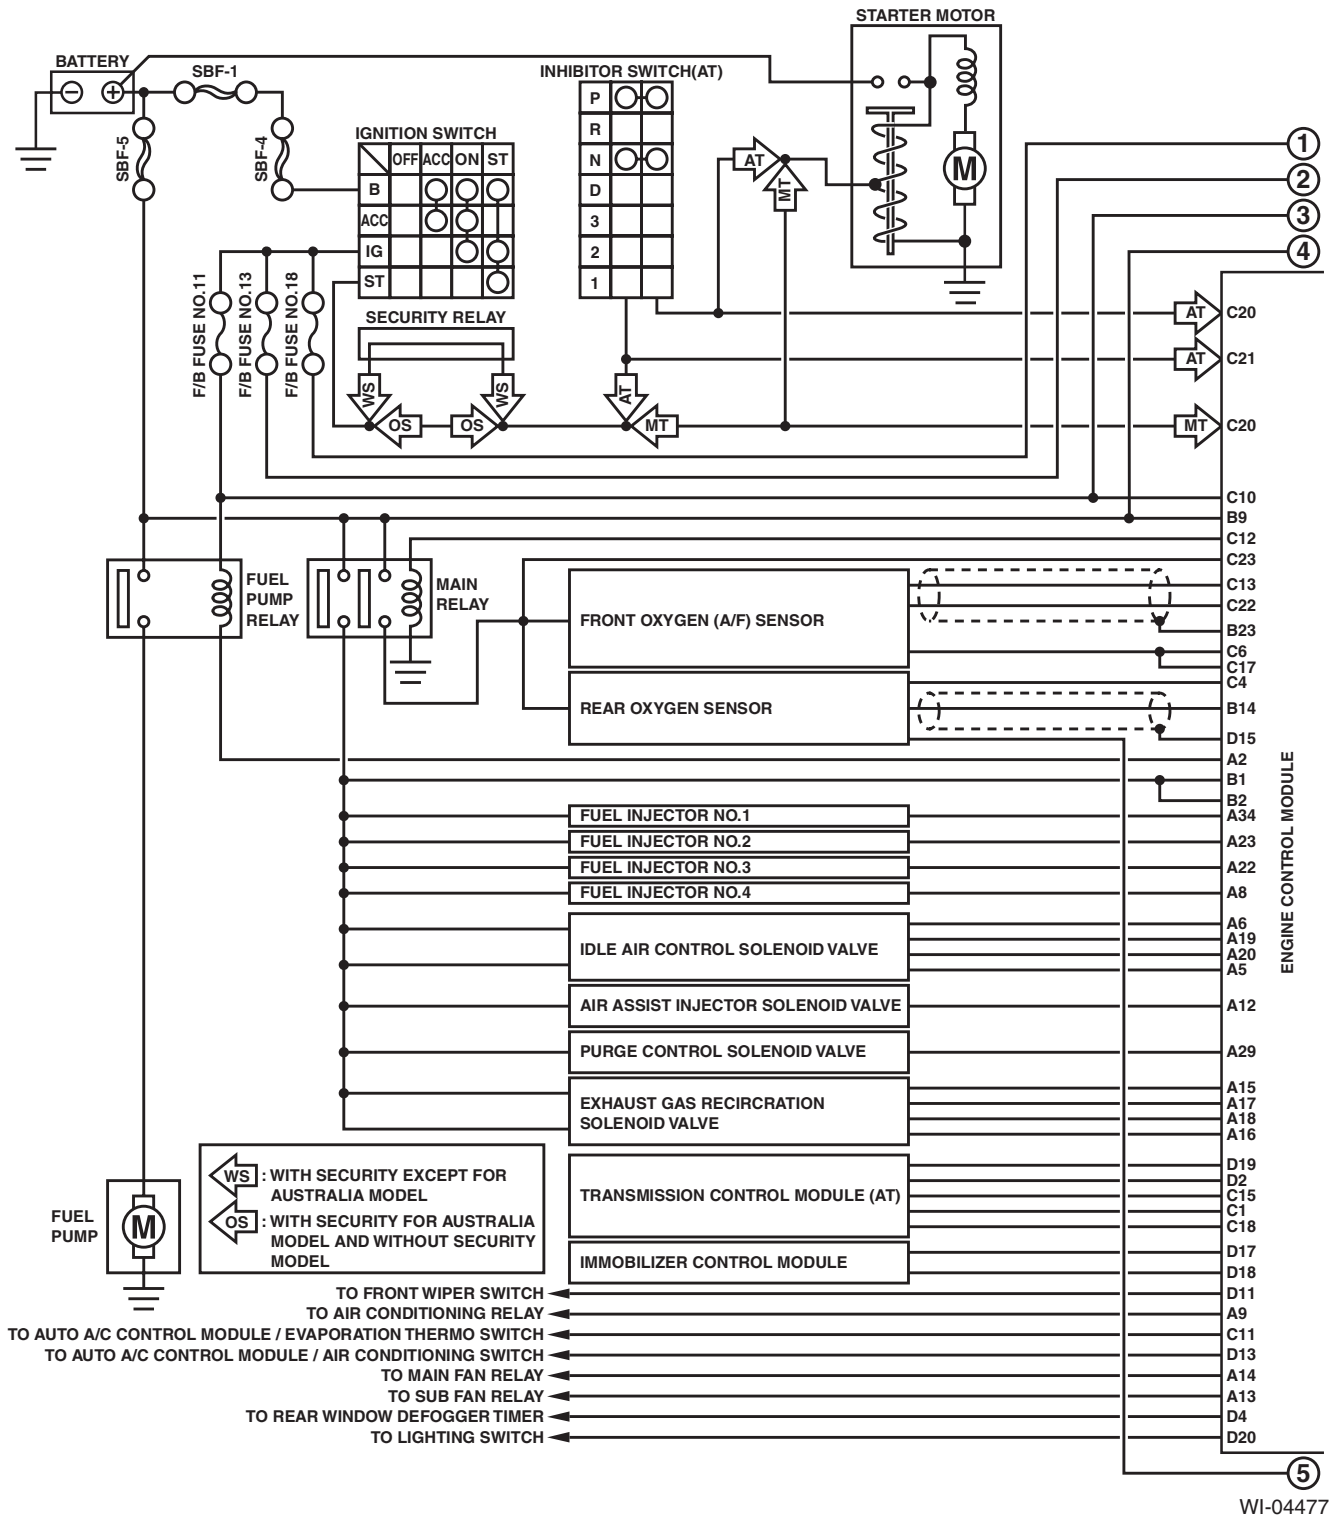

Engine Electrical System


WIRING SYSTEM

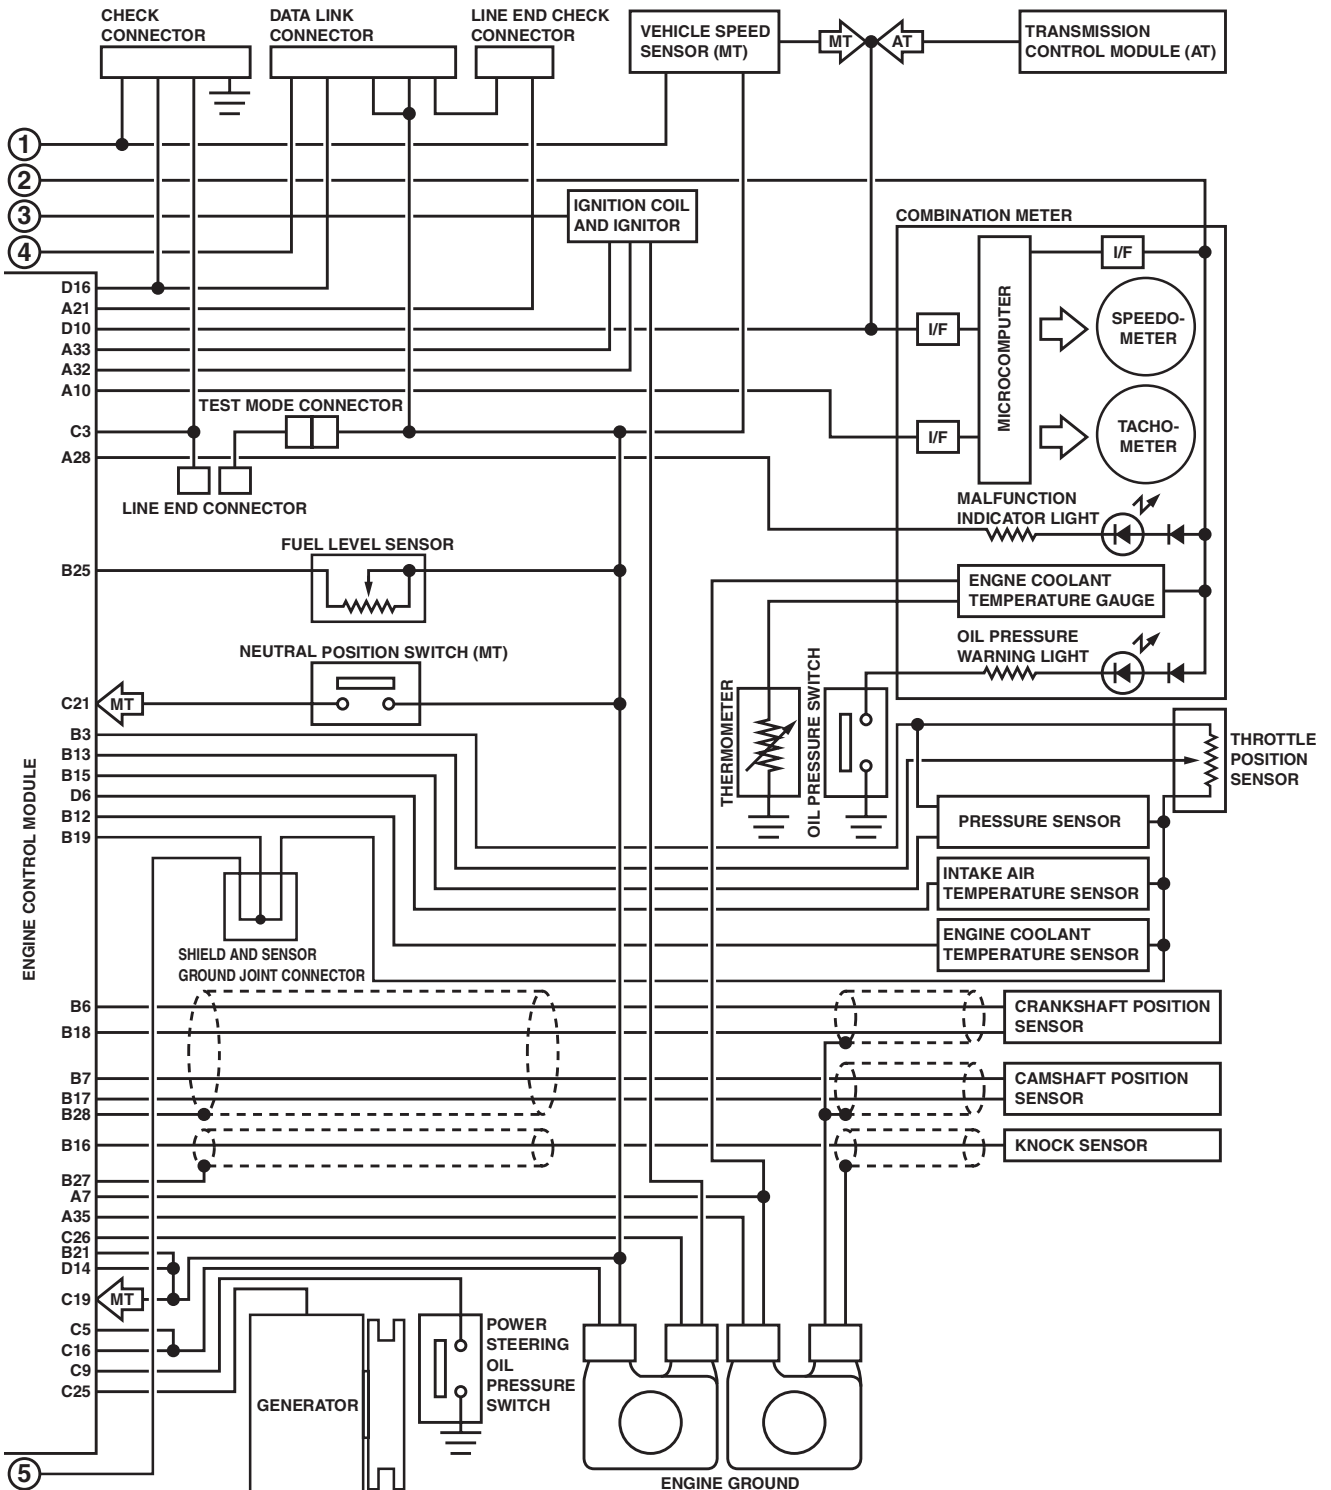

WI-02568

Engine Electrical System


WIRING SYSTEM

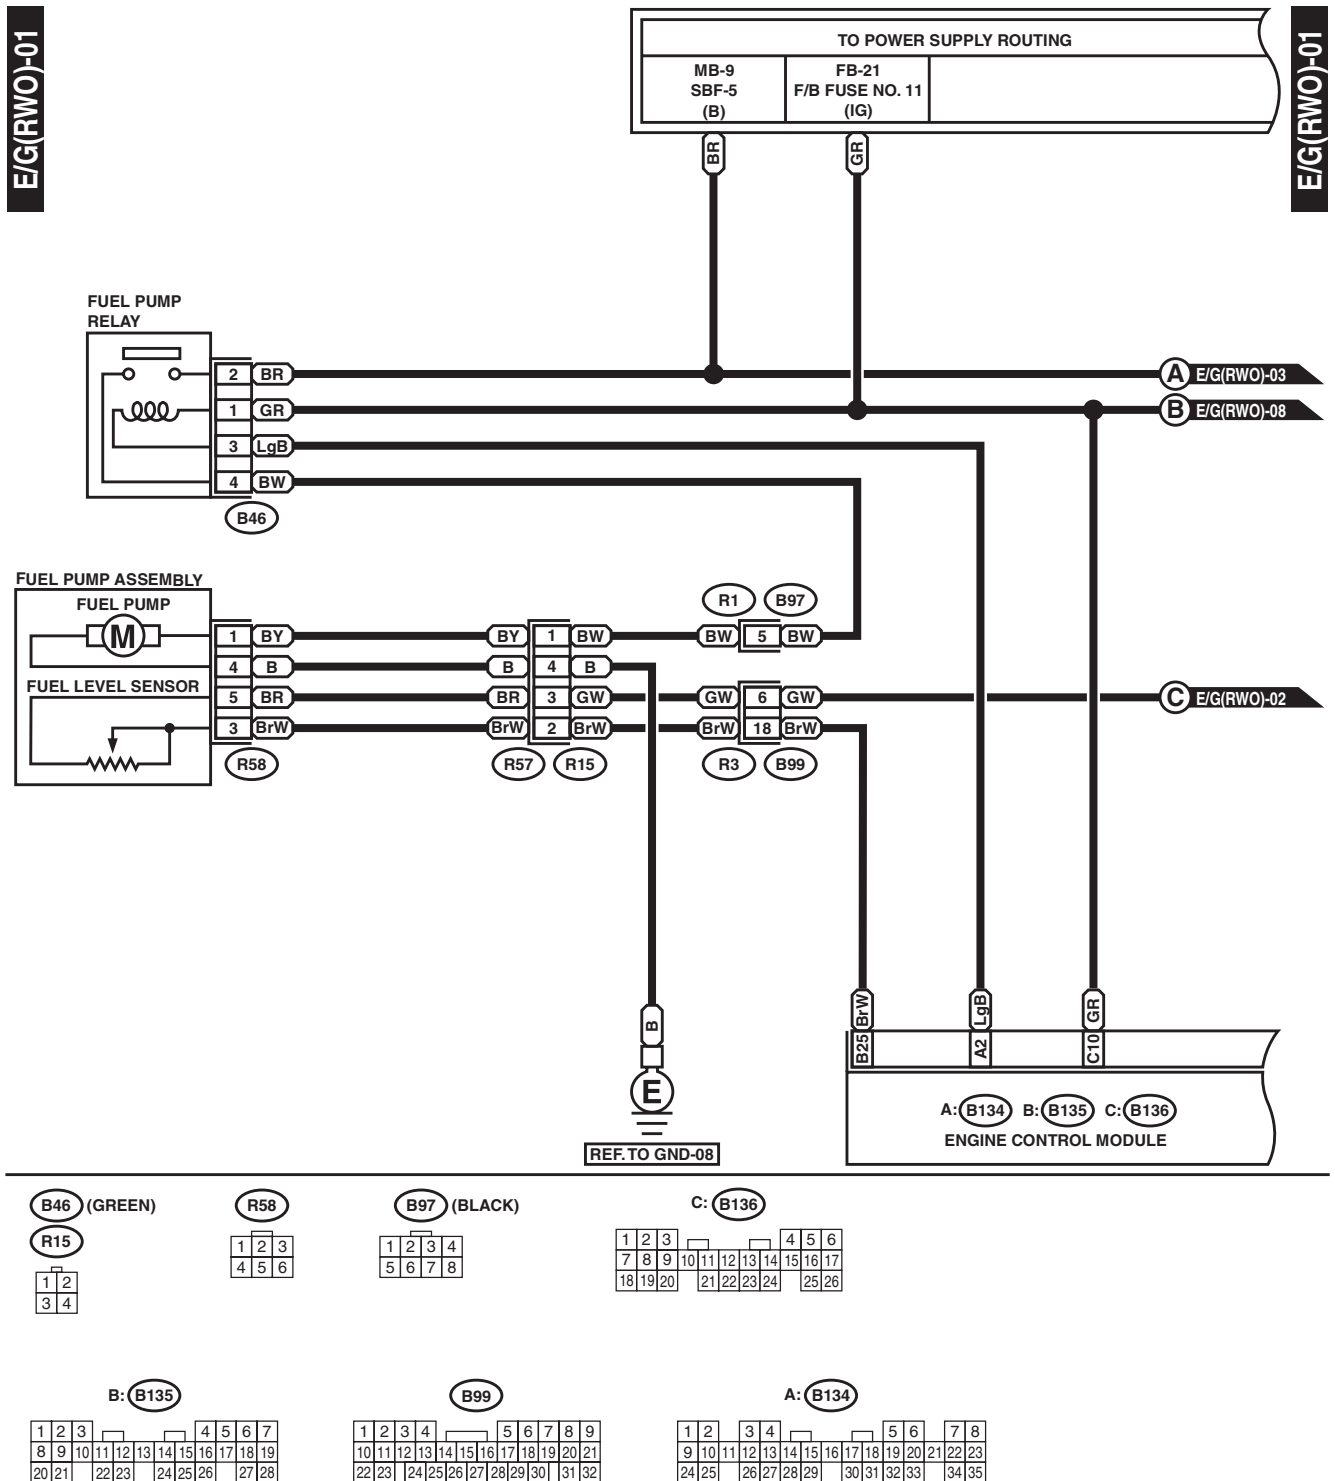

WI-04551

Engine Electrical System


WIRING SYSTEM

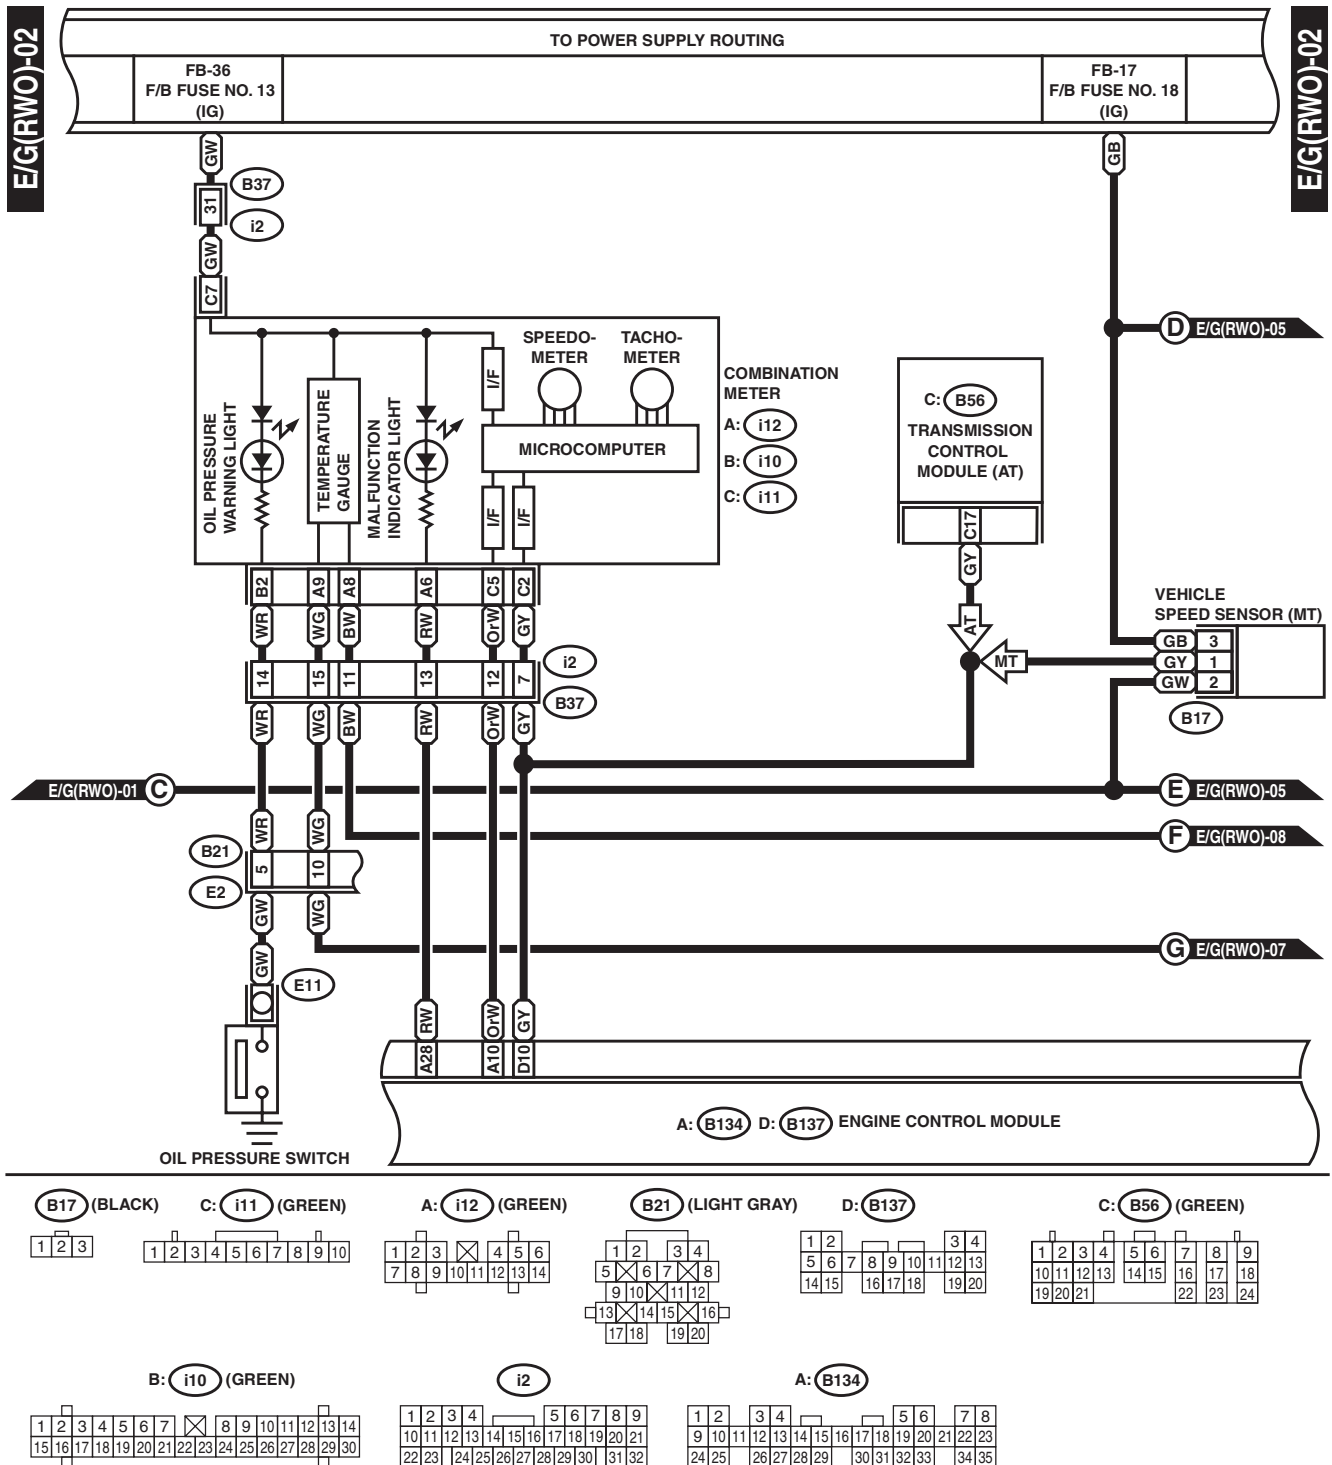

WI-02346

Engine Electrical System


WIRING SYSTEM

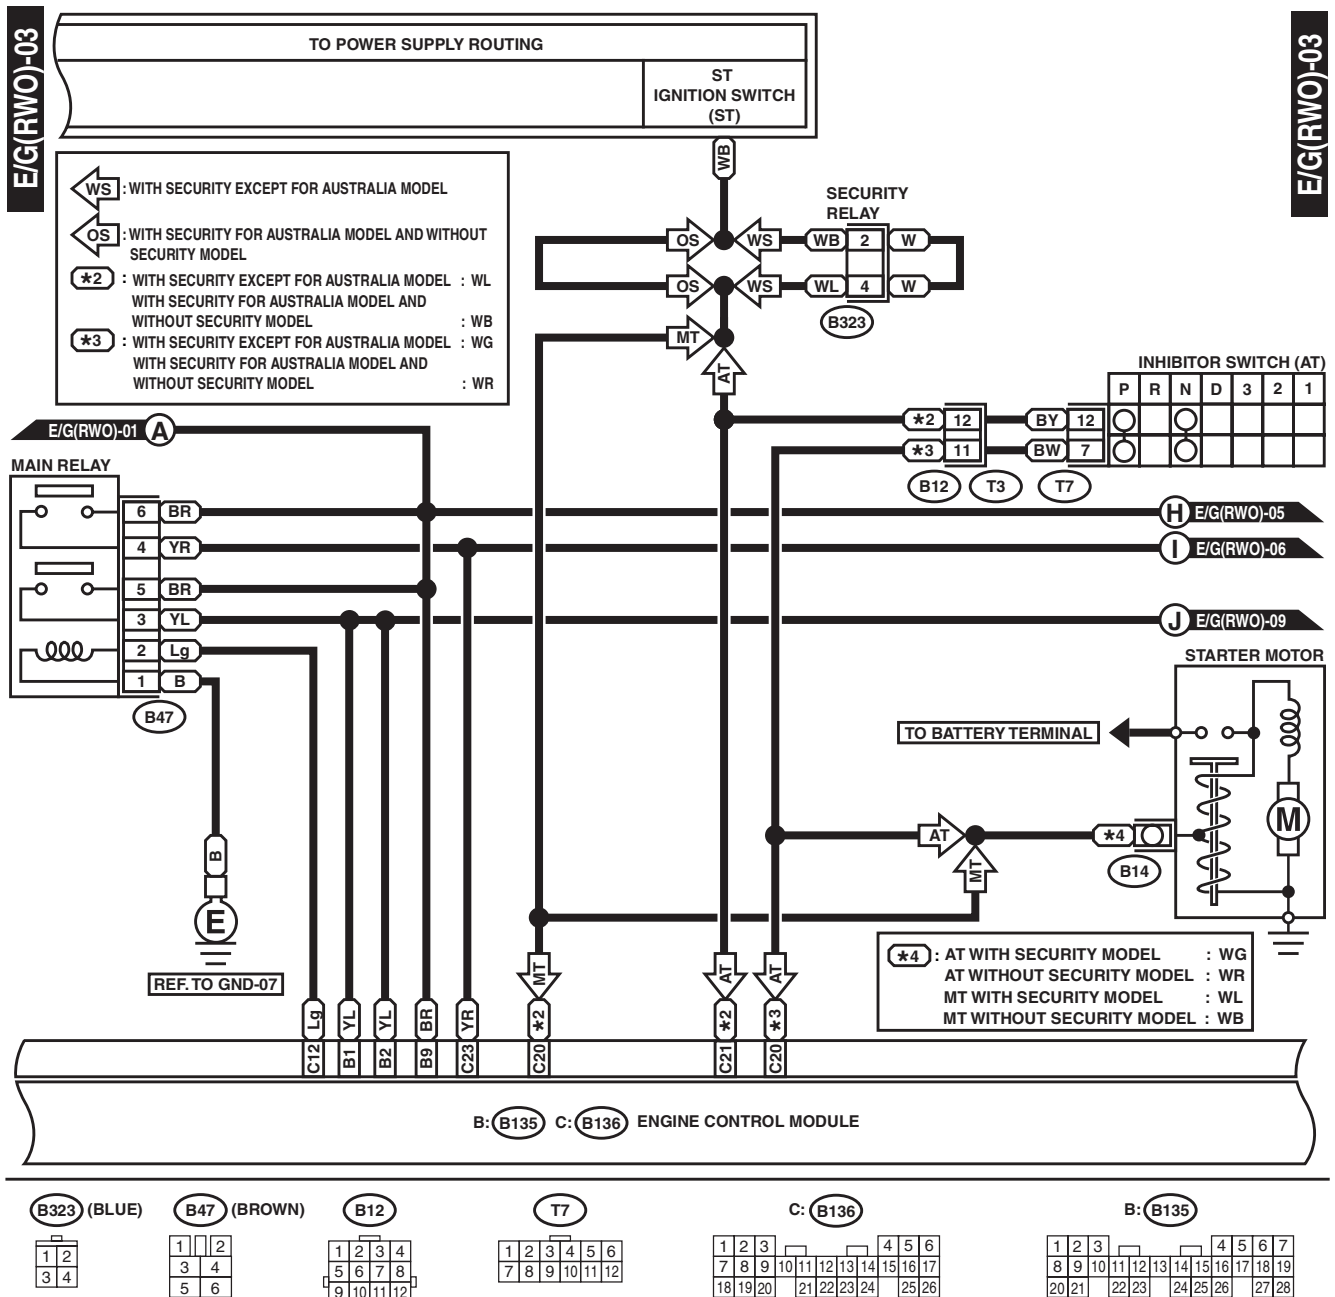

WI-04552

E/G(RWO)-04


E/G(RWO)-04

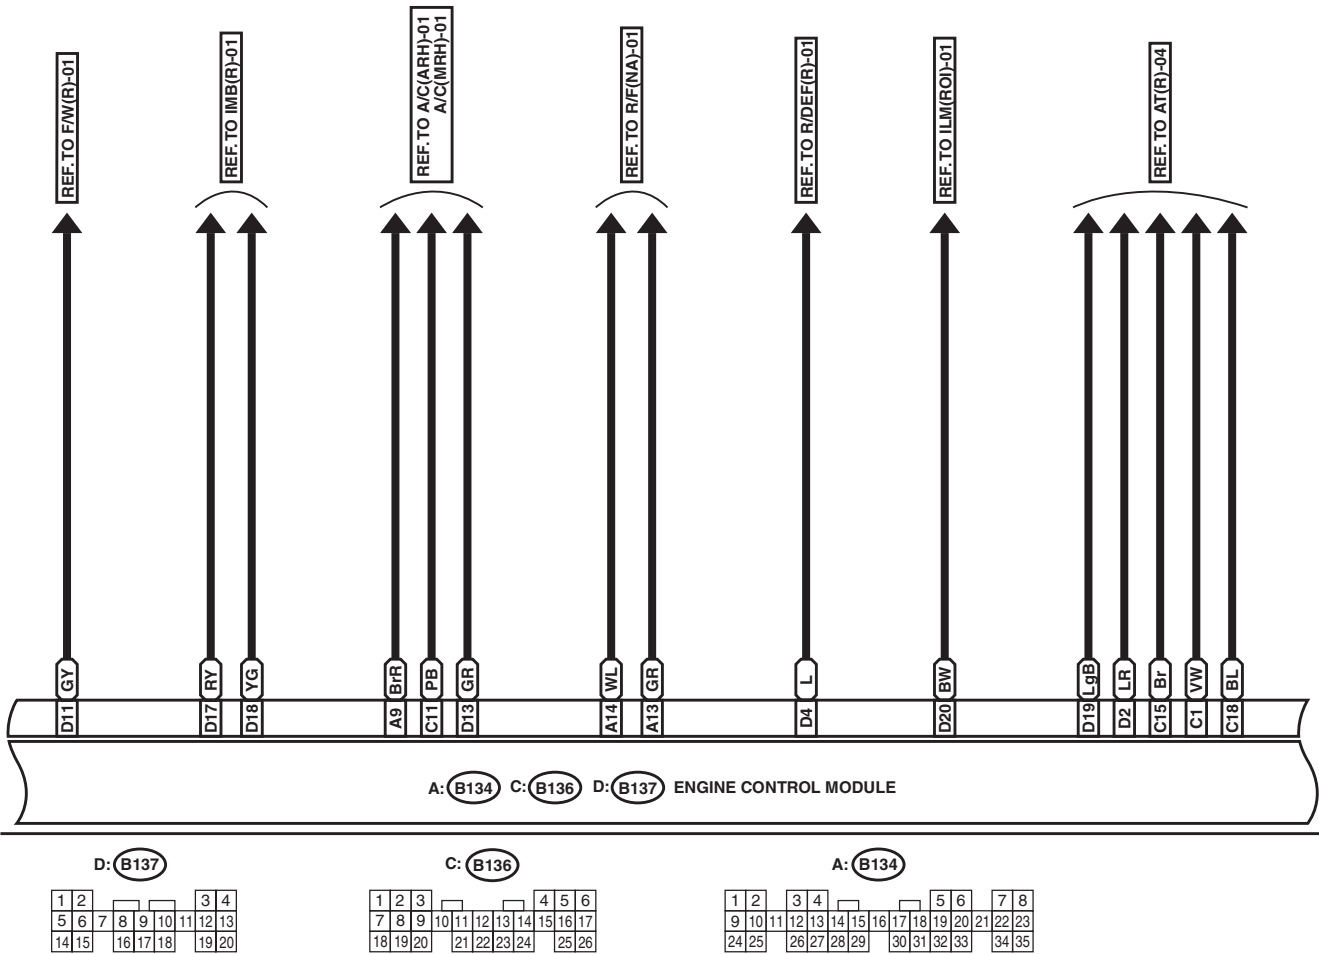

WI-04553

Engine Electrical System


WIRING SYSTEM

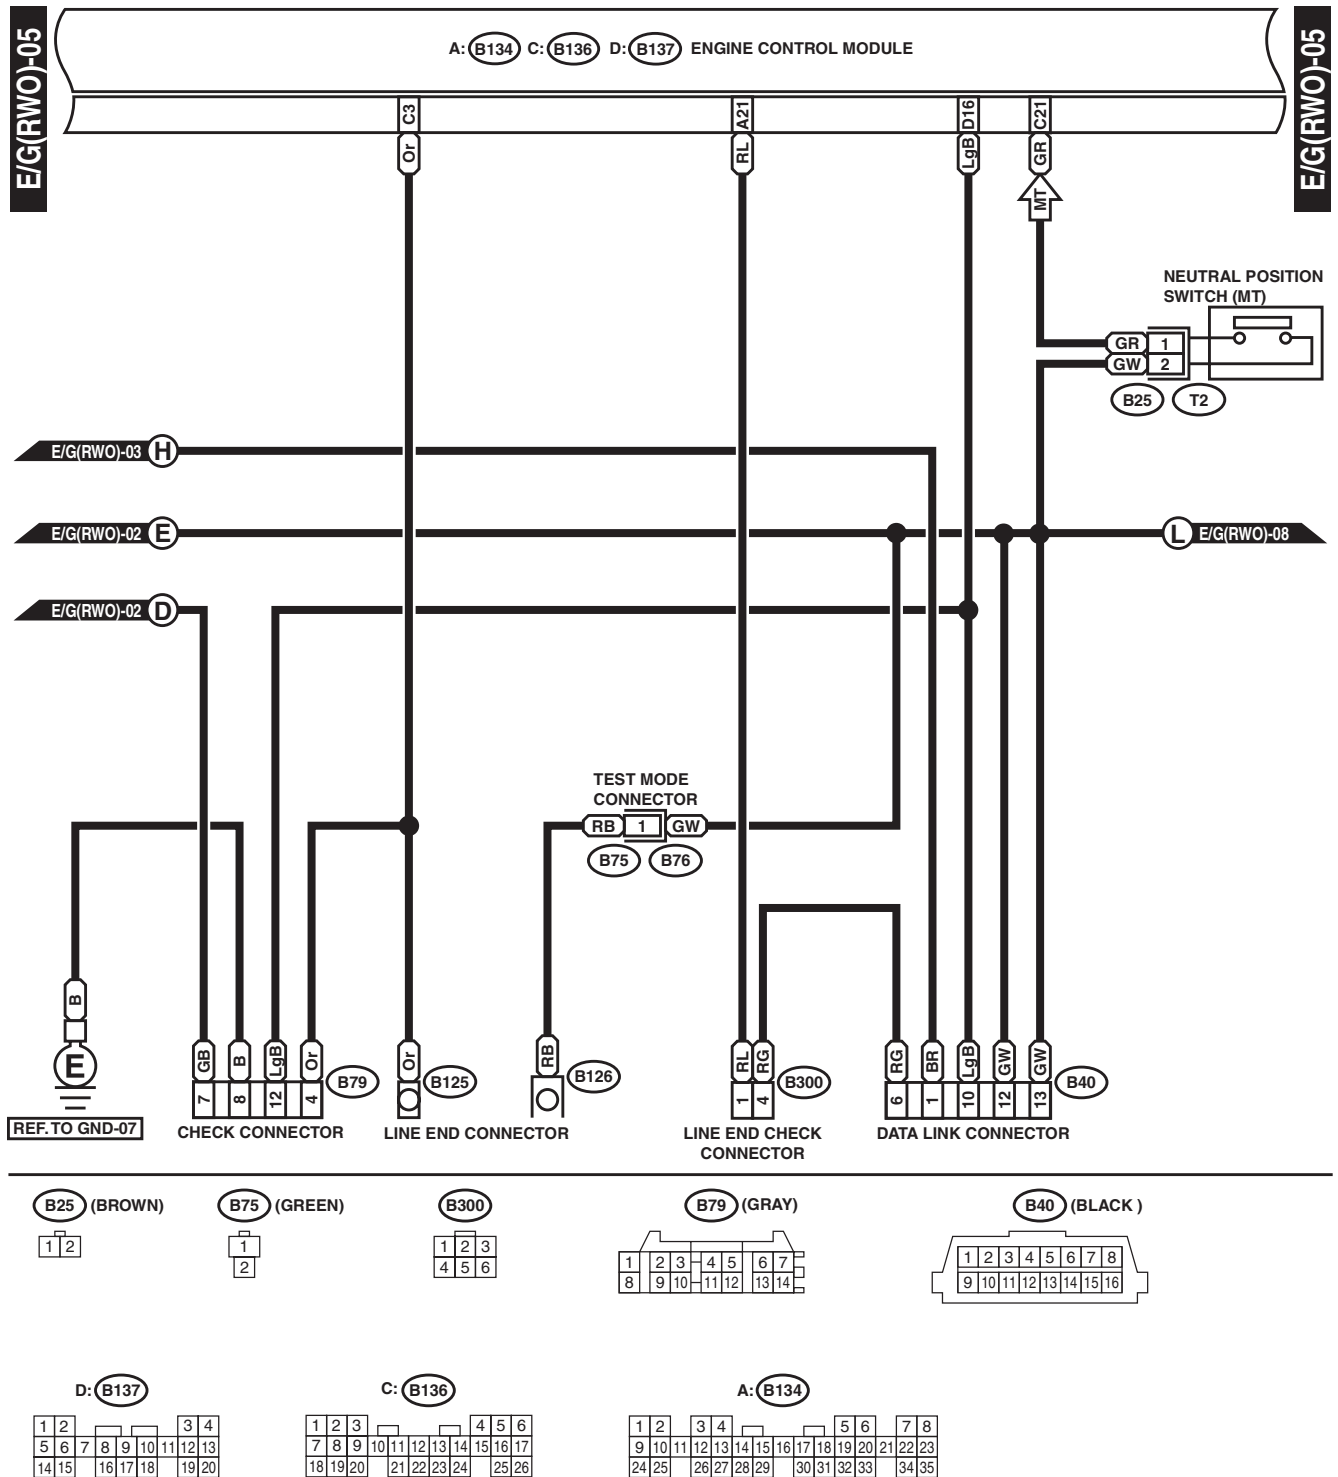

WI-02349

Engine Electrical System


WIRING SYSTEM

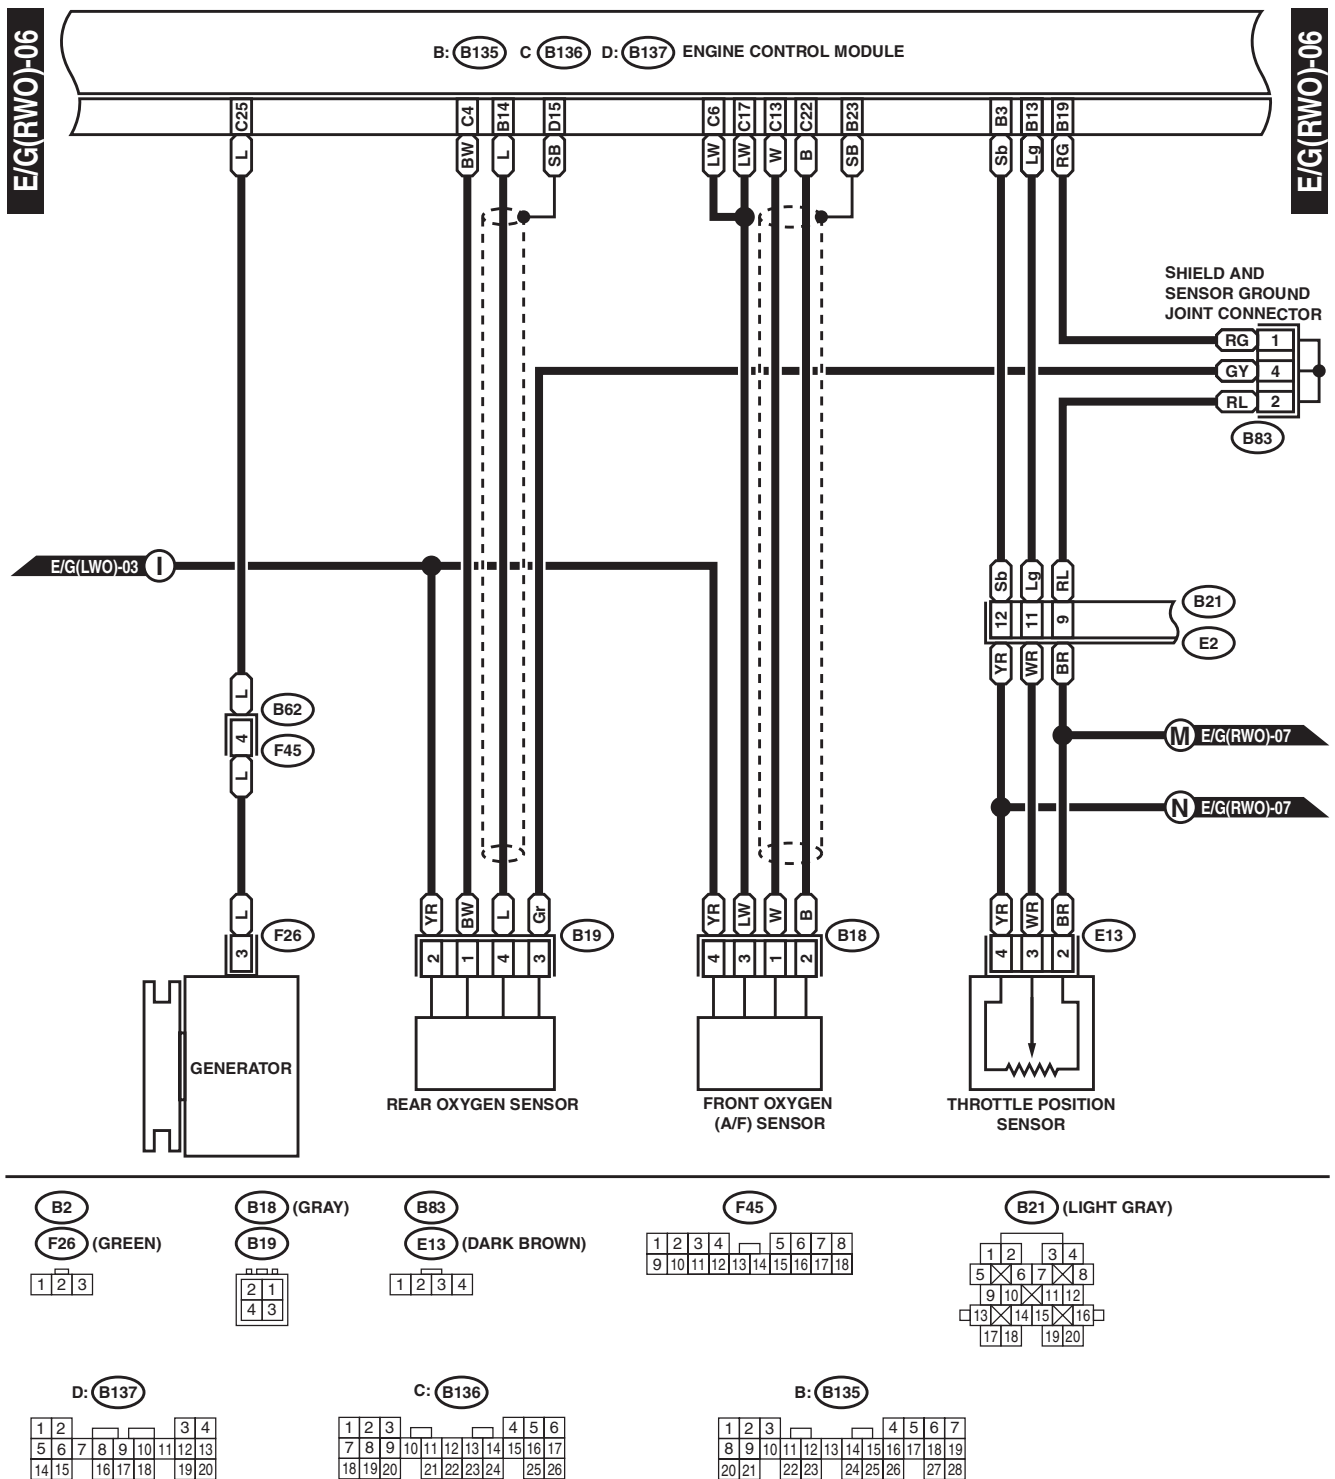

WI-04554

Engine Electrical System


WIRING SYSTEM

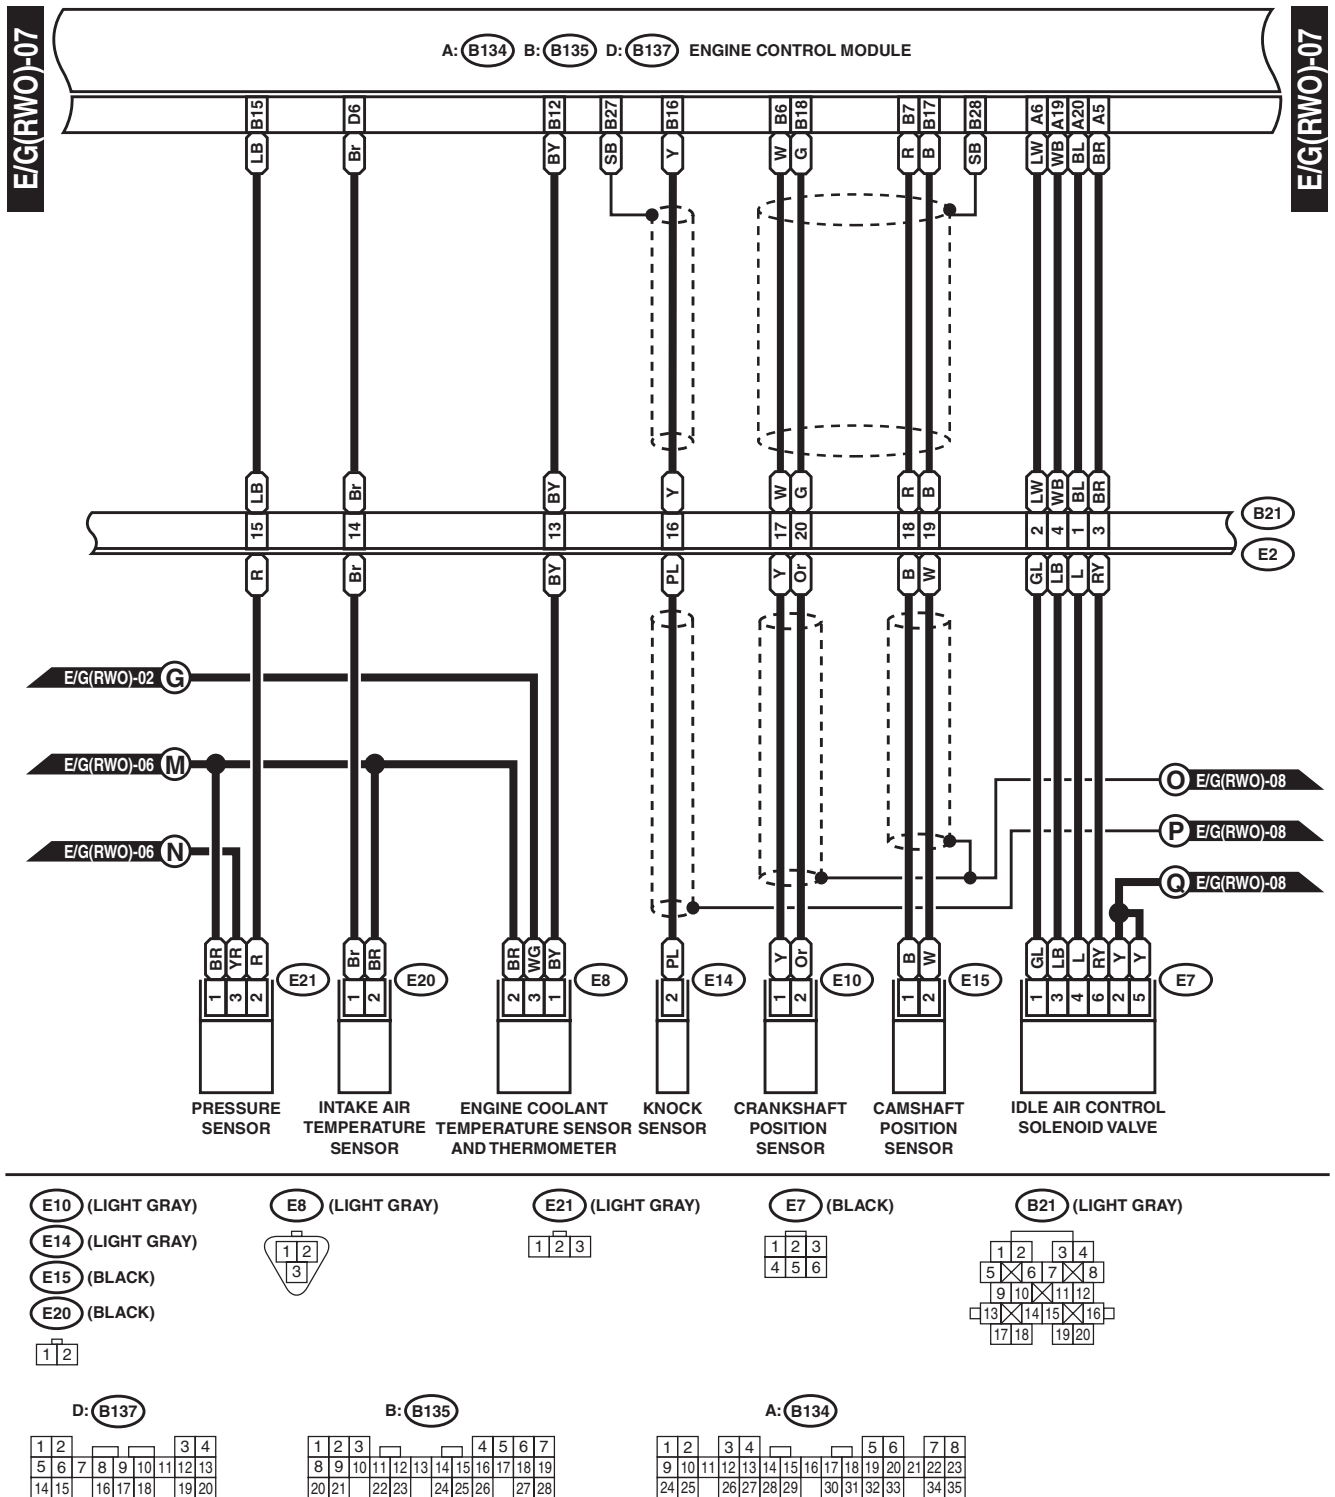

WI-02351

Engine Electrical System


WIRING SYSTEM

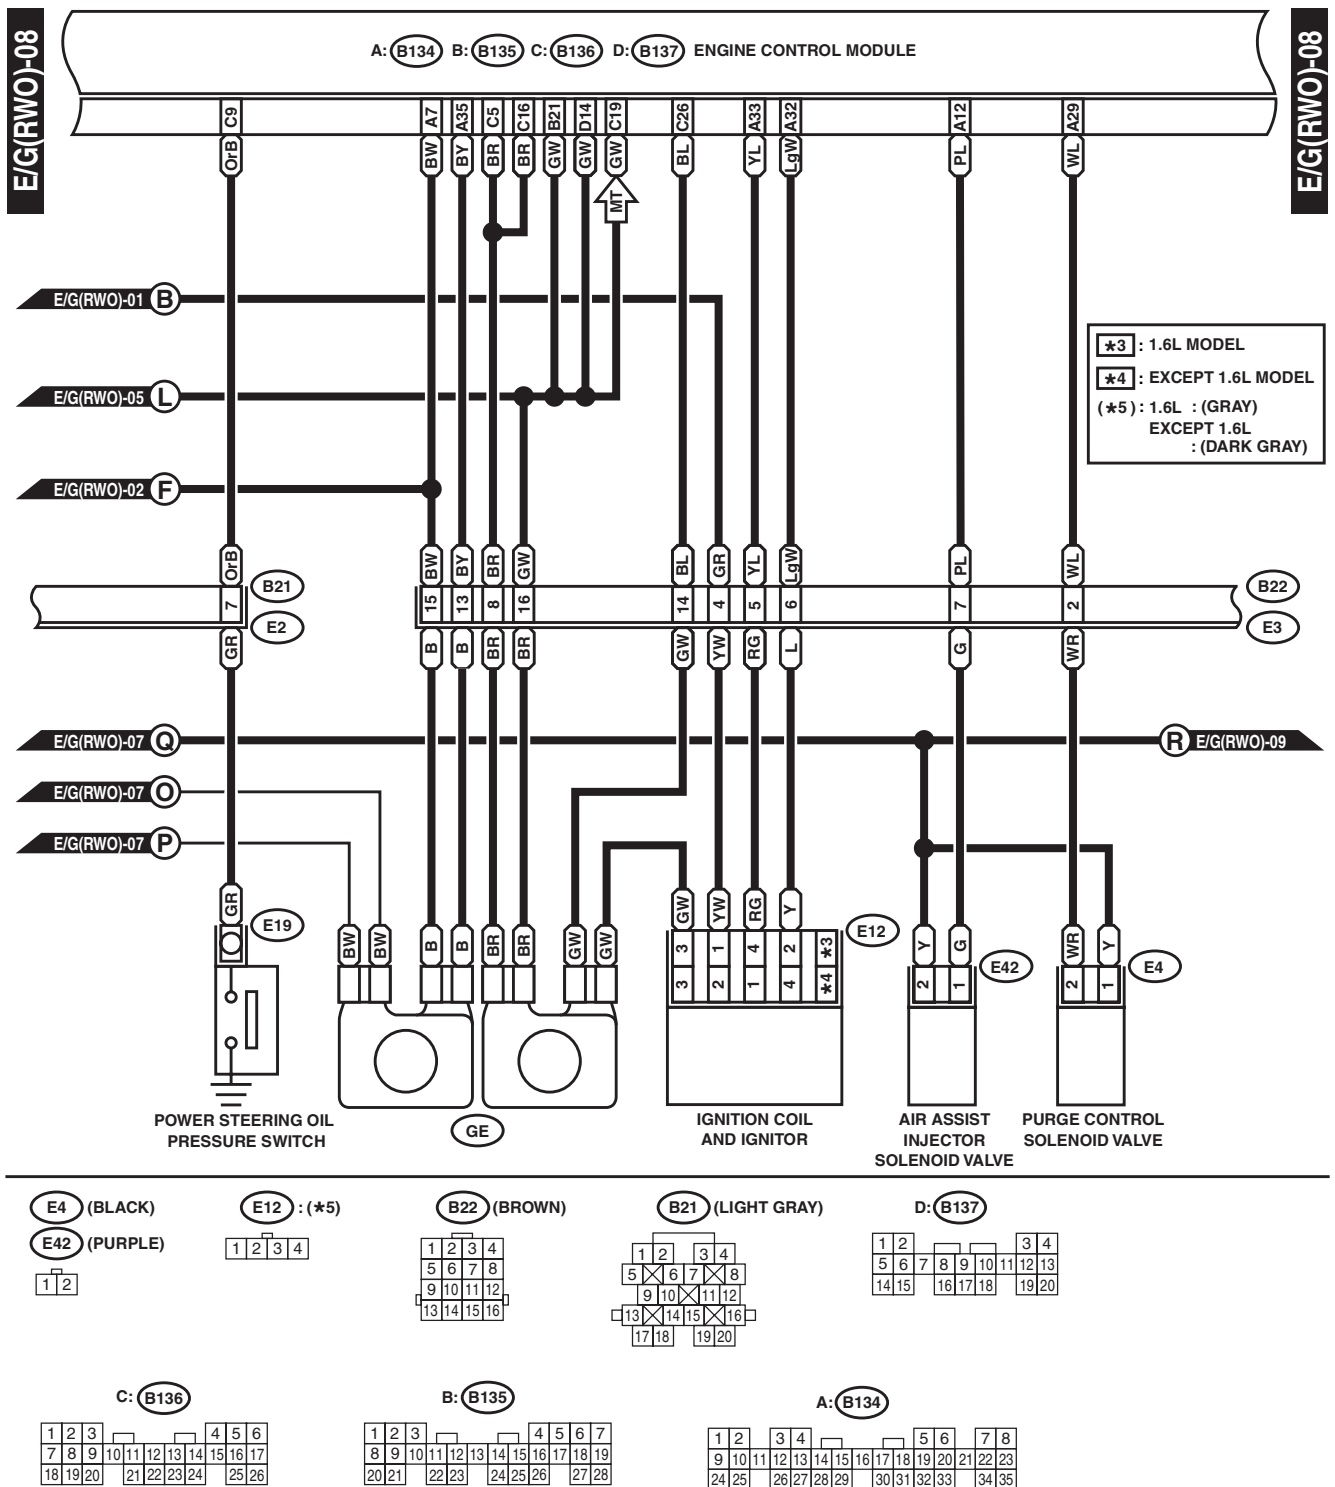

WI-04555

Engine Electrical System

WIRING SYSTEM

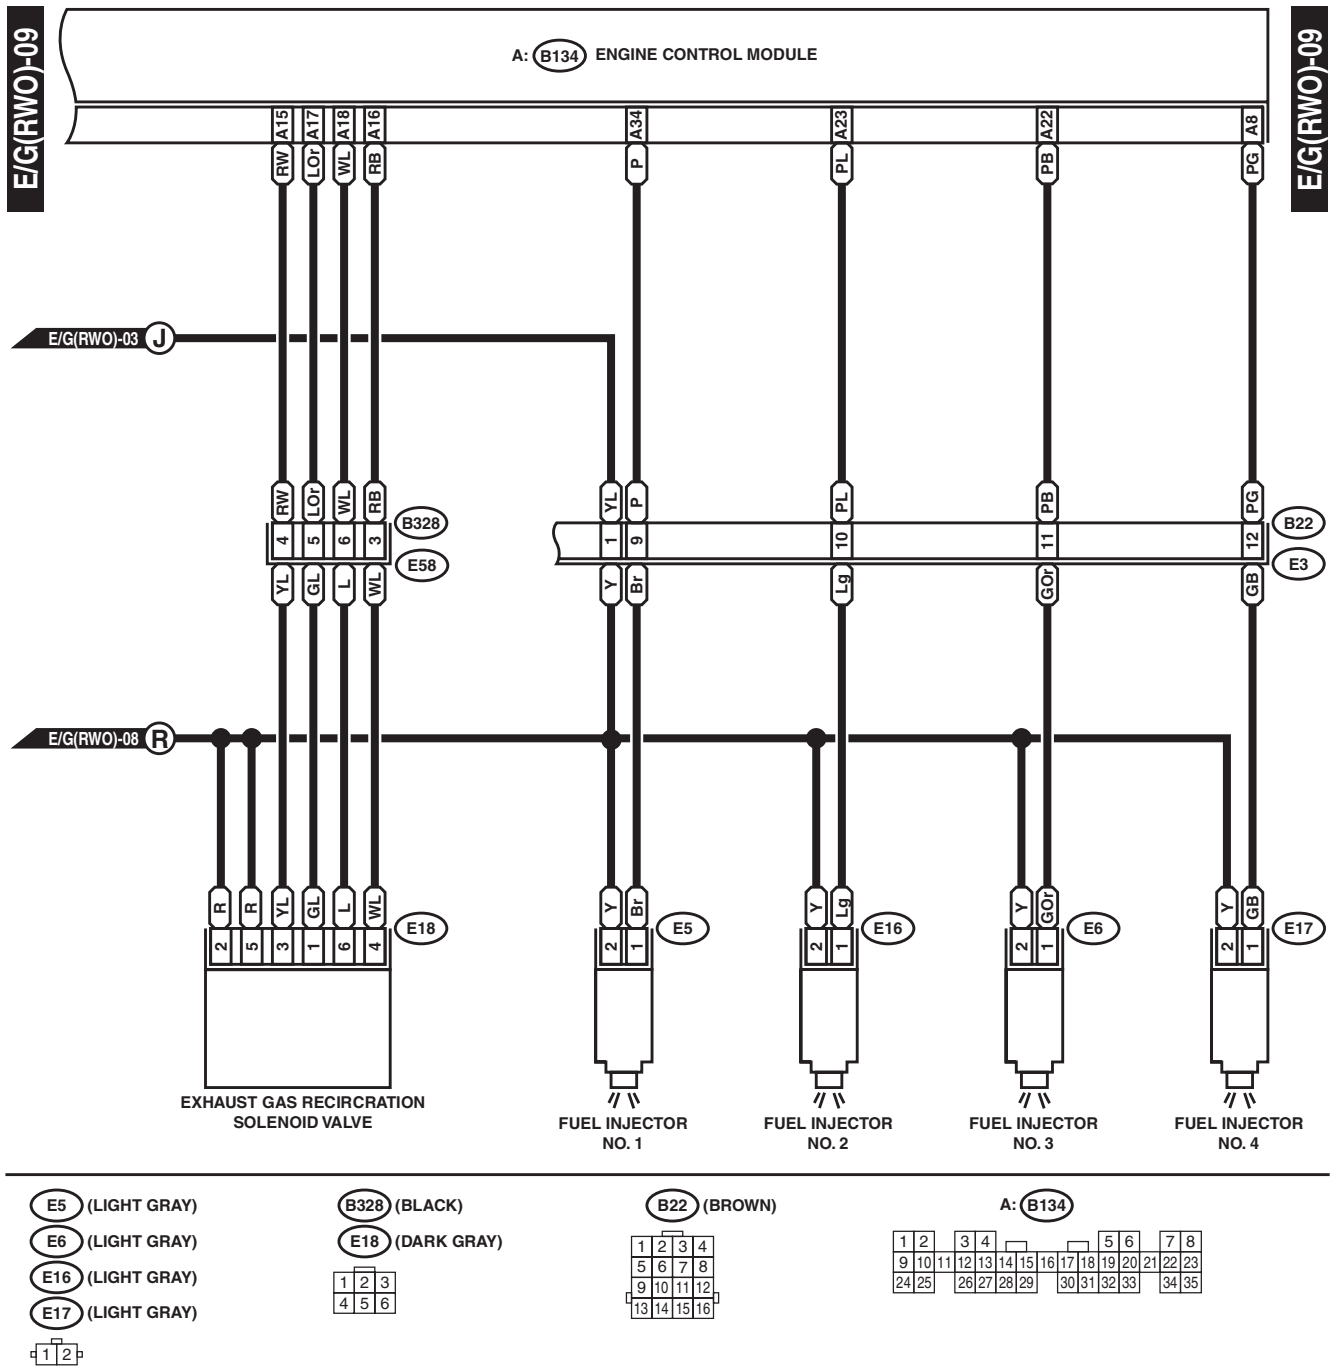


WI-02353

Engine Electrical System

WIRING SYSTEM


6. RHD DOHC TURBO MODEL

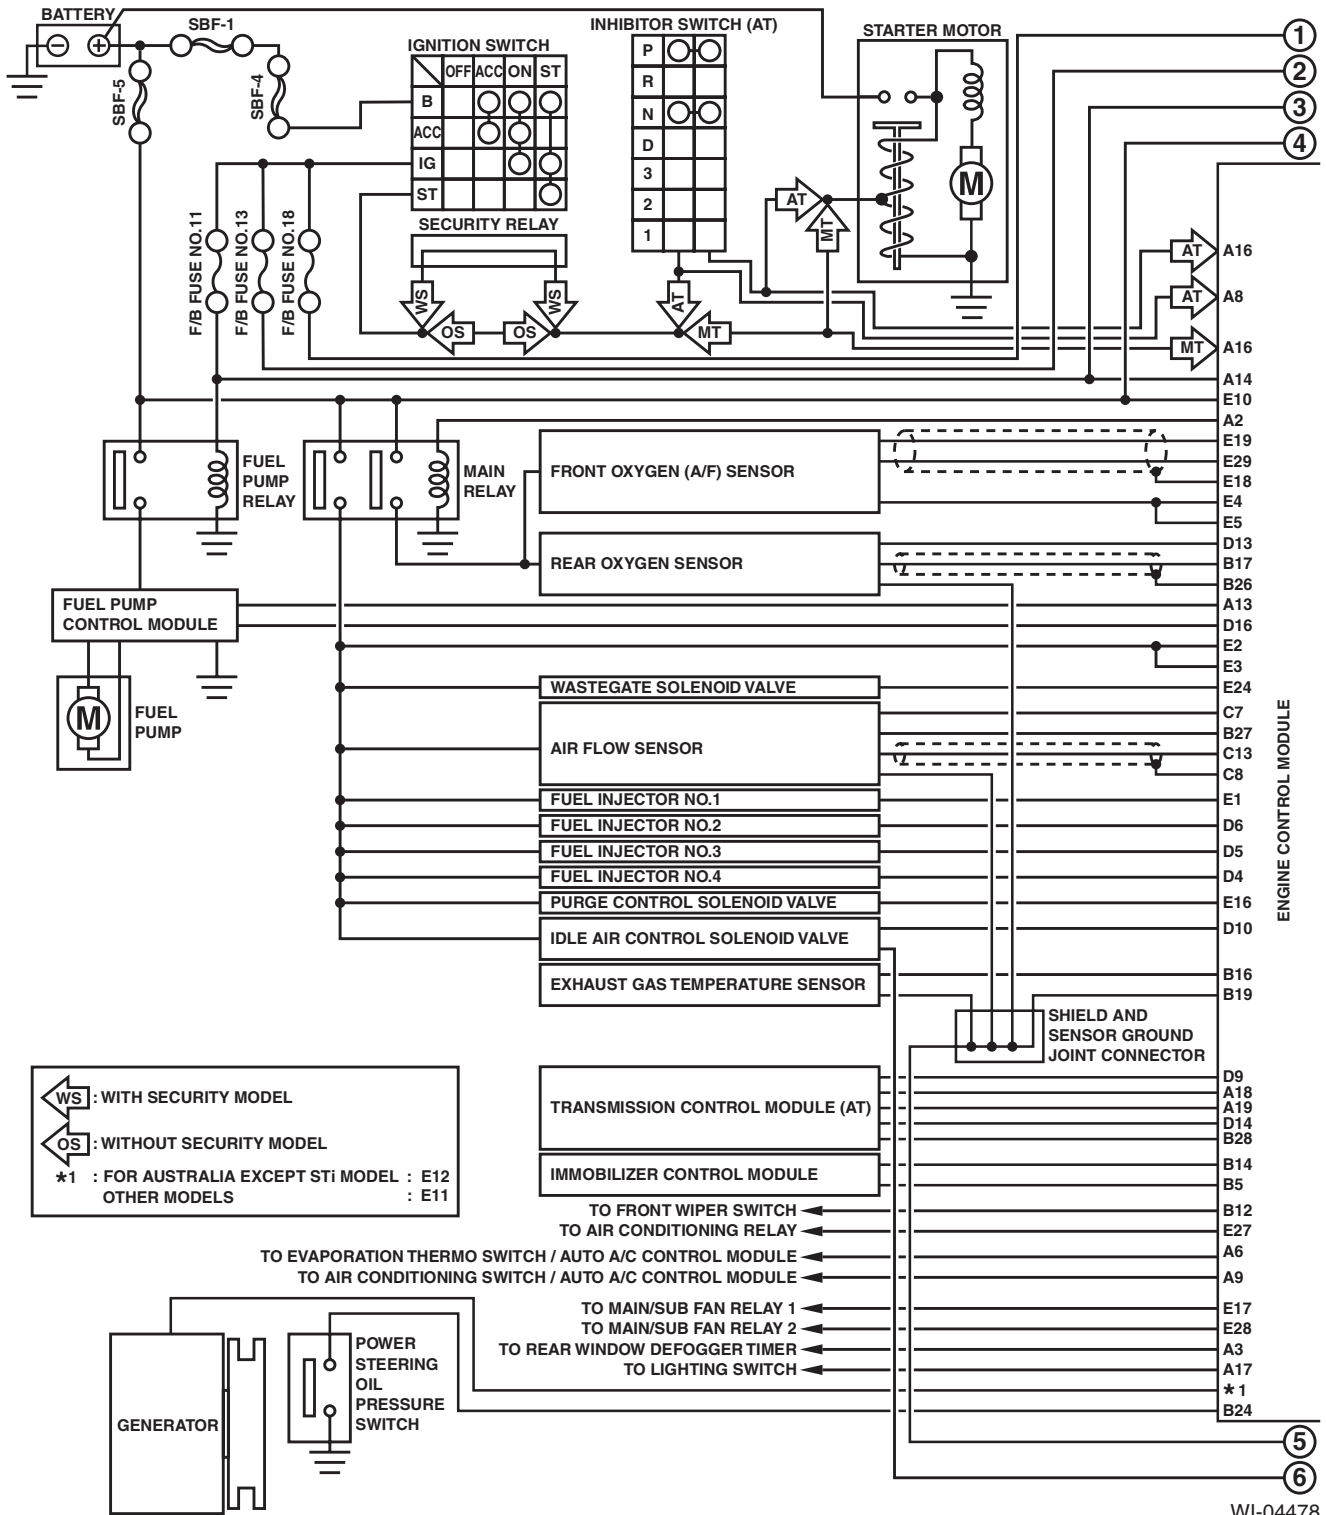

WI-04478

Engine Electrical System


WIRING SYSTEM

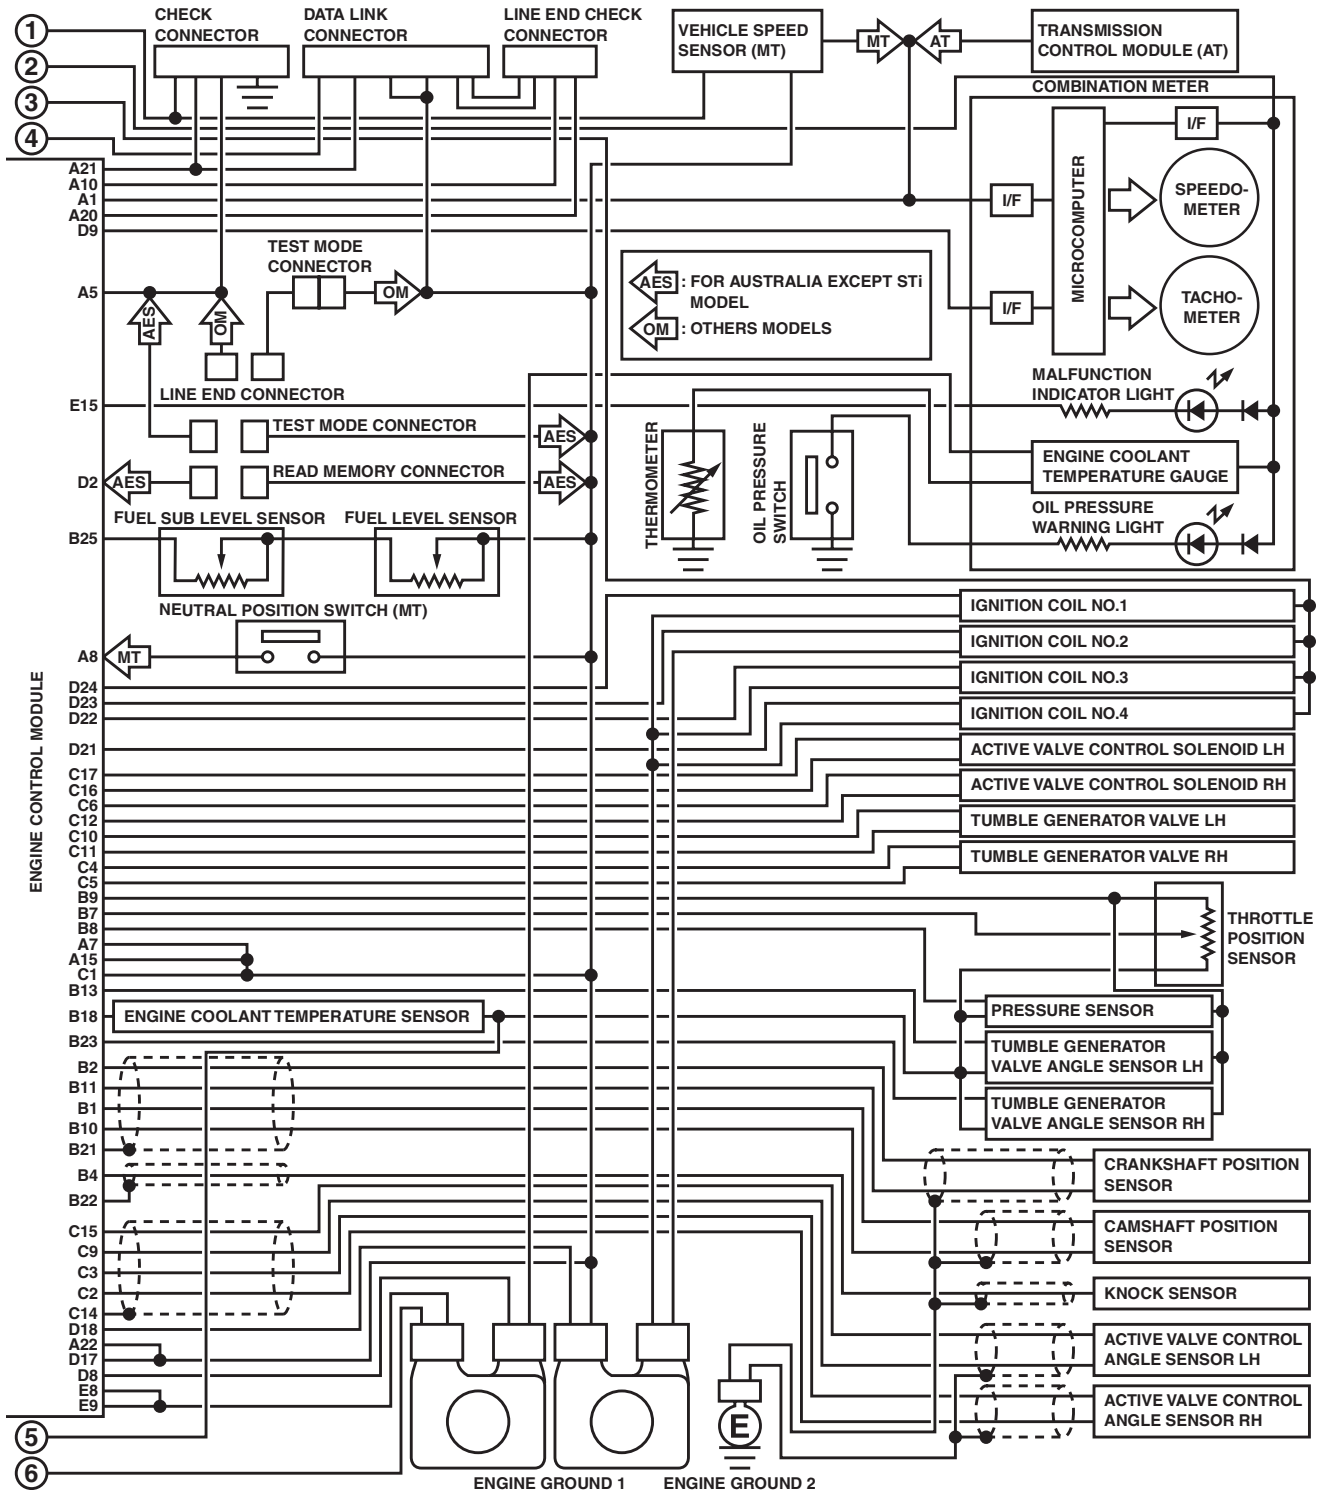

WI-02570

Engine Electrical System


WIRING SYSTEM

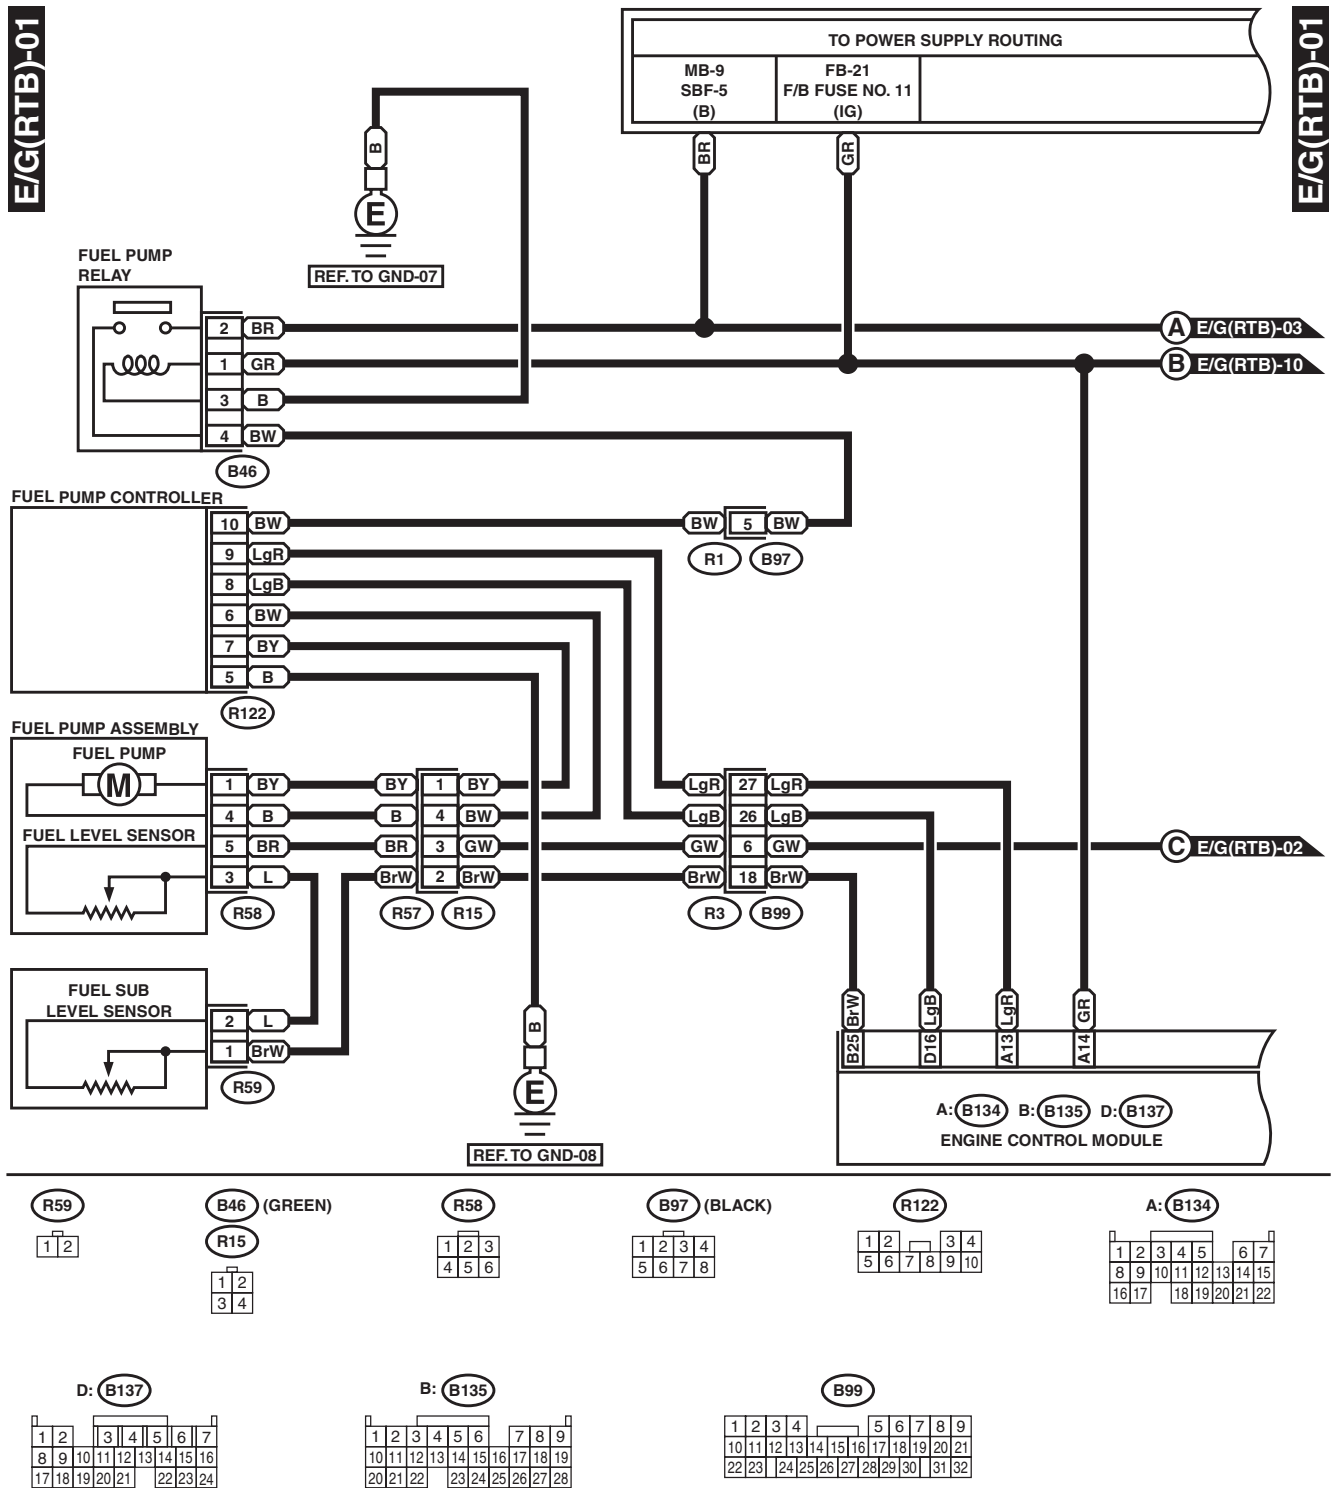

WI-04556

Engine Electrical System


WIRING SYSTEM

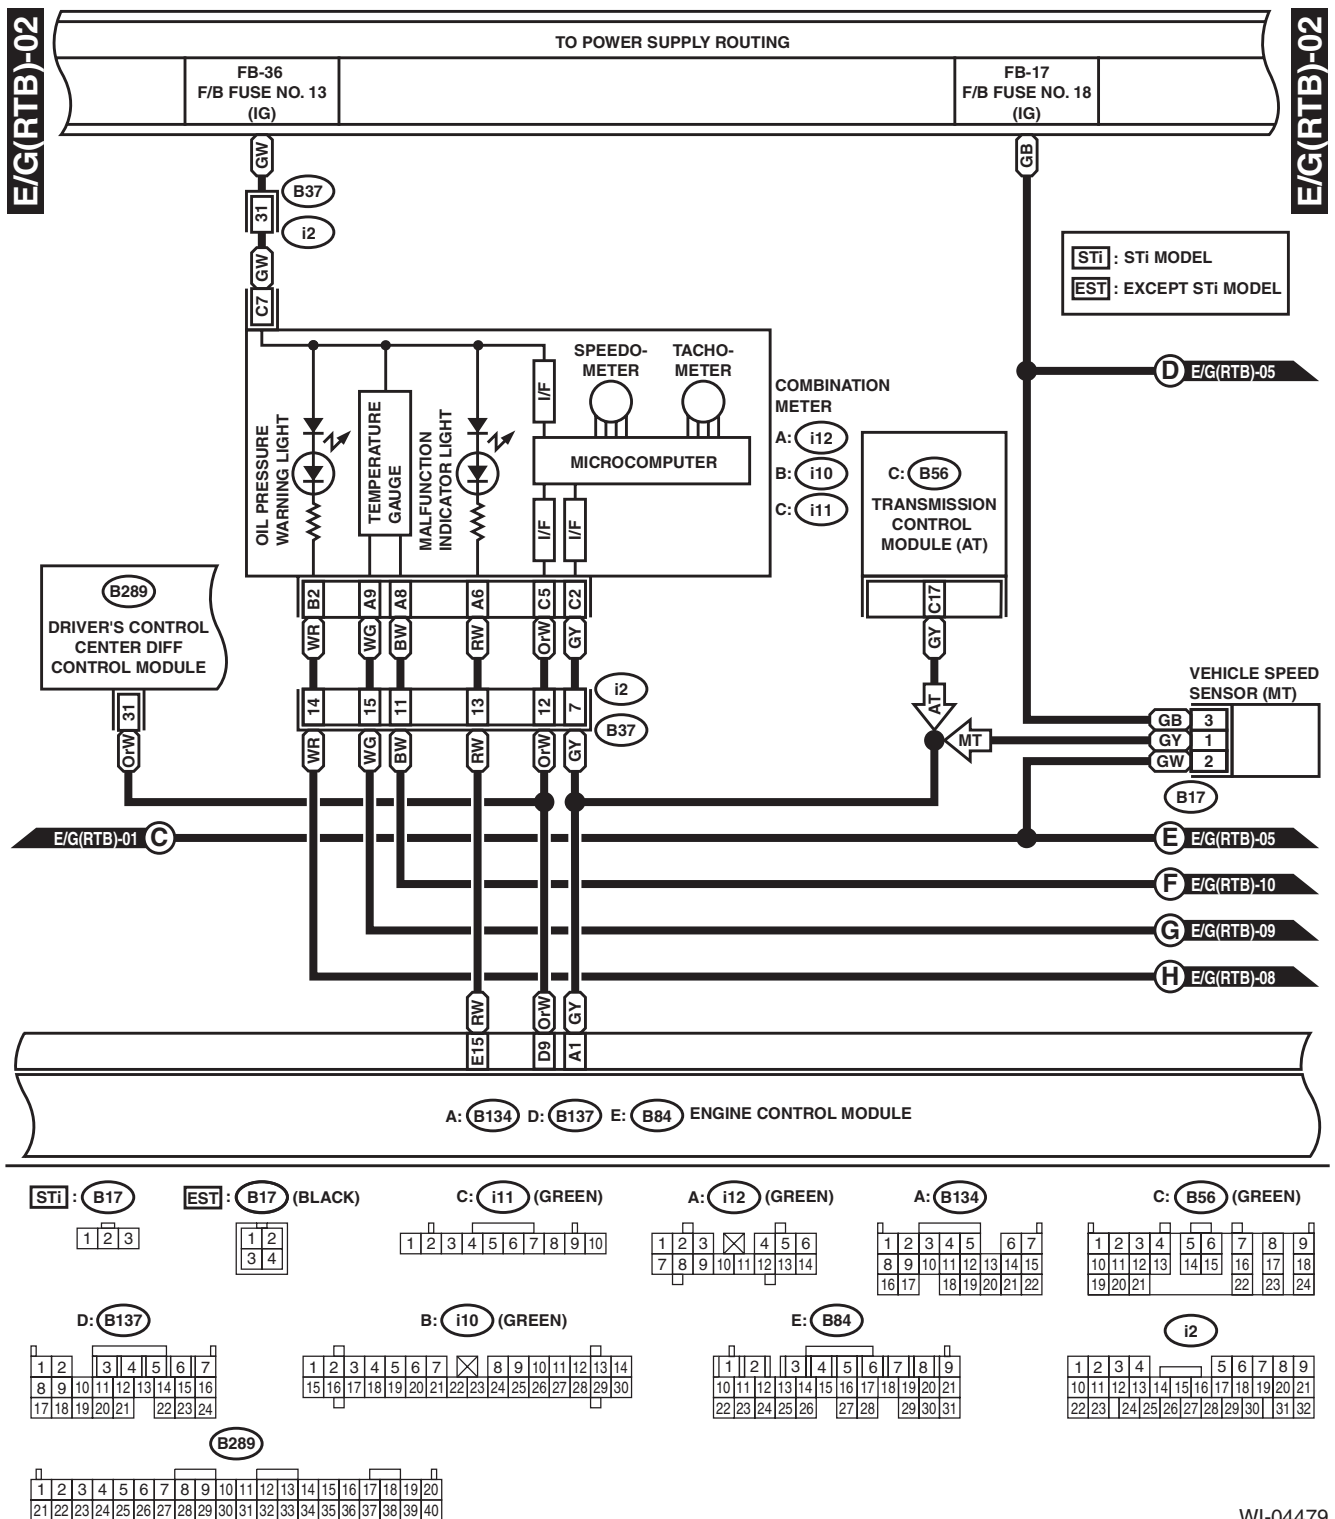

WI-04479

Engine Electrical System


WIRING SYSTEM

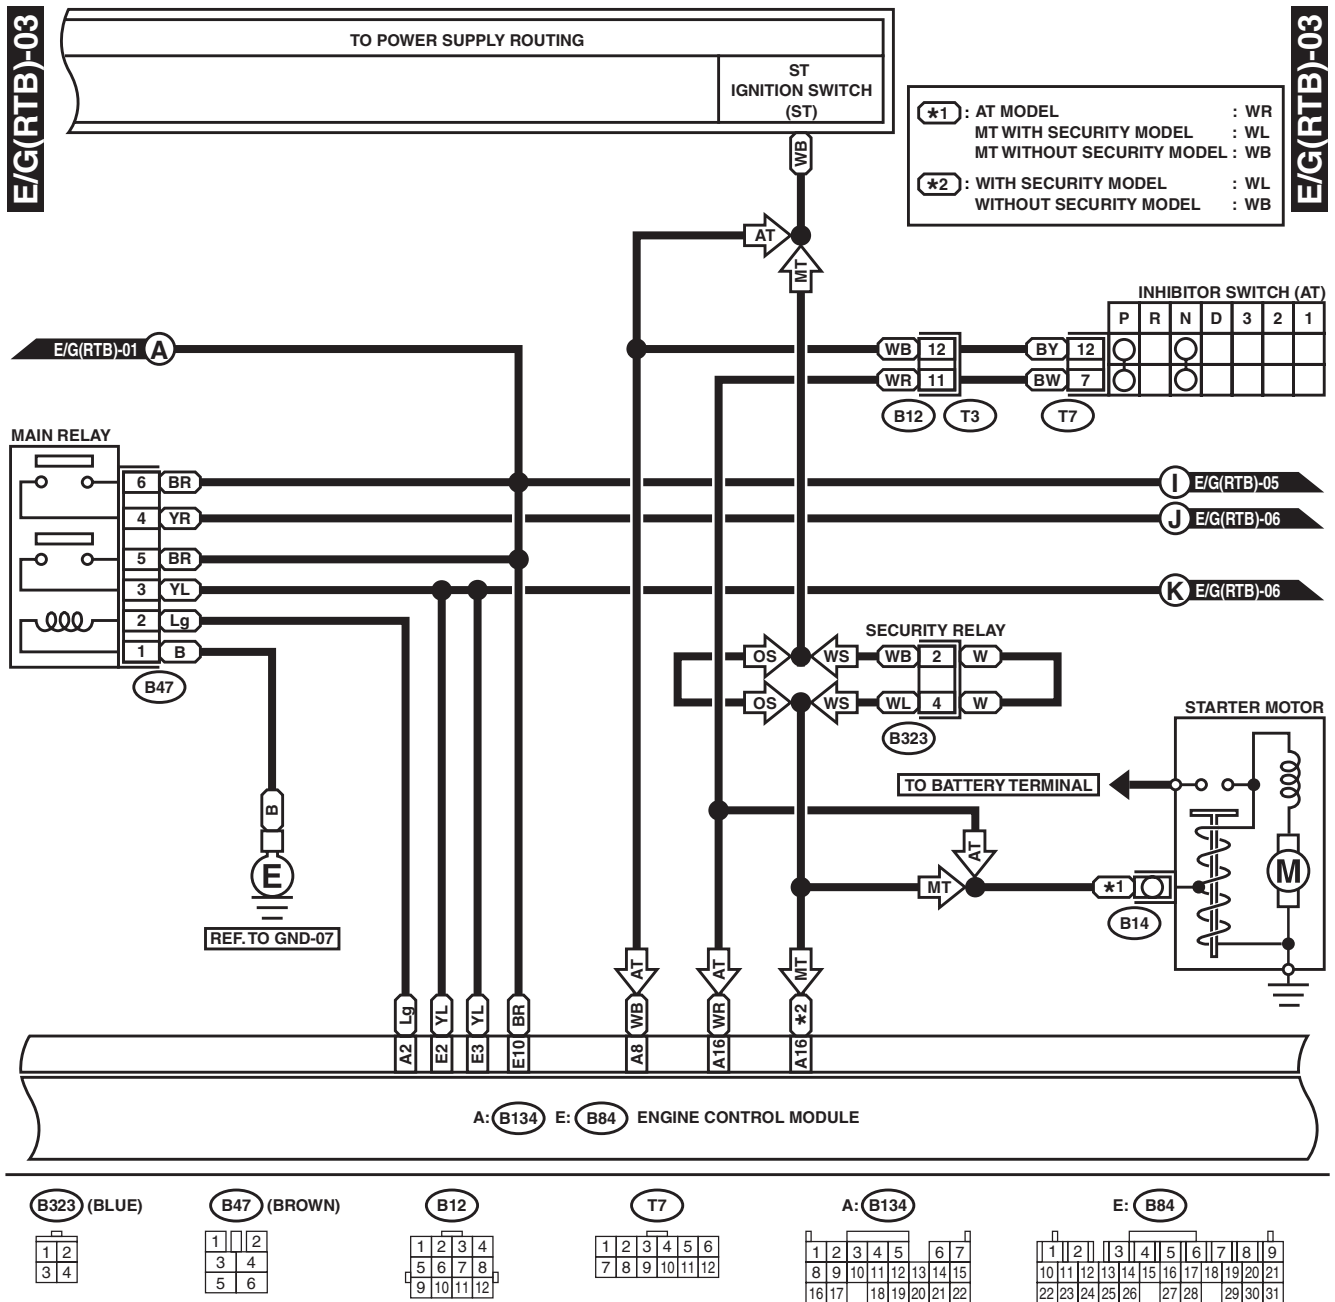


WI-02356

E/G(RTB)-04

E/G(RTB)-04

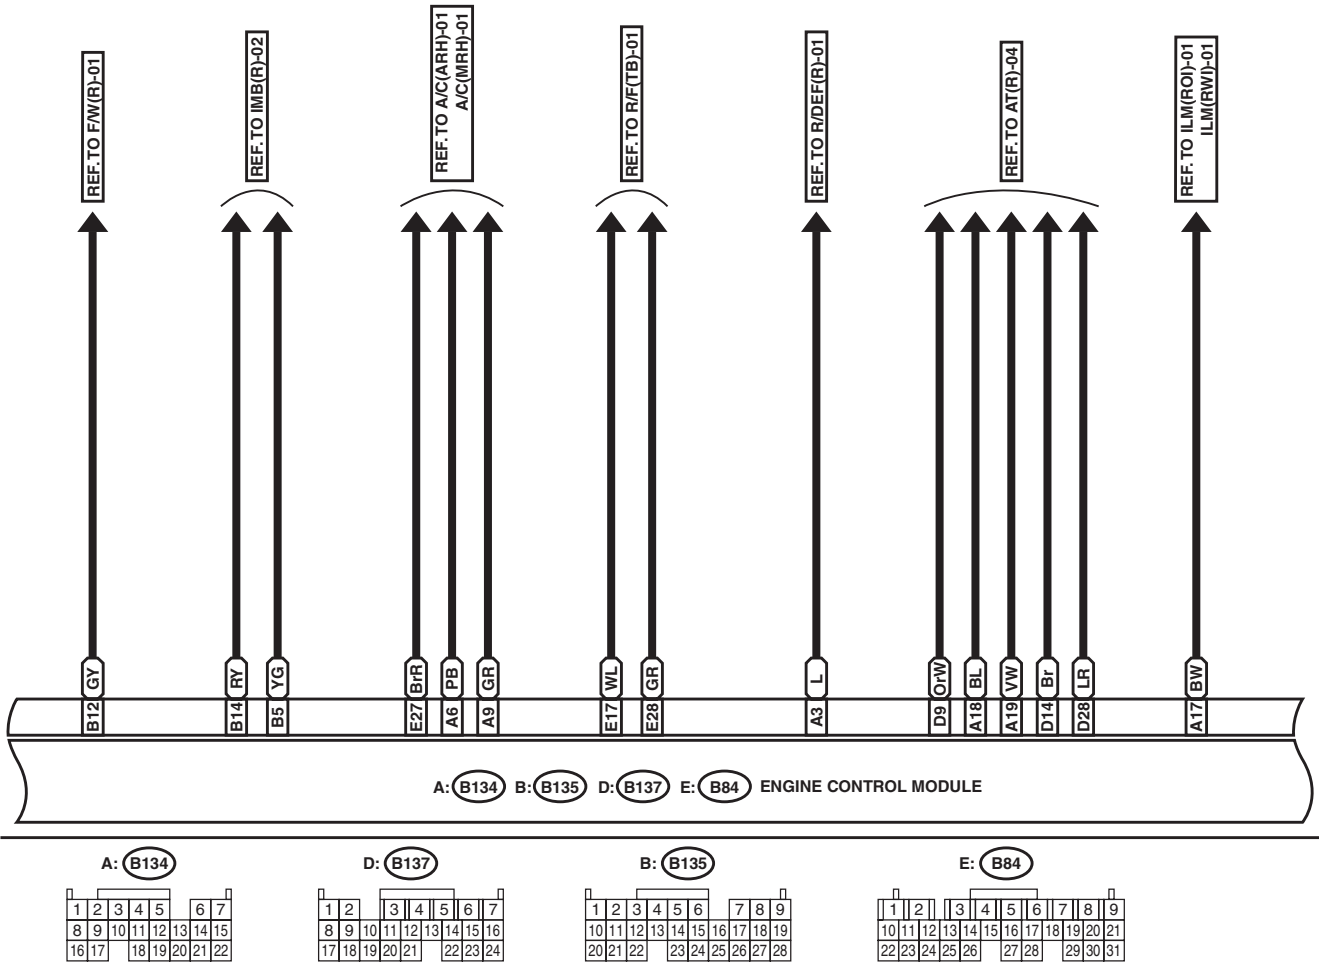


WIRING SYSTEM

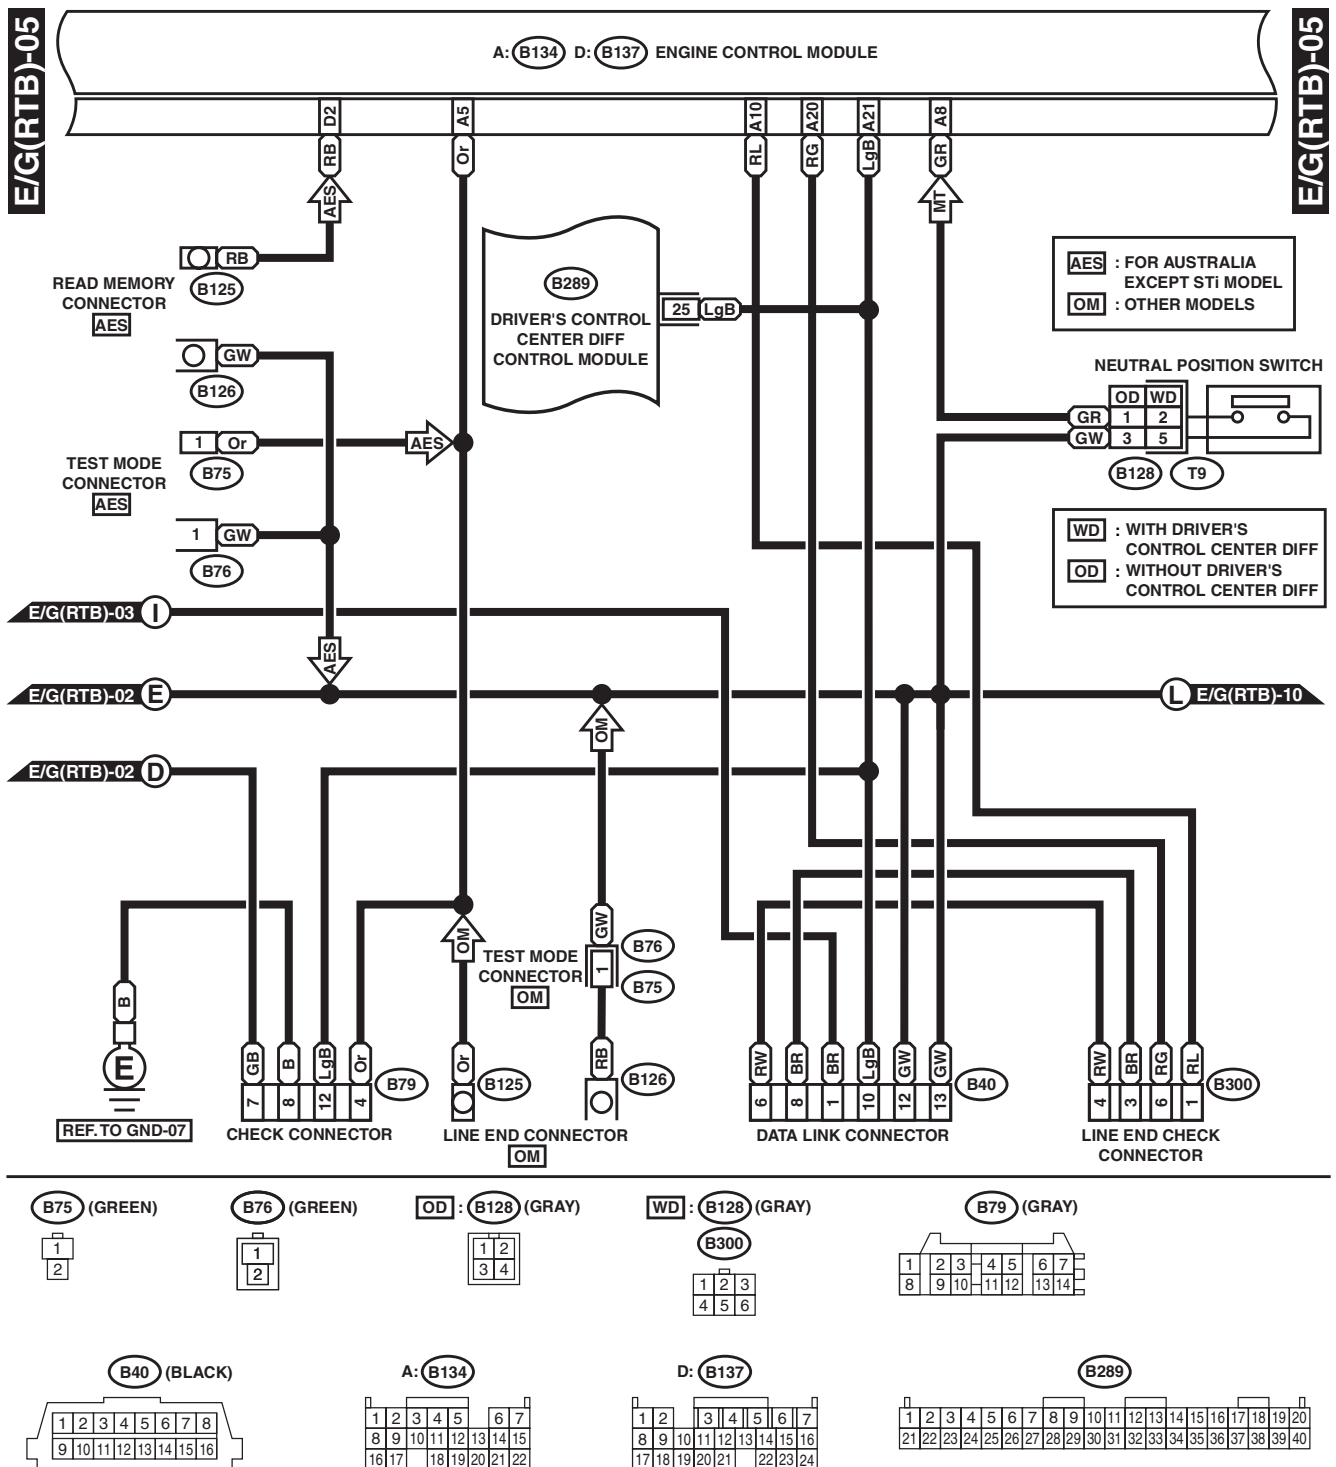

WI-04481

Engine Electrical System


WIRING SYSTEM

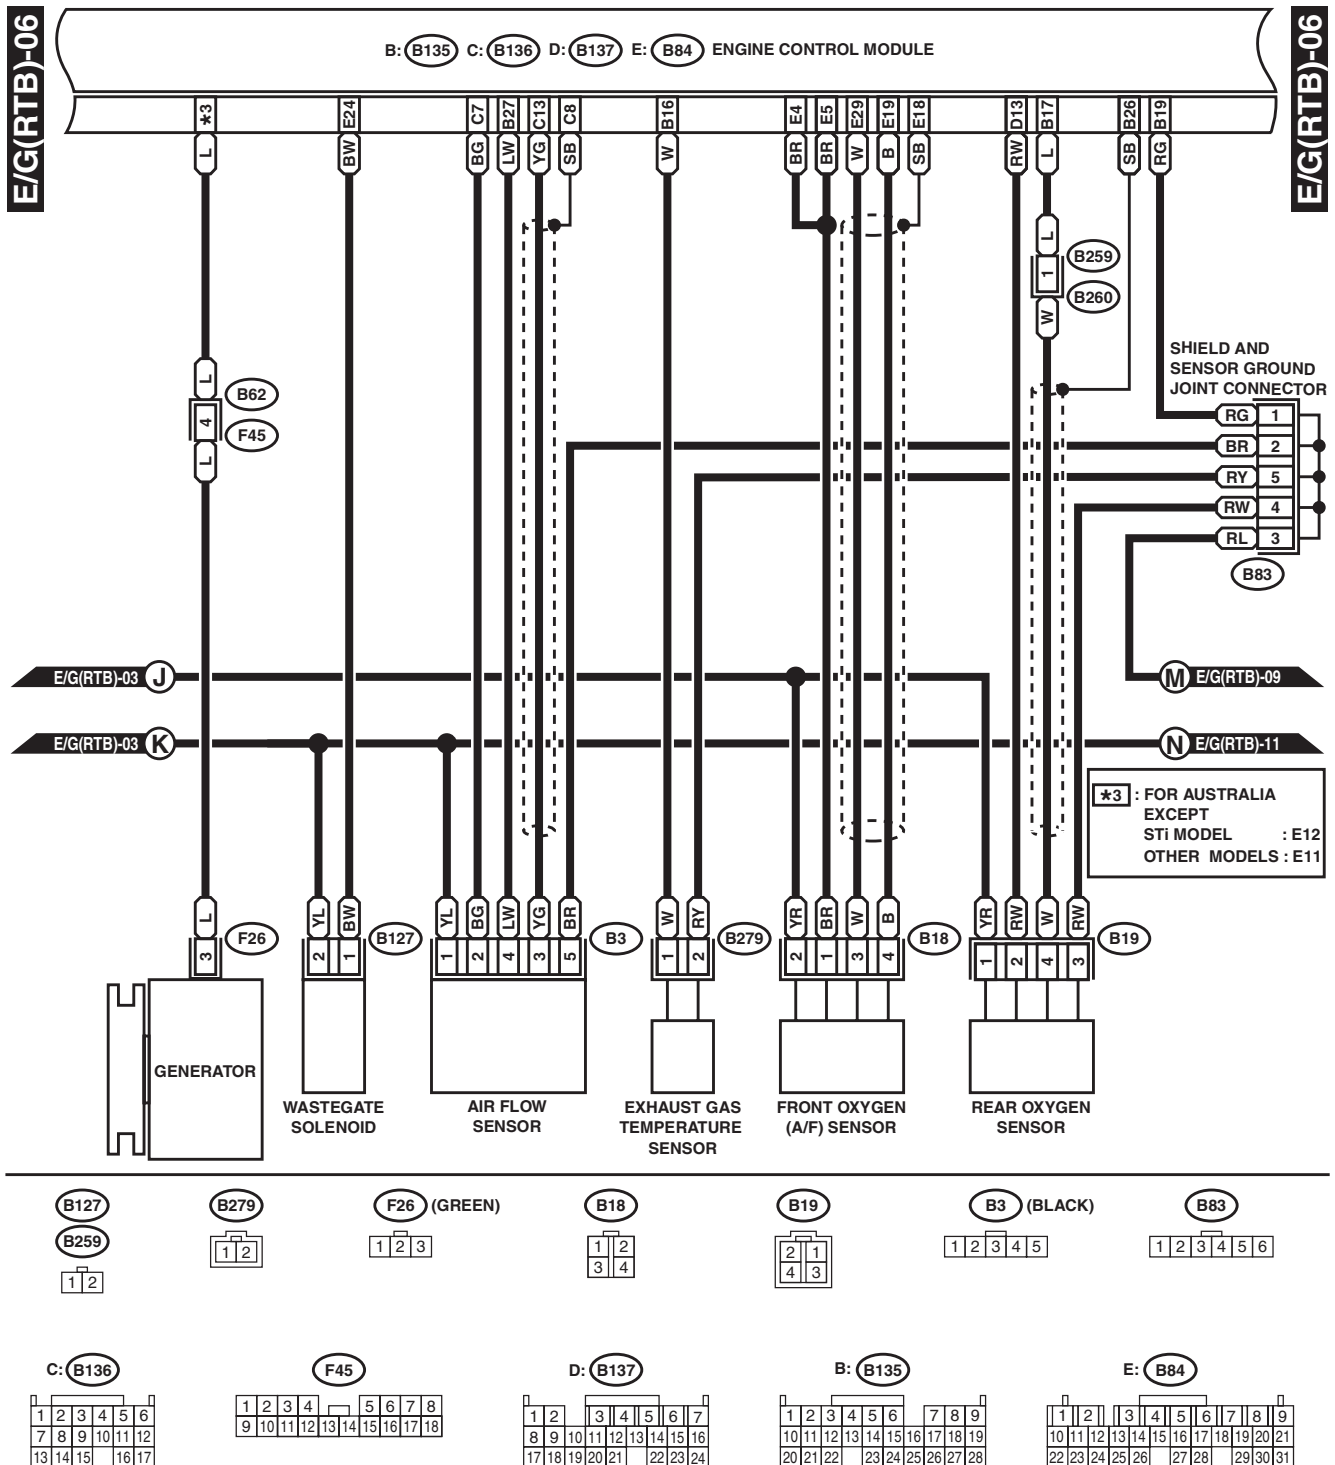

WI-04557

Engine Electrical System


WIRING SYSTEM

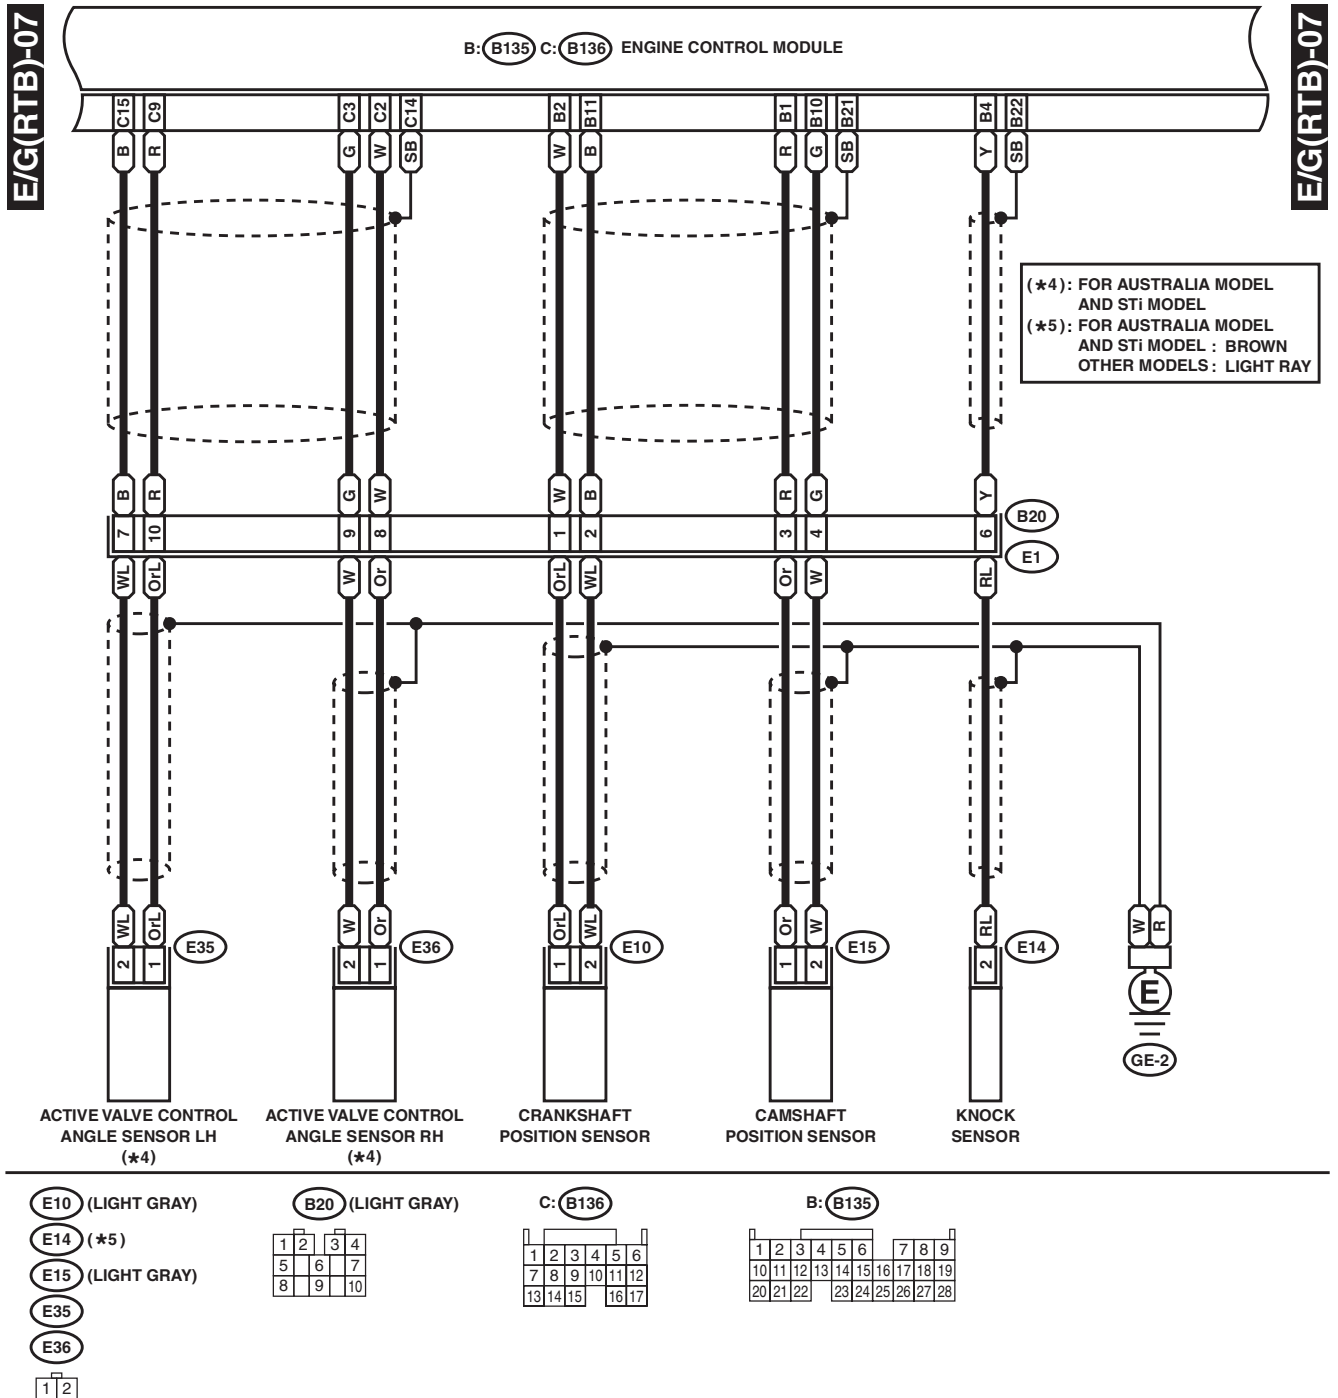

WI-02360

Engine Electrical System


WIRING SYSTEM

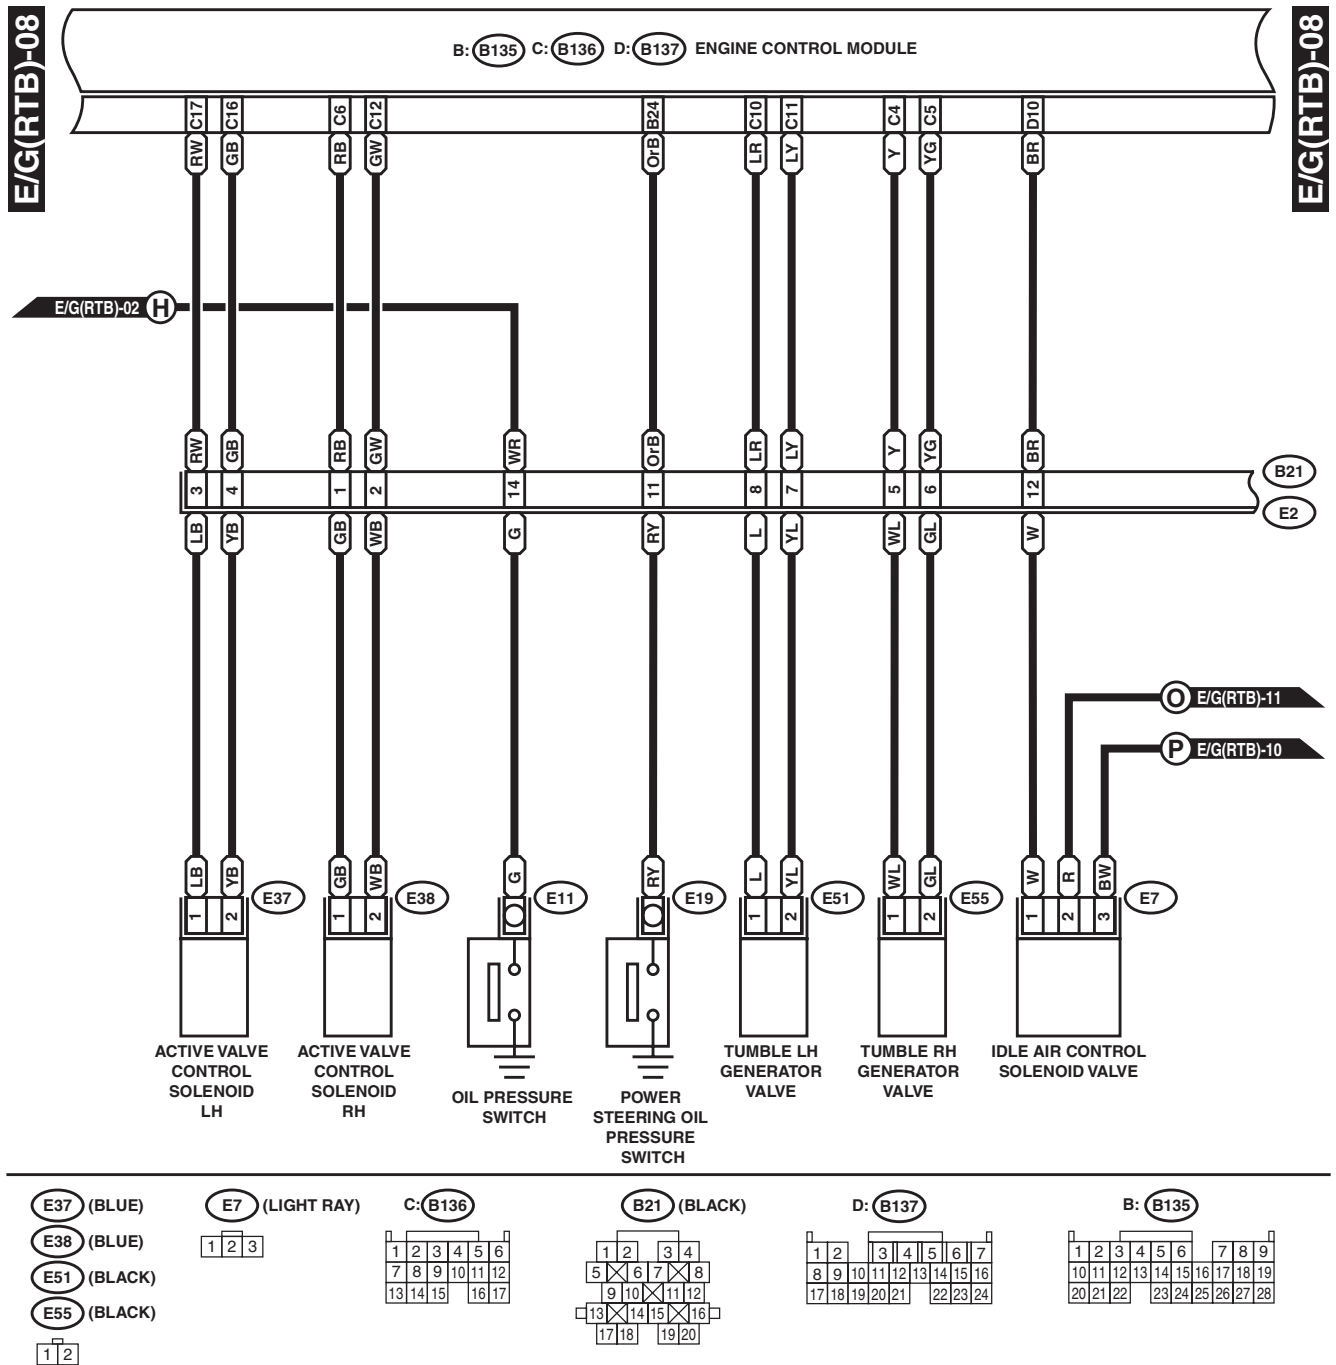

WI-02361


Engine Electrical System

WIRING SYSTEM

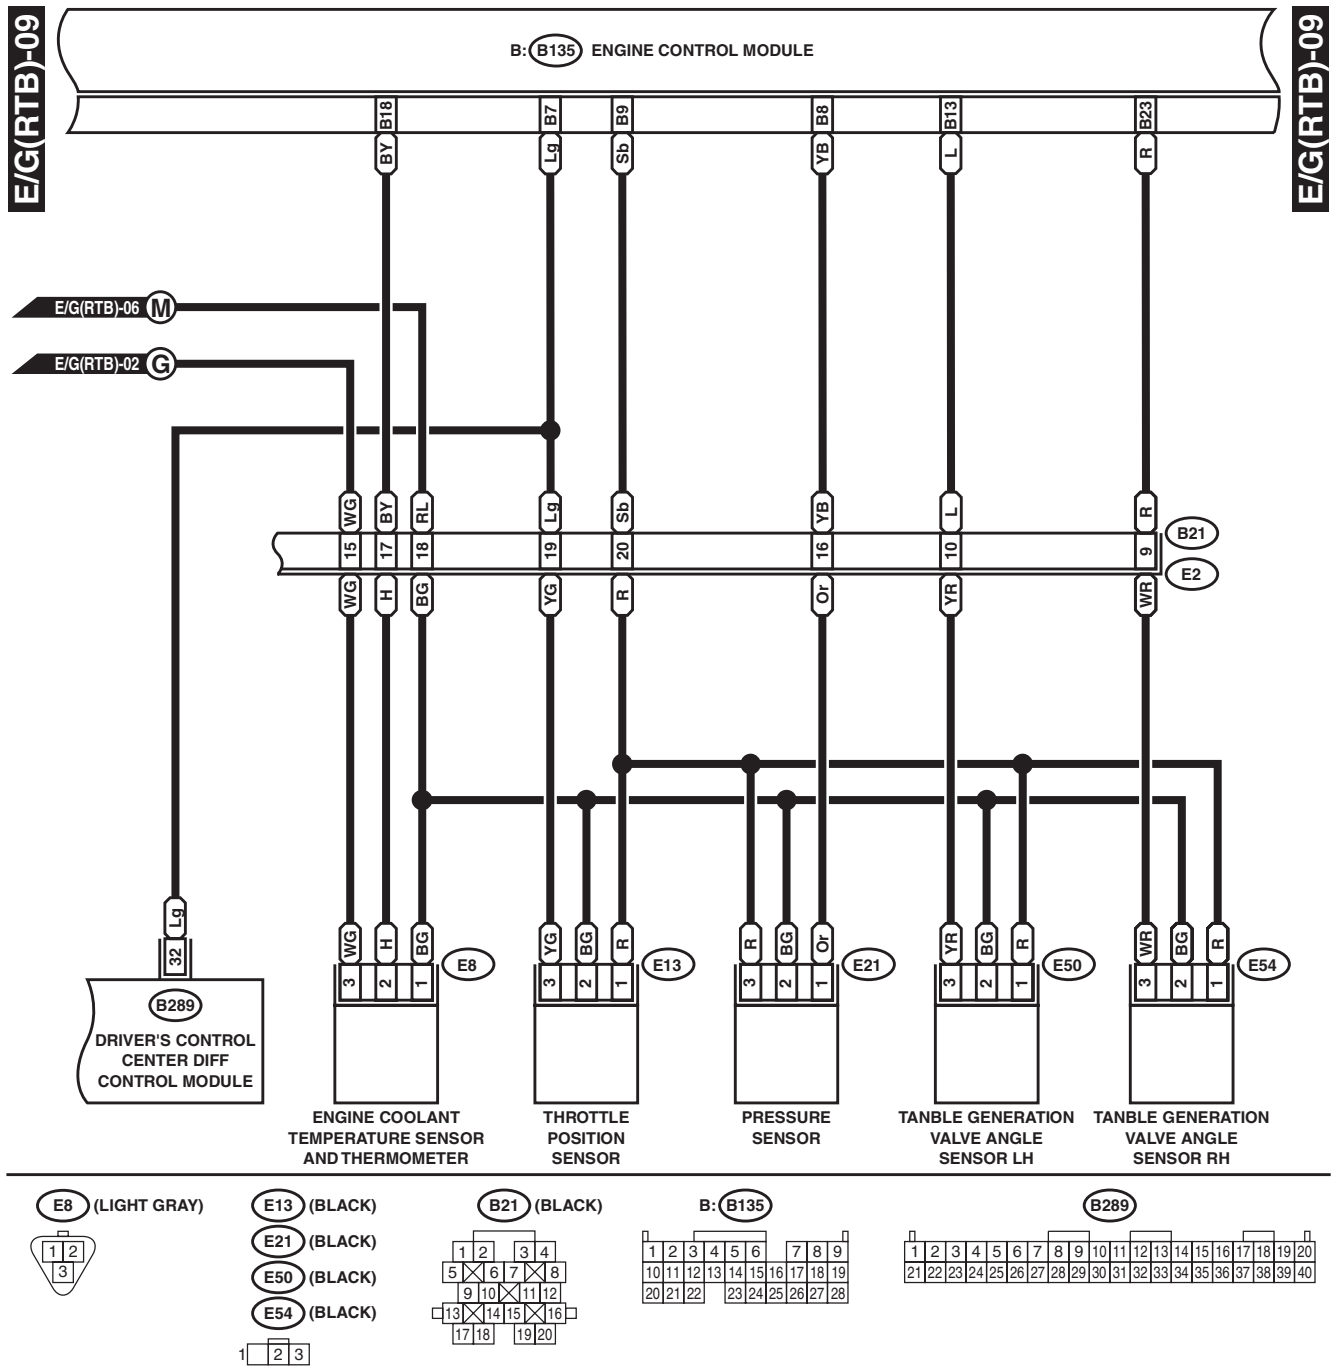


WI-04482

WIRING SYSTEM



Engine Electrical System


WIRING SYSTEM

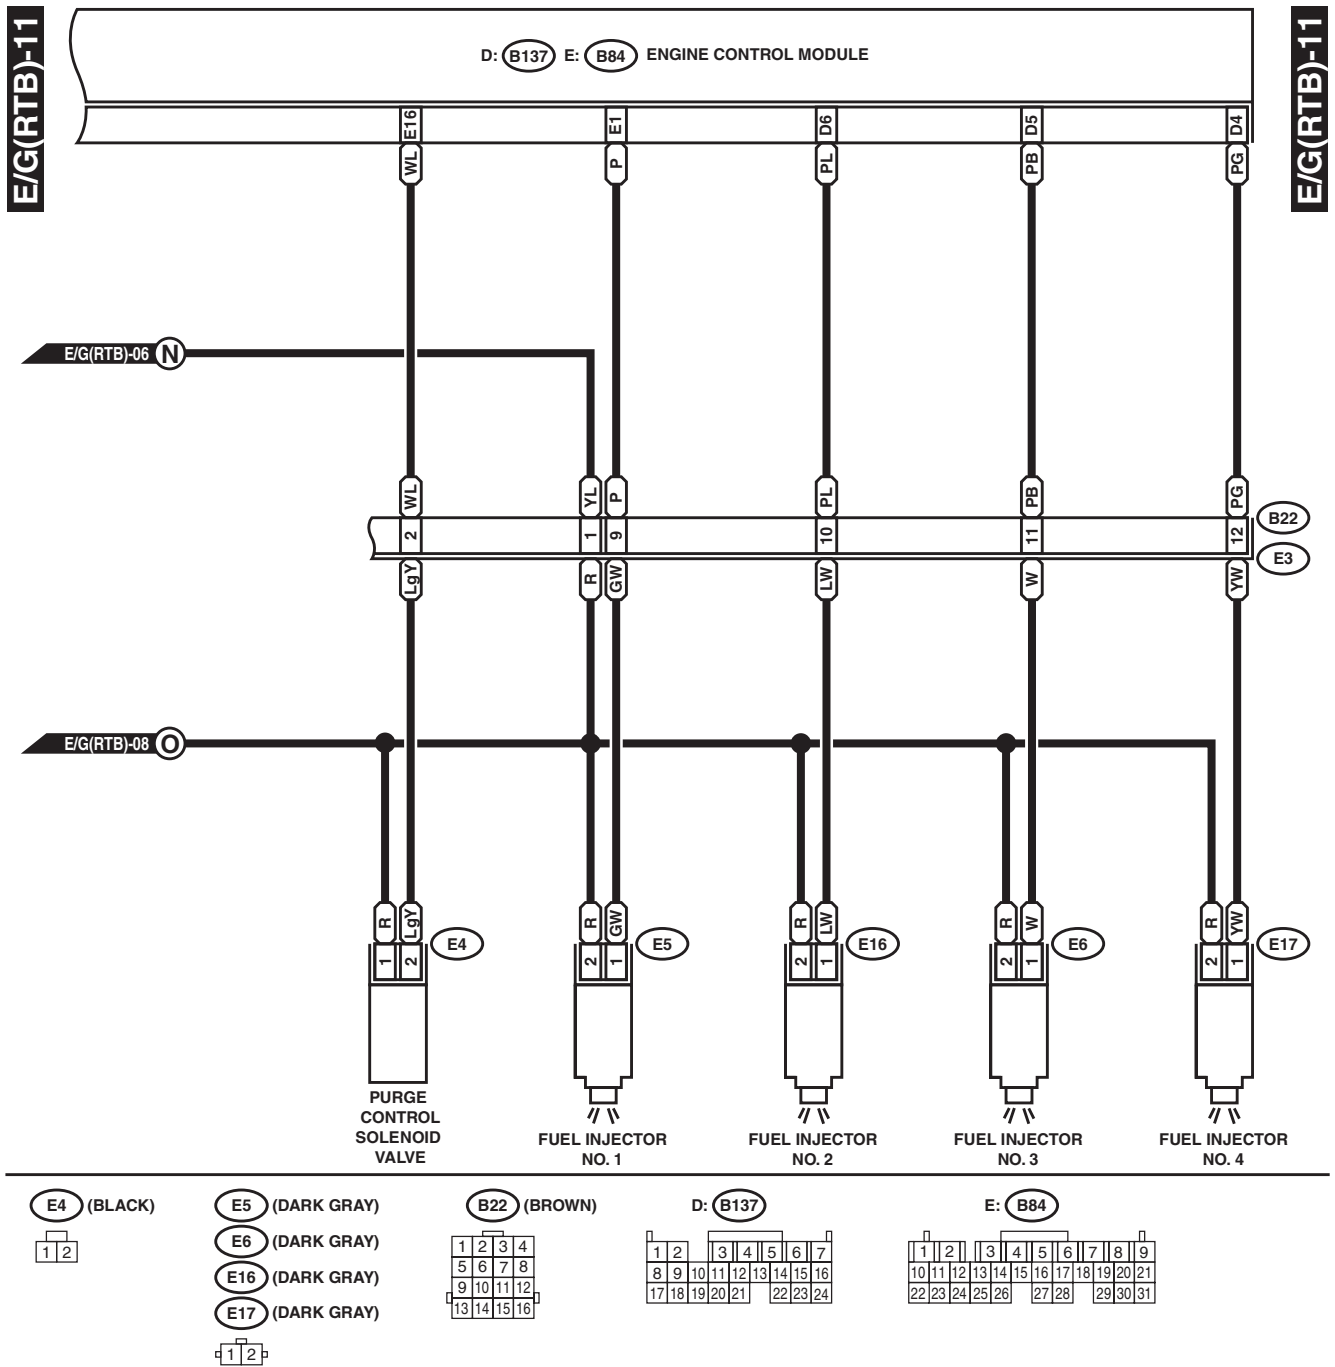

WI-02364

A: WIRING DIAGRAM


1. LHD MODEL

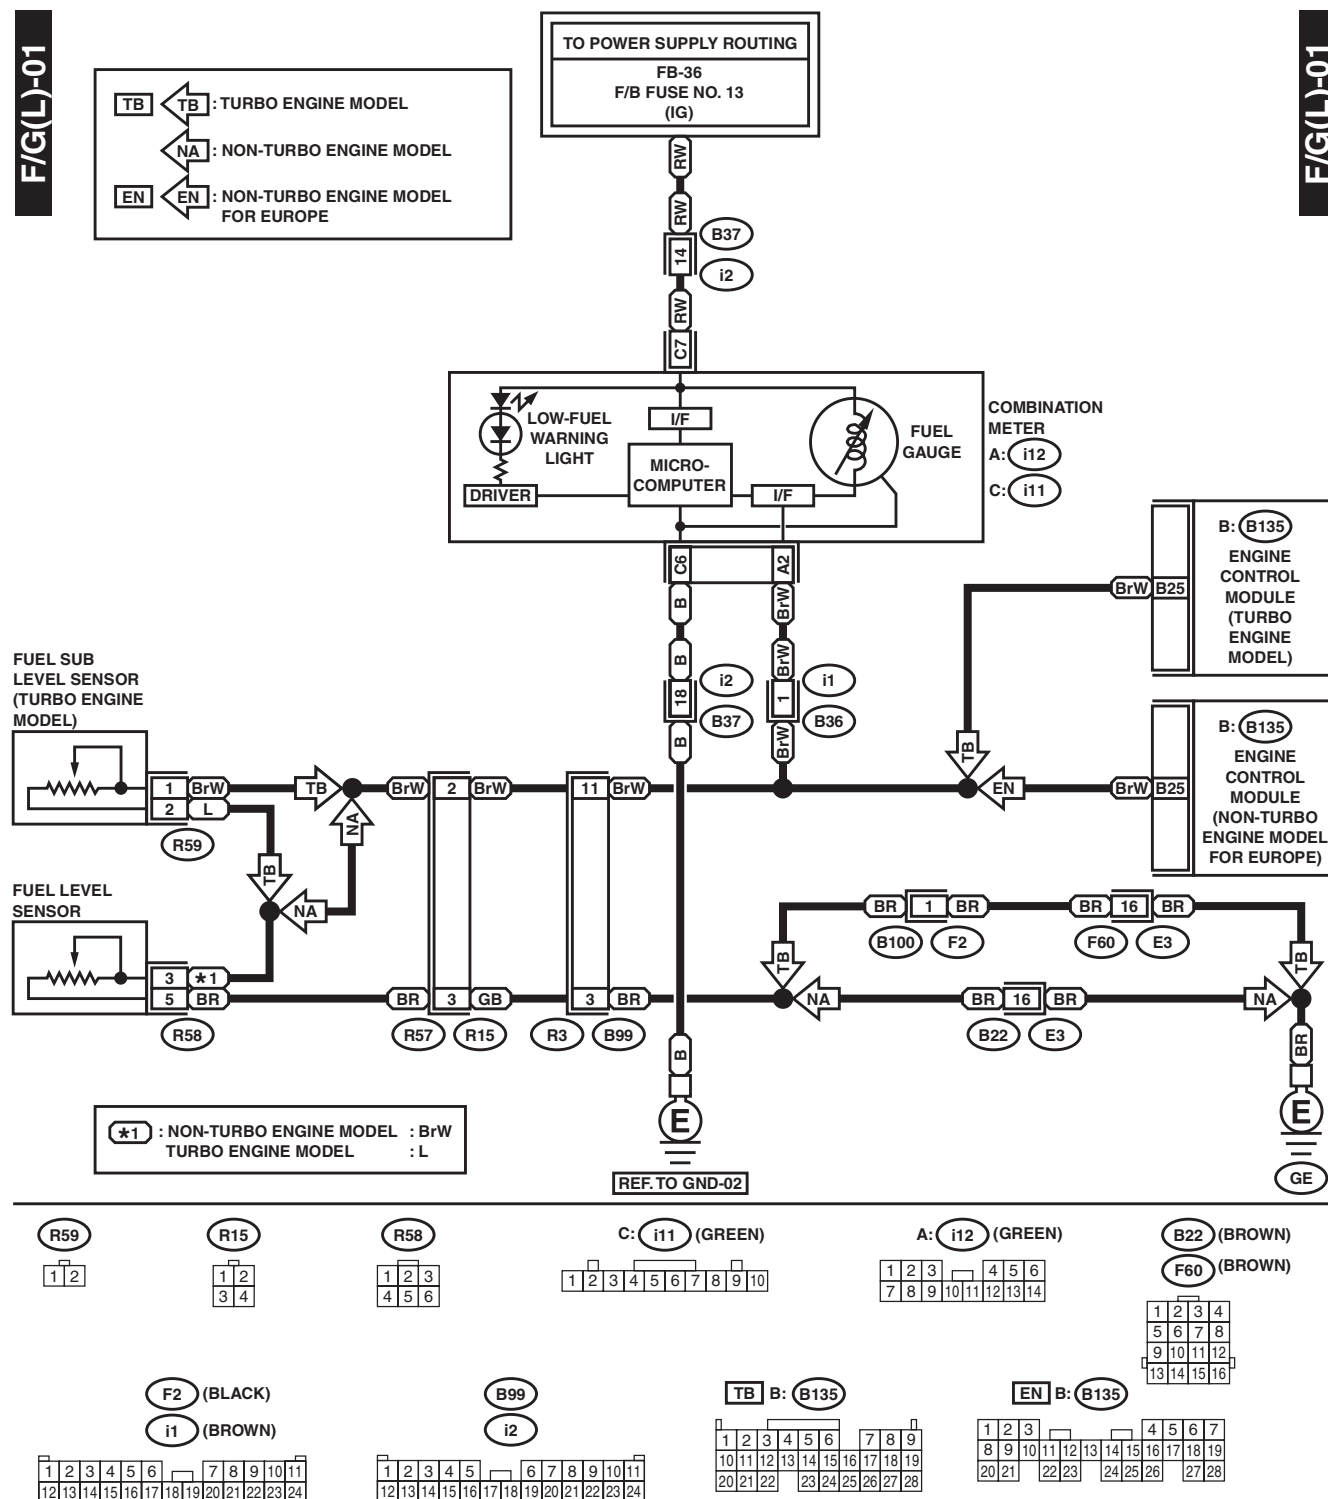

WI-04558


WIRING SYSTEM

F/G(R)-01

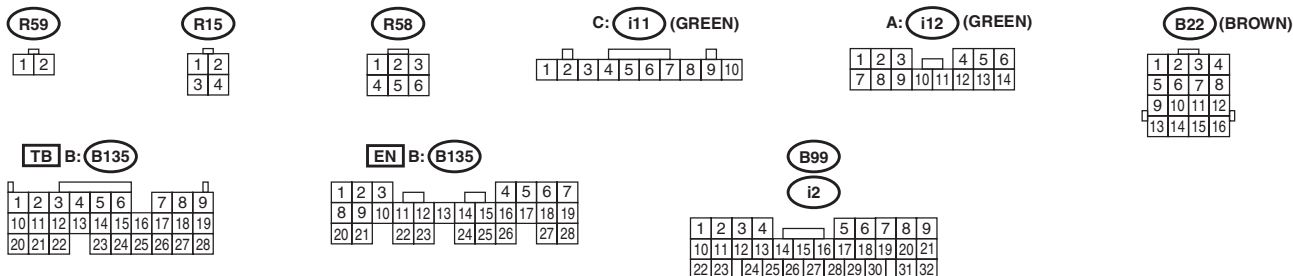

WI-04559

1. LHD MODEL




Full-Time Dual-Range System

WIRING SYSTEM

2. RHD MODEL

D/R(R)-01

D/R(R)-01

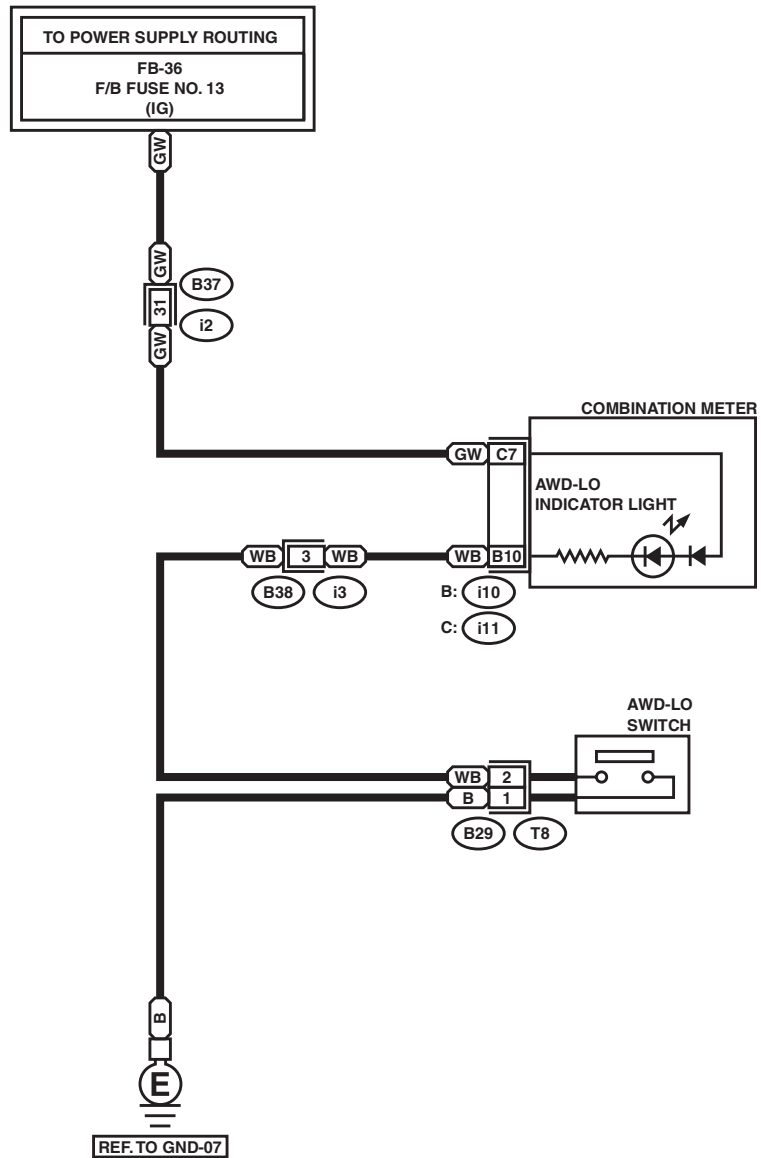

B29 (GRAY)	i3 (BLACK)	C: i11 (GREEN)	B: i10 (GREEN)	i2
1 2	1 2 3 4 5 6 7 8 9 10	1 2 3 4 5 6 7 8 9 10	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32


WI-02368

17.Front Accessory Power Supply System

A: WIRING DIAGRAM

FAPS-01

FAPS-01

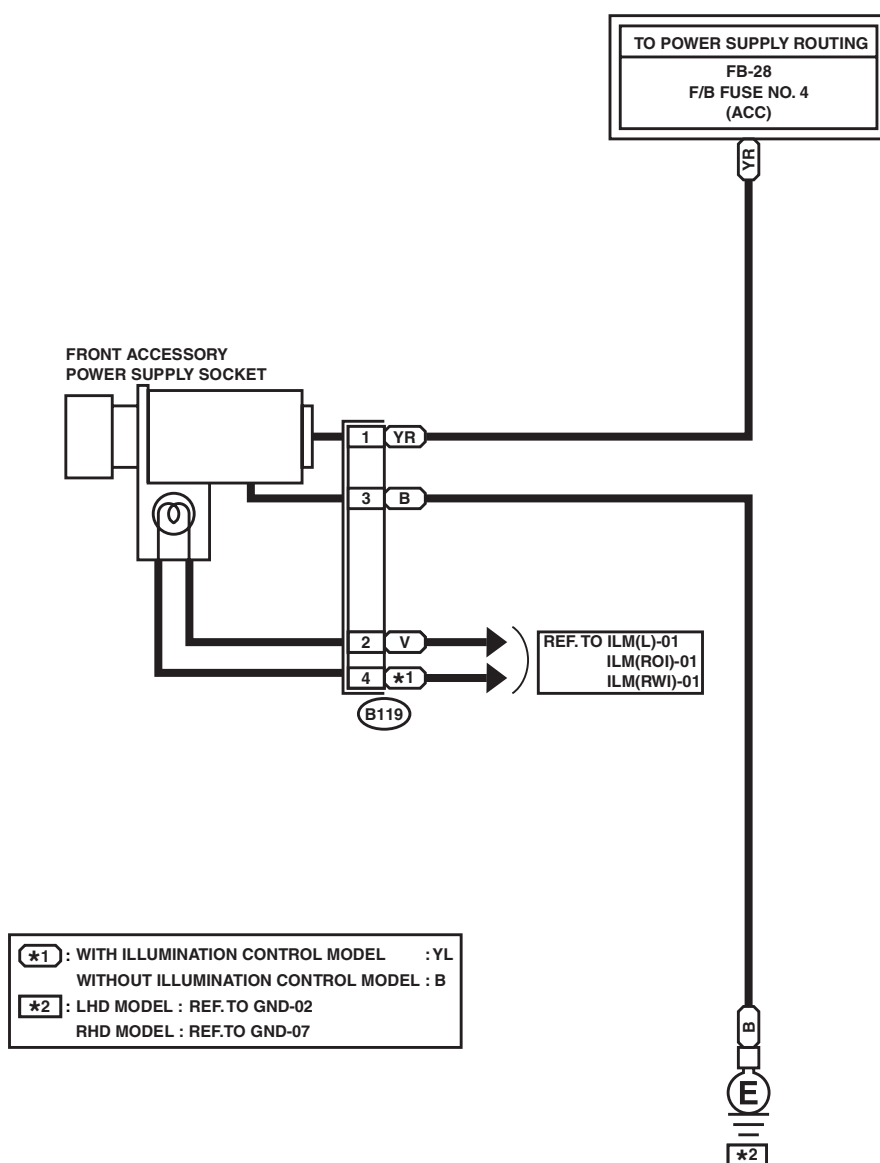


Headlight Beam Leveler System

WIRING SYSTEM


18.Headlight Beam Leveler System

A: WIRING DIAGRAM

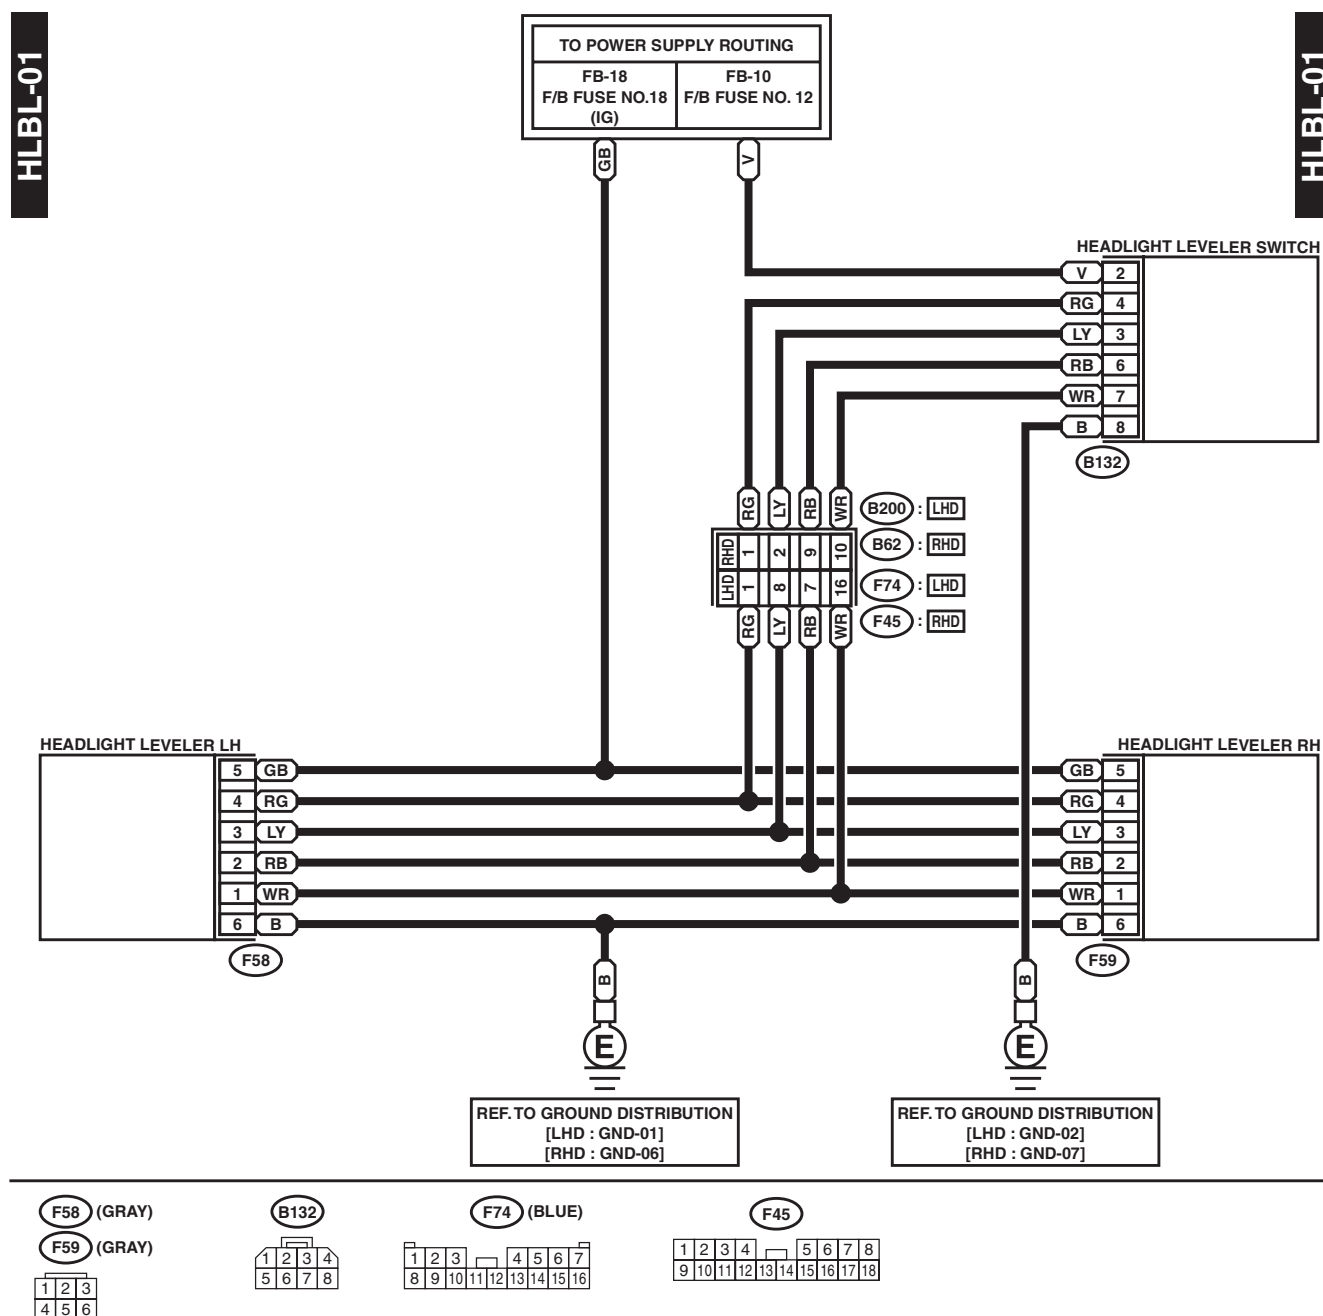

WI-02369

19.Horn System
A: WIRING DIAGRAM

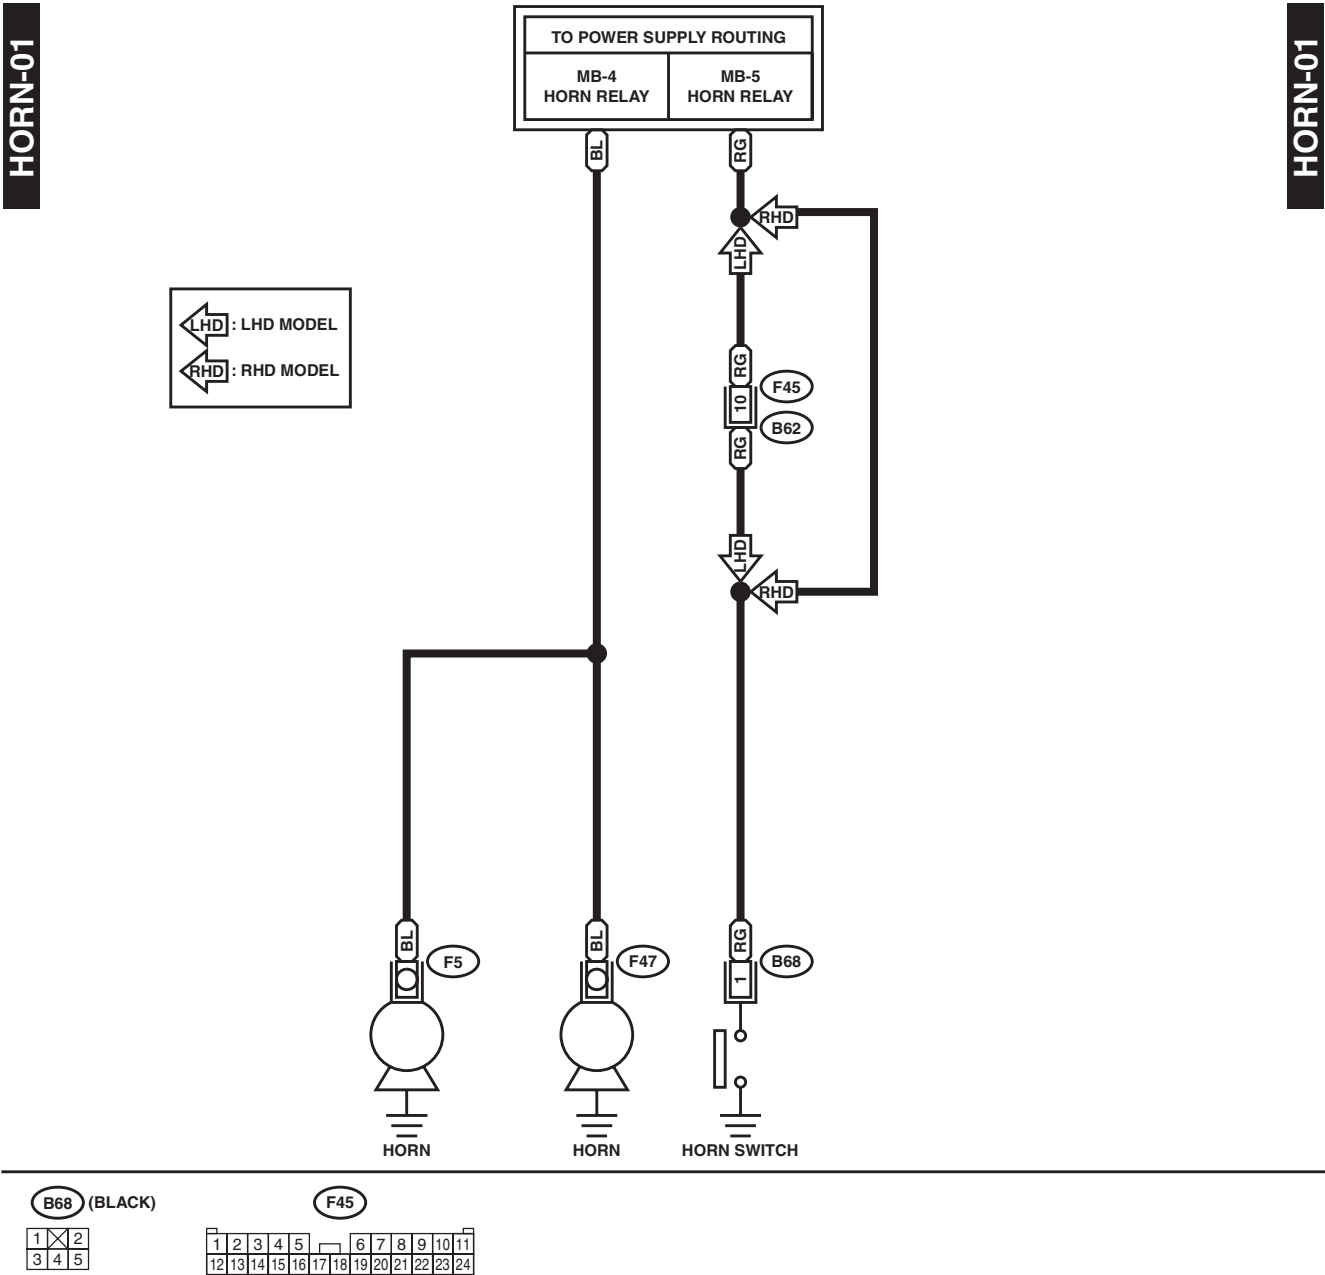


Immobilizer System

WIRING SYSTEM

20. Immobilizer System

A: WIRING DIAGRAM


1. LHD MODEL

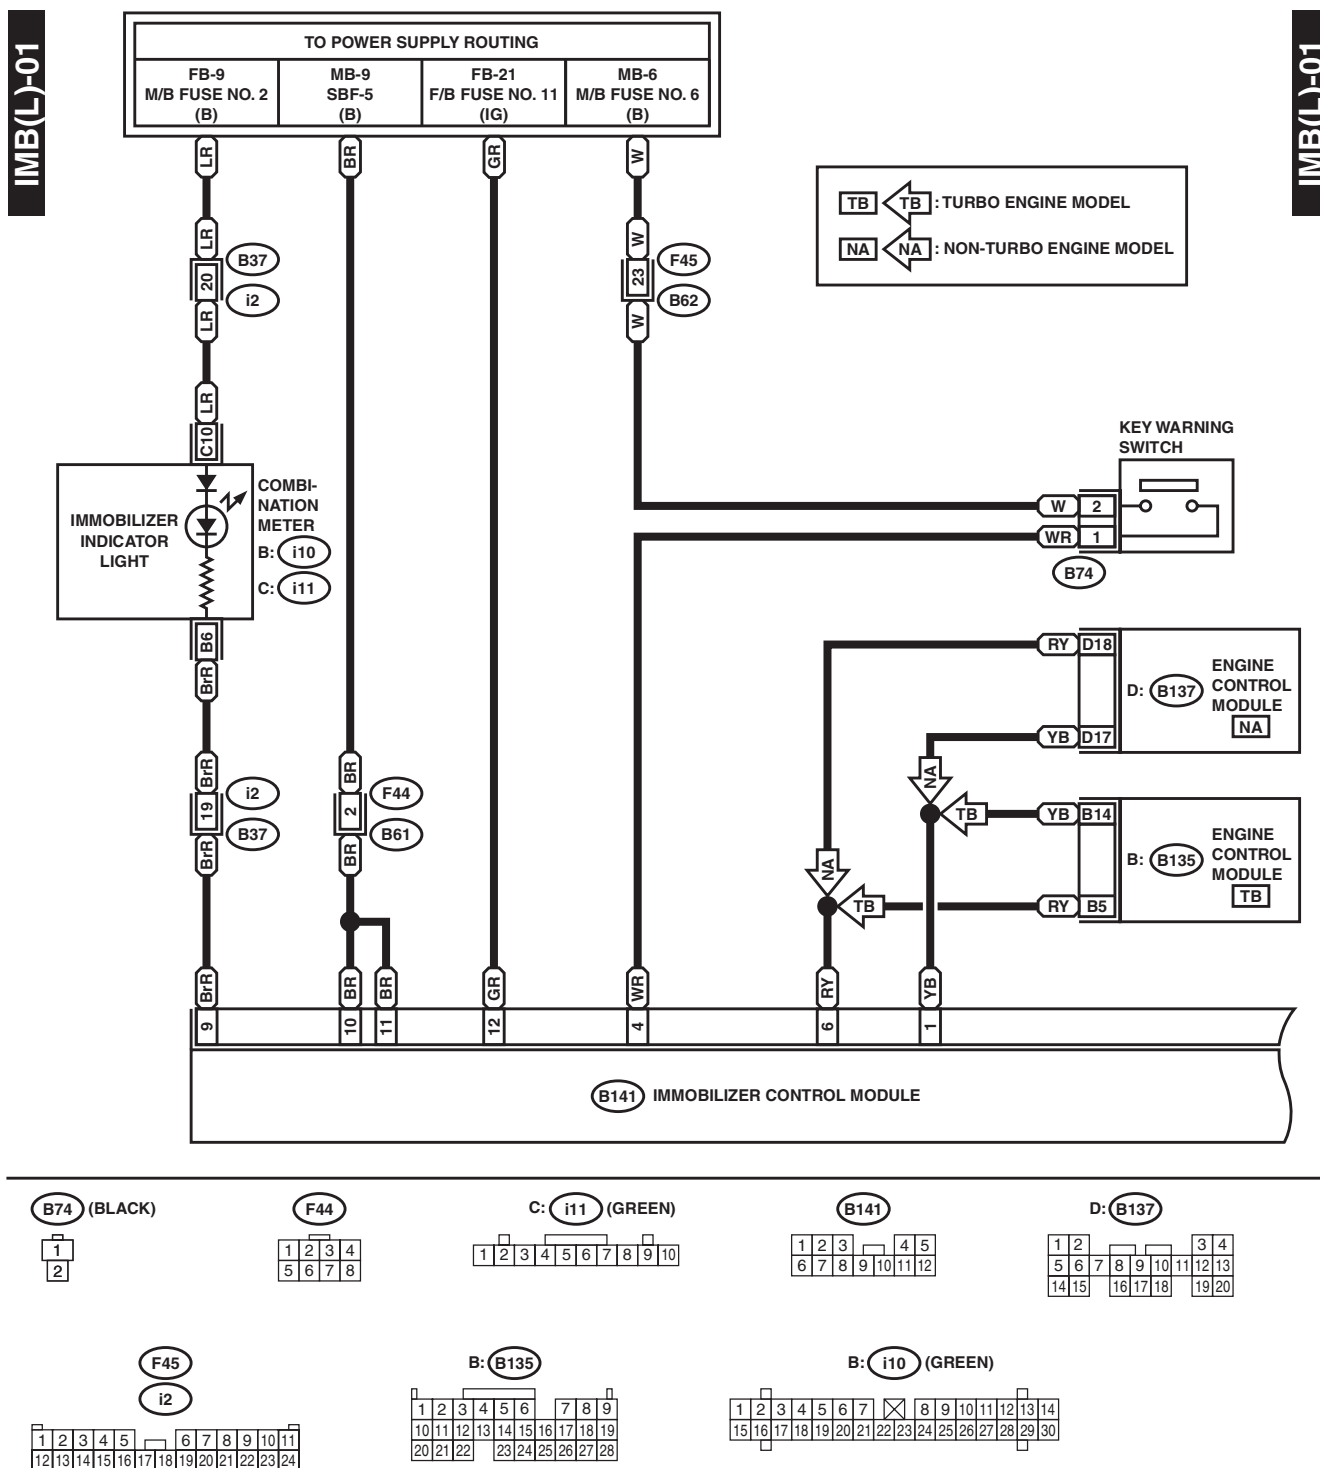

WI-02371

Immobilizer System

WIRING SYSTEM

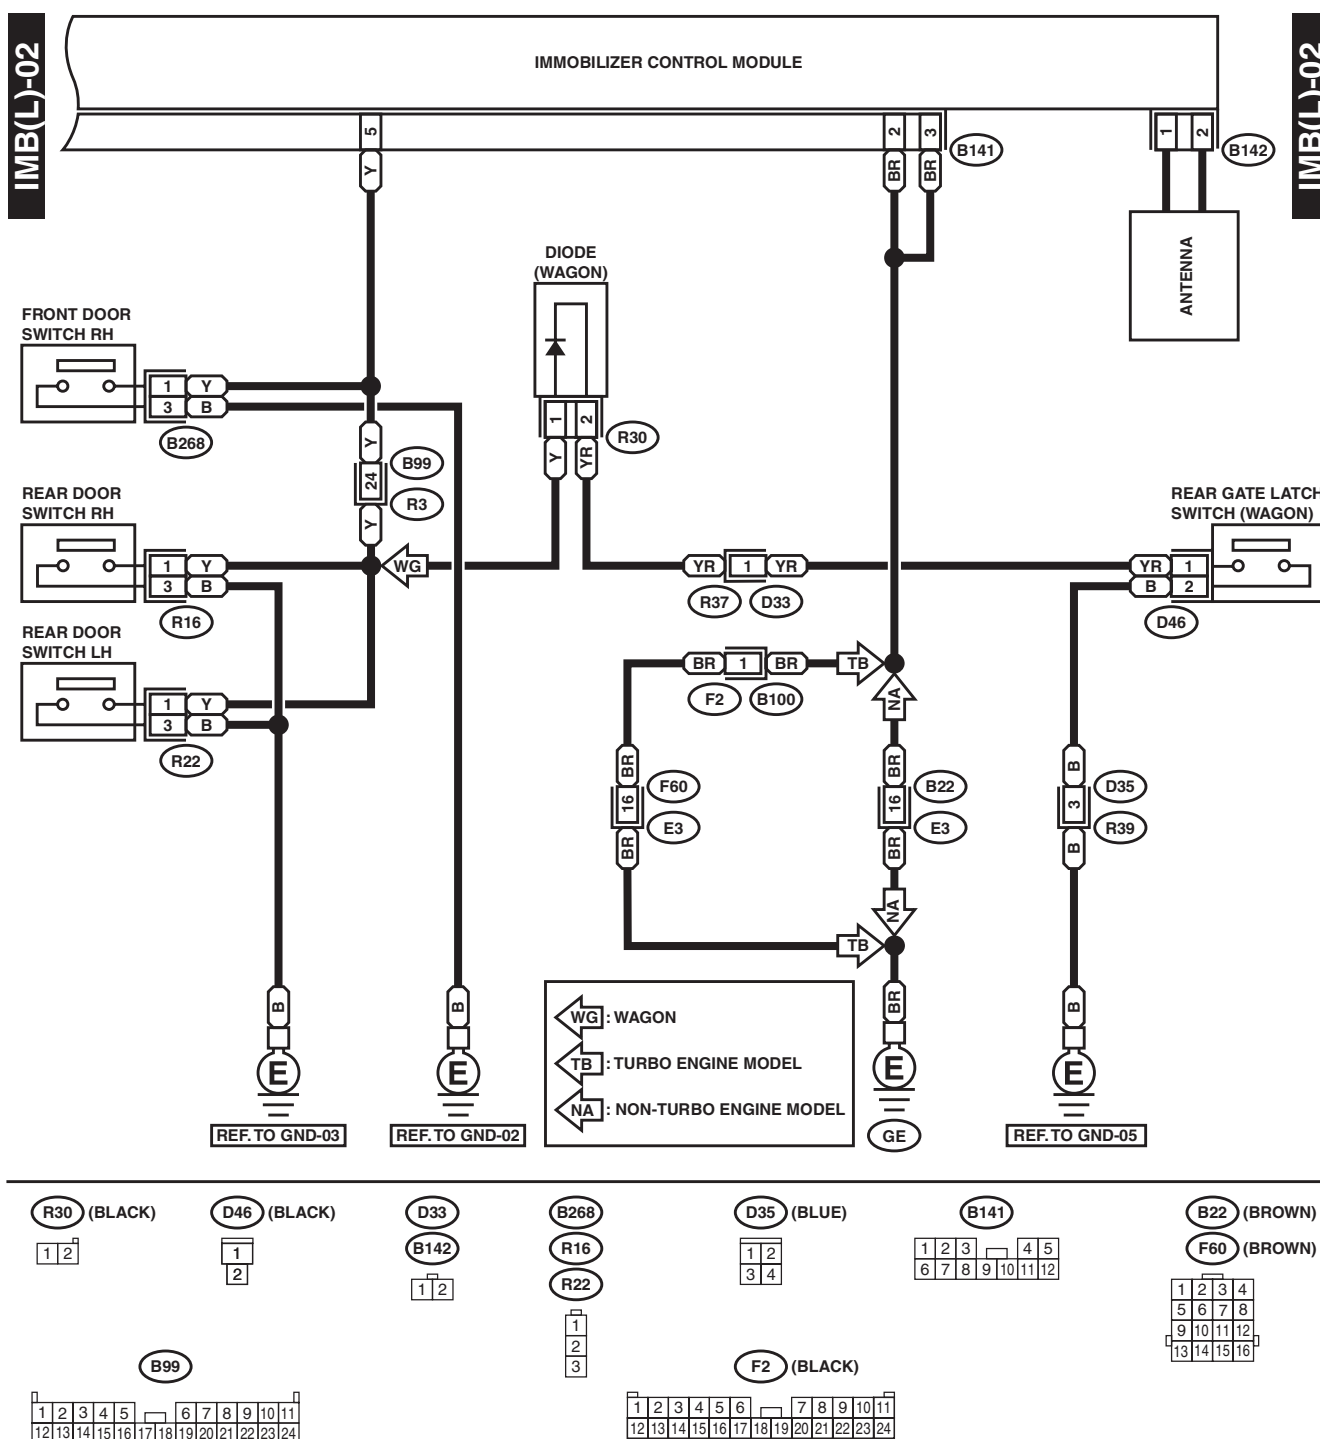


WI-04560

Immobilizer System

WIRING SYSTEM

2. RHD MODEL

IMB(R)-01

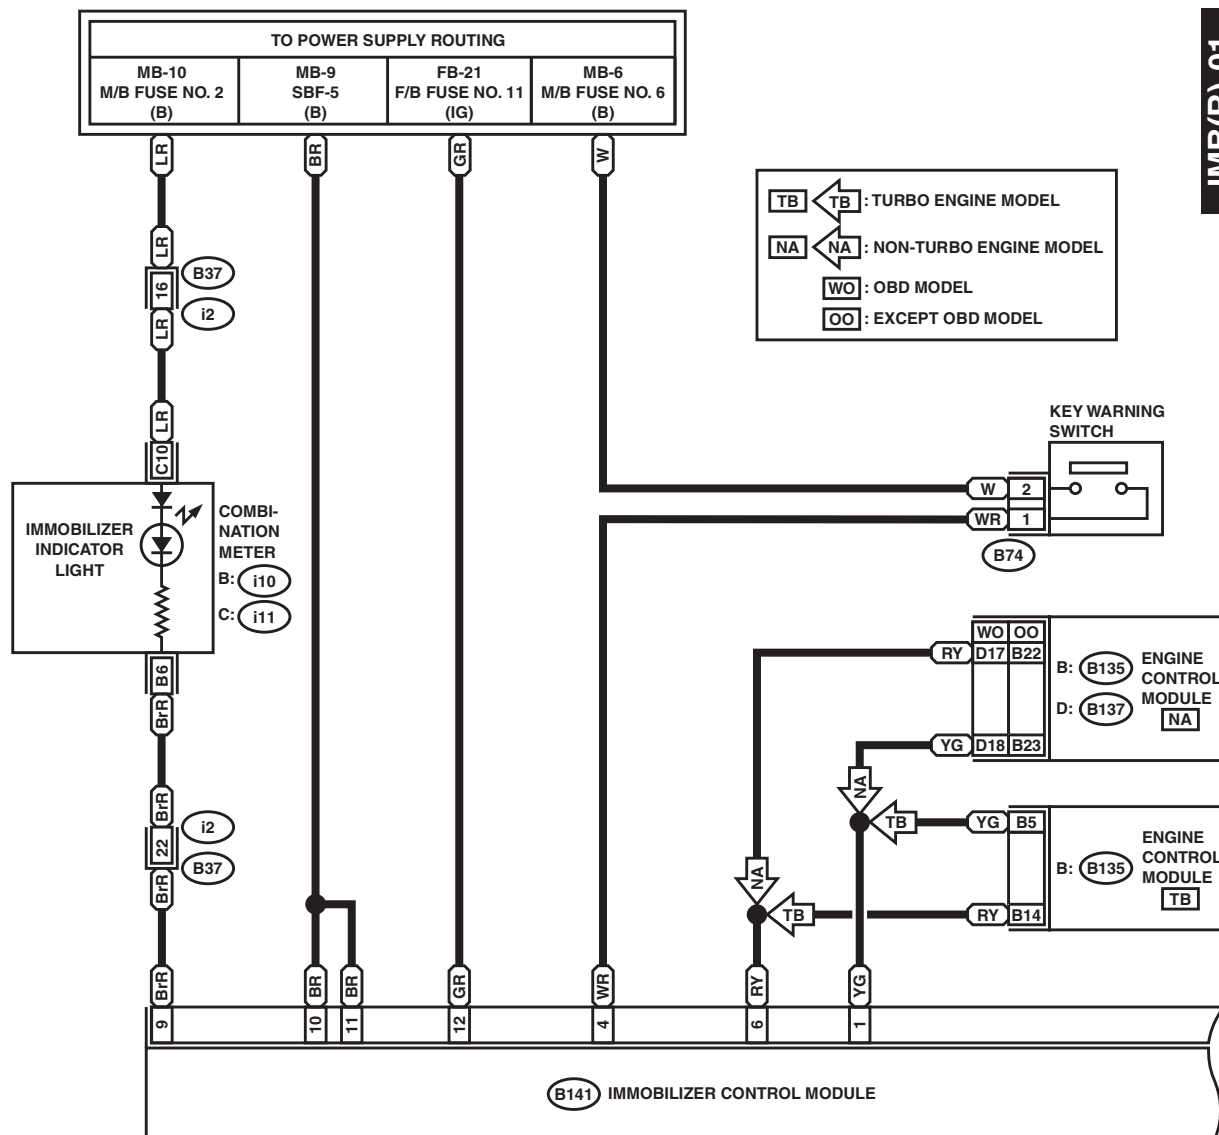


IMB(R)-01


B74 (BLACK)




C: i11 (GREEN)



B141



D: B137




NA B: B135



TB B: B135



B: i10 (GREEN)




i2



WI-04561

Immobilizer System

WIRING SYSTEM

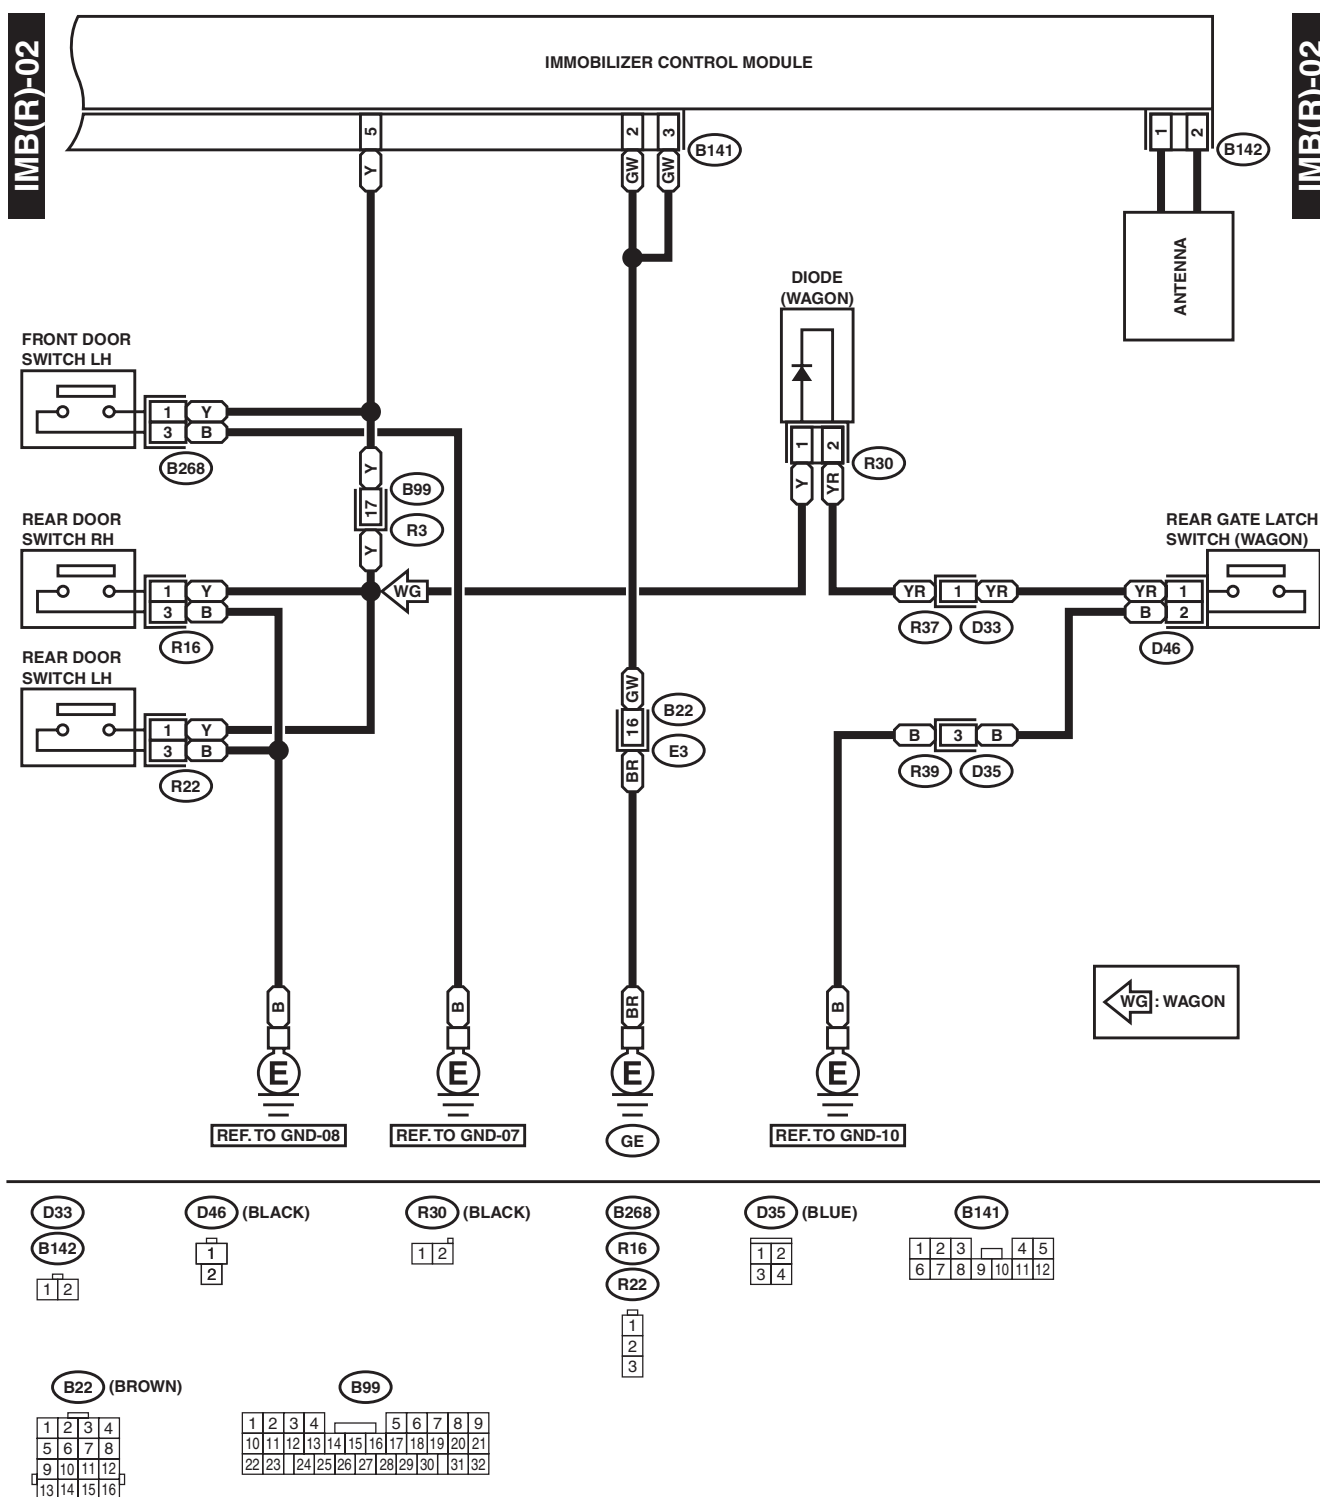


WI-04562

21.Keyless Entry System

A: WIRING DIAGRAM


1. LHD MODEL

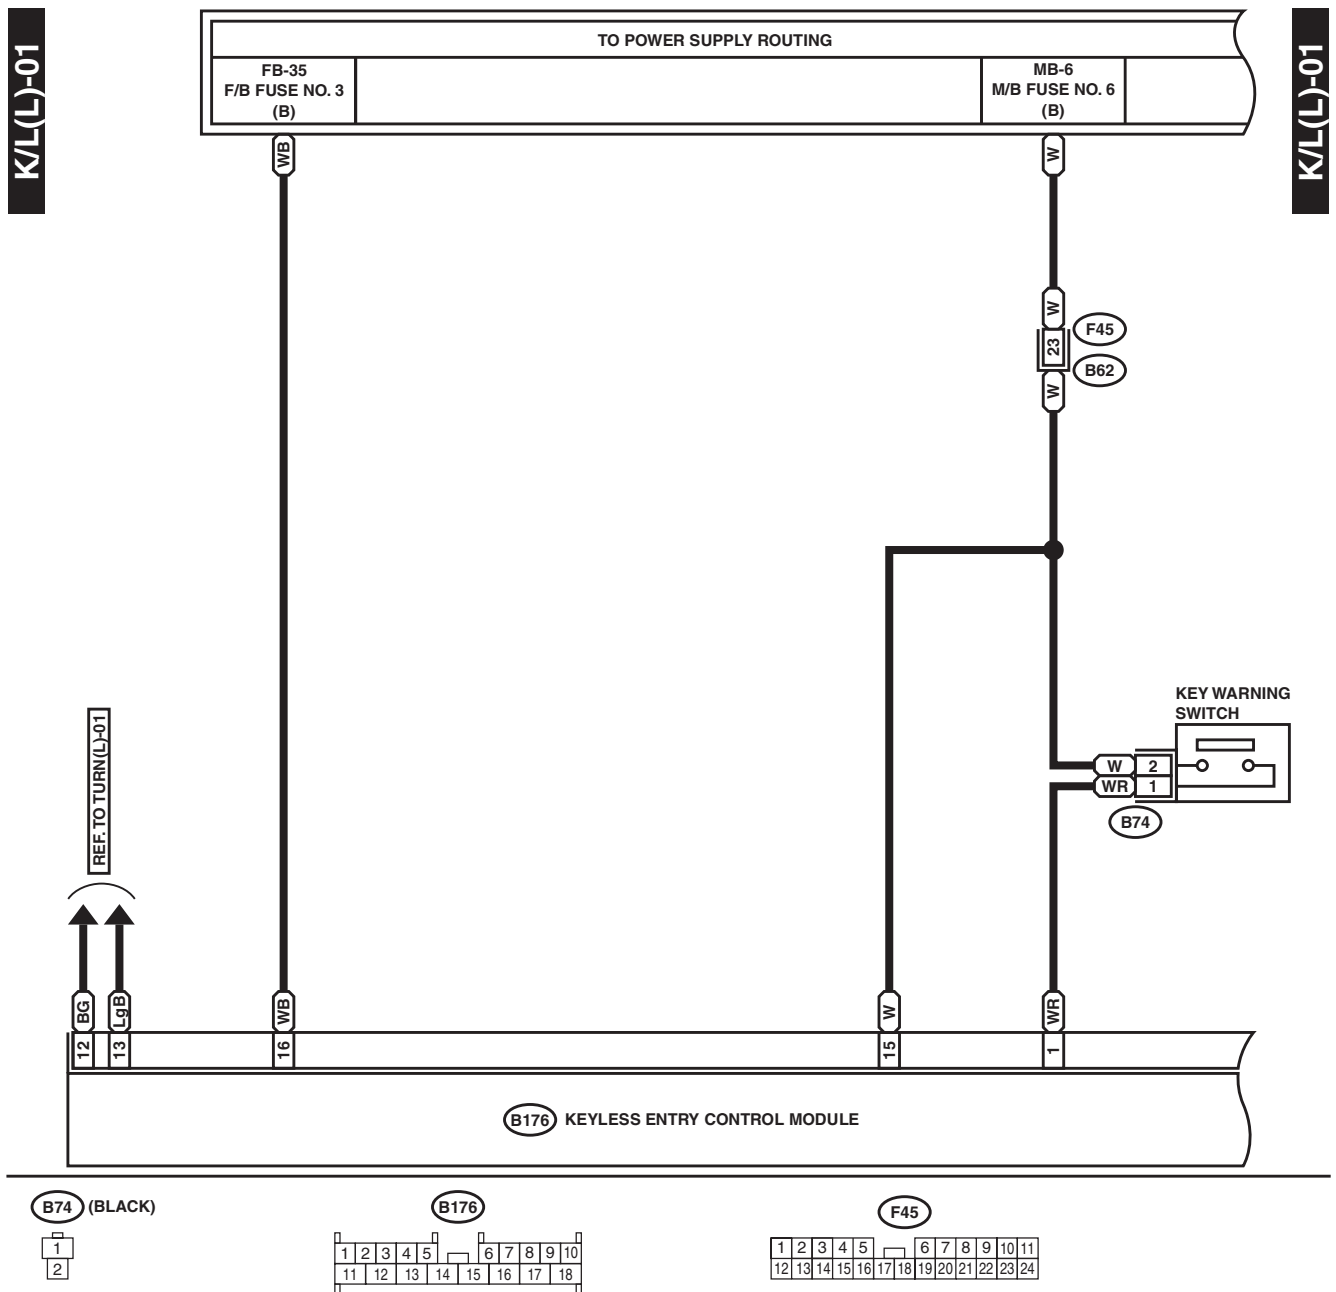

WI-02375

Keyless Entry System


WIRING SYSTEM

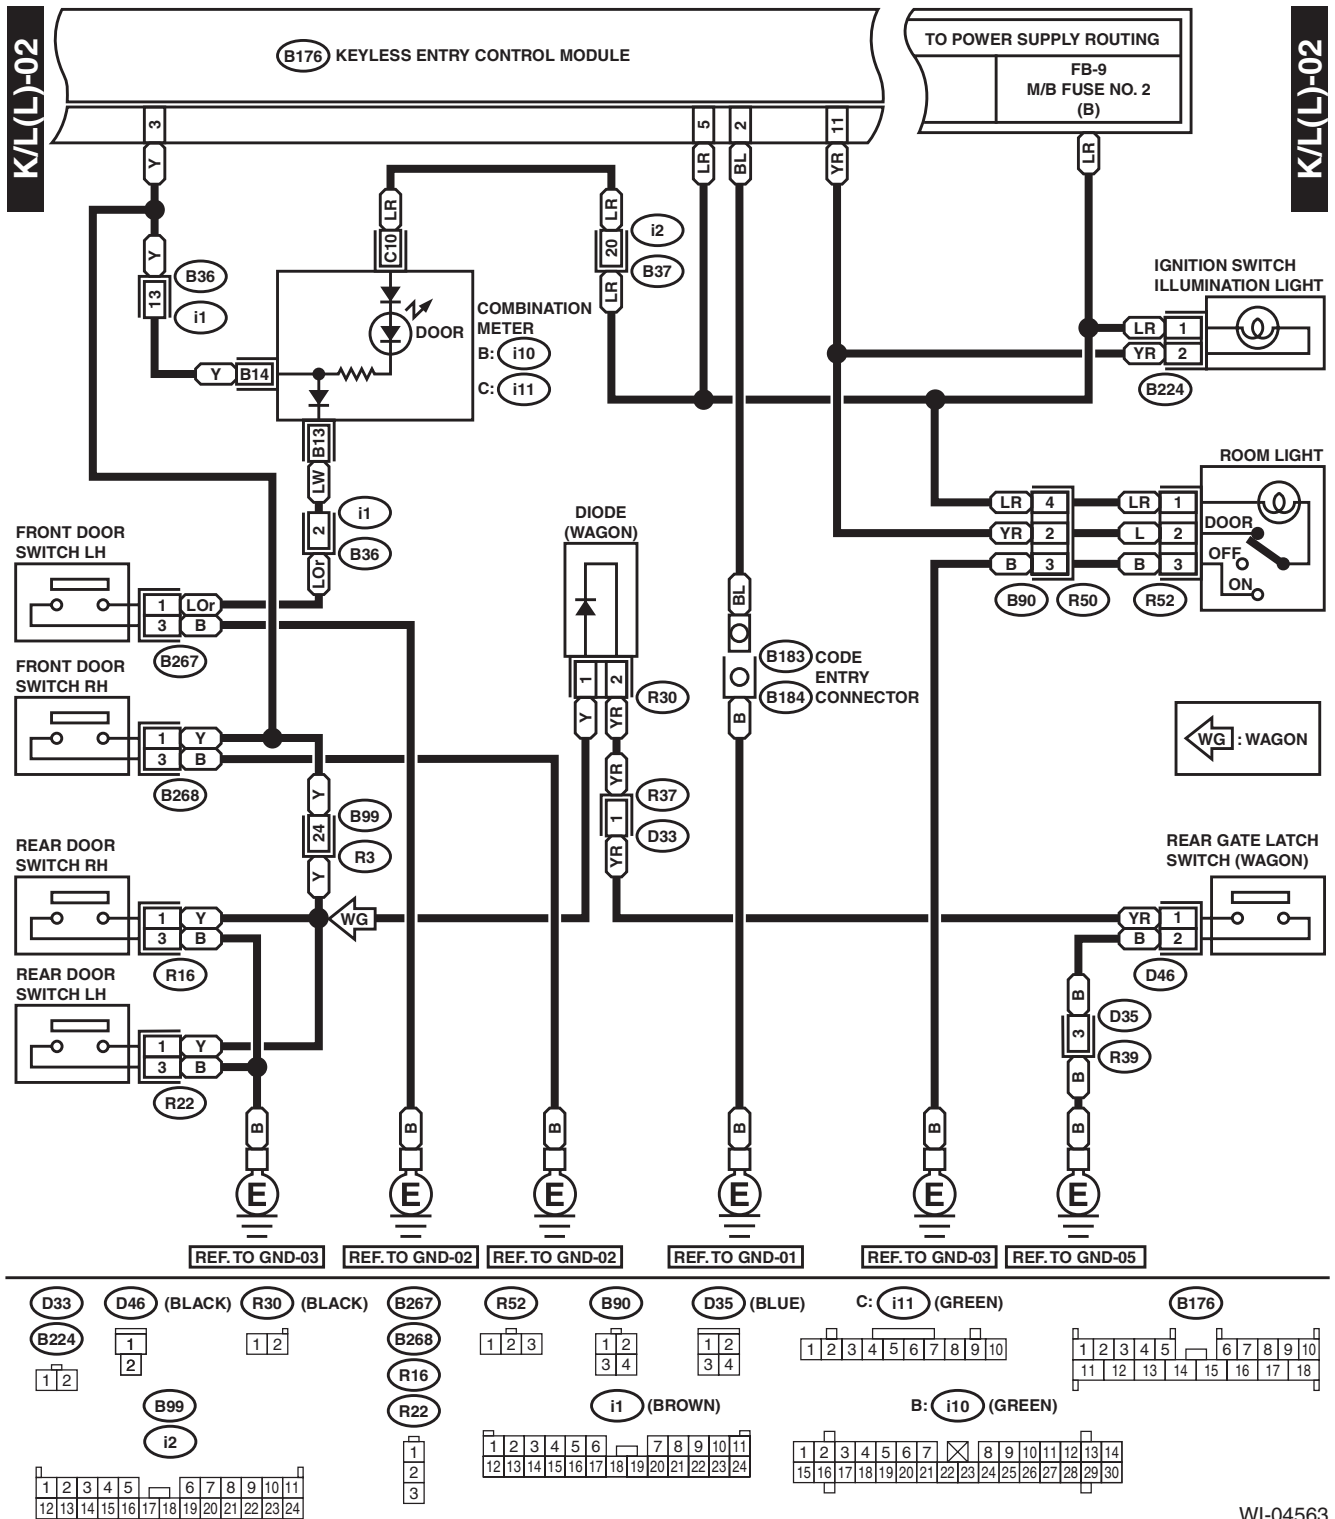

WI-04563

Keyless Entry System

WIRING SYSTEM

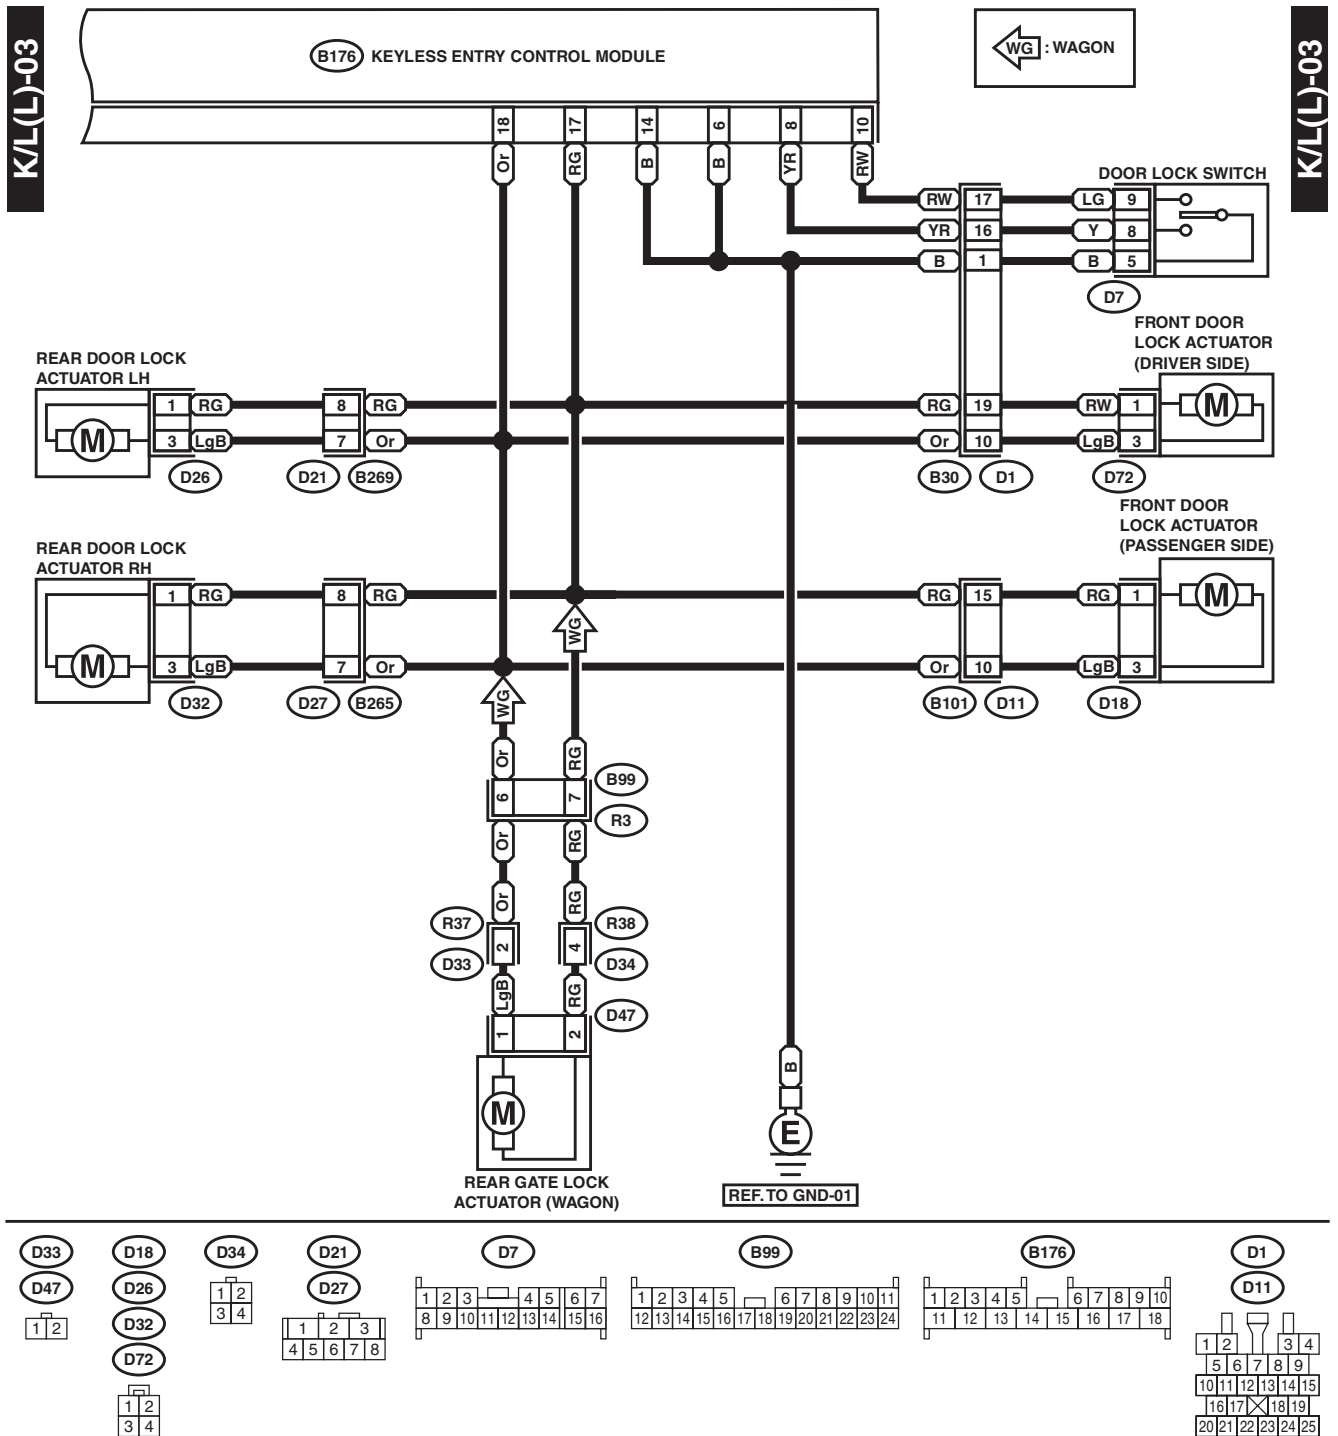


WI-04483

Keyless Entry System

WIRING SYSTEM


2. RHD WITHOUT DOUBLE LOCK MODEL

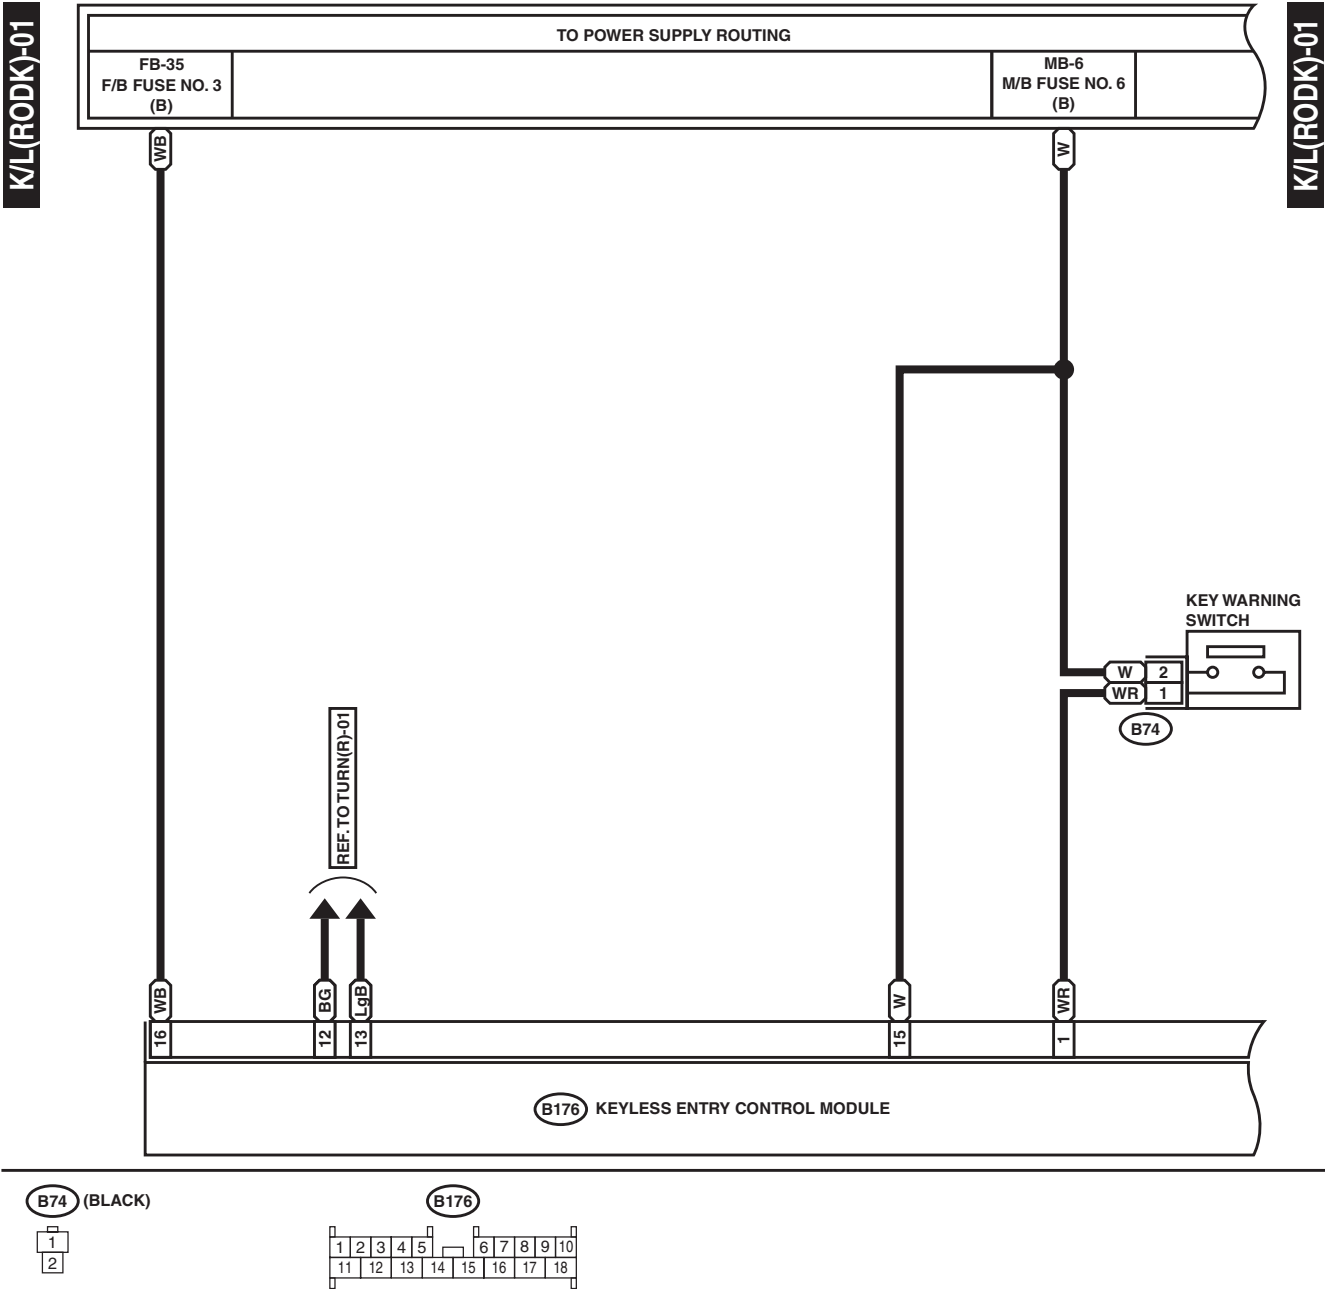

WI-02378

Keyless Entry System

WIRING SYSTEM


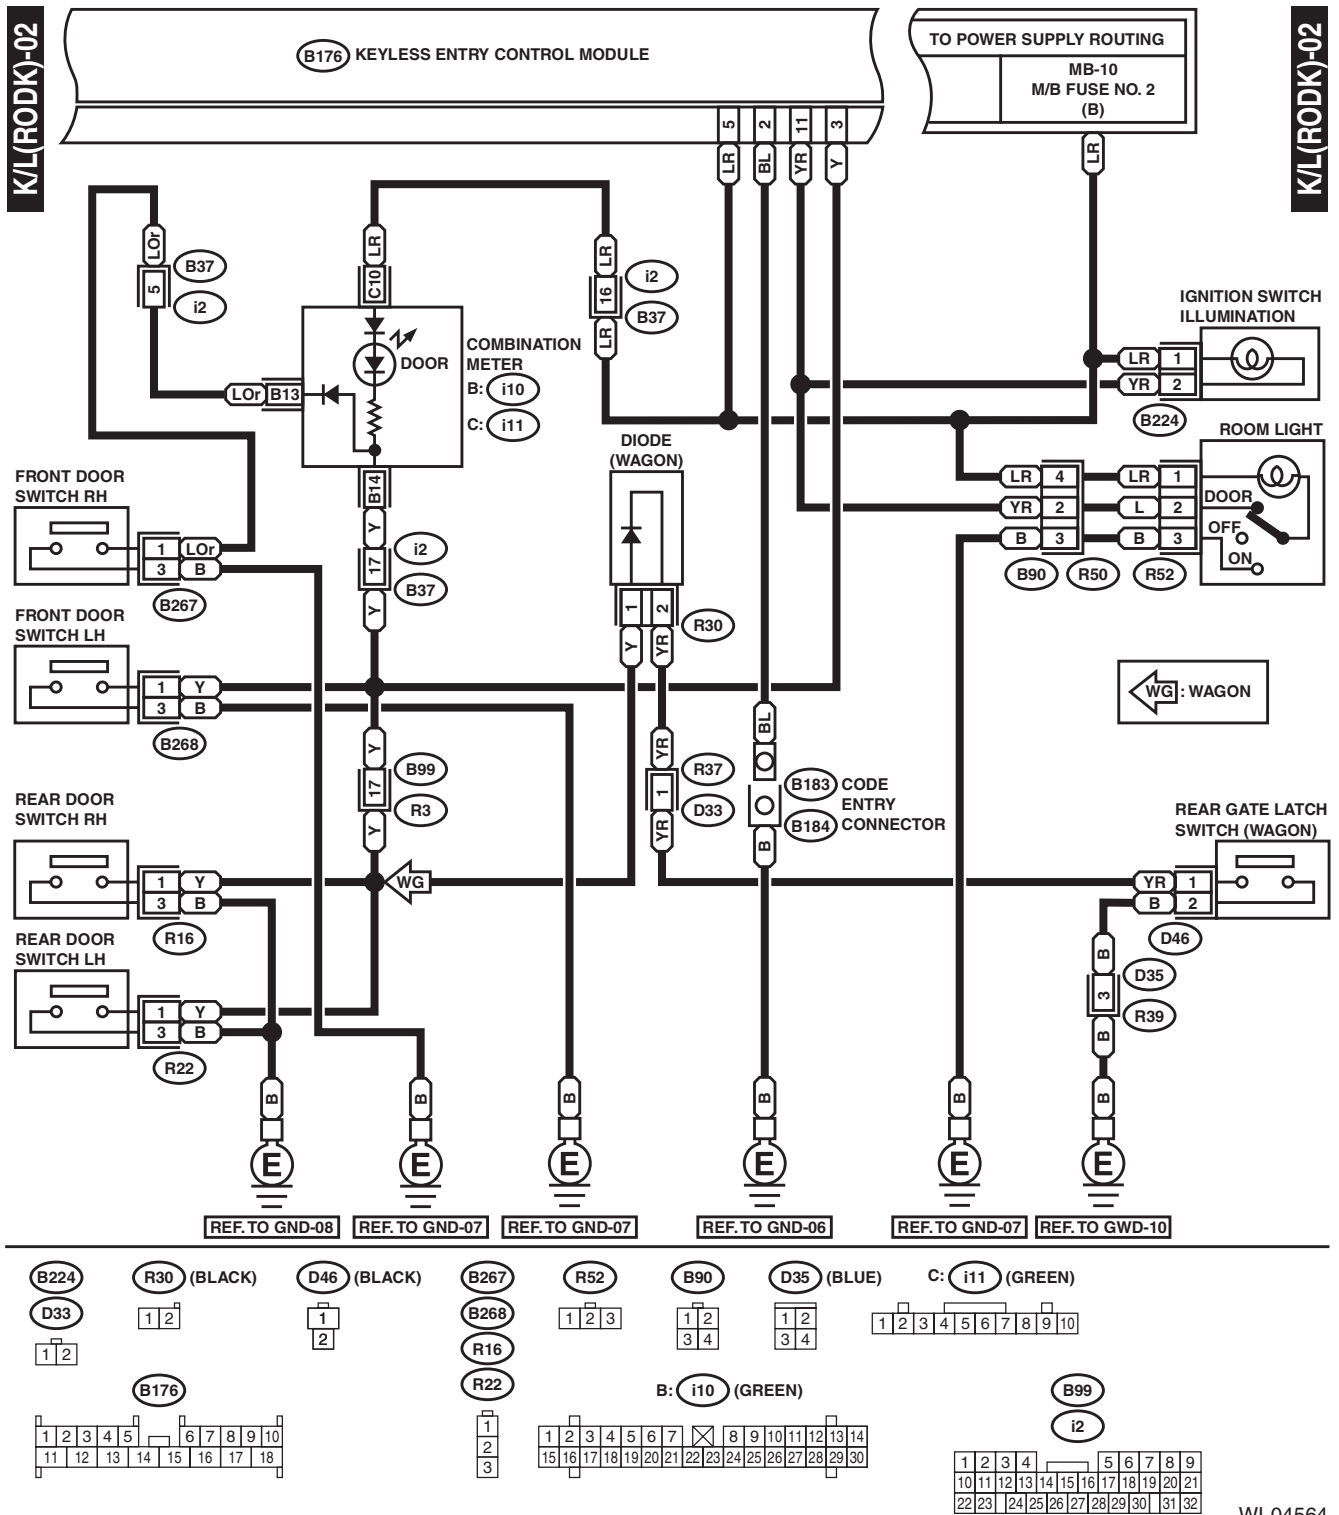


Keyless Entry System

WIRING SYSTEM

K/L(RODK)-03

K/L(RODK)-03

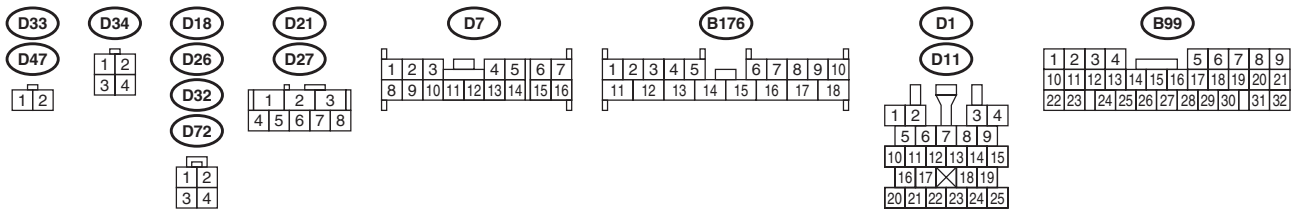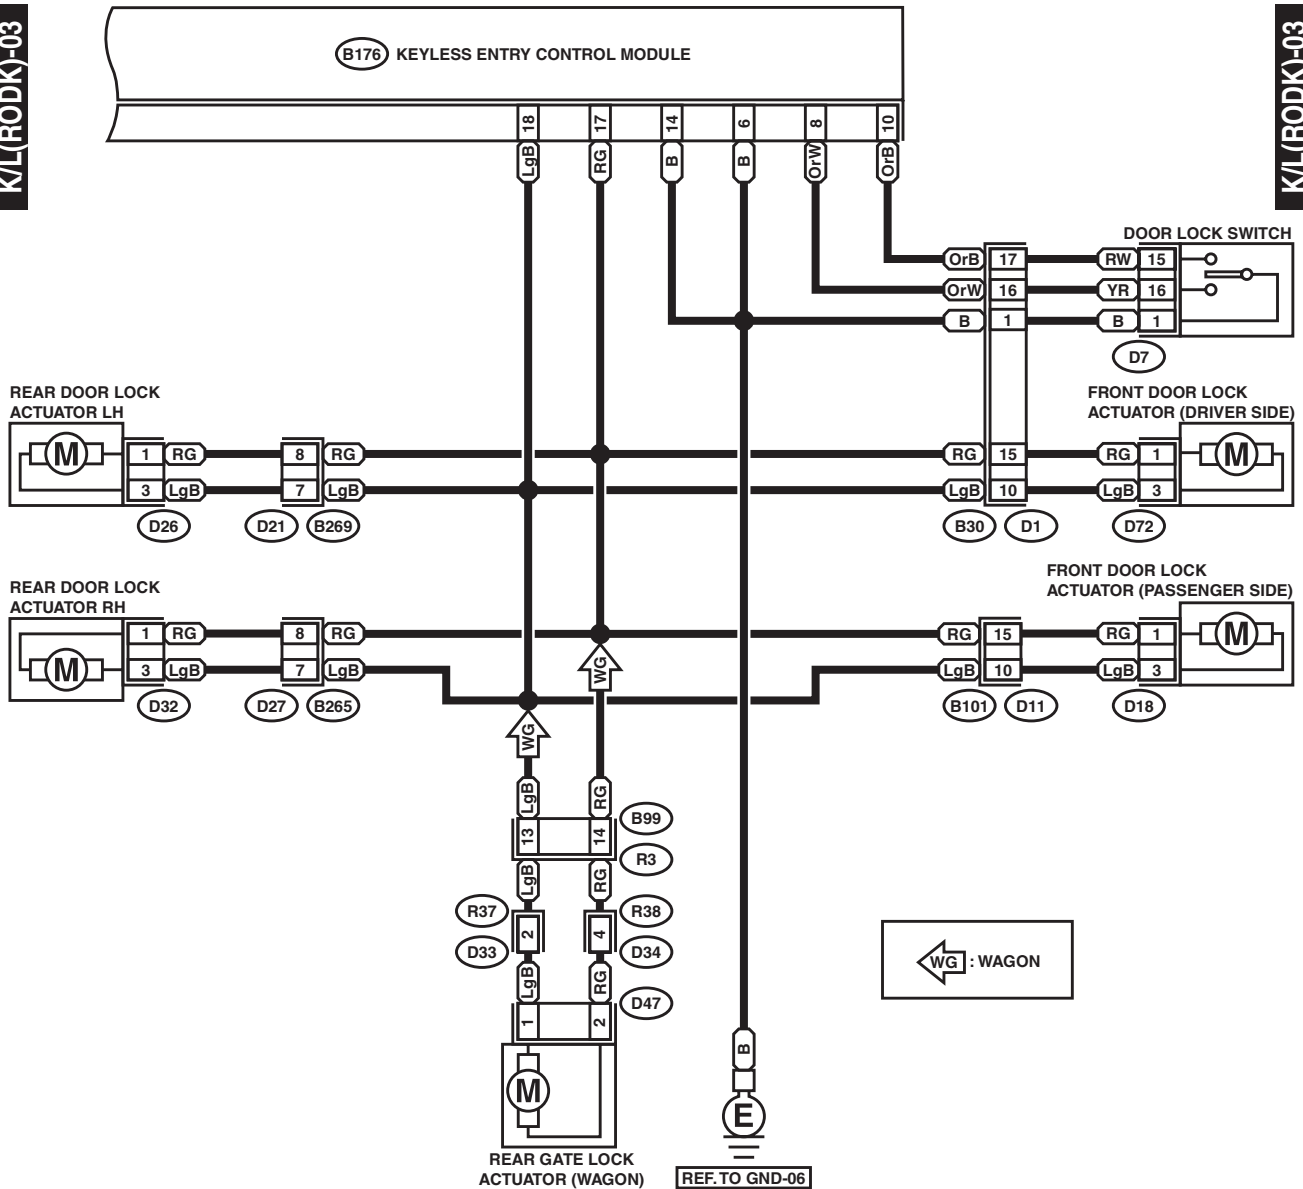


WI-04484

Keyless Entry System

WIRING SYSTEM


3. RHD WITH DOUBLE LOCK MODEL

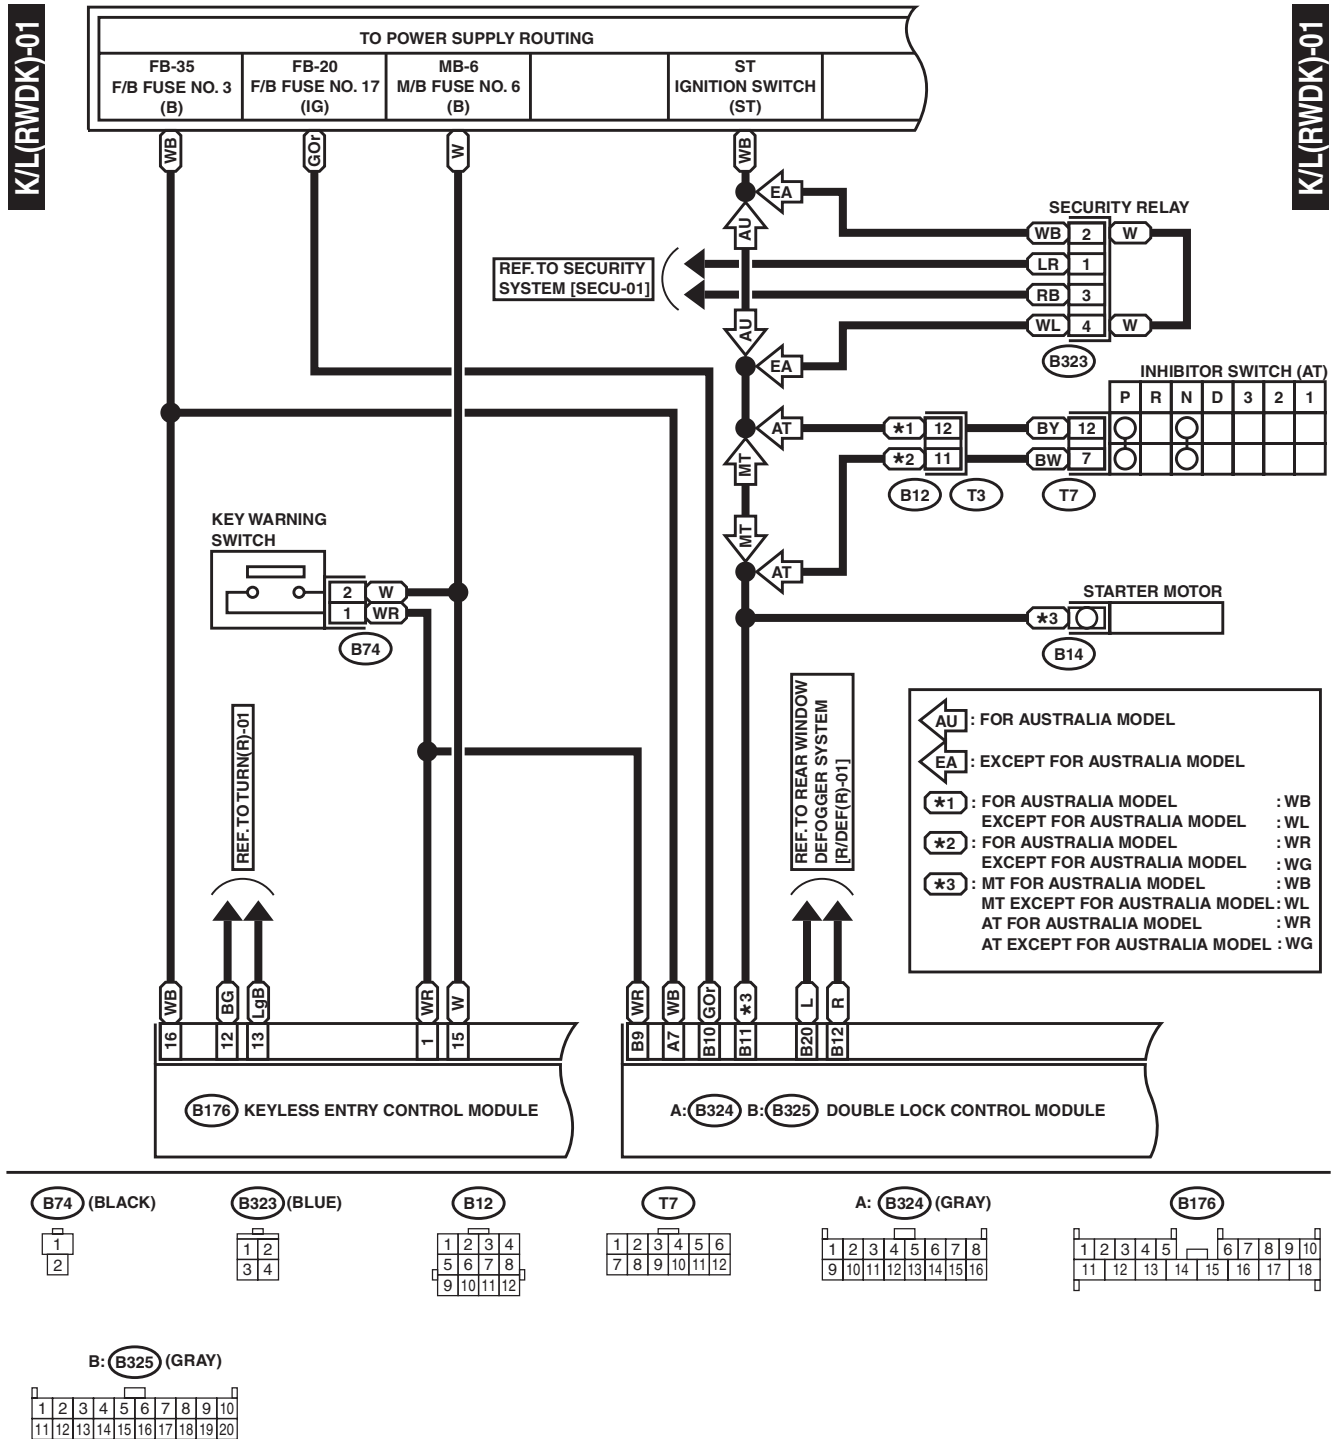

WI-04565

Keyless Entry System


WIRING SYSTEM

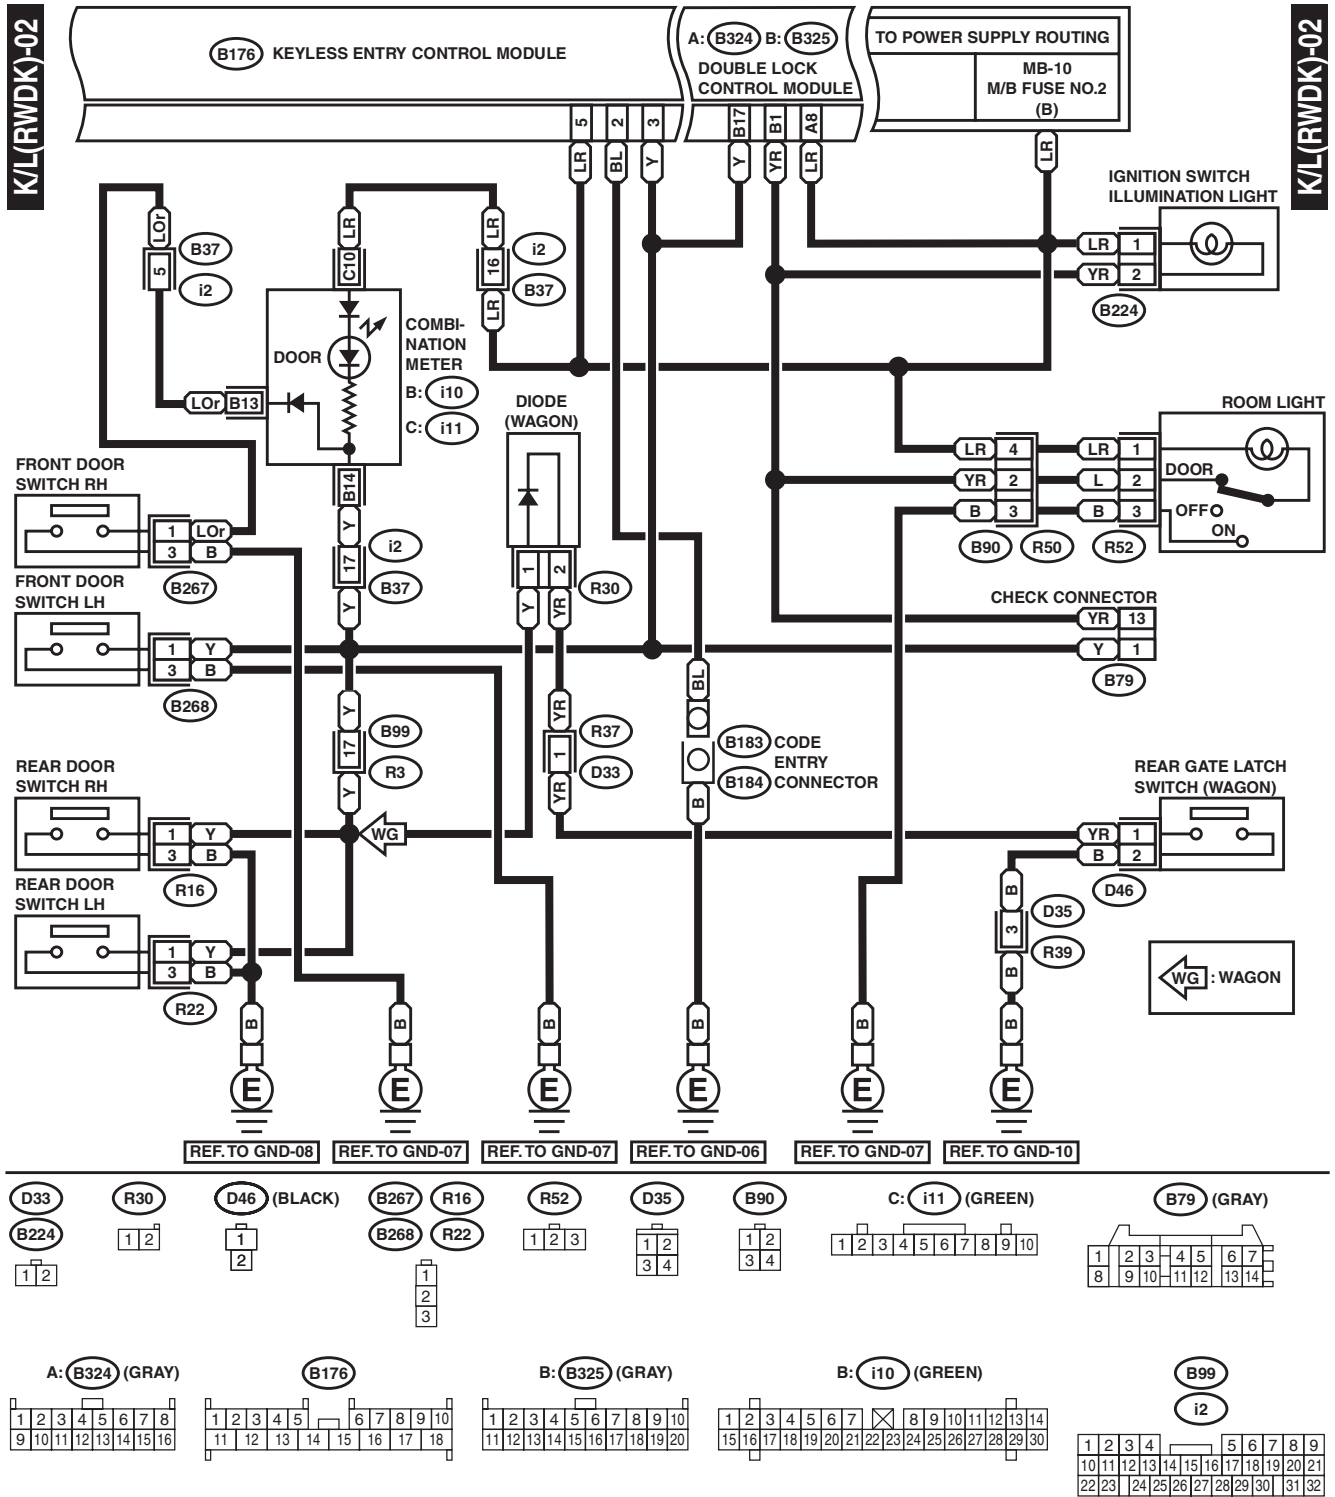

WI-04566

Keyless Entry System

WIRING SYSTEM

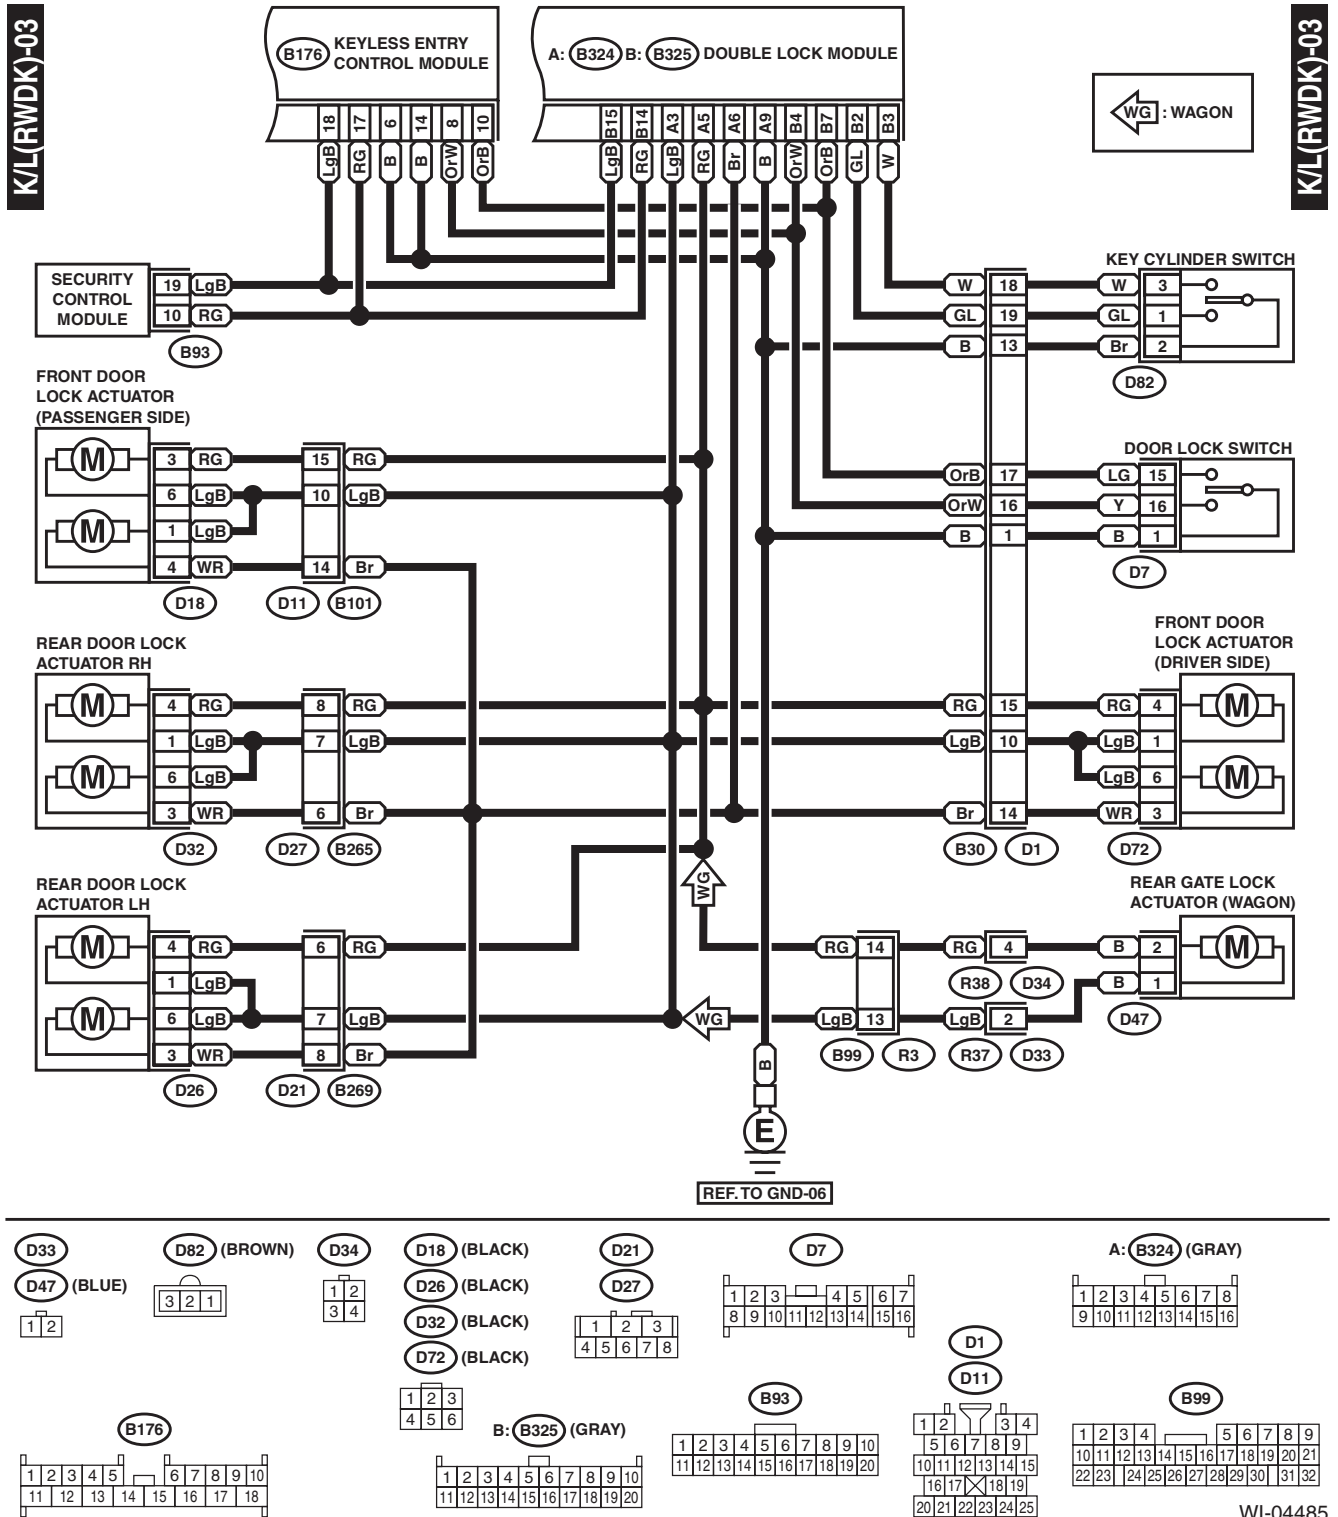


WI-04485

Back-up Light System

WIRING SYSTEM

22.Back-up Light System

A: WIRING DIAGRAM

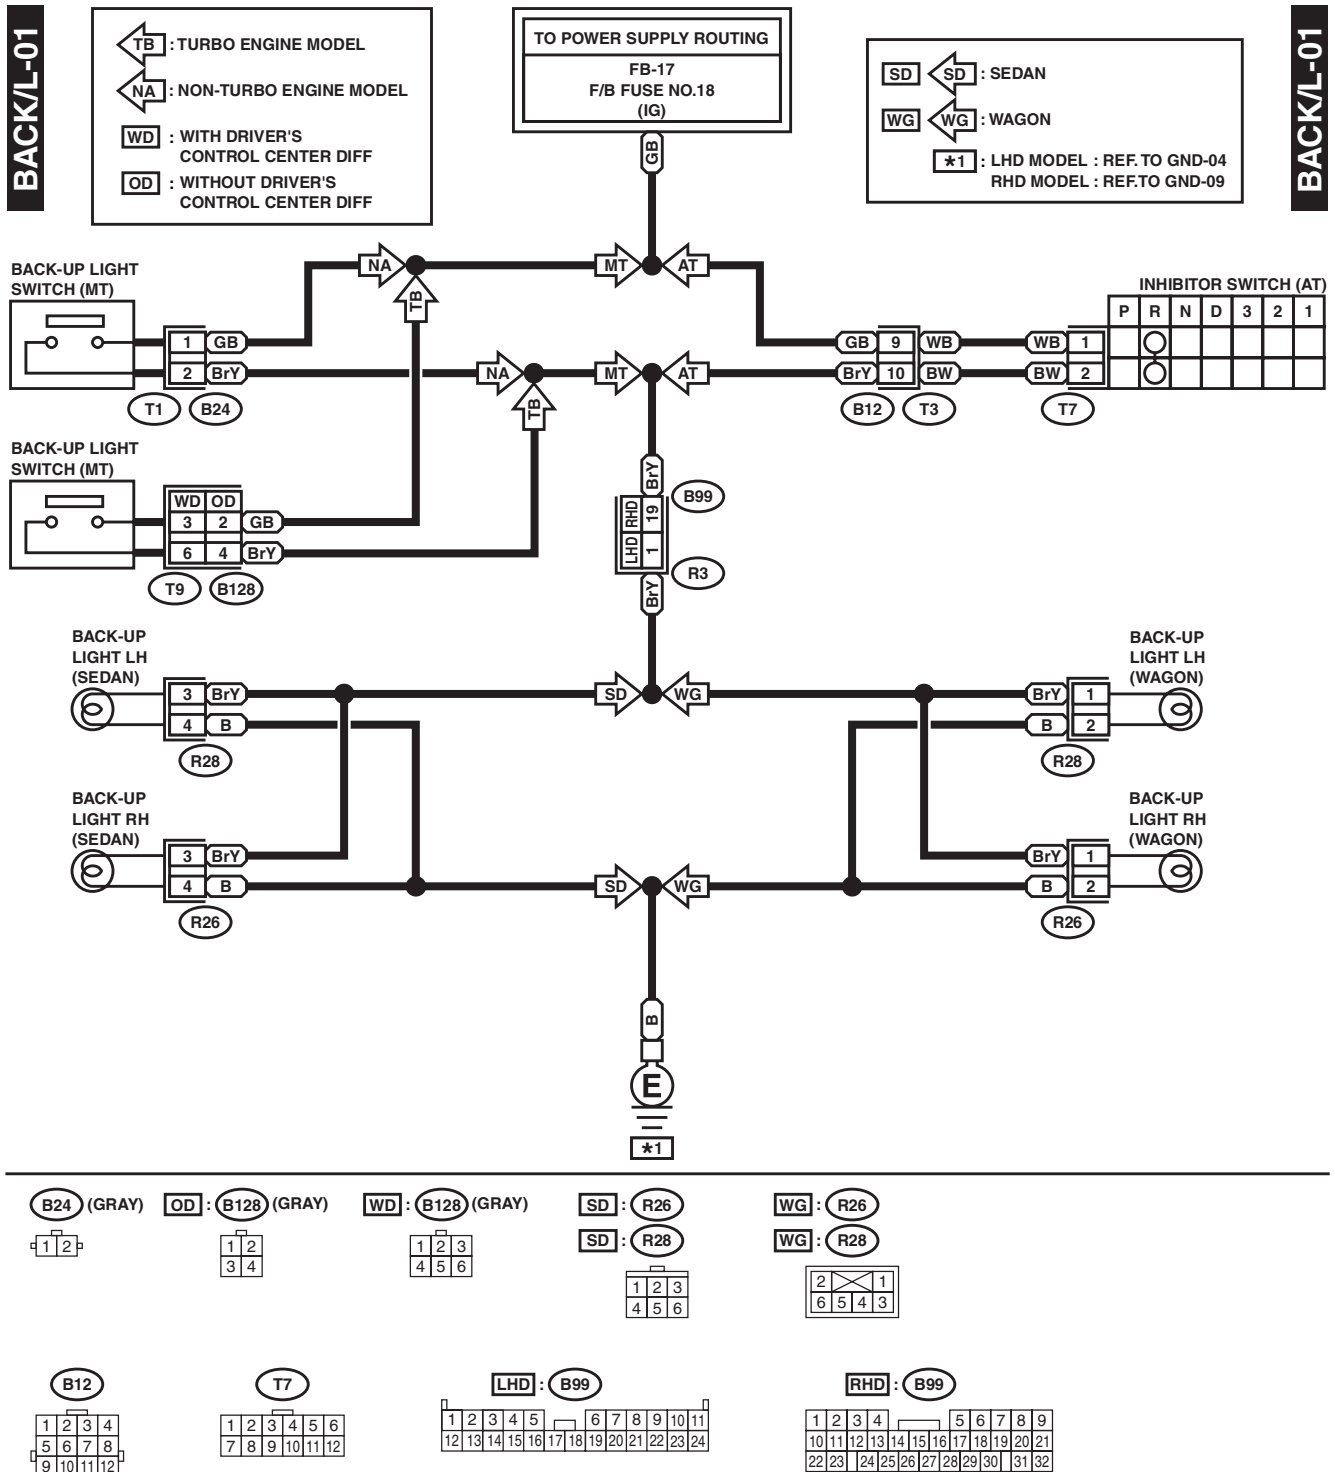

WI-04486


Clearance Light and Illumination Light System

WIRING SYSTEM


23. Clearance Light and Illumination Light System

A: WIRING DIAGRAM

1. LHD MODEL

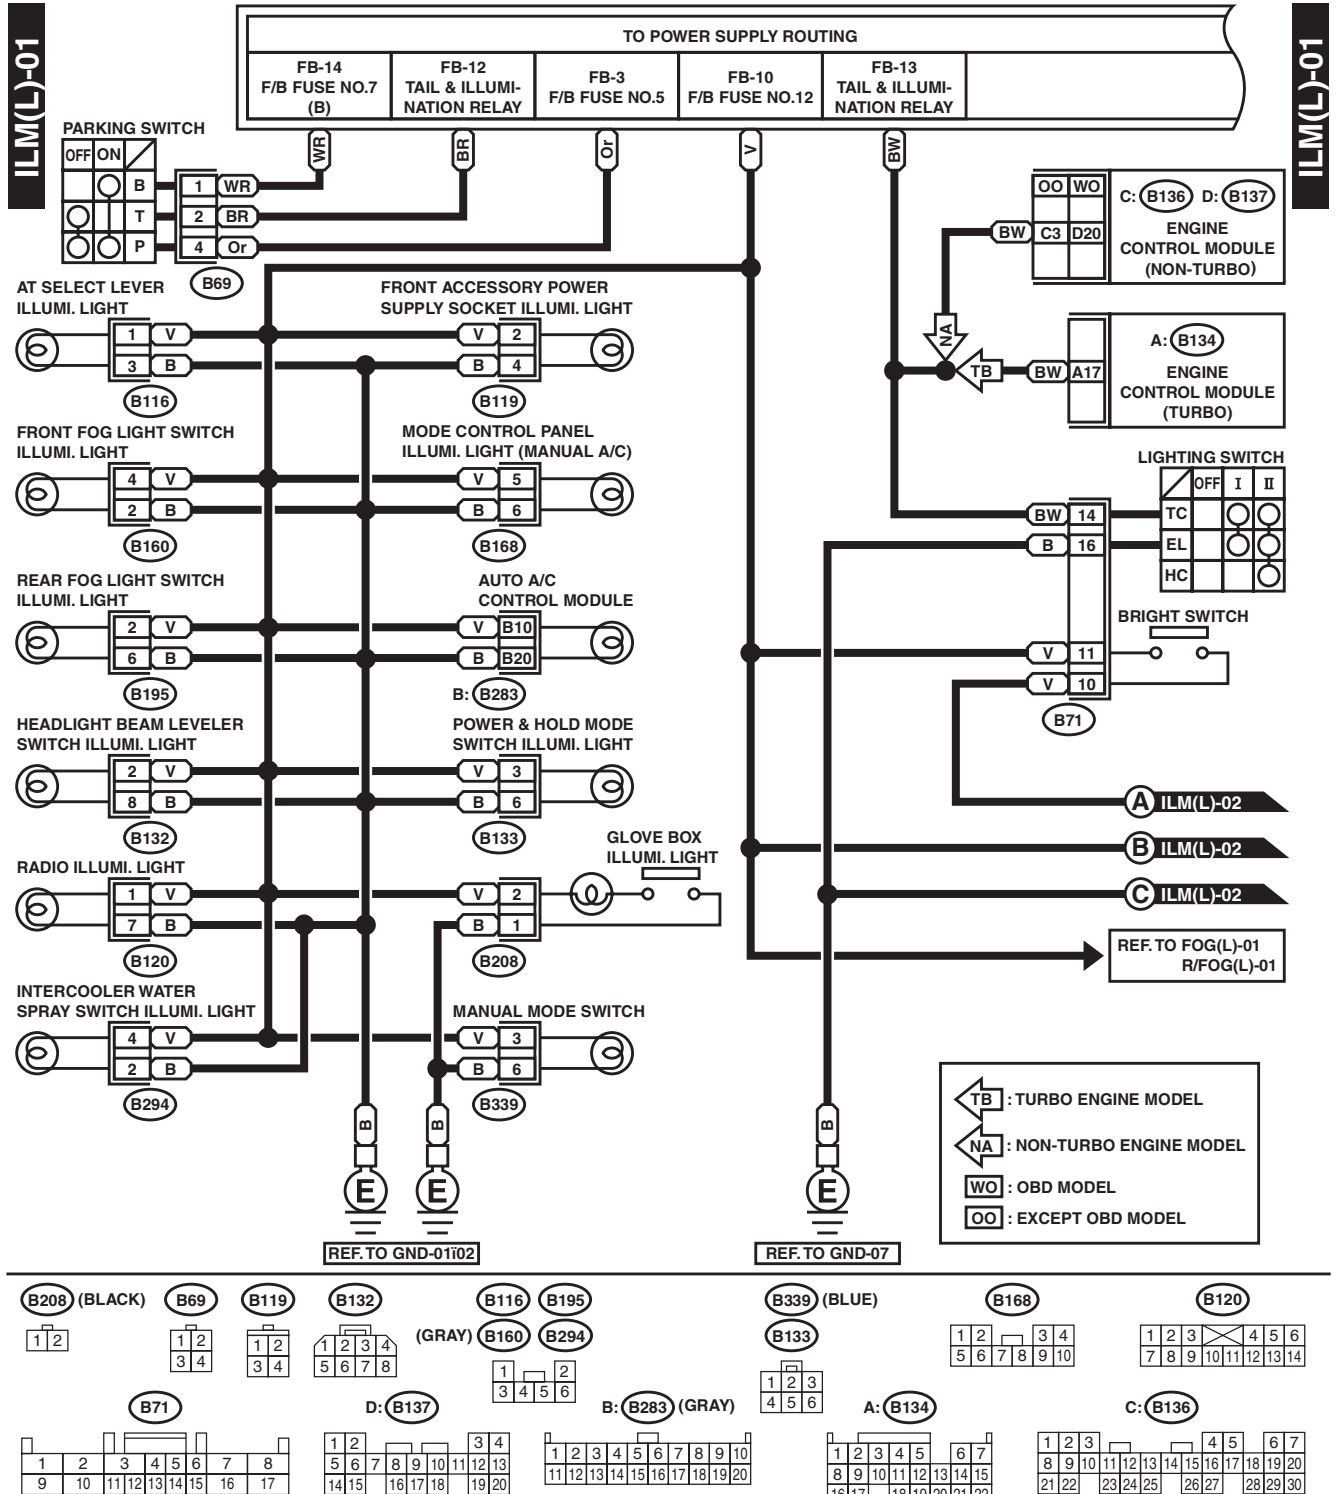


WI-04487

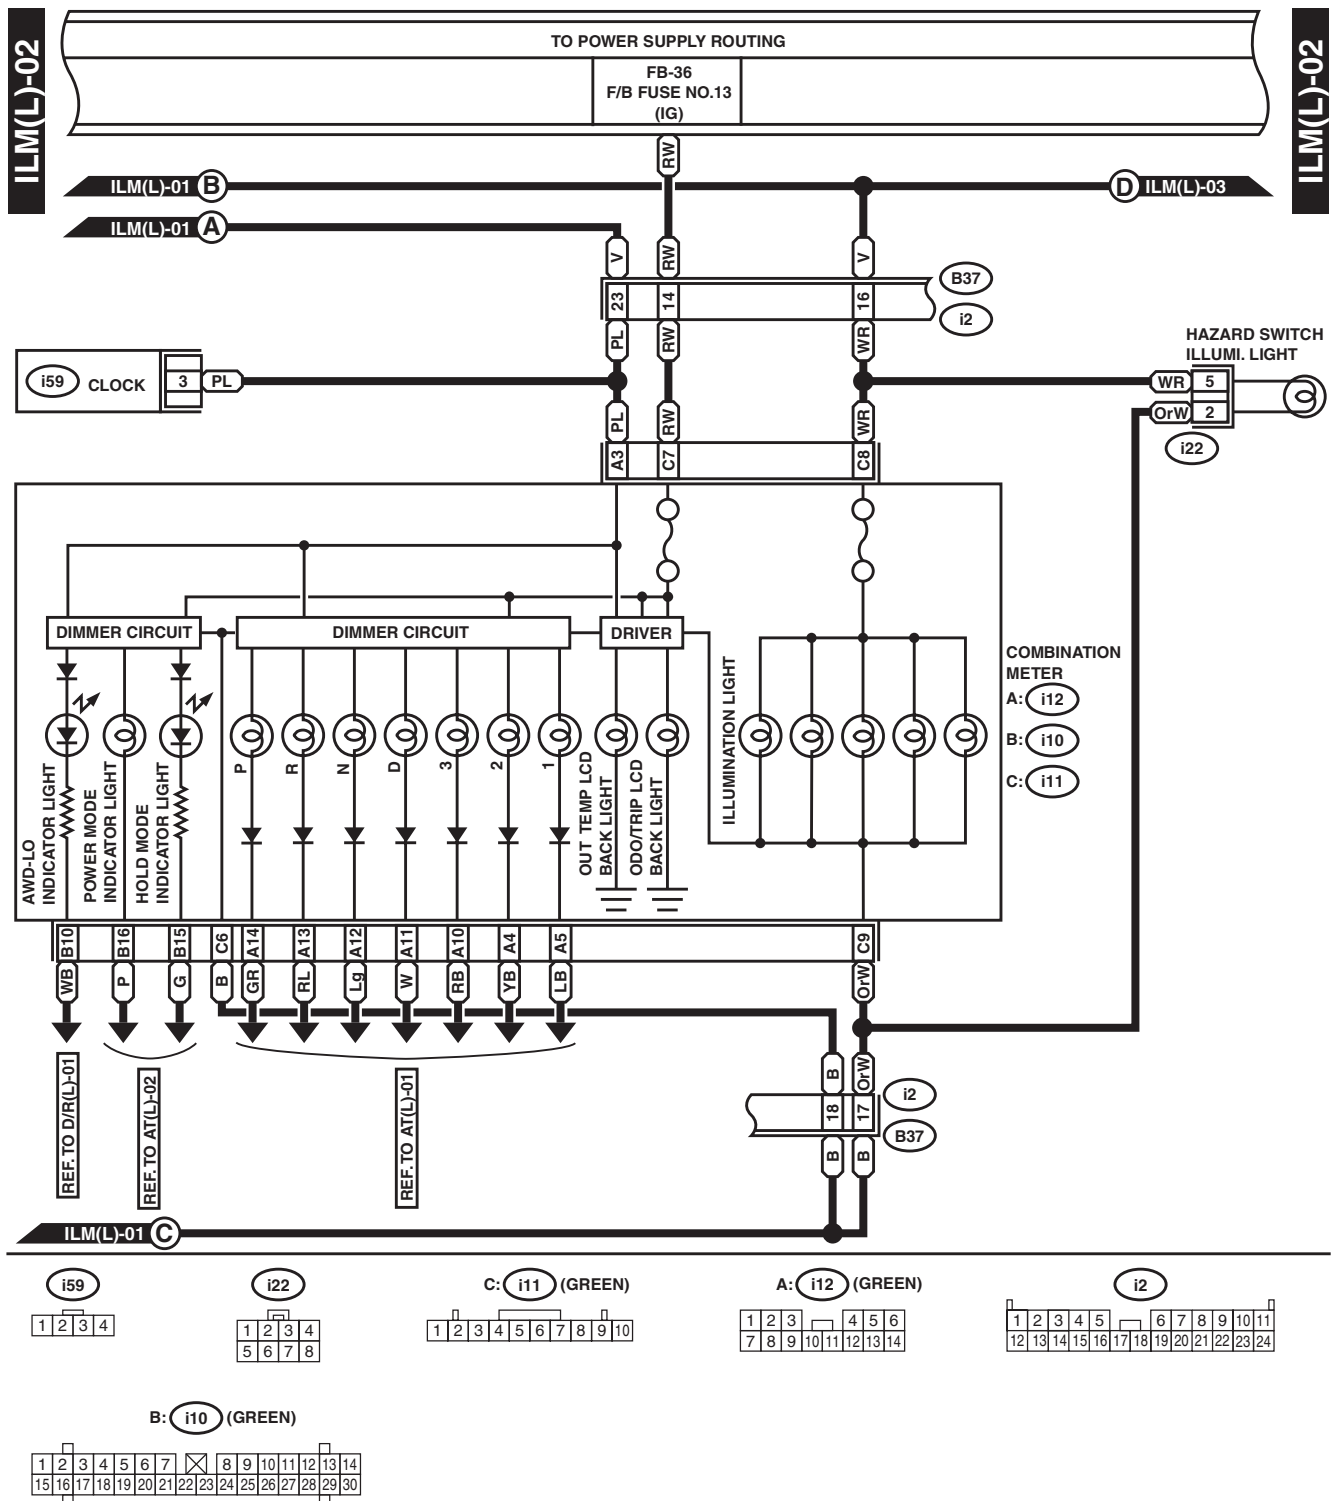

WI-04488

WIRING SYSTEM

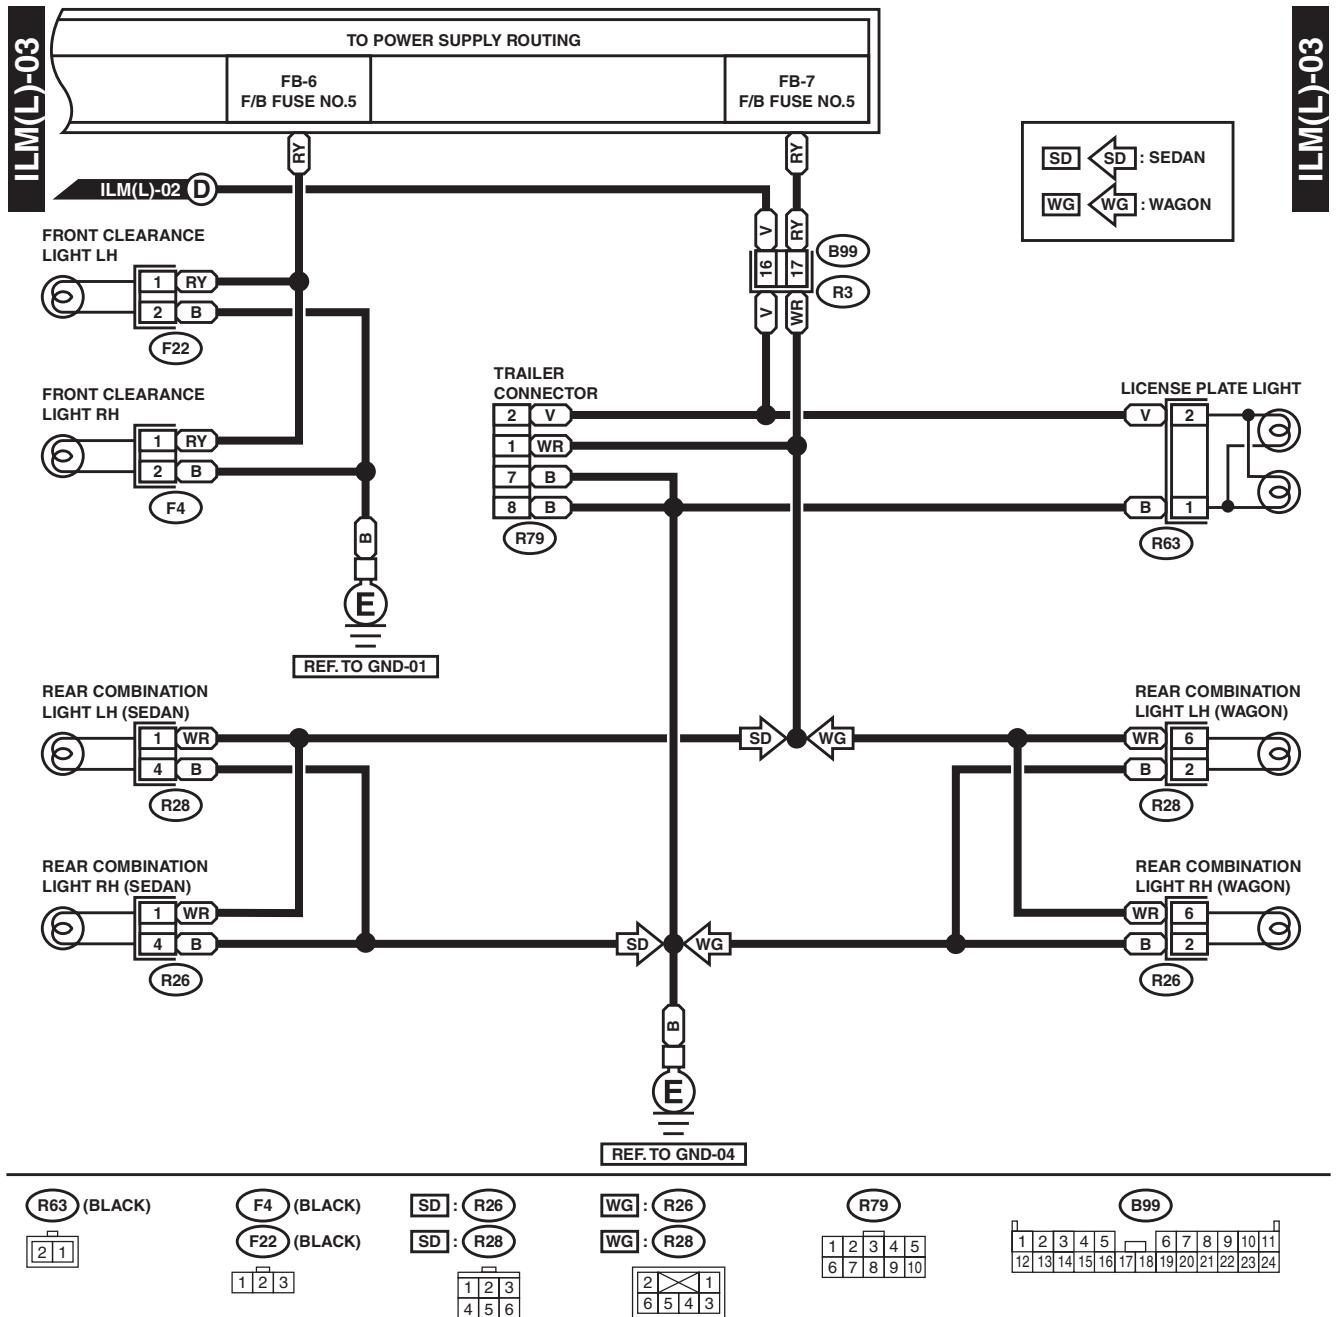


WI-04489

Clearance Light and Illumination Light System

WIRING SYSTEM


2. RHD WITHOUT ILLUMINATION CONTROL MODEL

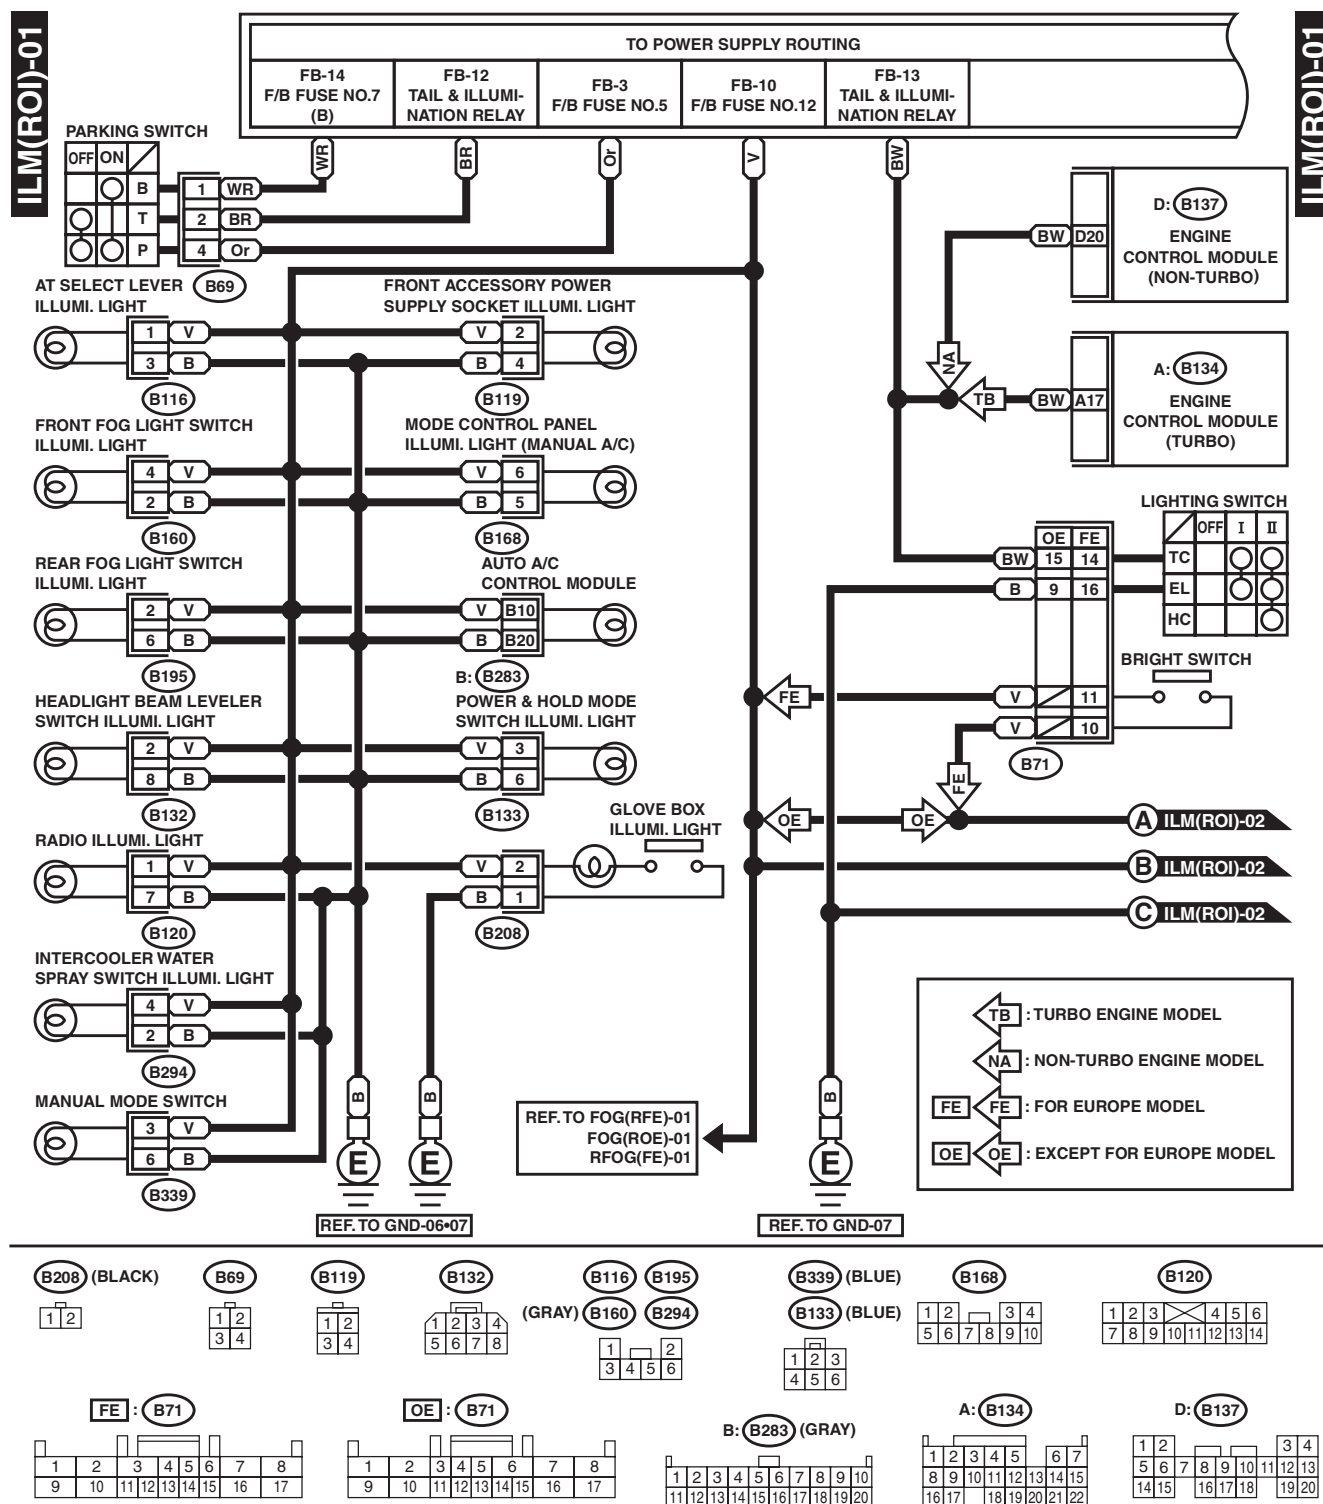

WI-04490

Clearance Light and Illumination Light System


WIRING SYSTEM

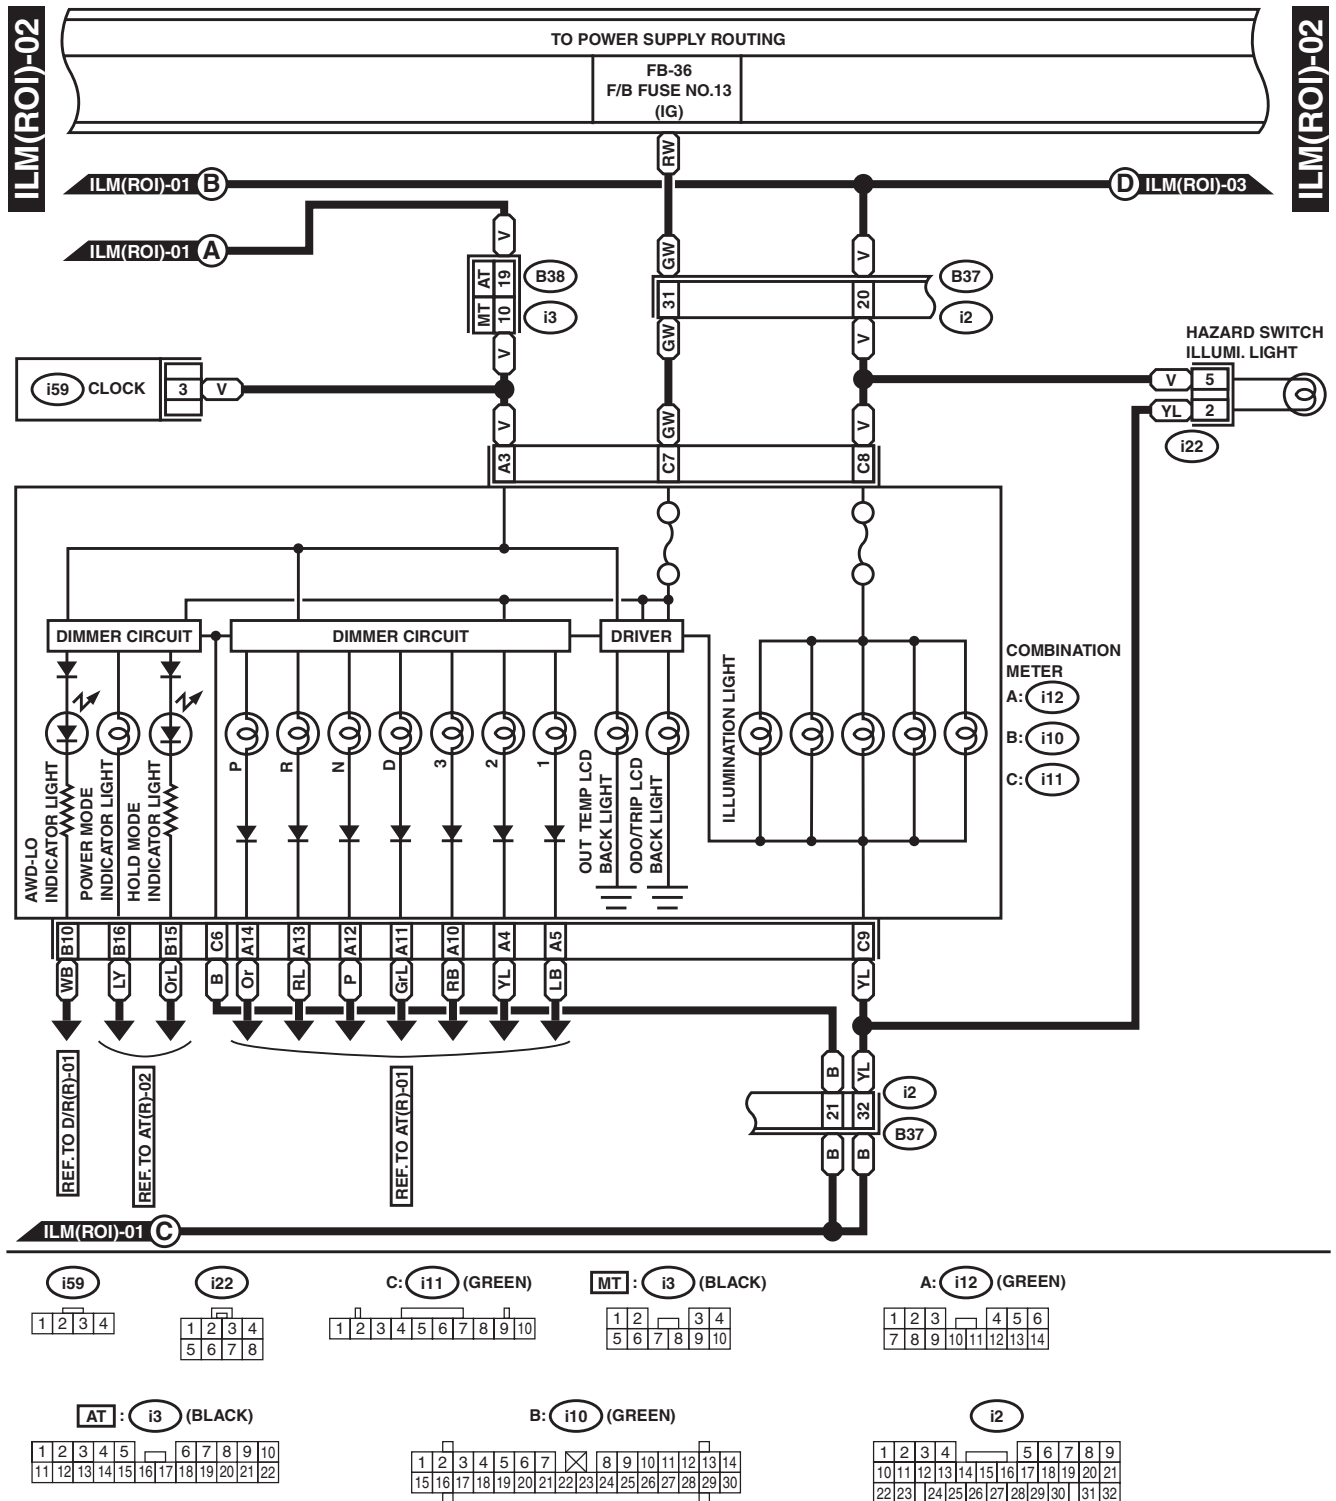

WI-04491

Clearance Light and Illumination Light System

WIRING SYSTEM

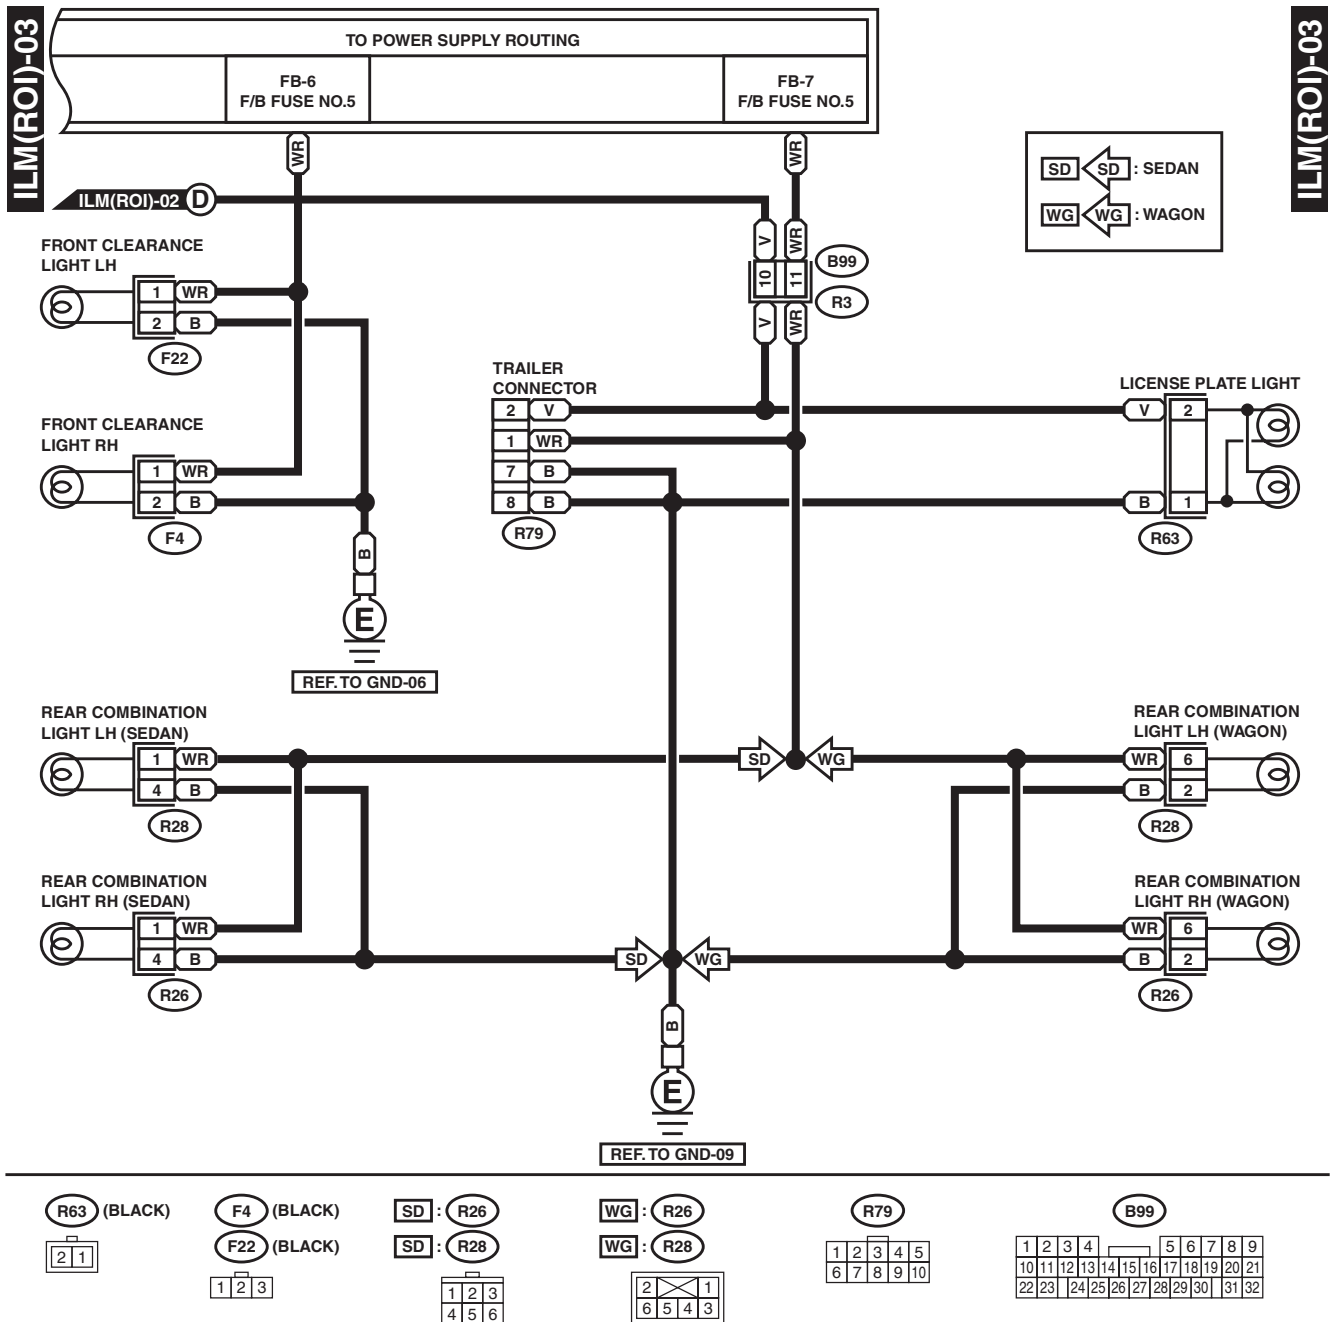


WI-04492

Clearance Light and Illumination Light System

WIRING SYSTEM


3. RHD WITH ILLUMINATION CONTROL EXCEPT FOR AUSTRALIA STi MODEL

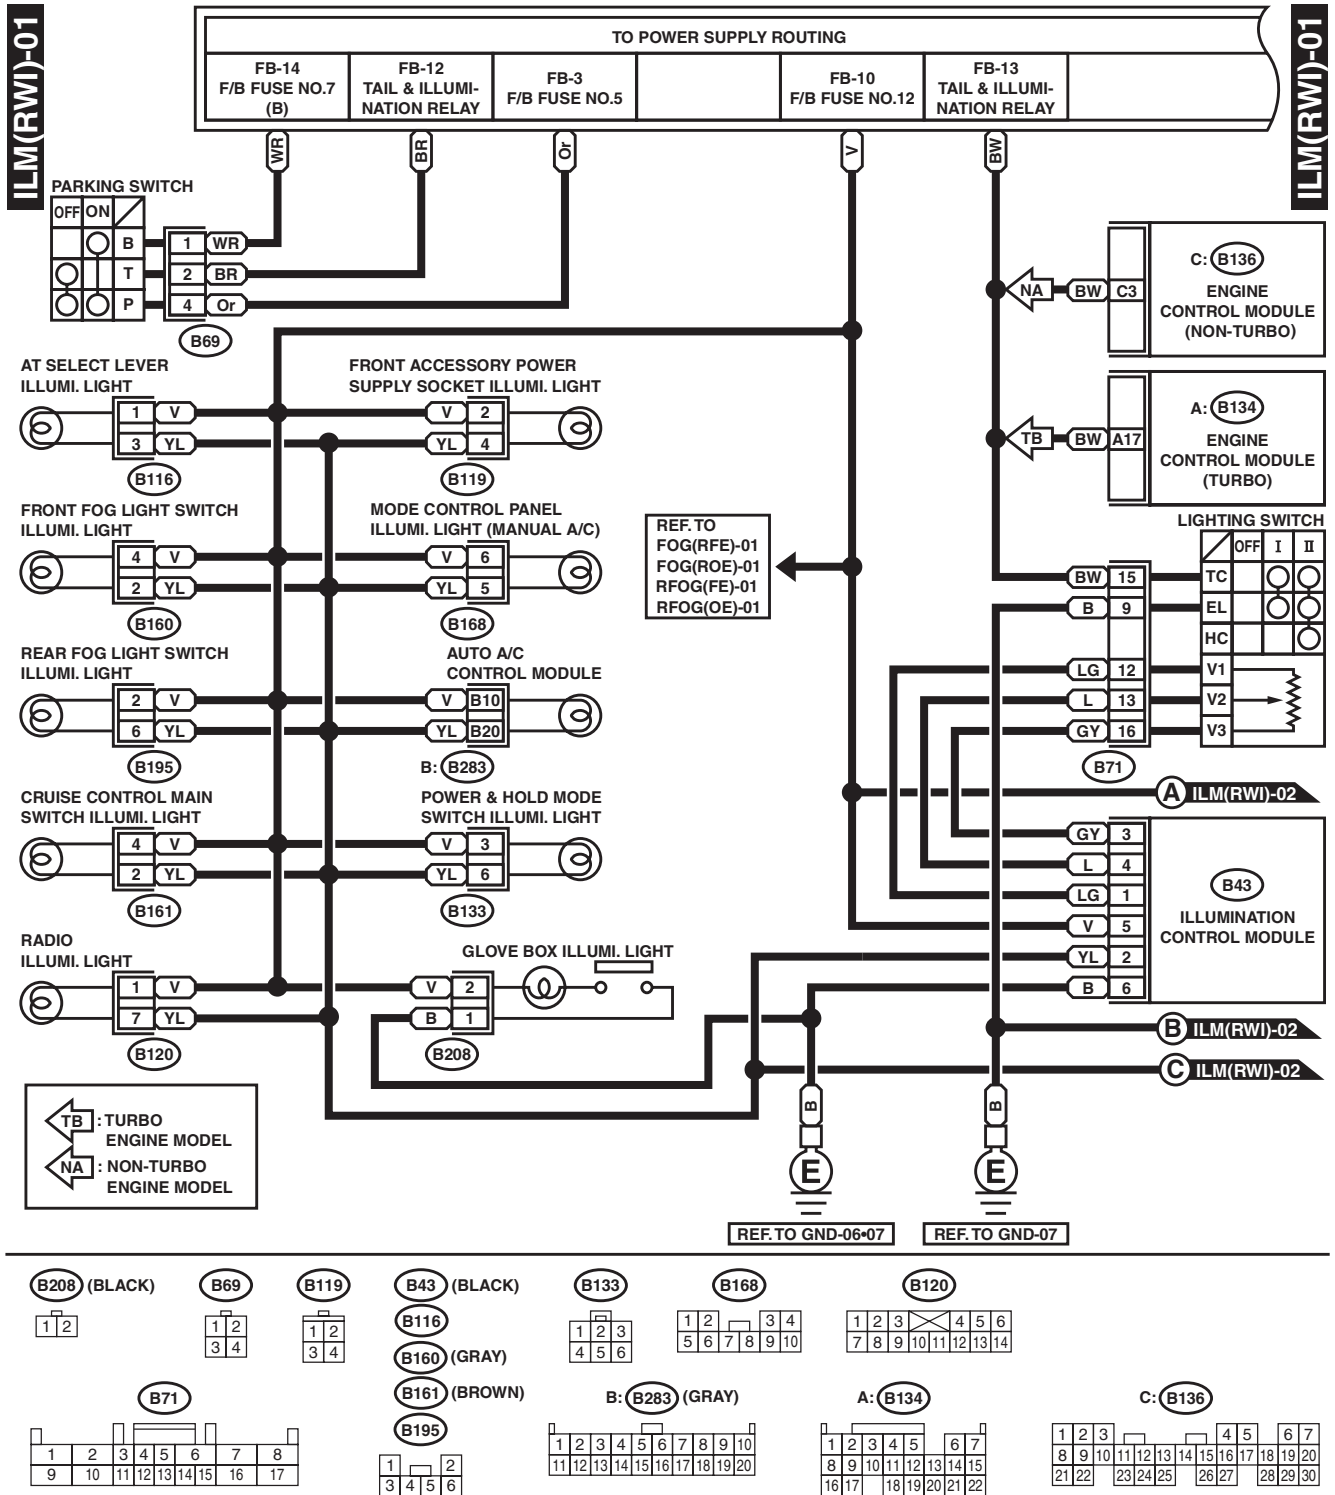

WI-04493

Clearance Light and Illumination Light System

WIRING SYSTEM

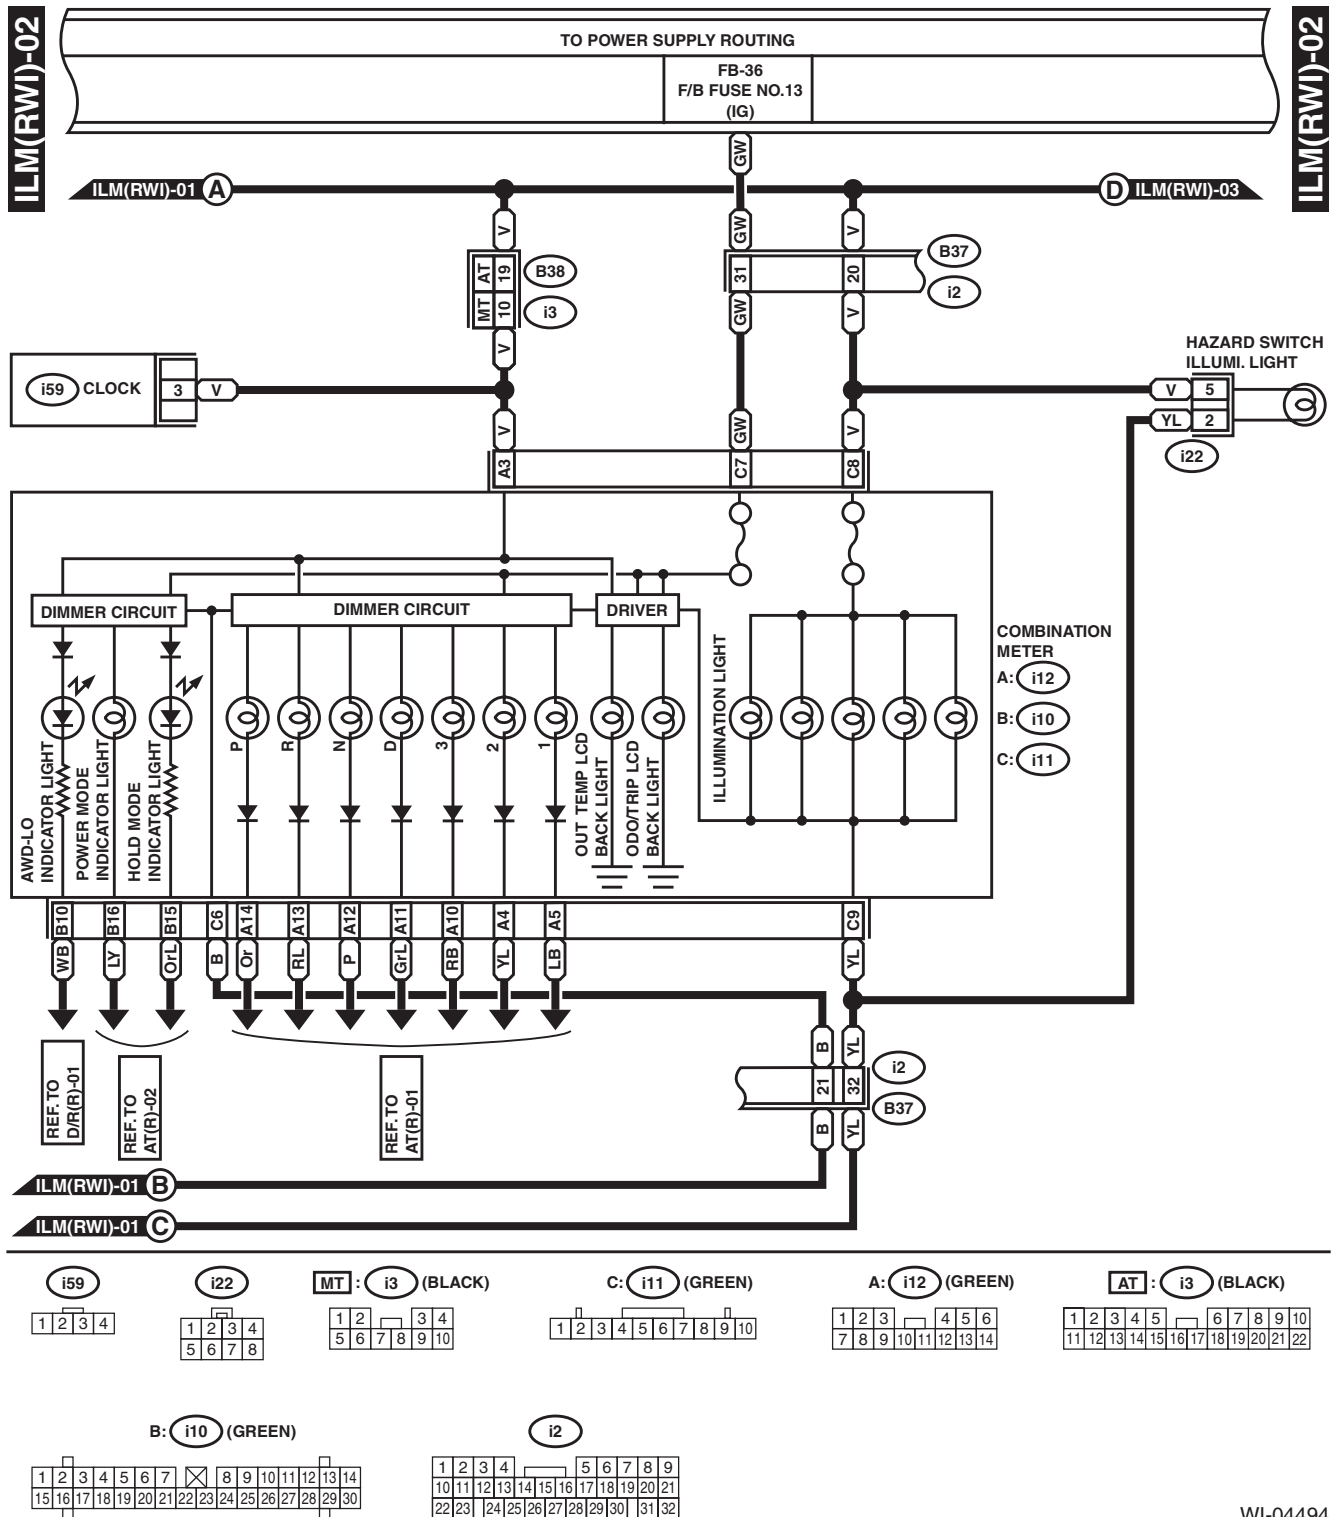


WI-04494

Clearance Light and Illumination Light System

WIRING SYSTEM

ILM(RWI)-03

ILM(RWI)-03

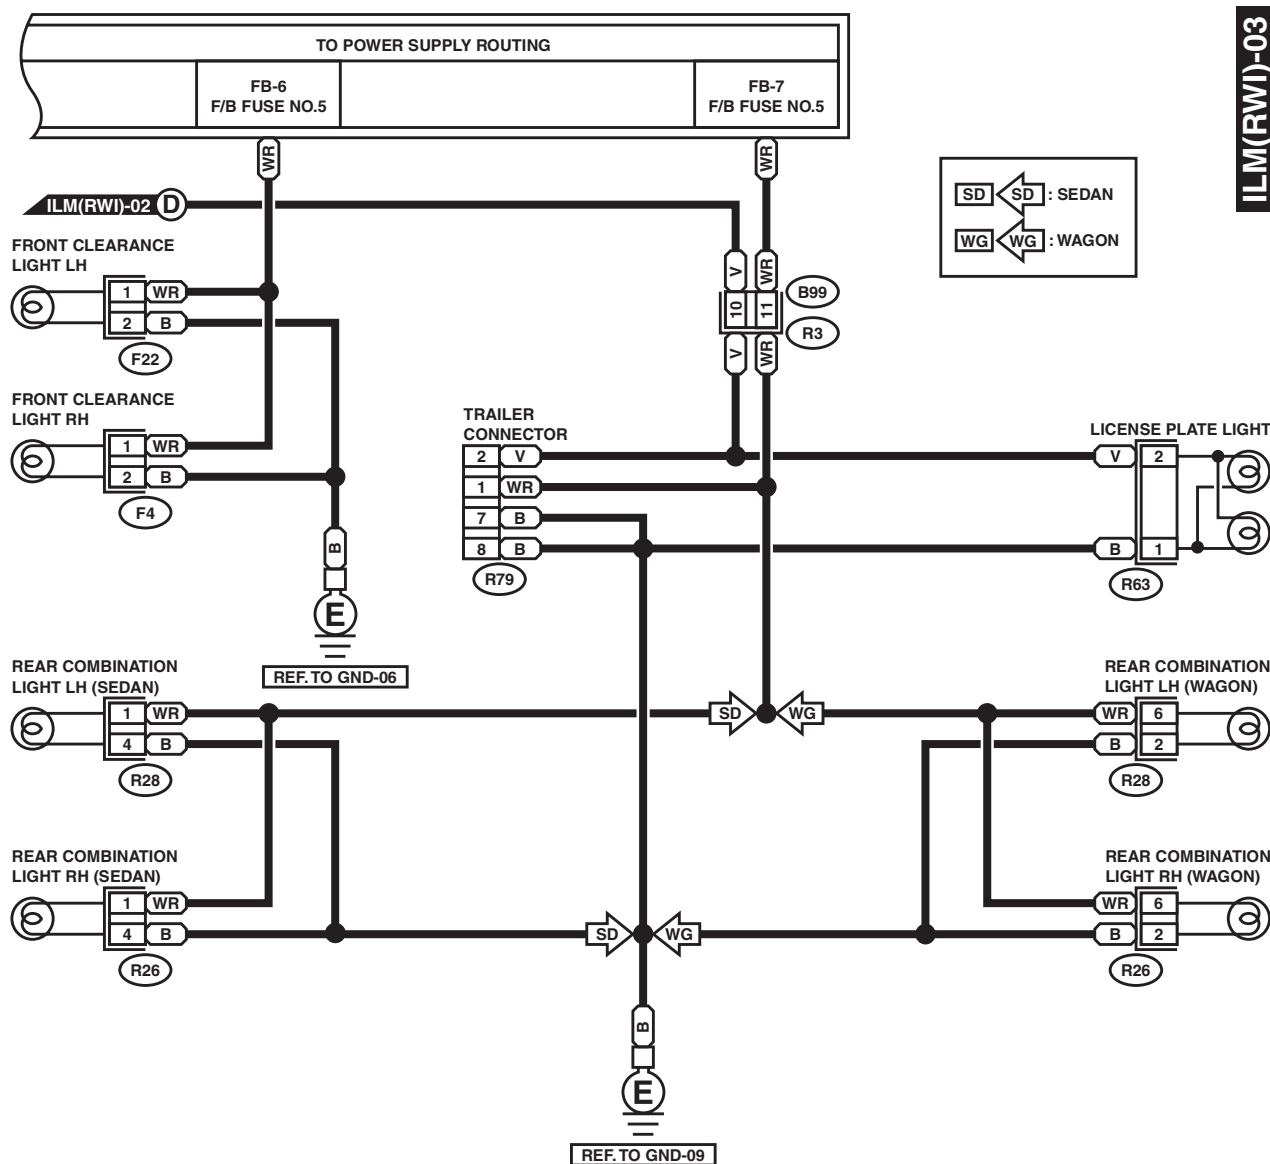

F4 (BLACK)

F22 (BLACK)

1	2	3
---	---	---

R63 (BLACK)

2	1
---	---

SD : R26

SD : R28

1	2	3
4	5	6

WG : R26 (BLACK)

WG : R28 (BLACK)

2	1
6	5
4	3

R79


1	2	3	4	5
6	7	8	9	10

B99

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21	22	23	24	25	26	27
28	29	30	31	32				

WI-04495


4. RHD FOR AUSTRALIA STi MODEL

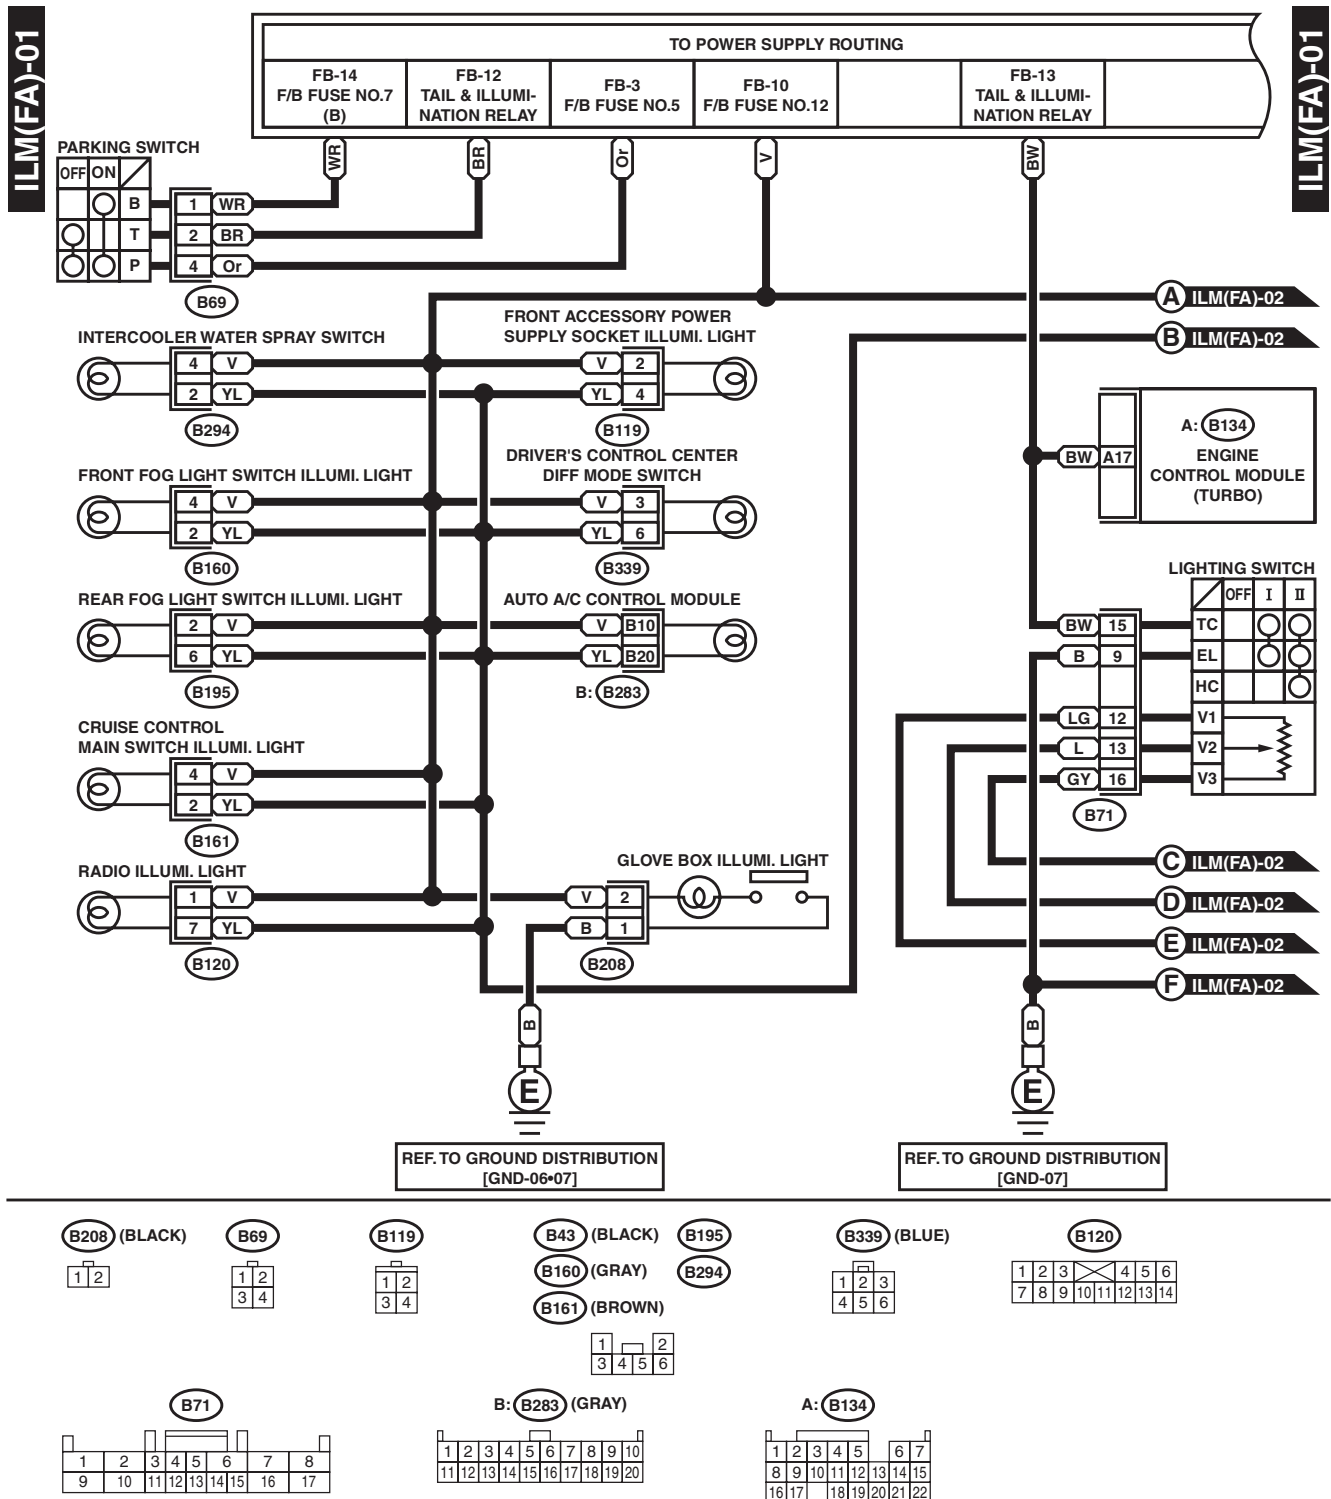

WI-04496

Clearance Light and Illumination Light System


WIRING SYSTEM

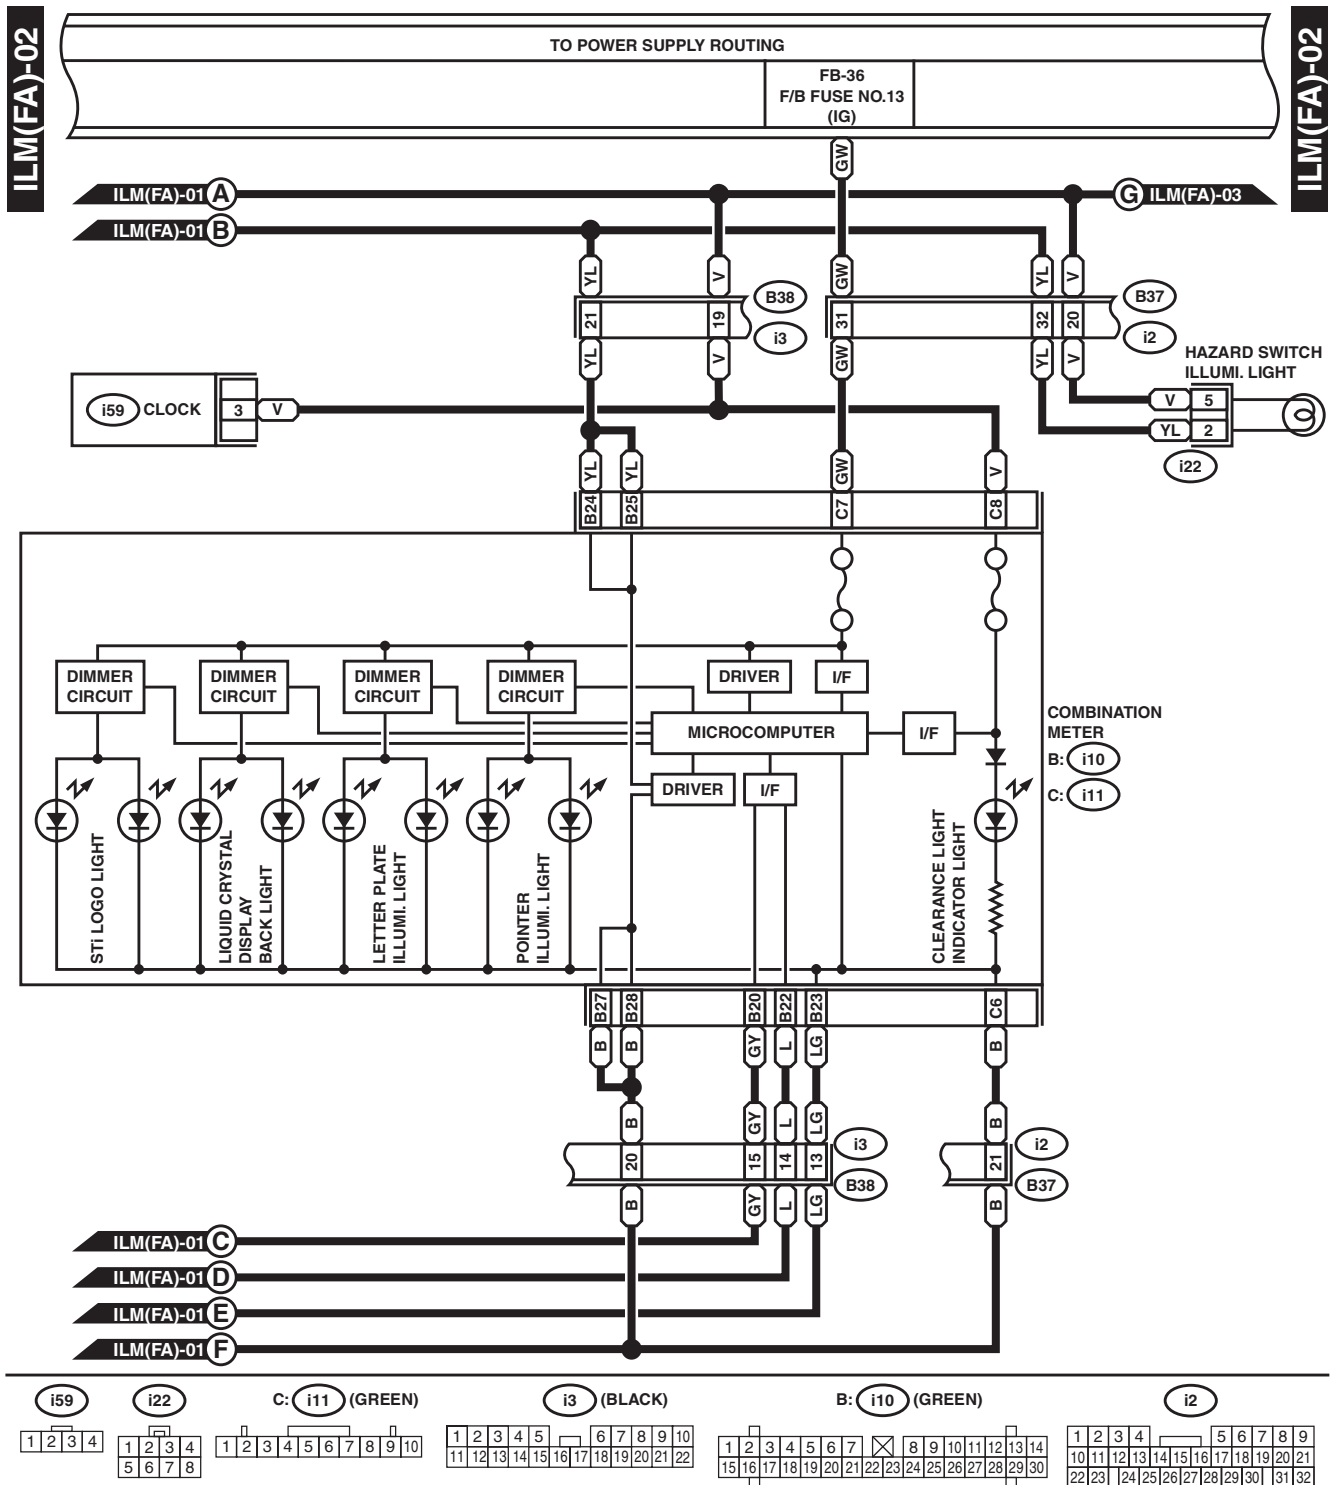

WI-04497

Clearance Light and Illumination Light System

WIRING SYSTEM

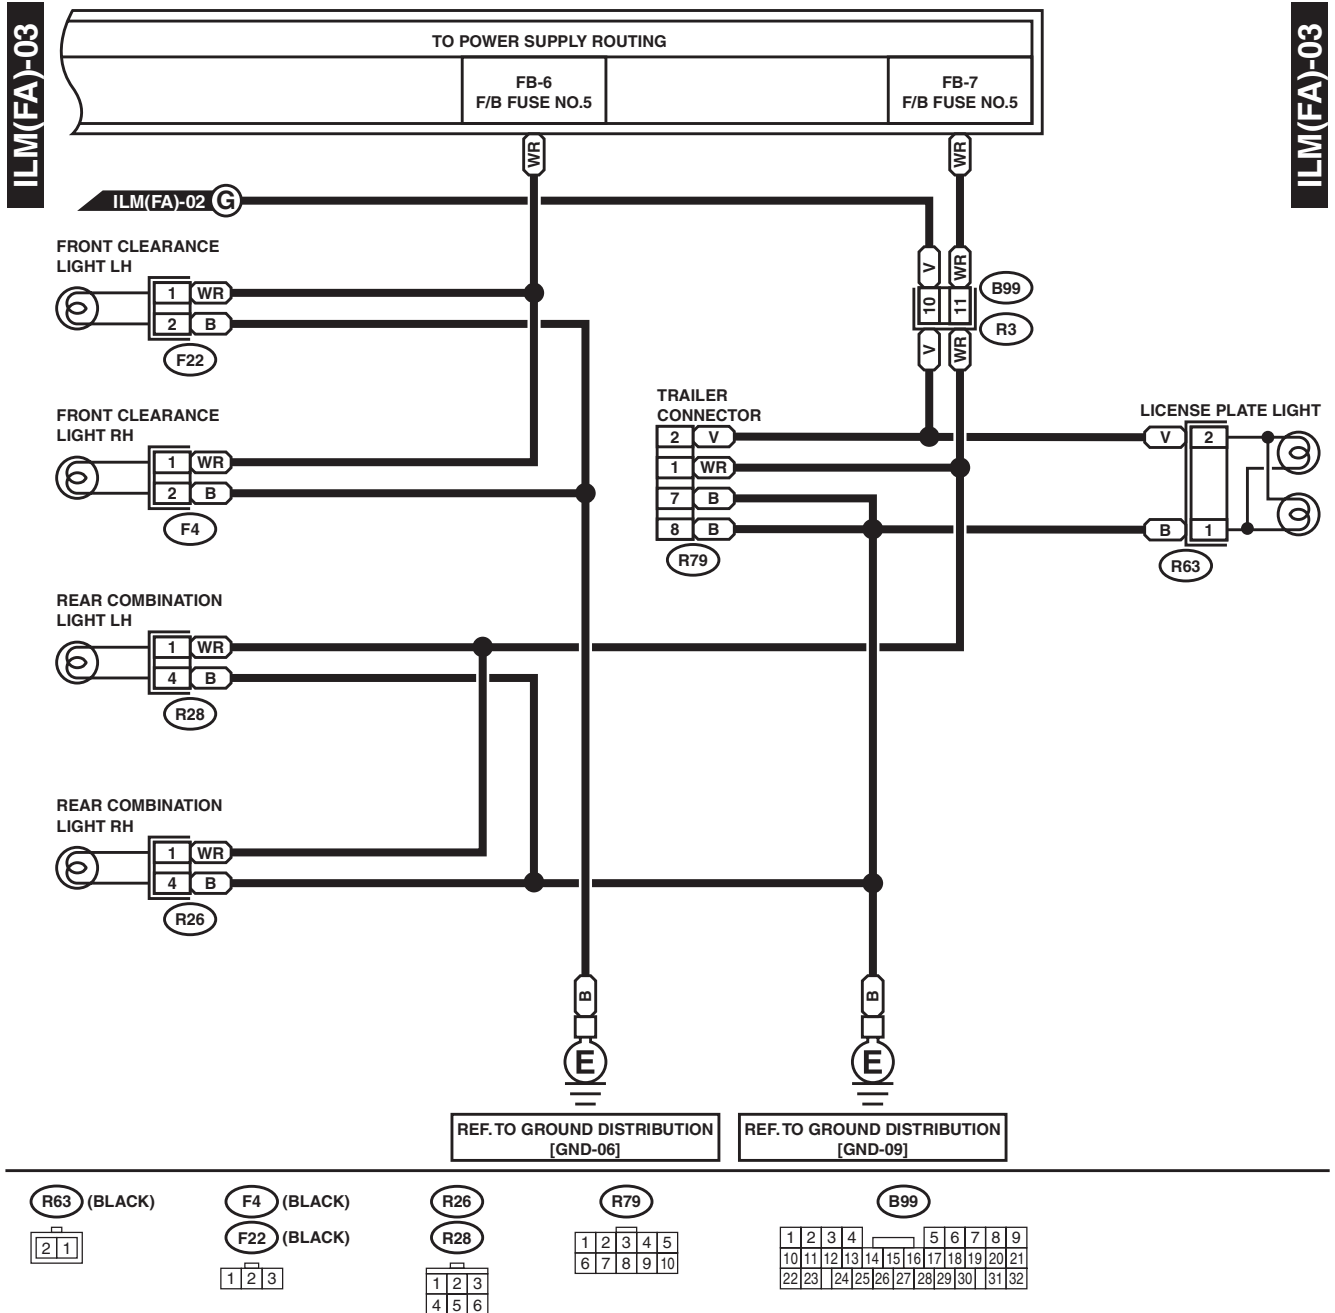

WI-04498


Front Fog Light System

WIRING SYSTEM

24.Front Fog Light System

A: WIRING DIAGRAM

1. LHD MODEL

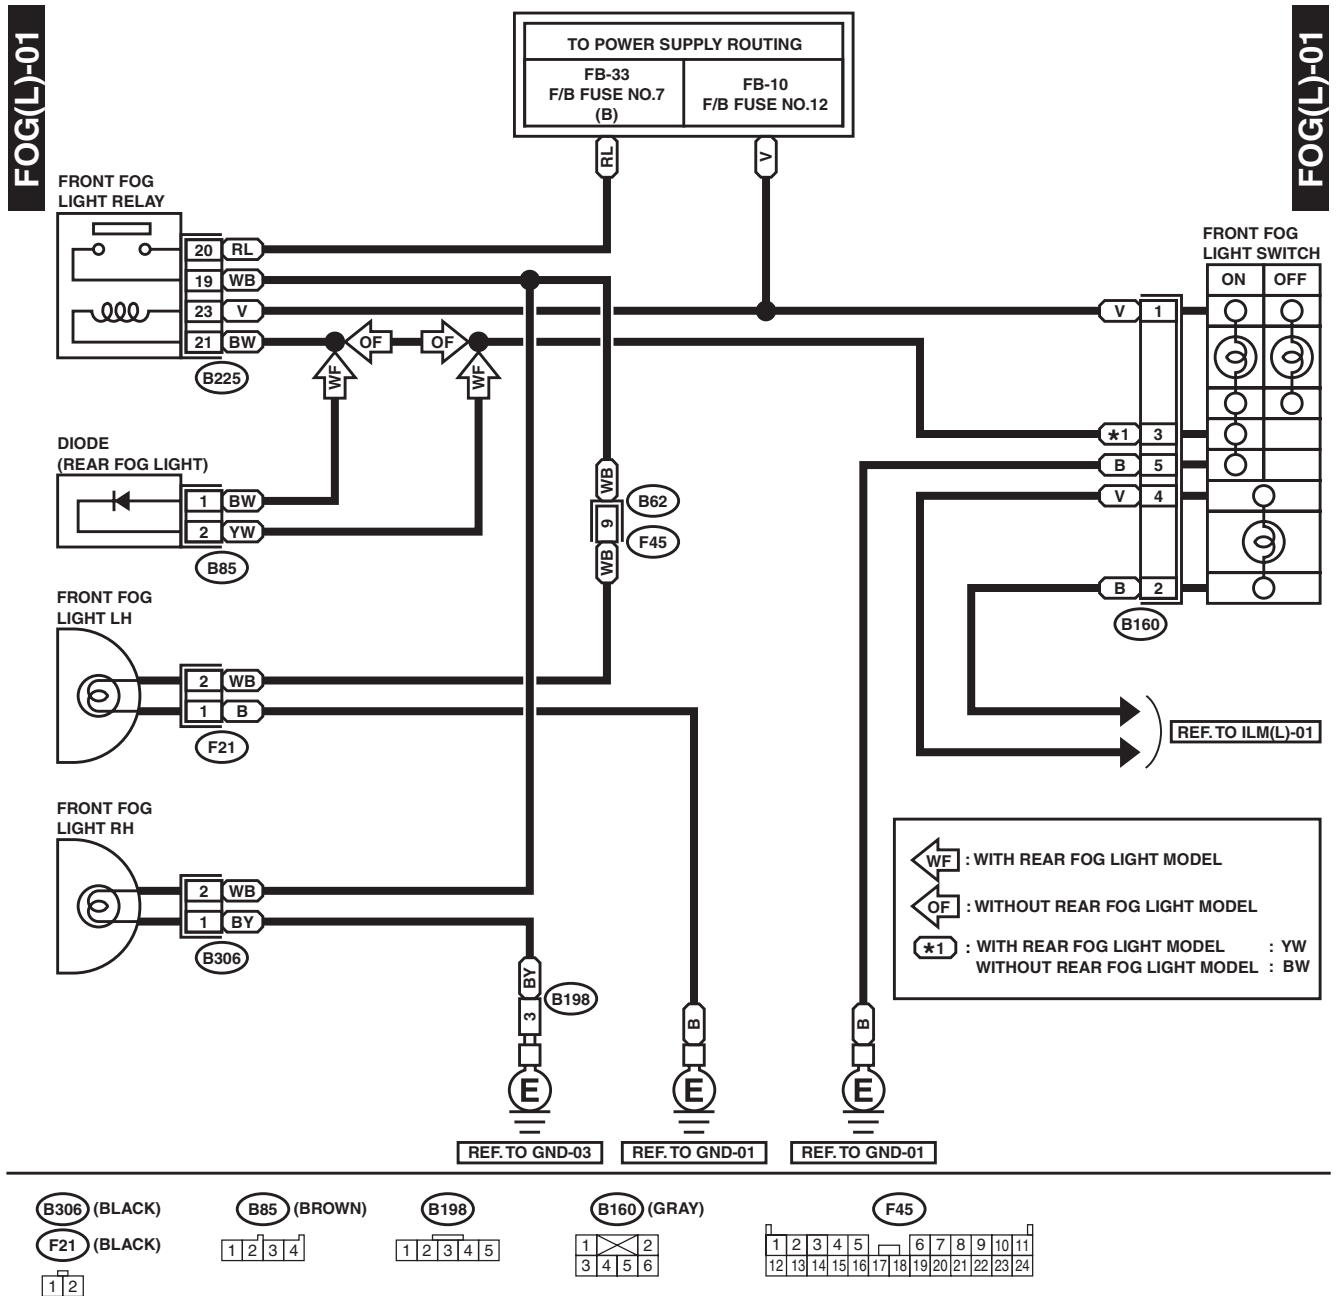


WI-04567

Front Fog Light System

WIRING SYSTEM

2. RHD FOR EUROPE MODEL

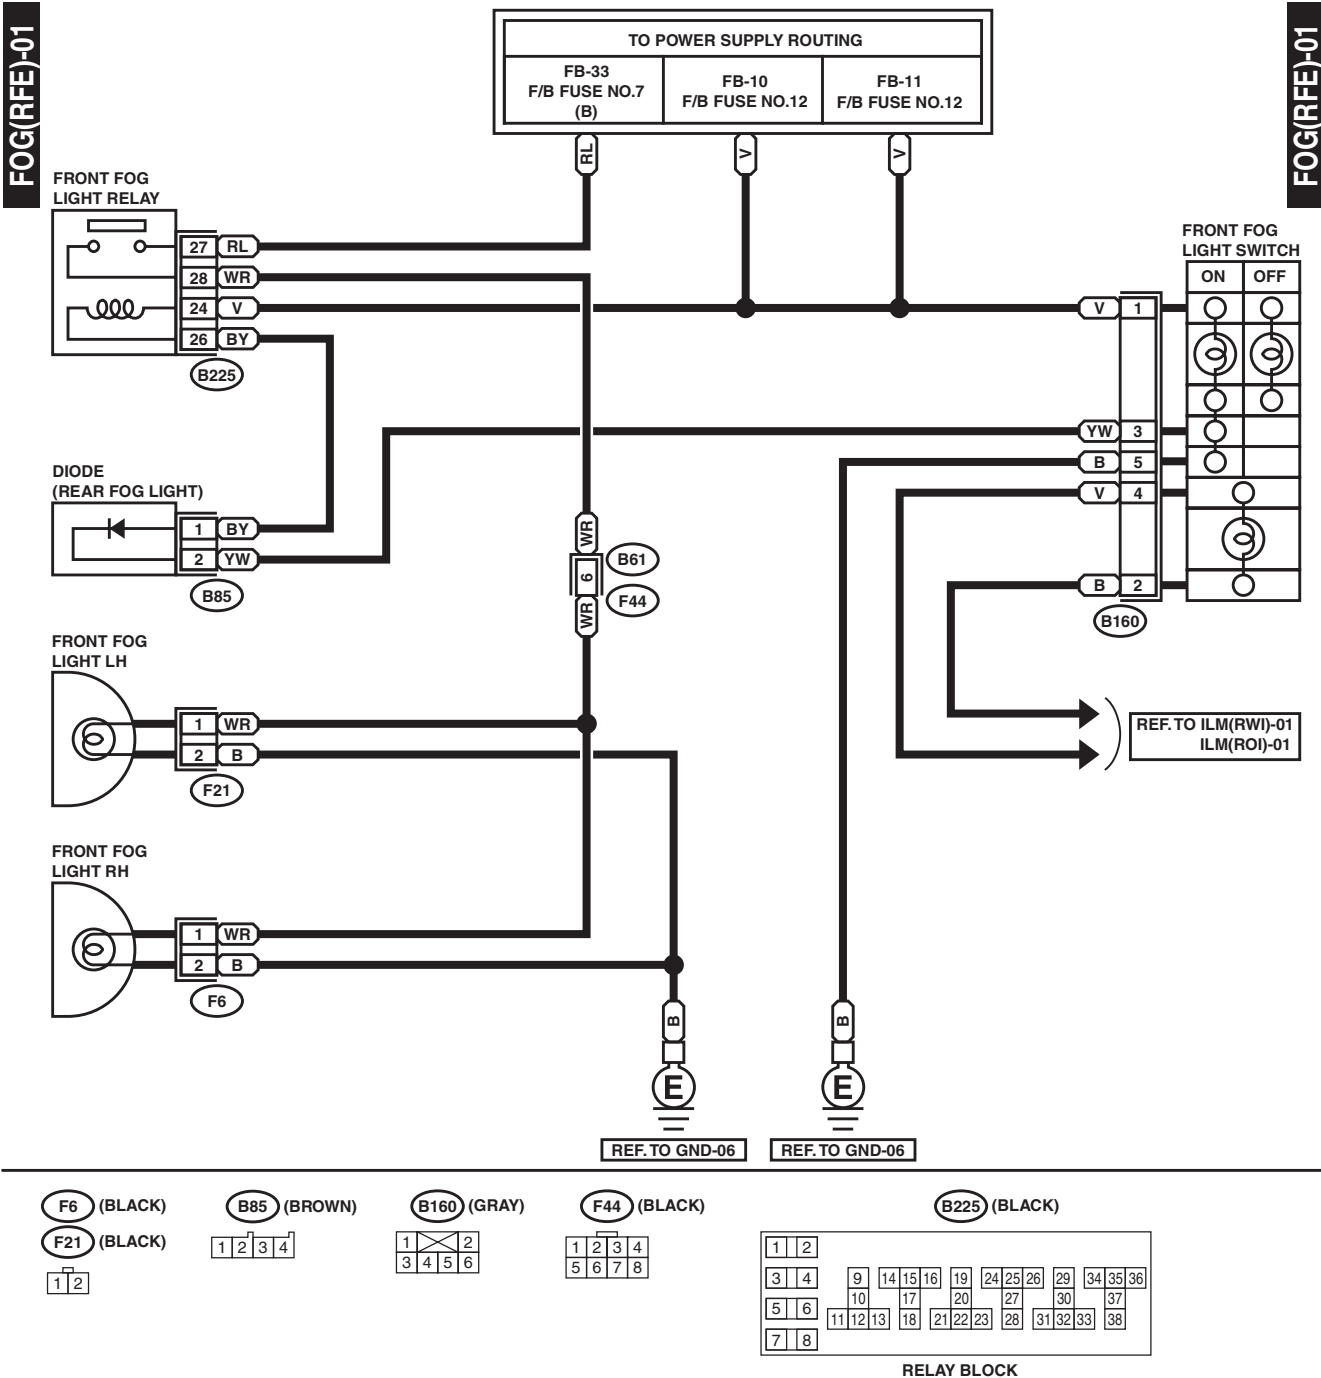


WI-04568

Front Fog Light System

WIRING SYSTEM

3. RHD EXCEPT FOR EUROPE MODEL

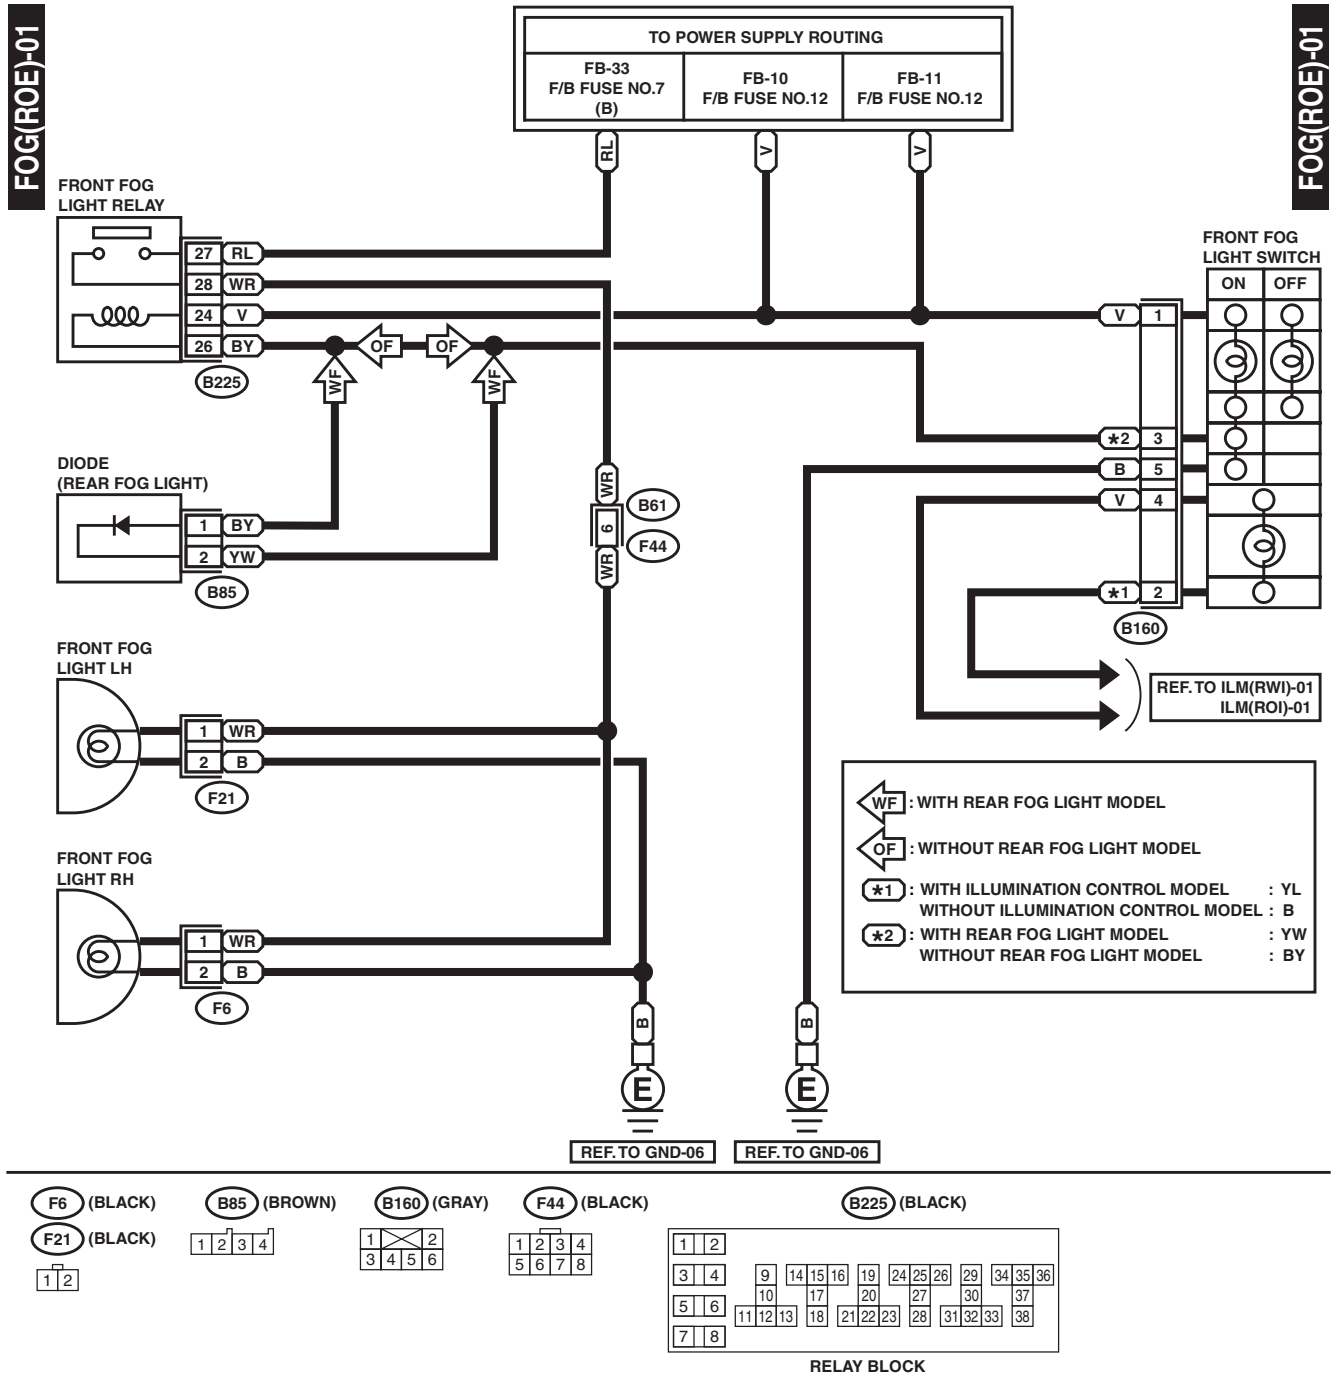

WI-04569


Headlight System

WIRING SYSTEM

25.Headlight System

A: WIRING DIAGRAM

1. LHD MODEL

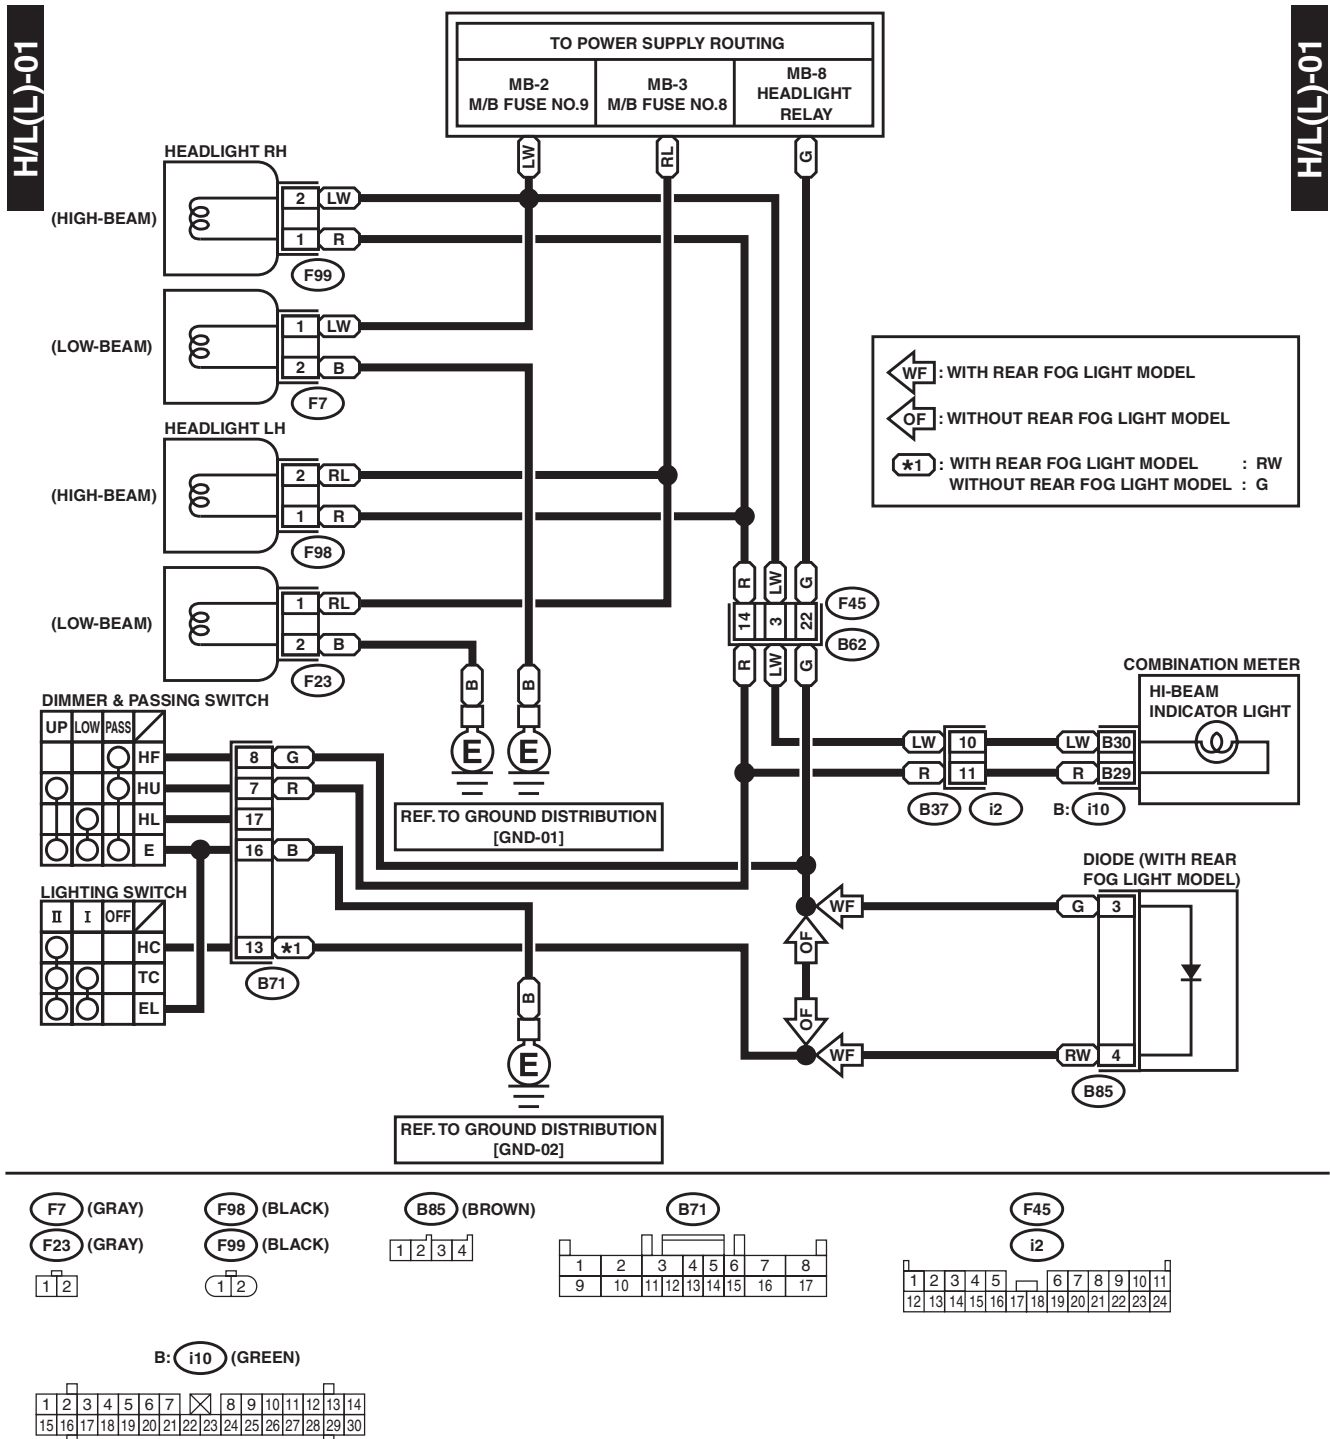


WI-04499

Headlight System

WIRING SYSTEM

2. RHD MODEL

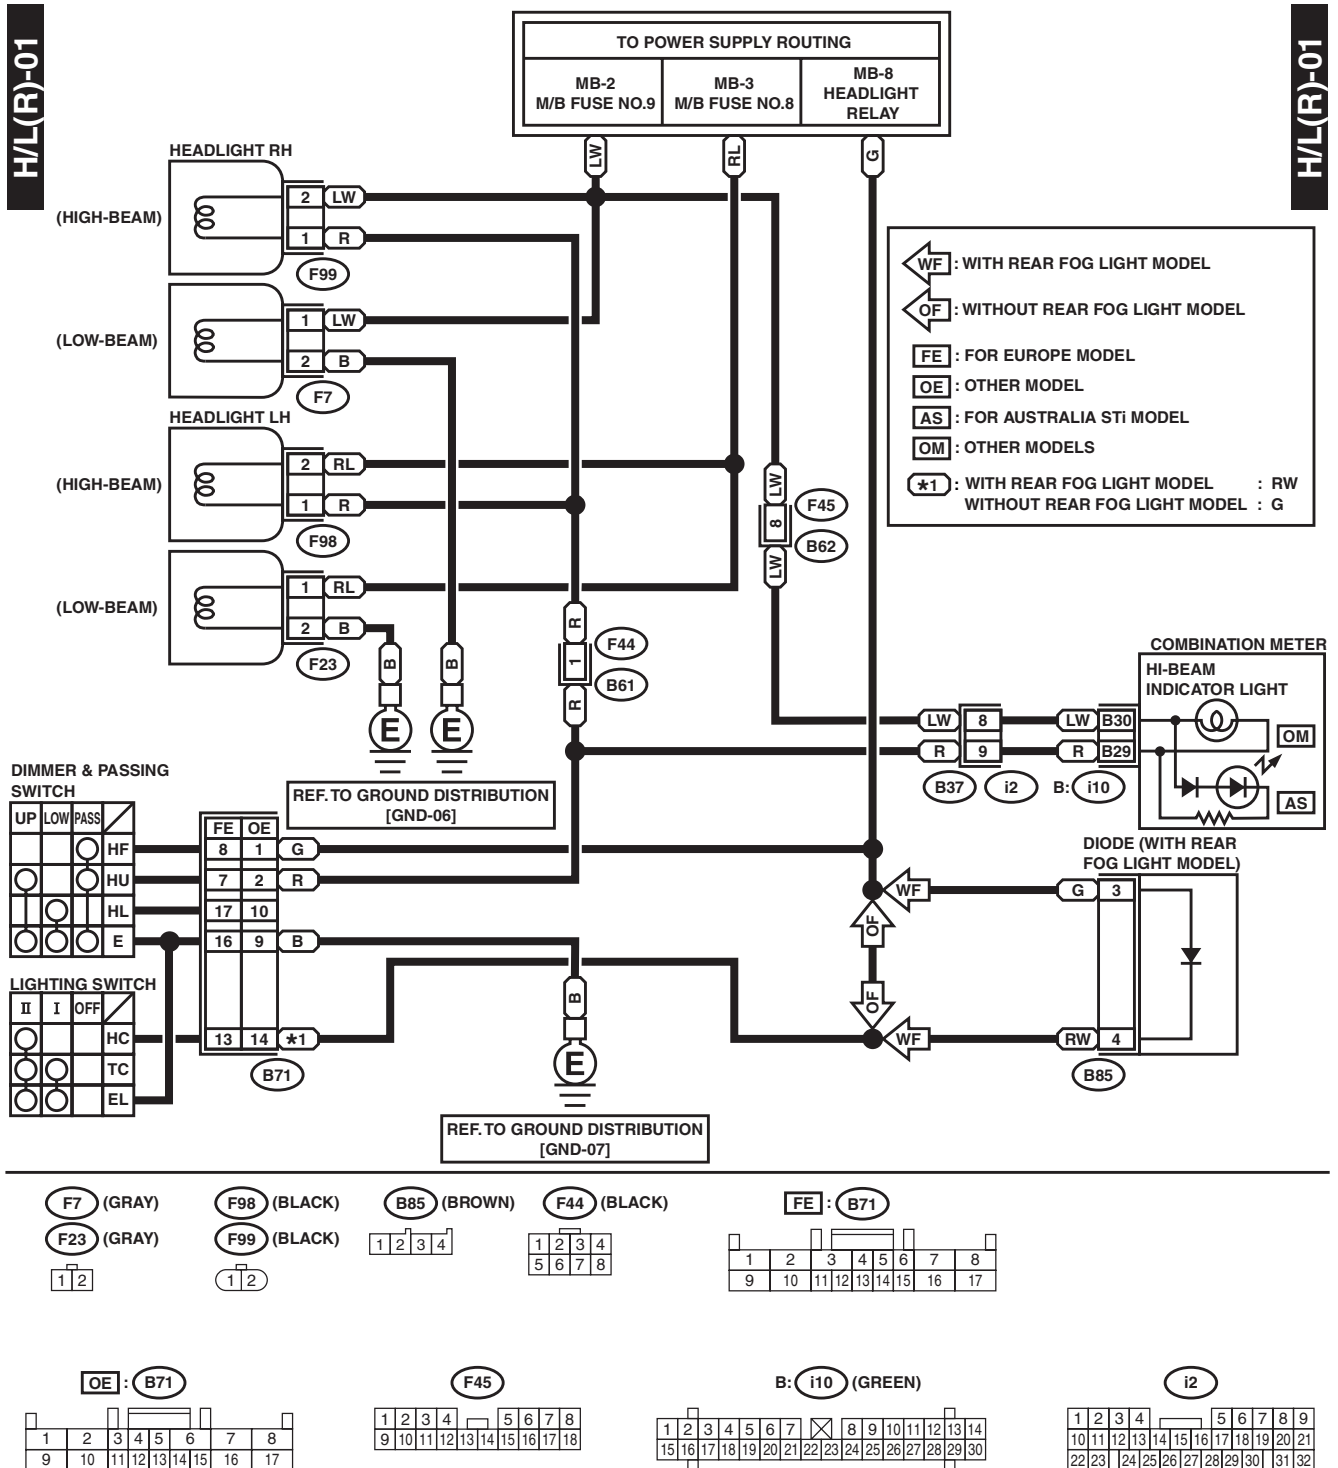


WI-04570

26.In Compartment Light System

A: WIRING DIAGRAM


1. LHD MODEL

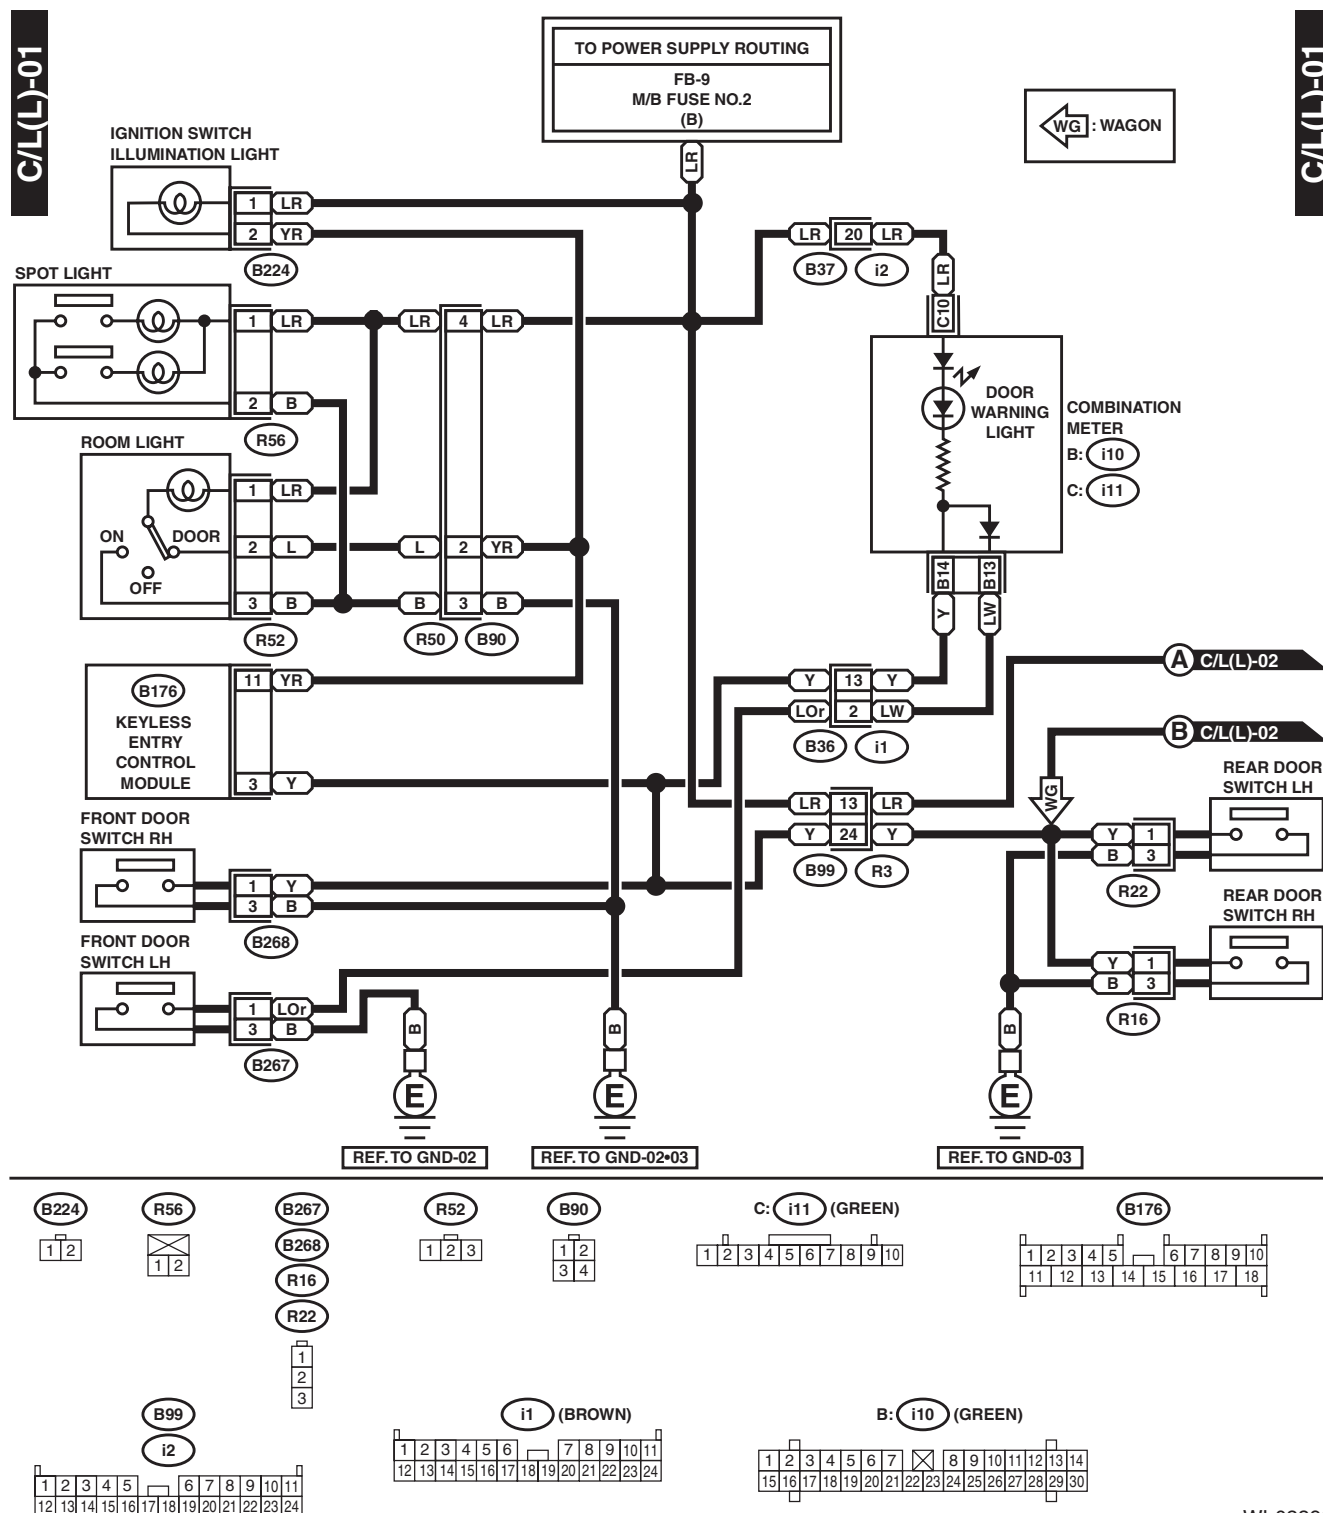

WI-02396

In Compartment Light System

WIRING SYSTEM

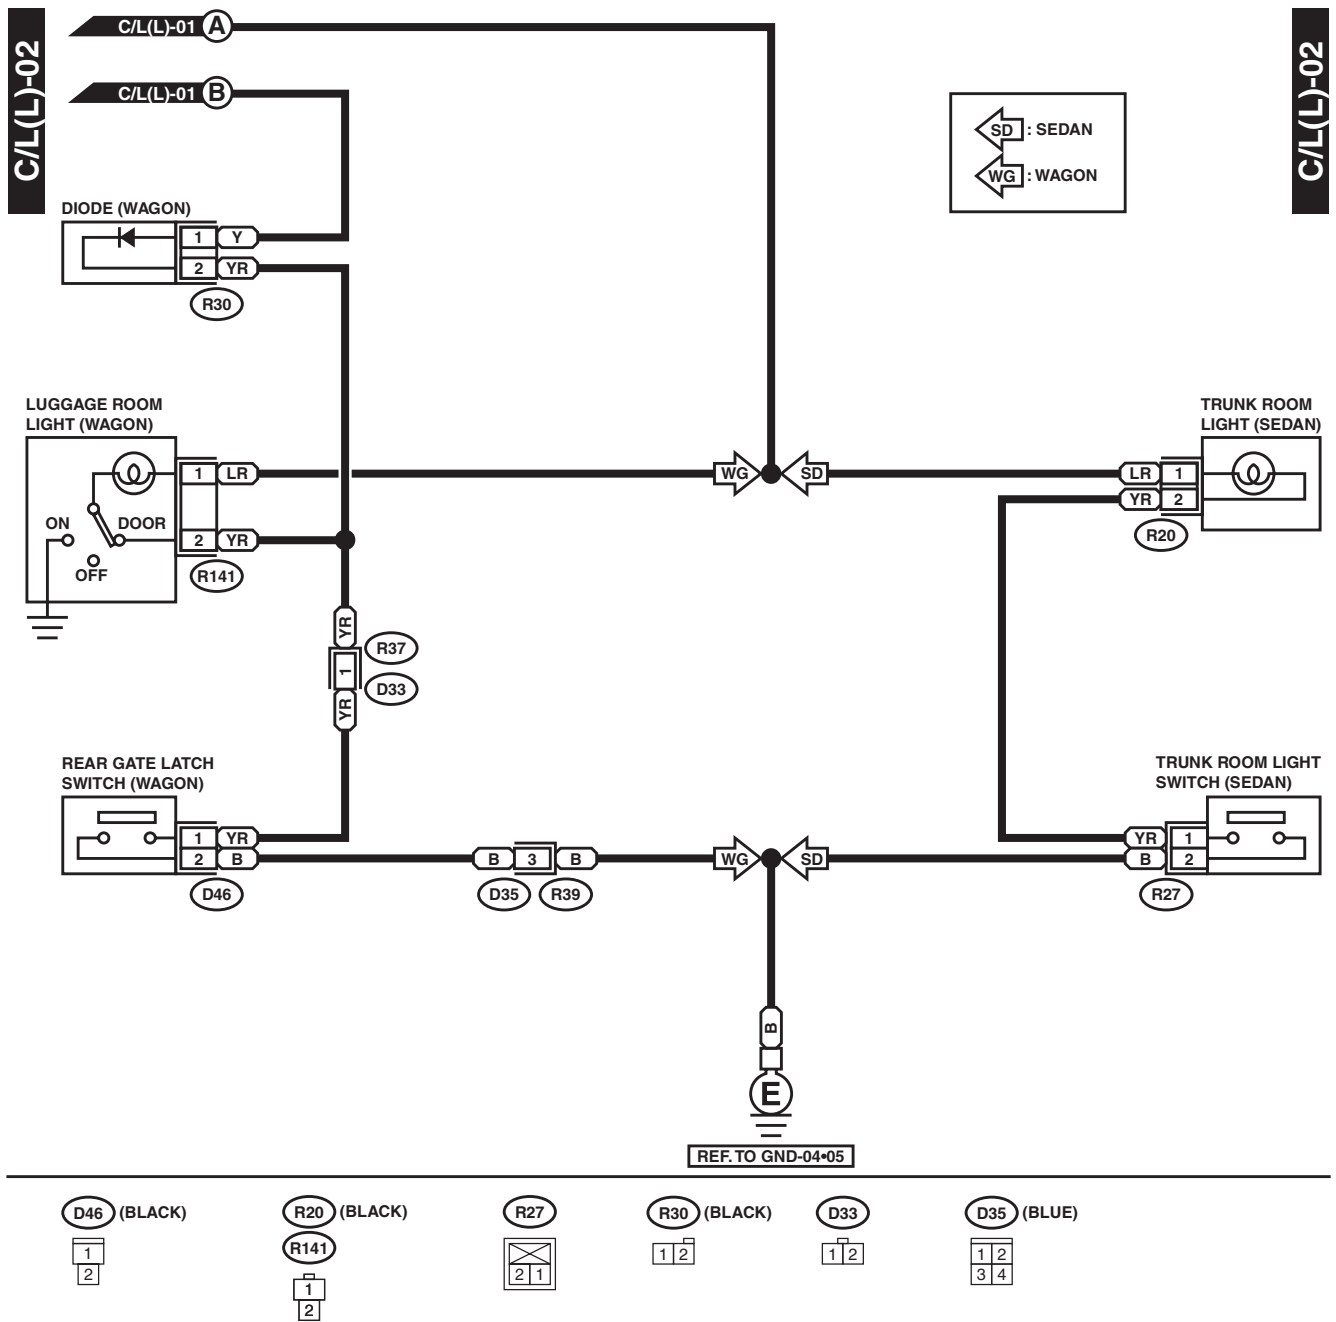


WI-04571

In Compartment Light System

WIRING SYSTEM


2. RHD MODEL

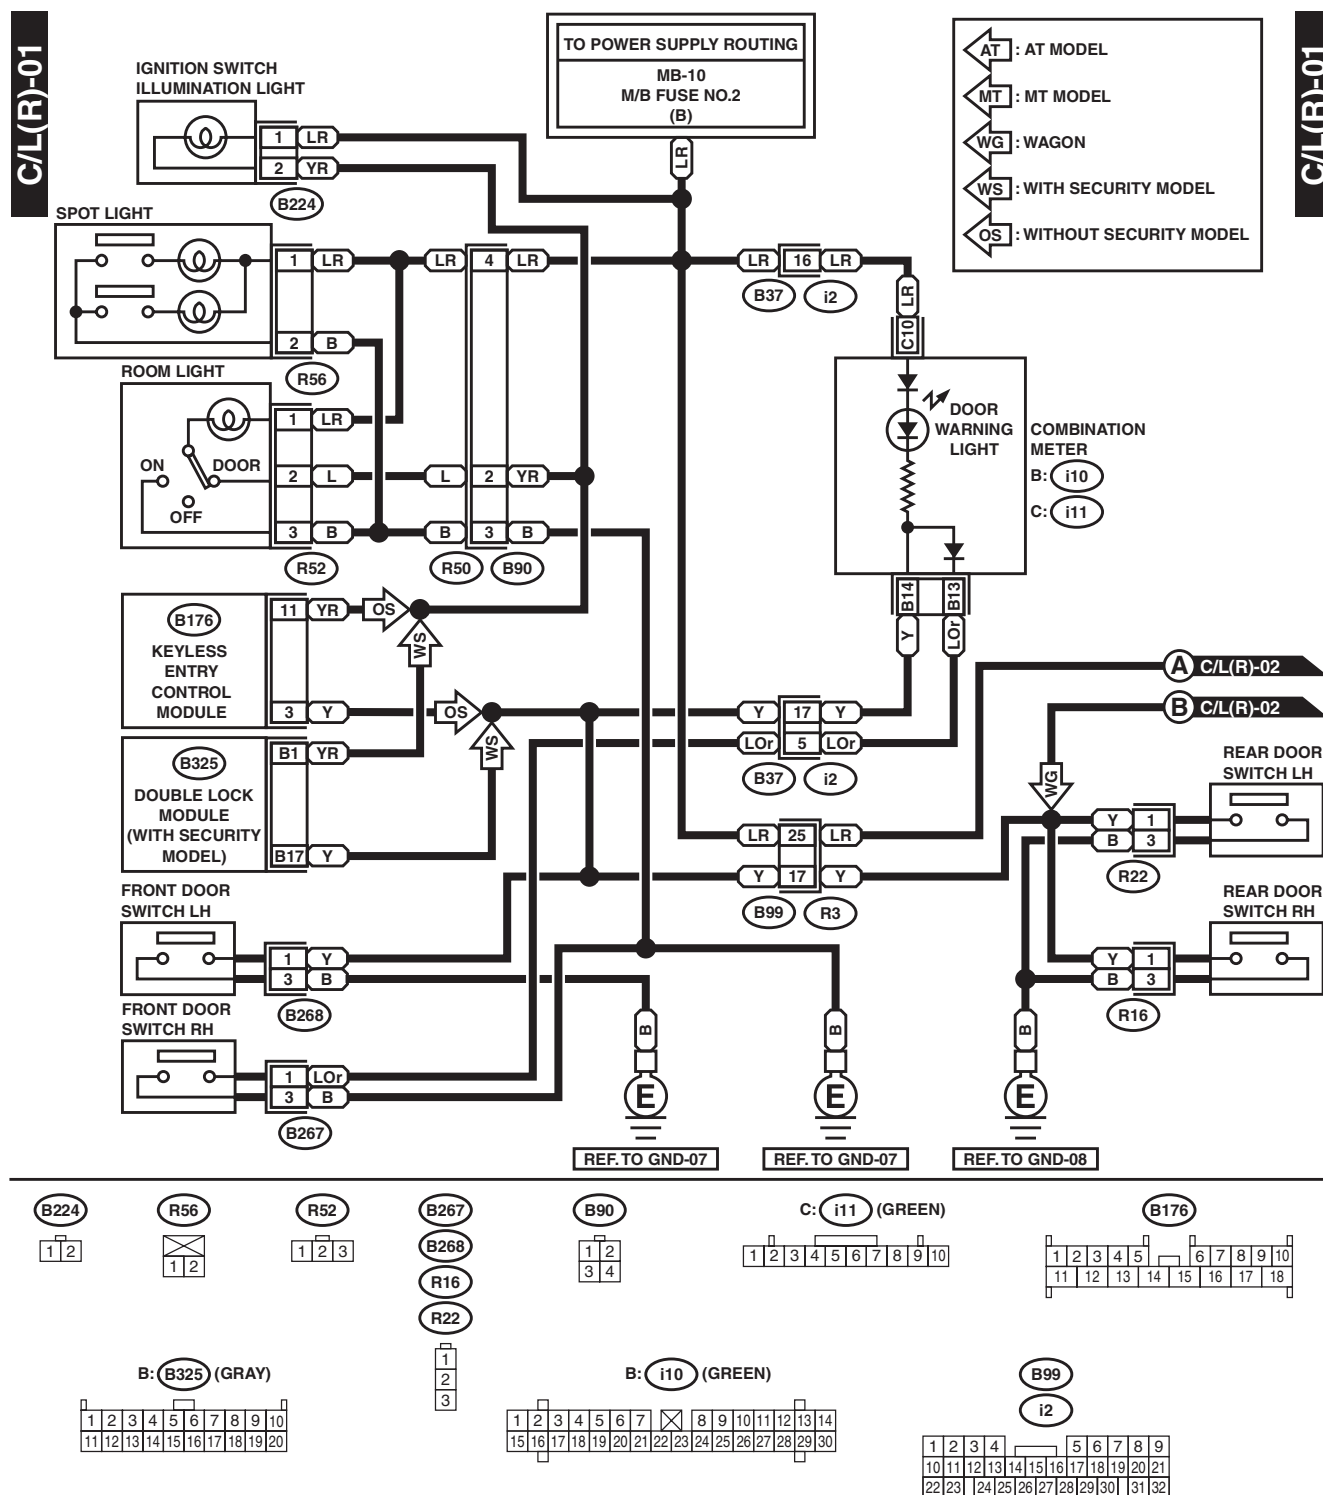

WI-02398

In Compartment Light System

WIRING SYSTEM

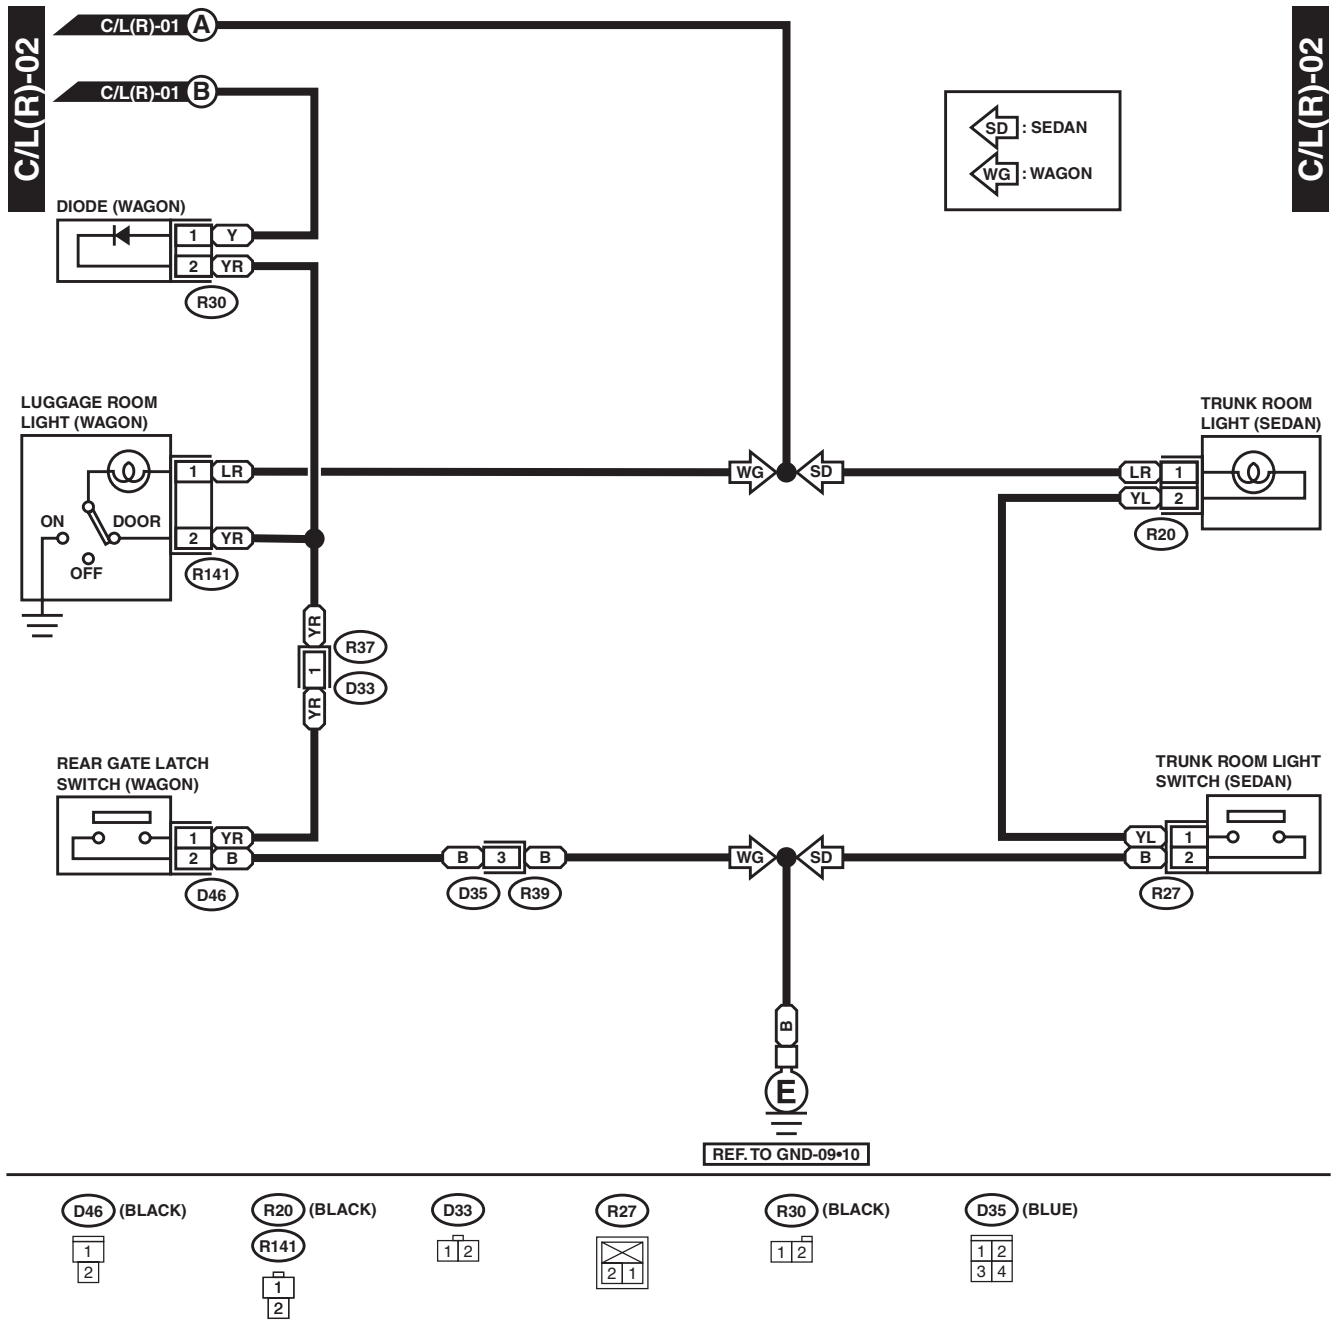


WI-04572

Stop Light System

WIRING SYSTEM

27.Stop Light System

A: WIRING DIAGRAM

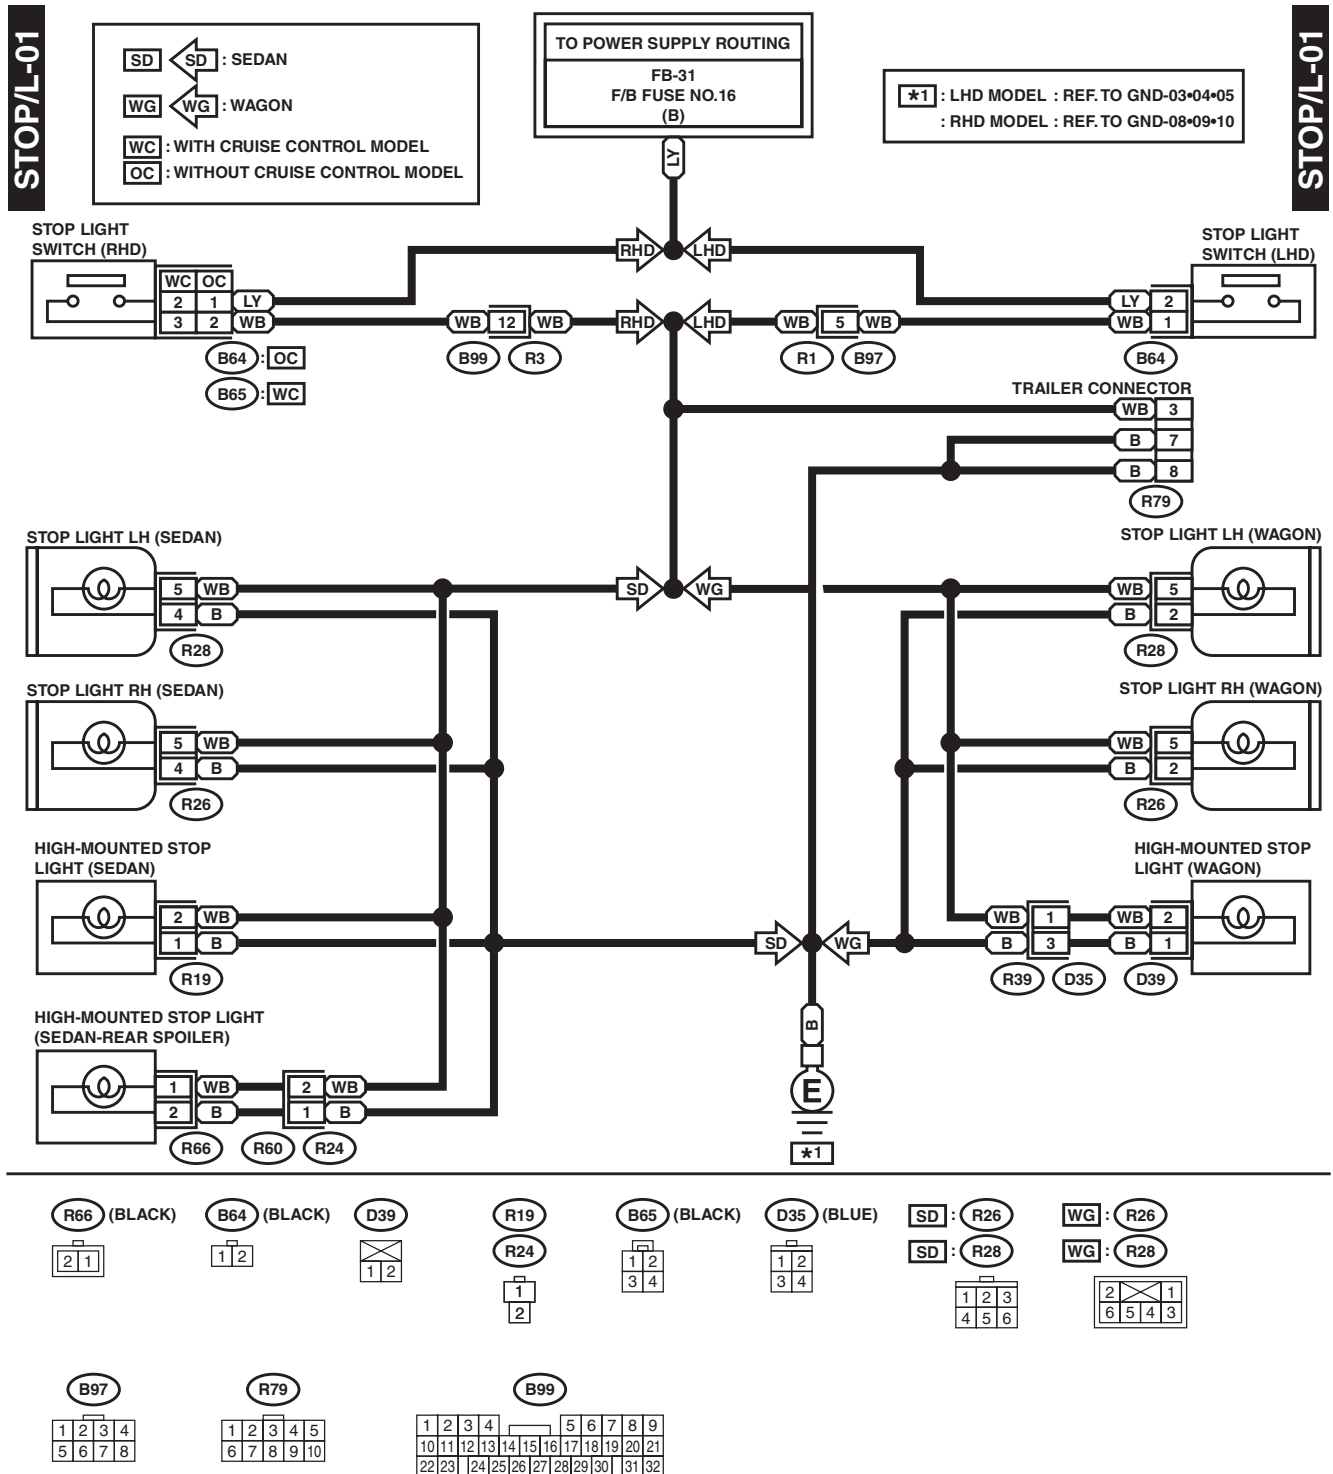



Turn Signal Light and Hazard Light System

WIRING SYSTEM

28. Turn Signal Light and Hazard Light System

A: WIRING DIAGRAM


1. LHD MODEL

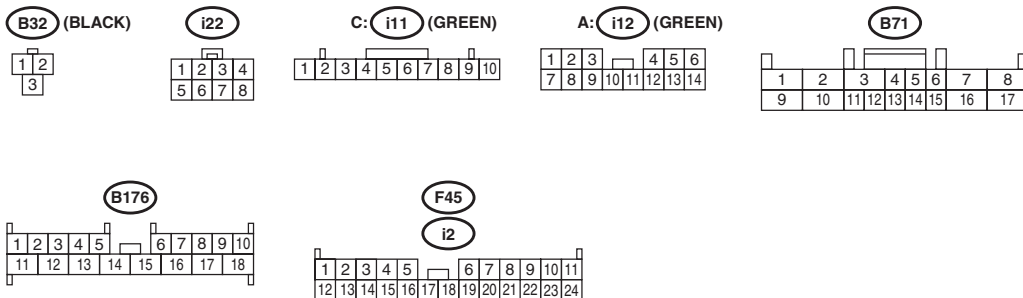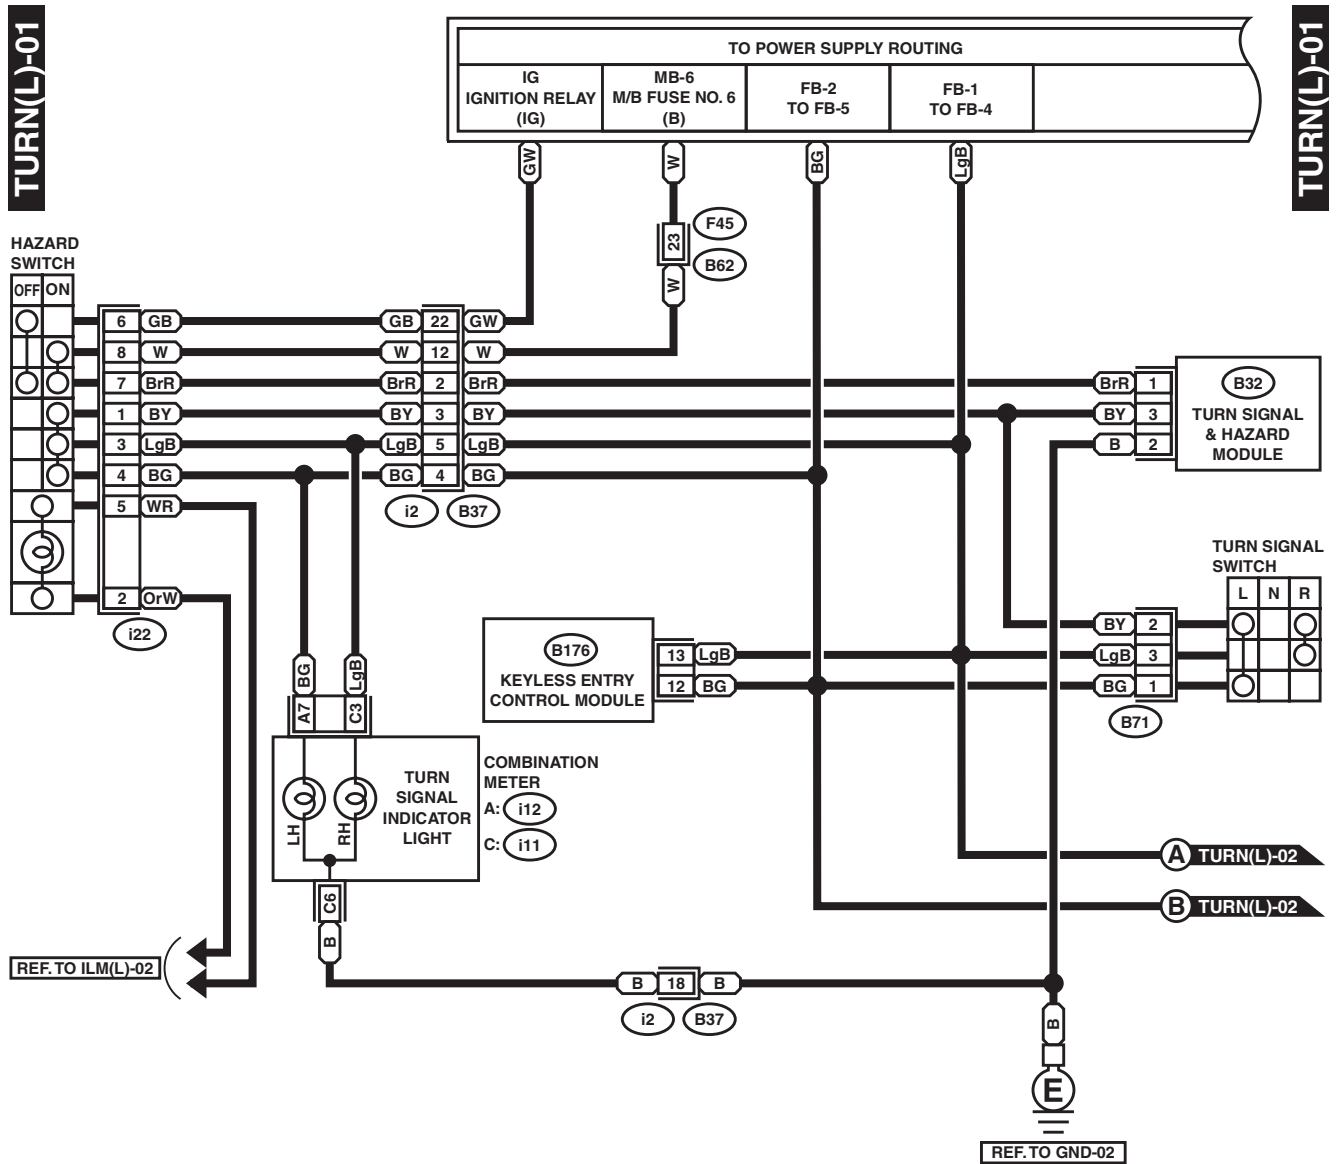

WI-02401

Turn Signal Light and Hazard Light System


WIRING SYSTEM

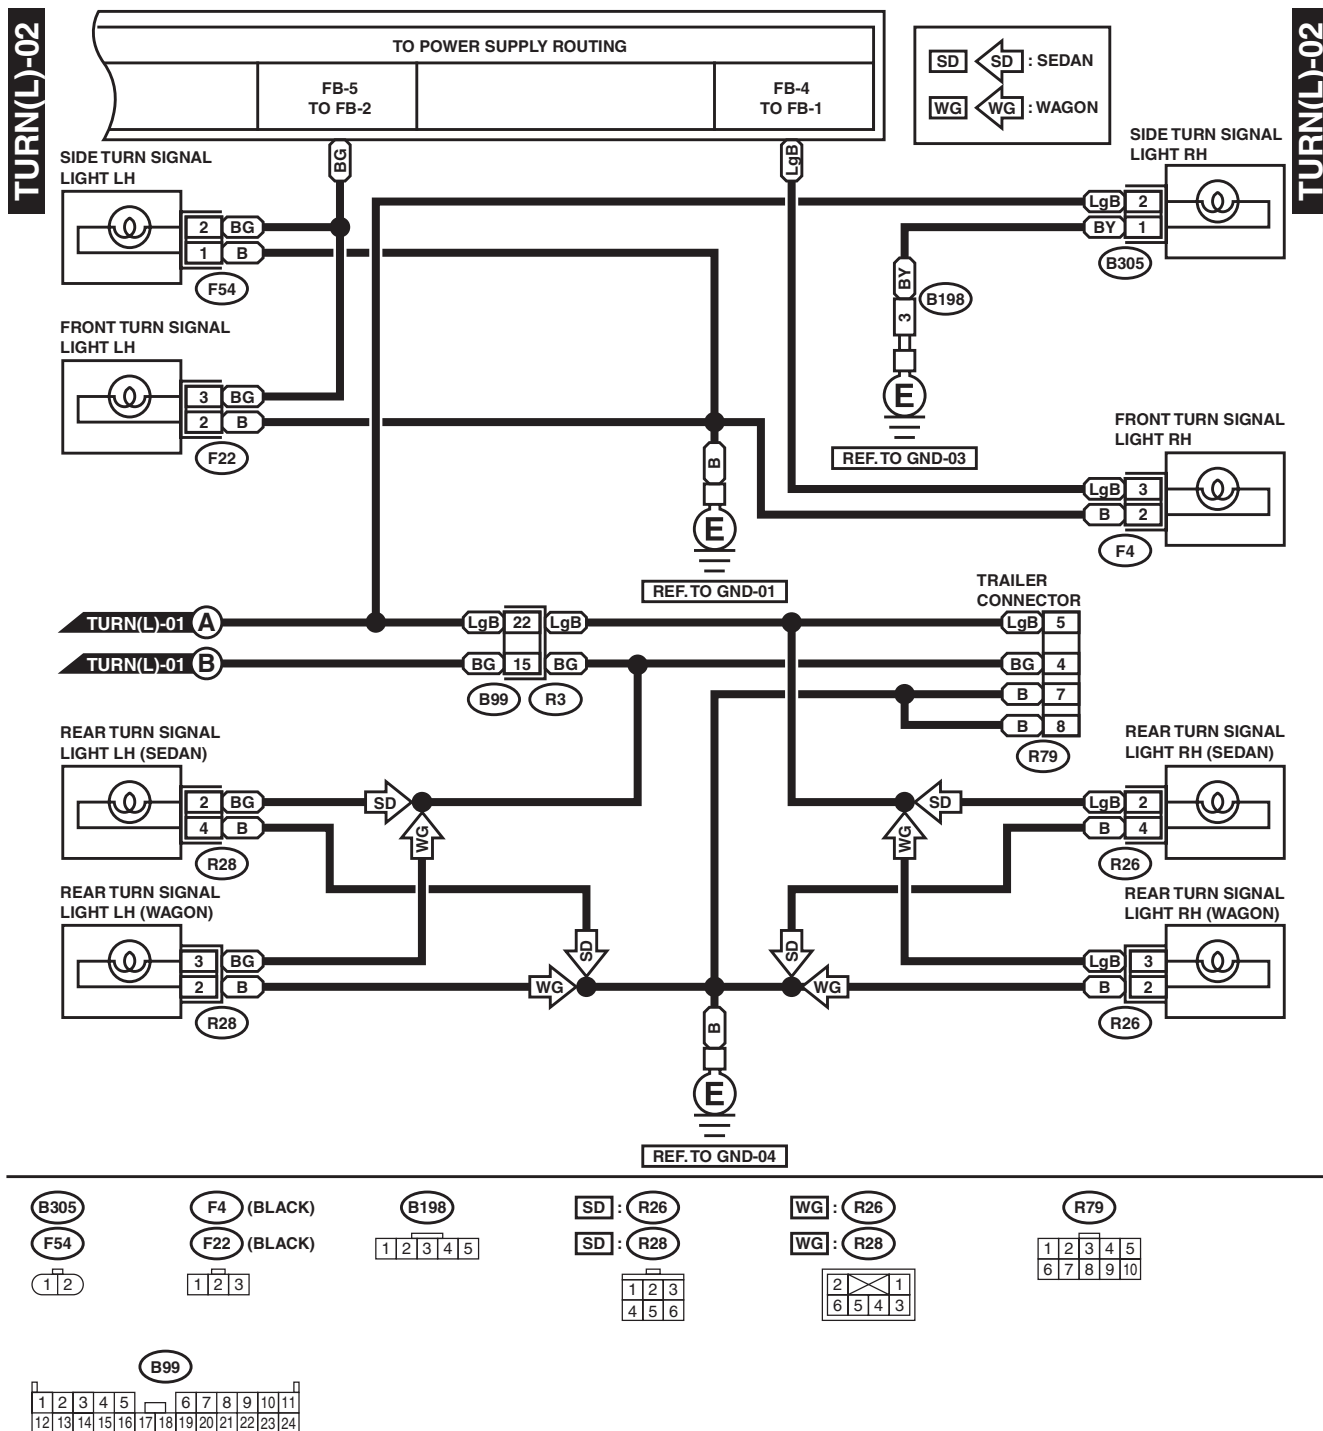

WI-02402

Turn Signal Light and Hazard Light System

WIRING SYSTEM

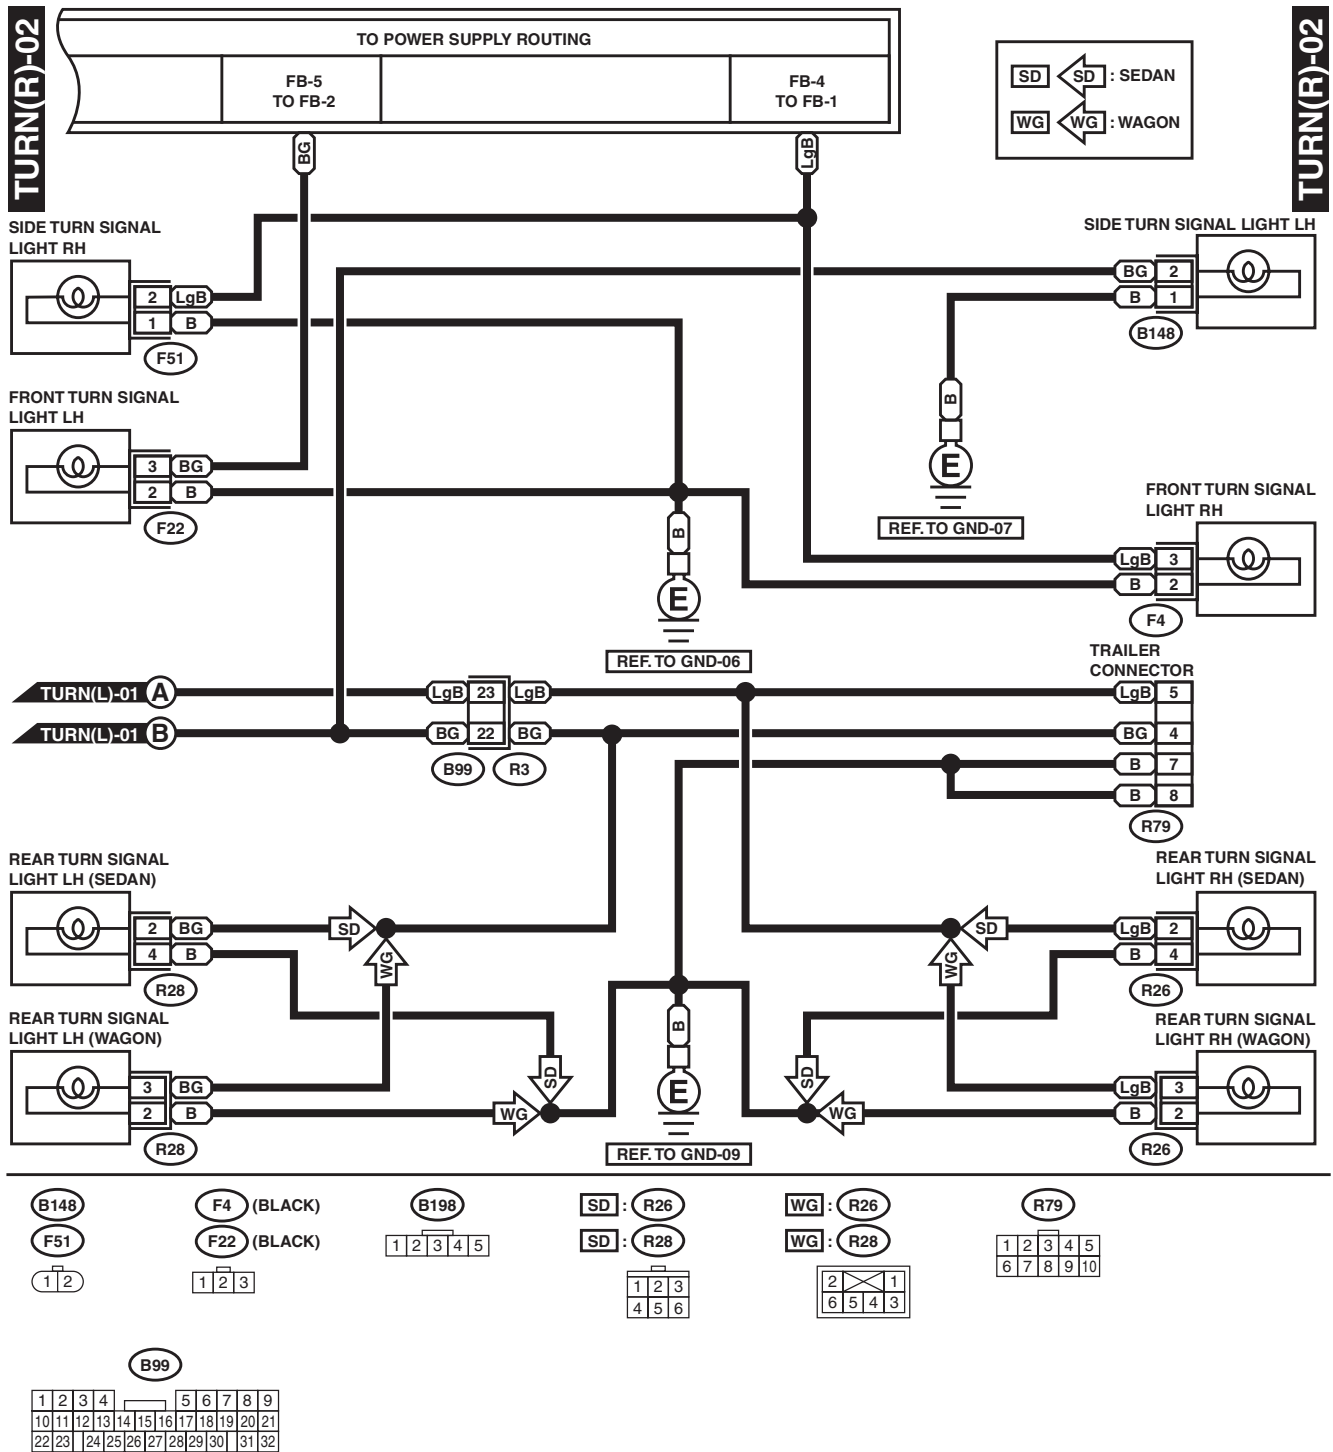

WI-04575


Oil Pressure Warning Light System

WIRING SYSTEM

29.Oil Pressure Warning Light System

A: WIRING DIAGRAM

1. LHD MODEL

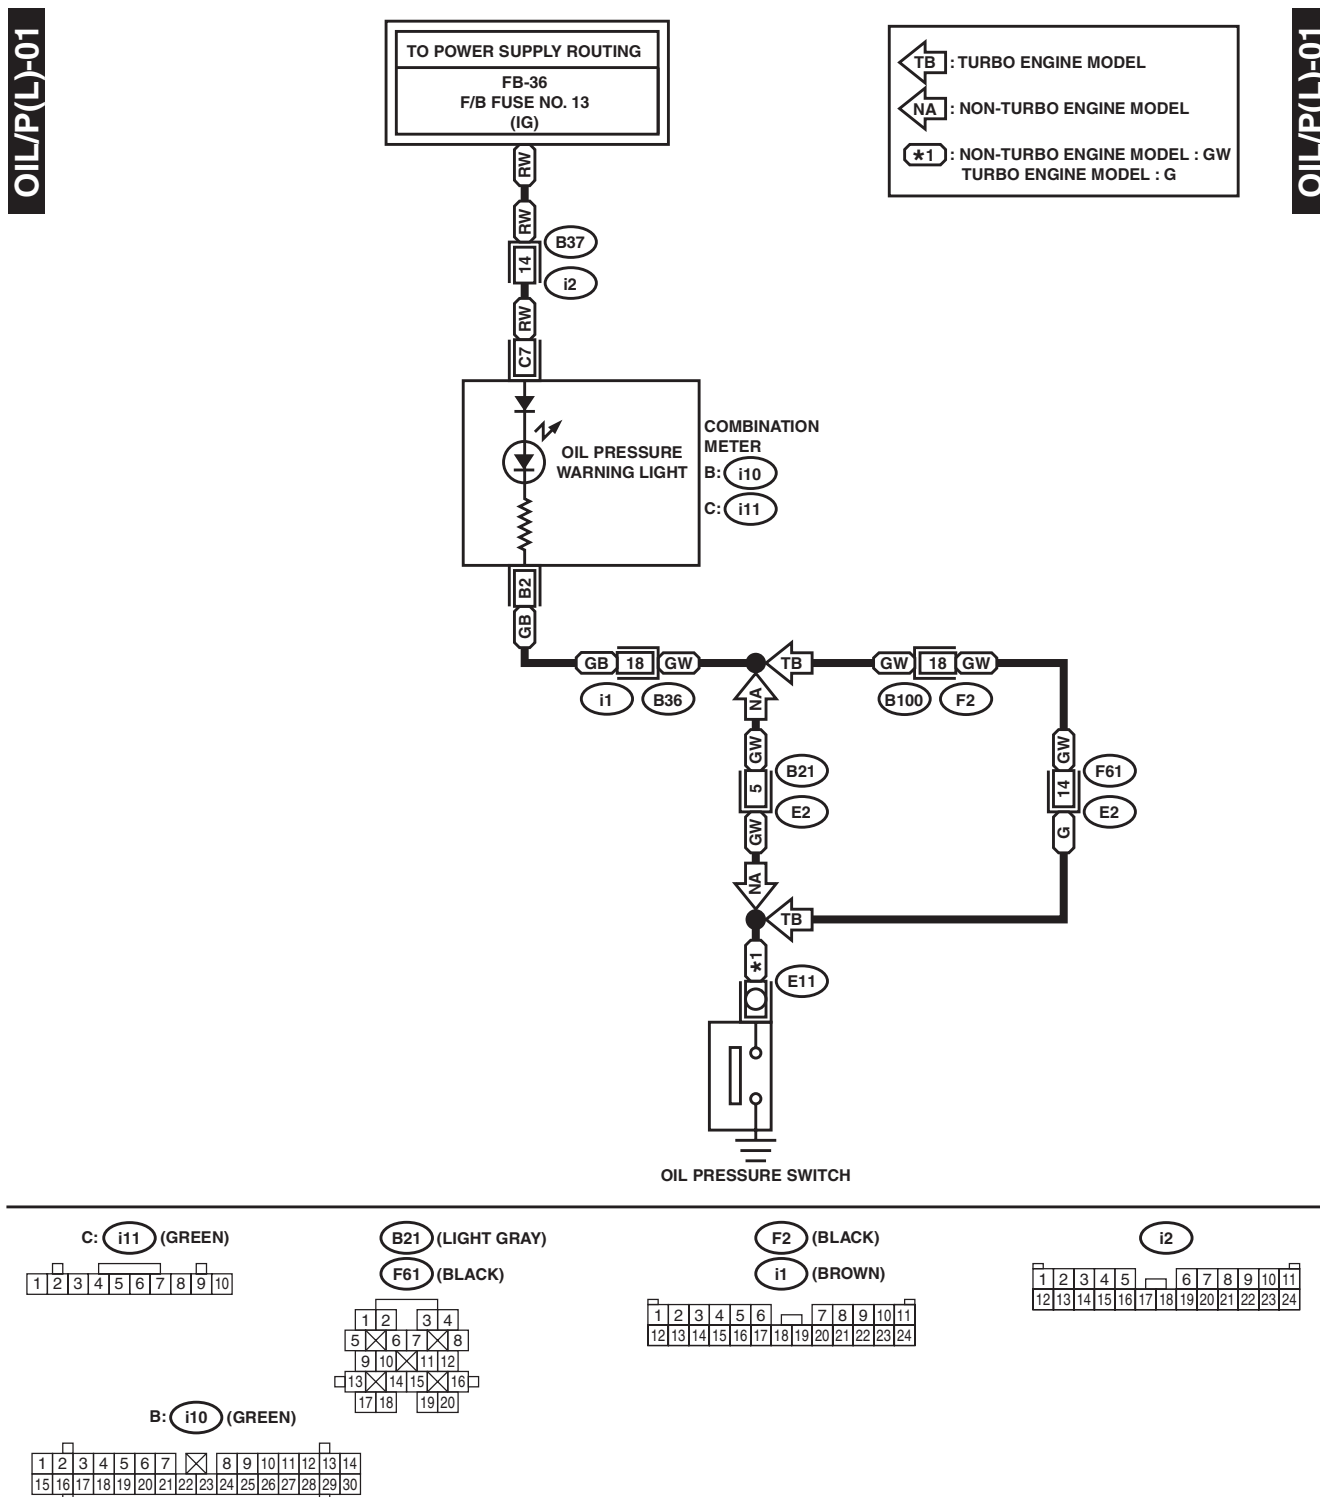

WI-02405



Oil Pressure Warning Light System

WIRING SYSTEM


2. RHD MODEL

OIL/P(R)-01

OIL/P(R)-01

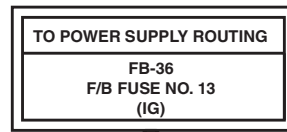


COMBINATION
METER
B: i10
C: i11




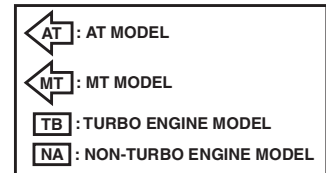


*1 : NON-TURBO ENGINE MODEL : 5
TURBO ENGINE MODEL : 14

*2 : NON-TURBO ENGINE MODEL : GW
TURBO ENGINE MODEL : G



OIL PRESSURE SWITCH

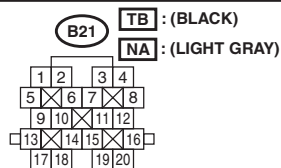

WI-04576


Outside Temperature Display System

WIRING SYSTEM

30. Outside Temperature Display System

A: WIRING DIAGRAM

1. LHD MODEL

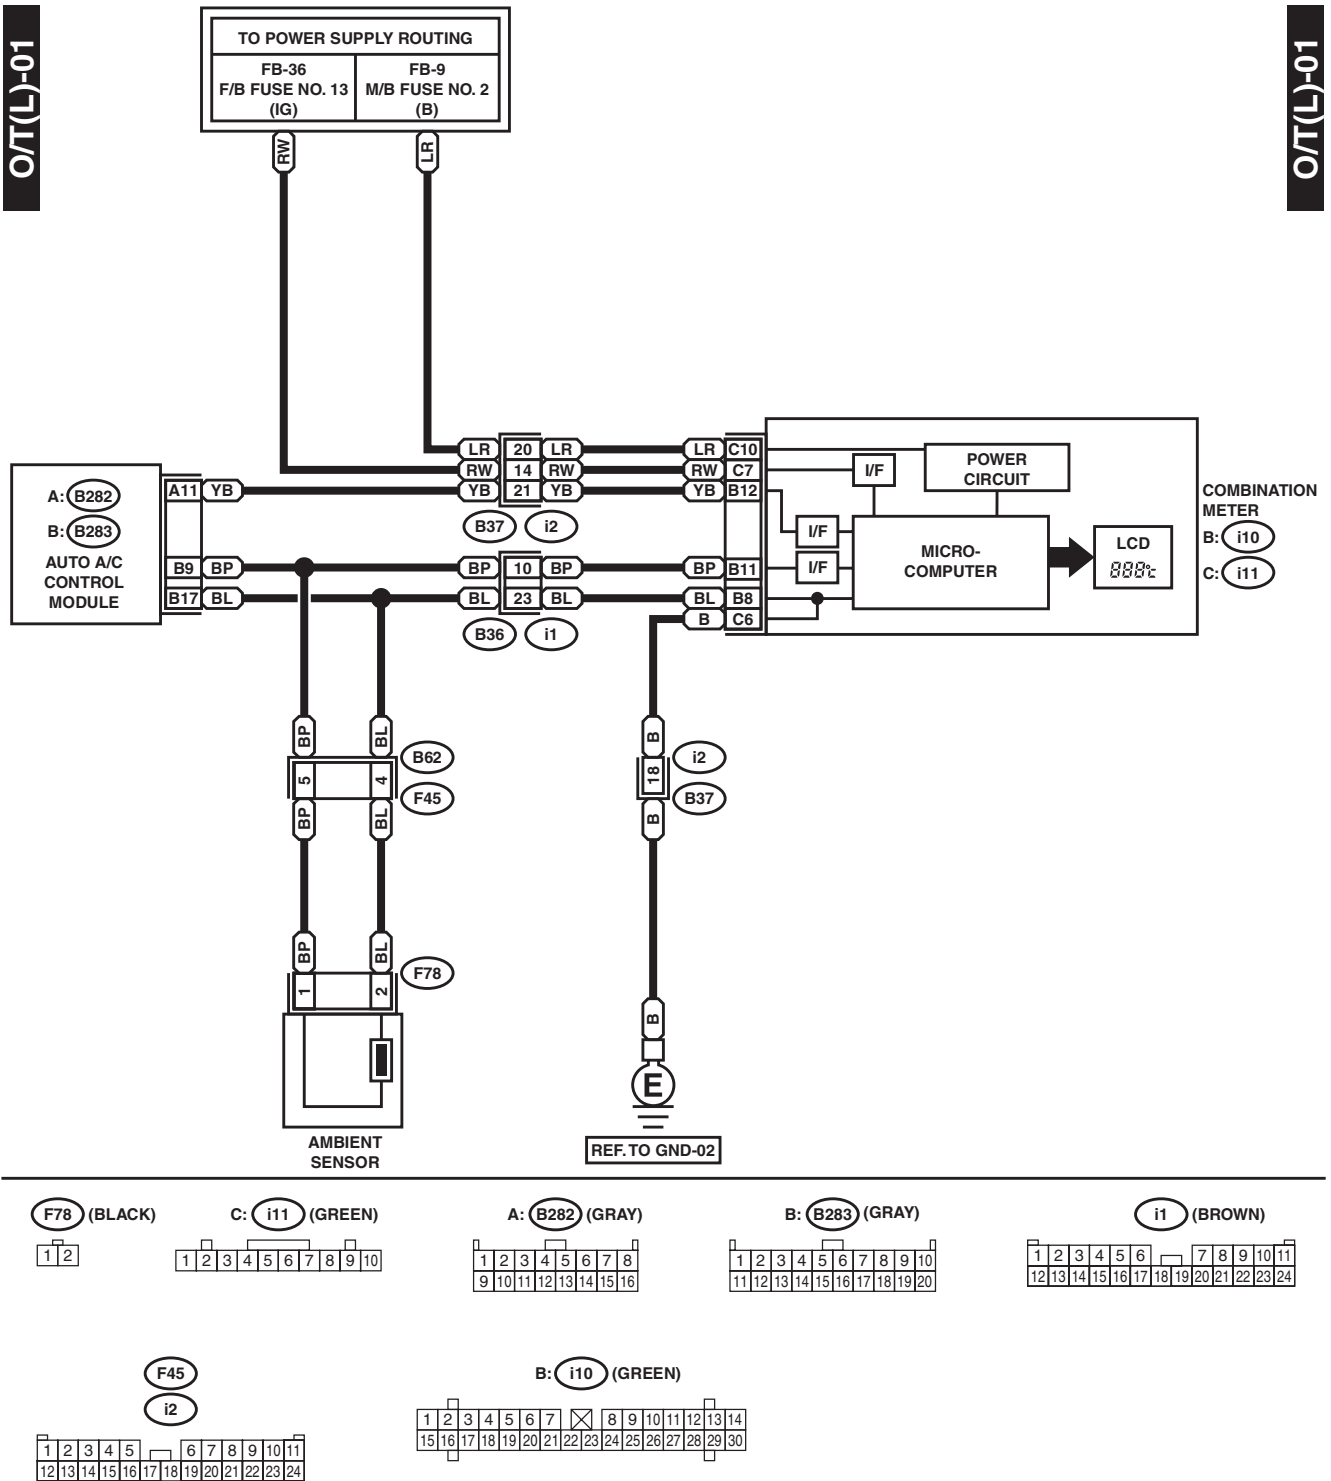


WI-04577

Outside Temperature Display System

WIRING SYSTEM

2. RHD MODEL

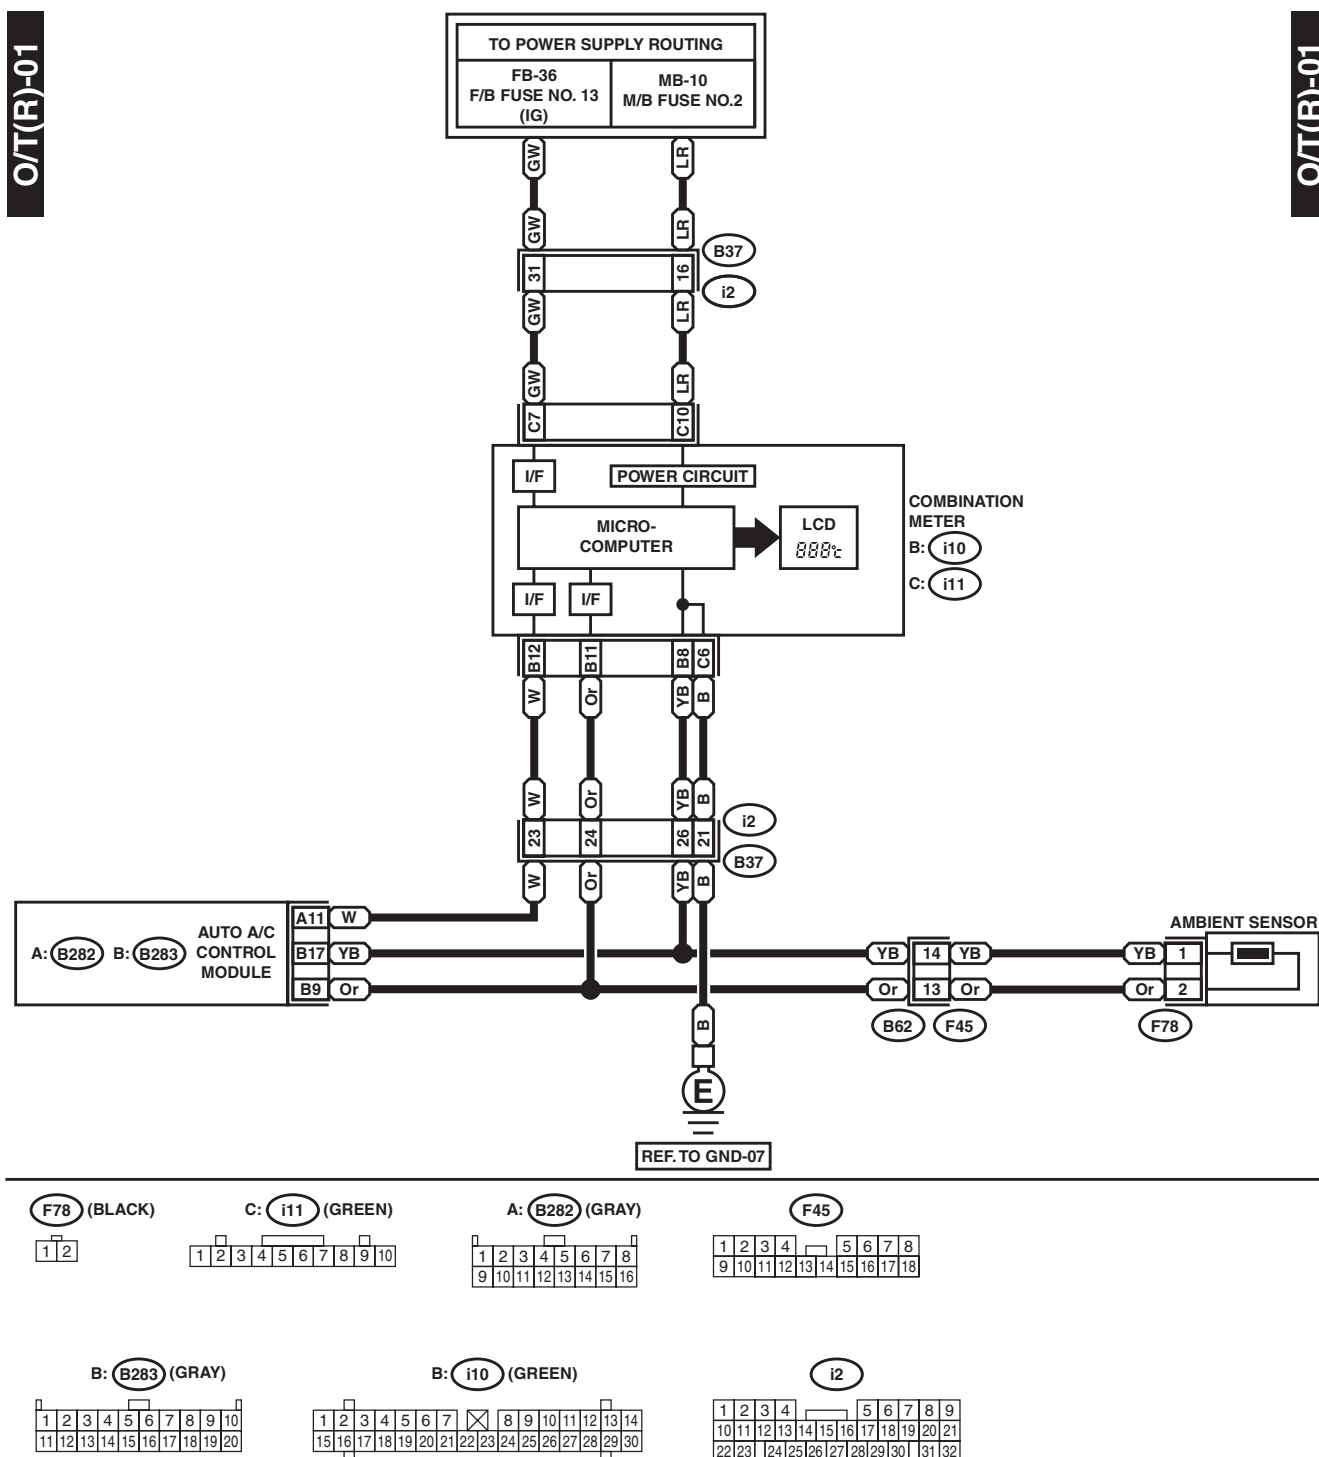

WI-02408


Parking Brake and Brake Fluid Level Warning System

WIRING SYSTEM

31. Parking Brake and Brake Fluid Level Warning System

A: WIRING DIAGRAM

1. LHD MODEL

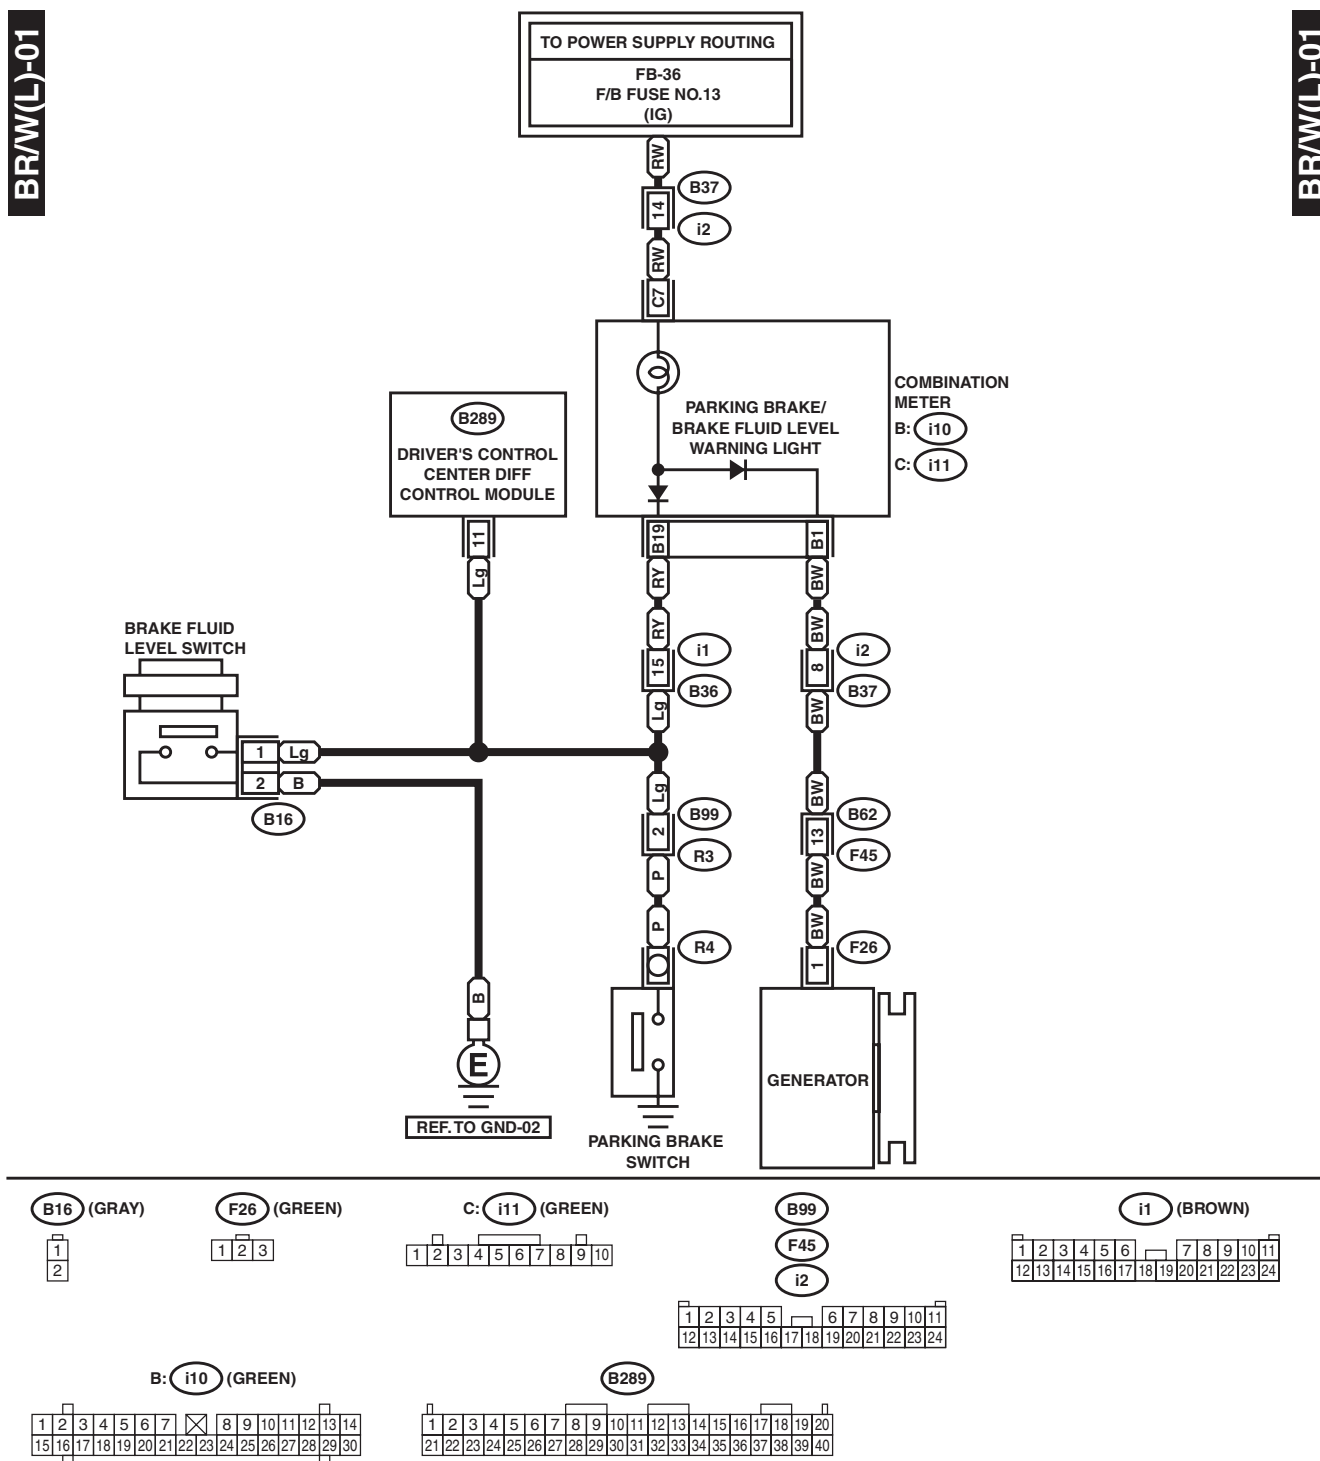

WI-04500

WIRING SYSTEM

BR/W(R)-01



WI-229


Power Window System

WIRING SYSTEM

32.Power Window System

A: WIRING DIAGRAM

1. LHD MODEL

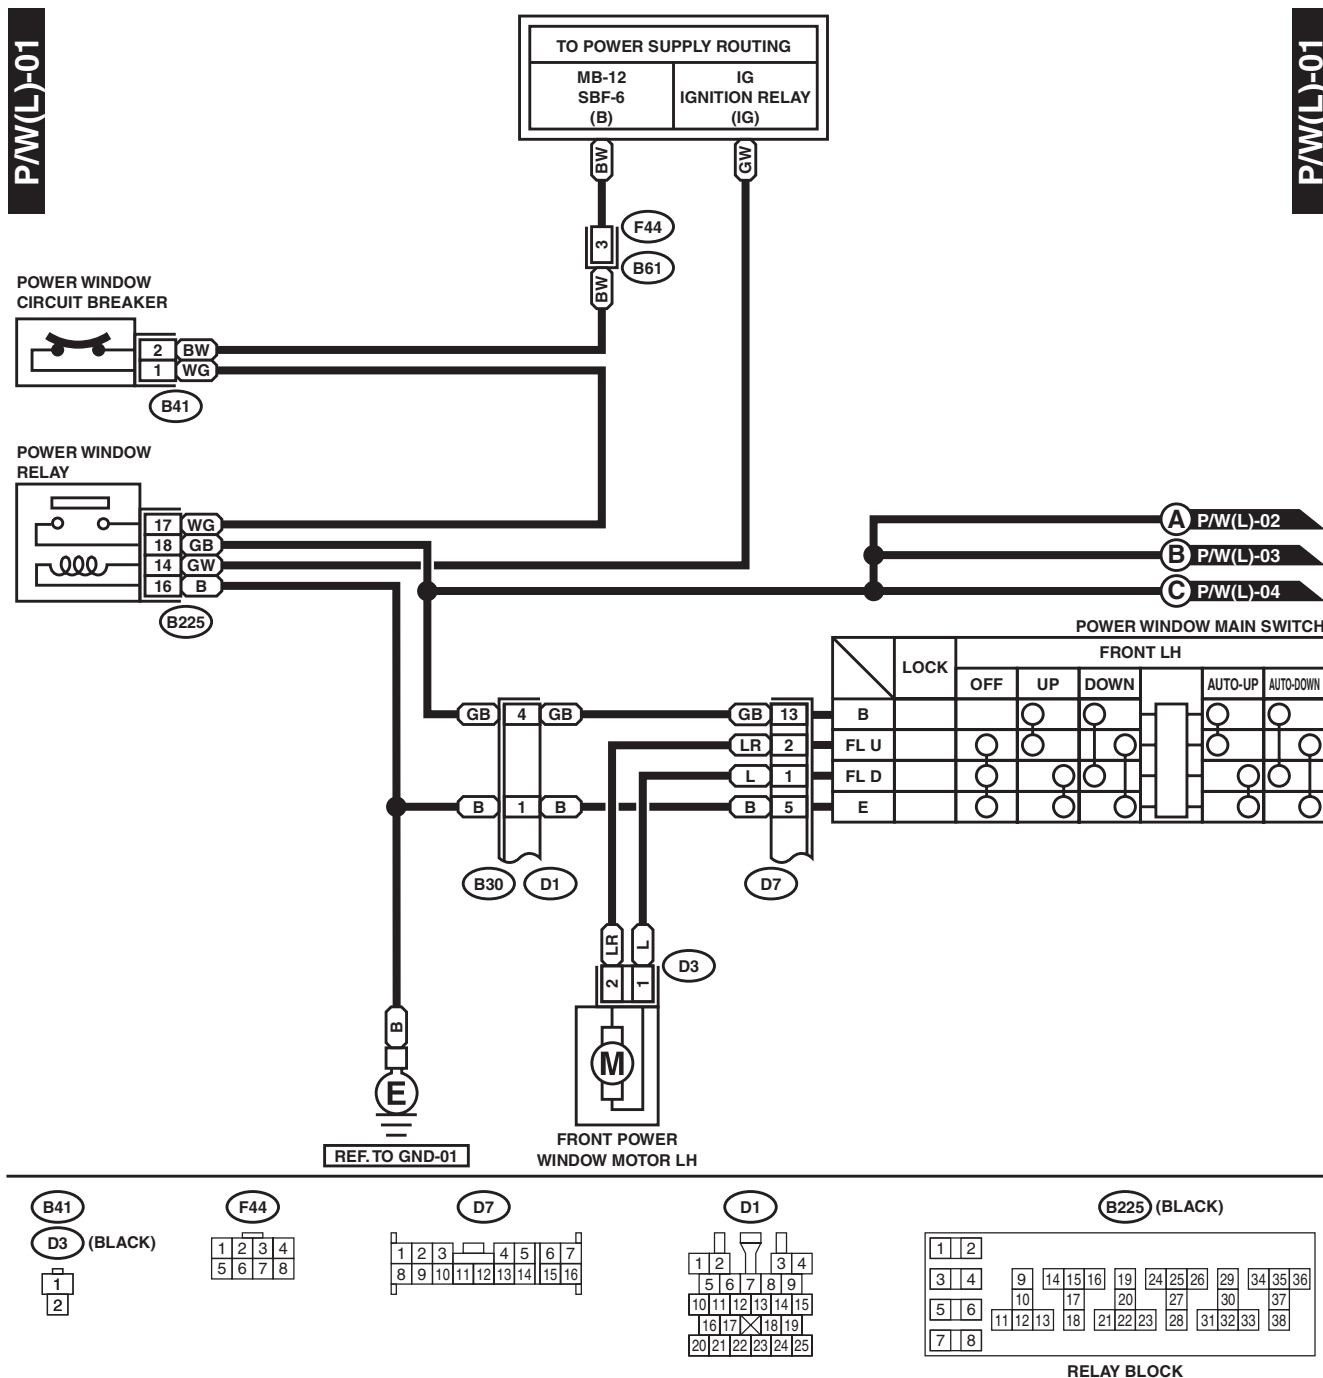


Power Window System

WIRING SYSTEM

P/W(L)-02

P/W(L)-02

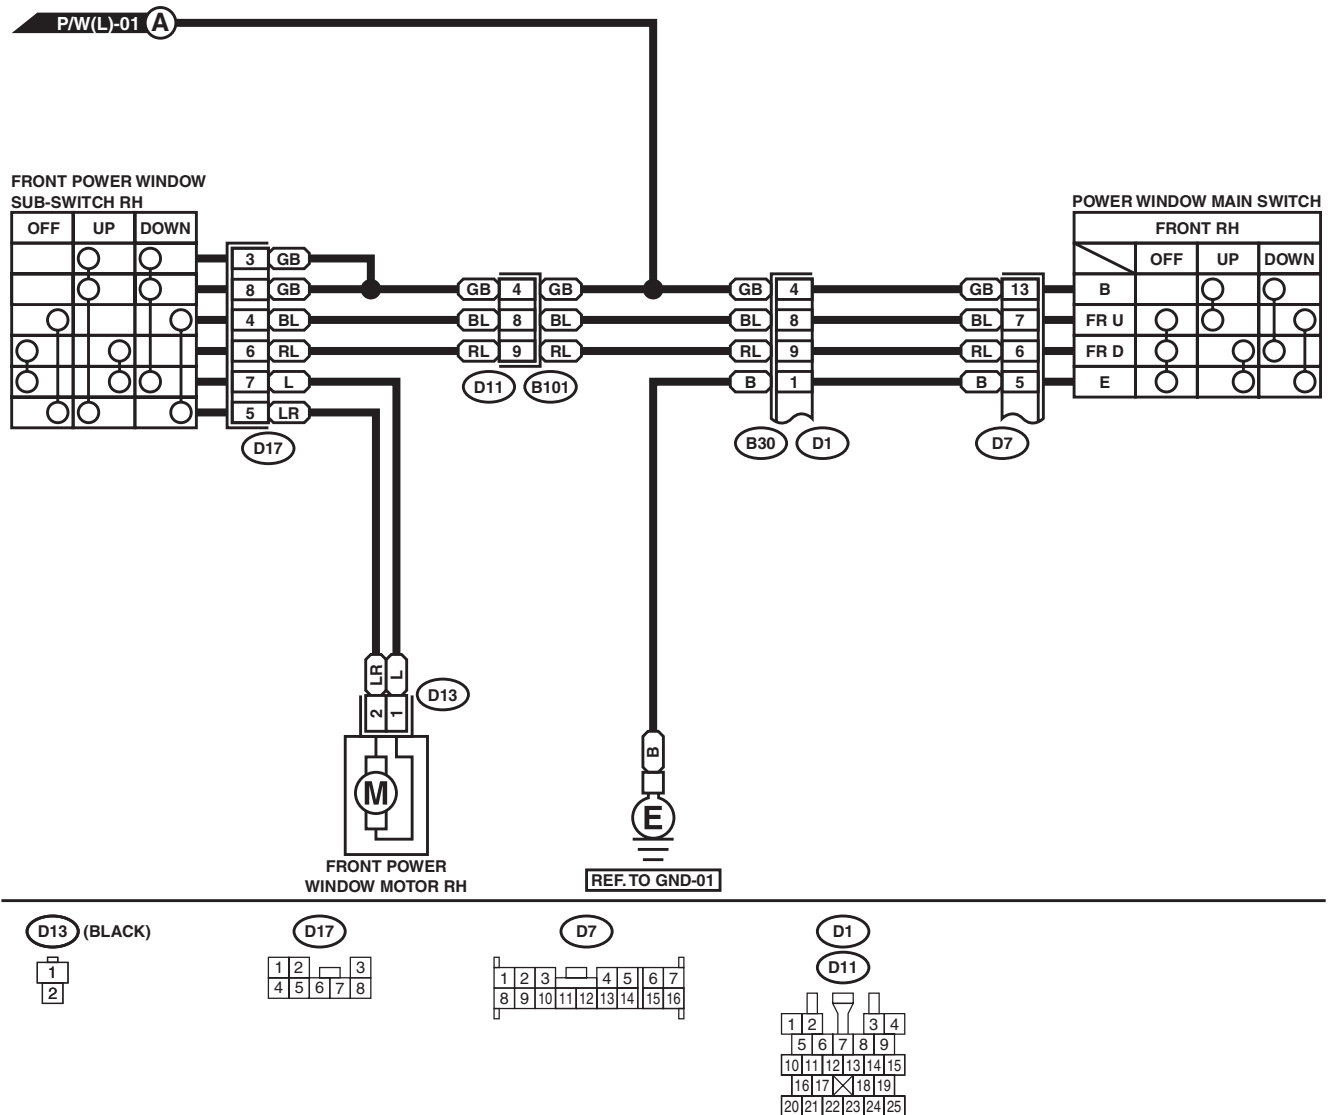


WI-04503

Power Window System

WIRING SYSTEM

P/W(L)-03

P/W(L)-03

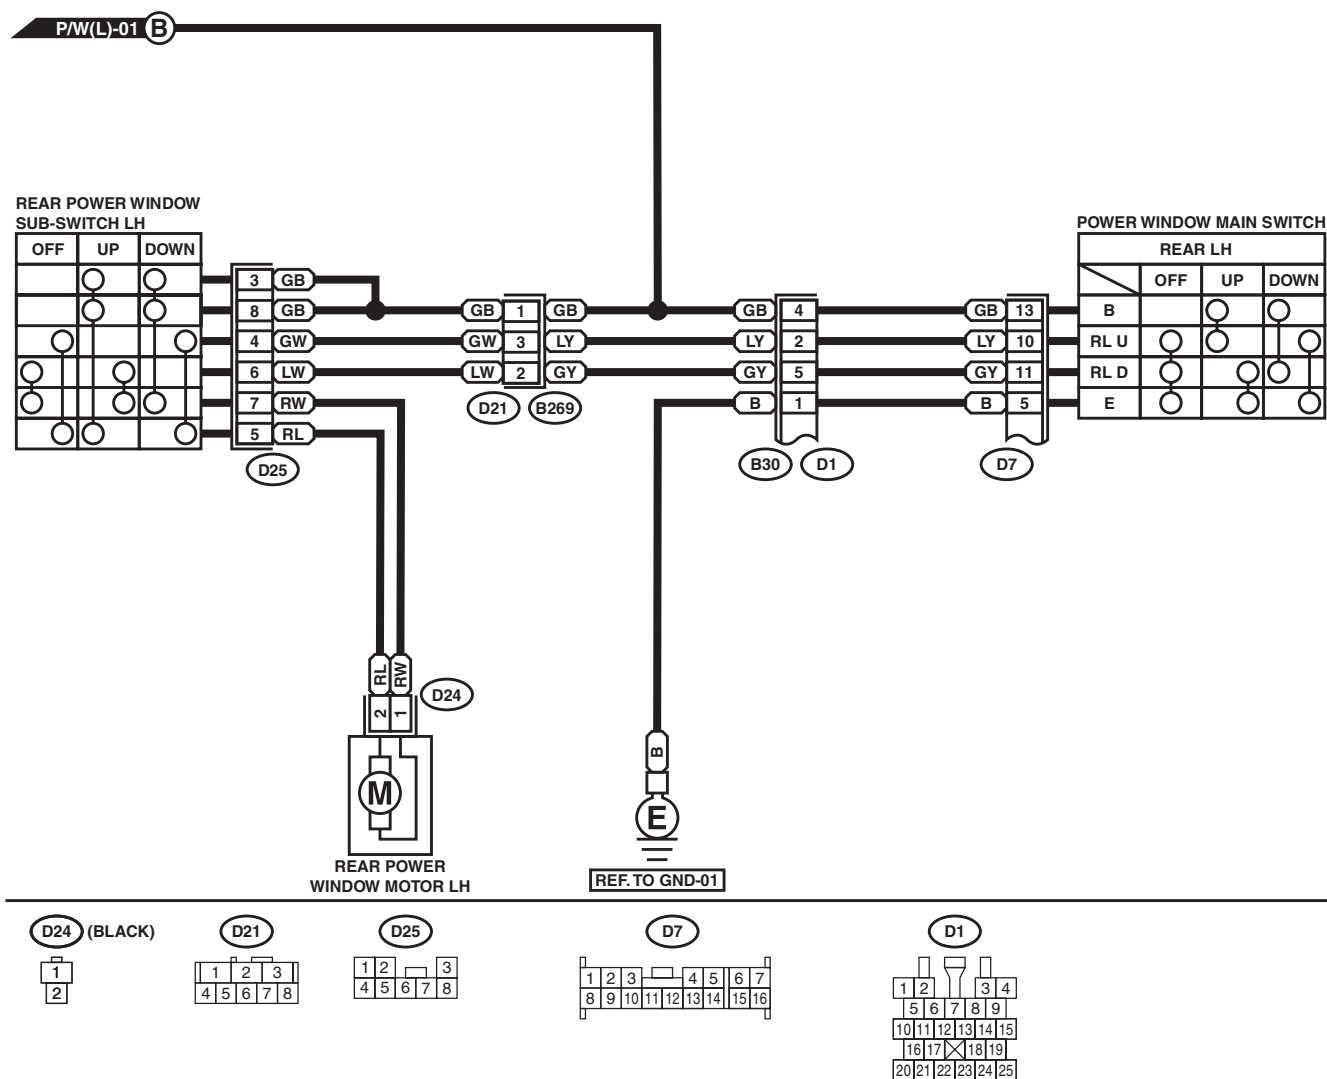


WI-04504

Power Window System

WIRING SYSTEM

P/W(L)-04

P/W(L)-04

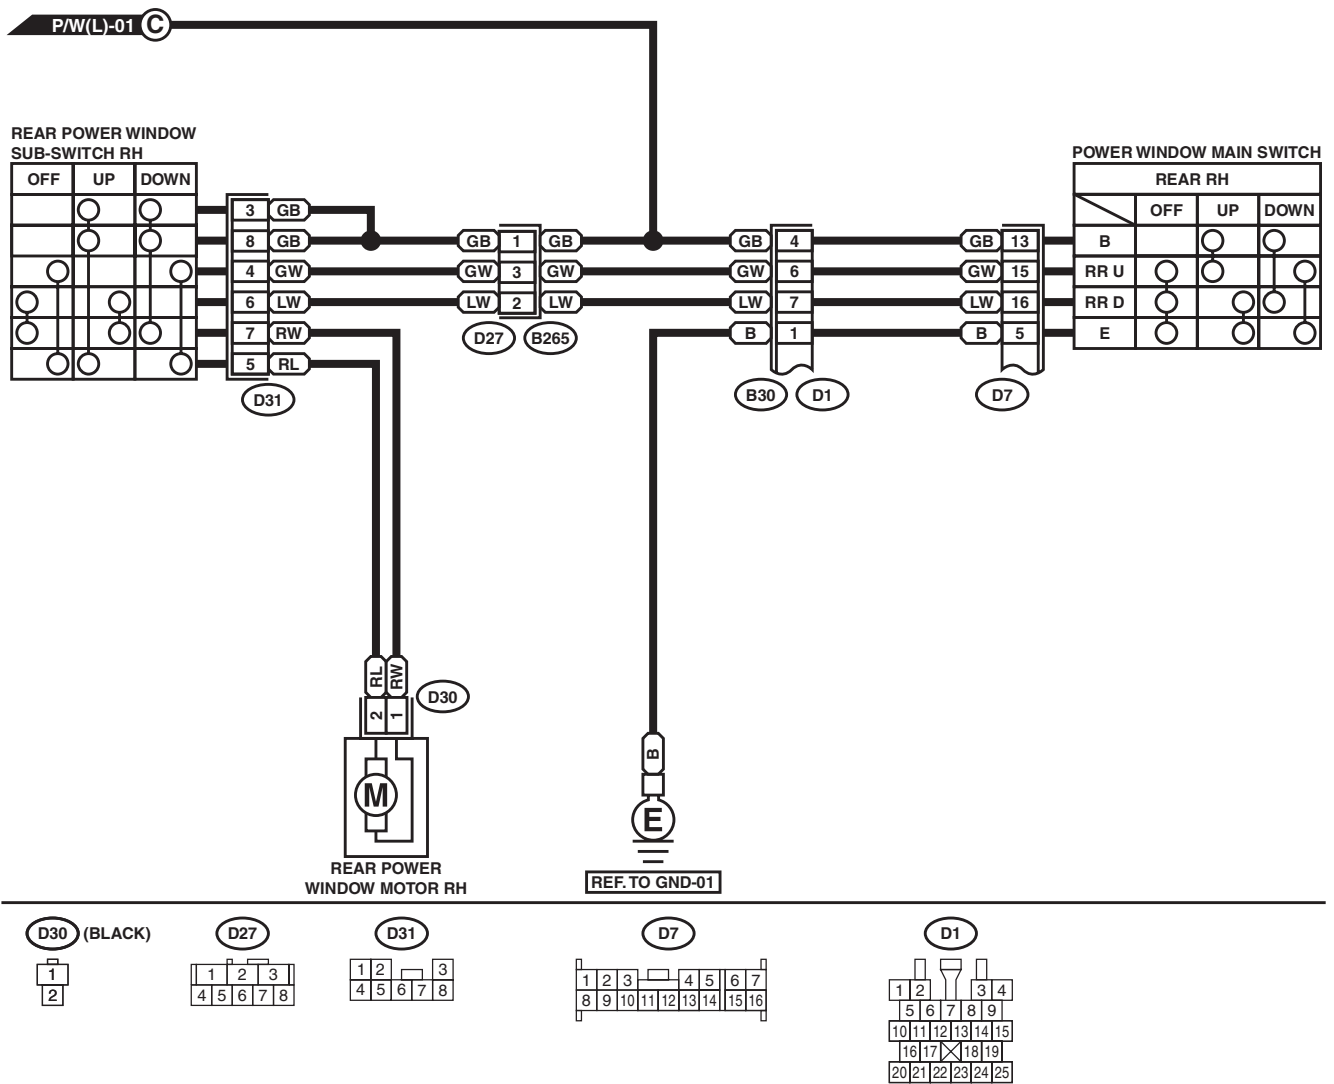


WI-04505

Power Window System

WIRING SYSTEM

2. RHD MODEL

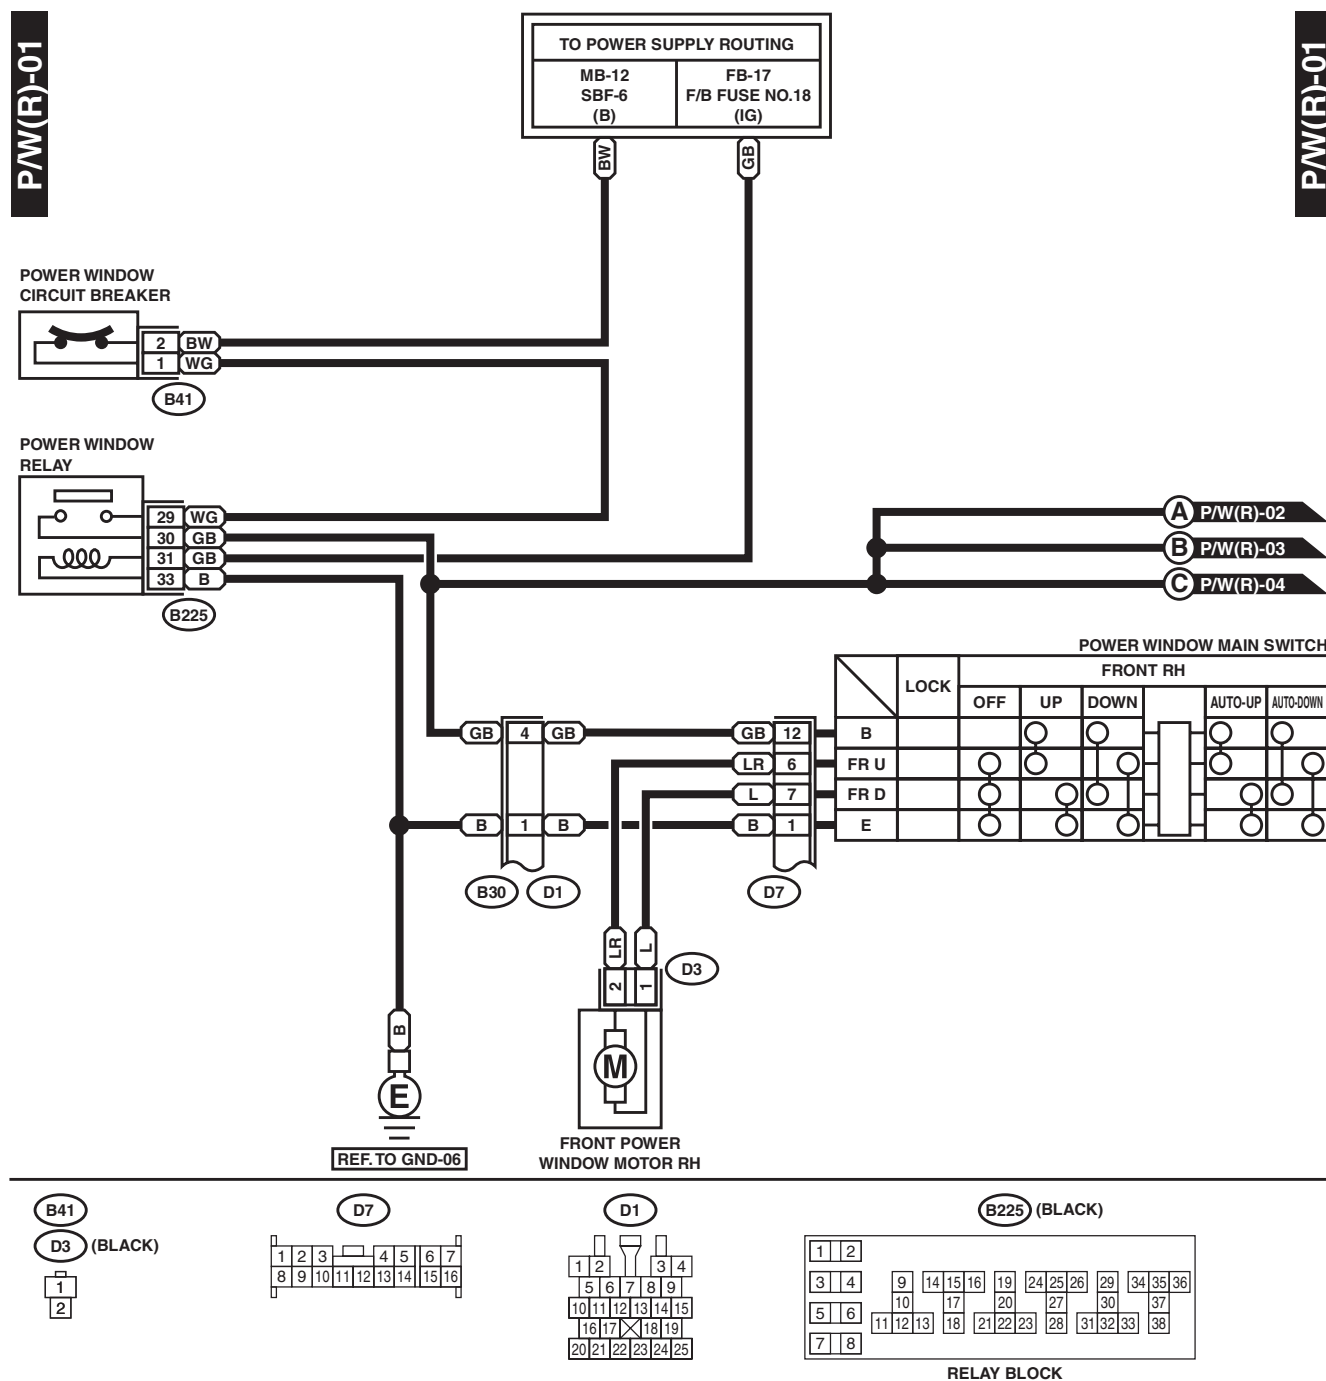


WI-04506

Power Window System

WIRING SYSTEM

P/W(R)-02


P/W(R)-02

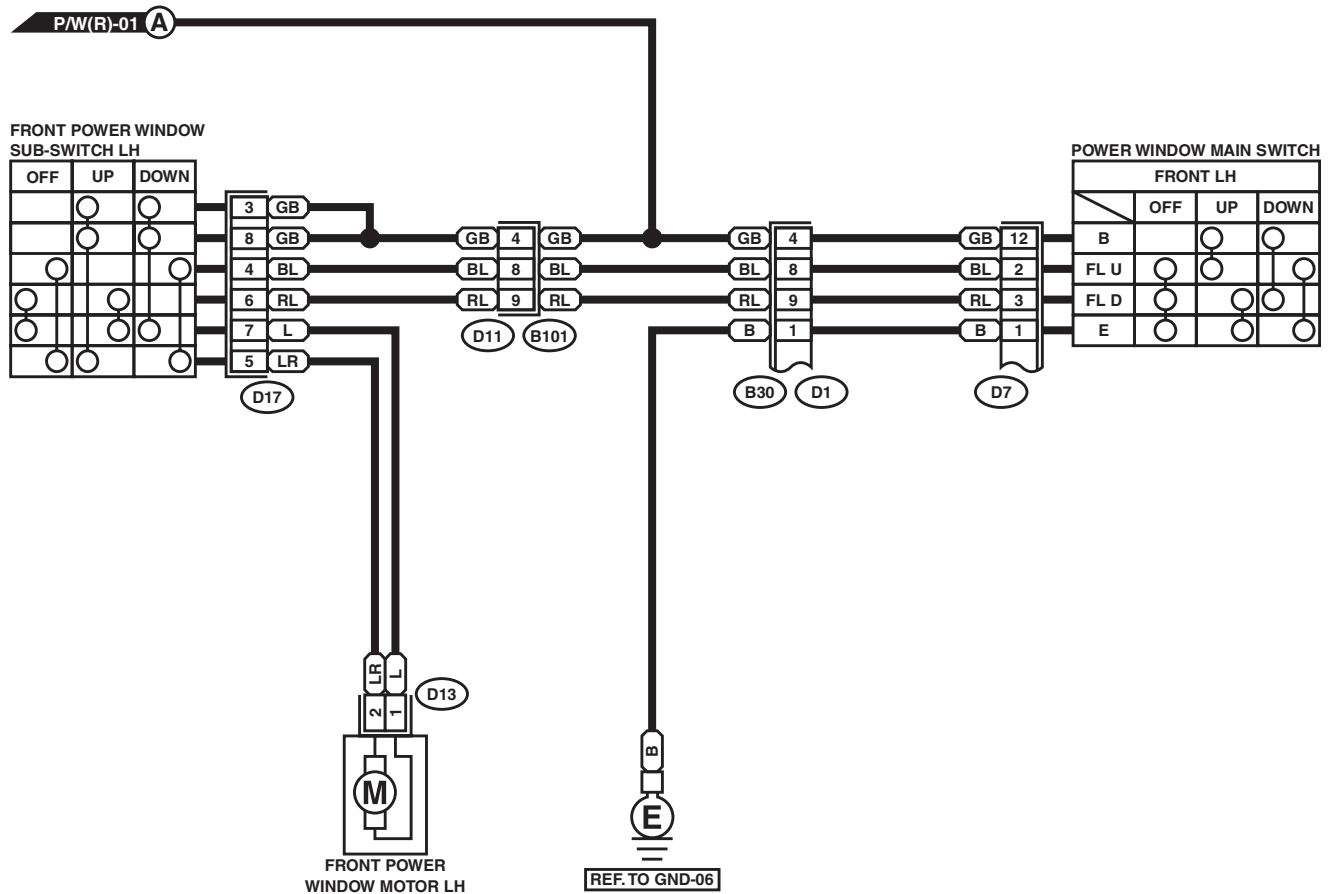


D13 (BLACK)




D17



D7



D1

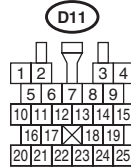


WI-04507

Power Window System

WIRING SYSTEM

P/W(R)-03


P/W(R)-03

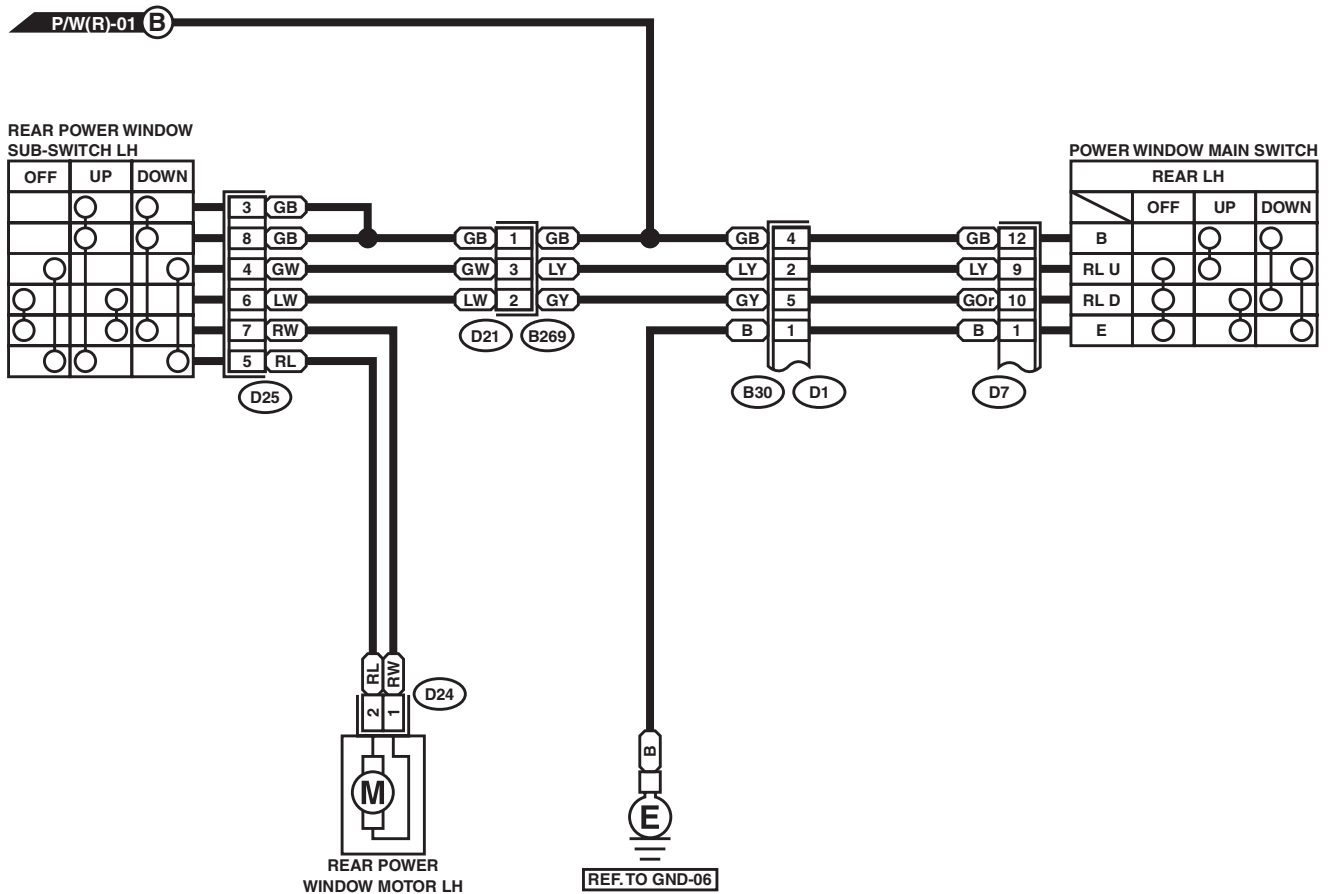


(D24) (BLACK)




(D21)




(D25)



(D7)



(D1)

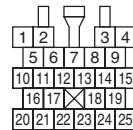


WI-04508

Power Window System

WIRING SYSTEM

P/W(R)-04

P/W(R)-04

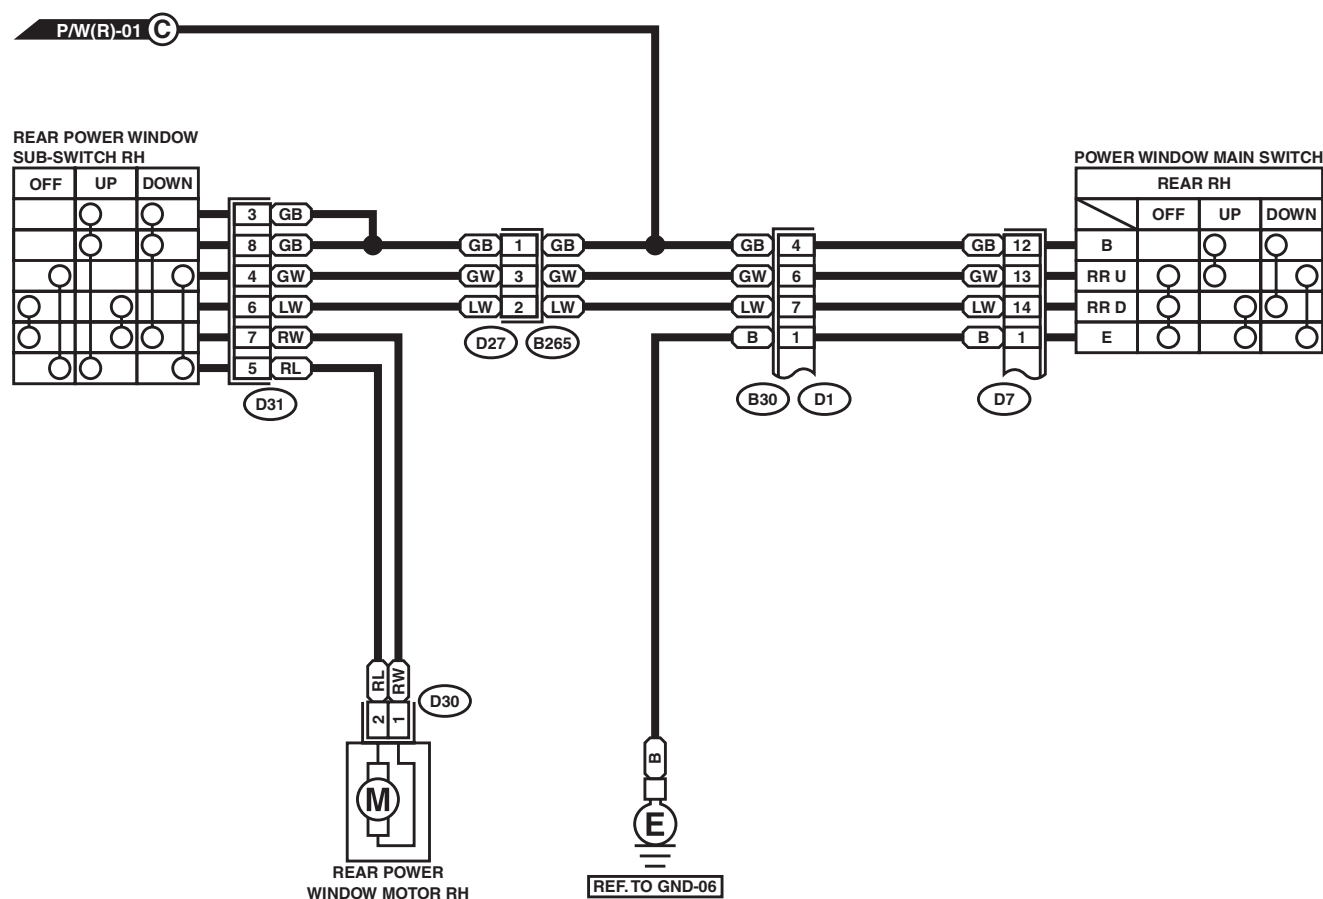


(D30) (BLACK)




(D27)




(D31)



(D7)



(D1)

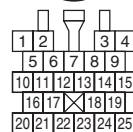

WI-04509


Radiator Fan System

WIRING SYSTEM

33.Radiator Fan System

A: WIRING DIAGRAM

1. NON-TURBO ENGINE MODEL

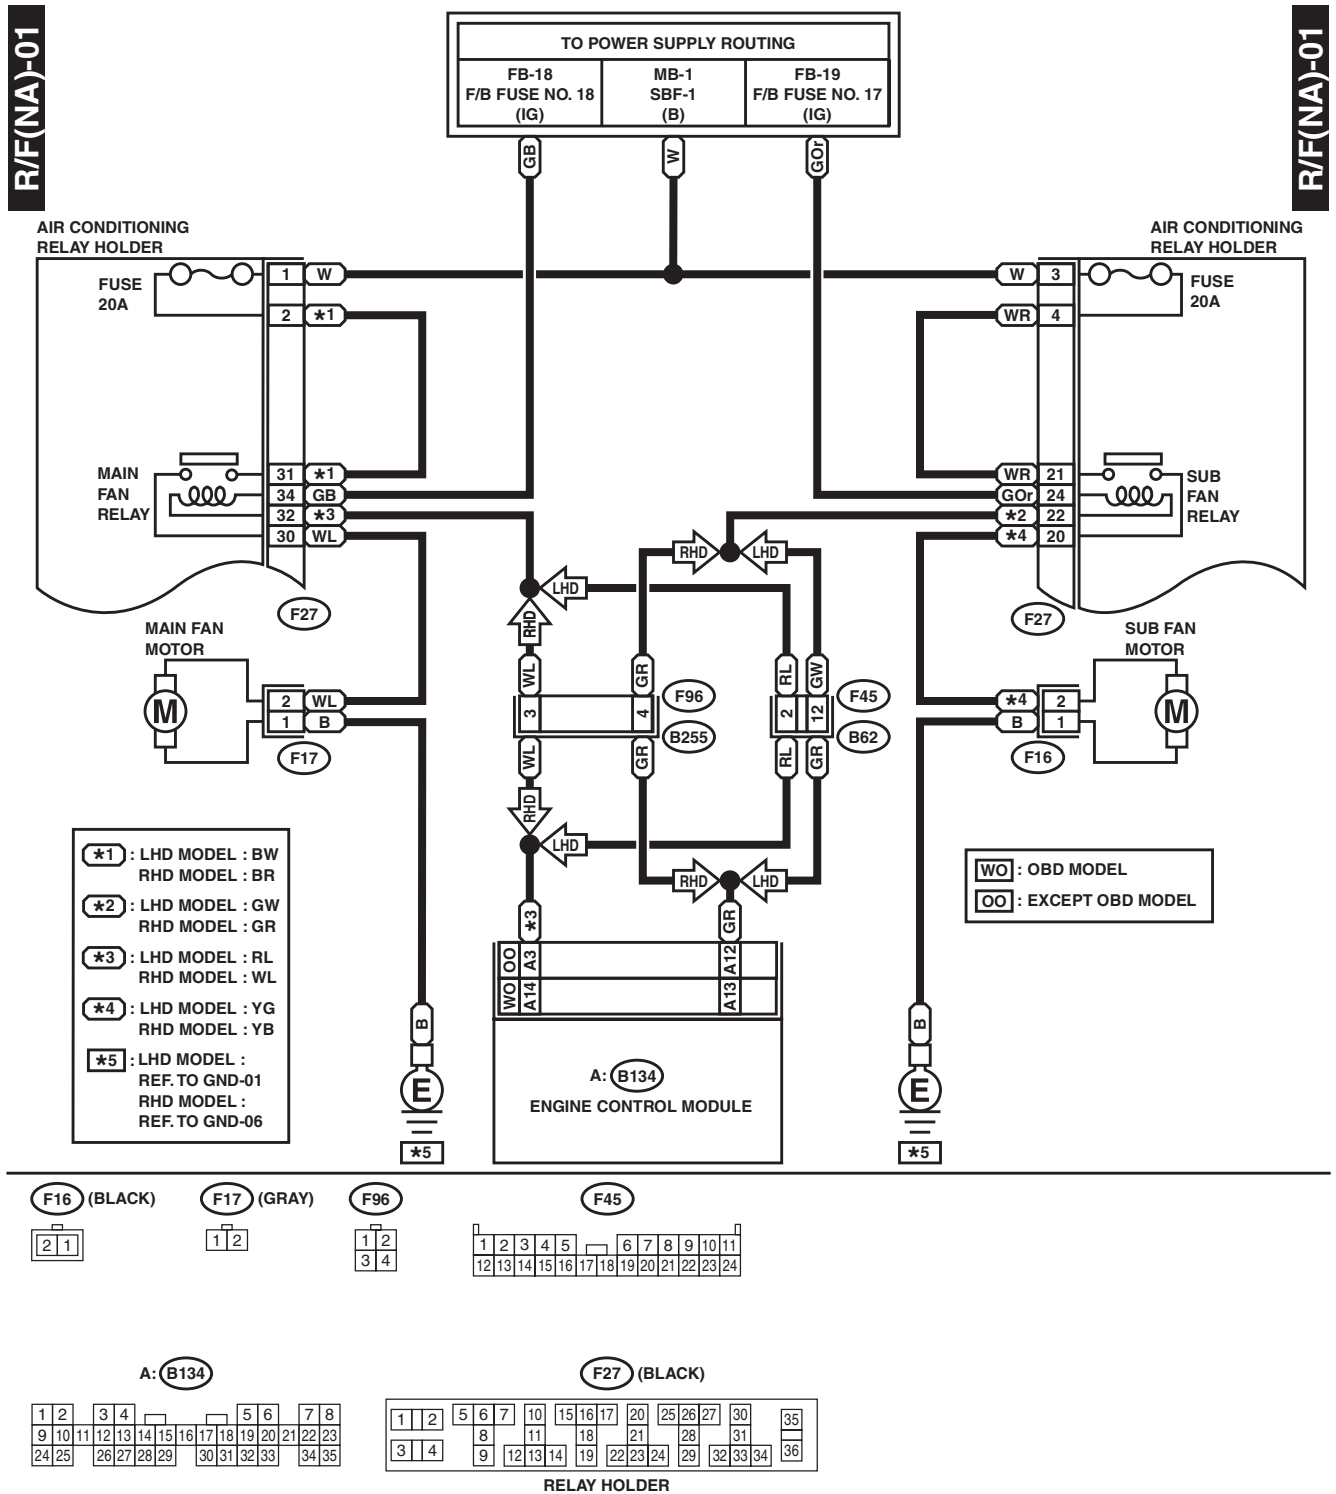


WI-04510

Radiator Fan System

WIRING SYSTEM

2. TURBO ENGINE MODEL

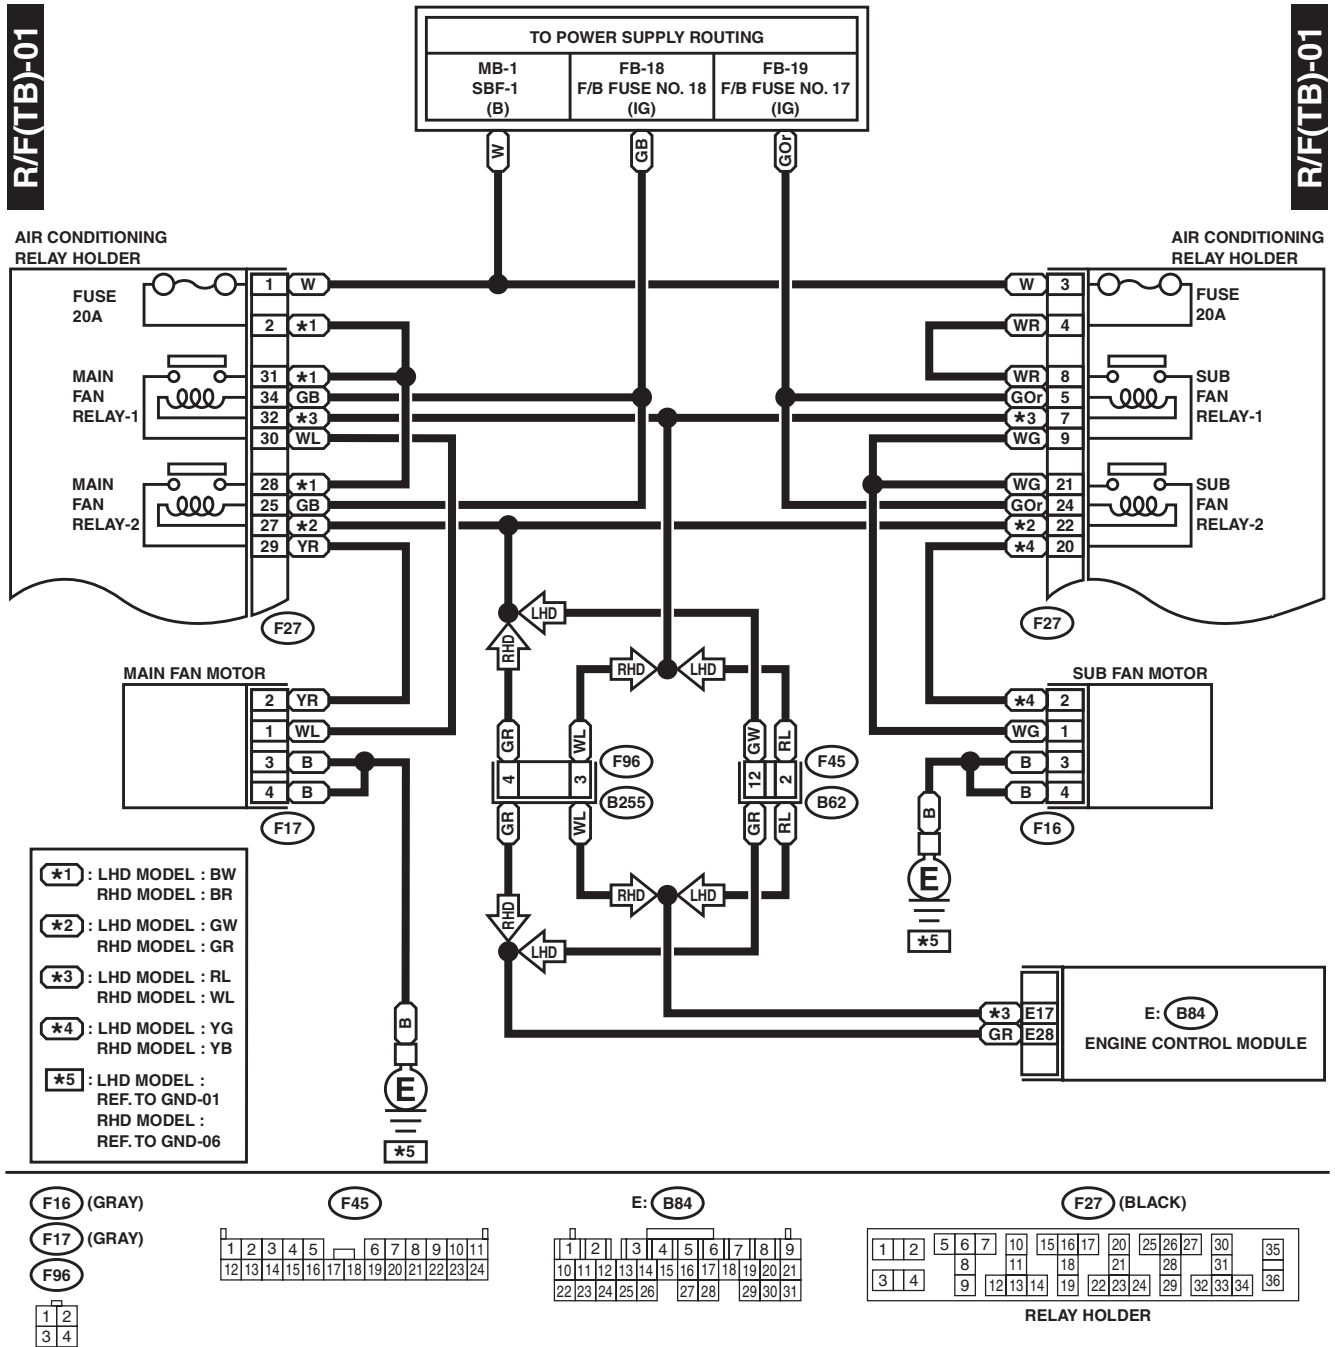

WI-04511


Rear Fog Light System

WIRING SYSTEM

34.Rear Fog Light System

A: WIRING DIAGRAM

1. LHD MODEL

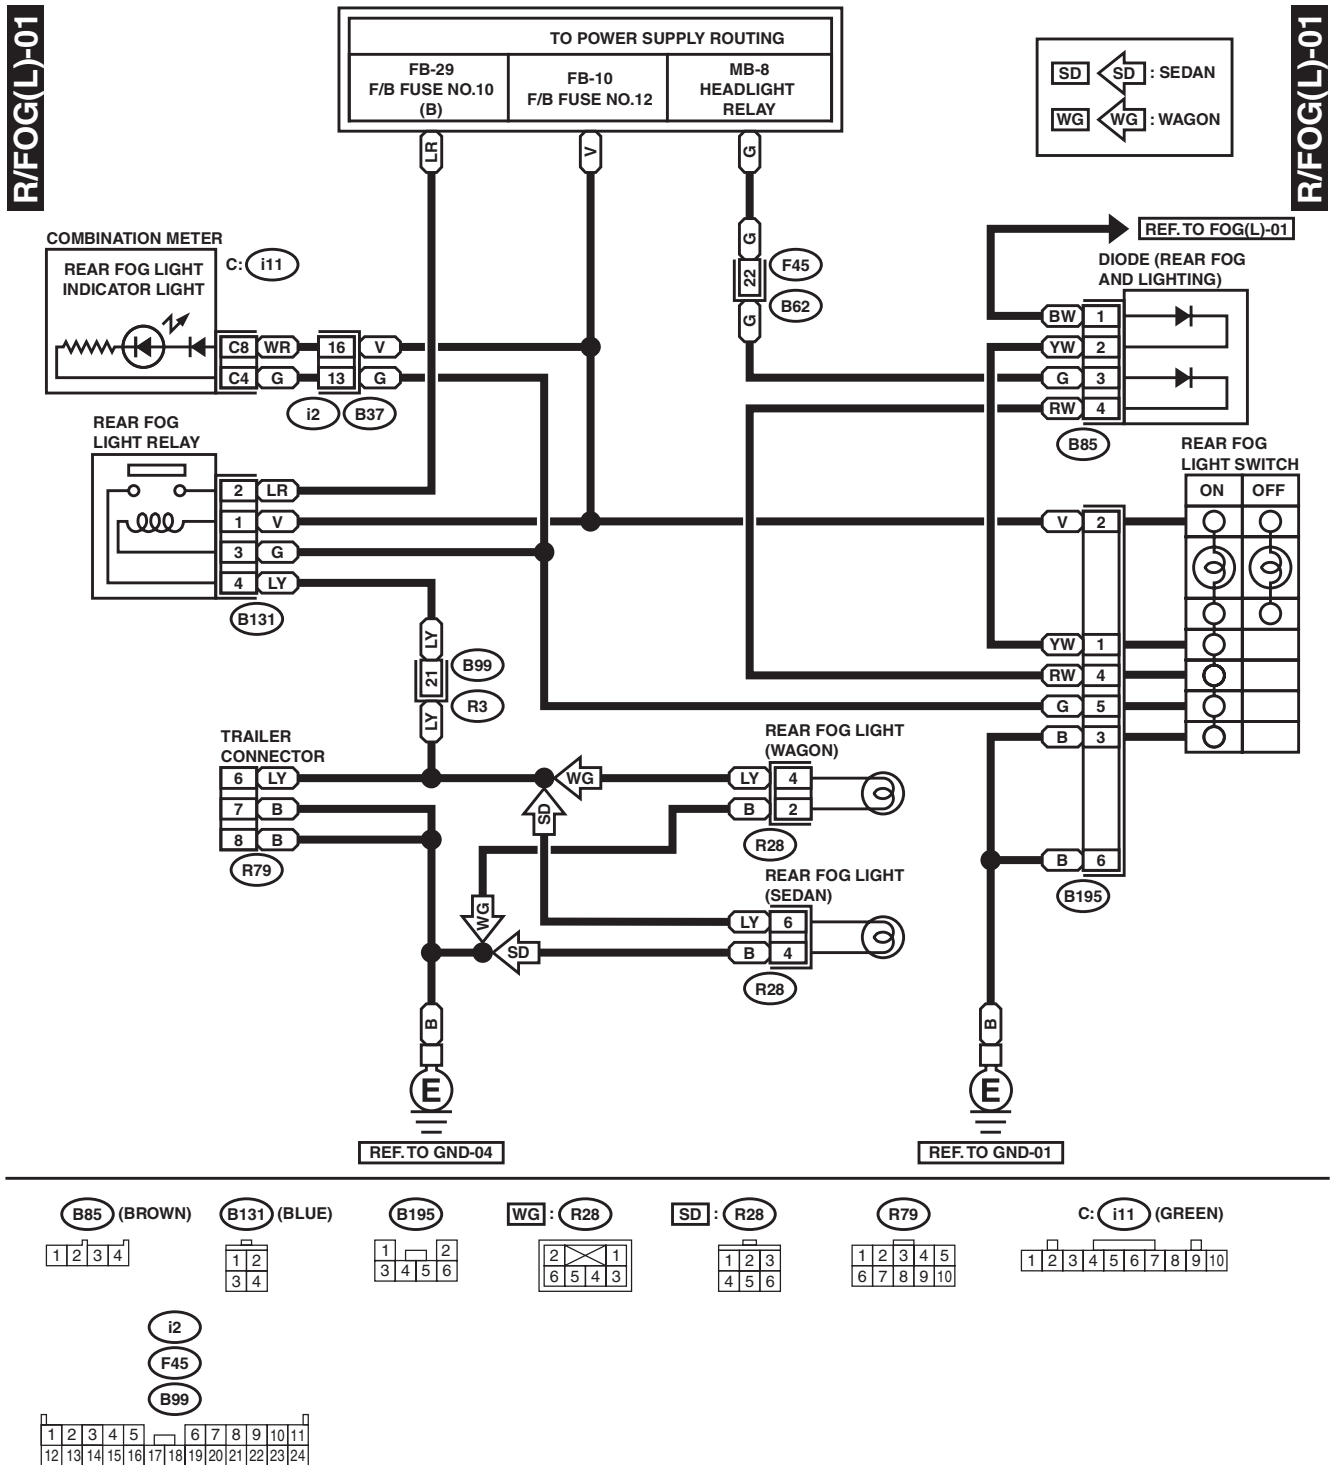


WI-04512

Rear Fog Light System

WIRING SYSTEM

2. RHD MODEL

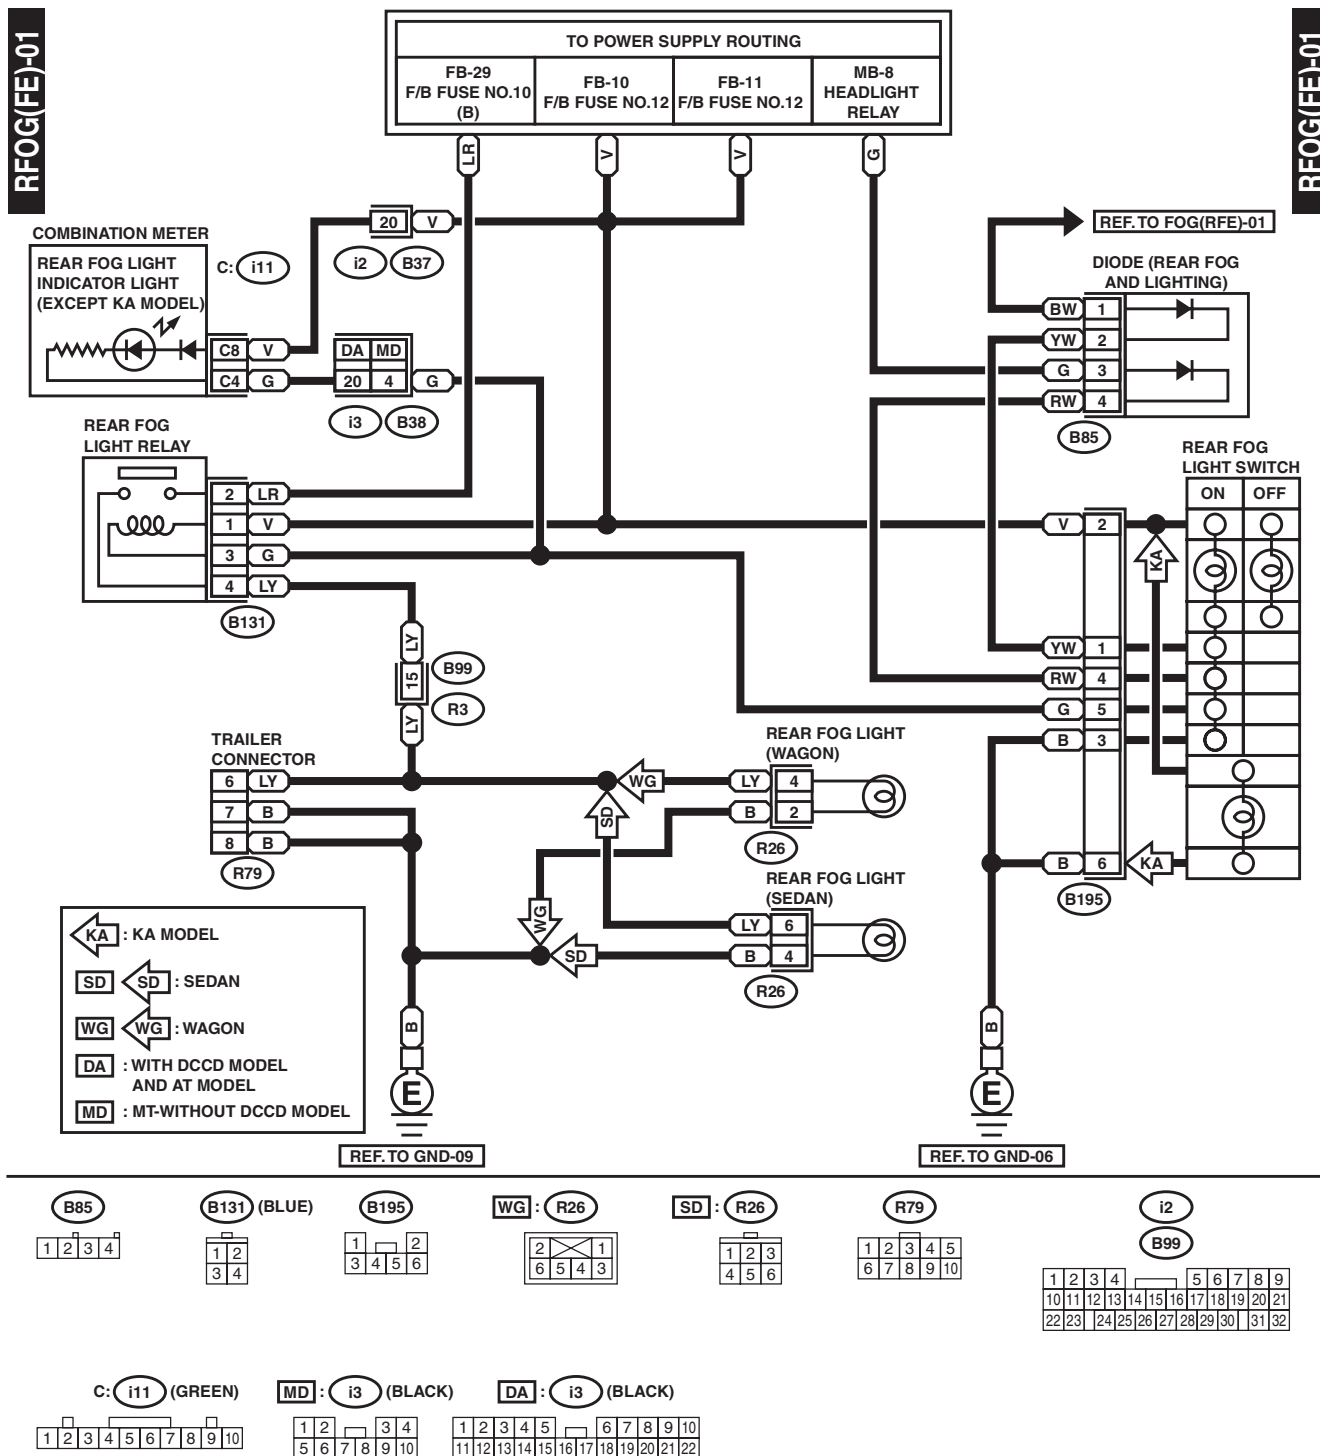

WI-04513


Rear Window Defogger System

WIRING SYSTEM

35.Rear Window Defogger System

A: WIRING DIAGRAM

1. LHD MODEL

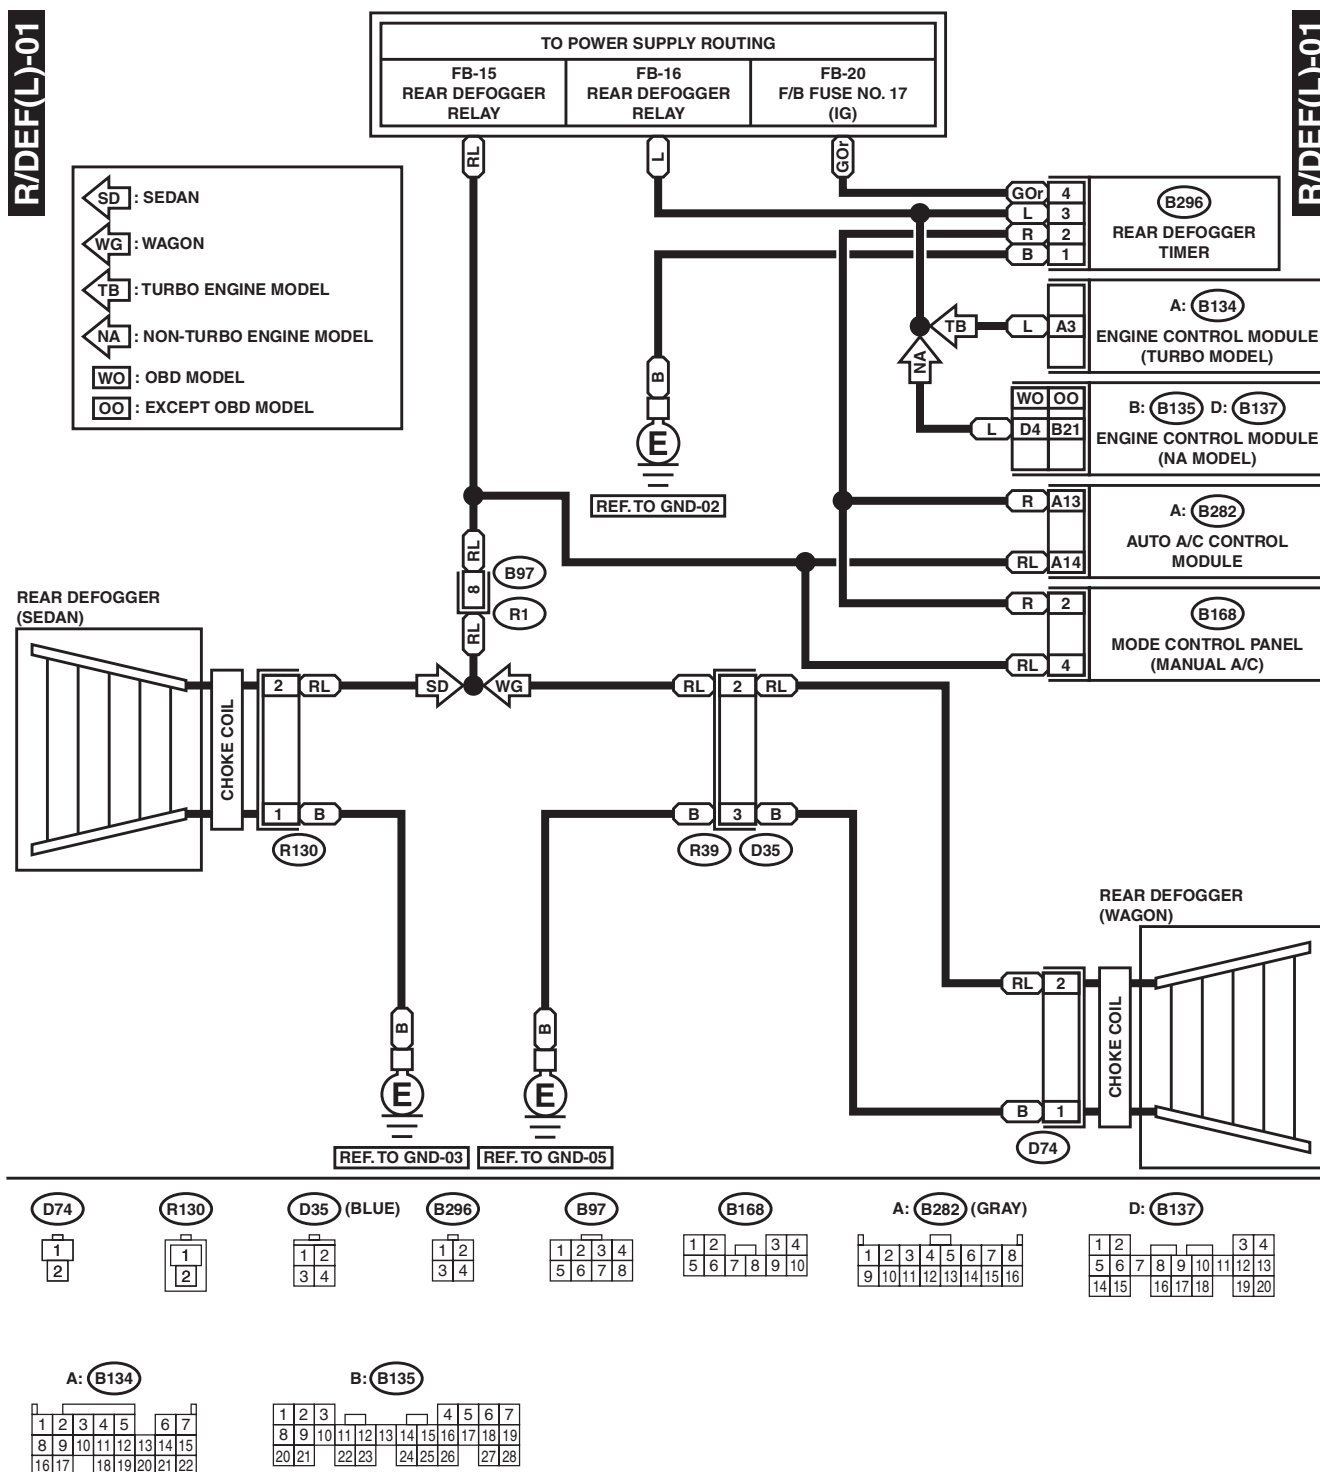


WI-04578

Rear Window Defogger System

WIRING SYSTEM

2. RHD MODEL

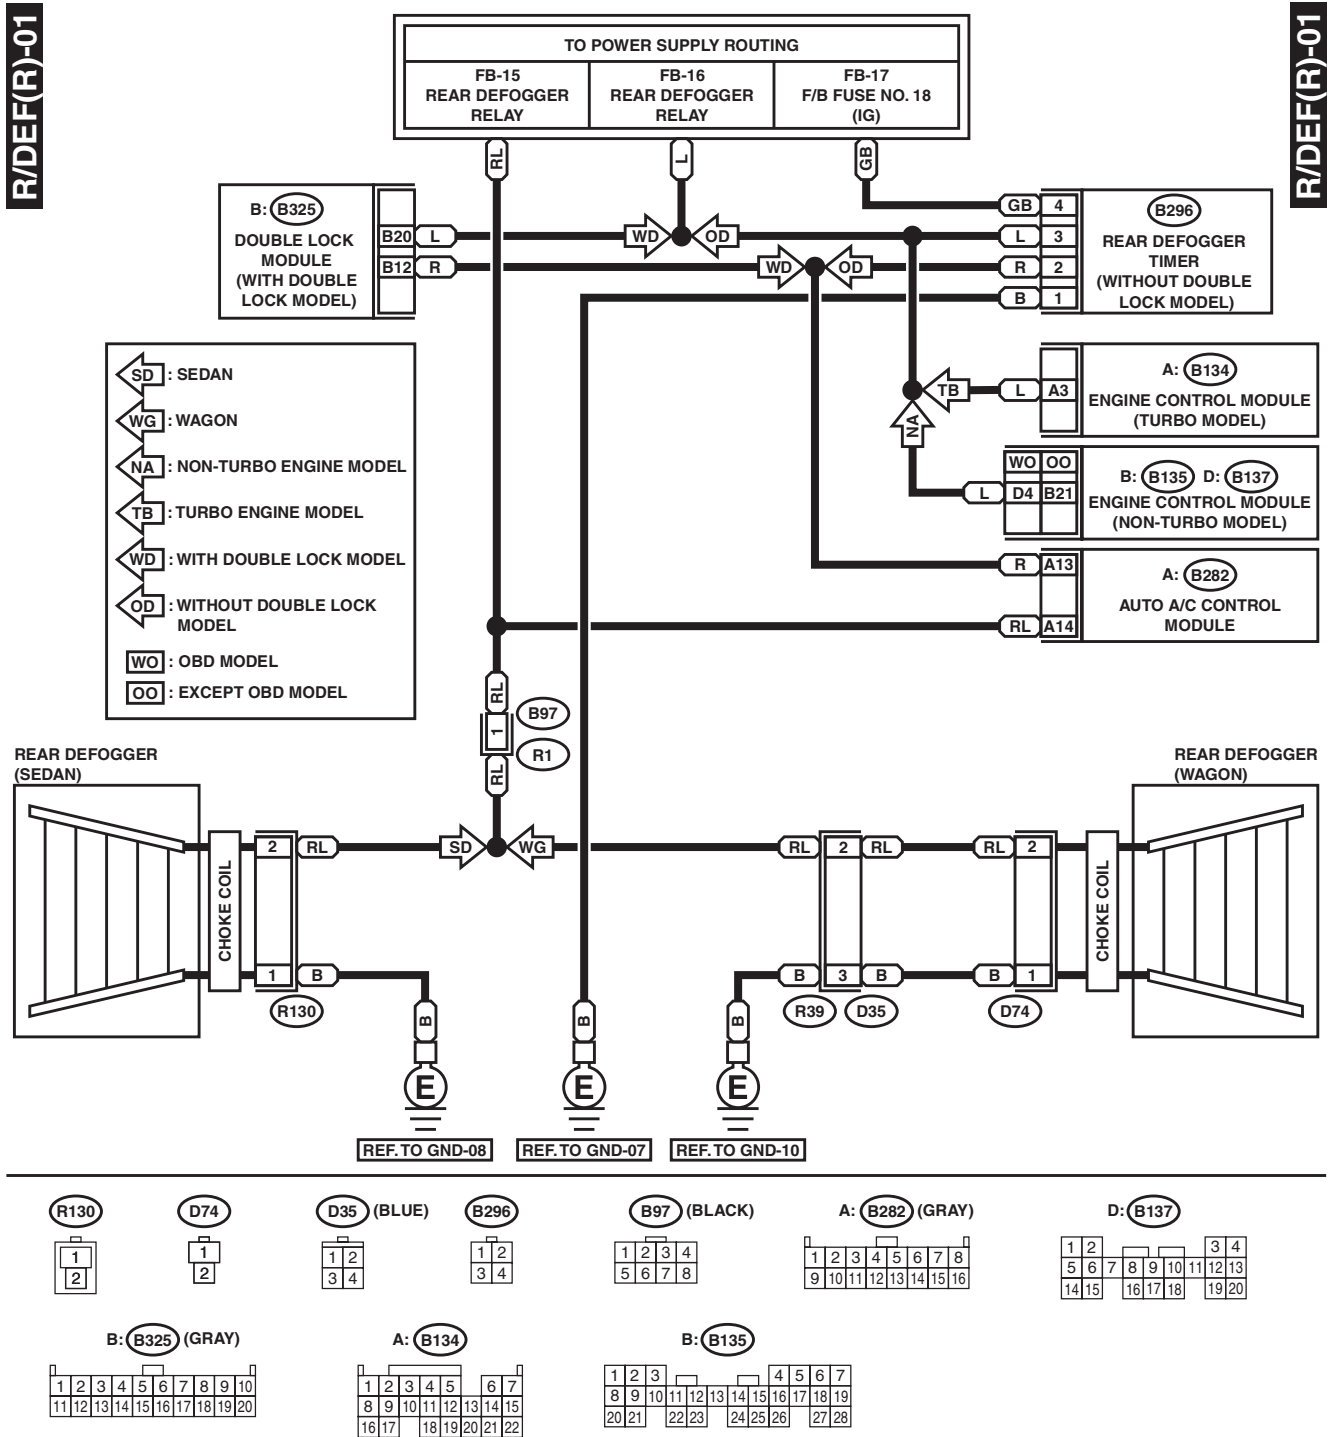

WI-04579

WIRING SYSTEM

A: WIRING DIAGRAM


1. LHD MODEL



Remote Controlled Rearview Mirror System

WIRING SYSTEM

2. RHD MODEL

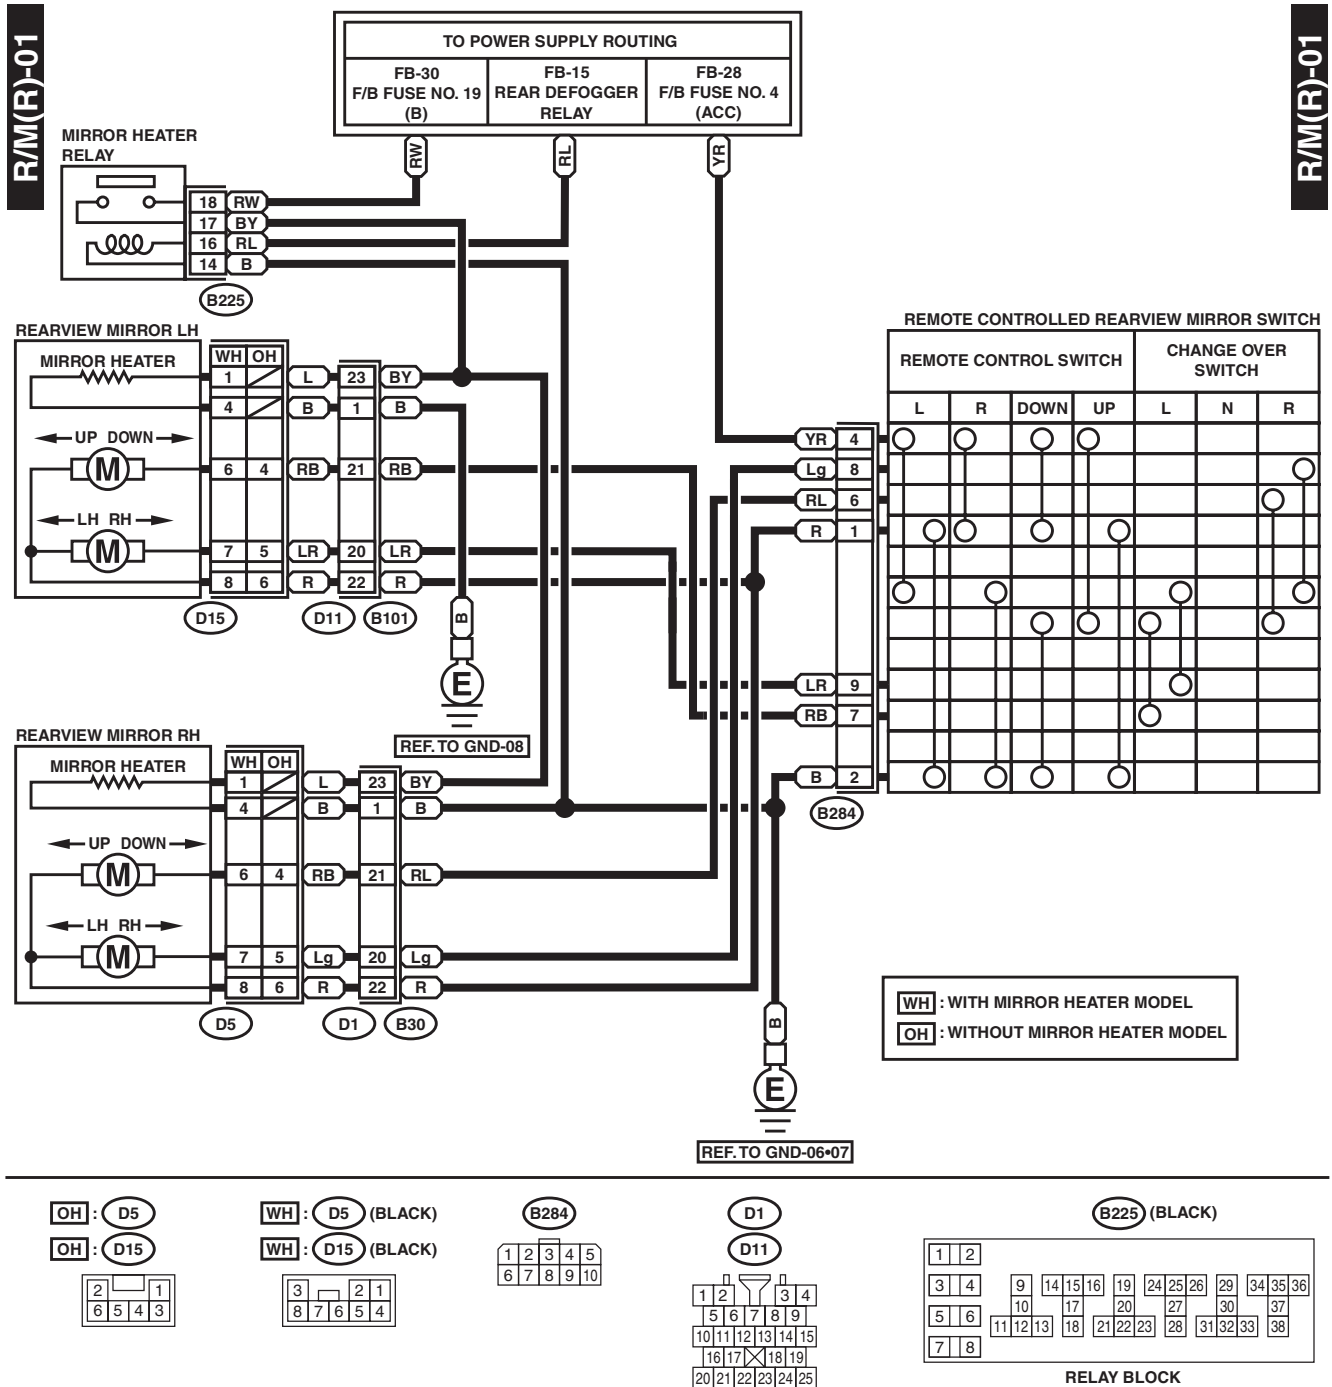

WI-04581


Seat Belt Warning System

WIRING SYSTEM

37.Seat Belt Warning System

A: WIRING DIAGRAM

1. WITHOUT SEAT BELT TIMER MODEL

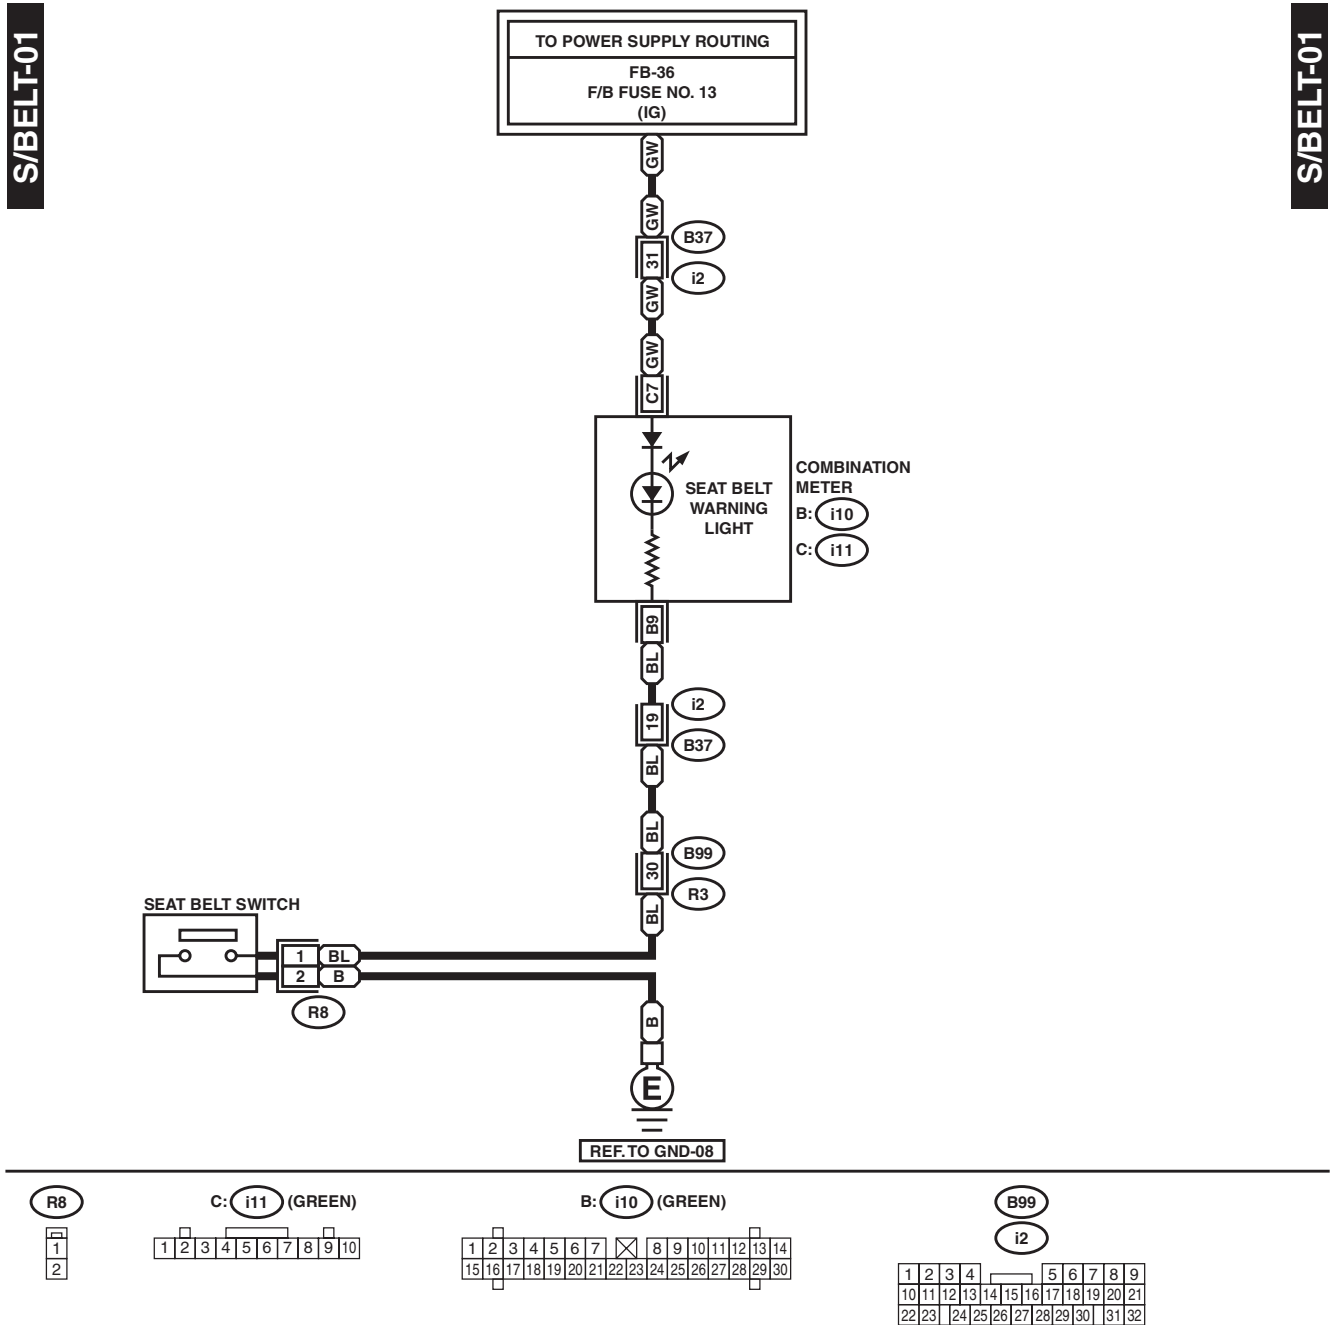

WI-02427


Seat Belt Warning System

WIRING SYSTEM

2. WITH SEAT BELT TIMER EXCEPT FOR EUROPE MODEL

S/BEL(T)-01


S/BEL(T)-01

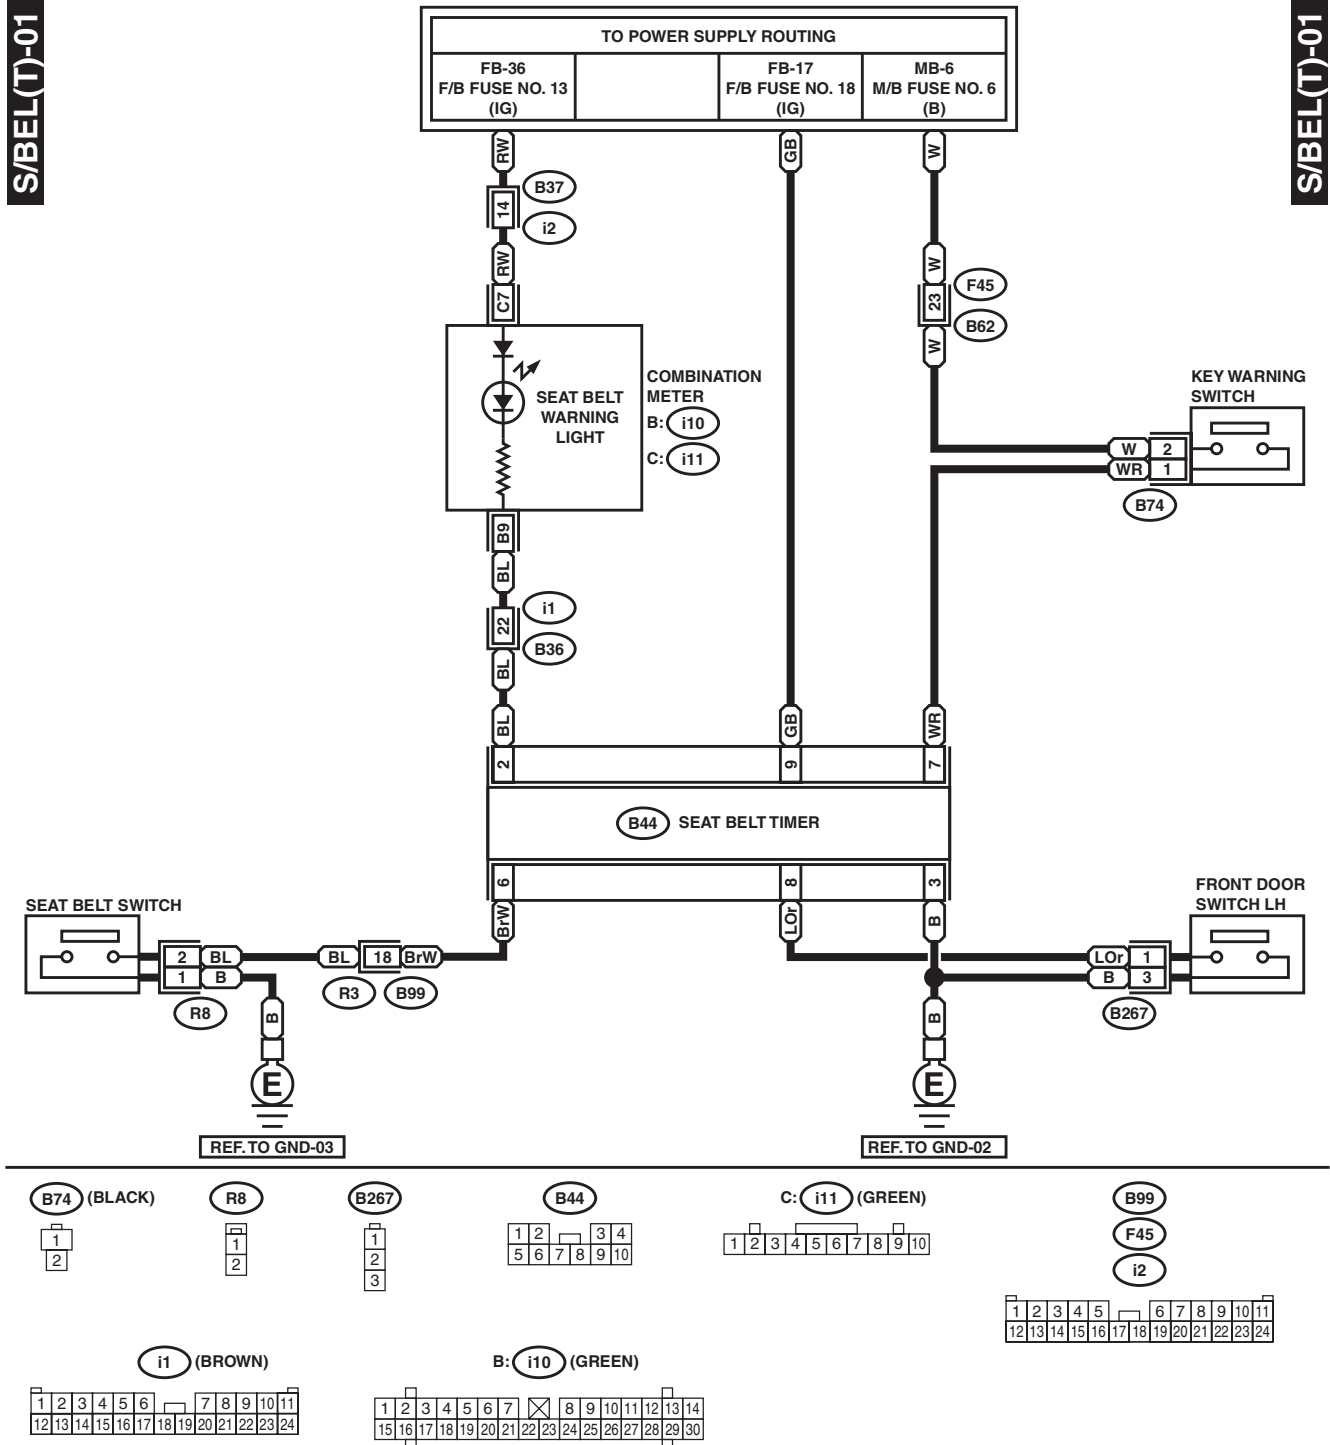

WI-02428

WIRING SYSTEM

3. LHD FOR EUROPE MODEL

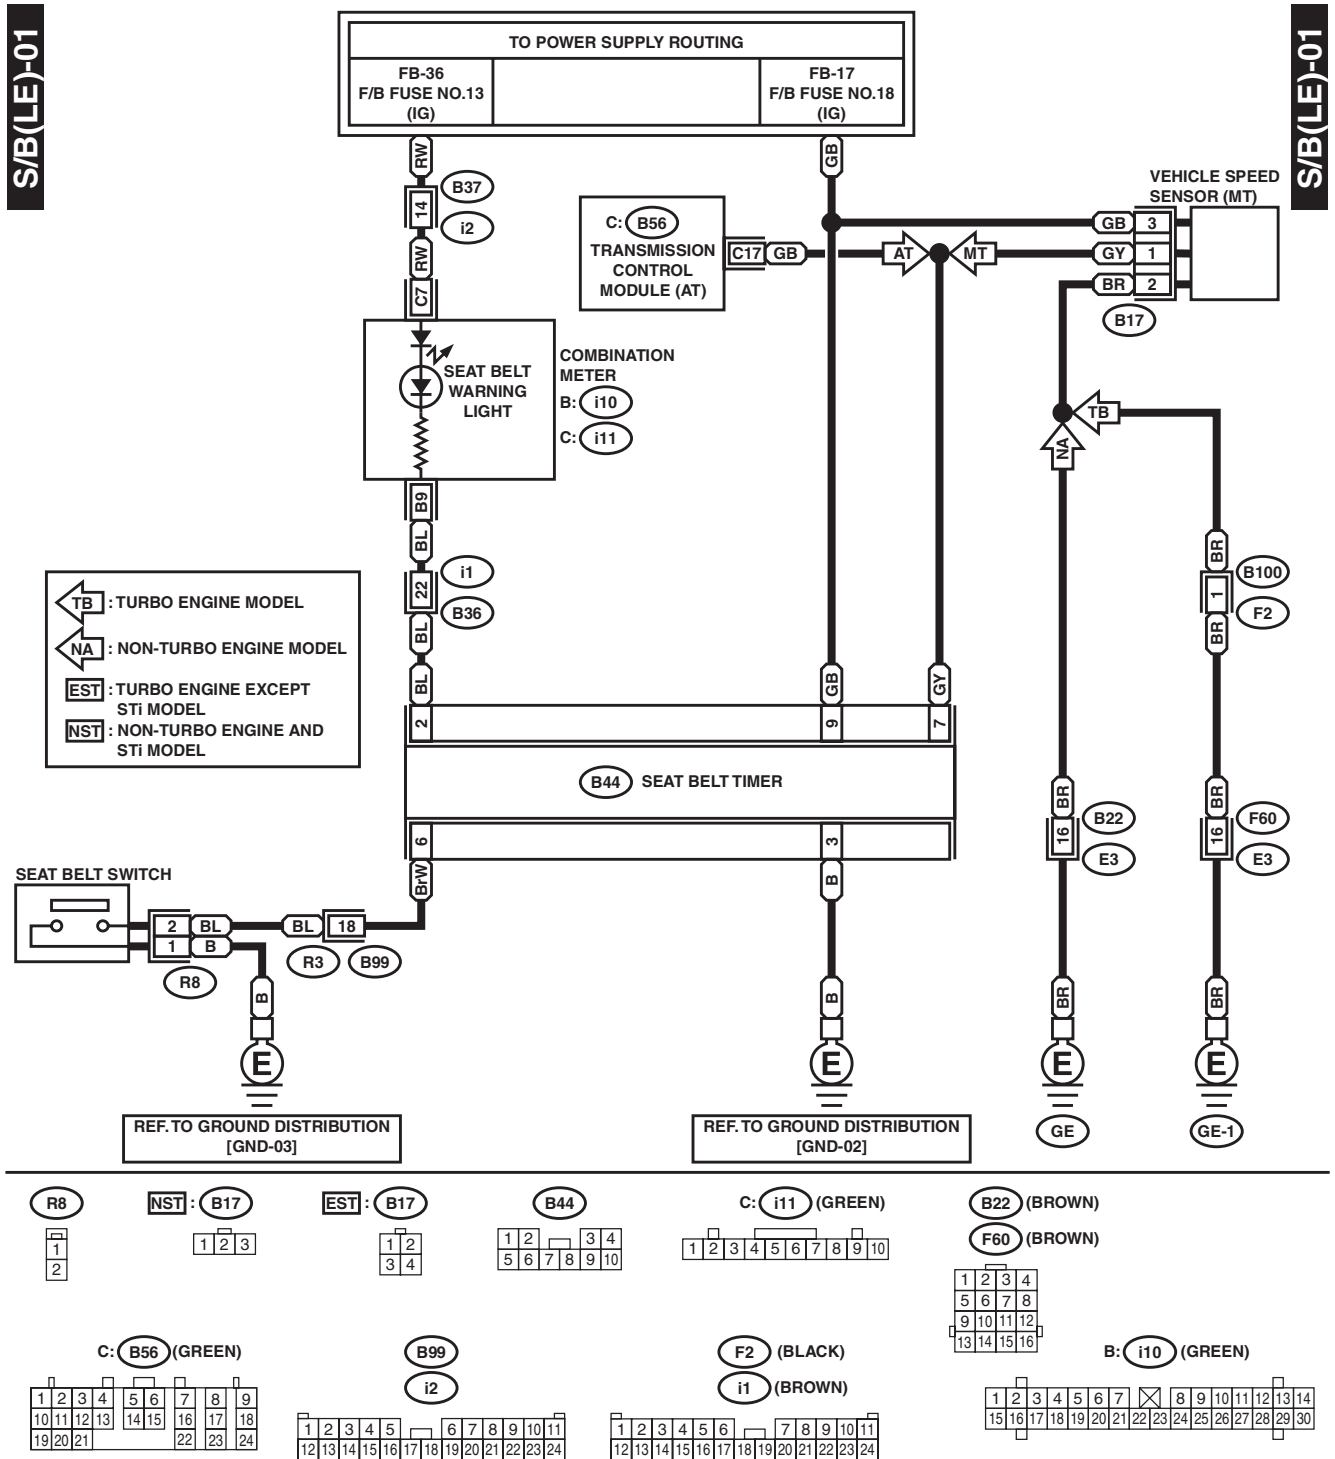


WI-02429

Seat Belt Warning System

WIRING SYSTEM

4. RHD FOR EUROPE MODEL

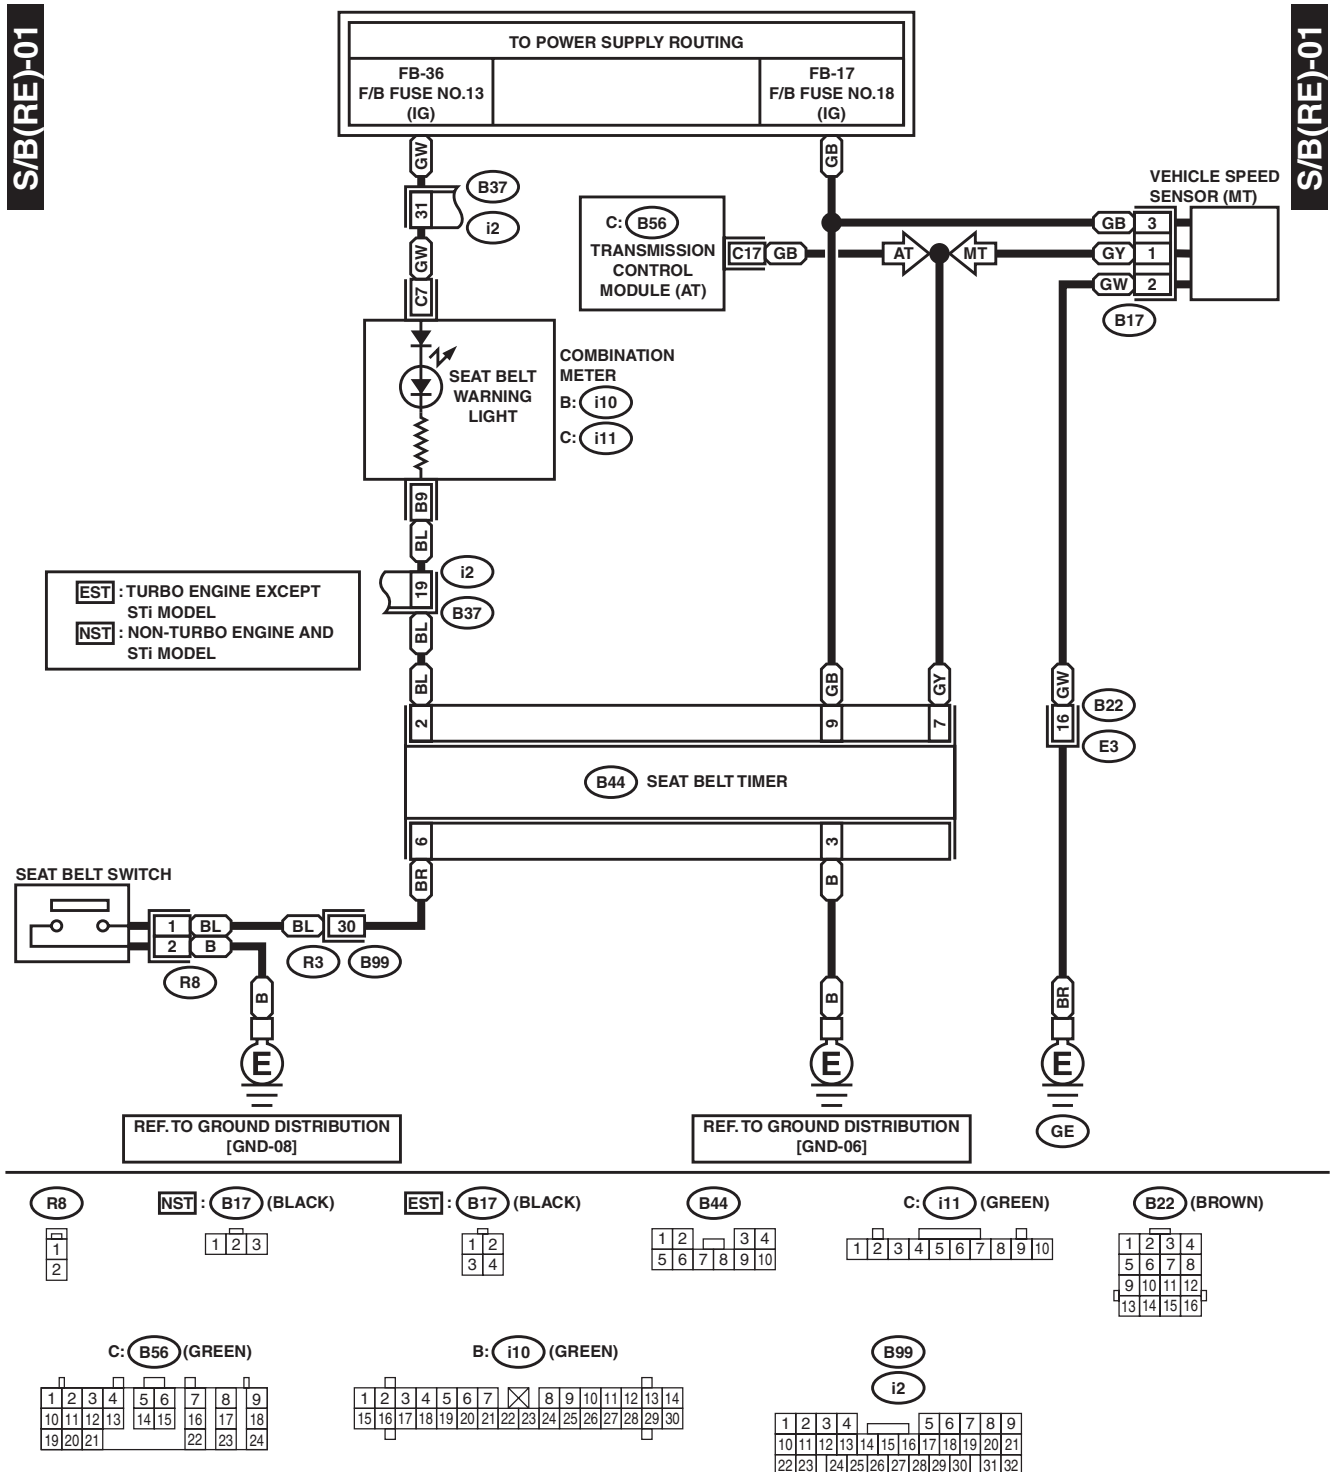


WI-02430

Seat Heater System

WIRING SYSTEM


38.Seat Heater System

A: WIRING DIAGRAM

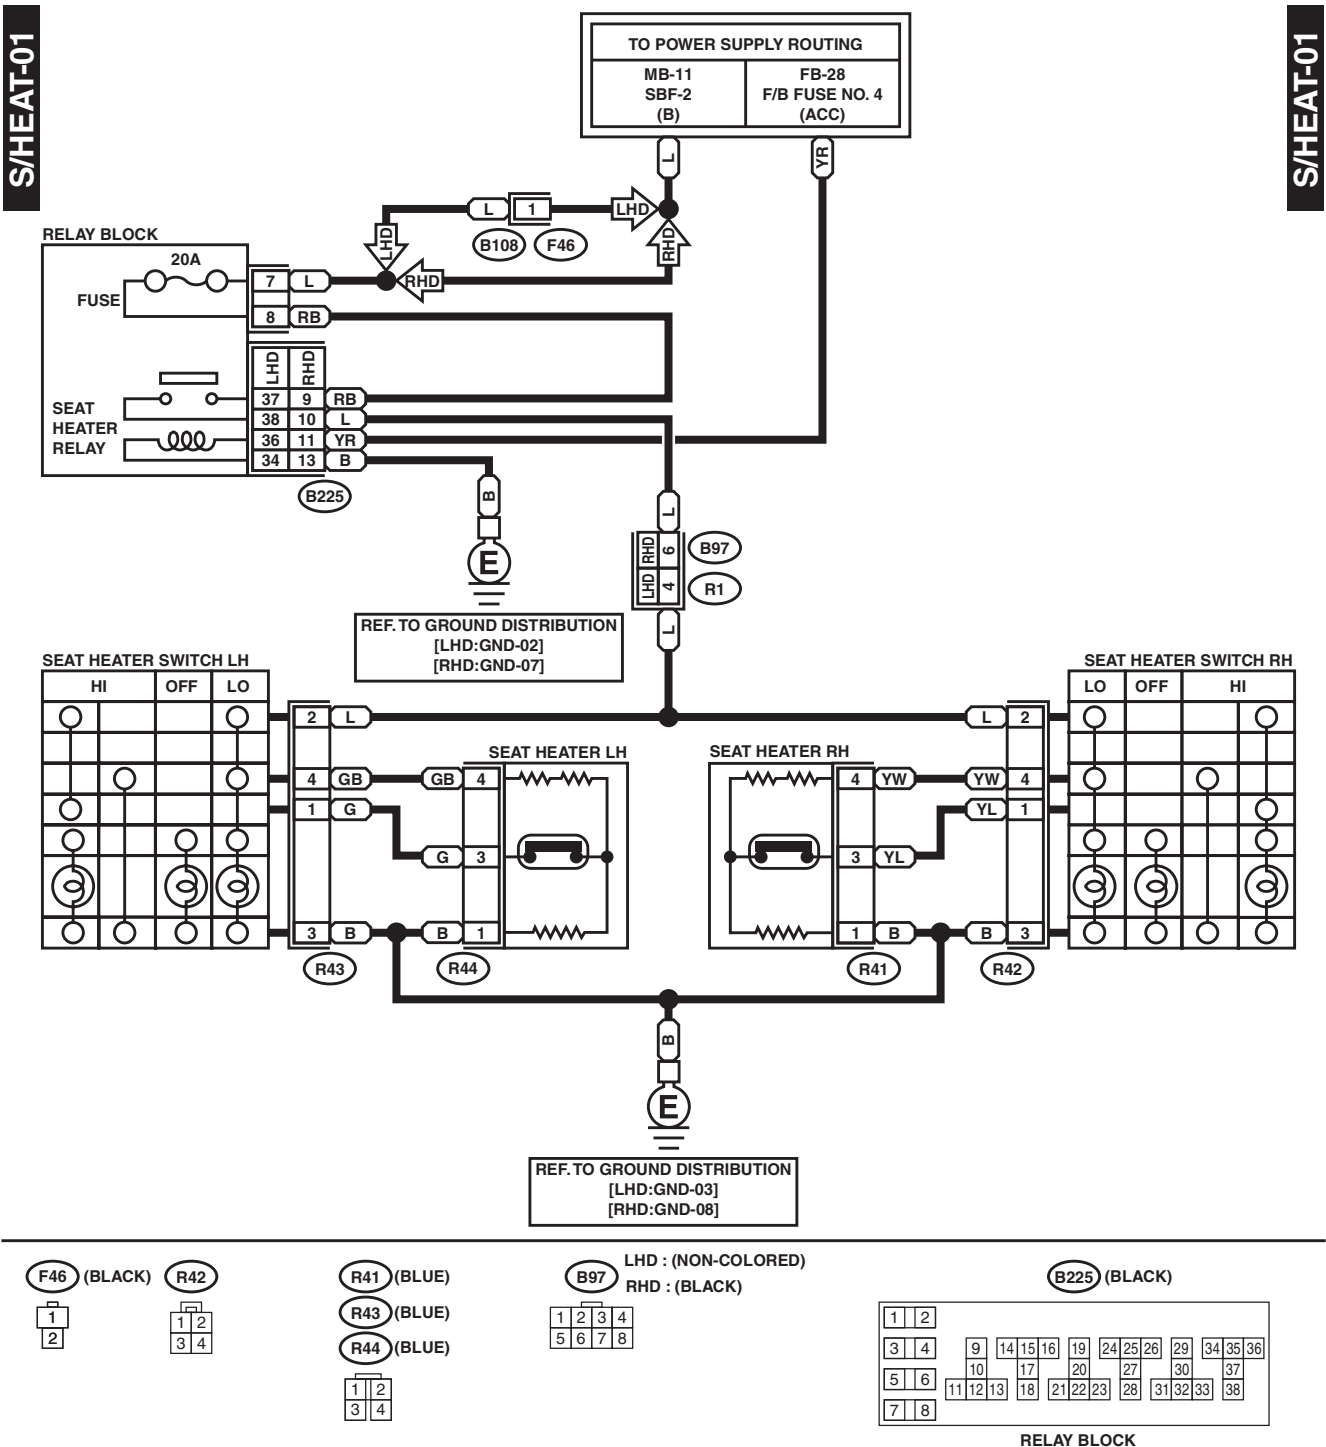

39.Security System

A: WIRING DIAGRAM

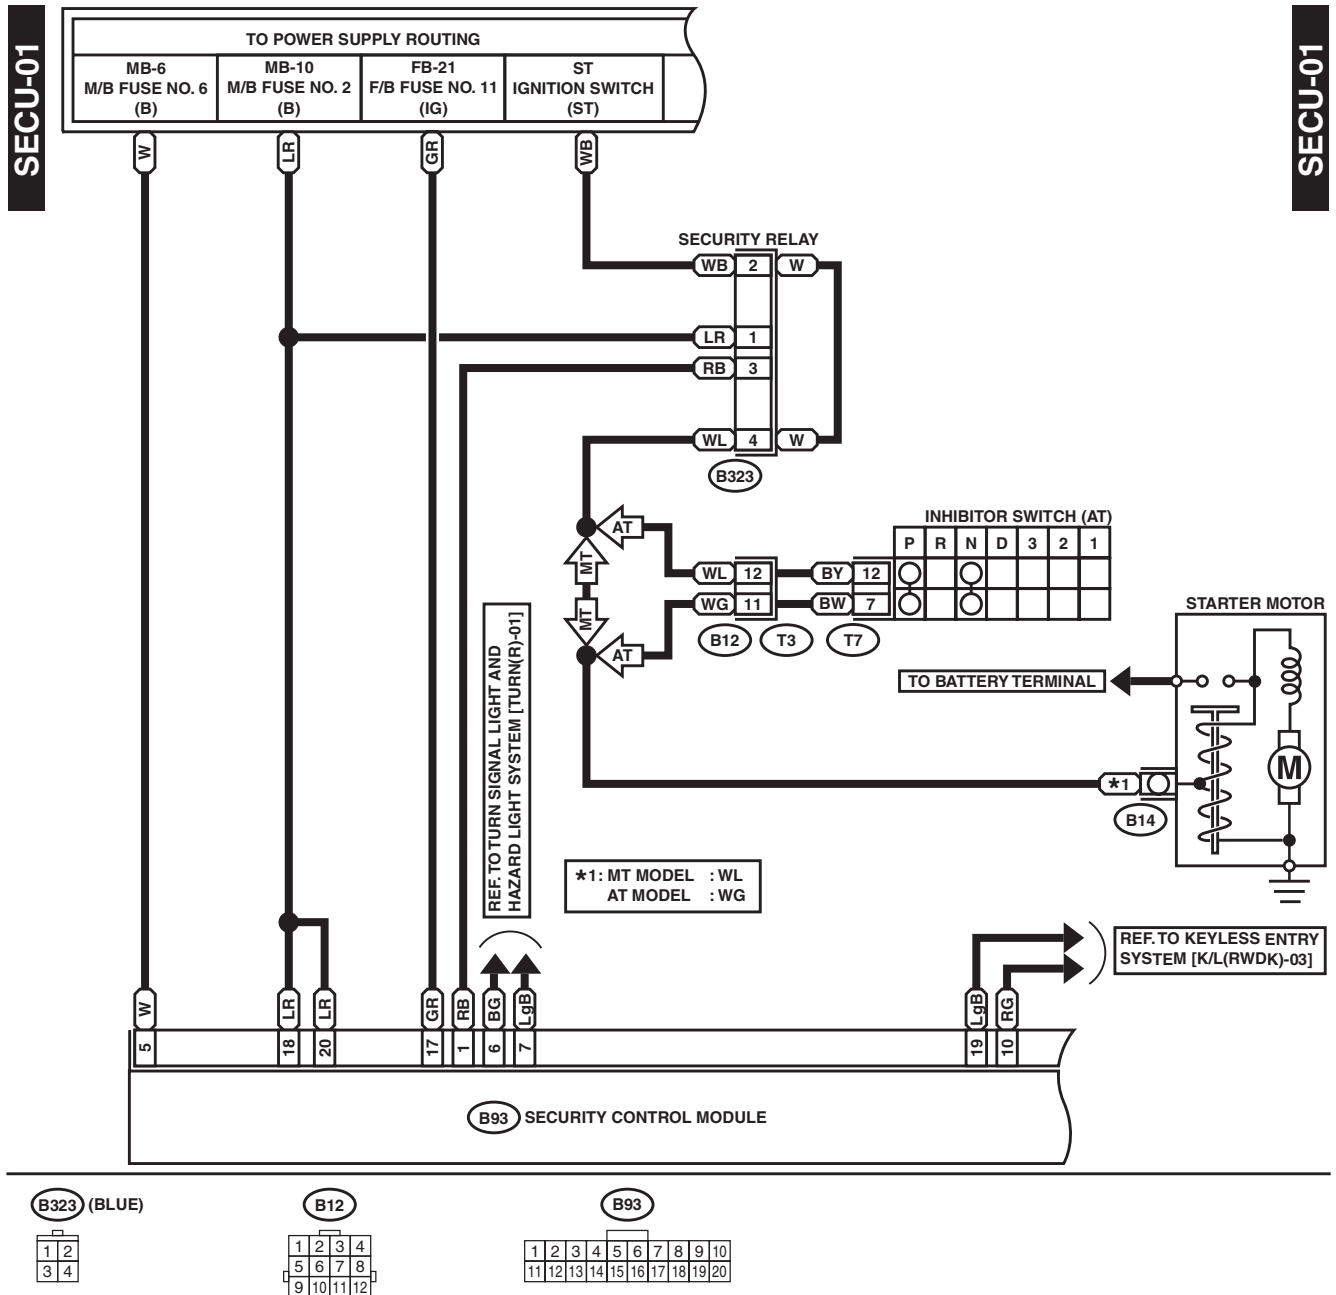


Security System

WIRING SYSTEM

SECU-02

SECU-02

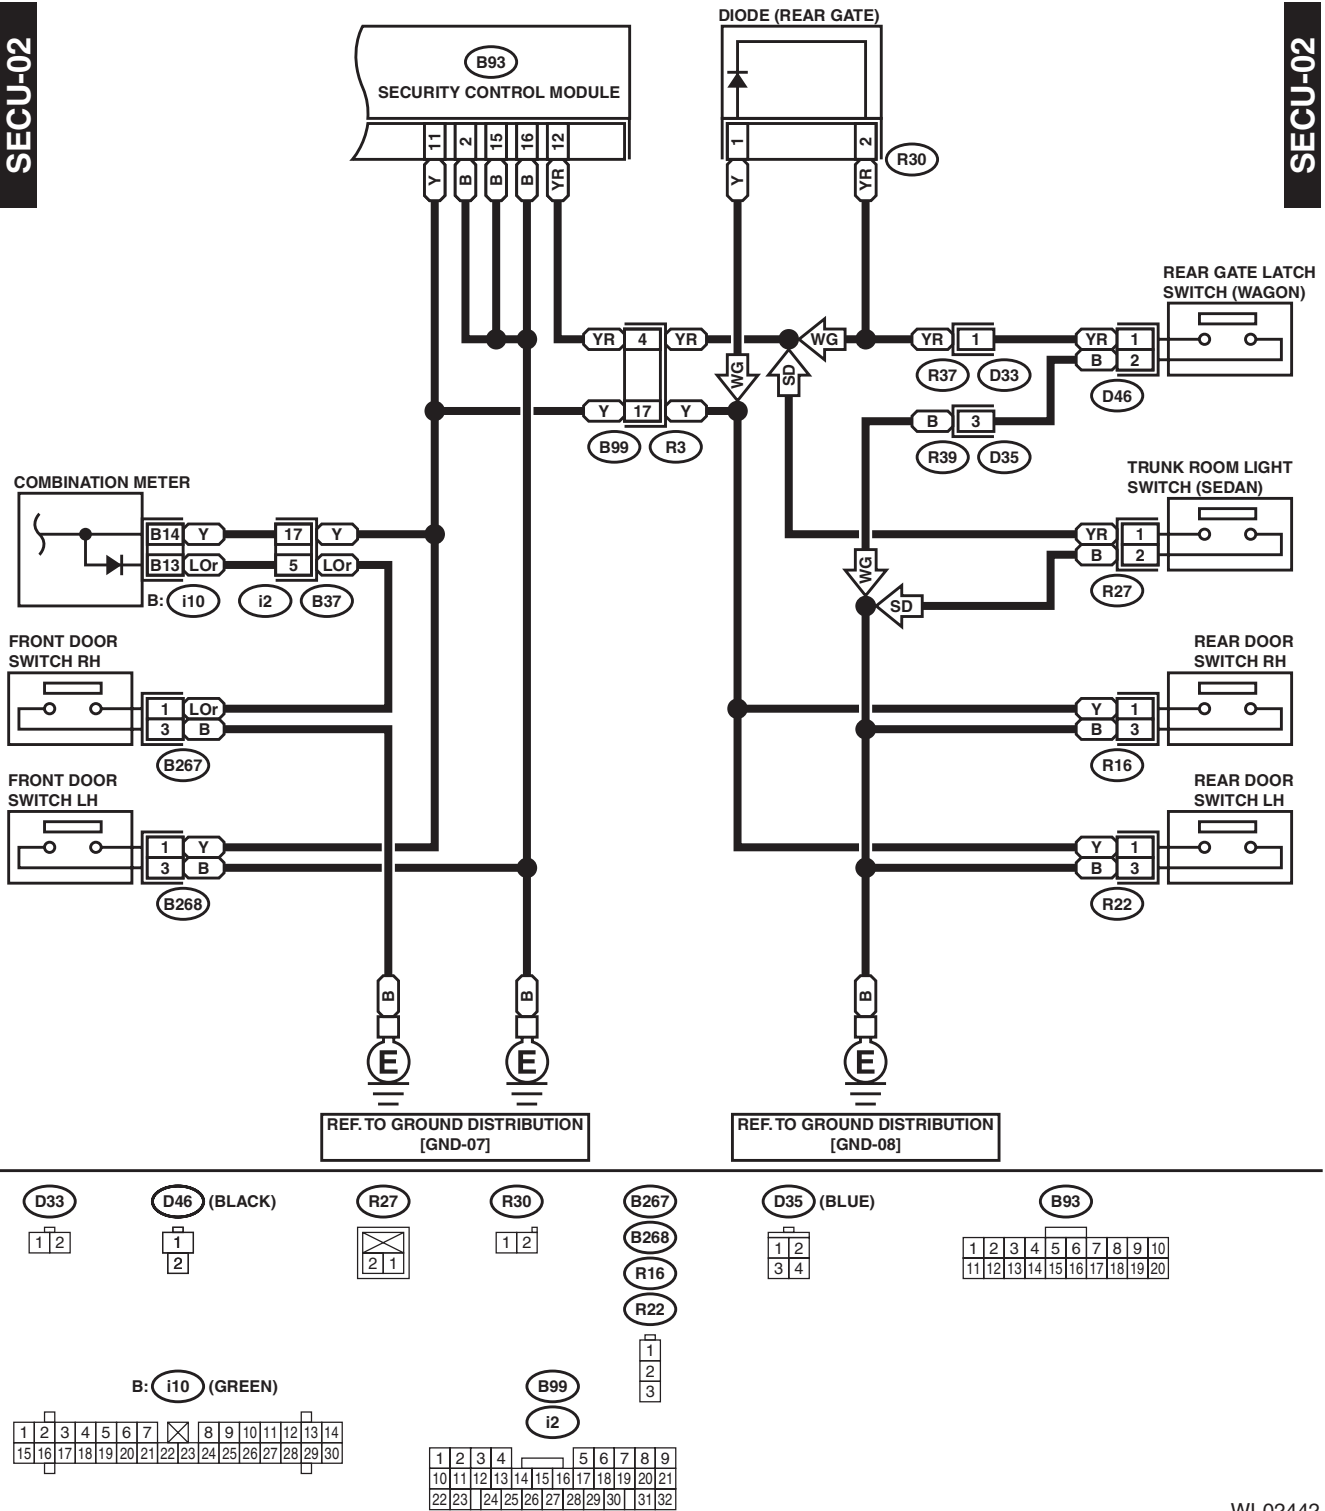


WI-02442

Starter System

WIRING SYSTEM

40.Starter System A: WIRING DIAGRAM

1. MT MODEL

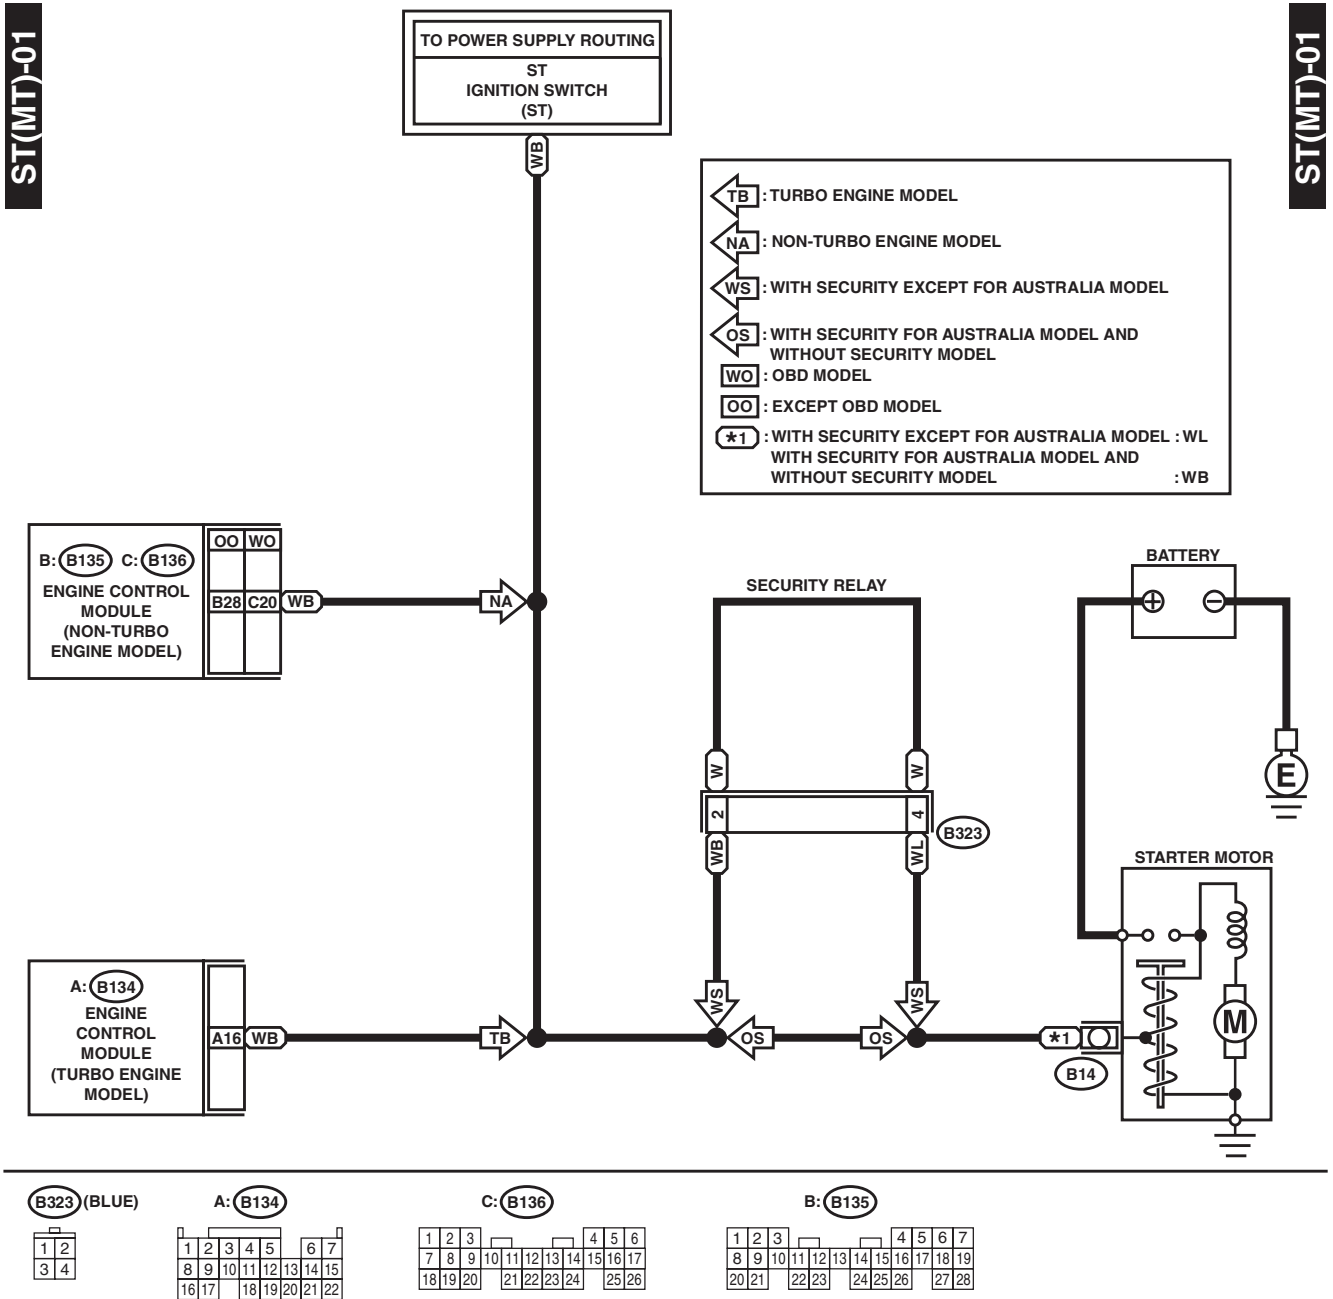

WI-02431


Starter System

WIRING SYSTEM

2. AT MODEL

ST(AT)-01

ST(AT)-01

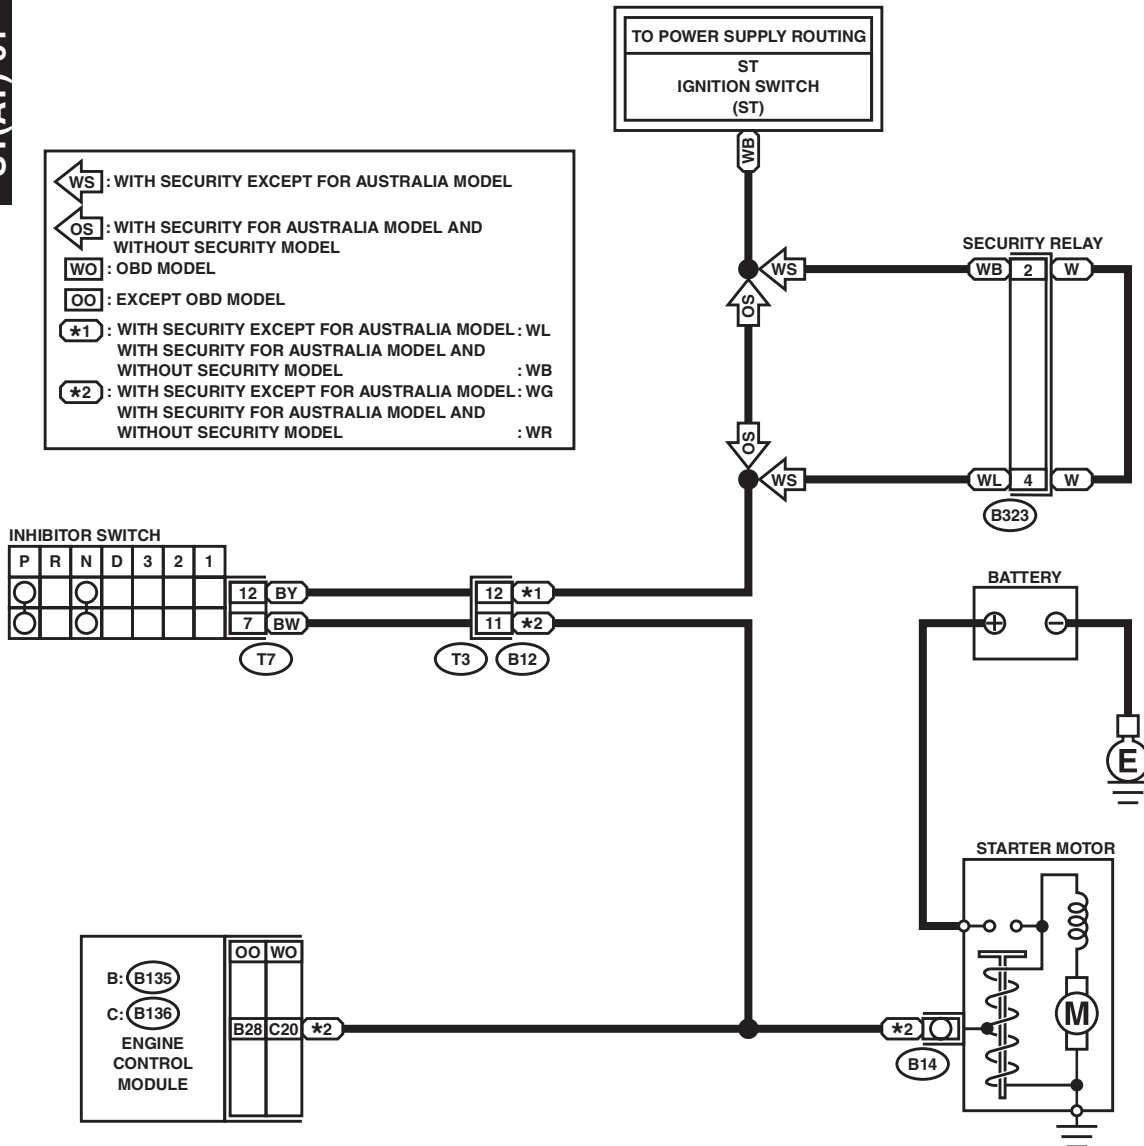

B323 (BLUE)

1	2
3	4

B12

1	2	3	4
5	6	7	8
9	10	11	12

T7

1	2	3	4	5	6
7	8	9	10	11	12

C: (B136)

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26				

B: (B135)


1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28

WI-02432

Sunroof System

WIRING SYSTEM

41.Sunroof System
A: WIRING DIAGRAM

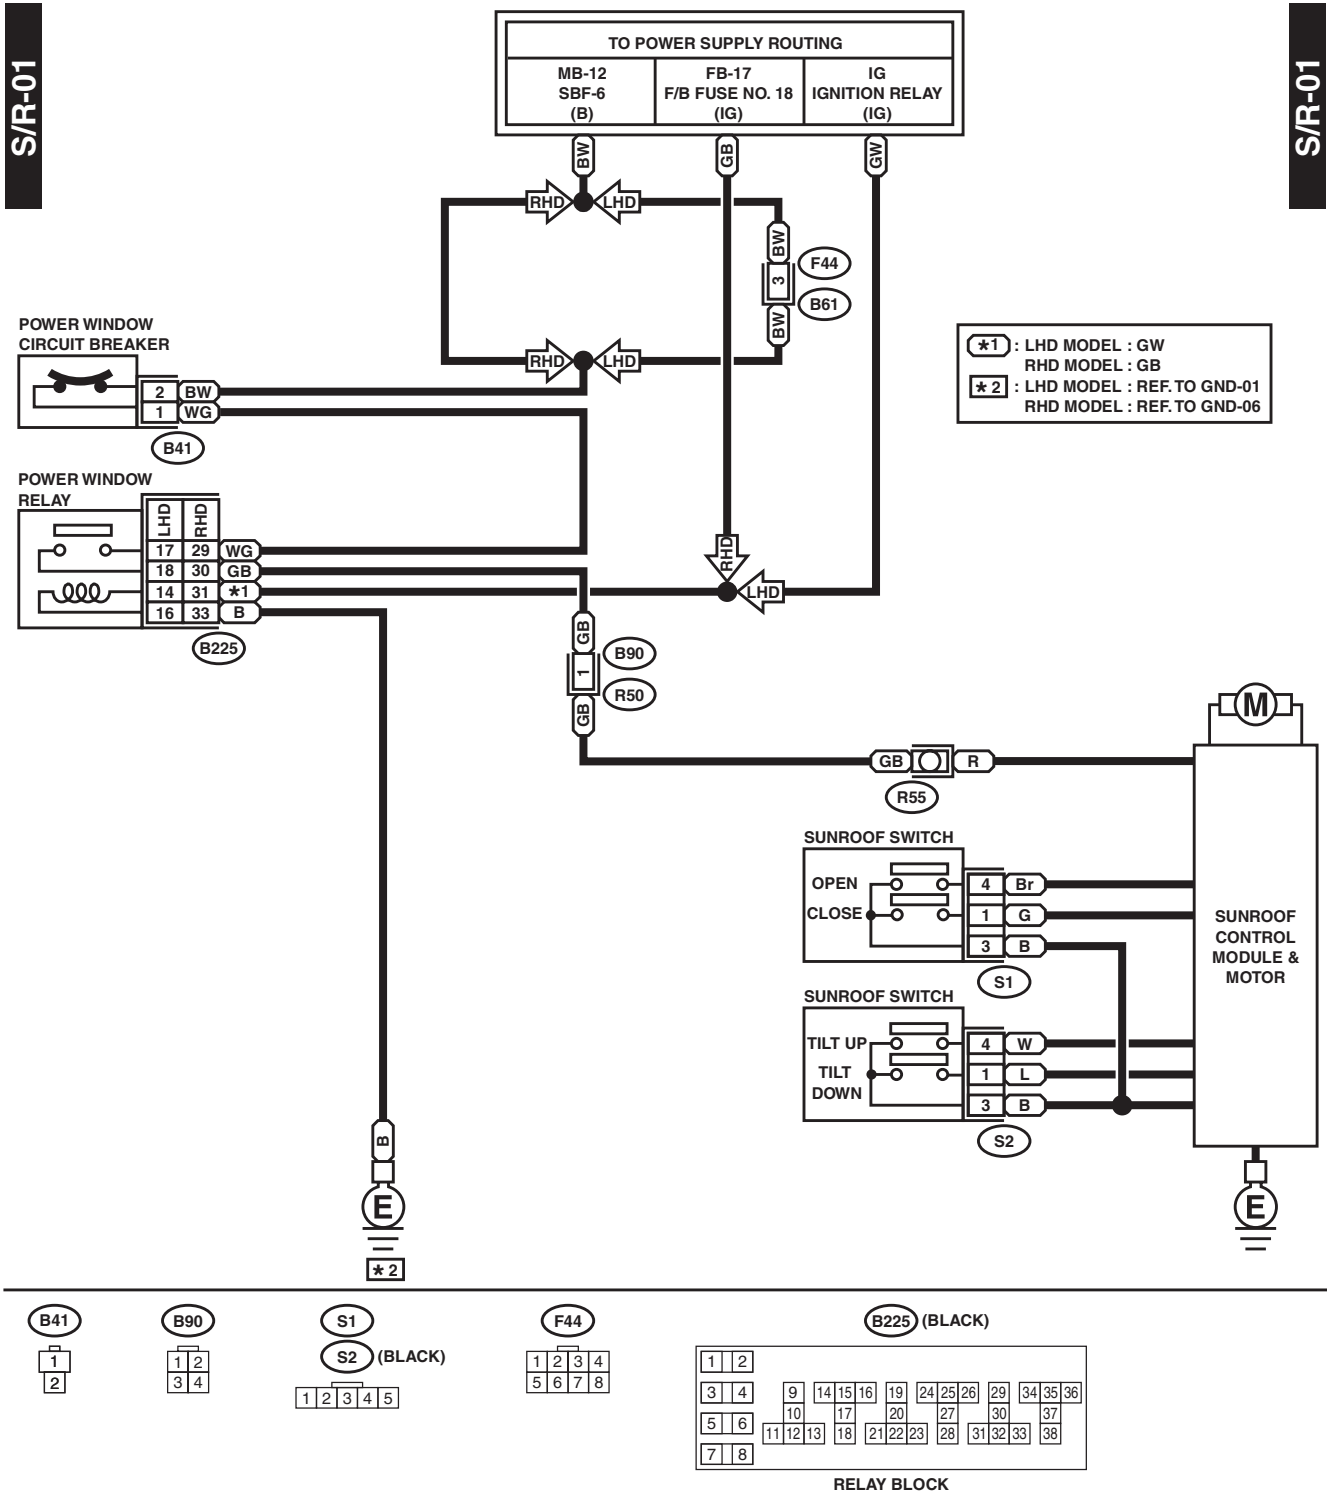

WI-02531


Wiper and Washer System (Front)

WIRING SYSTEM

42.Wiper and Washer System (Front)

A: WIRING DIAGRAM

1. LHD MODEL

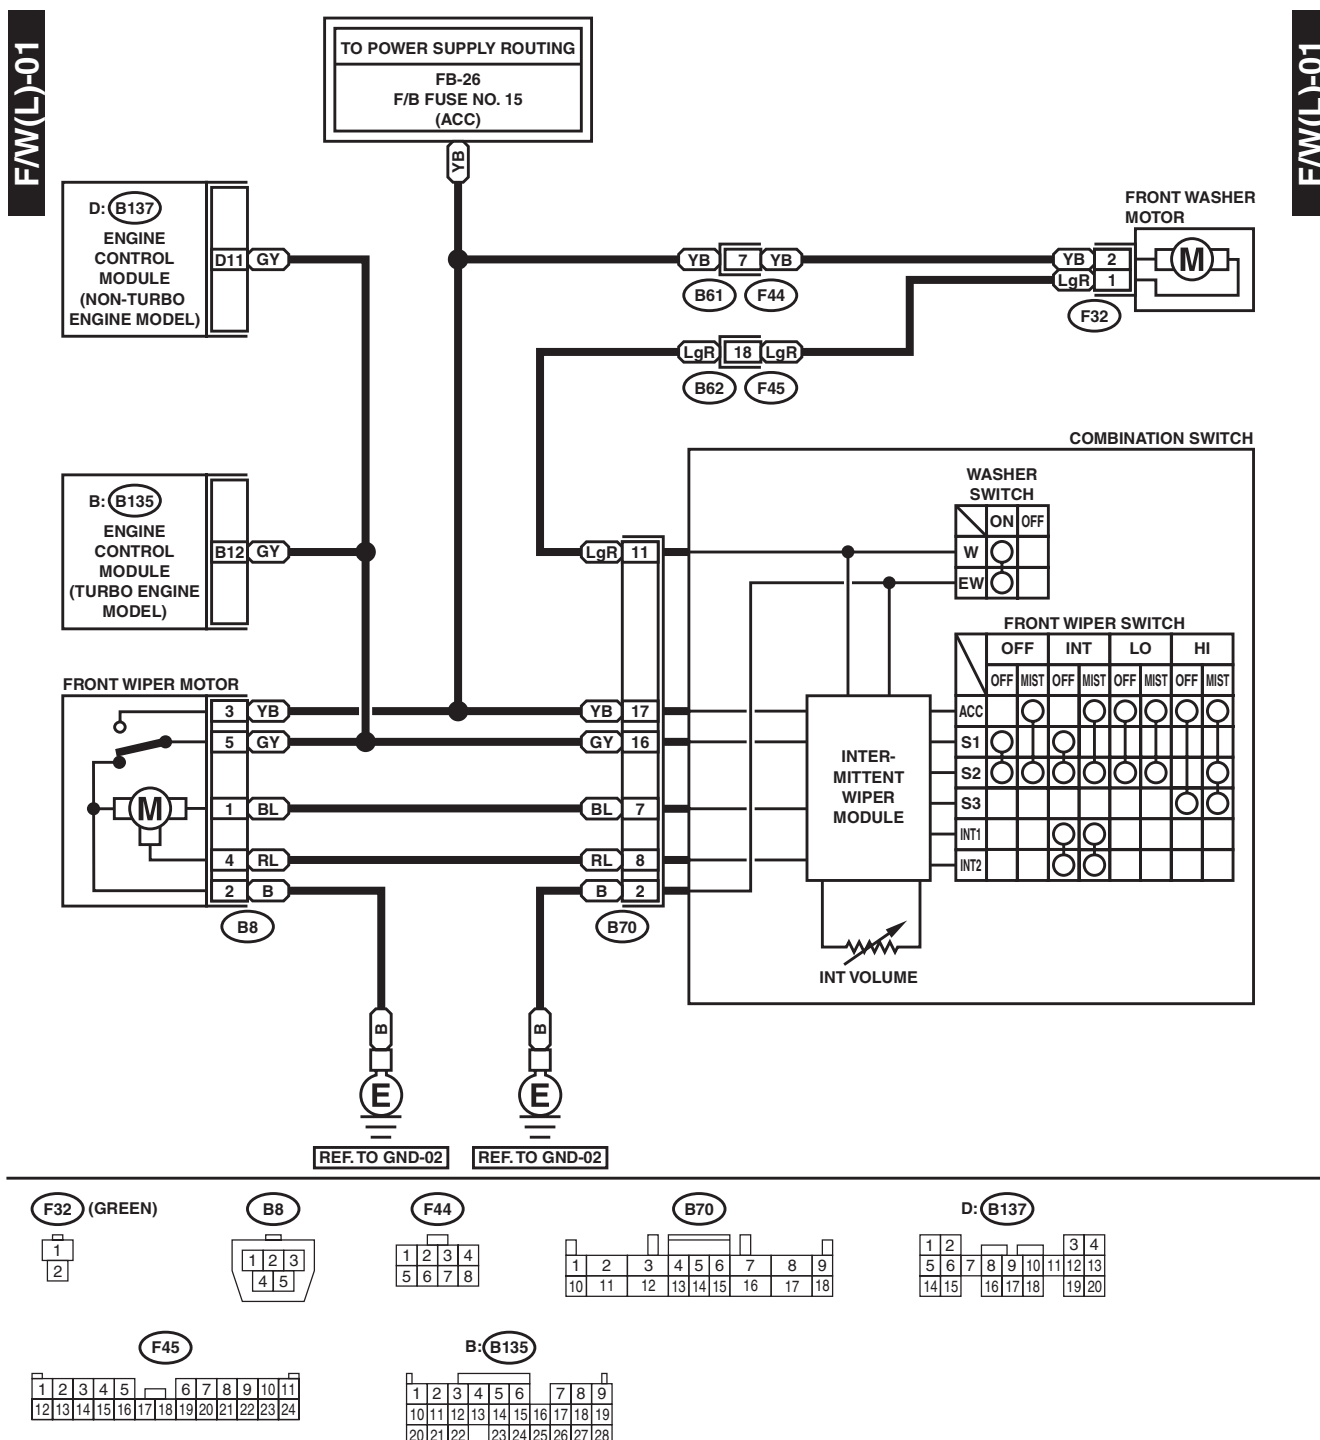


WI-02433

Wiper and Washer System (Front)

WIRING SYSTEM

2. RHD MODEL

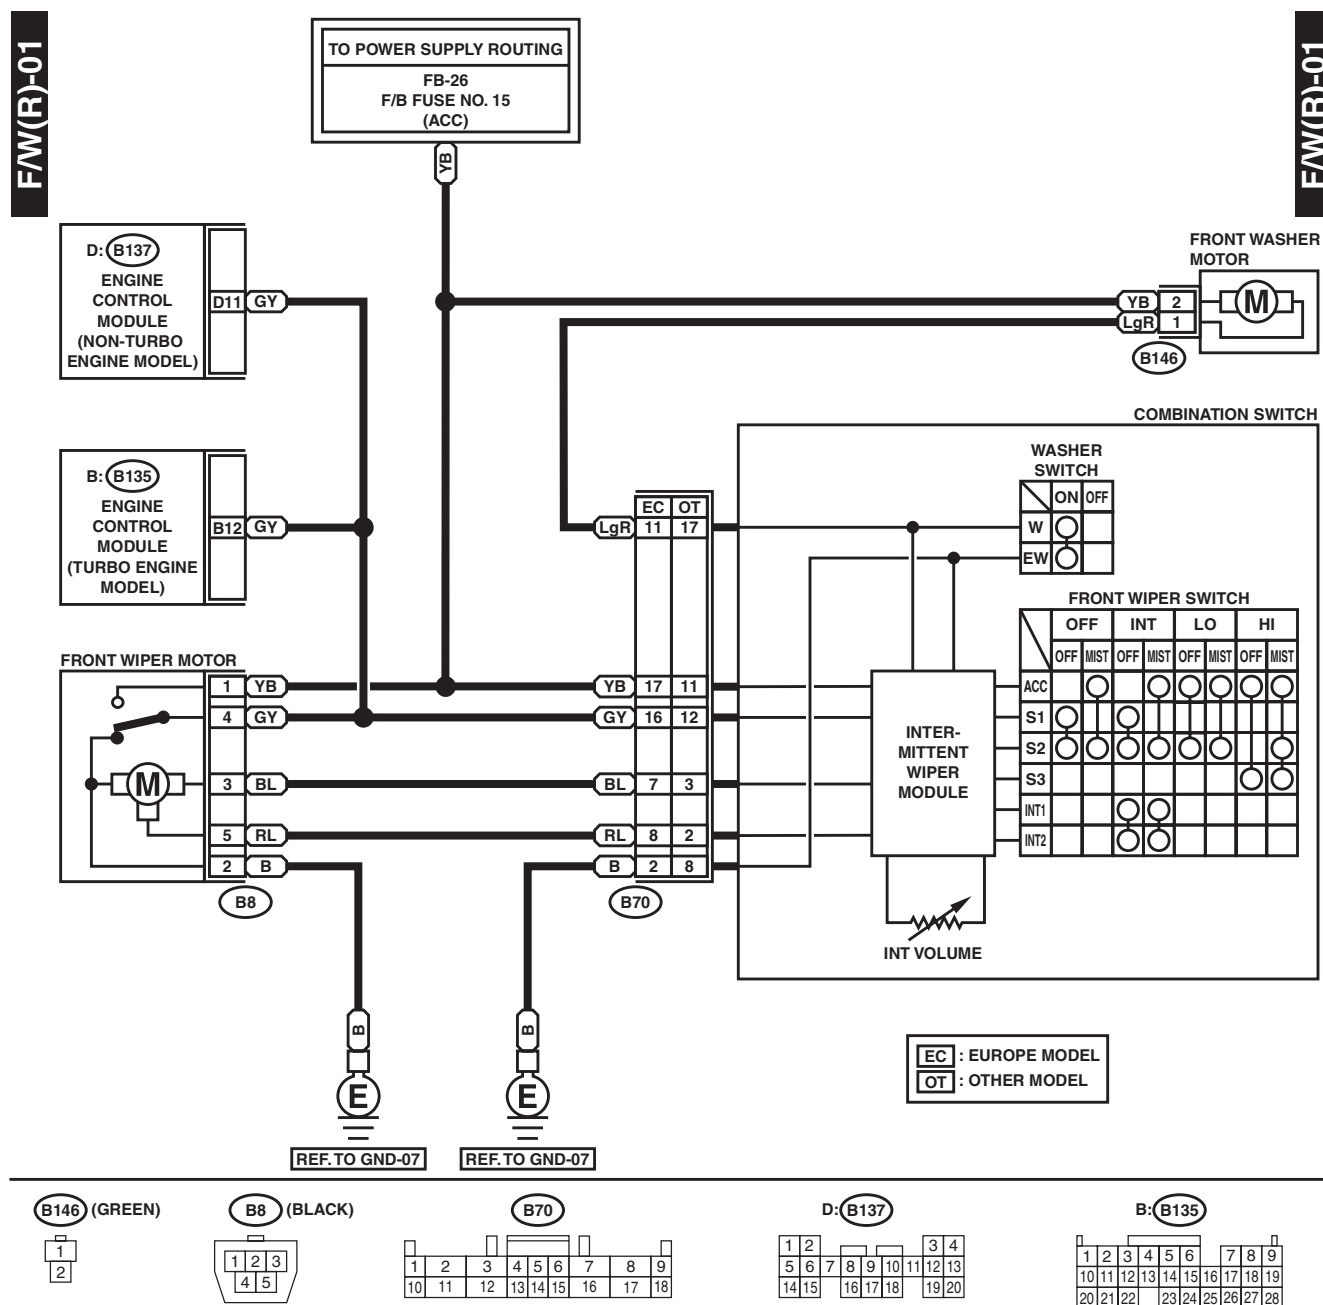

WI-02434


Wiper and Washer System (Rear)

WIRING SYSTEM

43. Wiper and Washer System (Rear)

A: WIRING DIAGRAM

1. LHD MODEL

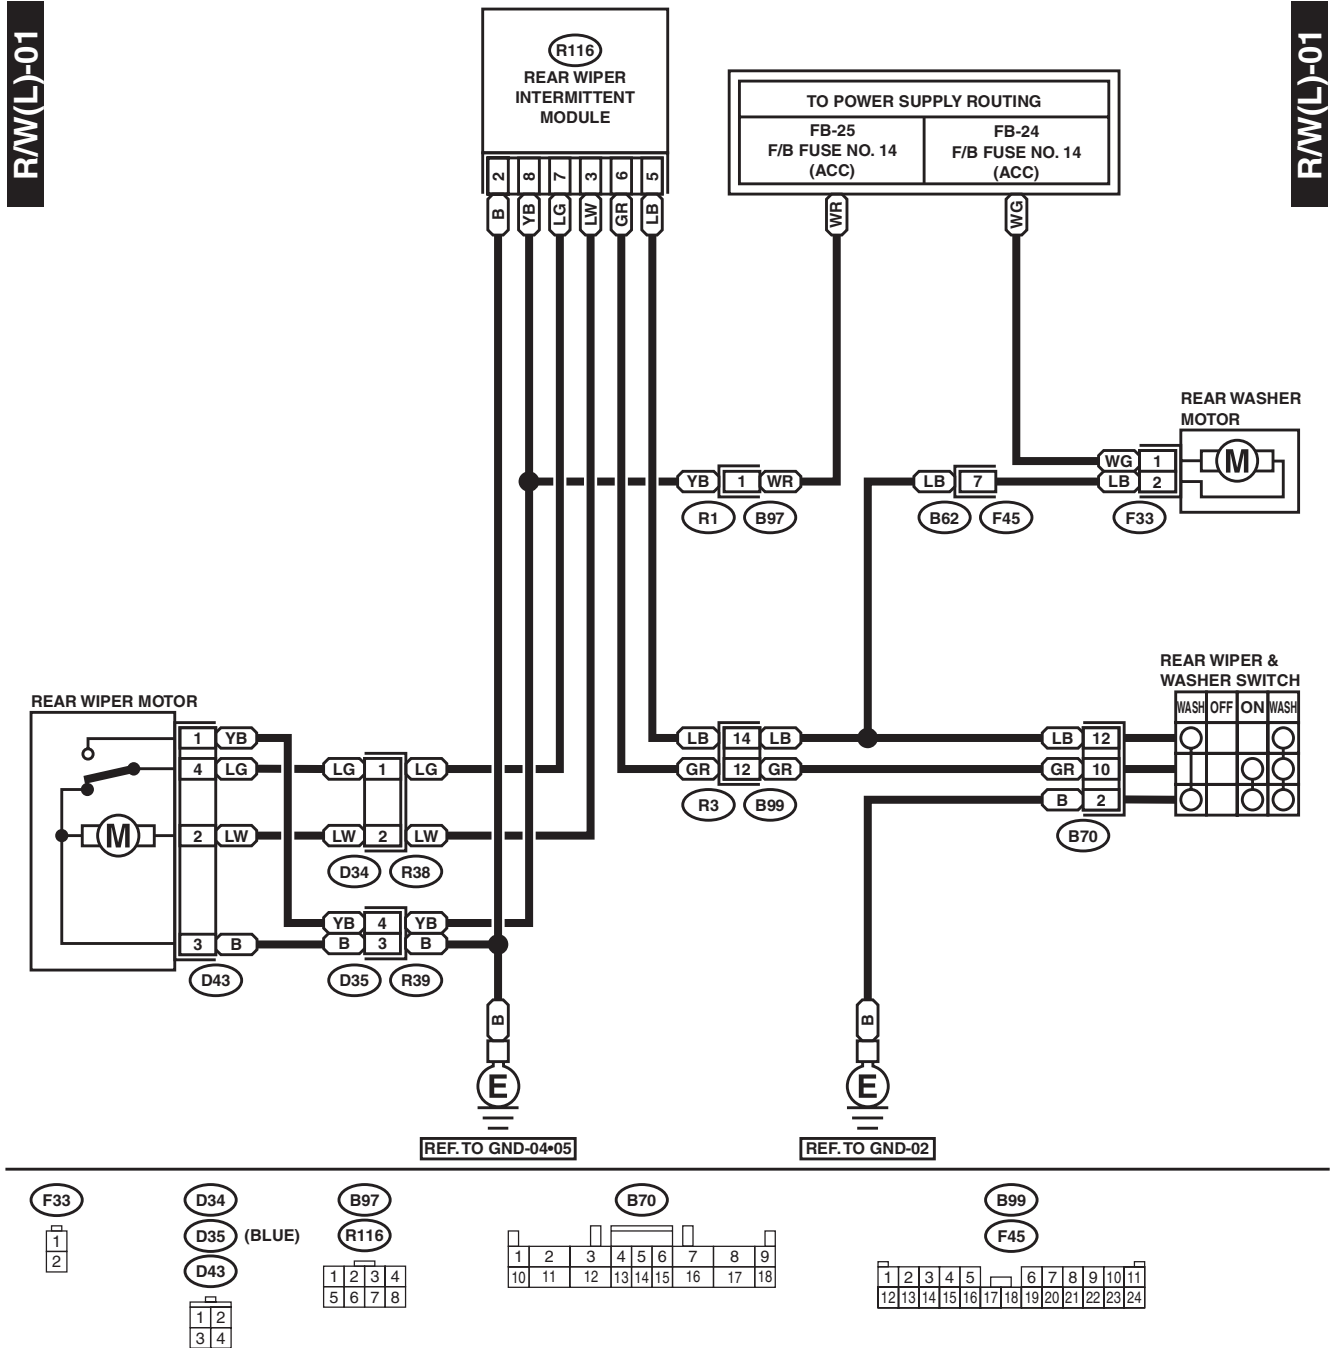

WI-04583

Wiper and Washer System (Rear)

WIRING SYSTEM


2. RHD MODEL

R/W(R)-01

R/W(R)-01

EC : EUROPE MODEL
OT : OTHER MODEL
★1 : WITH DOUBLE LOCK MODEL : B
WITHOUT DOUBLE LOCK MODEL : YB

REAR WIPER MOTOR

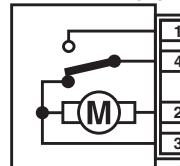

★1

LG

LW

B

D43

D34

R38

★1

4

YB

B

D35

R39

B

E

REF. TO GND-09*10

R116

REAR WIPER INTERMITTENT MODULE

2

B

8

YL

7

LG

3

LW

6

GR

5

LB

TO POWER SUPPLY ROUTING

FB-25

F/B FUSE NO. 14

(ACC)

YL

24

YL

1

YL

LB

2

B147

REAR WIPER MOTOR

1

★1

4

LG

2

LW

3

B

D43

D34

R38

★1

4

YB

B

D35

R39

B

E

REF. TO GND-09*10

R116

REAR WIPER INTERMITTENT MODULE

2

B

8

YL

7

LG

3

LW

6

GR

5

LB

TO POWER SUPPLY ROUTING

FB-25

F/B FUSE NO. 14

(ACC)

YL

24

YL

1

YL

LB

2

B147

REAR WIPER MOTOR

1

★1

4

LG

2

LW

3

B

D43

D34

R38

★1

4

YB

B

D35

R39

B

E

REF. TO GND-09*10

R116

REAR WIPER INTERMITTENT MODULE

2

B

8

YL

7

LG

3

LW

6

GR

5

LB

TO POWER SUPPLY ROUTING

FB-25

F/B FUSE NO. 14

(ACC)

YL

24

YL

1

YL

LB

2

B147

REAR WIPER MOTOR

1

★1

4

LG

2

LW

3

B

D43

D34

R38

★1

4

YB

B

D35

R39

B

E

REF. TO GND-09*10

R116

REAR WIPER INTERMITTENT MODULE

2

B

8

YL

7

LG

3

LW

6

GR

5

LB

TO POWER SUPPLY ROUTING

FB-25

F/B FUSE NO. 14

(ACC)

YL

24

YL

1

YL

LB

2

B147

REAR WIPER MOTOR

1

★1

4

LG

2

LW

3

B

D43

D34

R38

★1

4

YB

B

D35

R39

B

E

REF. TO GND-09*10

R116

REAR WIPER INTERMITTENT MODULE

2

B

8

YL

7

LG

3

LW

6

GR

5

LB

TO POWER SUPPLY ROUTING

FB-25

F/B FUSE NO. 14

(ACC)

YL

24

YL

1

YL

LB

2

B147

REAR WIPER MOTOR

1

★1

4

LG

2

LW

3

B

D43

D34

R38

★1

4

YB

B

D35

R39

B

E

REF. TO GND-09*10

R116

REAR WIPER INTERMITTENT MODULE

2

B

8

YL

7

LG

3

LW

6

GR

5

LB

TO POWER SUPPLY ROUTING

FB-25

F/B FUSE NO. 14

(ACC)

YL

24

YL

1

YL

LB

2

B147

REAR WIPER MOTOR

1

★1

4

LG

2

LW

3

B

D43

D34

R38

★1

4

YB

B

D35

R39


Intercooler Water Spray System

WIRING SYSTEM

44. Intercooler Water Spray System

A: WIRING DIAGRAM

1. LHD MODEL

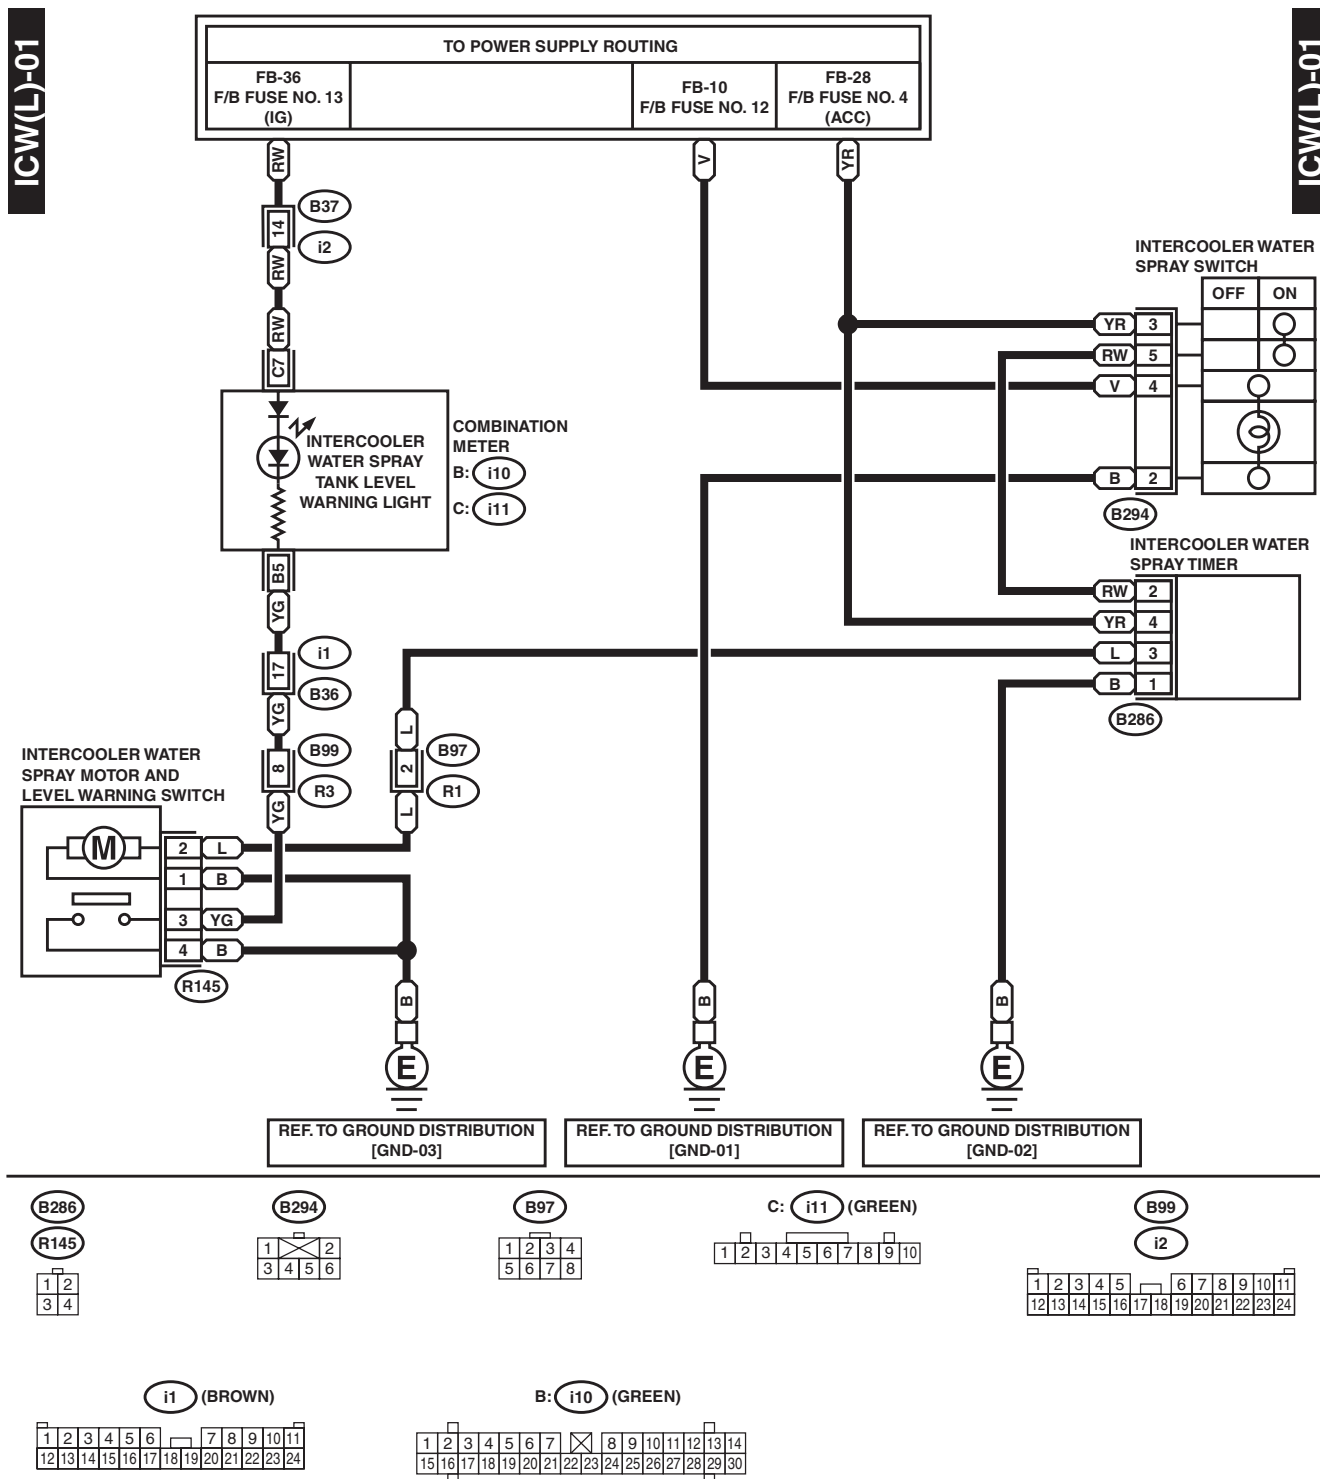


WI-02437

Intercooler Water Spray System

WIRING SYSTEM

2. RHD MODEL

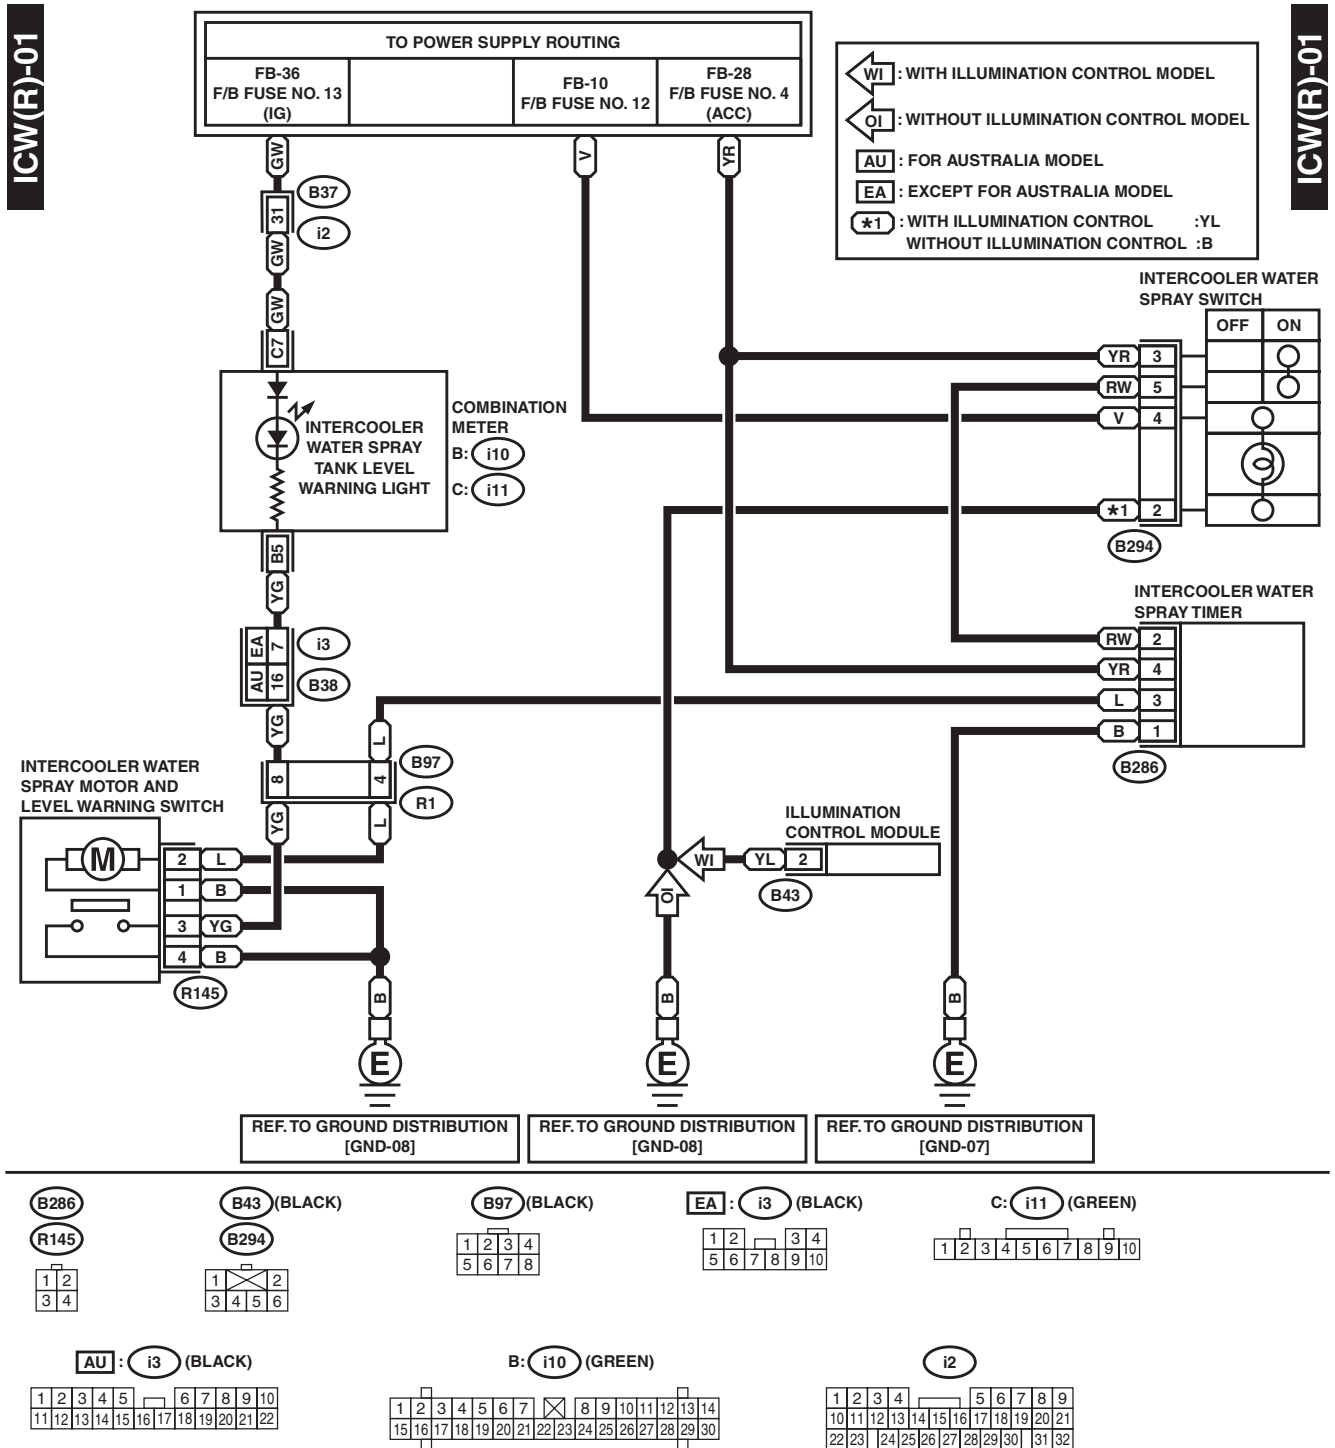

WI-02438


Driver's Control Center Differential Control System

WIRING SYSTEM

45.Driver's Control Center Differential Control System

A: WIRING DIAGRAM


1. LHD MODEL

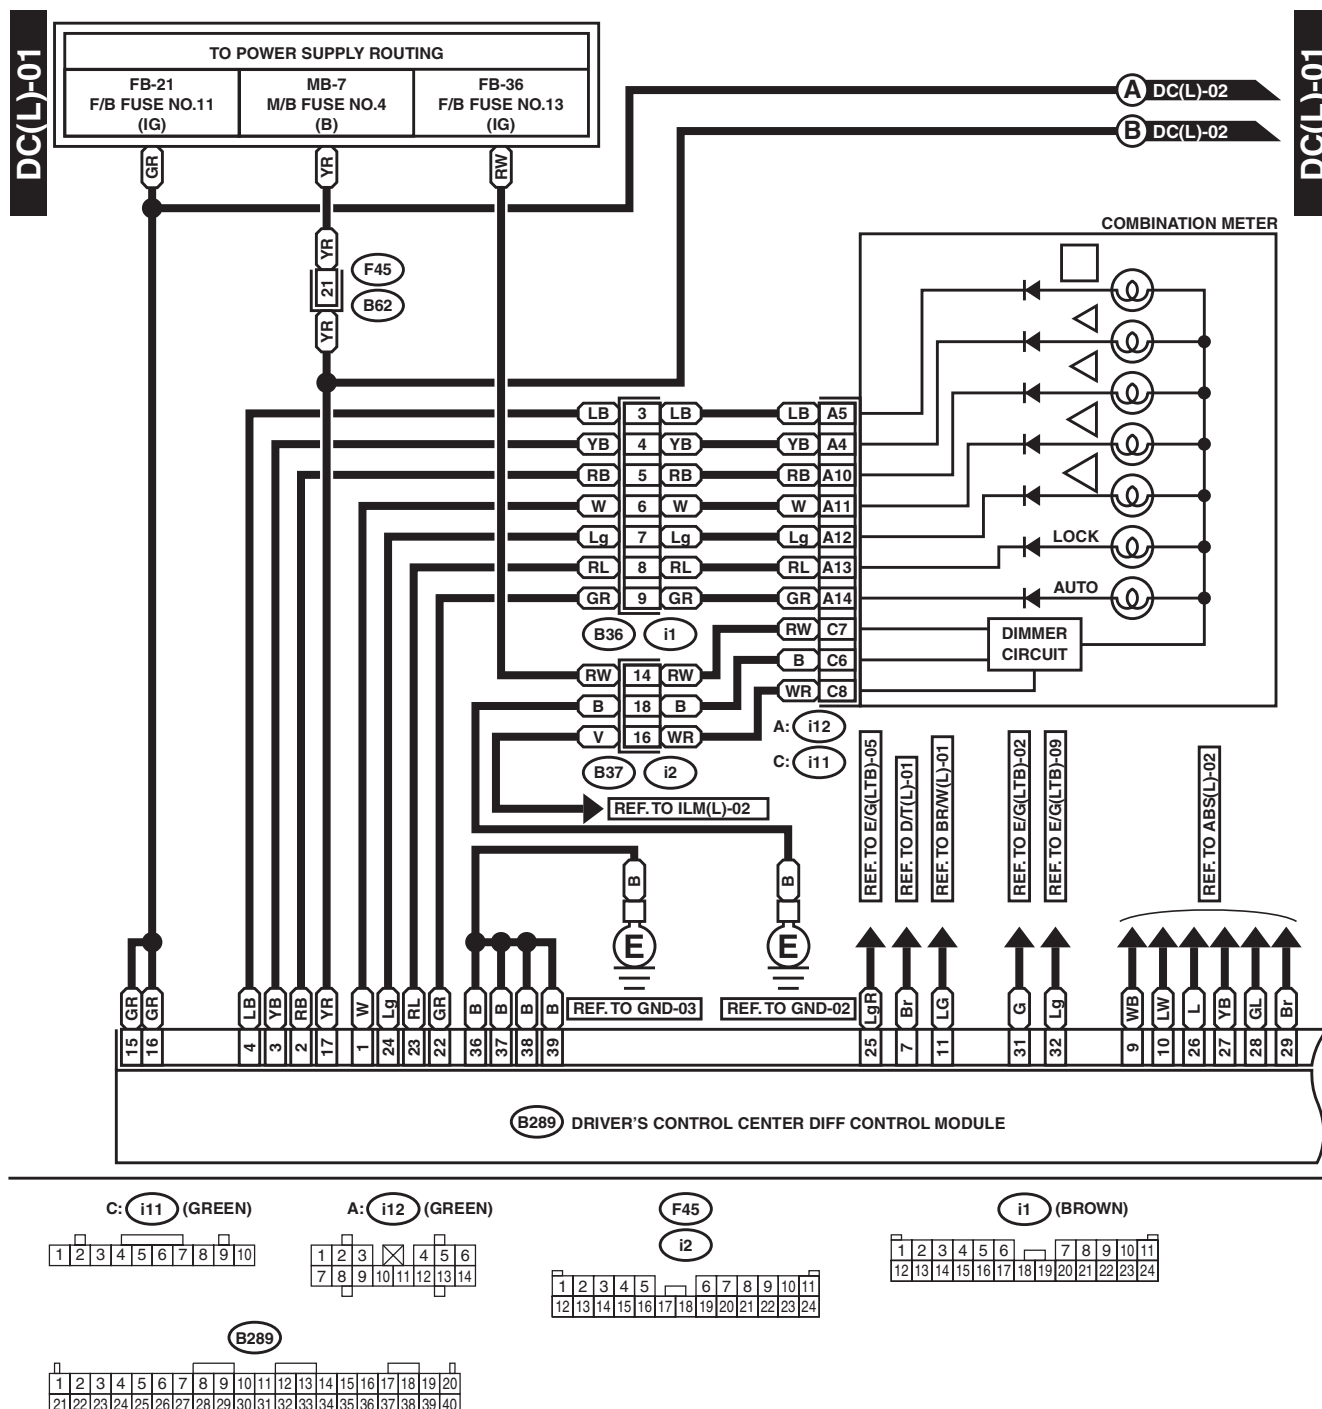

WI-04516

Driver's Control Center Differential Control System

WIRING SYSTEM

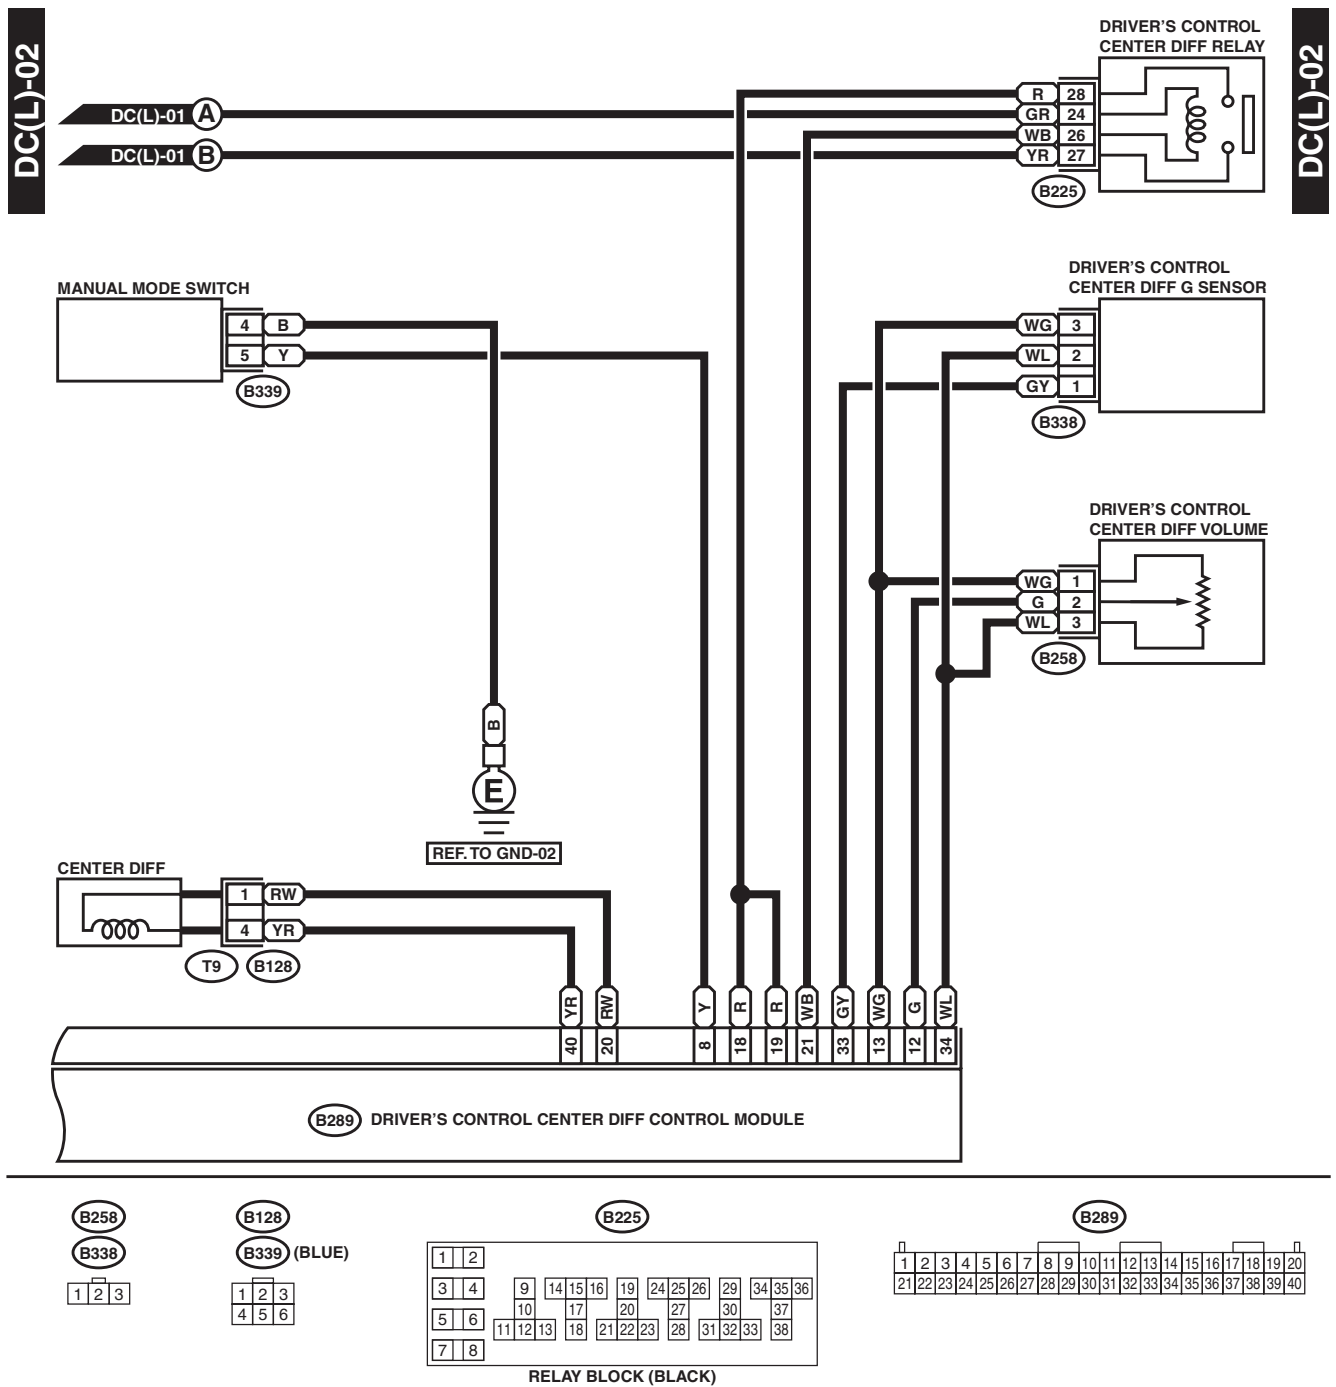


WI-04517

Driver's Control Center Differential Control System

WIRING SYSTEM

2. RHD MODEL

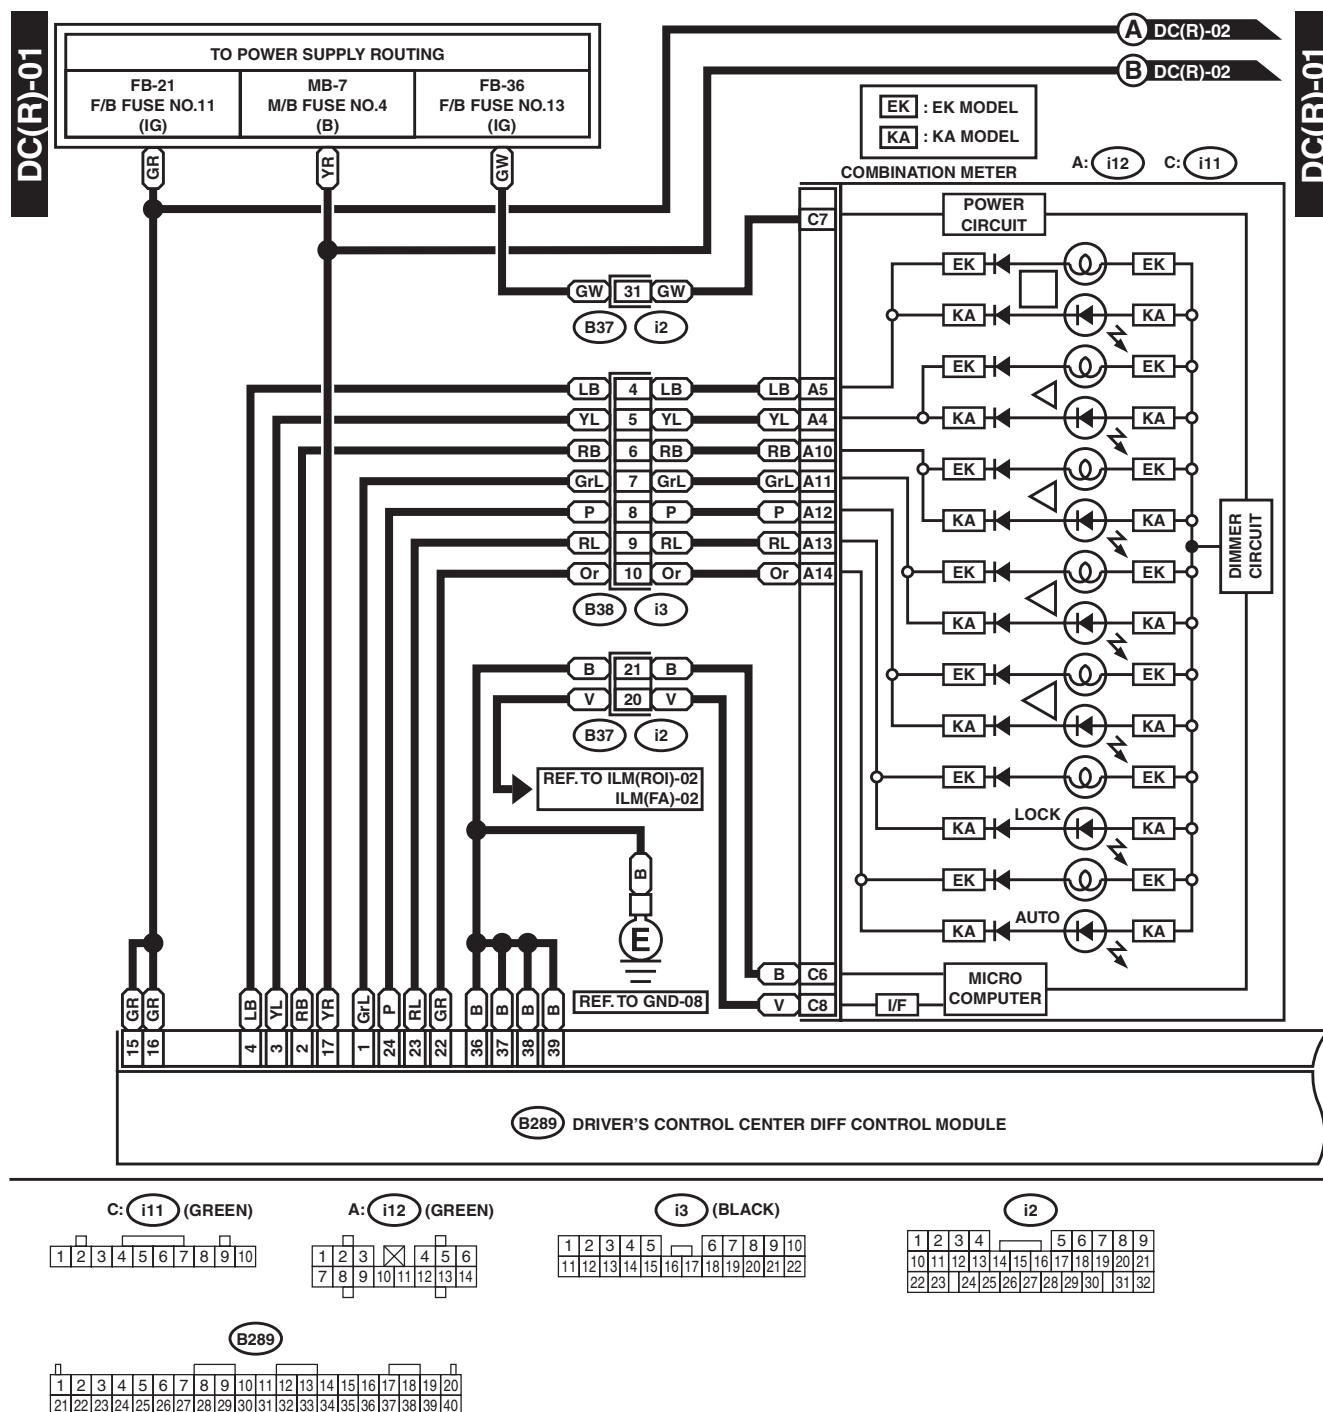

WI-04518

WIRING SYSTEM




Rear Differential Oil Temperature Warning Light System

WIRING SYSTEM

46.Rear Differential Oil Temperature Warning Light System

A: WIRING DIAGRAM

1. LHD MODEL

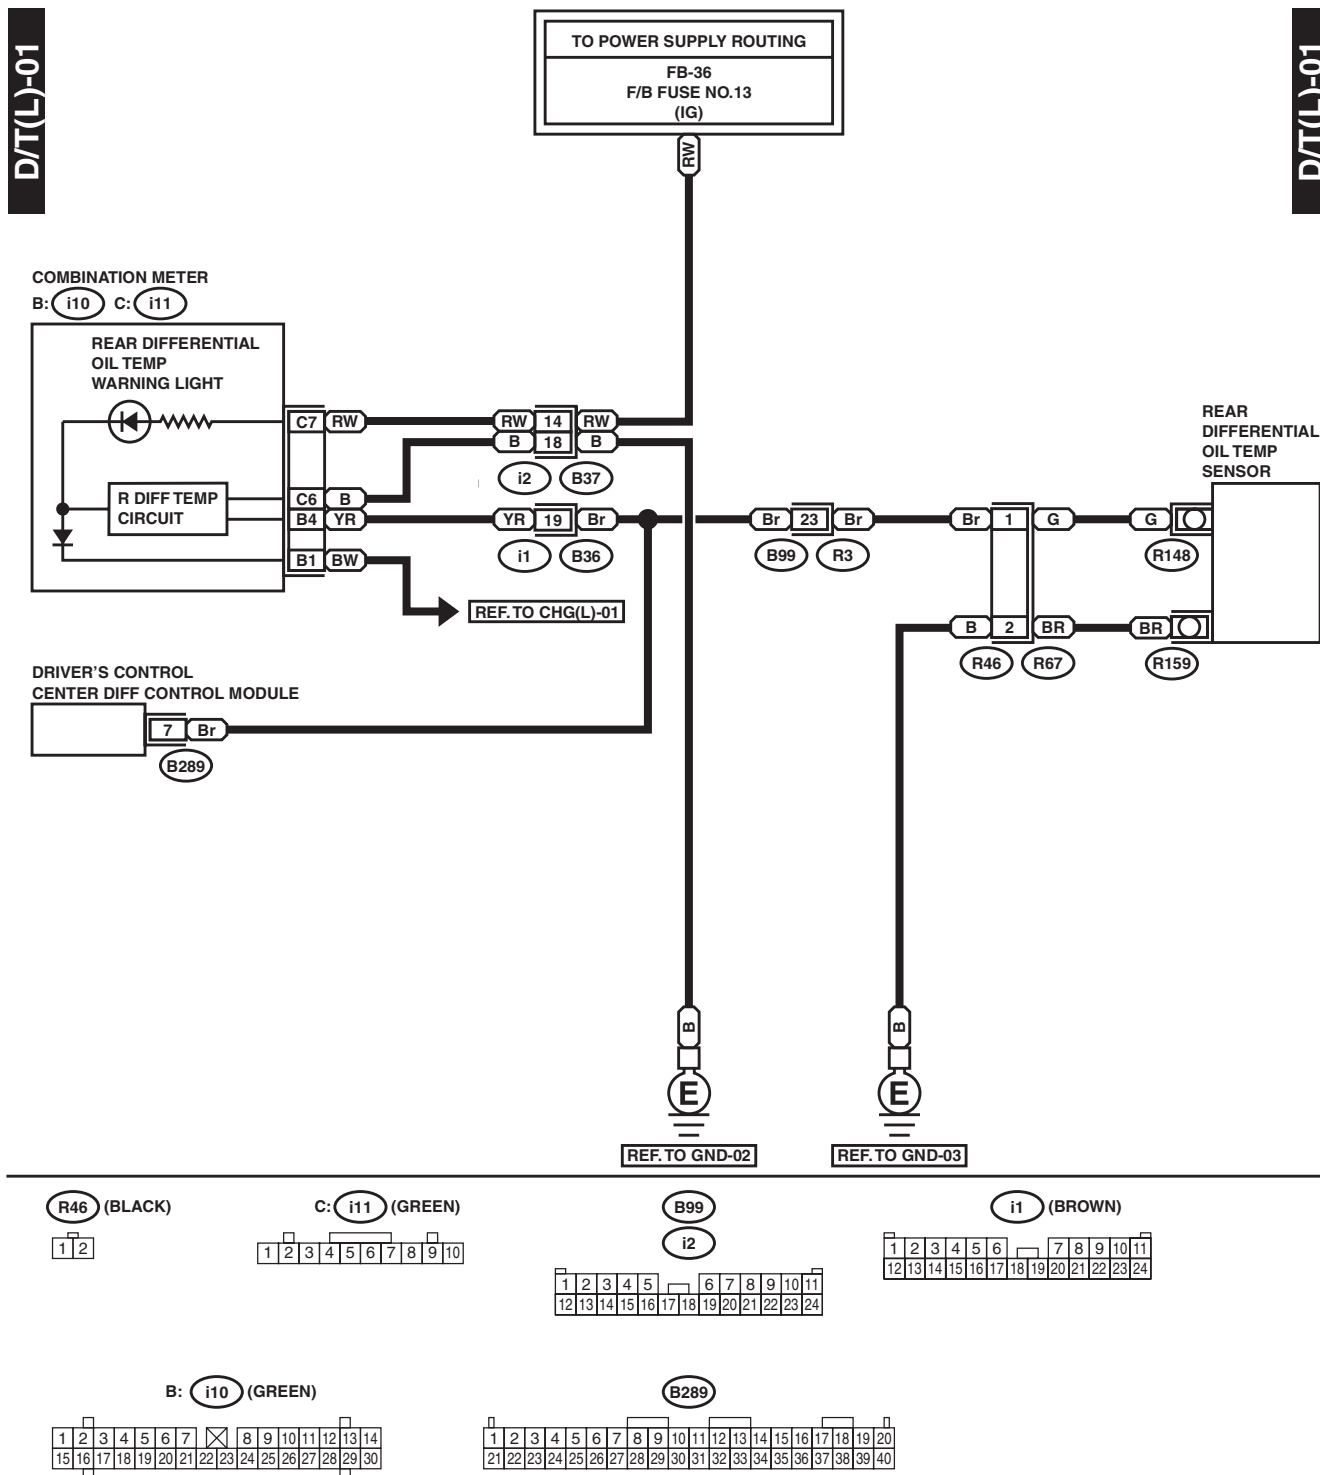


WI-04514

Rear Differential Oil Temperature Warning Light System

WIRING SYSTEM

2. RHD MODEL

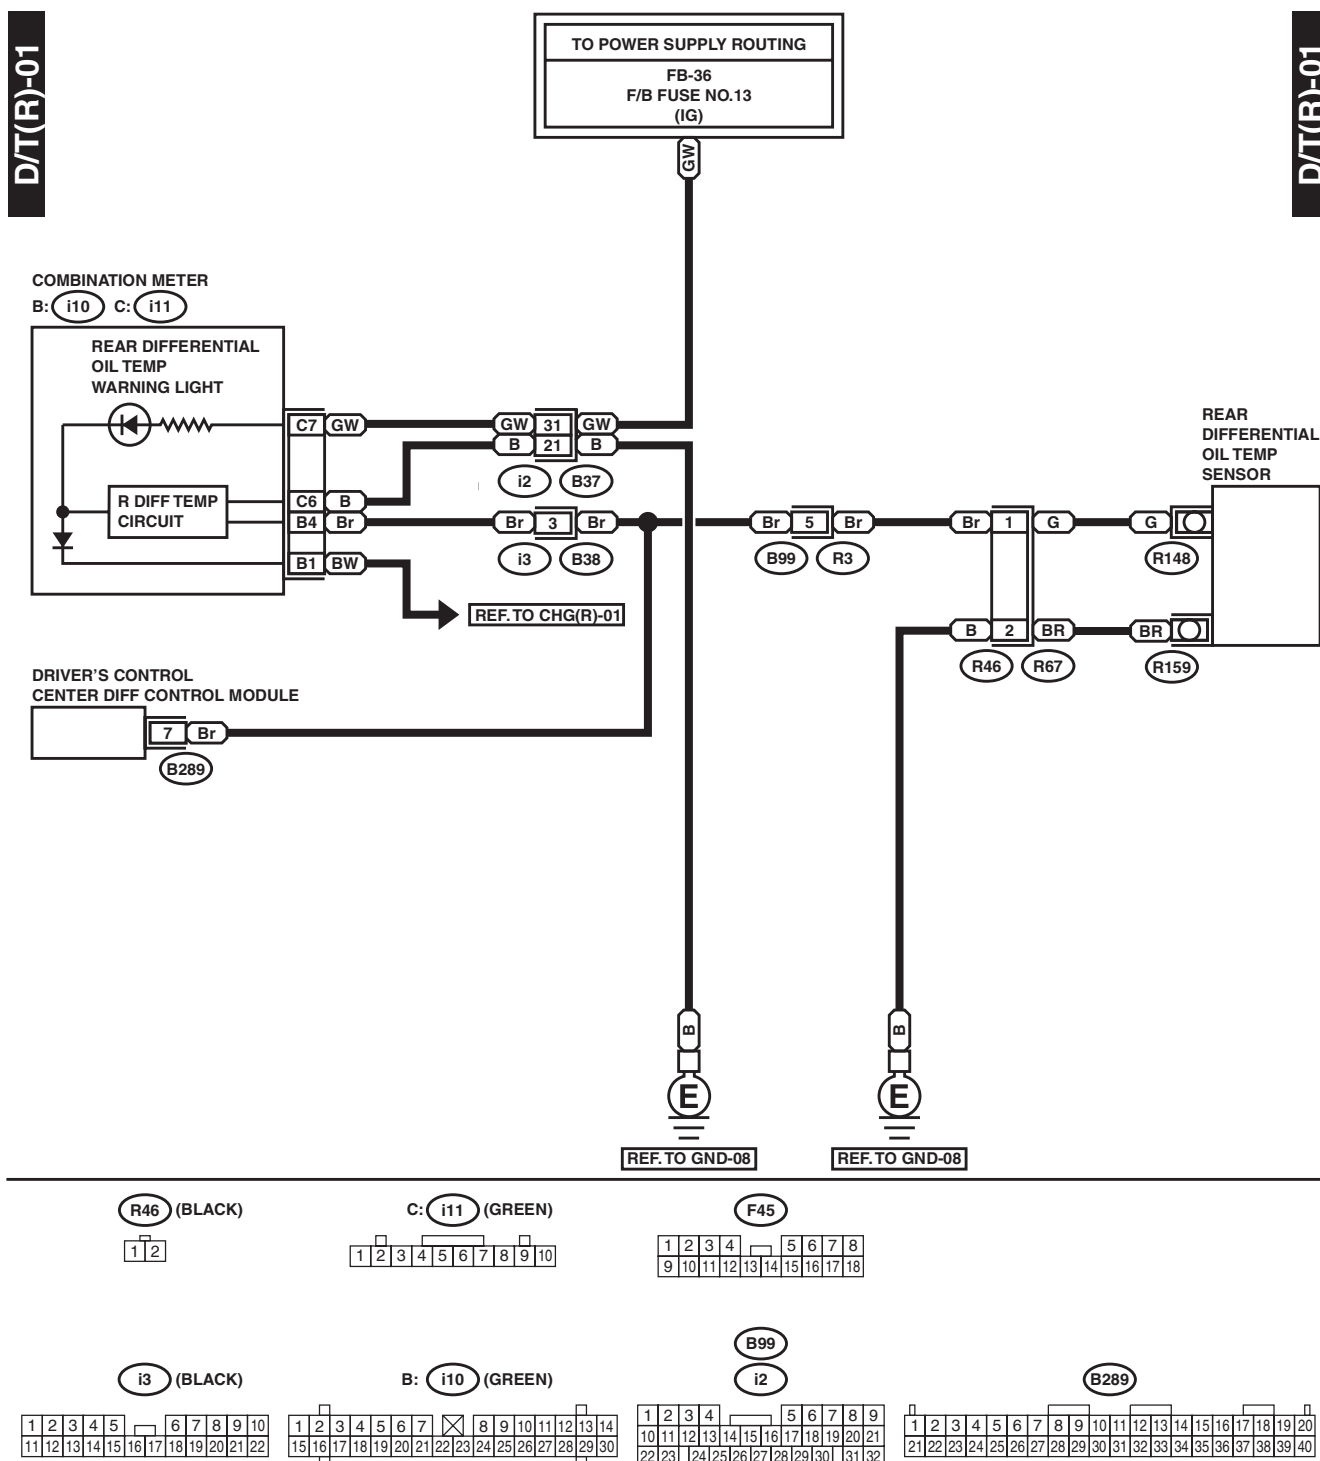

WI-04515


Harness Components Location

WIRING SYSTEM

47. Harness Components Location

A: LOCATION

1. LHD MODEL

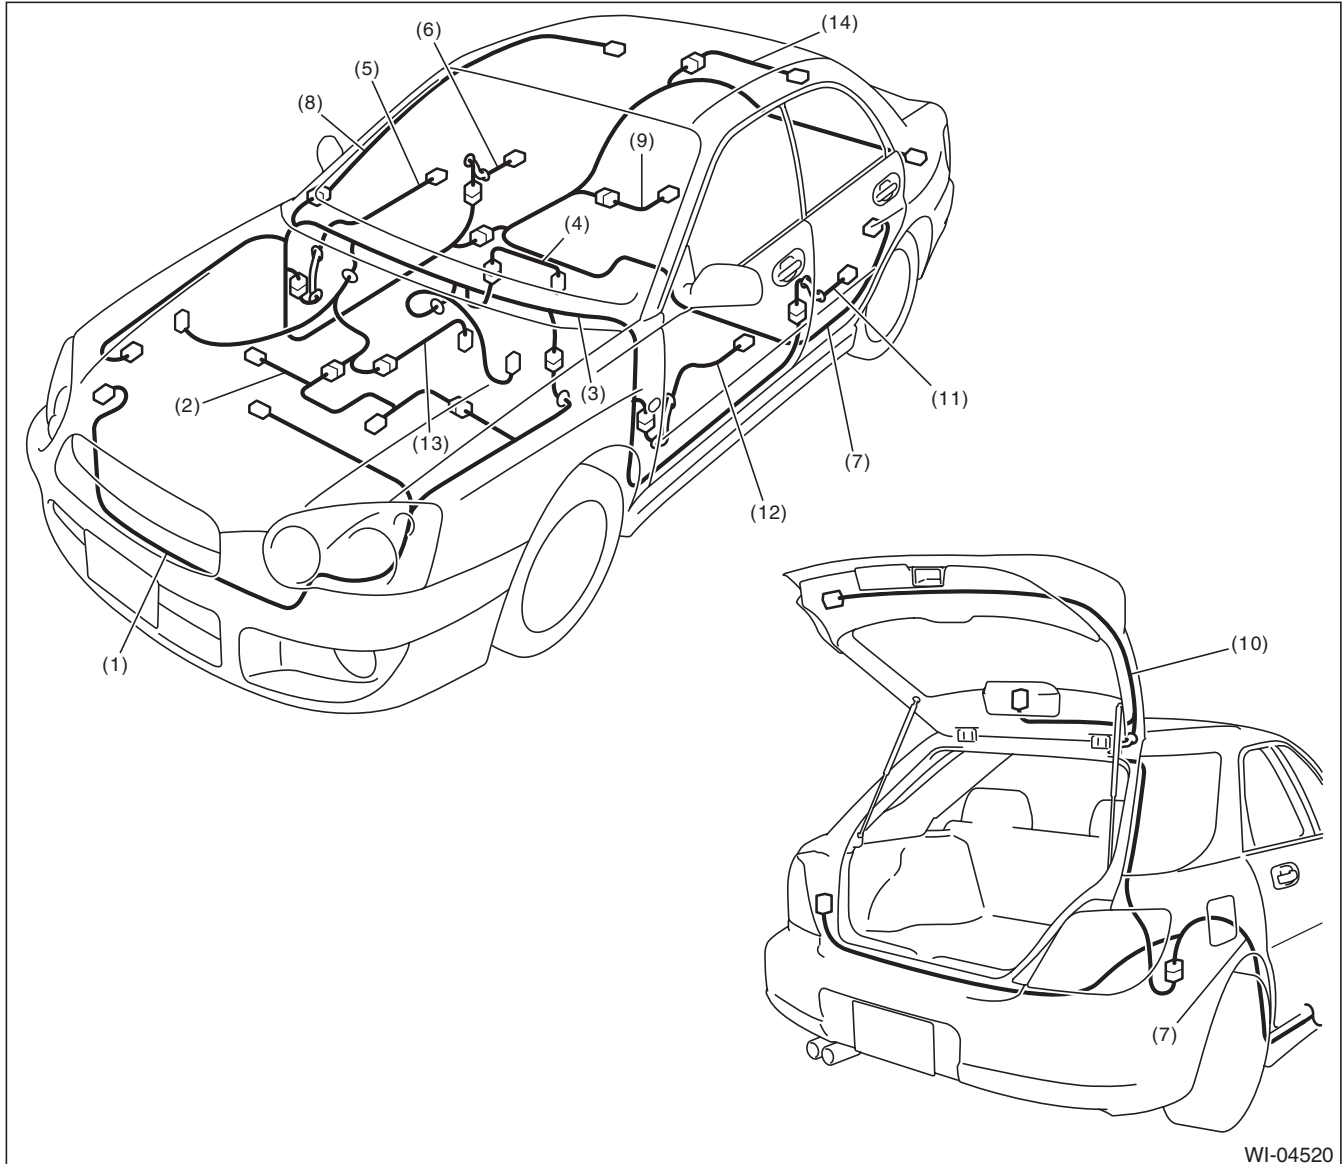


- | | | |
|-------------------------------------|-------------------------|-------------------------|
| (1) Front wiring harness | (6) Rear door cord RH | (11) Rear door cord LH |
| (2) Engine wiring harness | (7) Rear wiring harness | (12) Front door cord LH |
| (3) Bulkhead wiring harness | (8) Roof cord | (13) Transmission cord |
| (4) Instrument panel wiring harness | (9) Fuel tank cord | (14) Trunk lid cord |
| (5) Front door cord RH | (10) Rear gate cord | |

Harness Components Location

WIRING SYSTEM

2. RHD MODEL

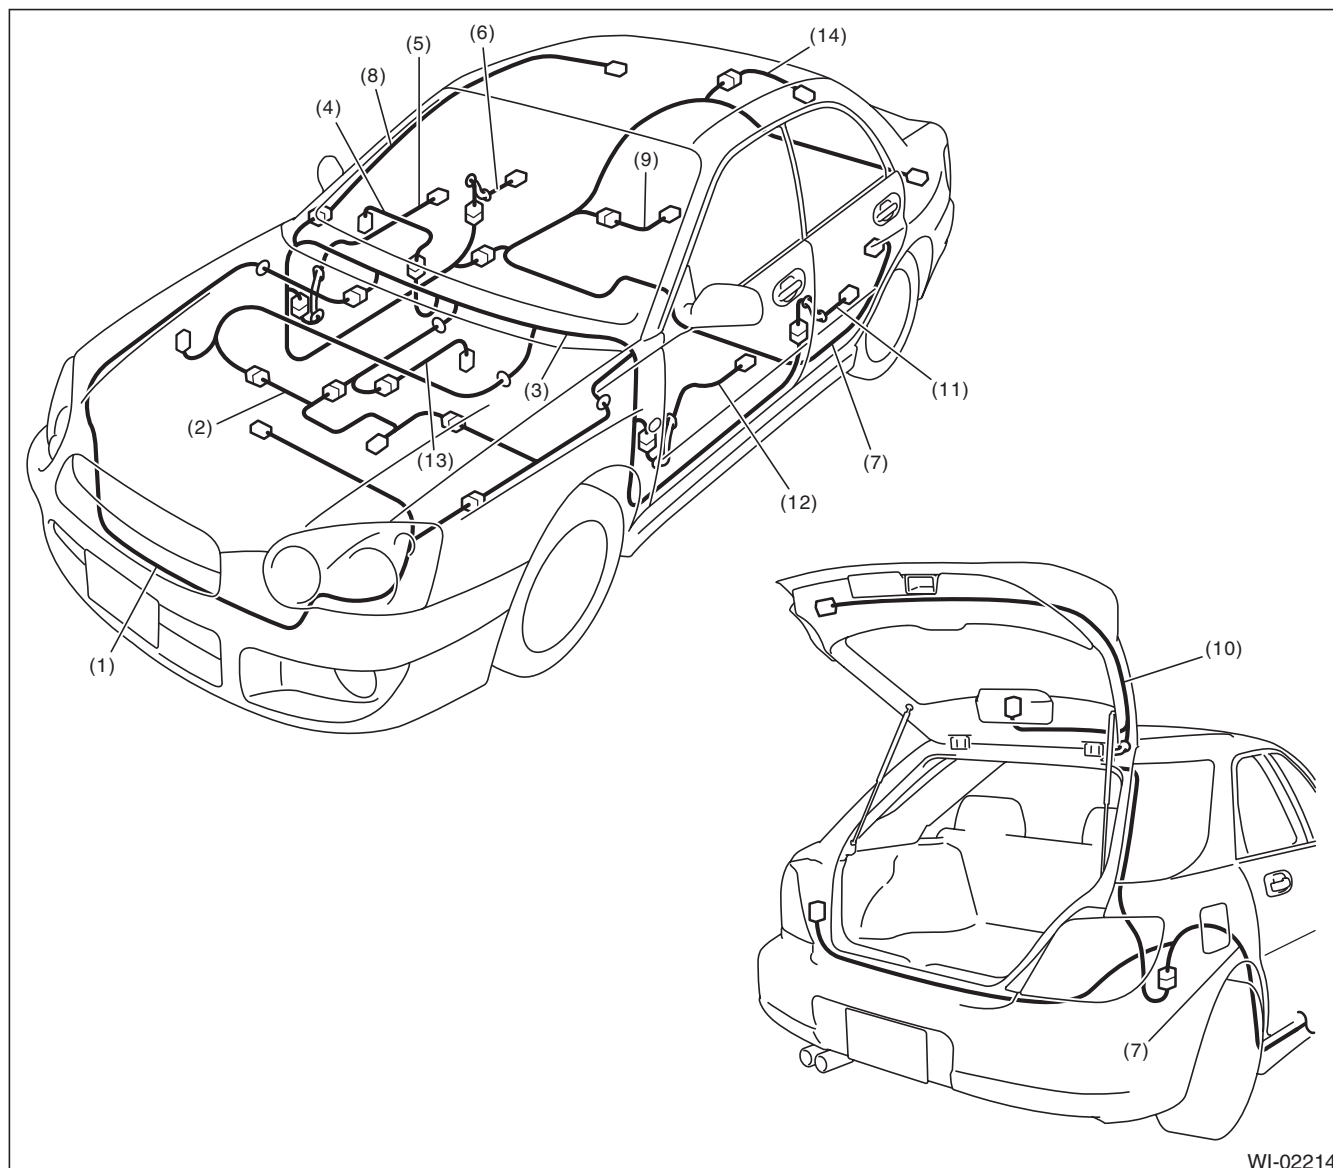

- | | | |
|-------------------------------------|-------------------------|-------------------------|
| (1) Front wiring harness | (6) Rear door cord RH | (11) Rear door cord LH |
| (2) Engine wiring harness | (7) Rear wiring harness | (12) Front door cord LH |
| (3) Bulkhead wiring harness | (8) Roof cord | (13) Transmission cord |
| (4) Instrument panel wiring harness | (9) Fuel tank cord | (14) Trunk lid cord |
| (5) Front door cord RH | (10) Rear gate cord | |

Front Wiring Harness

WIRING SYSTEM

48. Front Wiring Harness

A: LOCATION

1. LHD MODEL

• Front Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
F2	24	Black	B-5	B100	Bulkhead wiring harness
F4	3	Black	B-1		Front clearance light RH and front turn signal light RH
F5	1	Black	C-3		Horn
F7	2	Gray	C-1		Headlight RH (Low beam)
F16	2	Black	C-1		Sub fan motor (Non-turbo model)
	4	Gray	C-1		Sub fan motor (Turbo model)
F17	2	Gray	C-3		Radiator main fan motor (Non-turbo model)
	4	Gray	C-3		Radiator main fan motor (Turbo model)
F21	2	Black	D-4		Front fog light LH
F22	3	Black	C-4		Front clearance light LH and front turn signal light LH
F23	2	Gray	C-3		Headlight LH (Low beam)
F24	1	Gray	C-3		A/C compressor
F25	1	★	B-2		Generator
F26	3	Green	B-2		
F27	36	Black	B-4		A/C relay holder
F32	2	Green	B-4		Front washer motor
F33	2	★	B-4		Rear washer motor
F34	4	Black	B-4		SBF holder
F35	2	Black	B-4		M/B
F36	3	★	B-4		
F37	6	Black	B-4		
F38	1	★	B-4		
F39	8	★	B-4		
F40	9	Brown	B-5		F/B
F41	7	Gray	B-5		
F44	8	★	B-4	B61	Bulkhead wiring harness
F45	24	★	B-5	B62	Bulkhead wiring harness
F46	2	Black	B-4	B108	Bulkhead wiring harness
F47	1	Black	C-2		Horn
F54	2	★	B-5		Side turn signal light LH
F58	6	Gray	C-4		Headlight leveler LH
F59	6	Gray	B-1		Headlight leveler RH
F60	16	Brown	B-4	E3	Engine wiring harness (Turbo model)
F61	20	Black	B-4	E2	Engine wiring harness (Turbo model)
F68	4	Black	B-4		M/B
F74	16	Blue	B-5	B200	Bulkhead wiring harness
F78	2	Black	C-2		Ambient sensor
F79	2	Gray	B-3		A/C pressure switch
F94	2	Gray	B-4		ABS front sensor LH
F98	2	Black	C-4		Headlight LH (High beam)
F99	2	Black	B-1		Headlight RH (High beam)


★: Non-colored

Front Wiring Harness

WIRING SYSTEM

• Front Sub Sensor Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB14	2	Yellow	B-4	AB13	Airbag wiring harness
AB18	2	Yellow	D-3		Front sub sensor

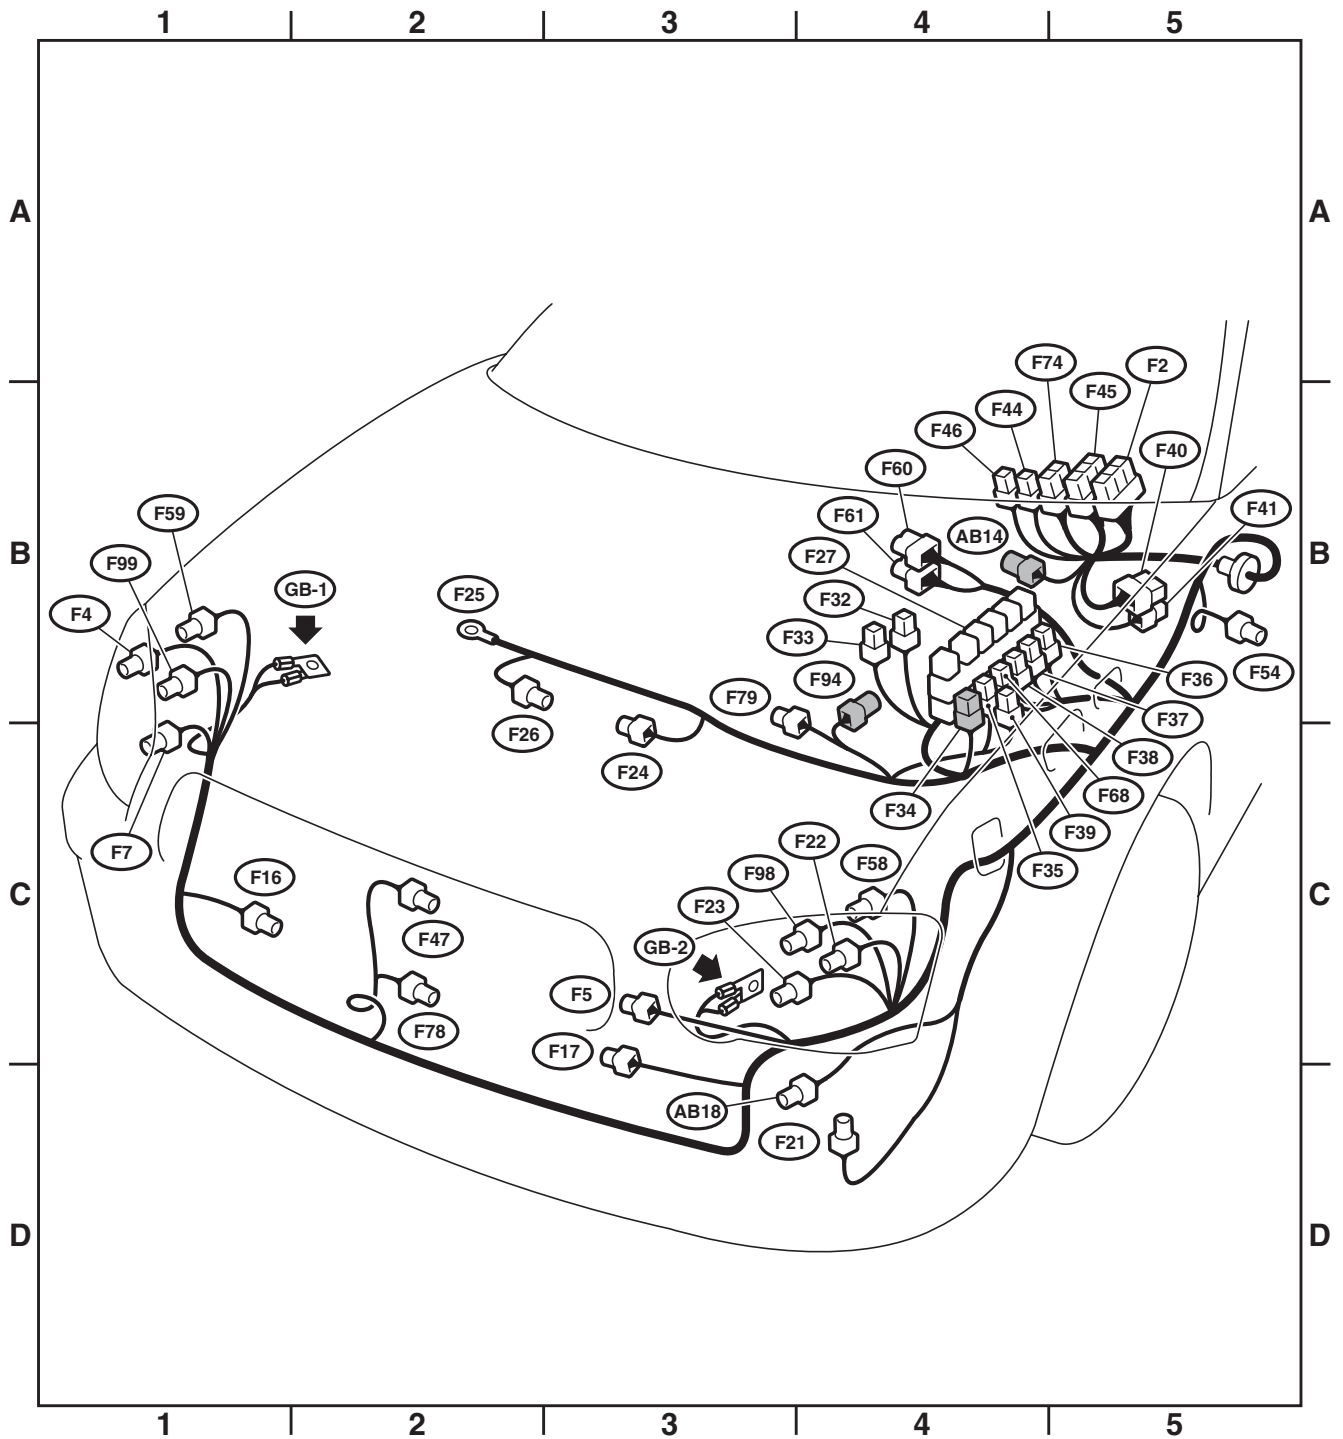

WI-04521

Front Wiring Harness

WIRING SYSTEM

2. RHD MODEL

• Front Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
F4	3	Black	B-1		Front clearance light RH and front turn signal light RH
F5	1	★	C-3		Horn
F6	2	Black	C-1		Front fog light RH
F7	2	Gray	B-1		Headlight RH (Low beam)
F16	2	Black	C-1		Sub fan motor (Non-turbo model)
	4	Gray	C-1		Sub fan motor (Turbo model)
F17	2	Gray	D-3		Radiator main fan motor (Non-turbo model)
	4	Gray	D-3		Radiator main fan motor (Turbo model)
F21	2	Black	D-4		Front fog light LH
F22	3	Black	C-4		Front clearance light LH and front turn signal light LH
F23	2	Gray	C-3		Headlight LH (Low beam)
F24	1	Gray	C-3		A/C compressor
F25	1	★	B-2		Generator
F26	3	Green	B-2		
F27	36	Black	B-4		A/C relay holder
F34	4	Black	B-4		SBF holder
F35	2	Black	B-4		M/B
F39	8	Black	B-4		
F41	7	Gray	B-3		F/B
F44	8	Black	B-3	B61	Bulkhead wiring harness
F45	18	★	B-3	B62	Bulkhead wiring harness
F47	1	★	C-2		Horn
F49	31	Black	B-2		ABS control module
F51	2	★	B-2		Side turn signal light RH
F58	6	Gray	C-4		Headlight leveler LH
F59	6	Gray	B-1		Headlight leveler RH
F62	8	Gray	B-1		Shield joint connector (ABS)
F73	1	★	C-1		ABS motor ground
F74	22	Black	B-3	B200	Bulkhead wiring harness (ABS)
F78	2	Black	C-2		Ambient sensor
F79	2	Gray	C-3		A/C pressure switch
F94	2	Gray	B-4		ABS front sensor LH
F95	2	Gray	B-2		ABS front sensor RH
F96	4	Gray	C-4	B255	Bulkhead wiring harness
F97	2	★	B-3		ABS condenser
F98	2	Black	C-4		Headlight LH (High beam)
F99	2	Black	B-1		Headlight RH (High beam)


★: Non-colored

Front Wiring Harness

WIRING SYSTEM

• Front Sub Sensor Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB14	2	Yellow	B-2	AB13	Airbag wiring harness
AB15	2	Yellow	C-1		Front sub sensor RH

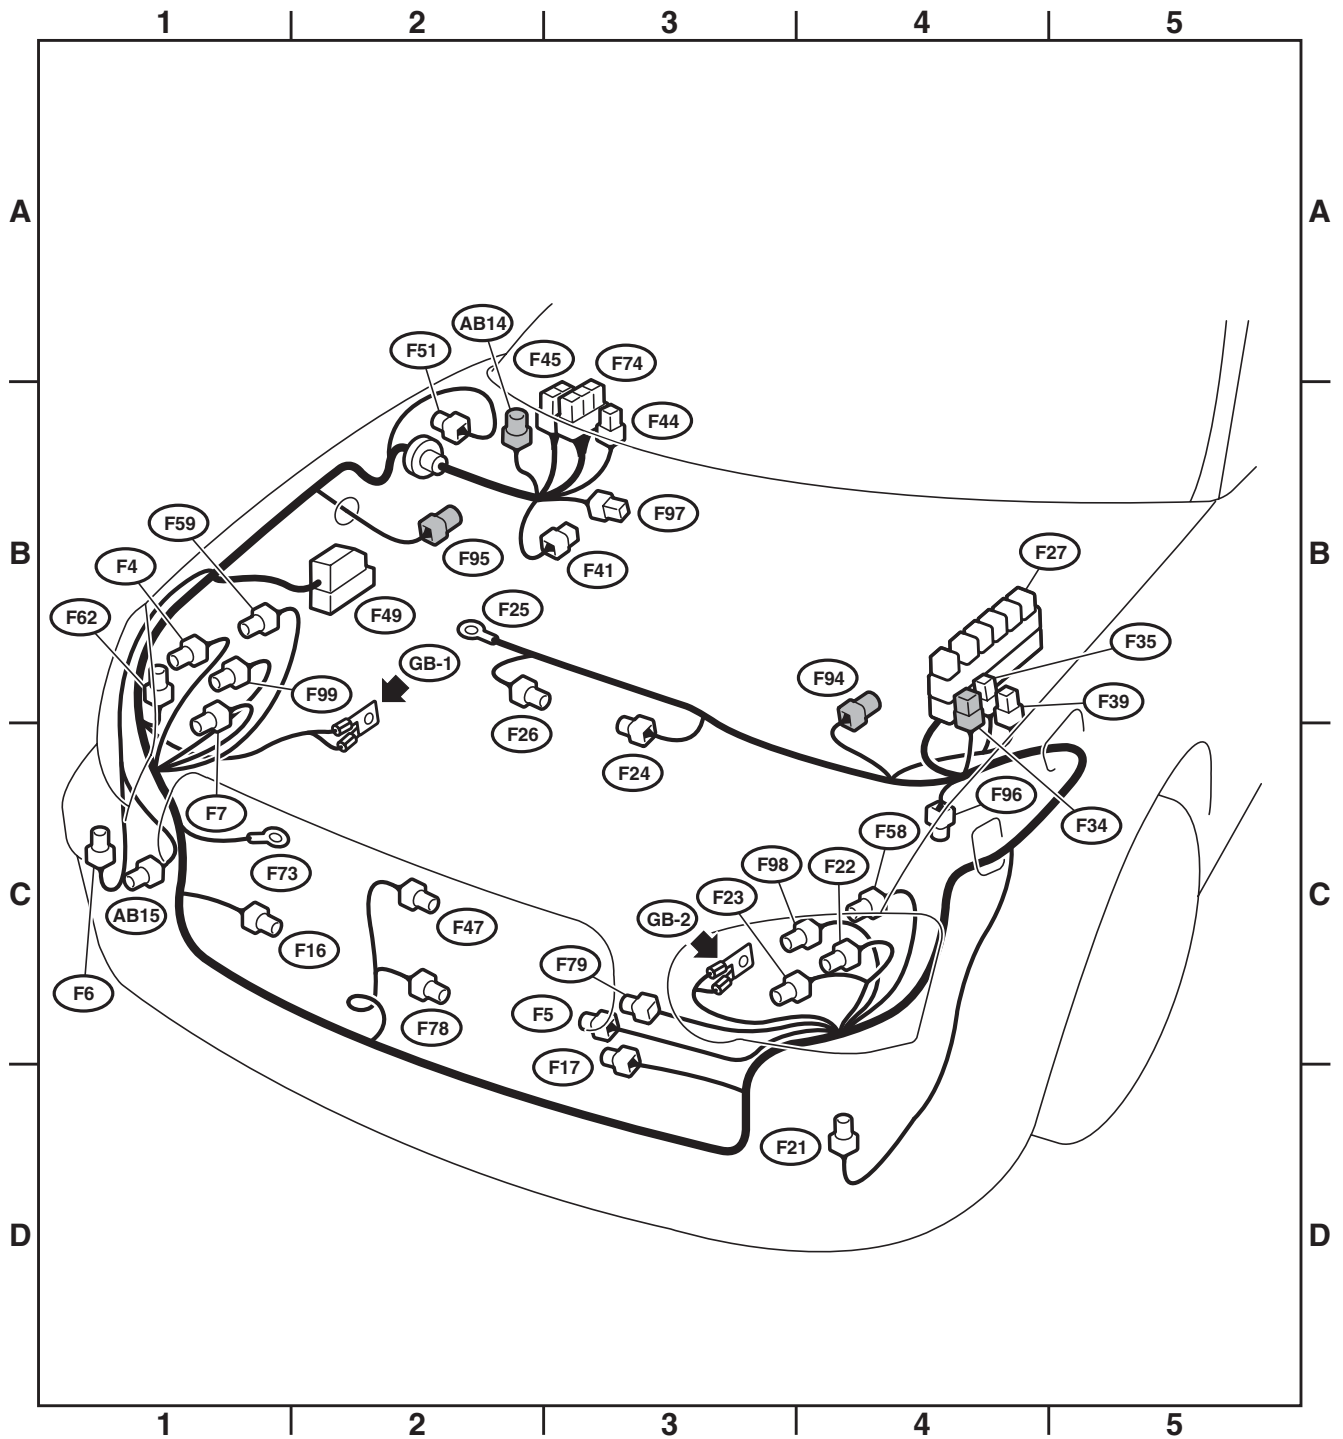

WI-04522

Bulkhead Wiring Harness (In Engine Room)

WIRING SYSTEM

49. Bulkhead Wiring Harness (In Engine Room)

A: LOCATION

1. LHD NON-TURBO ENGINE MODEL

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B8	5	Gray	B-4		Front wiper motor
B11	20	Black	B-3	T4	Transmission (AT)
B12	12	★	B-3	T3	
B14	1	Black	B-4		Starter (Magnet)
B15	2	Gray	B-2		ABS front sensor RH
B16	2	Gray	B-4		Brake fluid level switch
B17	3	★	B-3		Vehicle speed sensor (MT)
B18	4	★	C-3		Front oxygen (A/F) sensor (With OBD)
B19	4	★	B-3		Rear oxygen sensor (With OBD)
B21	20	Gray	C-2	E2	Engine wiring harness
B22	16	Brown	B-2	E3	
B24	2	Gray	B-3	T1	Back-up light switch (MT)
B25	2	Brown	B-3	T2	Neutral position switch (MT)
B28	3	★	B-2		CO resistor
B29	2	★	B-3	T8	Dual range LO switch (MT)
B301	31	Black	B-2		ABS control module
B302	1	★	B-2		ABS motor ground
B303	8	Gray	B-1		Shield joint connector (ABS)
B305	2	★	B-2		Side turn signal light RH
B306	2	Black	C-1		Front fog light RH
B328	6	Black	B-2	E-58	Engine wiring harness


★: Non-colored

Bulkhead Wiring Harness (In Engine Room)

WIRING SYSTEM

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB15	2	Yellow	C-1		Front sub sensor RH

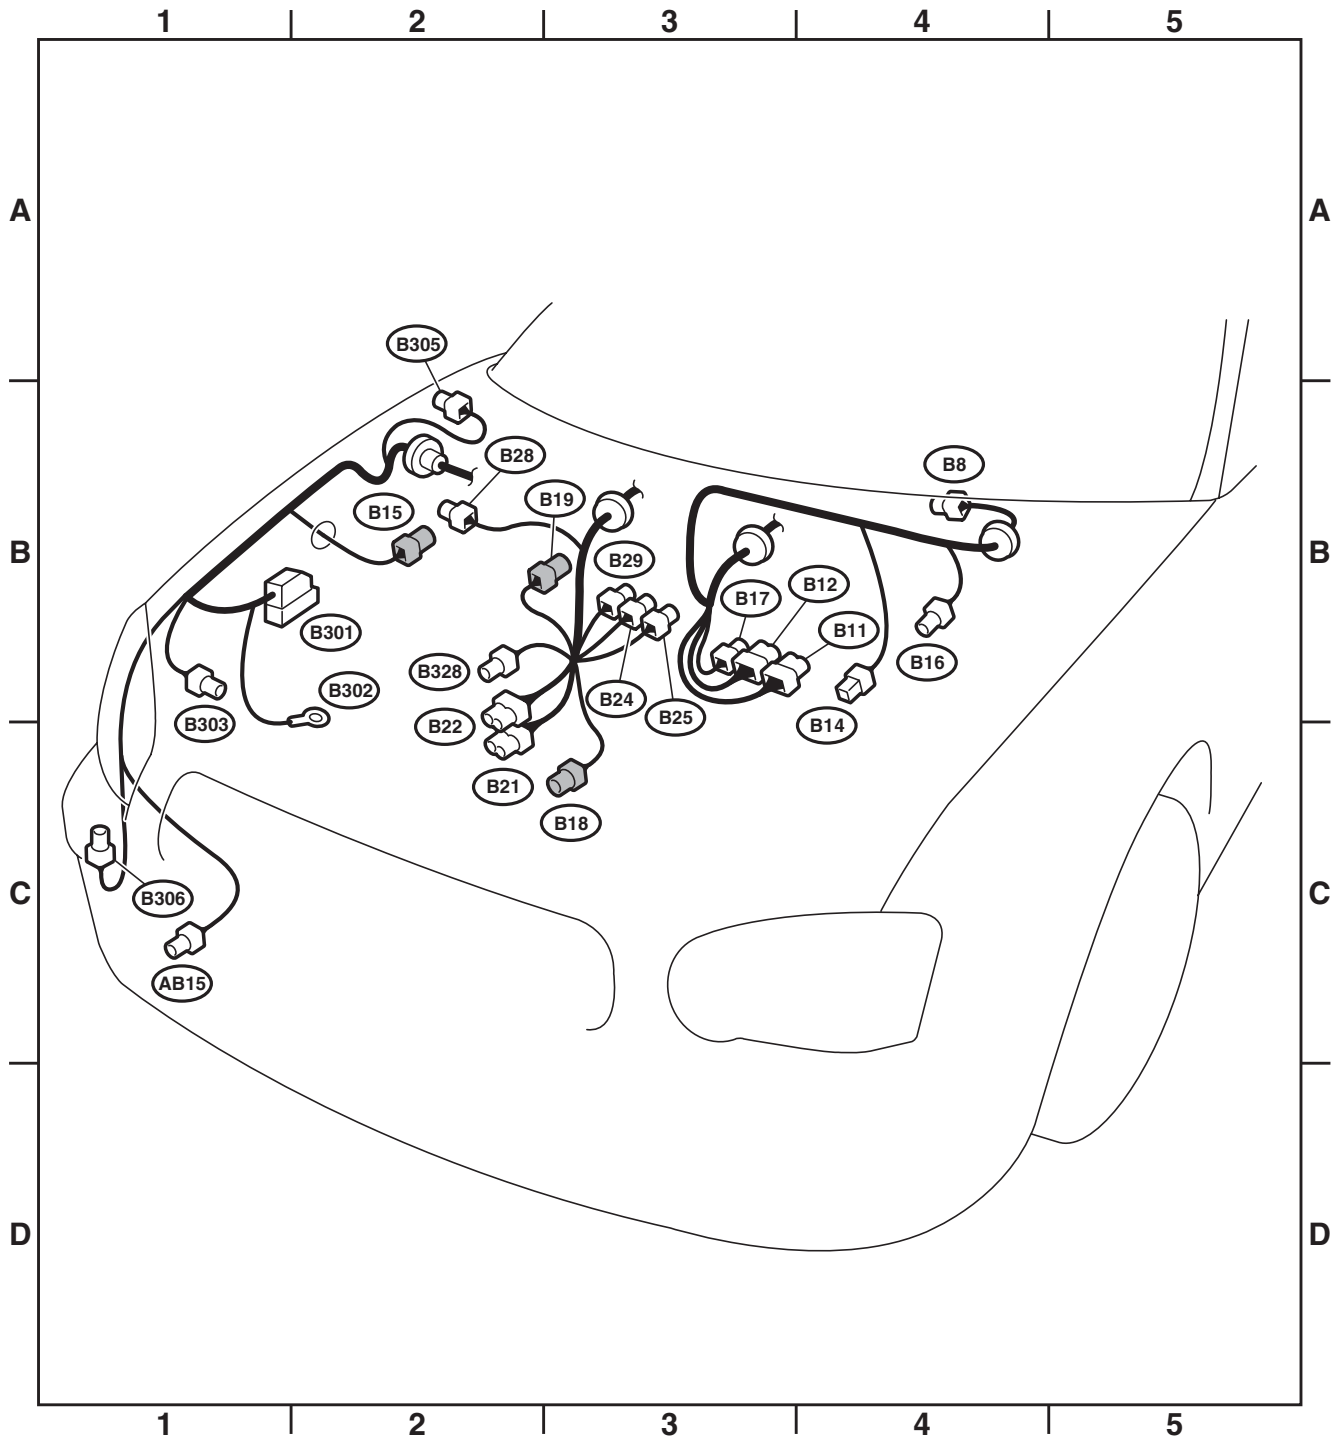

WI-04523

Bulkhead Wiring Harness (In Engine Room)

WIRING SYSTEM

2. LHD TURBO ENGINE MODEL

• Bulkhead Wiring Harness


Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B3	5	Gray	B-2		Mass air flow sensor
B8	5	★	B-4		Front wiper motor
B14	1	Black	B-4		Starter (Magnet)
B15	2	Gray	B-2		ABS front sensor RH
B16	2	Gray	B-4		Brake fluid level switch
B17	4	★	B-3		Vehicle speed sensor (Except STi model)
	3	★	B-3		Vehicle speed sensor (STi model)
B18	4	★	B-2		Front oxygen (A/F) sensor
B19	4	★	B-3		Rear oxygen sensor
B20	10	★	B-2	E1	Engine wiring harness
B127	2	Blue	B-2		Wastegate control solenoid valve
B128	6	★	B-3	T9	Transmission (Model with DCCD)
	4	★	B-3	T9	Transmission (Model without DCCD)
B279	2	★	B-2		Exhaust temperature sensor
B301	31	Black	B-2		ABS control module
B302	1	★	B-2		ABS motor ground
B303	8	Gray	B-1		Shield joint connector (ABS)
B305	2	★	B-2		Side turn signal light RH
B306	2	Black	C-1		Front fog light RH
★: Non-colored					

Bulkhead Wiring Harness (In Engine Room)

WIRING SYSTEM

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB15	2	Yellow	C-1		Front sub sensor RH

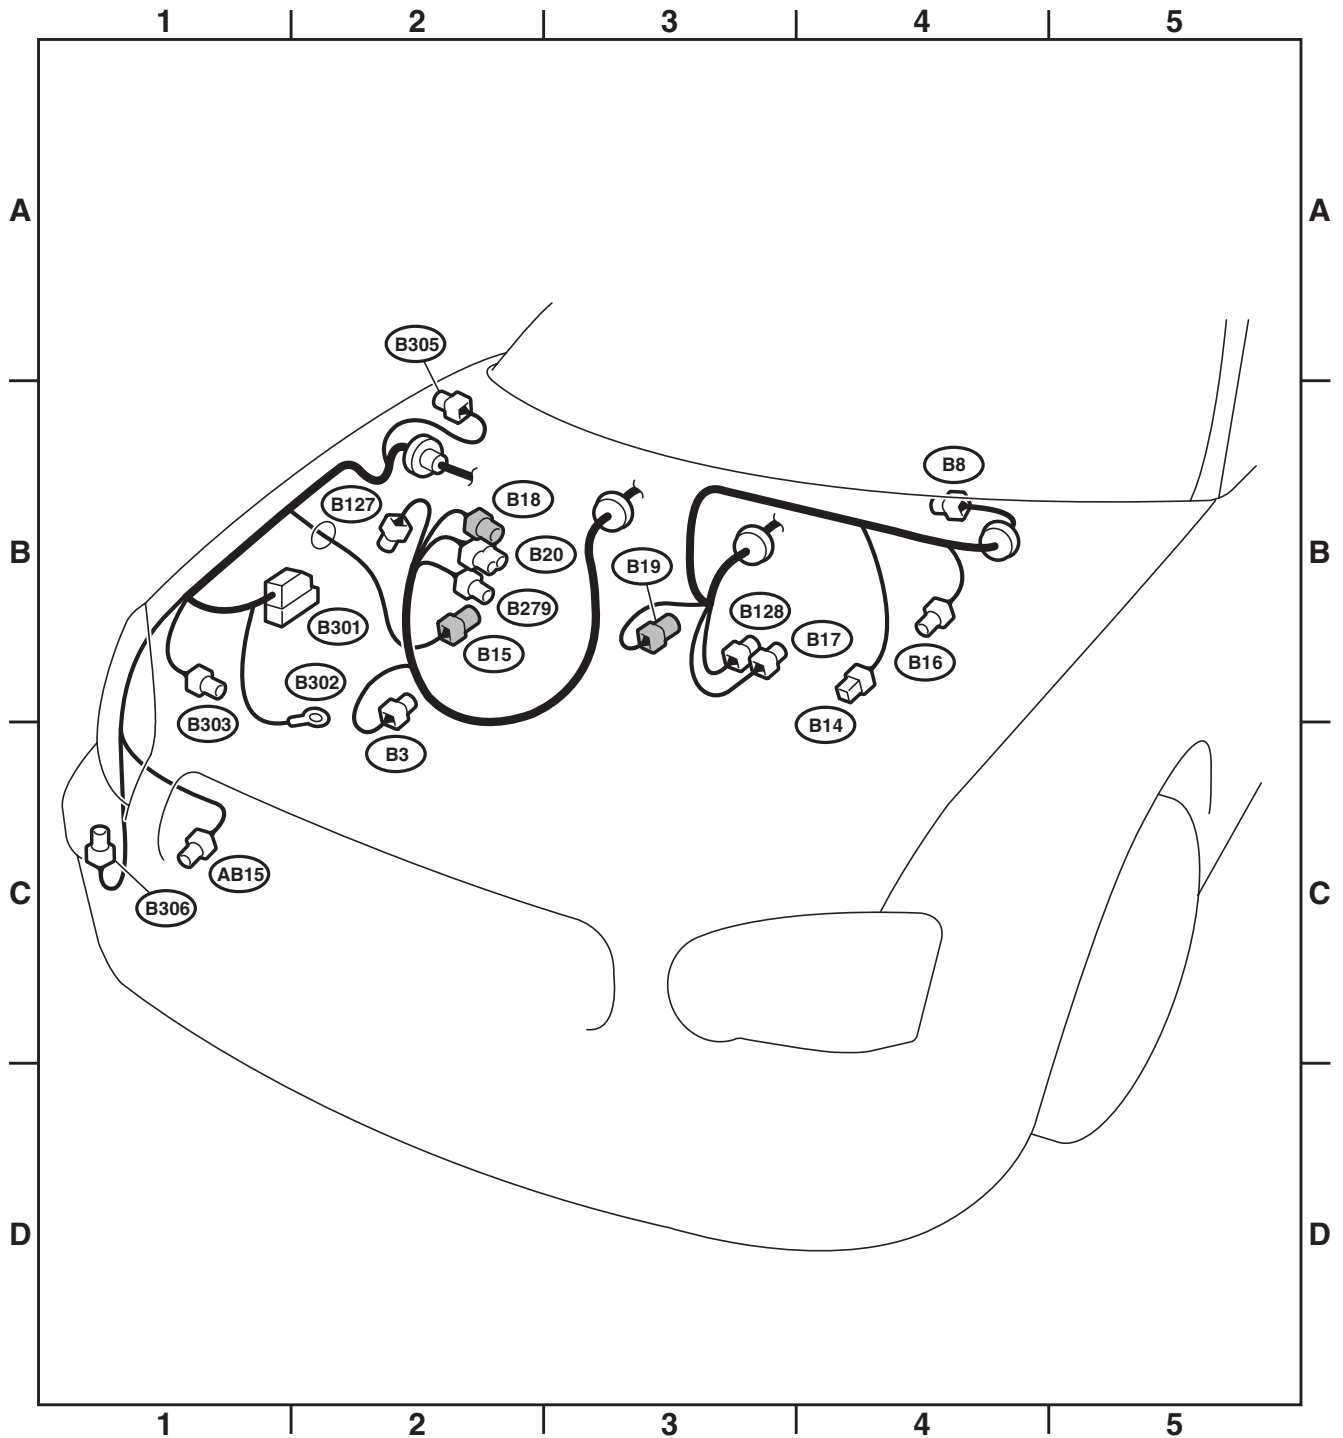

WI-02218

Bulkhead Wiring Harness (In Engine Room)

WIRING SYSTEM

3. RHD NON-TURBO ENGINE MODEL

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B7	6	Black	B-4		Cruise control actuator
B8	5	Black	B-3		Front wiper motor
B11	20	Black	B-3	T4	Transmission (AT)
B12	12	★	B-3	T3	
B14	1	Black	B-3		Starter (Magnet)
B16	2	Gray	B-2		Brake fluid level switch
B17	3	Black	B-3		Vehicle speed sensor (MT)
B18	4	★	B-2		Oxygen sensor (Catalytic converter equipped vehicle without OBD)
	4	★	C-2		Front oxygen (A/F) sensor (With OBD)
B19	4	★	B-3	T5	Rear oxygen sensor (With OBD)
B21	20	Light gray	C-2	E2	Engine wiring harness
B22	16	Brown	B-2	E3	
B24	2	Gray	B-3	T1	Back-up light switch (MT)
B25	2	Brown	B-3	T2	Neutral position switch (MT)
B28	3	★	B-2		CO resistor (Without catalytic converter)
B29	2	★	B-3	T8	Dual range LO switch (MT)
B143	3	★	B-4		M/B
B144	6	Black	B-4		
B145	1	★	B-4		
B146	2	Green	B-4		Front washer motor
B147	2	★	C-4		Rear washer motor
B148	2	★	B-5		Side turn signal light LH
B186	4	Black	B-4		M/B
B255	4	Gray	C-4	F96	Front wiring harness
B328	6	Black	B-2	E58	Engine wiring harness

★: Non-colored

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB18	2	Yellow	D-4		Front sub sensor LH



Bulkhead Wiring Harness (In Engine Room)

WIRING SYSTEM

4. RHD TURBO ENGINE MODEL

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B3	5	Black	B-1		Mass air flow sensor
B7	6	Black	B-4		Cruise control actuator
B8	5	Gray	B-3		Front wiper motor
B11	20	Black	B-3	T4	Transmission (AT)
B12	12	★	B-3	T3	
B14	1	Black	B-3		Starter (Magnet)
B16	2	Gray	B-2		Brake fluid level switch
B17	3	Black	B-3		Vehicle speed sensor (MT-STi model)
	4	Black	B-3		Vehicle speed sensor (Except for MT-STi model)
B18	4	★	B-2		Front oxygen (A/F) sensor
B19	4	★	B-3		Rear oxygen sensor
B20	10	★	B-2	E1	Engine wiring harness
B21	20	Black	C-3	E2	Engine wiring harness
B22	16	Brown	C-3	E3	
B127	2	★	B-1		Wastegate control solenoid valve
B128	6	Gray	B-3	T9	Transmission (MT model with DCCD)
	4	Gray	B-3	T9	Transmission (MT model without DCCD)
B143	3	★	B-4		M/B
B144	6	Black	B-4		
B145	1	★	B-4		
B146	2	Green	B-4		Front washer motor
B147	2	★	C-4		Rear washer motor
B148	2	★	B-5		Side turn signal light LH
B186	4	Black	B-4		M/B
B255	4	Gray	C-4	F96	Front wiring harness (With ABS)
B279	2	★	B-2		Exhaust gas temperature sensor


★: Non-colored

Bulkhead Wiring Harness (In Engine Room)

WIRING SYSTEM

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB18	2	Yellow	D-4		Front sub sensor LH

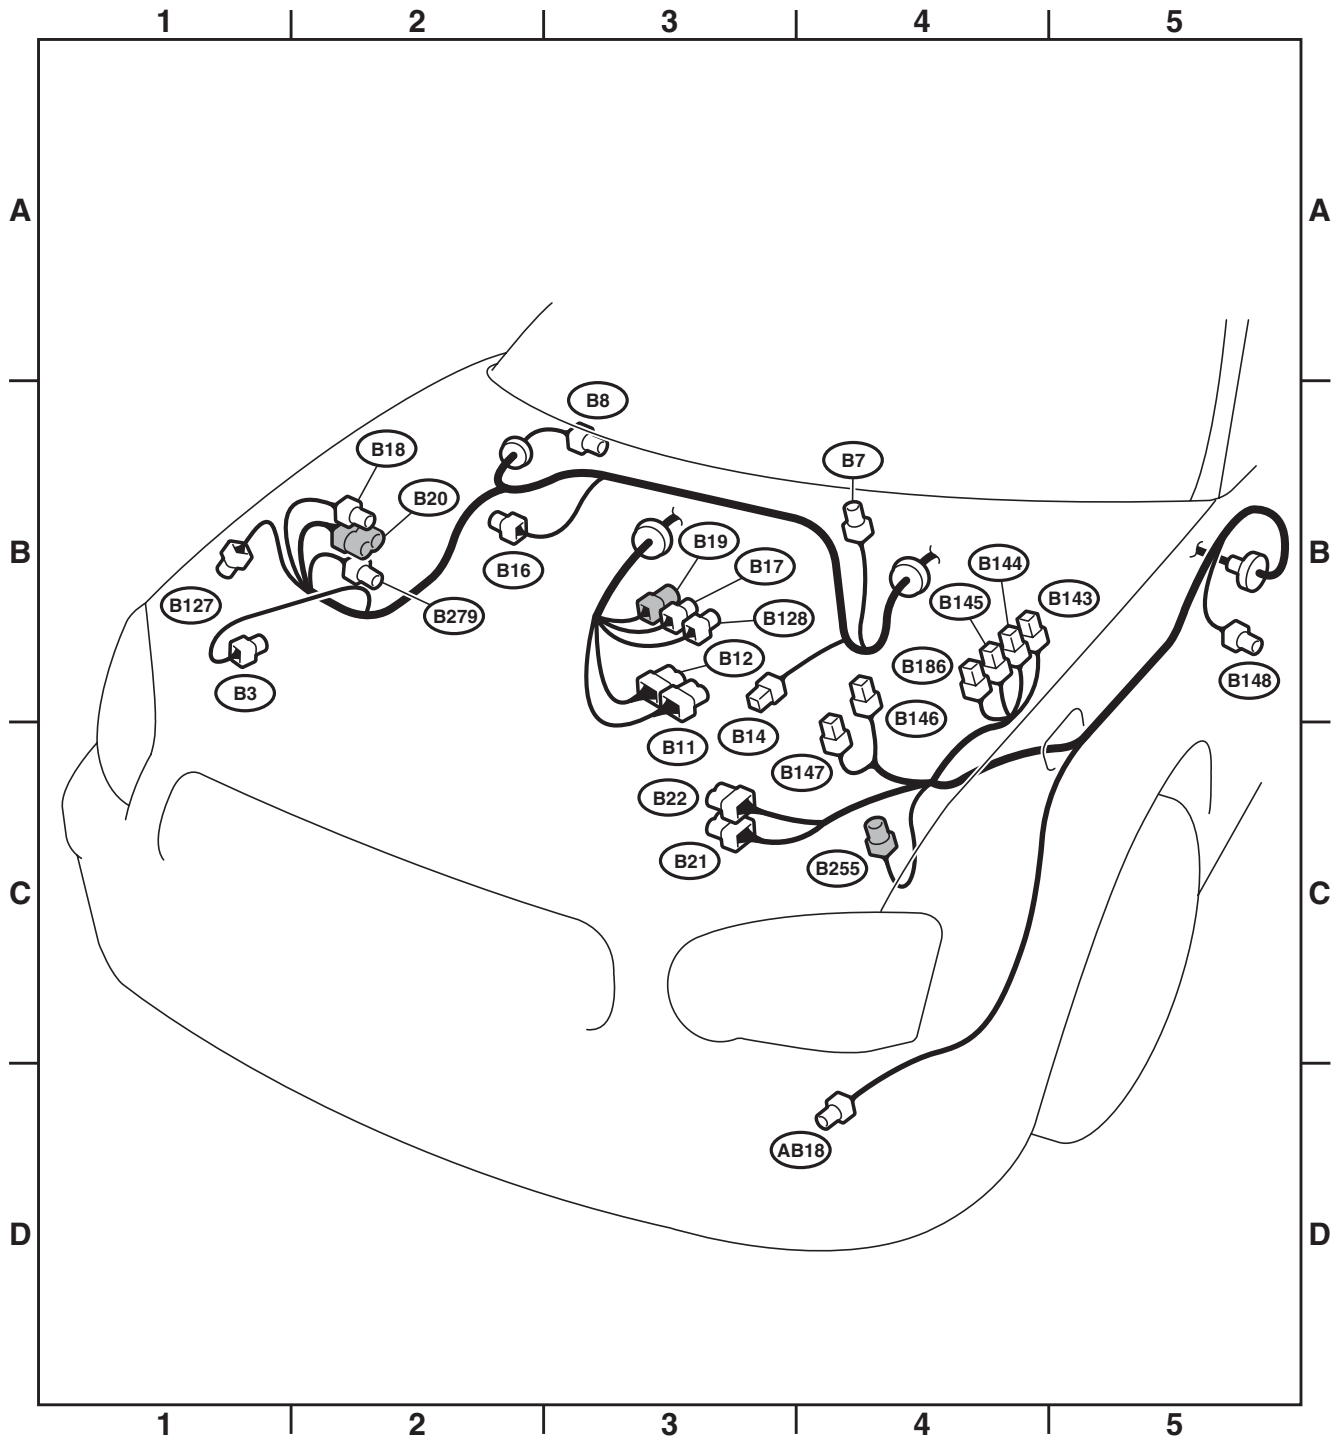

WI-02220

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

50. Bulkhead Wiring Harness (In Compartment)

A: LOCATION

1. LHD MODEL

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B30	25	★	D-1	D1	Front door cord LH
B31	6	Yellow	D-1	AB1	SRS (Airbag) harness
B32	3	Black	B-2		Turn & hazard module
B36	24	Brown	B-3	i1	Instrument panel wiring harness
B37	24	★	B-3	i2	
B40	16	Black	C-2		Data link connector
B41	2	★	C-1		Power window circuit breaker
B44	10	★	C-1		Seat belt warning module
B46	4	Green	B-5		Fuel pump relay
B47	6	Brown	B-5		Main relay
B50	4	★	C-1		Blower fan motor relay
B51	8	Blue	C-1		F/B
B52	7	★	C-1		
B53	12	Black	B-2		Shield joint connector (AT)
B54	24	★	B-3		Transmission control module
B55	24	Gray	B-3		
B56	24	Green	B-2		
B61	8	★	B-1	F44	Front wiring harness
B62	24	★	B-1	F45	
B64	2	Black	B-2		Stop light switch
B68	5	Black	C-3		Steering roll connector
B69	4	★	C-3		Combination switch
B70	18	★	C-3		
B71	17	★	C-3		
B72	4	Blue	C-3		Ignition switch
B74	2	Black	C-3		Key warning switch
B75	2	Green	C-2		Test mode connector
B76	2	Green	C-2		
B77	3	★	B-4		Mode actuator
B79	14	Gray	C-2		Check connector
B81	1×2	★	C-2		Diagnosis terminal (Ground)
B82	6	Black	C-2		Diagnosis connector
B83	6	★	C-4		Shield & sensor ground joint connector (E/G) (With OBD)
	8	★	C-4		Shield & sensor ground joint connector (E/G) (Without OBD)

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B84	31	★	C-4		Engine control module
B85	4	Brown	B-3		Diode (Rear fog light)
B86	4	Brown	B-4		Blower fan resistor (Manual A/C)
B87	2	★	B-5		Blower fan motor
B88	4	Brown	B-4		Evaporator thermo switch (Manual A/C)
B90	4	★	B-5	R50	Roof cord
B91	6	Black	B-4		FRESH/RECIRC actuator
B100	24	Black	C-5	F2	Front wiring harness
B101	25	★	B-4	D11	Front door cord RH
B108	2	Black	B-1	F46	Front wiring harness
B116	6	★	C-4		Select lever illumination light
B119	4	★	C-4		Front accessory power supply socket
B120	14	★	C-4		Radio
B121	1	Black	C-4		Audio ground
B125	1	Green	C-5	B126	Line end connector
	1	Black	C-2	B126	Read memory connector
B126	1	Green	C-5	B125	Line end connector
	1	Black	C-2	B125	Read memory connector
B129	2	Black	B-3		Kick down switch (AT)
B131	4	Blue	C-1		Rear fog light relay
B132	8	★	C-2		Head light leveler switch
B133	6	★	D-5		AT power mode & hold mode switch
B134	22	★	C-5		Engine control module (Turbo model)
	35	★	C-5		Engine control module (Non-turbo model)
B135	28	★	C-4		Engine control module
B136	17	★	B-4		Engine control module (Turbo model)
	26	★	B-4		Engine control module (Non-turbo model)
	30	★	B-4		Engine control module (Non-turbo model)
B137	20	★	B-4		Engine control module (Non-turbo model)
	24	★	B-4		Engine control module (Turbo model)
B141	12	★	B-2		Immobilizer control module
B152	12	★	C-1		F/B
B158	10	Gray	D-1		F/B
B160	6	Gray	C-1		Front fog light switch

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B168	10	★	C-4		Mode control switch (Manual A/C)
B169	6	★	C-4		Blower fan motor switch (Manual A/C)
B176	18	★	C-1		Keyless entry control module
B183	1	★	D-1	B184	Keyless registration connector
B184	1	★	D-1	B183	
B195	6	★	C-1		Rear fog light switch
B198	5	★	C-5	GB-9	Ground joint connector
B200	16	Blue	B-1	F74	Front wiring harness
B208	2	Black	B-5		Glove box light
B224	2	★	C-3		Ignition switch illumination light
B225	38	Black	C-2		Relay block
B256	2	★	B-3		Evaporator sensor
B257	3	★	D-5		ABS lateral G sensor (STi model)
B258	3	★	D-5		DCCD volume
B261	6	★	D-5		Joint connector (ABS STi model)
B264	4	Red	C-1		ABS relay
B271	12	Blue	C-1		F/B
B275	4	★	B-4		Fan control amp.
B282	16	Gray	C-4		Auto A/C control module
B283	20	Gray	C-4		
B284	10	★	D-5		Remote control rear-view mirror switch
B286	4	★	B-5		Intercooler water spray timer
B289	40	★	B-5		DCCD control module
B292	3	★	D-5		ABS G sensor
B293	3	★	B-4		Air mix actuator (Auto A/C)
B294	6	★	C-2		Intercooler water spray switch
B296	4	★	B-2		Rear defogger timer
B300	6	★	C-2		Line end check connector
B304	2	Black	B-5		ABS condenser
B338	3	★	D-5		DCCD G sensor
B339	6	★	D-5		DCCD mode switch
★: Non-colored					

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB1	6	Yellow	D-1	B31	Bulkhead wiring harness
AB3	28	Yellow	C-4		Airbag control module
AB4	2	Yellow	B-4		Inflator (Passenger's seat)
AB13	2	Yellow	B-1	AB14	Front sub sensor harness LH
AB21	2	Yellow	C-3	AB26	Inflator (Driver's seat)



Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

2. RHD MODEL

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B30	25	★	C-5	D1	Front door cord RH
B31	6	Yellow	D-5	AB1	SRS (Airbag) harness
B32	3	Black	B-4		Turn & hazard module
B37	32	★	B-3	i2	Instrument panel wiring harness
B38	10	Black	B-3	i3	Instrument panel wiring harness (MT model without DCCD)
	22	Black	B-3	i3	Instrument panel wiring harness (AT model and MT model with DCCD)
B40	16	Black	C-4		Data link connector
B41	2	★	C-5		Power window circuit breaker
B43	6	Black	C-2		Illumination control module
B44	10	★	D-5		Seatbelt warning module
B46	4	Green	B-1		Fuel pump relay
B47	6	★	B-1		Main relay
B50	4	★	C-5		Blower fan motor relay
B51	8	Blue	C-5		F/B
B52	7	★	C-5		
B53	12	Black	B-4		Shield joint connector (AT)
B54	24	★	B-3		Transmission control module
B55	24	Gray	B-3		
B56	24	Green	B-4		
B61	8	Black	B-5	F44	Front wiring harness
B62	18	★	B-5	F45	
B64	2	Black	C-4		Stop light switch
B65	4	Black	C-4		Stop&brake switch (With cruise control)
B68	5	Black	C-3		Cruise control sub switch
B69	4	★	B-3		Combination switch
B70	18	★	C-3		
B71	17	★	B-3		
B72	4	Blue	C-3		Ignition switch
B74	2	Black	C-3		Key warning switch
B75	2	Green	C-4	B76	Test mode connector
B76	2	Green	C-4	B75	
B77	3	★	B-2		Mode actuator
B79	14	Gray	C-4		Check connector
B81	1×2	★	C-4		Diagnosis terminal (Ground)
B82	6	Black	C-4		Diagnosis connector

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B83	4	★	C-2		Shield & sensor ground joint connector (E/G) (Non-turbo model with immobilizer)
	6	★	C-2		Shield & sensor ground joint connector (E/G) (Non-turbo model without immobilizer)
	6	Gray	C-2		Shield & sensor ground joint connector (E/G) (Turbo model)
B84	31	★	B-2		Engine control module
B85	4	Black	B-4		Diode (Lighting)
B86	4	Brown	B-2		Blower fan motor resistor (Manual A/C)
B87	2	★	B-1		Blower fan motor
B88	4	Brown	B-2		Evaporator thermo switch (Manual A/C)
B90	4	★	B-5	R50	Roof cord
B91	6	Black	B-2		FRESH/RECIRC actuator
B93	20	★	B-1		Security control module
B94	20	Black	D-5		Cruise control module
B101	25	★	B-1	D11	Front door cord LH
B107	2	★	B-3		Clutch switch (Cruise control)
B116	6	★	C-2		Select lever illumination light (AT)
B119	4	★	C-2		Front accessory power supply socket
B120	14	★	B-2		Radio
B121	1	★	B-2		Audio ground
B125	1	Green	B-1	B126	Line end connector
	1	Black	C-4	B126	Read memory connector
B126	1	Green	B-1	B125	Line end connector
	1	Black	C-4	B125	Read memory connector
B129	2	Black	B-5		Kick down switch (AT)
B131	4	Blue	C-5		Rear fog light relay
B132	8	★	C-4		Head light leveler switch
B133	6	Blue	D-1		AT power mode & hold mode switch
B134	22	★	C-1		Engine control module (Turbo model)
	35	★	C-1		Engine control module (Non-turbo model)

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B135	28	★	C-2		Engine control module (Turbo model)
	28	★	C-2		Engine control module (Non-turbo model)
B136	17	★	B-2		Engine control module (Turbo model)
	26	★	B-2		Engine control module (Non-turbo with OBD model)
	30	★	B-2		Engine control module (Non-turbo without OBD model)
B137	20	★	B-2		Engine control module (Non-turbo model)
	24	★	B-2		Engine control module (Turbo model)
B141	12	★	B-3		Immobilizer control module
B152	12	★	C-5		F/B
B158	10	Gray	C-5		F/B
B159	9	Brown	C-5		F/B
B160	6	Gray	C-5		Front fog light switch
B161	6	Brown	C-4		Cruise control main switch
B168	10	★	C-2		Mode control panel (Manual A/C)
B169	6	★	C-2		Blower fan motor switch (Manual A/C)
B176	18	★	C-5		Keyless entry control module
B183	1	★	D-5	B184	Keyless registration connector
B184	1	★	D-5	B183	
B195	6	★	C-5		Rear fog light switch
B198	1	★	B-3	B199	Joint connection (Ground)
B199	1	★	B-3	B198	
B200	22	Black	B-5	F74	Front wiring harness
B208	2	★	B-1		Glove box light
B224	2	★	C-3		Ignition switch illumination light
B225	38	Black	C-4		Relay block
B237	6	Black	C-2		Sports shift switch
B256	2	★	B-2		Evaporator sensor
B257	3	Black	D-1		ABS lateral G sensor
B258	3	★	D-1		DCCD volume
B259	2	★	C-1	B260	Oxygen sensor joint connector (Turbo model)
B260	2	★	C-1	B259	
B261	6	★	B-5		Joint connector (ABS-STi model)
B264	4	Pink	C-5		ABS relay
B271	12	Blue	C-5		F/B
B275	4	★	B-2		Fan control amp

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B282	16	Gray	C-2		Auto A/C control module
B283	20	Gray	C-2		
B284	10	★	D-1		Remote control rear-view mirror switch
B286	4	★	B-1		Intercooler water spray timer
B289	40	★	B-4		DCCD control module
B292	3	Black	D-2		ABS G sensor
B293	3	★	B-2		Air mix actuator (Auto A/C)
B294	6	★	C-4		Intercooler water spray switch
B296	4	★	B-4		Rear defogger timer
B300	6	★	C-4		Line end check connector
B323	4	Blue	B-5		Security relay
B324	16	Gray	B-4		Double lock control module
B325	20	Gray	B-4		
B338	3	★	C-1		DCCD G sensor
B339	6	★	D-1		DCCD mode switch
★: Non-colored					

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB1	6	Yellow	D-5	B31	Bulkhead wiring harness
AB3	28	Yellow	C-1		Airbag control module
AB4	2	Yellow	B-2		Inflator (Passenger's seat)
AB13	2	Yellow	C-5	AB14	Front sub sensor harness RH
AB21	2	Yellow	C-3	AB26	Inflator (Driver's seat)



Engine Wiring Harness and Transmission Cord

WIRING SYSTEM

51.Engine Wiring Harness and Transmission Cord

A: LOCATION


1. SOHC W/O OBD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
E2	20	Light gray	A-4	B21	Bulkhead wiring harness
E3	16	Brown	A-4	B22	Bulkhead wiring harness
E4	2	Blue	A-3		Purge control solenoid valve
E5	2	Light gray	A-2		Fuel injector No. 1
E6	2	Light gray	A-2		Fuel injector No. 3
E7	6	Black	A-2		Idle air control solenoid valve
E8	3	Light gray	A-3		Engine coolant temperature sensor and thermometer
E10	2	Light gray	B-3		Crankshaft position sensor
E11	1	★	B-2		Oil pressure switch
E12	4	Gray	A-2		Ignition coil and ignitor (1.6 L model)
		Dark gray	A-2		Ignition coil and ignitor (Except 1.6 L model)
E13	4	Dark brown	A-3		Throttle position sensor
E14	2	★	A-3		Knock sensor
E15	2	Black	B-4		Camshaft position sensor
E16	2	Light gray	B-4		Fuel injector No. 2
E17	2	Light gray	B-4		Fuel injector No. 4
E19	1	★	B-2		Power steering oil pressure switch
E20	4	Black	A-3		Pressure sensor and intake air temperature sensor
★: Non-colored					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
T1	2	Gray	D-2	B24	Bulkhead wiring harness (MT)
T2	2	Brown	D-2	B25	Bulkhead wiring harness (MT)
T3	12	Black	D-4	B12	Bulkhead wiring harness (AT)
T4	20	Black	D-4	B11	Bulkhead wiring harness (AT)
T8	2	★	D-2	B29	Bulkhead wiring harness (MT)
★: Non-colored					

Engine Wiring Harness and Transmission Cord

WIRING SYSTEM

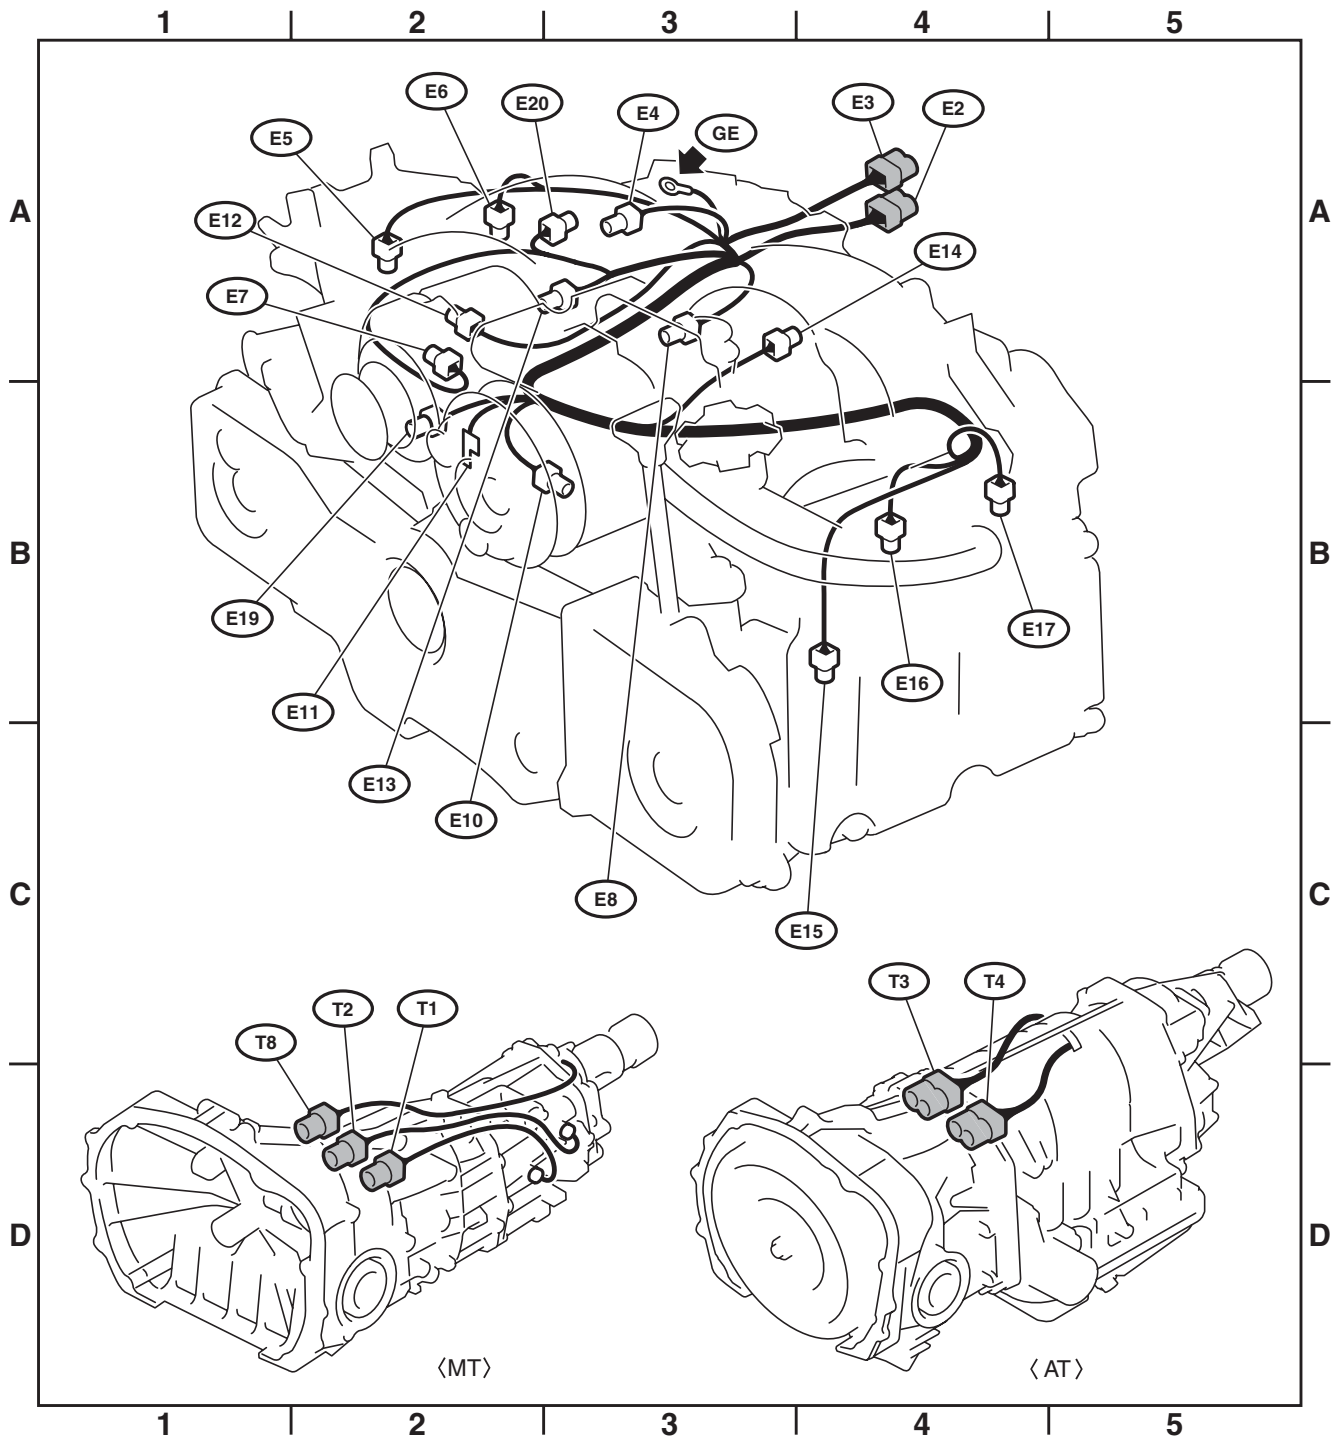

WI-04526

Engine Wiring Harness and Transmission Cord

WIRING SYSTEM


2. SOHC WITH OBD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
E2	20	Light gray	A-4	B21	Bulkhead wiring harness
E3	16	Brown	A-4	B22	Bulkhead wiring harness
E4	2	Black	A-3		Purge control solenoid valve
E5	2	Light gray	A-2		Fuel injector No. 1
E6	2	Light gray	A-2		Fuel injector No. 3
E7	6	Black	A-2		Idle air control solenoid valve
E8	3	Light gray	A-3		Engine coolant temperature sensor and thermometer
E10	2	Light gray	B-3		Crankshaft position sensor
E11	1	★	B-2		Oil pressure switch
E12	4	Gray	A-2		Ignition coil and ignitor (1.6 L model)
		Dark gray	A-2		Ignition coil and ignitor (Except 1.6 L model)
E13	4	Dark brown	A-3		Throttle position sensor
E14	2	Light gray	A-3		Knock sensor
E15	2	Black	B-4		Camshaft position sensor
E16	2	Light gray	B-4		Fuel injector No. 2
E17	2	Light gray	B-4		Fuel injector No. 4
E18	6	Dark gray	A-4		Exhaust gas recirculation solenoid valve
E19	1	★	B-2		Power steering oil pressure switch
E20	2	Black	A-3		Intake air temperature sensor
E21	3	Light gray	A-2		Pressure sensor
E42	2	Purple	A-3		Air assist injector solenoid valve
E58	6	Black	A-4	B328	Bulkhead wiring harness
★: Non-colored					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
T1	2	Gray	D-2	B24	Bulkhead wiring harness (MT)
T2	2	Brown	D-2	B25	Bulkhead wiring harness (MT)
T3	12	Black	D-4	B12	Bulkhead wiring harness (AT)
T4	20	Black	D-4	B11	Bulkhead wiring harness (AT)
T8	2	★	D-2	B29	Bulkhead wiring harness (MT)
★: Non-colored					

Engine Wiring Harness and Transmission Cord

WIRING SYSTEM

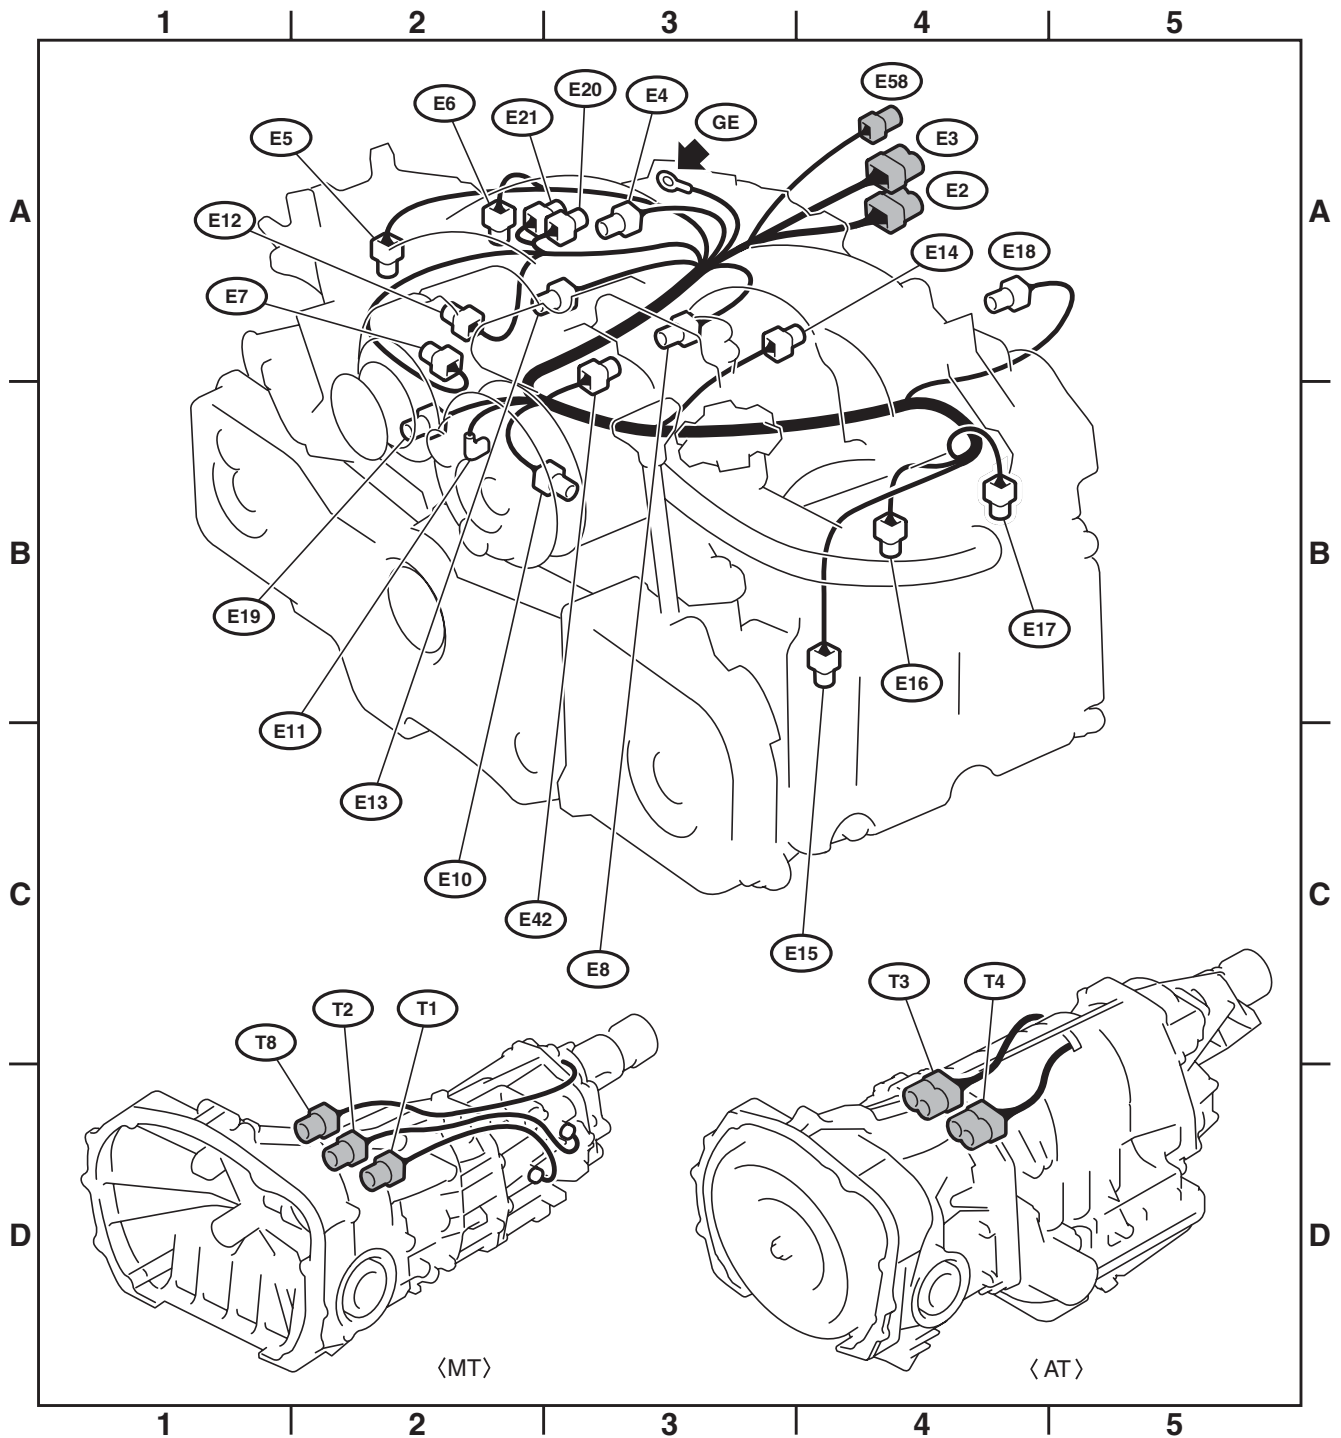

WI-02224

Engine Wiring Harness and Transmission Cord

WIRING SYSTEM


3. DOHC TURBO MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
E1	10	Light gray	A-2	B20	Bulkhead wiring harness
E2	20	Black	B-4	F61	Front wiring harness (LHD model)
				B21	Bulkhead wiring harness (RHD model)
E3	16	Brown	B-4	F60	Front wiring harness (LHD model)
				B22	Bulkhead wiring harness (RHD model)
E4	2	Black	B-3		Purge control solenoid valve
E5	2	Dark gray	A-2		Fuel injector No. 1
E6	2	Dark gray	A-2		Fuel injector No. 3
E7	3	Light gray	A-3		Idle air control solenoid valve
E8	3	Light gray	B-3		Engine coolant temperature sensor and thermometer
E10	2	Light gray	B-2		Crankshaft position sensor
E11	1	★	B-2		Oil pressure switch
E13	3	Black	A-3		Throttle position sensor
E14	2	Brown	A-4		Knock sensor (STi model and except for Australia STi-model)
	2	Light gray	A-4		Knock sensor (Except for STi model - except for Australia)
E15	2	Light gray	B-3		Camshaft position sensor
E16	2	Dark gray	B-4		Fuel injector No. 2
E17	2	Dark gray	B-4		Fuel injector No. 4
E19	1	Light gray	B-2		Power steering oil pressure switch
E21	3	Black	A-3		Pressure sensor
E31	3	★	B-2		Ignition coil No. 1
E32	3	★	B-4		Ignition coil No. 2
E33	3	Black	A-3		Ignition coil No. 3
E34	3	Black	B-4		Ignition coil No. 4
E35	2	★	A-4		Active valve control camshaft position sensor LH
E36	2	★	A-3		Active valve control camshaft position sensor RH
E37	2	Blue	B-3		Active valve control solenoid valve LH
E38	2	Blue	A-2		Active valve control solenoid valve RH
E50	3	Black	B-3		Tumble generator valve angle sensor LH
E51	2	Black	A-4		Tumble generator valve LH
E54	3	Black	A-3		Tumble generator valve angle sensor RH
E55	2	Black	A-2		Tumble generator valve RH
★: Non-colored					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
T3	12	Black	D-4	B12	Bulkhead wiring harness (AT)
T4	20	Black	D-4	B11	Bulkhead wiring harness (AT)
T9	4	★	D-2	B128	Bulkhead wiring harness (MT model without DCCD)
	6	★	D-2	B128	Bulkhead wiring harness (MT model with DCCD)
★: Non-colored					

Engine Wiring Harness and Transmission Cord

WIRING SYSTEM

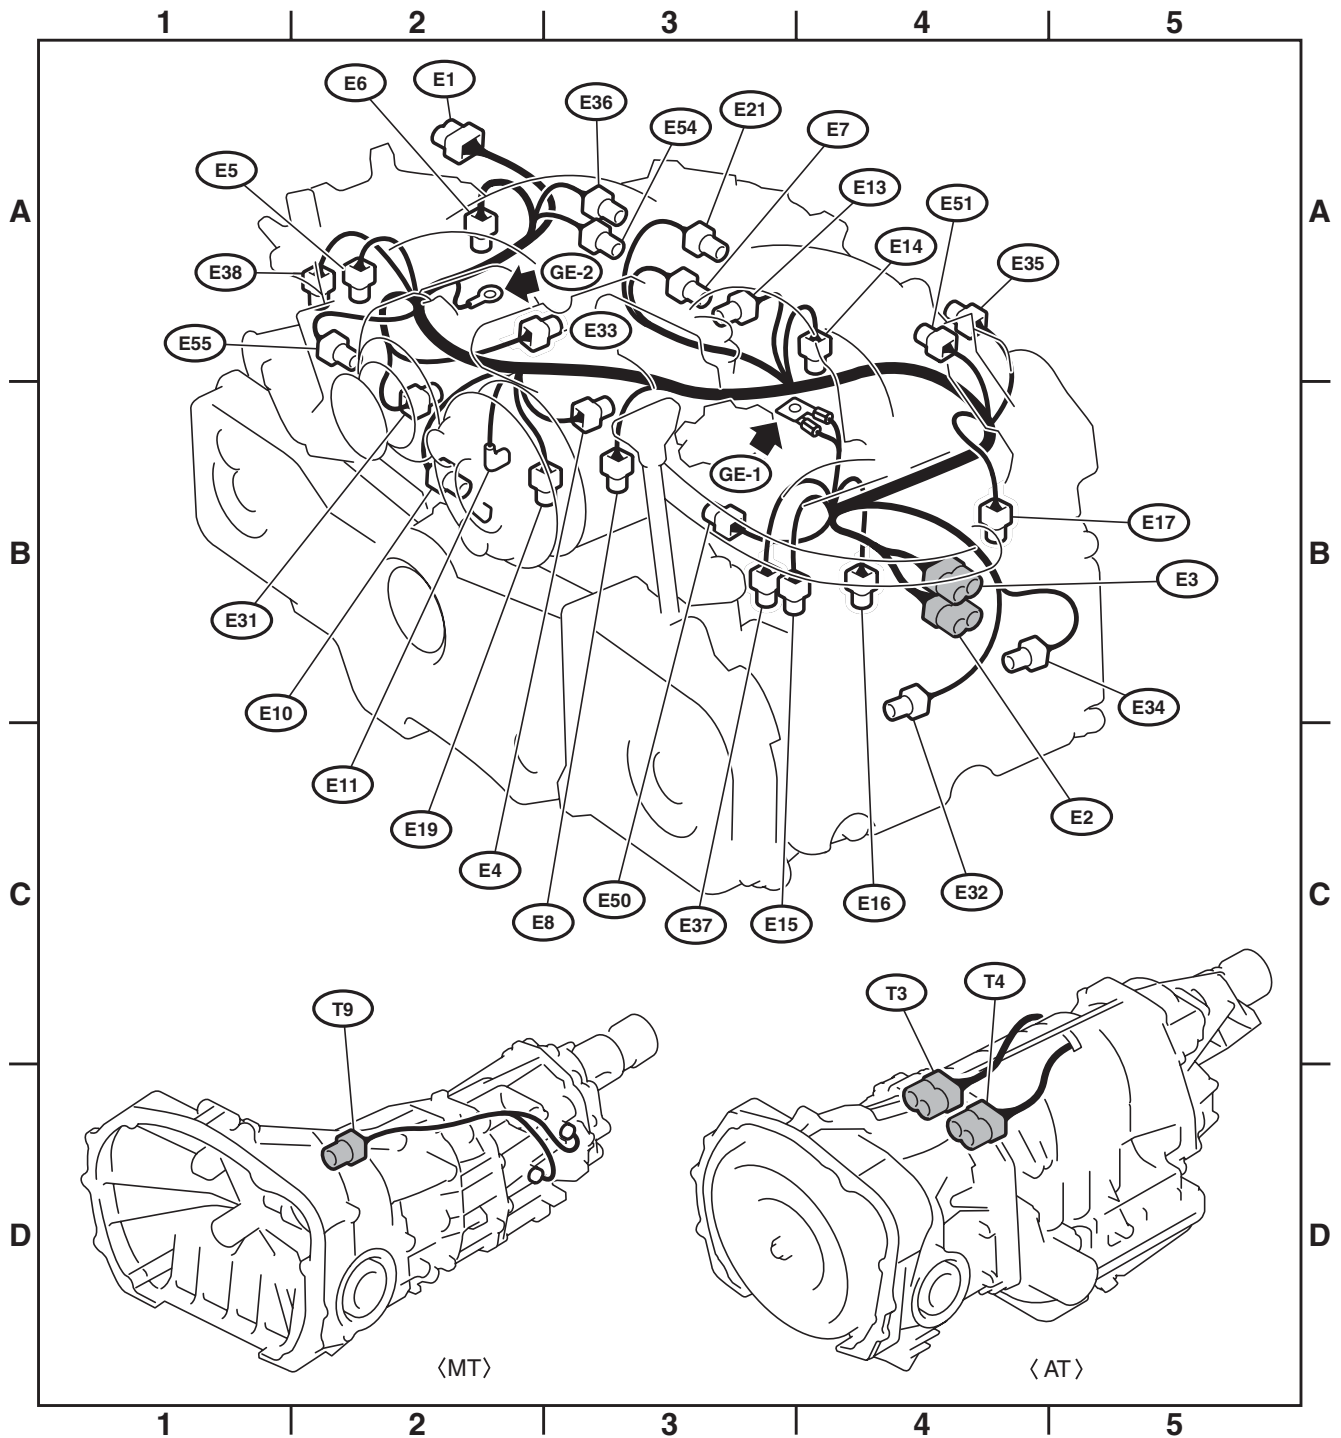

WI-04527

Instrument Panel Wiring Harness

WIRING SYSTEM

52. Instrument Panel Wiring Harness


A: LOCATION

1. LHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
i1	24	Brown	C-3	B36	Bulkhead wiring harness
i2	24	★	C-3	B37	
i10	30	Green	B-2		Combination meter
i11	10	Green	B-3		
i12	14	Green	B-2		
i22	8	★	B-4		Hazard switch
i51	2	★	B-3		Sunload sensor
i59	4	★	B-3		Clock
★: Non-colored					

Instrument Panel Wiring Harness

WIRING SYSTEM

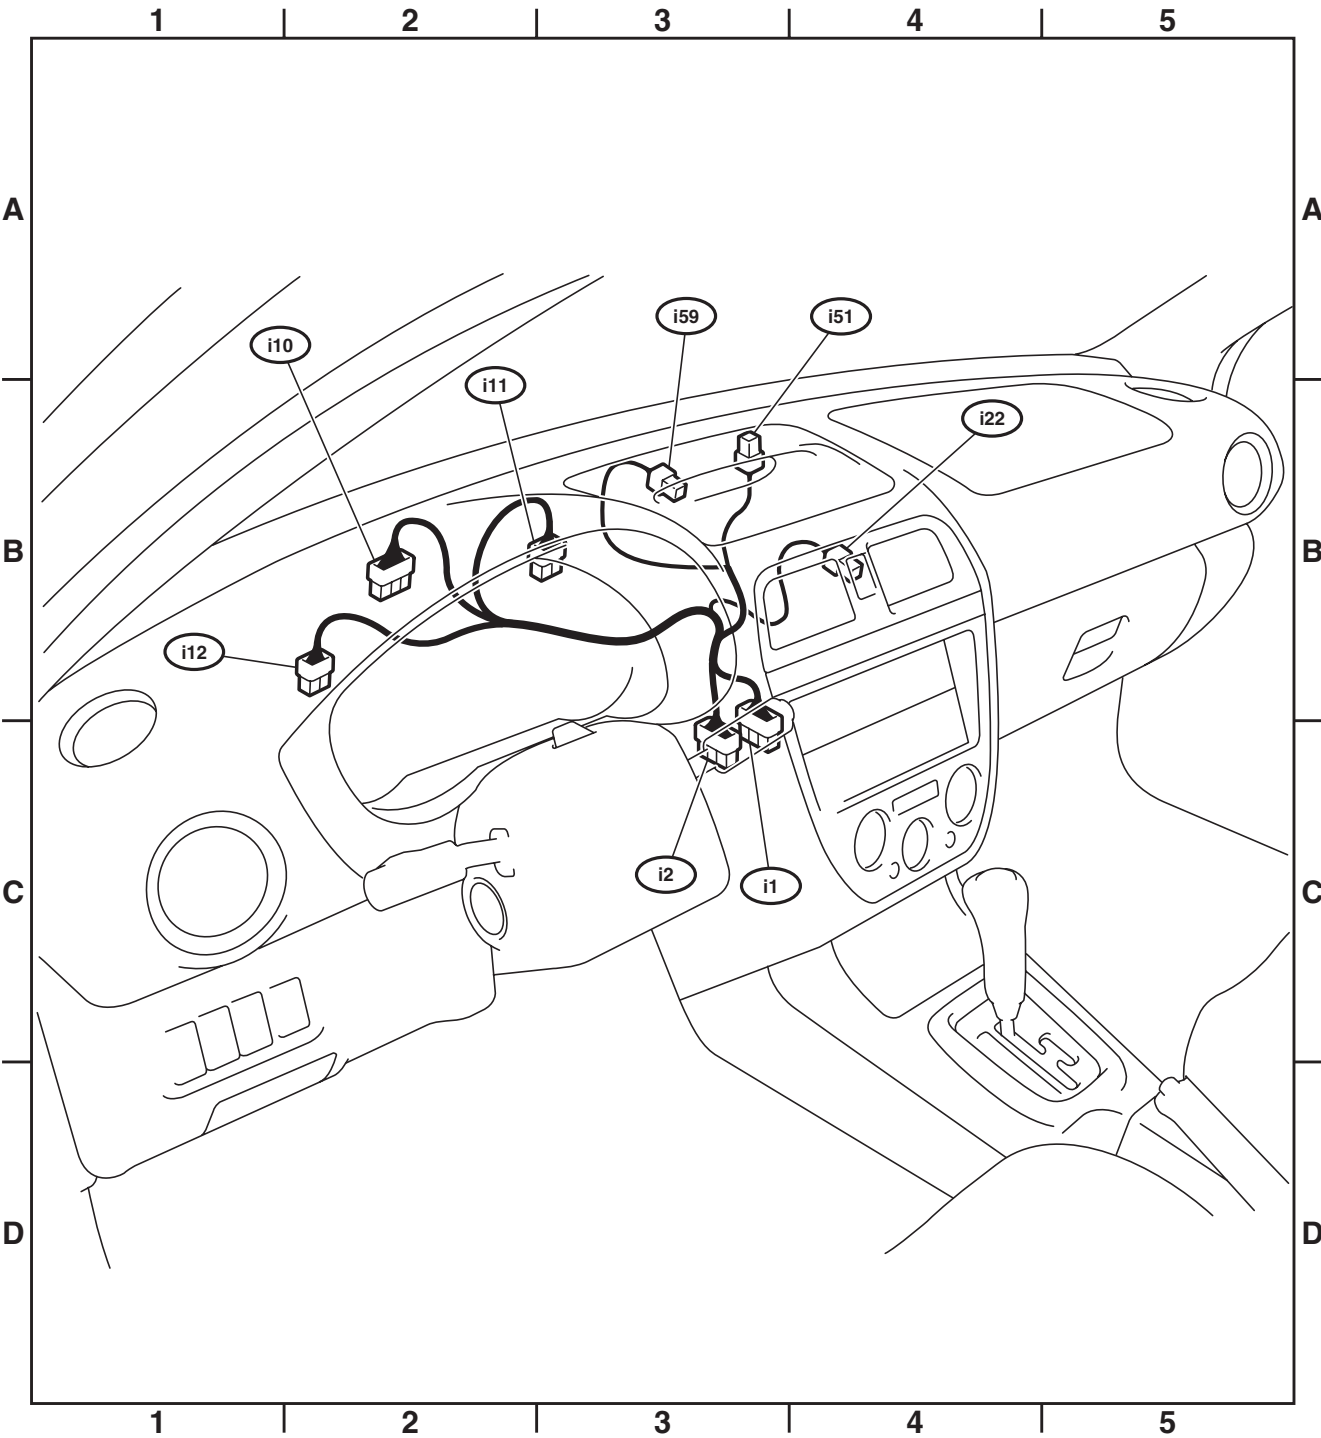

WI-04528

Instrument Panel Wiring Harness


WIRING SYSTEM

2. RHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
i2	32	★	C-3	B37	Bulkhead wiring harness
i3	10	Black	C-3	B38	Bulkhead wiring harness (MT model without DCCD)
	22	Black	C-3	B38	Bulkhead wiring harness (AT model and MT model with DCCD)
i10	30	Green	B-4		Combination meter
i11	10	Green	B-4		
i12	14	Green	B-3		
i22	8	★	B-2		Hazard switch
i51	2	★	B-3		Sunload sensor
i59	4	★	B-3		Clock
★: Non-colored					

Instrument Panel Wiring Harness

WIRING SYSTEM

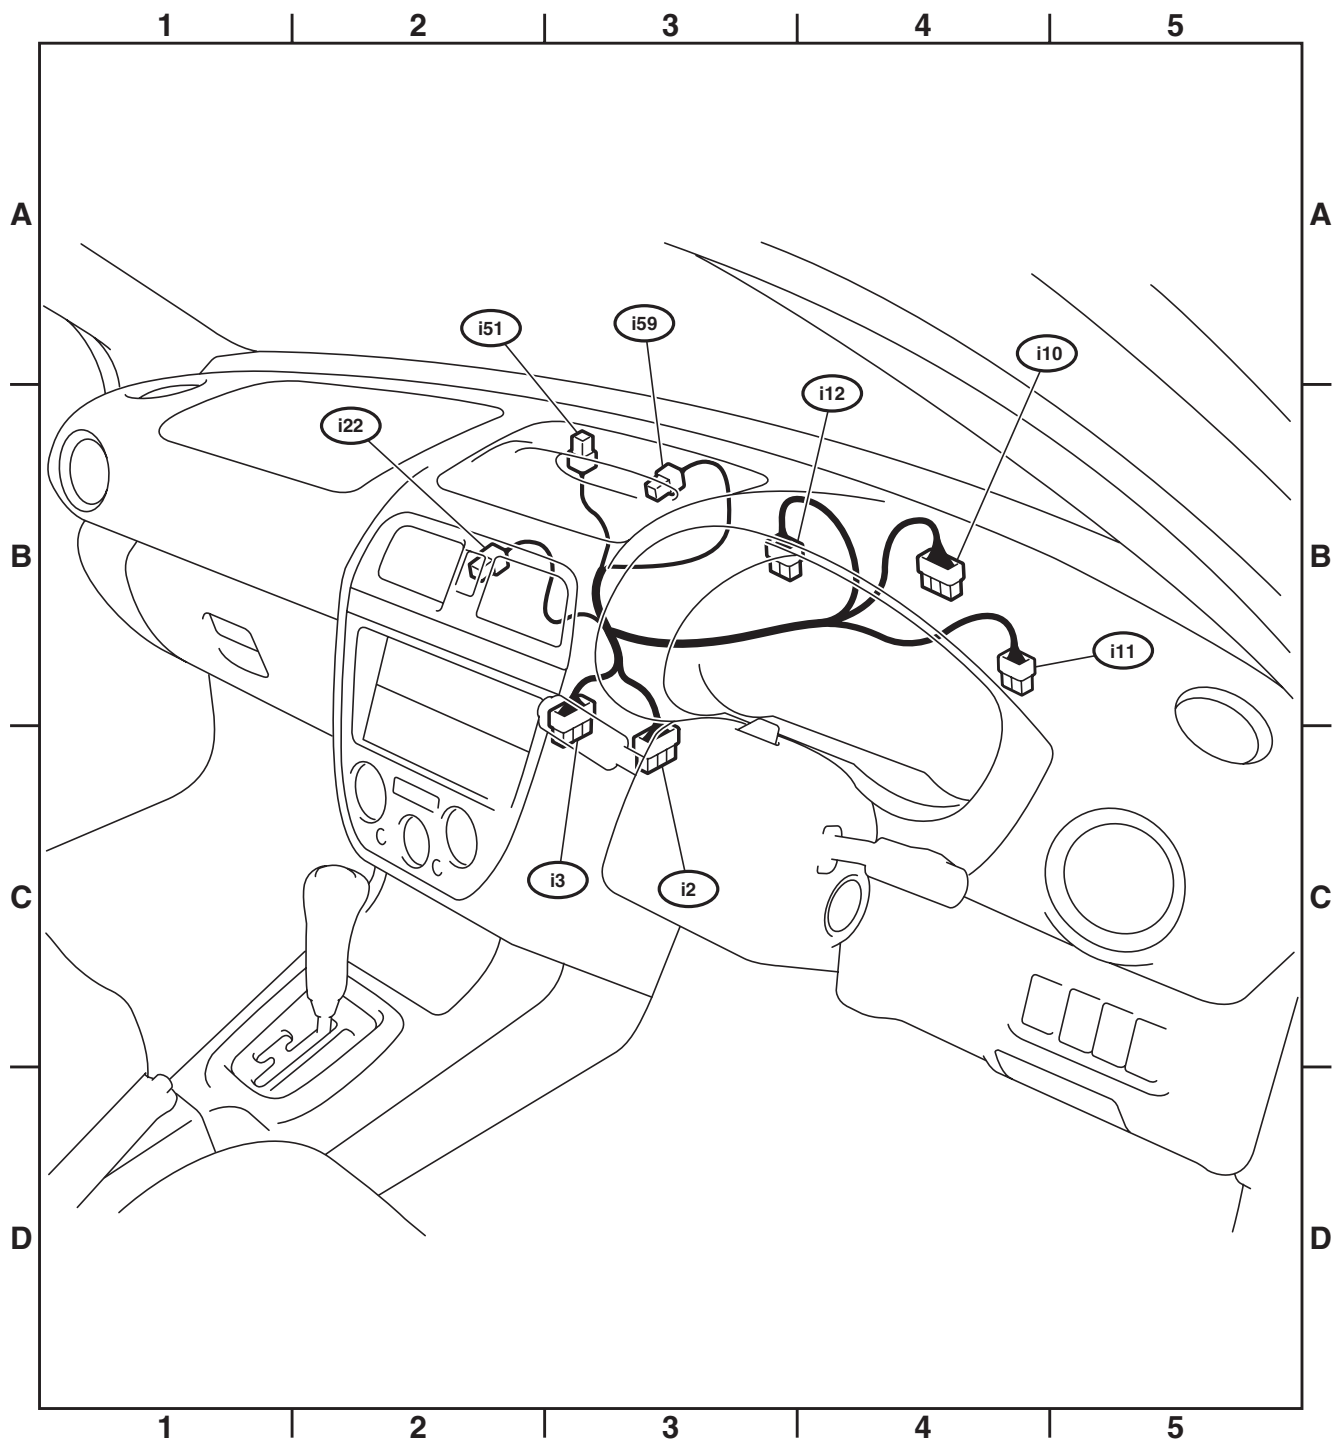

WI-04529

Rear Wiring Harness, Bulkhead Wiring Harness, Roof Cord and Fuel Tank Cord WIRING SYSTEM

53. Rear Wiring Harness, Bulkhead Wiring Harness, Roof Cord and Fuel Tank Cord

A: LOCATION

1. LHD MODEL

• Rear Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R1	8	★	B-2	B97	Bulkhead wiring harness
R3	24	★	B-2	B99	Bulkhead wiring harness
R4	1	Black	B-3		Parking brake switch
R8	2	★	C-4		Seat belt switch
R15	4	★	B-3	R57	Fuel tank cord
R22	3	★	B-5		Rear door switch LH
R41	4	Blue	B-2		Seat heater RH
R42	4	★	B-3		Seat heater switch RH
R43	4	Blue	B-3		Seat heater switch LH
R44	4	Blue	C-4		Seat heater LH
R46	2	Black	B-3	R67	Fuel tank cord
R72	2	★	B-3		Rear ABS sensor RH
R73	2	★	B-5		Rear ABS sensor LH
R97	2	★	B-5		Antenna amp. (Sedan model)

★: Non-colored

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B97	8	★	B-2	R1	Rear wiring harness
B99	24	★	B-2	R3	Rear wiring harness
B265	8	★	A-2	D27	Rear door cord RH
B267	3	★	C-4		Front door switch LH
B268	3	★	B-2		Front door switch RH
B269	8	★	B-5	D21	Rear door cord LH

★: Non-colored

• Roof Cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R50	4	★	B-1	B90	Bulkhead wiring harness
R52	3	★	A-3		Room light
R55	1	Gray	A-2		Sunroof
R56	2	★	A-3		Spot light

★: Non-colored

Rear Wiring Harness, Bulkhead Wiring Harness, Roof Cord and Fuel Tank Cord

WIRING SYSTEM


• Fuel Tank Cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R57	4	★	B-3	R15	Rear wiring harness
R58	6	★	B-3		Fuel pump assembly
R59	2	★	B-4		Fuel sub level sensor (Turbo model)
R67	2	Black	B-3	R46	Rear wiring harness
R148	1	★	B-4		Rear differential gear oil temperature sensor (+)
R159	1	Black	B-4		Rear differential gear oil temperature sensor (-)
★: Non-colored					

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB7	12	Yellow	C-2		Airbag control module
AB8	12	Yellow	B-2		Airbag control module
AB9	2	Yellow	C-4		Seat airbag module LH
AB10	4	Yellow	B-5		Side sensor LH
AB11	2	Yellow	B-2		Seat airbag module RH
AB12	4	Yellow	B-2		Side sensor RH
AB19	2	Yellow	C-4		Pretensioner LH
AB20	2	Yellow	B-2		Pretensioner RH
AB30	2	Yellow	C-4		Double pretensioner LH

Rear Wiring Harness, Bulkhead Wiring Harness, Roof Cord and Fuel Tank Cord WIRING SYSTEM

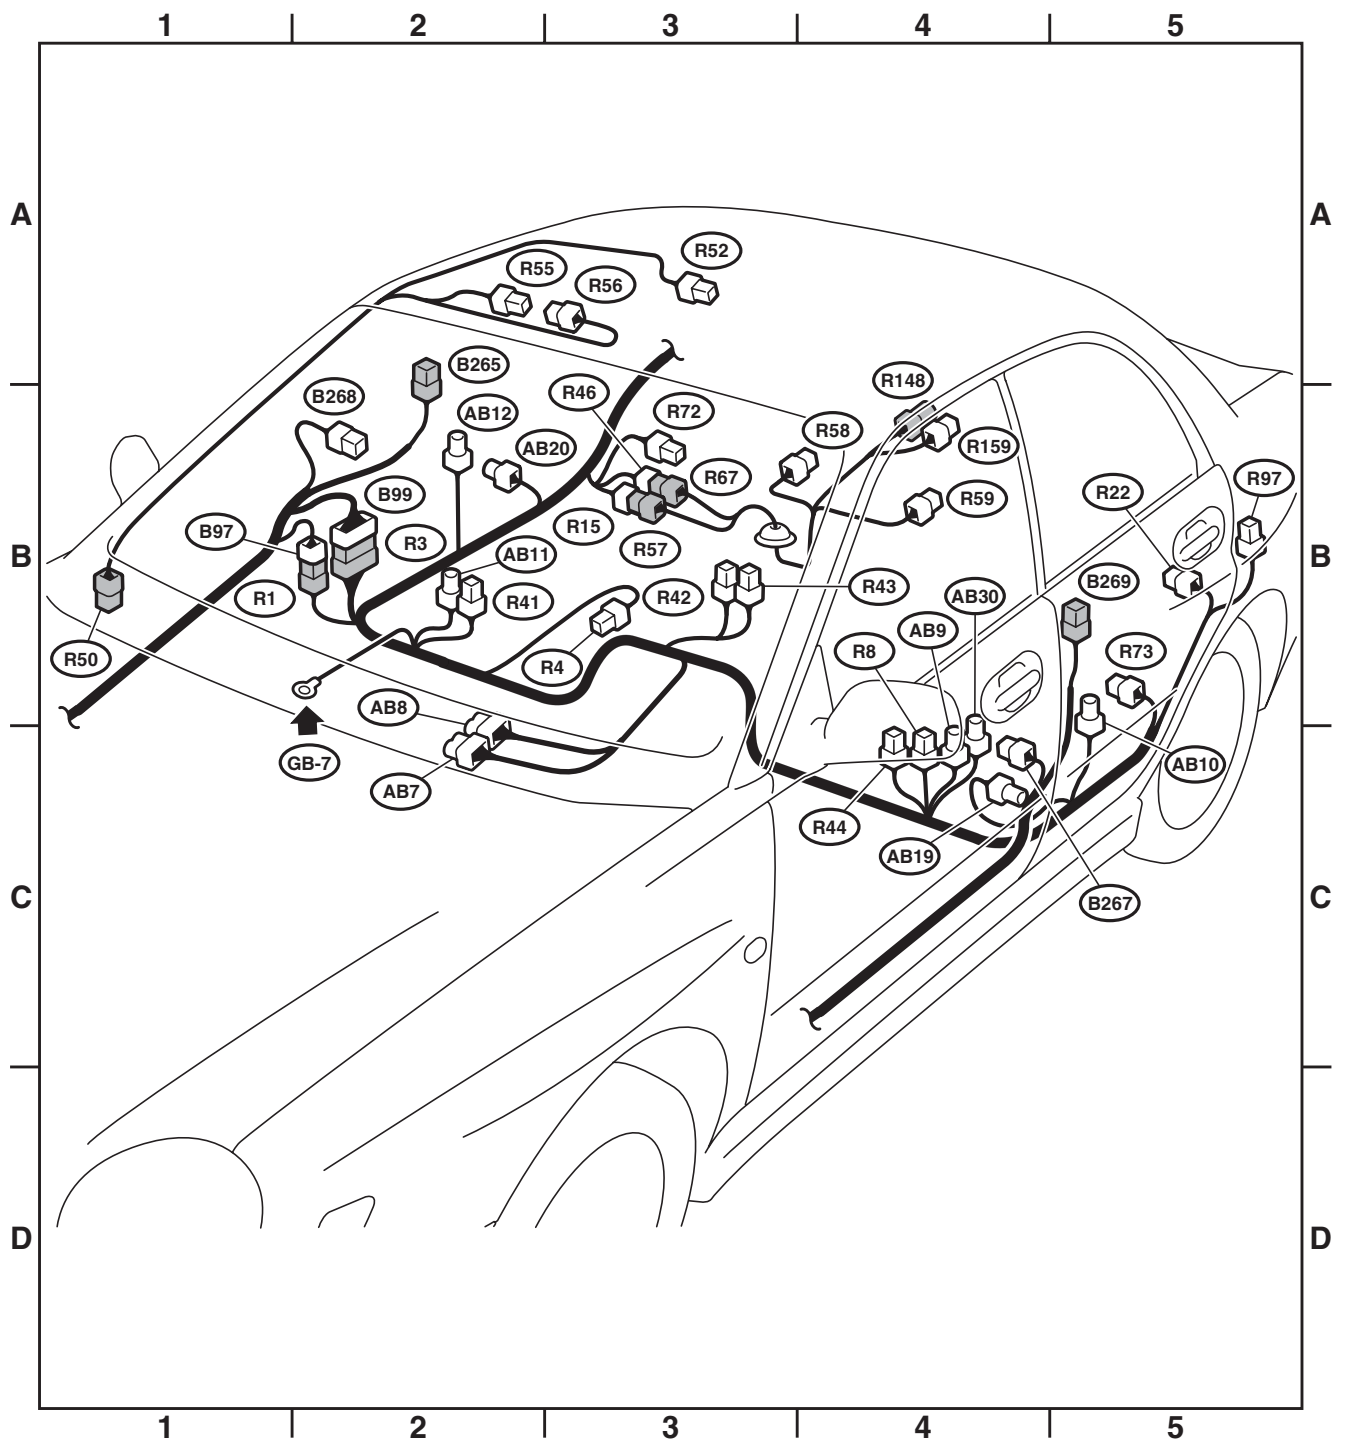

WI-04530

Rear Wiring Harness, Bulkhead Wiring Harness, Roof Cord and Fuel Tank Cord

WIRING SYSTEM

2. RHD MODEL

• Rear Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R1	8	Black	B-2	B97	Bulkhead wiring harness
R3	32	★	B-2	B99	Bulkhead wiring harness
R4	1	★	B-3		Parking brake switch
R8	2	★	B-2		Seat belt switch
R15	4	★	B-3	R57	Fuel tank cord
R22	3	★	B-5		Rear door switch LH
R41	4	Blue	B-2		Seat heater RH
R42	4	★	B-3		Seat heater switch RH
R43	4	Blue	B-3		Seat heater switch LH
R44	4	Blue	C-4		Seat heater LH
R46	2	Black	B-3	R67	Fuel tank cord
R72	2	★	B-3		Rear ABS sensor RH
R73	2	★	B-5		Rear ABS sensor LH
R97	2	★	B-5		Antenna amp. (Sedan model)

★: Non-colored

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B97	8	Black	B-2	R1	Rear wiring harness
B99	32	★	B-2	R3	Rear wiring harness
B265	8	★	B-2	D27	Rear door cord RH
B267	3	★	A-2		Front door switch RH
B268	3	★	C-4		Front door switch LH
B269	8	★	B-5	D21	Rear door cord LH

★: Non-colored

• Roof Cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R50	4	★	B-1	B90	Bulkhead wiring harness
R52	3	★	A-3		Room light
R55	1	Gray	A-2		Sunroof
R56	2	★	A-3		Spot light

★: Non-colored

• Fuel Tank Cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R57	4	★	B-3	R15	Rear wiring harness
R58	6	★	B-3		Fuel pump assembly
R59	2	★	B-4		Fuel sub level sensor (Turbo and 2.5 L model)
R67	2	Black	B-3	R46	Rear wiring harness
R148	1	★	B-4		Rear differential gear oil temperature sensor (+)
R159	1	Black	B-4		Rear differential gear oil temperature sensor (-)

★: Non-colored

Rear Wiring Harness, Bulkhead Wiring Harness, Roof Cord and Fuel Tank Cord

WIRING SYSTEM

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB7	12	Yellow	C-2		Airbag control module
AB8	12	Yellow	C-2		Airbag control module
AB9	2	Yellow	C-4		Seat airbag module LH
AB10	4	Yellow	C-5		Side sensor LH
AB11	2	Yellow	B-2		Seat airbag module RH
AB12	4	Yellow	B-2		Side sensor RH
AB19	2	Yellow	C-4		Pretensioner LH
AB20	2	Yellow	B-2		Pretensioner RH

WIRING SYSTEM



Door Cord

WIRING SYSTEM

54.Door Cord

A: LOCATION


1. LHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
D1	25	★	C-3	B30	Bulkhead wiring harness
D2	2	★	C-4		Front door speaker (Driver side)
D3	2	Black	C-4		Front power window motor (Driver side)
D4	2	Black	C-4		Front door tweeter (Driver side)
D5	6	★	C-3		Remote control rearview mirror (Without mirror heater)
	8	Black	C-3		Remote control rearview mirror (With mirror heater)
D7	16	★	C-4		Power window main switch
D11	25	★	C-1	B101	Bulkhead wiring harness
D12	2	★	C-1		Front door speaker RH
D13	2	Black	B-2		Front power window motor RH
D14	2	★	B-1		Front door tweeter RH
D15	6	★	B-1		Remote control rearview mirror RH (Without mirror heater)
	8	Black	B-1		Remote control rearview mirror RH (With mirror heater)
D17	6	★	B-2		Front power window sub switch RH
D18	4	★	B-2		Front door lock actuator RH
D21	8	★	C-4	B269	Bulkhead wiring harness
D23	2	★	C-5		Rear door speaker LH
D24	2	Black	B-4		Rear power window motor LH
D25	8	★	B-5		Rear power window sub switch LH
D26	4	★	B-5		Rear door lock actuator LH
D27	8	★	B-2	B265	Bulkhead wiring harness
D29	2	★	B-2		Rear door speaker RH
D30	2	Black	B-2		Rear power window motor RH
D31	8	★	B-2		Rear power window sub switch RH
D32	4	★	B-3		Rear door lock actuator RH
D72	4	★	C-4		Front door lock actuator LH

★: Non-colored

Door Cord

WIRING SYSTEM

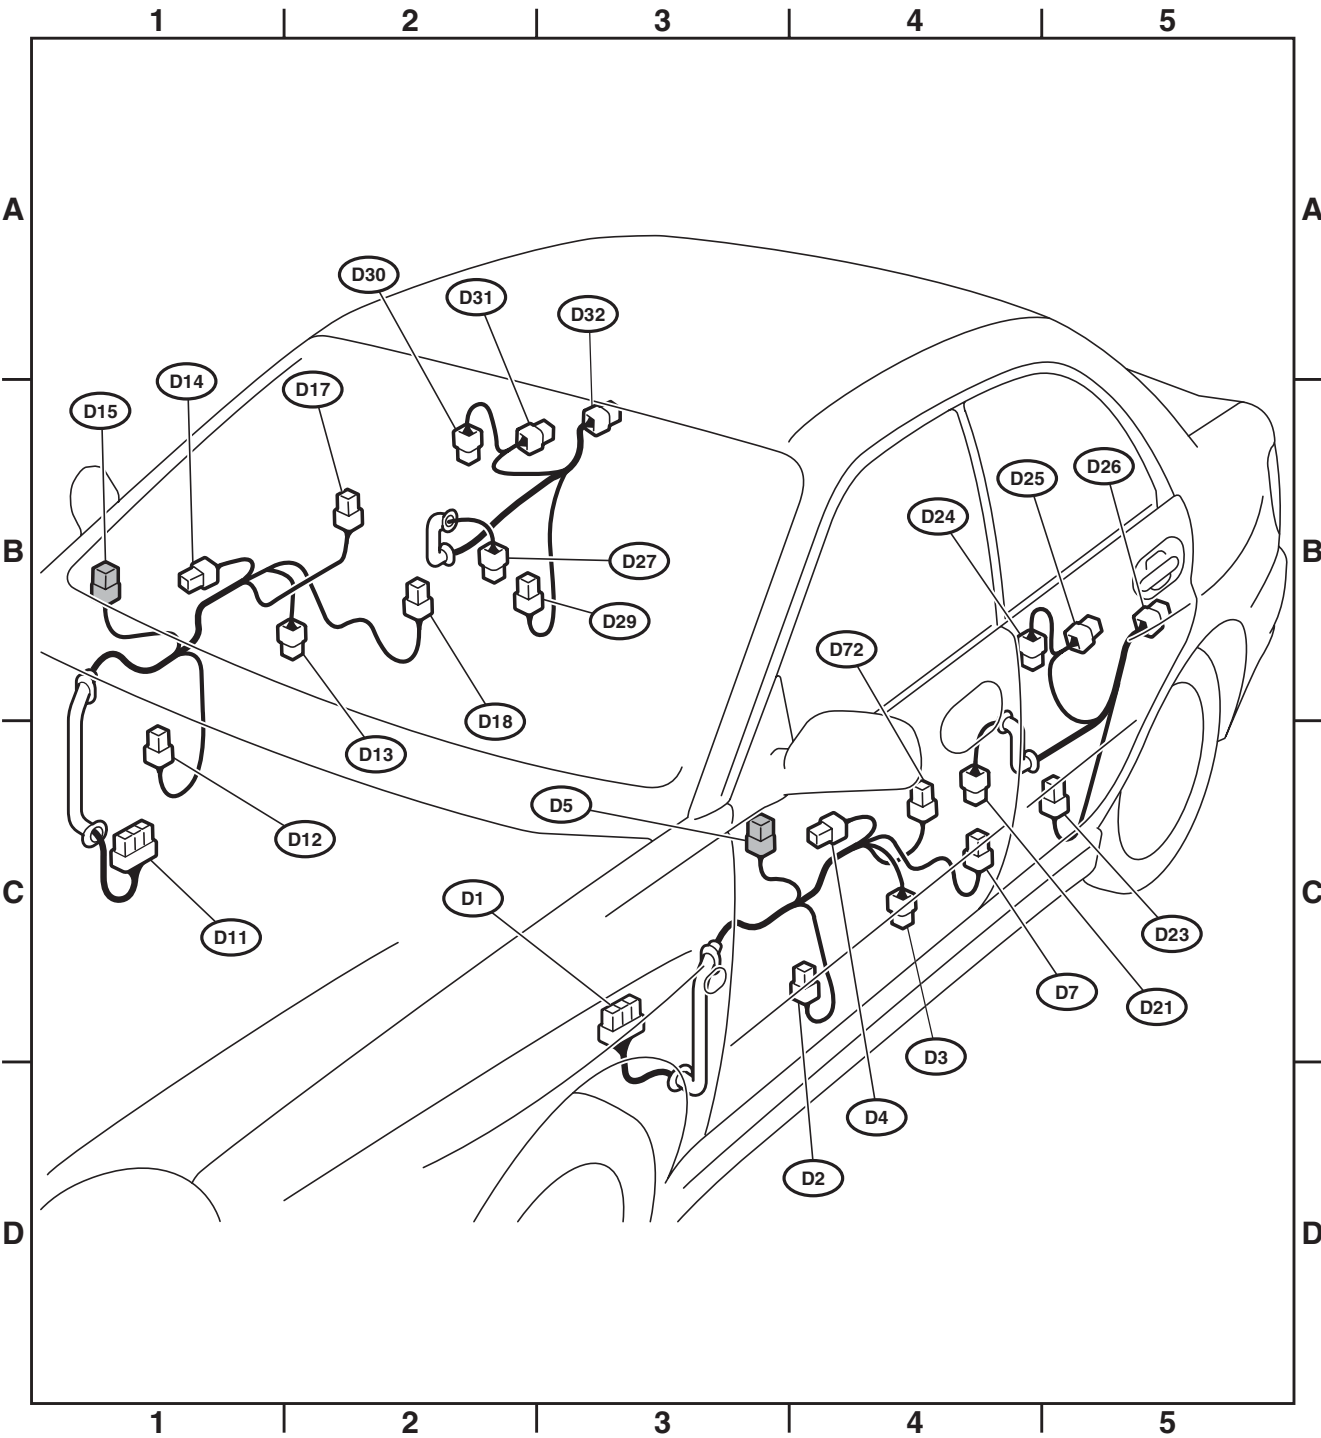

WI-04532

Door Cord

WIRING SYSTEM


2. RHD MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
D1	25	★	C-1	B30	Bulkhead wiring harness
D2	2	★	C-1		Front door speaker (Driver side)
D3	2	Black	B-2		Front power window motor (Driver side)
D4	2	★	B-1		Front door tweeter (Driver side)
D5	6	★	B-1		Remote control rearview mirror (Without mirror heater)
	8	Black	B-1		Remote control rearview mirror (With mirror heater)
D7	16	★	B-2		Power window main switch
D11	25	★	C-3	B101	Bulkhead wiring harness
D12	2	★	C-4		Front door speaker LH
D13	2	Black	C-4		Front power window motor LH
D14	2	★	C-4		Front door tweeter LH
D15	6	★	C-4		Remote control rearview mirror LH (Without mirror heater)
	8	Black	C-3		Remote control rearview mirror LH (With mirror heater)
D17	8	★	C-4		Front power window sub switch LH
D18	4	★	C-4		Front door lock actuator LH (Without double lock)
	6	Black	C-4		Front door lock actuator LH (With double lock)
D21	8	★	C-4	B269	Bulkhead wiring harness
D23	2	★	C-5		Rear door speaker LH
D24	2	Black	B-5		Rear power window motor LH
D25	8	★	B-5		Rear power window sub switch LH
D26	4	★	B-5		Rear door lock actuator LH (Without double lock)
	6	Black	B-5		Rear door lock actuator LH (With double lock)
D27	8	★	B-2	B265	Bulkhead wiring harness
D29	2	★	B-3		Rear door speaker RH
D30	2	Black	B-2		Rear power window motor RH
D31	8	★	B-3		Rear power window sub switch RH
D32	4	★	B-3		Rear door lock actuator RH (Without double lock)
	6	Black	B-3		Rear door lock actuator RH (With double lock)
D72	4	★	B-2		Front door lock actuator RH (Without double lock)
	6	Black	B-2		Front door lock actuator RH (With double lock)
D82	3	Brown	B-2		Key cylinder switch

★: Non-colored

Door Cord

WIRING SYSTEM

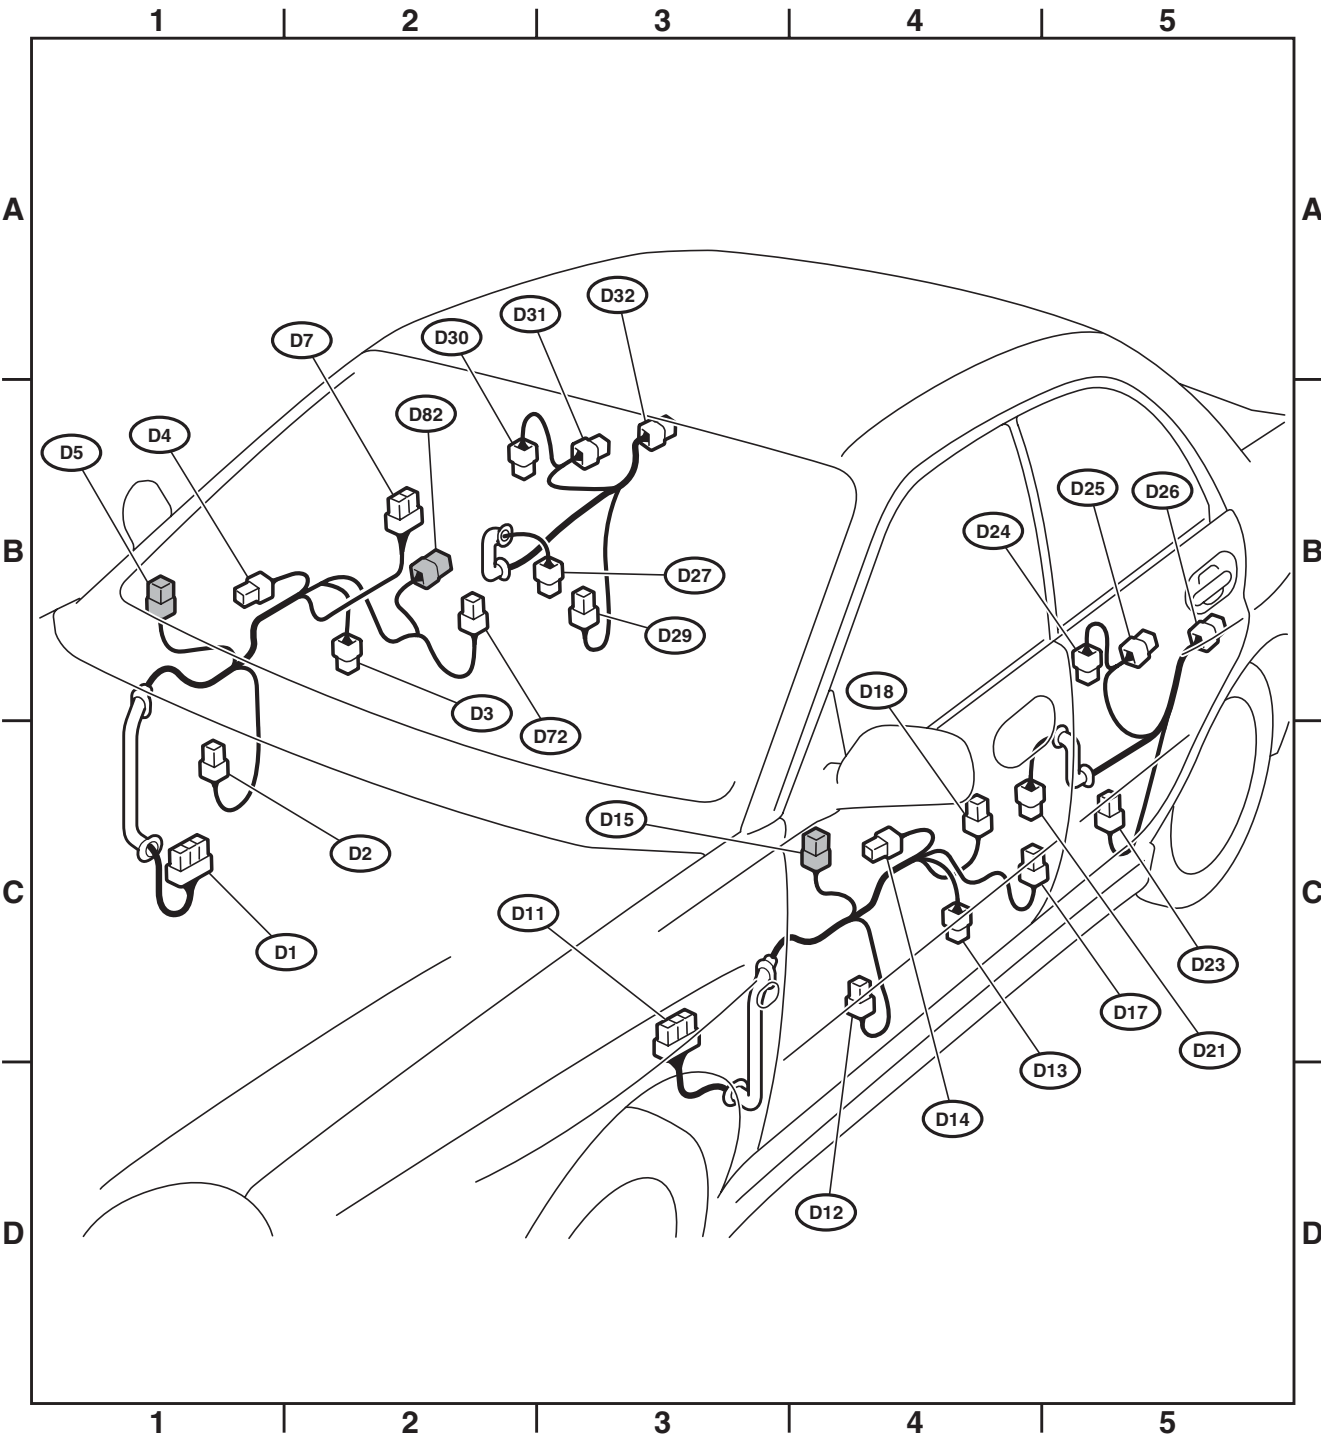

WI-04533

Rear Wiring Harness and Trunk Lid Cord

WIRING SYSTEM


55.Rear Wiring Harness and Trunk Lid Cord

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R16	3	★	C-5		Rear door switch RH
R17	1	Black	B-4		Rear defogger
R19	2	★	B-3		High-mounted stop light
R20	2	Black	B-3		Trunk room light
R24	2	★	C-4	R60	Trunk lid cord
R26	6	★	C-3		Rear combination light RH
R27	2	★	C-2		Trunk room light switch
R28	6	★	C-1		Rear combination light LH
R60	2	★	C-4	R24	Rear wiring harness
R63	2	Black	C-2		License plate light
R65	1	Black	B-2		Rear defogger
R66	2	Black	C-3		High-mounted stop light (Rear spoiler)
R79	10	★	C-3		Trailer connector
R122	10	Black	C-4		Fuel pump control module (Turbo Model)
R130	2	★	B-4		Rear defogger choke coil
R145	4	★	C-3		Intercooler water spray motor
★: Non-colored					

Rear Wiring Harness and Trunk Lid Cord

WIRING SYSTEM

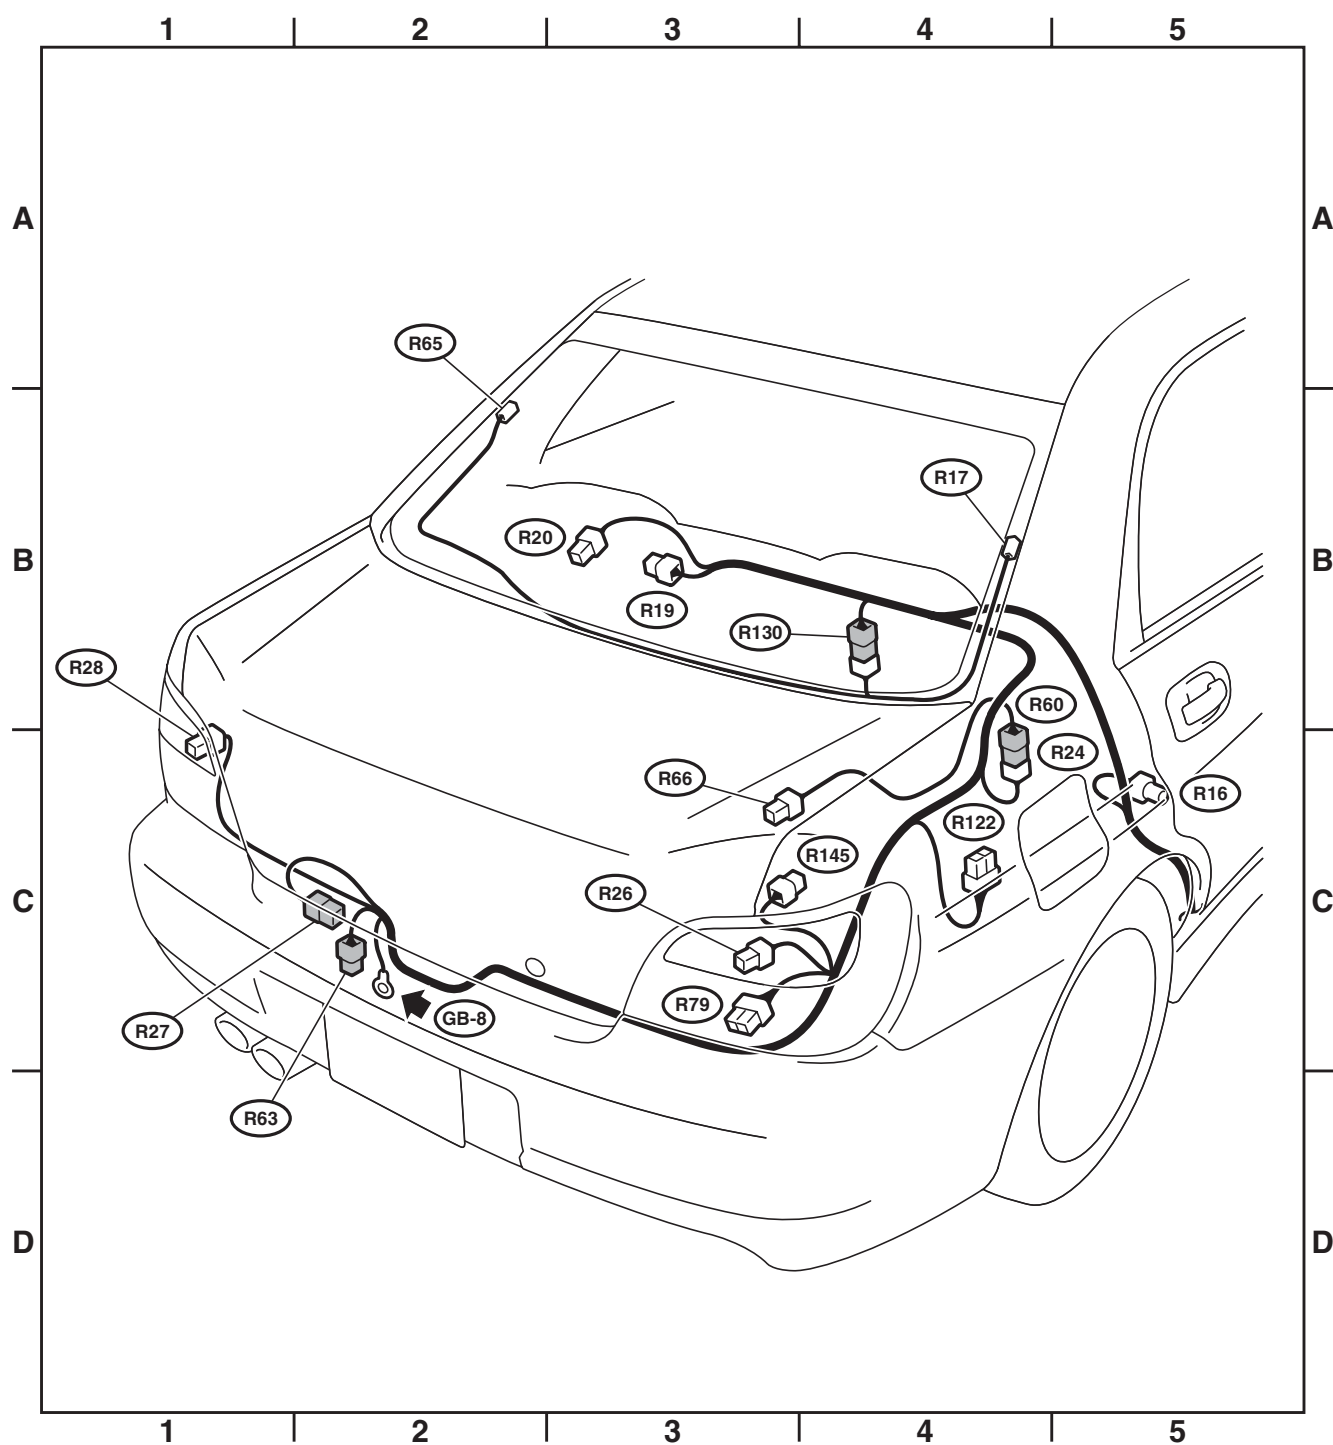

WI-02231

Rear Wiring Harness and Rear Gate Cord

WIRING SYSTEM

56.Rear Wiring Harness and Rear Gate Cord


A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R16	3	★	C-5		Rear door switch RH
R26	6	★	C-4		Rear combination light RH
R28	6	★	C-1		Rear combination light LH
R30	2	★	D-4		Diode (Luggage room light)
R37	2	★	D-4	D33	Rear gate cord
R38	4	★	D-4	D34	Rear gate cord
R39	4	Blue	D-4	D35	Rear gate cord
R63	2	Black	D-2		License plate light
R79	10	★	D-3		Trailer connector
R97	2	★	C-1		Antenna amp.
R116	8	★	C-4		Rear wiper intermittent module
R122	10	Black	C-4		Fuel pump control module (Turbo Model)
R141	2	★	C-3		Luggage room light
★: Non-colored					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
D33	2	★	D-4	R37	Rear wiring harness
D34	4	★	D-4	R38	Rear wiring harness
D35	4	Blue	D-4	R39	Rear wiring harness
D39	2	★	B-3		High-mounted stop light
D43	4	★	A-2		Rear wiper motor
D46	2	Black	A-2		Rear gate latch switch
D47	2	Blue	A-3		Rear gate lock actuator cord
D74	2	★	A-4		Rear defogger choke coil
★: Non-colored					

Rear Wiring Harness and Rear Gate Cord

WIRING SYSTEM

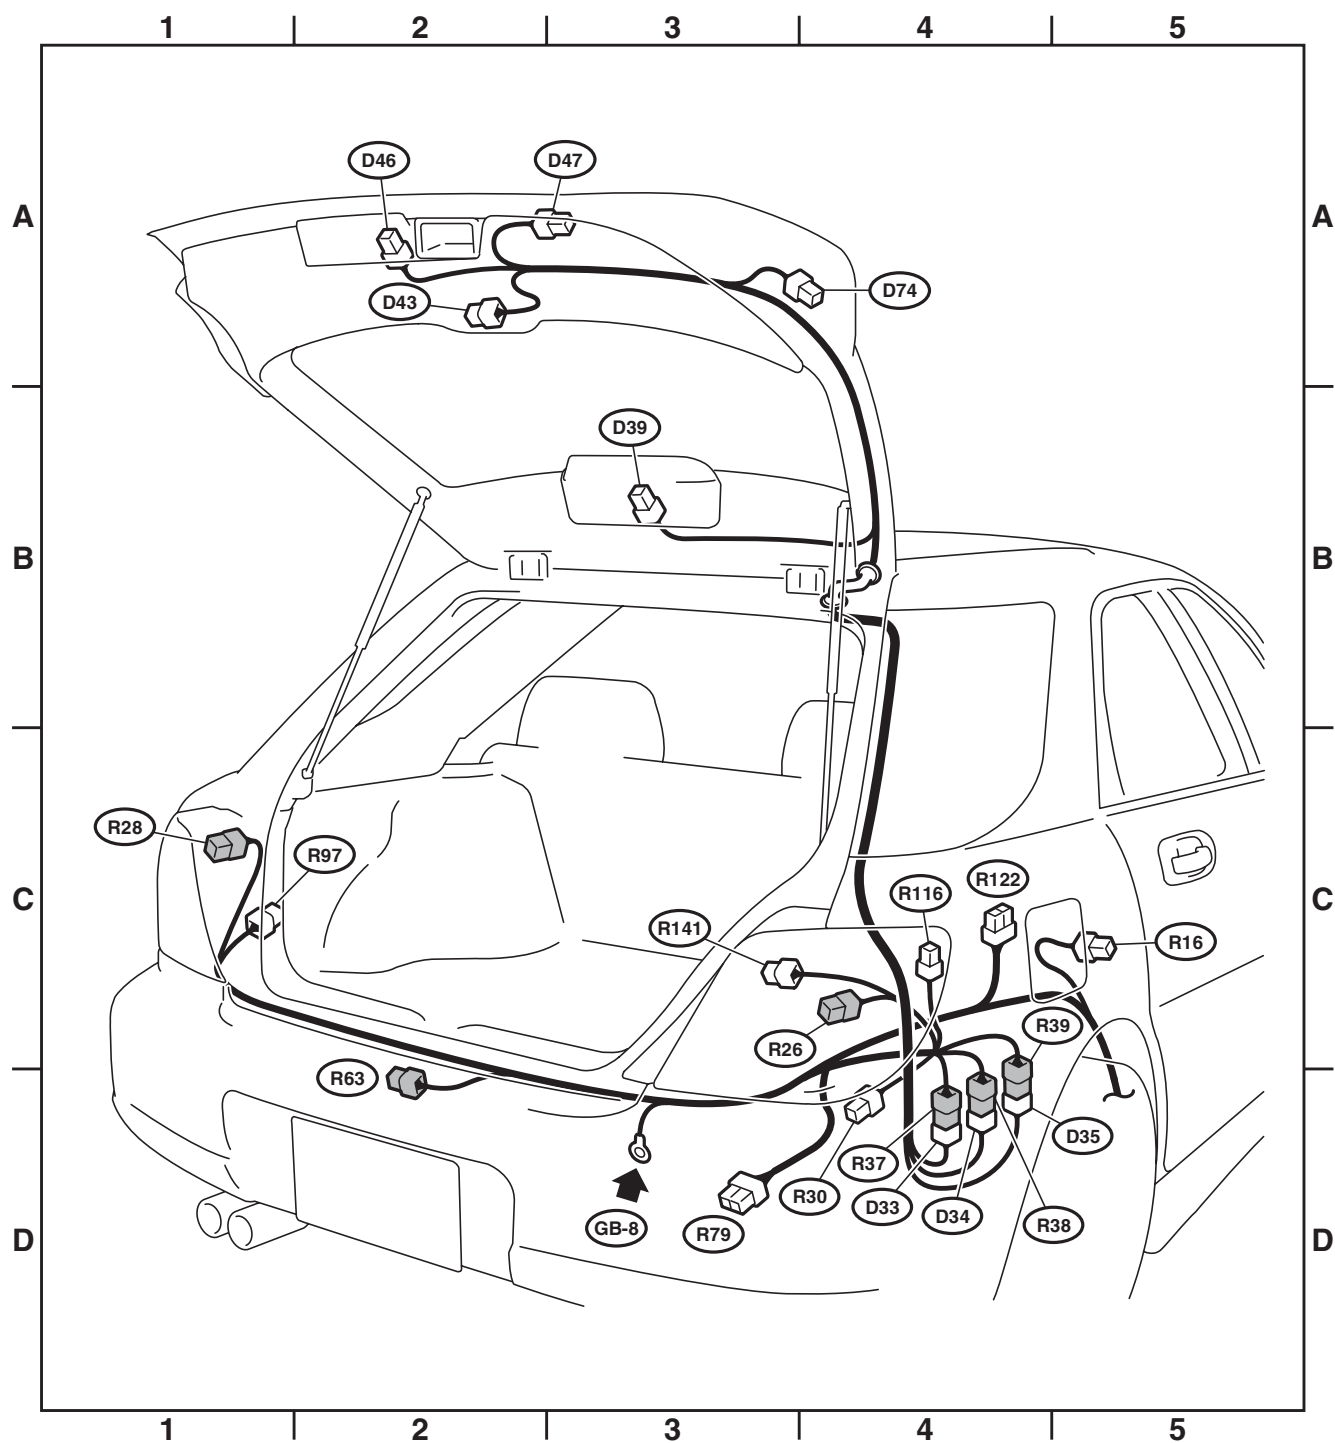

WI-02232

