


IGNITION OR STARTER SWITCH ASSY REPLACEMENT

8001R-04


1. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER(See page 71-16)

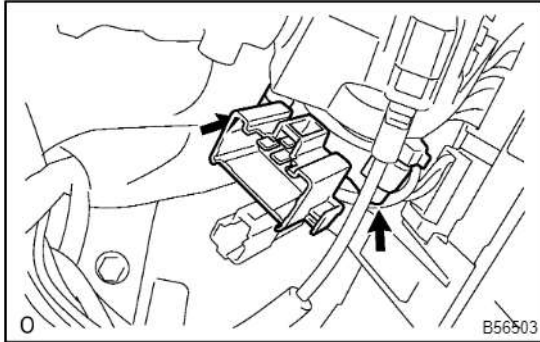

2. REMOVE IGNITION OR STARTER SWITCH ASSY

- (a) Disconnect the ignition switch connector and unlock warning switch connector.
- (b) Remove the clamp.
- (c) Remove the 2 screws and ignition switch.

INSPECTION

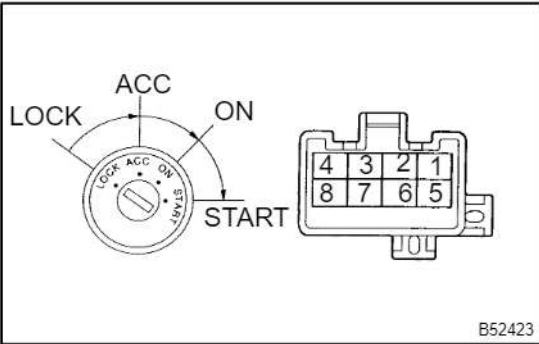

1. INSPECT IGNITION OR STARTER SWITCH ASSY

(a) Inspect the ignition switch continuity.

Standard:

Switch position	Tester connection	Specified condition
LOCK	–	No continuity
ACC	2 ⇄ 3	Continuity
ON	2 ⇄ 3 ⇄ 4 6 ⇄ 7	Continuity
START	1 ⇄ 2 ⇄ 4 6 ⇄ 7 ⇄ 8	Continuity

If the continuity is not as specified, replace the switch.