


**Important!**

Read and comply with notes on protection against electrostatic discharge (ESD protection).


**Note:**

Voltage transformer is only installed depending on equipment.

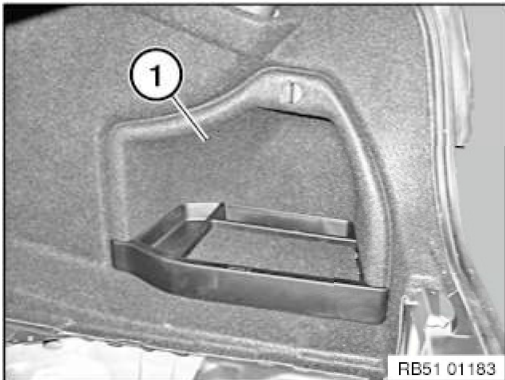

Remove flap (1). *Installation note:*

Make sure flap (1) is correctly seated.

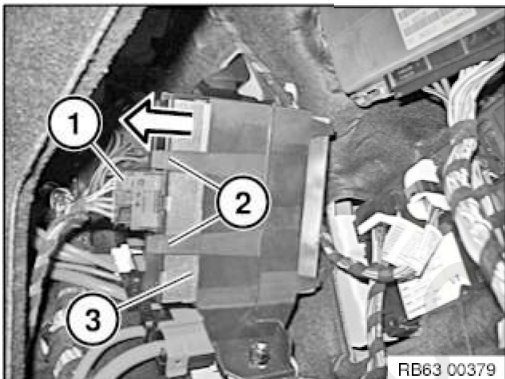

Disconnect plug connection (1).

Lever out latches (2) and pull voltage transformer (3) out of bracket.

Installation note:

Make sure plug connection (1) is correctly seated.

Make sure voltage transformer (3) is correctly seated in bracket.



**Important!**

Read and comply with notes on protection against electrostatic discharge (ESD protection).

**Necessary preliminary tasks:**

For F30; F32; F35; F80; F82:


- Open flap in luggage compartment panel on right

F31For:

- Remove battery cover

For F34; F36:

- Remove luggage compartment trim on side panel on right

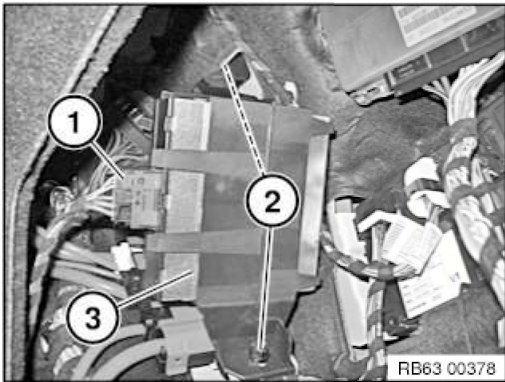

Release plug connections (1) on all control units.

Release nuts (2) and remove control unit holder (3).

Installation note:

Ensure that the plug connections (1) are correctly seated.

Ensure that the control unit holder (3) is correctly seated.

