

BRC

SECTION

BRAKE CONTROL SYSTEM

CONTENTS

VDC/TCS/ABS		DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)] 30	
PRECAUTION 4		CONSULT Function (ABS) 30	
PRECAUTIONS 4		ECU DIAGNOSIS INFORMATION 35	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 4		ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) 35	
Precaution for Brake System 4		Reference Value 35	
Precaution for Brake Control System 5		Fail-safe 38	
Precaution for Harness Repair 5		DTC Inspection Priority Chart 40	
PREPARATION 6		DTC Index 41	
PREPARATION 6		WIRING DIAGRAM 43	
Special Service Tool 6		BRAKE CONTROL SYSTEM 43	
Commercial Service Tool 6		Wiring Diagram 43	
SYSTEM DESCRIPTION 7		BASIC INSPECTION 50	
COMPONENT PARTS 7		DIAGNOSIS AND REPAIR WORK FLOW 50	
Component Parts Location 7		Work Flow 50	
Component Description 8		Diagnostic Work Sheet 51	
ABS Actuator and Electric Unit (Control Unit) 8		ADDITIONAL SERVICE WHEN REPLACING ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) 52	
Wheel Sensor and Sensor Rotor 9		Description 52	
Stop Lamp Switch 9		Work Procedure 52	
Steering Angle Sensor 9		ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION 53	
VDC OFF Switch 9		Description 53	
Brake Fluid Level Switch 9		Work Procedure 53	
Parking Brake Switch 9		DTC/CIRCUIT DIAGNOSIS 55	
SYSTEM 10		C1101, C1102, C1103, C1104 WHEEL SENSOR 55	
VDC/TCS/ABS 10		DTC Logic 55	
VDC/TCS/ABS : System Diagram 10		Diagnosis Procedure 55	
VDC/TCS/ABS : System Description 10			
VDC/TCS/ABS : VDC Function 21			
VDC/TCS/ABS : TCS Function 23			
VDC/TCS/ABS : ABS Function 25			
VDC/TCS/ABS : EBD Function 26			
VDC/TCS/ABS : Fail-safe 27			

C1105, C1106, C1107, C1108 WHEEL SENSOR	59	C1155 BR FLUID LEVEL LOW	82
DTC Logic	59	DTC Logic	82
Diagnosis Procedure	59	Diagnosis Procedure	82
C1109 POWER AND GROUND SYSTEM	61	Component Inspection	83
DTC Logic	61	C1164, C1165, C1166, C1167 CV/SV SYSTEM	84
Diagnosis Procedure	61	DTC Logic	84
C1110, C1153, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	63	Diagnosis Procedure	84
DTC Logic	63	U1000 CAN COMM CIRCUIT	86
Diagnosis Procedure	63	DTC Logic	86
C1111 PUMP MOTOR	64	Diagnosis Procedure	86
DTC Logic	64	U1002 SYSTEM COMM (CAN)	87
Diagnosis Procedure	64	DTC Logic	87
C1115 ABS SENSOR [ABNORMAL SIGNAL] ..	66	Diagnosis Procedure	87
DTC Logic	66	U1010 CONTROL UNIT (CAN)	88
Diagnosis Procedure	66	Description	88
C1116 STOP LAMP SWITCH	68	DTC Logic	88
DTC Logic	68	Diagnosis Procedure	88
Diagnosis Procedure	68	PARKING BRAKE SWITCH	89
C1120, C1122, C1124, C1126 ABS IN VALVE SYSTEM	70	Component Function Check	89
DTC Logic	70	Diagnosis Procedure	89
Diagnosis Procedure	70	Component Inspection	90
C1121, C1123, C1125, C1127 ABS OUT VALVE SYSTEM	72	VDC OFF SWITCH	91
DTC Logic	72	Component Function Check	91
Diagnosis Procedure	72	Diagnosis Procedure	91
C1130 ENGINE SIGNAL	74	Component Inspection	92
DTC Logic	74	ABS WARNING LAMP	93
Diagnosis Procedure	74	Component Function Check	93
C1140 ACTUATOR RELAY SYSTEM	75	Diagnosis Procedure	93
DTC Logic	75	BRAKE WARNING LAMP	94
Diagnosis Procedure	75	Component Function Check	94
C1142 PRESS SENSOR	77	Diagnosis Procedure	94
DTC Logic	77	VDC OFF INDICATOR LAMP	95
Diagnosis Procedure	77	Component Function Check	95
C1143 STEERING ANGLE SENSOR	78	Diagnosis Procedure	95
DTC Logic	78	SLIP INDICATOR LAMP	96
Diagnosis Procedure	78	Component Function Check	96
C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT	80	Diagnosis Procedure	96
DTC Logic	80	SYMPTOM DIAGNOSIS	97
Diagnosis Procedure	80	VDC/TCS/ABS	97
C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR	81	Symptom Table	97
DTC Logic	81	EXCESSIVE ABS FUNCTION OPERATION FREQUENCY	98
Diagnosis Procedure	81	Diagnosis Procedure	98
C1155 BR FLUID LEVEL LOW	82	UNEXPECTED PEDAL REACTION	99
DTC Logic	82	Diagnosis Procedure	99
Diagnosis Procedure	82	THE BRAKING DISTANCE IS LONG	100
Component Inspection	83		
C1164, C1165, C1166, C1167 CV/SV SYSTEM	84		
DTC Logic	84		
Diagnosis Procedure	84		
U1000 CAN COMM CIRCUIT	86		
DTC Logic	86		
Diagnosis Procedure	86		
U1002 SYSTEM COMM (CAN)	87		
DTC Logic	87		
Diagnosis Procedure	87		
U1010 CONTROL UNIT (CAN)	88		
Description	88		
DTC Logic	88		
Diagnosis Procedure	88		
PARKING BRAKE SWITCH	89		
Component Function Check	89		
Diagnosis Procedure	89		
Component Inspection	90		
VDC OFF SWITCH	91		
Component Function Check	91		
Diagnosis Procedure	91		
Component Inspection	92		
ABS WARNING LAMP	93		
Component Function Check	93		
Diagnosis Procedure	93		
BRAKE WARNING LAMP	94		
Component Function Check	94		
Diagnosis Procedure	94		
VDC OFF INDICATOR LAMP	95		
Component Function Check	95		
Diagnosis Procedure	95		
SLIP INDICATOR LAMP	96		
Component Function Check	96		
Diagnosis Procedure	96		
SYMPTOM DIAGNOSIS	97		
VDC/TCS/ABS	97		
Symptom Table	97		
EXCESSIVE ABS FUNCTION OPERATION FREQUENCY	98		
Diagnosis Procedure	98		
UNEXPECTED PEDAL REACTION	99		
Diagnosis Procedure	99		
THE BRAKING DISTANCE IS LONG	100		

Diagnosis Procedure	100	
ABS FUNCTION DOES NOT OPERATE	101	
Diagnosis Procedure	101	
PEDAL VIBRATION OR ABS OPERATION		
SOUND OCCURS	102	
Diagnosis Procedure	102	
VEHICLE JERKS DURING VDC/TCS/ABS		
CONTROL	103	
Diagnosis Procedure	103	
NORMAL OPERATING CONDITION	104	
Description	104	
REMOVAL AND INSTALLATION	105	
WHEEL SENSOR	105	
FRONT WHEEL SENSOR	105	
FRONT WHEEL SENSOR : Exploded View	105	
FRONT WHEEL SENSOR : Removal and Installation	105	
REAR WHEEL SENSOR	106	
REAR WHEEL SENSOR : Exploded View	106	A
REAR WHEEL SENSOR : Removal and Installation	106	
SENSOR ROTOR	108	B
FRONT SENSOR ROTOR	108	
FRONT SENSOR ROTOR : Removal and Installation	108	C
REAR SENSOR ROTOR	108	
REAR SENSOR ROTOR : Removal and Installation	108	D
ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	109	E
Exploded View	109	
Removal and Installation	109	
VDC OFF SWITCH	111	BRC
Removal and Installation	111	
STEERING ANGLE SENSOR	112	G
Exploded View	112	
Removal and Installation	112	
		H
		I
		J
		K
		L
		M
		N
		O
		P

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009619437

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.


Precaution for Brake System

INFOID:000000009619438

WARNING:

Clean any dust from the front brake and rear brake using a vacuum dust collector. Do not blow by compressed air.

- Brake fluid use refer to [MA-11, "Fluids and Lubricants"](#).
- Do not reuse drained brake fluid.
- Do not spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.
- Always confirm the specified tightening torque when installing the brake pipes.
- After pressing the brake pedal more deeply or harder than normal driving, such as air bleeding, check each item of brake pedal. Adjust brake pedal if it is outside the standard value.
- Do not use mineral oils such as gasoline or light oil to clean. They may damage rubber parts and cause improper operation.
- Always loosen the brake tube flare nut with a flare nut wrench.
- Tighten the brake tube flare nut to the specified torque with a crow-foot (A) and torque wrench (B).
- Always connect the battery terminal when moving the vehicle.
- Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) harness connector or the battery negative terminal before performing the work.
- Check that no brake fluid leakage is present after replacing the parts.

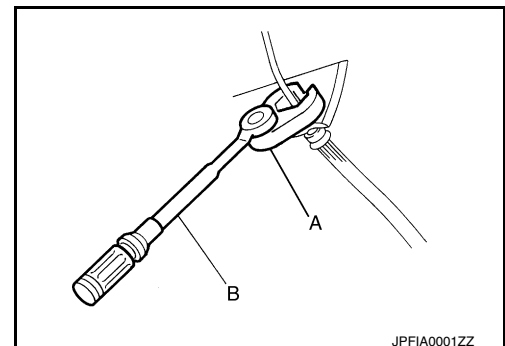

PRECAUTIONS

< PRECAUTION >

[VDC/TCS/ABS]

Precaution for Brake Control System


INFOID:000000009619439

- Just after starting vehicle after ignition switch is ON, brake pedal may vibrate or motor operating noise may be heard from engine compartment. This is a normal condition.
- When an error is indicated by ABS or another warning lamp, collect all necessary information from customer (what symptoms are present under what conditions) and check for simple causes before starting diagnostic servicing. Besides electrical system inspection, check brake booster operation, brake fluid level and oil leaks.
- If tire size and type are used in an improper combination or brake pads are not Genuine NISSAN parts, stopping distance or steering stability may deteriorate.
- ABS might be out of order or malfunctions by putting a radio (wiring inclusive), an antenna and a lead-in wire near the control unit.
- If aftermarket parts (car stereo, CD player, etc.) have been installed, check for incidents such as harness pinches, open circuits, and improper wiring.
- VDC system may not operate normally or a VDC OFF indicator lamp or SLIP indicator lamp may light.
- When replacing the following parts with parts other than genuine parts or making modifications: Suspension-related parts (shock absorber, spring, bushing, etc.), tires, wheels (other than specified sizes), brake-related parts (pad, rotor, caliper, etc.), engine-related parts (muffler, ECM, etc.) and body reinforcement-related parts (roll bar, tower bar, etc.).
- When driving with worn or deteriorated suspension, tires and brake-related parts.


Precaution for Harness Repair

INFOID:000000009619440

- Solder the repair part, and wrap it with tape. [Twisted wire fray must be 110 mm (4.33 in) or less.]

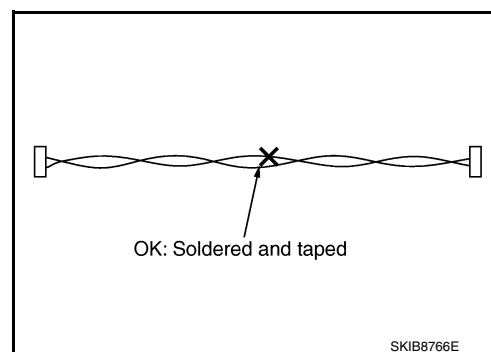

- Do not bypass the repair point with wire. (If it is bypassed, the turn-out point cannot be separated and the twisted wire characteristics are lost.)

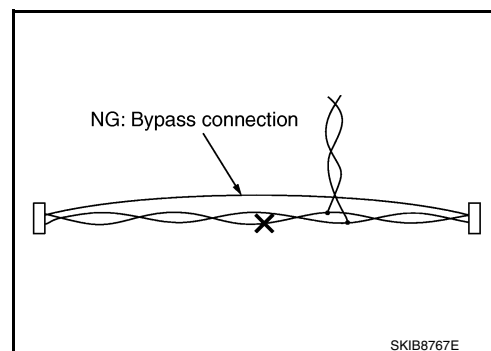

PREPARATION

< PREPARATION >

[VDC/TCS/ABS]

PREPARATION


PREPARATION

Special Service Tool

INFOID:000000009364877

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.



Tool number (Kent-Moore No.) Tool name	Description
KV991J0080 (J-45741) ABS active wheel sensor tester	Checking operation of ABS active wheel sensors

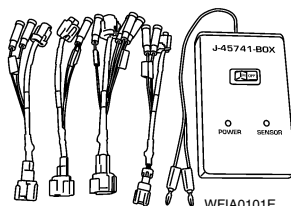

Commercial Service Tool

INFOID:000000009364878

Tool name	Description
1. Flare nut crowfoot 2. Torque wrench	Removing and installing brake piping a: 10mm (0.39 in)/12mm (0.47 in)
Power Tool	Loosening nuts, screws and bolts

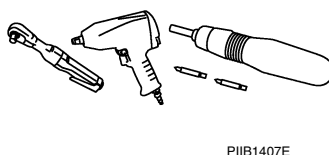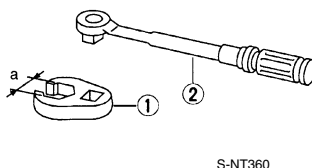


SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000009364879

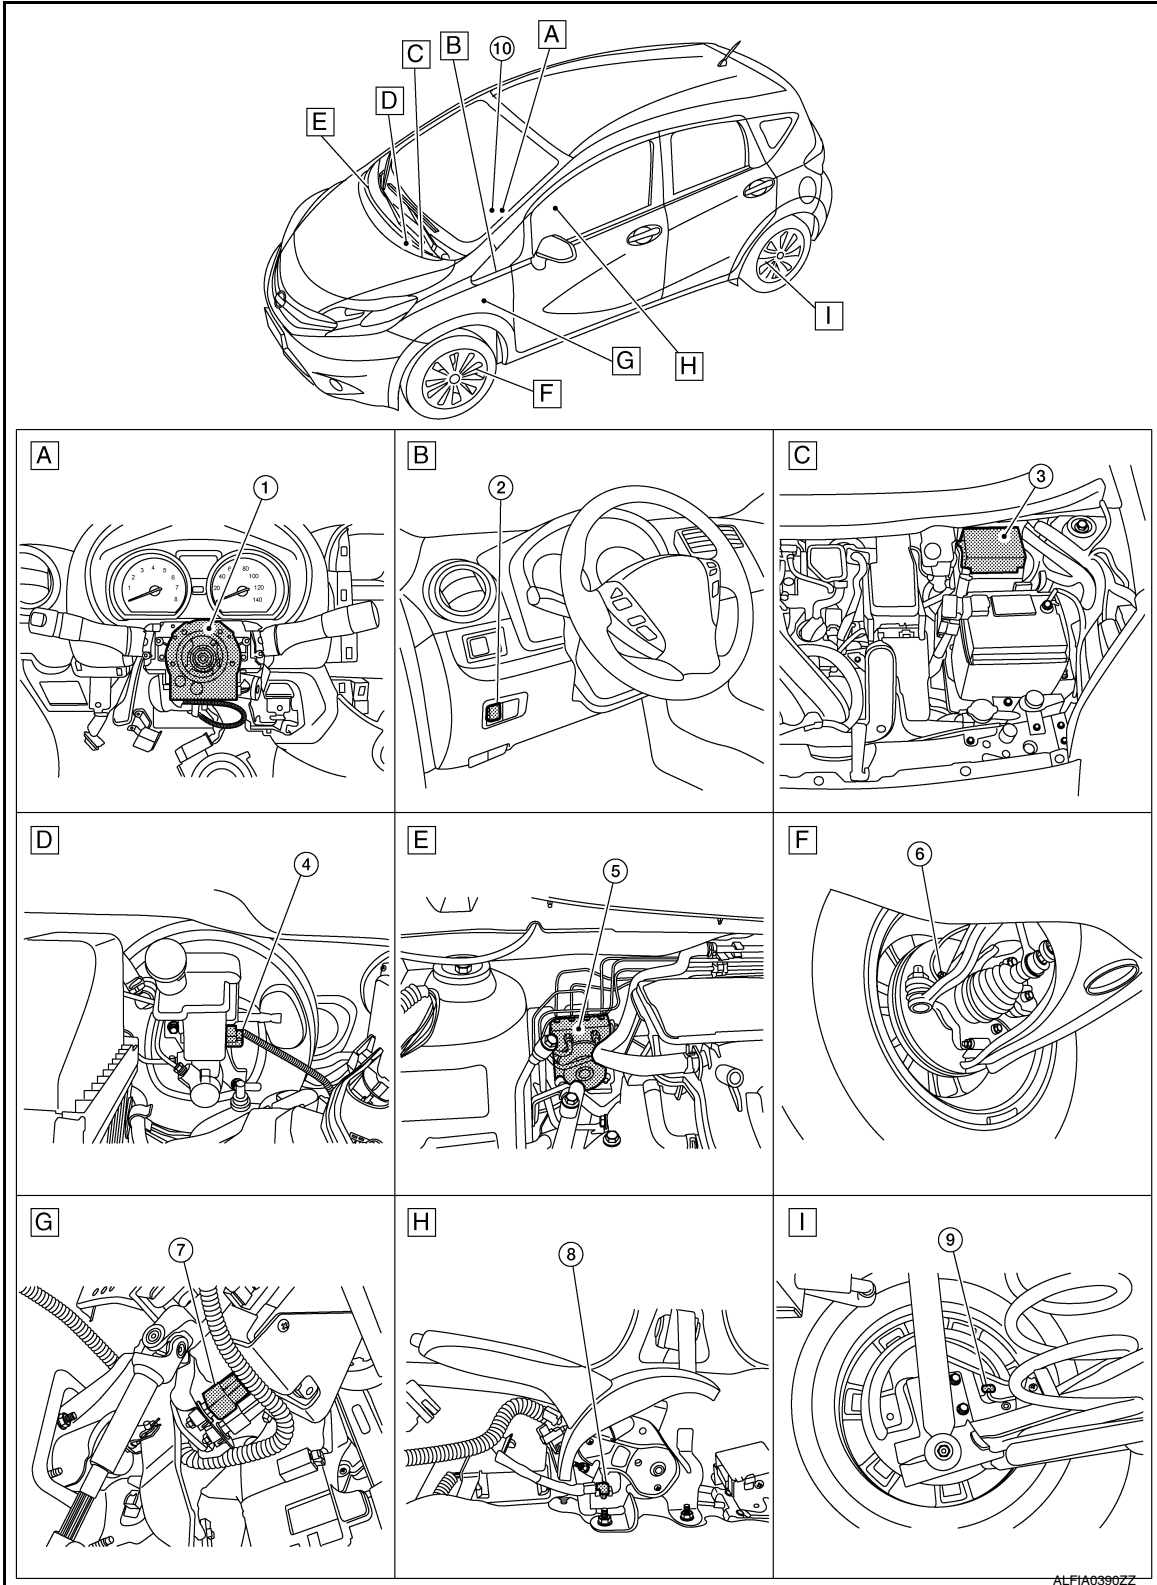

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

- | | | |
|--|-------------------------------------|------------------------------------|
| A. View with steering wheel and spiral cable removed | B. Left side of instrument panel | C. Left side of engine compartment |
| D. Left side of engine compartment | E. Right side of engine compartment | F. Left front wheel assembly |
| G. Near brake pedal area | H. View with console removed | I. Left rear wheel assembly |

Component Description

INFOID:000000009364880

	Component	Reference/Function
1	Steering angle sensor	BRC-9, "Steering Angle Sensor"
2	VDC OFF switch	BRC-9, "VDC OFF Switch"
3	IPDM E/R	PCS-5, "Component Parts Location"
4	Brake fluid level switch	BRC-9, "Brake Fluid Level Switch"
5	ABS actuator and electric unit (control unit)	BRC-8, "ABS Actuator and Electric Unit (Control Unit)"
6	Front wheel sensor	BRC-9, "Wheel Sensor and Sensor Rotor"
7	Stop lamp switch	BRC-9, "Stop Lamp Switch"
8	Parking brake switch	BRC-9, "Parking Brake Switch"
9	Rear wheel sensor	BRC-9, "Wheel Sensor and Sensor Rotor"
10	Combination meter	MWI-6, "METER SYSTEM : Combination Meter"

ABS Actuator and Electric Unit (Control Unit)

INFOID:000000009364881

Electric unit (control unit) is integrated with actuator and comprehensively controls VDC function, TCS function, ABS function and EBD function.

ELECTRIC UNIT (CONTROL UNIT)

- Brake fluid pressure is controlled according to signals from each sensor.
- If malfunction is detected, the system enters fail-safe mode.

ACTUATOR

The following components are integrated with ABS actuator.

Pump

Returns the brake fluid reserved in reservoir to master cylinder by reducing pressure.

Motor

Activates the pump according to signals from ABS actuator and electric unit (control unit).

Motor Relay

Operates the motor ON/OFF according to signals from ABS actuator and electric unit (control unit).

Actuator Relay (Main Relay)

Operates each valve ON/OFF according to signals from ABS actuator and electric unit (control unit).

ABS IN Valve

Switches the fluid pressure line to increase or hold according to signals from control unit.

ABS OUT Valve

Switches the fluid pressure line to increase, hold or decrease according to signals from control unit.

Cut Valve 1, Cut Valve 2

Shuts off the ordinary brake line from master cylinder, when VDC function and TCS function are activated.

Suction Valve 1, Suction Valve 2

Supplies the brake fluid from master cylinder to the pump, when VDC function and TCS function are activated.

Return Check Valve

Returns the brake fluid from brake caliper and wheel cylinder to master cylinder by bypassing orifice of each valve when brake is released.

Reservoir

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Temporarily reserves the brake fluid drained from brake caliper, so that pressure efficiently decreases when decreasing pressure of brake caliper and wheel cylinder.

Yaw rate/side/decel G sensor

Calculates the following information that affects the vehicle, and transmits a signal to ABS actuator and electric unit (control unit) via communication lines.

- Vehicle rotation angular velocity (yaw rate signal)
- Vehicle lateral acceleration (side G signal) and longitudinal acceleration (decel G signal)

Pressure Sensor


Detects the brake fluid pressure and transmits signal to ABS actuator and electric unit (control unit).

Wheel Sensor and Sensor Rotor

INFOID:000000009364882

NOTE:

- Wheel sensor of front wheel is installed on steering knuckle.
- Sensor rotor of front wheel is integrated in wheel hub assembly.
- Wheel sensor of rear wheel is installed on back plate of rear brake.
- Sensor rotor of rear wheel is installed on rear brake drum.
- Never measure resistance and voltage value using a tester because sensor is active sensor.
- Downsize and weight reduction is aimed. IC for detection portion and magnet for sensor rotor are adopted.
- Power supply is supplied to detection portion so that magnetic field line is read. Magnetic field that is detected is converted to current signal.
- When sensor rotor rotates, magnetic field changes. Magnetic field change is converted to current signals (rectangular wave) and is transmitted to ABS actuator and electric unit (control unit). Change of magnetic field is proportional to wheel speed.

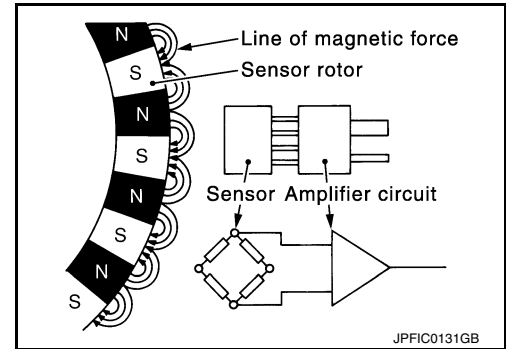

Stop Lamp Switch

INFOID:000000009364883

Detects the operation status of brake pedal and transmits converted electric signal to ABS actuator and electric unit (control unit).

Steering Angle Sensor

INFOID:000000009364884

Detects the following information and transmits steering angle signal to ABS actuator and electric unit (control unit) via CAN communication.

- Steering wheel rotation amount
- Steering wheel rotation angular velocity
- Steering wheel rotation direction

VDC OFF Switch

INFOID:000000009364885

- Non-operational status or standby status of VDC and TCS functions can be selected using VDC OFF switch. VDC OFF indicator lamp indicates the operation status of function. (ON: Non-operational status, OFF: Standby status)
- VDC OFF indicator lamp turns OFF (standby status) when the engine is started again after it is stopped once while VDC OFF indicator lamp is ON (non-operational status).

Brake Fluid Level Switch

INFOID:000000009364886

Detects the brake fluid level in reservoir tank and transmits converted electric signal from combination meter to ABS actuator and electric unit (control unit) via CAN communication.

Parking Brake Switch

INFOID:000000009364887


Detects the operation status of parking brake switch and transmits converted electric signal from combination meter to ABS actuator and electric unit (control unit) via CAN communication.

SYSTEM

VDC/TCS/ABS

VDC/TCS/ABS : System Diagram

INFOID:000000009364888

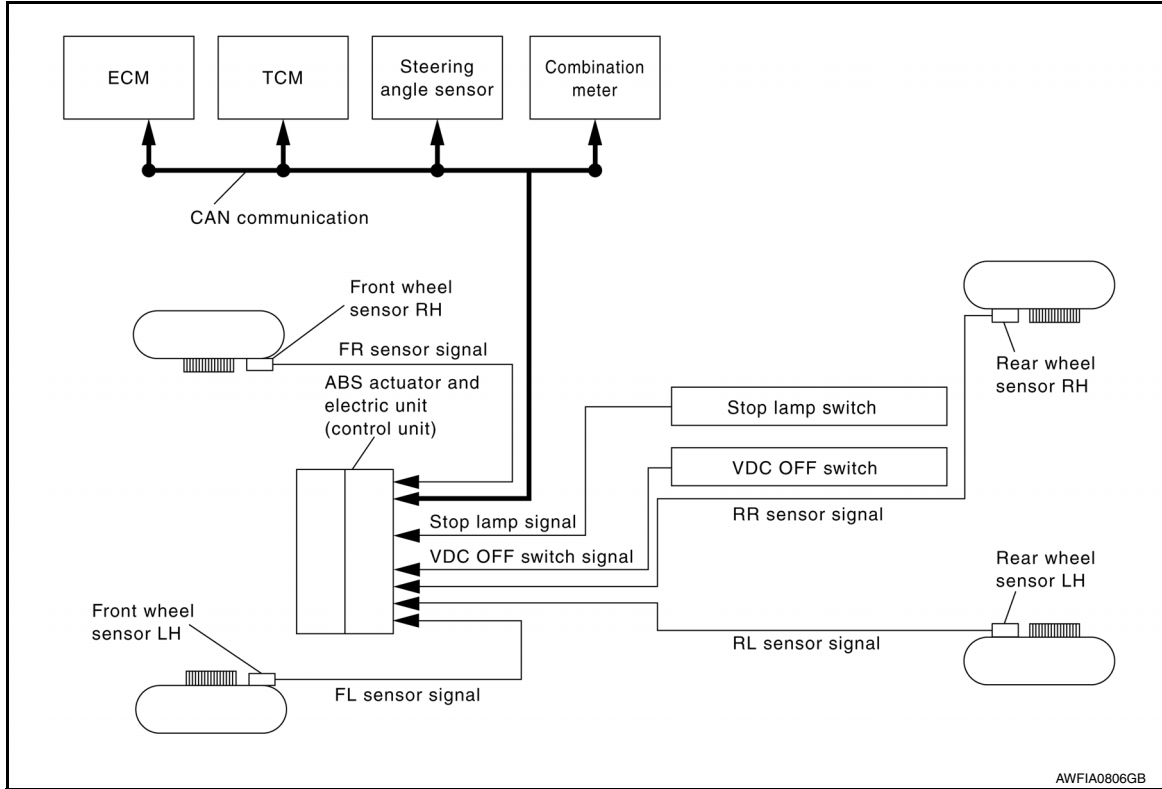

VDC/TCS/ABS : System Description

INFOID:000000009364889

- The system switches fluid pressure of each brake caliper and each wheel cylinder to increase, to hold, or to decrease according to signals from control unit in ABS actuator and electric unit (control unit). This control system is applied to VDC, TCS, ABS and EBD functions.
- Fail-safe function is available for each function and is activated by each function when system malfunction occurs.

INPUT SIGNAL AND OUTPUT SIGNAL

Major signal transmission between each unit via communication lines is shown in the following table.

SYSTEM

< SYSTEM DESCRIPTION >


[VDC/TCS/ABS]

Component	Signal description
Steering angle sensor	Transmits the steering angle sensor signal to ABS actuator and electric unit (control unit) via CAN communication.
ECM	Transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. • Accelerator pedal position signal • Engine speed signal • Target throttle position signal
TCM	Transmits the current gear position signal to ABS actuator and electric unit (control unit) via CAN communication.
Combination meter	Transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. • Brake fluid level switch signal • Parking brake switch signal Receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. • ABS warning lamp signal • Brake warning lamp signal • VDC OFF indicator lamp signal • SLIP indicator lamp signal

VALVE OPERATION (VDC AND TCS FUNCTIONS)

The control unit built in the ABS actuator and electric unit (control unit) controls fluid pressure of the brake calipers by operating each valve.

VDC and TCS Functions are Operating (Pressure Increases)

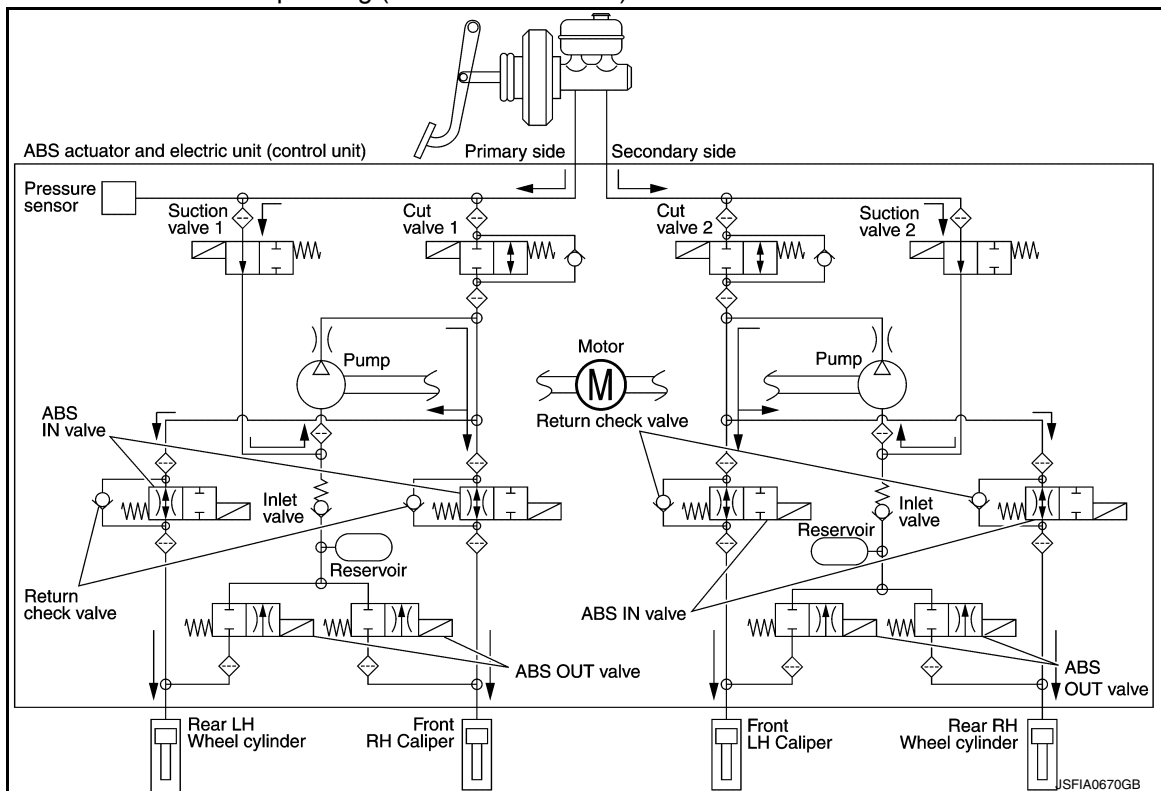

Name	Not activated	Pressure increases
Cut valve 1	Power supply is not supplied (open)	Power supply is supplied (close)
Cut valve 2	Power supply is not supplied (open)	Power supply is supplied (close)
Suction valve 1	Power supply is not supplied (close)	Power supply is supplied (open)
Suction valve 2	Power supply is not supplied (close)	Power supply is supplied (open)
ABS IN valve	Power supply is not supplied (open)	Power supply is not supplied (open)

SYSTEM

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Name	Not activated	Pressure increases
ABS OUT valve	Power supply is not supplied (close)	Power supply is not supplied (close)
Each brake caliper and each wheel cylinder (fluid pressure)	—	Pressure increases

Front RH brake caliper

- Brake fluid is conveyed to the pump from the master cylinder through suction valve 1 and is pressurized by the pump operation. The pressurized brake fluid is supplied to the front RH brake caliper through the ABS IN valve. For the left caliper, brake fluid pressure is maintained because the pressurization is unnecessary. The pressurization for the left caliper is controlled separately from the right caliper.

Front LH brake caliper

- Brake fluid is conveyed to the pump from the master cylinder through suction valve 2 and is pressurized by the pump operation. The pressurized brake fluid is supplied to the front LH brake caliper through the ABS IN valve. For the right caliper, brake fluid pressure is maintained because the pressurization is unnecessary. The pressurization for the right caliper is controlled separately from the left caliper.


Rear RH wheel cylinder

- Brake fluid is conveyed to the pump from the master cylinder through suction valve 2 and is pressurized by the pump operation. The pressurized brake fluid is supplied to the rear RH wheel cylinder through the ABS IN valve. For the left wheel cylinder, brake fluid pressure is maintained because the pressurization is unnecessary. The pressurization for the left wheel cylinder is controlled separately from the right wheel cylinder.

Rear LH wheel cylinder

- Brake fluid is conveyed to the pump from the master cylinder through suction valve 1 and is pressurized by the pump operation. The pressurized brake fluid is supplied to the rear LH wheel cylinder through the ABS IN valve. For the right wheel cylinder, brake fluid pressure is maintained because the pressurization is unnecessary. The pressurization for the right wheel cylinder is controlled separately from the left wheel cylinder.

VDC and TCS Functions Start Operating (Pressure Holds)

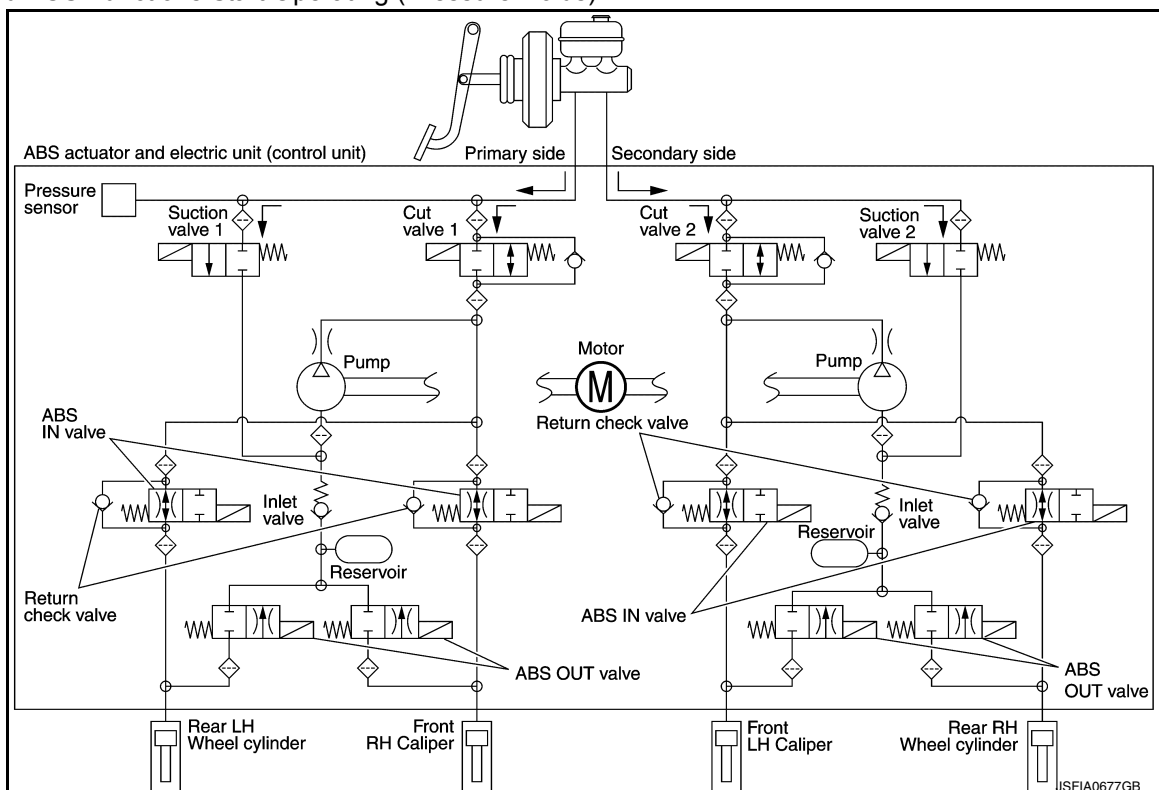

SYSTEM

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Name	Not activated	Pressure holds
Cut valve 1	Power supply is not supplied (open)	Power supply is supplied (close)
Cut valve 2	Power supply is not supplied (open)	Power supply is supplied (close)
Suction valve 1	Power supply is not supplied (close)	Power supply is not supplied (close)
Suction valve 2	Power supply is not supplied (close)	Power supply is not supplied (close)
ABS IN valve	Power supply is not supplied (open)	Power supply is not supplied (open)
ABS OUT valve	Power supply is not supplied (close)	Power supply is not supplied (close)
Each brake caliper and wheel cylinder (fluid pressure)	—	Pressure holds

Front RH brake caliper

- Since the cut valve 1 and the suction valve 1 are closed, the front RH brake caliper, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the front RH brake caliper. The pressurization for the left caliper is controlled separately from the right caliper.

Front LH brake caliper

- Since the cut valve 2 and the suction valve 2 are closed, the front LH brake caliper, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the front LH brake caliper. The pressurization for the right caliper is controlled separately from the left caliper.


Rear RH wheel cylinder

- Since the cut valve 2 and the suction valve 2 are closed, the rear RH wheel cylinder, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the rear RH wheel cylinder. The pressurization for the left wheel cylinder is controlled separately from the right wheel cylinder.

Rear LH wheel cylinder

- Since the cut valve 1 and the suction valve 1 are closed, the rear LH wheel cylinder, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the rear LH wheel cylinder. The pressurization for the right wheel cylinder is controlled separately from the left wheel cylinder.

VDC and TCS Functions Operating (Pressure Decreases)

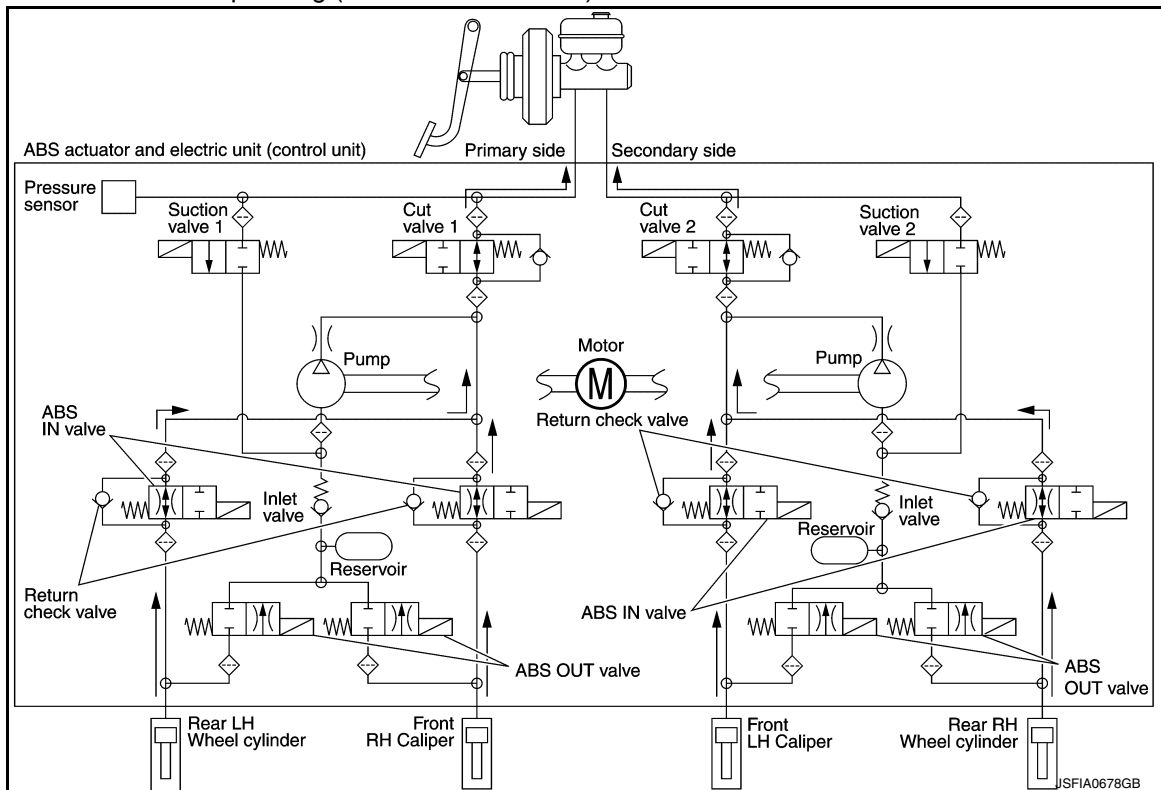

SYSTEM

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Name	Not activated	During pressure decreases
Cut valve 1	Power supply is not supplied (open)	Power supply is not supplied (open)
Cut valve 2	Power supply is not supplied (open)	Power supply is not supplied (open)
Suction valve 1	Power supply is not supplied (close)	Power supply is not supplied (close)
Suction valve 2	Power supply is not supplied (close)	Power supply is not supplied (close)
ABS IN valve	Power supply is not supplied (open)	Power supply is not supplied (open)
ABS OUT valve	Power supply is not supplied (close)	Power supply is not supplied (close)
Each brake caliper and each wheel cylinder (fluid pressure)	—	Pressure decreases

Front RH brake caliper

- Since the suction valve 1 and the ABS OUT valve are closed and the cut valve 1 and the ABS IN valve are open, the fluid pressure applied on the front RH brake caliper is reduced by supplying the fluid pressure to the master cylinder via the ABS IN valve and the cut valve 1. The pressurization for the right caliper is controlled separately from the left caliper.

Front LH brake caliper

- Since the suction valve 2 and the ABS OUT valve are closed and the cut valve 2 and the ABS IN valve are open, the fluid pressure applied on the front LH brake caliper is reduced by supplying the fluid pressure to the master cylinder via the ABS IN valve and the cut valve 2. The pressurization for the left caliper is controlled separately from the right caliper.

Rear RH wheel cylinder

- Since the suction valve 2 and the ABS OUT valve are closed and the cut valve 2 and the ABS IN valve are open, the fluid pressure applied on the rear RH wheel cylinder is reduced by supplying the fluid pressure to the master cylinder via the ABS IN valve and the cut valve 2. The pressurization for the right wheel cylinder is controlled separately from the left wheel cylinder.

Rear LH wheel cylinder

- Since the suction valve 1 and the ABS OUT valve are closed and the cut valve 1 and the ABS IN valve are open, the fluid pressure applied on the rear LH wheel cylinder is reduced by supplying the fluid pressure to the master cylinder via the ABS IN valve and the cut valve 1. The pressurization for the left wheel cylinder is controlled separately from the right wheel cylinder.

Component Parts and Function

Component	Function
Pump	Returns the brake fluid reserved in reservoir to master cylinder by reducing pressure.
Motor	Activates the pump according to signals from ABS actuator and electric unit (control unit).
Cut valve 1 Cut valve 2	Shuts off the ordinary brake line from master cylinder.
Suction valve 1 Suction valve 2	Supplies the brake fluid from master cylinder to the pump.
ABS IN valve	Switches the fluid pressure line to increase or hold according to signals from control unit.
ABS OUT valve	Switches the fluid pressure line to increase, hold or decrease according to signals from control unit.
Return check valve	Returns the brake fluid from brake caliper and wheel cylinder to master cylinder by bypassing orifice of each valve when brake is released.
Reservoir	Temporarily reserves the brake fluid drained from brake caliper, so that pressure efficiently decreases when decreasing pressure of brake caliper and wheel cylinder.
Pressure sensor	Detects the brake fluid pressure and transmits signal to ABS actuator and electric unit (control unit).

VALVE OPERATION (ABS AND EBD FUNCTIONS)


The control unit built into the ABS actuator and electric unit (control unit) controls fluid pressure of the brake calipers by operating each valve.

SYSTEM

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Brake Pedal Applied or ABS Function Operating (Pressure Increases)

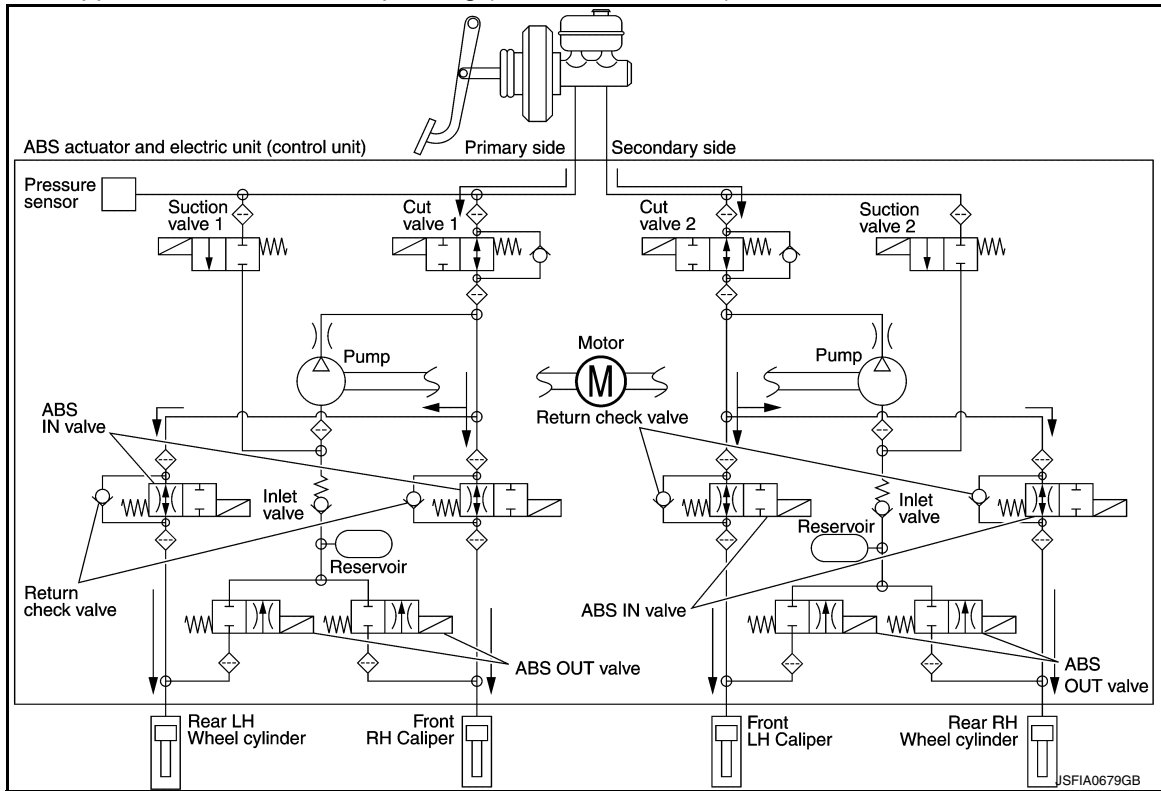

Name	Not activated	During pressure increases
Cut valve 1	Power supply is not supplied (open)	Power supply is not supplied (open)
Cut valve 2	Power supply is not supplied (open)	Power supply is not supplied (open)
Suction valve 1	Power supply is not supplied (close)	Power supply is not supplied (close)
Suction valve 2	Power supply is not supplied (close)	Power supply is not supplied (close)
ABS IN valve	Power supply is not supplied (open)	Power supply is not supplied (open)
ABS OUT valve	Power supply is not supplied (close)	Power supply is not supplied (close)
Each brake caliper and each wheel cylinder (fluid pressure)	—	Pressure increases

Front RH brake caliper

- When the cut valve 1 and the ABS IN valve opens, brake fluid is supplied to the front RH brake caliper from the master cylinder through the ABS IN valve. Brake fluid does not flow into the reservoir because the ABS OUT valve is closed.

Front LH brake caliper

- When the cut valve 2 and the ABS IN valve opens, brake fluid is supplied to the front LH brake caliper from the master cylinder through the ABS IN valve. Brake fluid does not flow into the reservoir because the ABS OUT valve is closed.

Rear RH wheel cylinder

- When the cut valve 2 and the ABS IN valve opens, brake fluid is supplied to the rear RH wheel cylinder from the master cylinder through the ABS IN valve. Brake fluid does not flow into the reservoir because the ABS OUT valve is closed.

Rear LH wheel cylinder


- When the cut valve 1 and the ABS IN valve opens, brake fluid is supplied to the rear LH wheel cylinder from the master cylinder through the ABS IN valve. Brake fluid does not flow into the reservoir because the ABS OUT valve is closed.

SYSTEM

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

ABS Function Starts Operating (Pressure Holds)

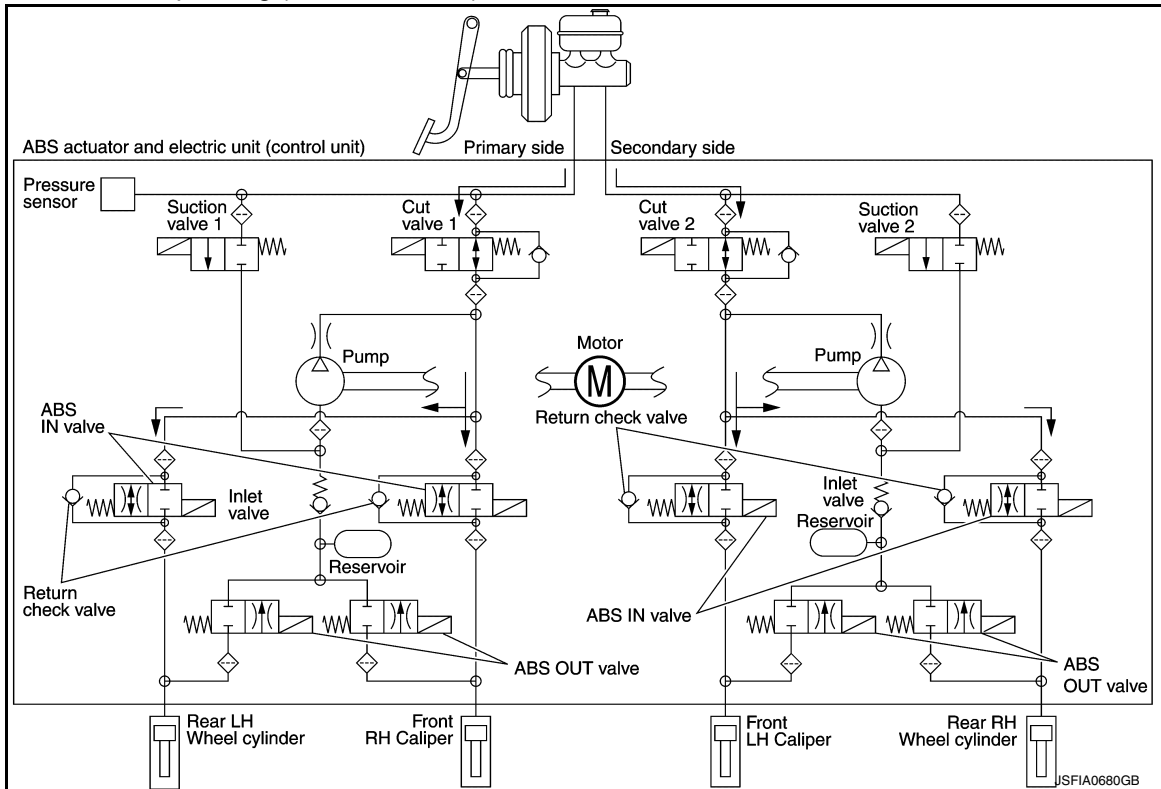

Name	Not activated	During pressure holds
Cut valve 1	Power supply is not supplied (open)	Power supply is not supplied (open)
Cut valve 2	Power supply is not supplied (open)	Power supply is not supplied (open)
Suction valve 1	Power supply is not supplied (close)	Power supply is not supplied (close)
Suction valve 2	Power supply is not supplied (close)	Power supply is not supplied (close)
ABS IN valve	Power supply is not supplied (open)	Power supply is supplied (close)
ABS OUT valve	Power supply is not supplied (close)	Power supply is not supplied (close)
Each brake caliper and each wheel cylinder (fluid pressure)	—	Pressure holds

Front RH brake caliper

- Since the ABS IN valve and the ABS OUT valve are closed, the front RH brake caliper, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the front RH brake caliper.

Front LH brake caliper

- Since the ABS IN valve and the ABS OUT valve are closed, the front LH brake caliper, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the front LH brake caliper.


Rear RH wheel cylinder

- Since the ABS IN valve and the ABS OUT valve are closed, the rear RH wheel cylinder, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the rear RH wheel cylinder.

Rear LH wheel cylinder

- Since the ABS IN valve and the ABS OUT valve are closed, the rear LH wheel cylinder, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the rear LH wheel cylinder.

ABS Function Operating (Pressure Decreases)

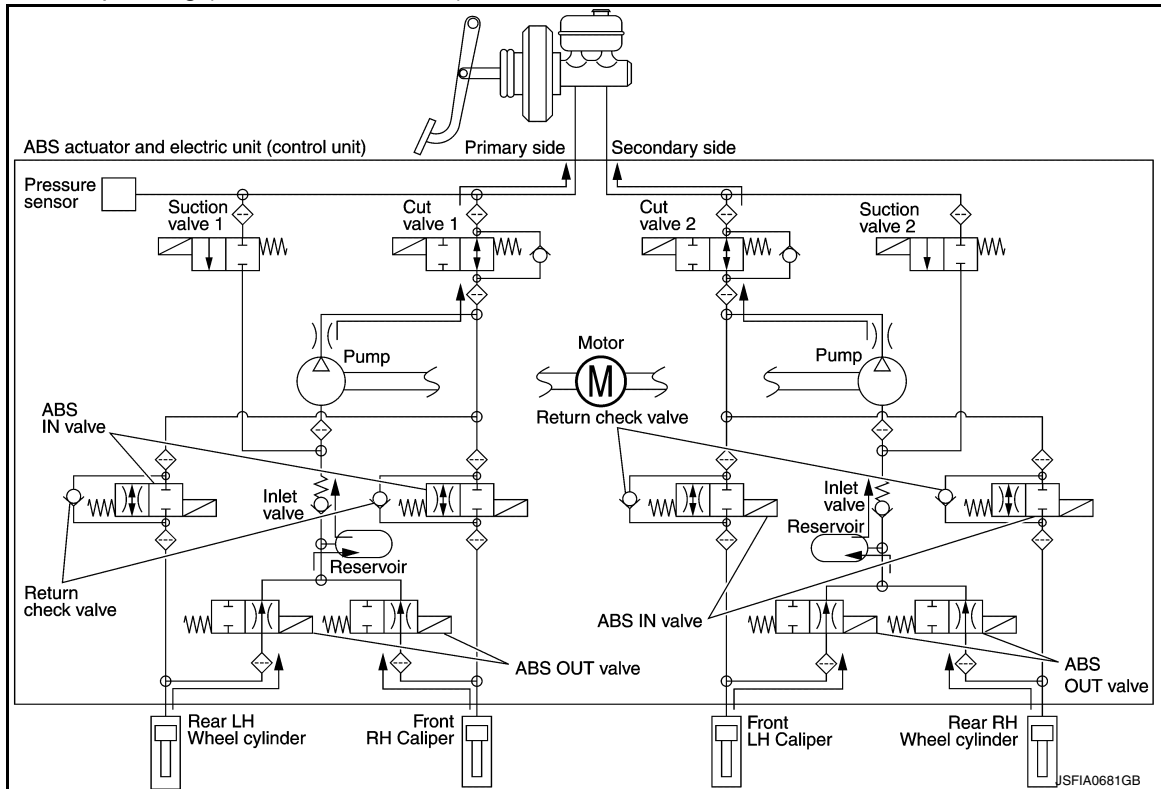

Name	Not activated	During pressure decreases
Cut valve 1	Power supply is not supplied (open)	Power supply is not supplied (open)
Cut valve 2	Power supply is not supplied (open)	Power supply is not supplied (open)
Suction valve 1	Power supply is not supplied (close)	Power supply is not supplied (close)
Suction valve 2	Power supply is not supplied (close)	Power supply is not supplied (close)
ABS IN valve	Power supply is not supplied (open)	Power supply is supplied (close)
ABS OUT valve	Power supply is not supplied (close)	Power supply is supplied (open)
Each brake caliper and each wheel cylinder (fluid pressure)	—	Pressure decreases

Front RH brake caliper

- Since the ABS IN valve is closed and the ABS OUT valve is opened, fluid pressure applied on the front RH brake caliper is supplied to the reservoir through the ABS OUT valve. This fluid pressure decreases when sent to the master cylinder by the pump.

Front LH brake caliper

- Since the ABS IN valve is closed and the ABS OUT valve is opened, fluid pressure applied on the front LH brake caliper is supplied to the reservoir through the ABS OUT valve. This fluid pressure decreases when sent to the master cylinder by the pump.

Rear RH wheel cylinder

- Since the ABS IN valve is closed and the ABS OUT valve is opened, fluid pressure applied on the rear RH wheel cylinder is supplied to the reservoir through the ABS OUT valve. This fluid pressure decreases when sent to the master cylinder by the pump.

Rear LH wheel cylinder


- Since the ABS IN valve is closed and the ABS OUT valve is opened, fluid pressure applied on the rear LH wheel cylinder is supplied to the reservoir through the ABS OUT valve. This fluid pressure decreases when sent to the master cylinder by the pump.

SYSTEM

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

ABS Function Operating (Pressure Increases)

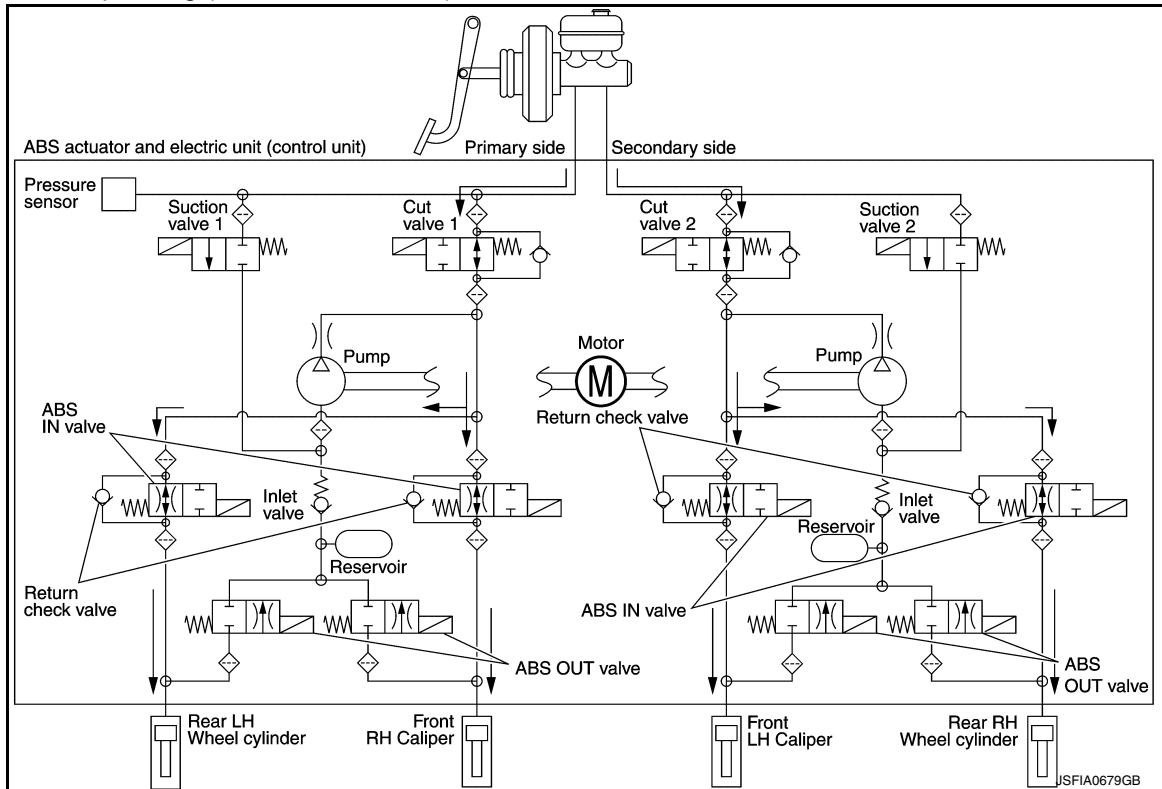

Name	Not activated	During pressure increases
Cut valve 1	Power supply is not supplied (open)	Power supply is not supplied (open)
Cut valve 2	Power supply is not supplied (open)	Power supply is not supplied (open)
Suction valve 1	Power supply is not supplied (close)	Power supply is not supplied (close)
Suction valve 2	Power supply is not supplied (close)	Power supply is not supplied (close)
ABS IN valve	Power supply is not supplied (open)	Power supply is not supplied (open)
ABS OUT valve	Power supply is not supplied (close)	Power supply is not supplied (close)
Each brake caliper and each wheel cylinder (fluid pressure)	—	Pressure increases

Front RH brake caliper

- Brake fluid is supplied to the front RH brake caliper from the master cylinder through the cut valve 1 and the ABS IN valve. Since the suction valve 1 and the ABS OUT valve is closed, the fluid does not flow into the reservoir. The amount of brake fluid supplied to the front RH brake caliper from the master cylinder is controlled according to time that the ABS IN valve is not energized (time that the ABS IN valve is open).

Front LH brake caliper

- Brake fluid is supplied to the front LH brake caliper from the master cylinder through the cut valve 2 and the ABS IN valve. Since the suction valve 2 and the ABS OUT valve is closed, the fluid does not flow into the reservoir. The amount of brake fluid supplied to the front LH brake caliper from the master cylinder is controlled according to time that the ABS IN valve is not energized (time that the ABS IN valve is open).

Rear RH wheel cylinder

- Brake fluid is supplied to the rear RH wheel cylinder from the master cylinder through the cut valve 2 and the ABS IN valve. Since the suction valve 2 and the ABS OUT valve is closed, the fluid does not flow into the reservoir. The amount of brake fluid supplied to the rear RH wheel cylinder from the master cylinder is controlled according to time that the ABS IN valve is not energized (time that the ABS IN valve is open).

Rear LH wheel cylinder

- Brake fluid is supplied to the rear LH wheel cylinder from the master cylinder through the cut valve 1 and the ABS IN valve. Since the suction valve 1 and the ABS OUT valve is closed, the fluid does not flow into the reservoir.


SYSTEM

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

reservoir. The amount of brake fluid supplied to the rear LH wheel cylinder from the master cylinder is controlled according to time that the ABS IN valve is not energized (time that the ABS IN valve is open).

Brake Release

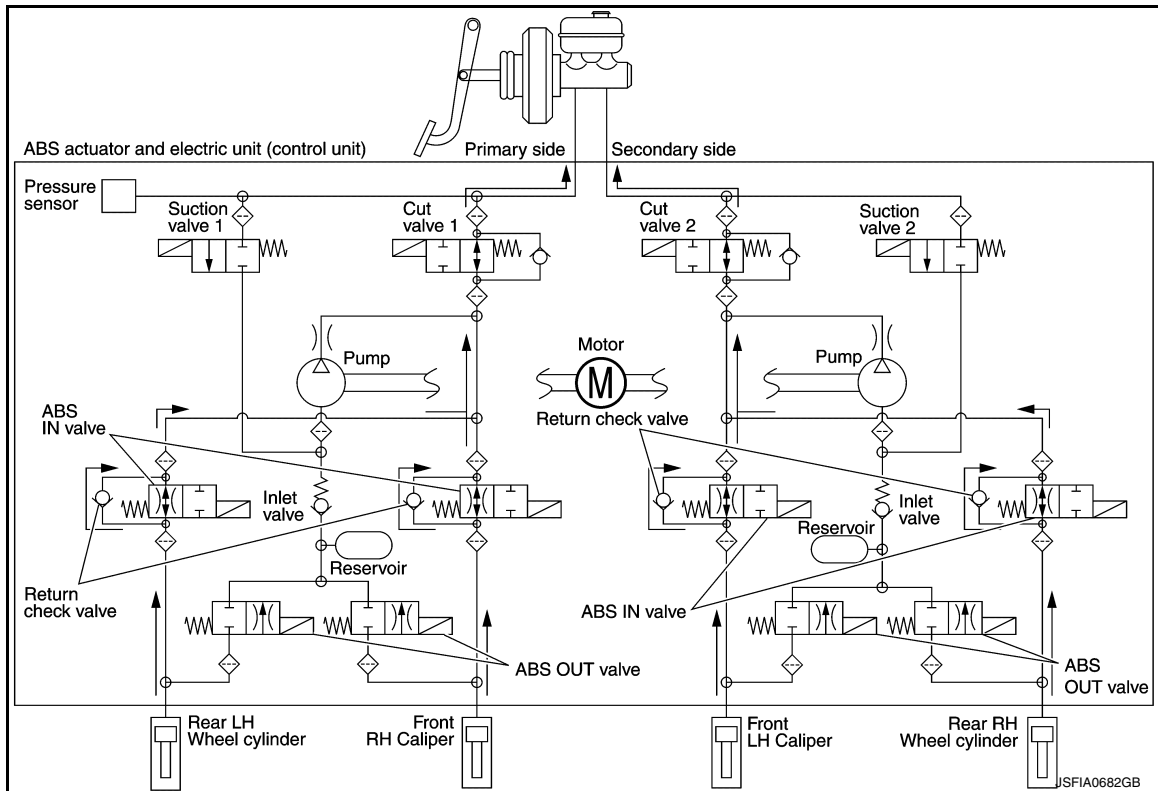

Name	Not activated	During brake release
Cut valve 1	Power supply is not supplied (open)	Power supply is not supplied (open)
Cut valve 2	Power supply is not supplied (open)	Power supply is not supplied (open)
Suction valve 1	Power supply is not supplied (close)	Power supply is not supplied (close)
Suction valve 2	Power supply is not supplied (close)	Power supply is not supplied (close)
ABS IN valve	Power supply is not supplied (open)	Power supply is not supplied (open)
ABS OUT valve	Power supply is not supplied (close)	Power supply is not supplied (close)
Each brake caliper and each wheel cylinder (fluid pressure)	—	Pressure decreases

Front RH brake caliper

- Brake fluid is supplied to the front RH brake caliper through the return check valve of the ABS IN valve and the cut valve 1, and returns to the master cylinder.

Front LH brake caliper

- Brake fluid is supplied to the front LH brake caliper through the return check valve of the ABS IN valve and the cut valve 2, and returns to the master cylinder.

Rear RH wheel cylinder

- Brake fluid is supplied to the rear RH wheel cylinder through the return check valve of the ABS IN valve and the cut valve 2, and returns to the master cylinder.

Rear LH wheel cylinder

- Brake fluid is supplied to the rear LH wheel cylinder through the return check valve of the ABS IN valve and the cut valve 1, and returns to the master cylinder.

Component Parts and Function

SYSTEM

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Component	Function
Pump	Returns the brake fluid reserved in reservoir to master cylinder by reducing pressure.
Motor	Activates the pump according to signals from ABS actuator and electric unit (control unit).
Cut valve 1 Cut valve 2	Shuts off the ordinary brake line from master cylinder.
Suction valve 1 Suction valve 2	Supplies the brake fluid from master cylinder to the pump.
ABS IN valve	Switches the fluid pressure line to increase or hold according to signals from control unit.
ABS OUT valve	Switches the fluid pressure line to increase, hold or decrease according to signals from control unit.
Return check valve	Returns the brake fluid from brake caliper and wheel cylinder to master cylinder by bypassing orifice of each valve when brake is released.
Reservoir	Temporarily reserves the brake fluid drained from brake caliper, so that pressure efficiently decreases when decreasing pressure of brake caliper and wheel cylinder.
Pressure sensor	Detects the brake fluid pressure and transmits signal to ABS actuator and electric unit (control unit).

CONDITIONS FOR INDICATOR LAMP ILLUMINATION

- Turns ON when VDC and TCS functions are switched to non-operational status (OFF) by VDC OFF switch.
- Turns ON when ignition switch turns ON and turns OFF when the system is normal, for bulb check purposes.

Condition (status)	VDC OFF indicator lamp	SLIP indicator lamp
Ignition switch OFF	OFF	OFF
For approx. 1 second after the ignition switch is turned ON	ON	ON
Approx. 1 second after ignition switch is turned ON (when the system is in normal operation)	OFF	OFF
When VDC OFF switch is ON (VDC function and TCS function are OFF)	ON	OFF
VDC function is malfunctioning	OFF	ON
TCS function is malfunctioning	OFF	ON

CONDITIONS FOR WARNING LAMP ILLUMINATION

Turns ON when ignition switch turns ON and turns OFF when the system is normal, for bulb check purposes.

Condition (status)	ABS warning lamp	Brake warning lamp
Ignition switch OFF	OFF	OFF
For approx. 1 second after the ignition switch is turned ON	ON	ON
Approx. 1 second after ignition switch is turned ON (when the system is in normal operation)	OFF	OFF
After engine starts	OFF	OFF
When parking brake operates (parking brake switch ON)	OFF	ON
When brake fluid is less than the specified level (brake fluid level switch ON)	OFF	ON
VDC function is malfunctioning	OFF	OFF
TCS function is malfunctioning	OFF	OFF
ABS function is malfunctioning	ON	OFF
EBD function is malfunctioning	ON	ON
Brake limited slip differential (BLSD) function is malfunctioning	OFF	OFF

SYSTEM

< SYSTEM DESCRIPTION >


[VDC/TCS/ABS]

Condition (status)	ABS warning lamp	Brake warning lamp
VDC function is operating	OFF	OFF
TCS function is operating	OFF	OFF

VDC/TCS/ABS : VDC Function


INFOID:000000009364890

SYSTEM DIAGRAM

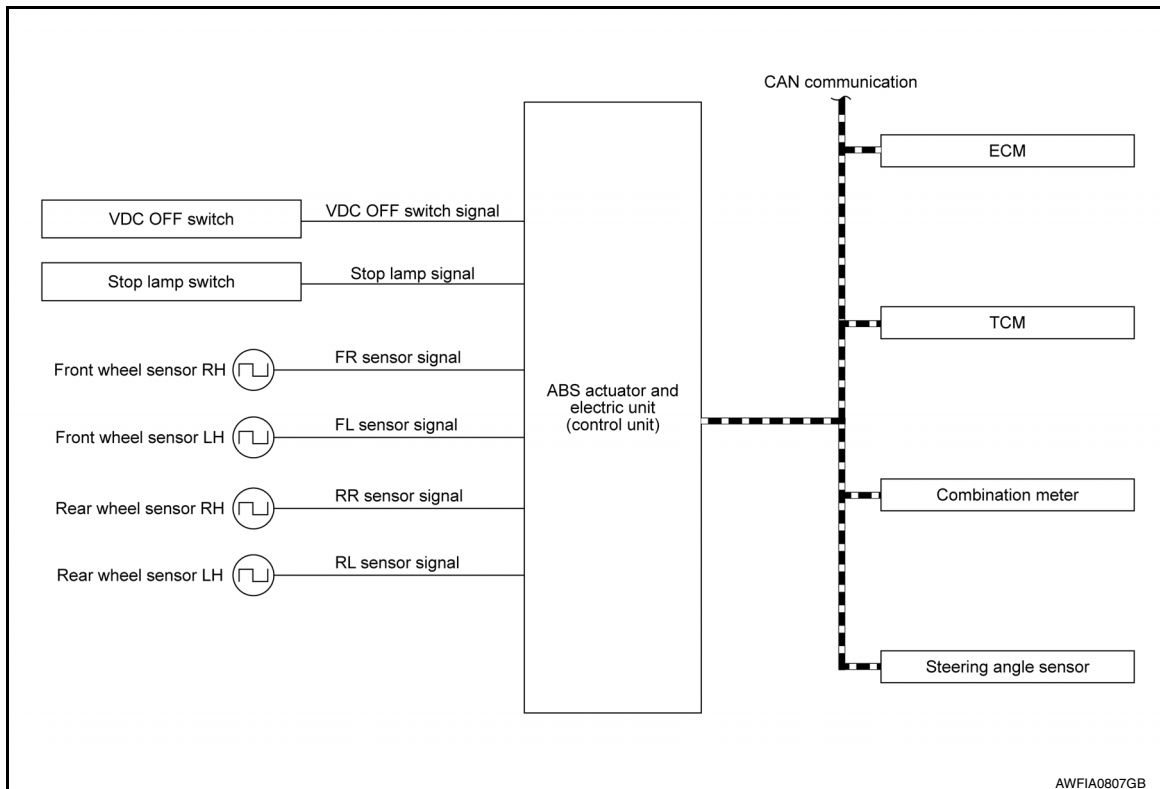

SYSTEM DESCRIPTION

- Side slip or tail slip may occur while driving on a slippery road or intending an urgent evasive driving maneuver. VDC function detects side slip status using each sensor when side slip or tail slip is about to occur and improves vehicle stability by brake control and engine output control during driving.
- In addition to ABS function, EBD function and TCS function, target side slip amount is calculated according to steering operation amount from steering angle sensor. By comparing this information with vehicle side slip amount that is calculated from information from yaw rate/side G sensor and wheel sensor, vehicle driving conditions (conditions of understeer or oversteer) are judged and vehicle stability is improved by brake force control on all 4 wheels and engine output control.

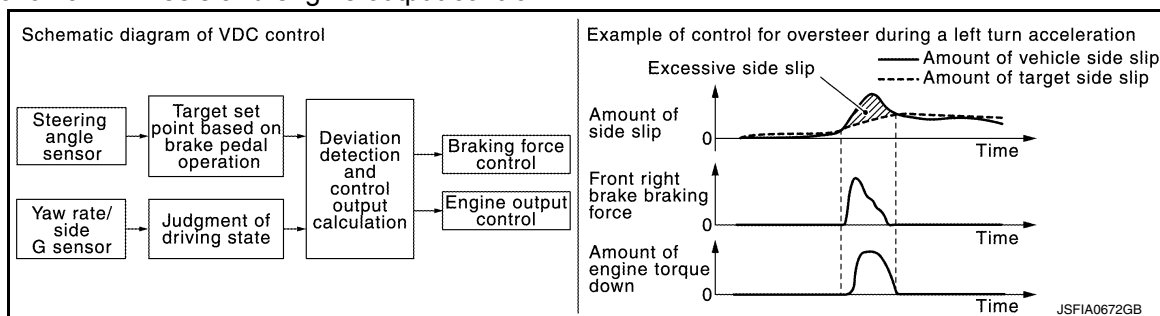

- VDC function can be switched to non-operational status (OFF) by operating VDC OFF switch. In this case, VDC OFF indicator lamp turns ON.
- Control unit portion automatically improves driving stability by performing brake force control as well as engine output control, by transmitting drive signal to actuator portion according to difference between target side slip amount and vehicle side slip amount

SYSTEM

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

- Brake force control function at braking hard detects driver's brake operations with the pressure sensor, judges a brake booster's maximum brake power function by using information from the vacuum sensor, and enhances more powerful braking force by controlling brakes of four wheels.
- VDC warning lamp blinks while VDC function is in operation and indicates to the driver that the function is in operation.
- CONSULT can be used to diagnose the system.
- Fail-safe function is adopted. When a malfunction occurs in VDC function, the control is suspended for VDC function and TCS function. However, ABS function and EBD function operate normally. Refer to [BRC-38](#), "Fail-safe".

INPUT SIGNAL AND OUTPUT SIGNAL


Major signal transmission between each unit via communication lines is shown in the following table.

Component	Signal description
ECM	Transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. • Acceleration pedal position signal • Engine speed signal • Target throttle position signal
TCM	Transmits the current gear position signal to ABS actuator and electric unit (control unit) via CAN communication.
Steering angle sensor	Transmits the steering angle sensor signal to ABS actuator and electric unit (control unit) via CAN communication.
Combination meter	Transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. • Brake fluid level switch signal • parking brake switch signal Receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. • VDC OFF indicator lamp signal • SLIP indicator lamp signal


OPERATION CHARACTERISTICS

VDC Function That Prevents Oversteer Tendency

- During cornering, brake force (brake fluid pressure) is applied on front wheel and rear wheel on the outer side of turn. Momentum is generated directing the vehicle toward the outer side of the turn. Oversteer is prevented.

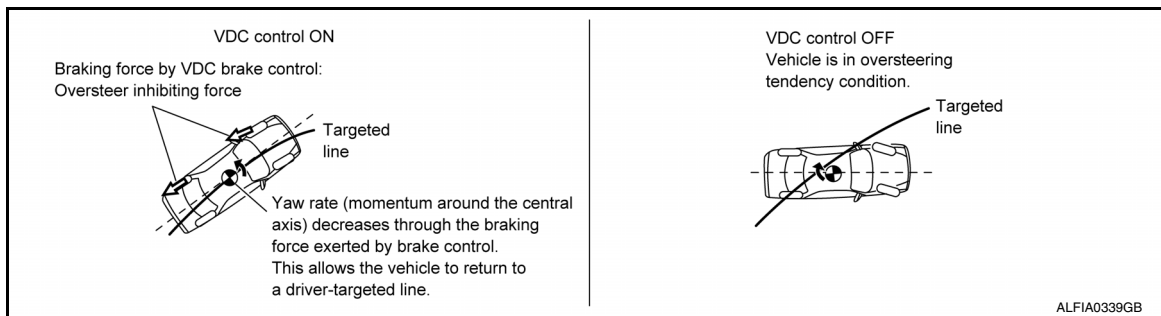

- Changing driving lane on a slippery road, when there may be a tendency to oversteer, engine output is controlled as well as brake force (brake fluid pressure) of 4 wheels. Oversteer tendency decreases.

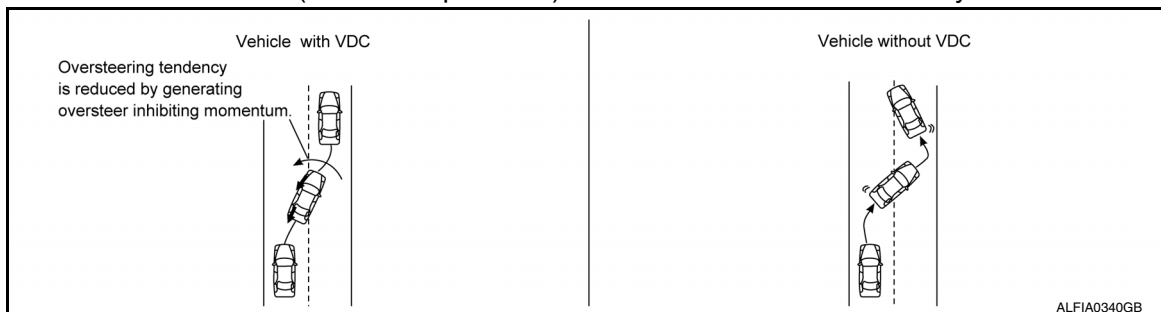


SYSTEM

< SYSTEM DESCRIPTION >


[VDC/TCS/ABS]

VDC Function That Prevents Understeer Tendency

- During cornering, brake force (brake fluid pressure) is applied on front wheel and rear wheel on the inner side of turn. Momentum is generated directing the vehicle toward the inner side of the turn. Understeer is prevented.

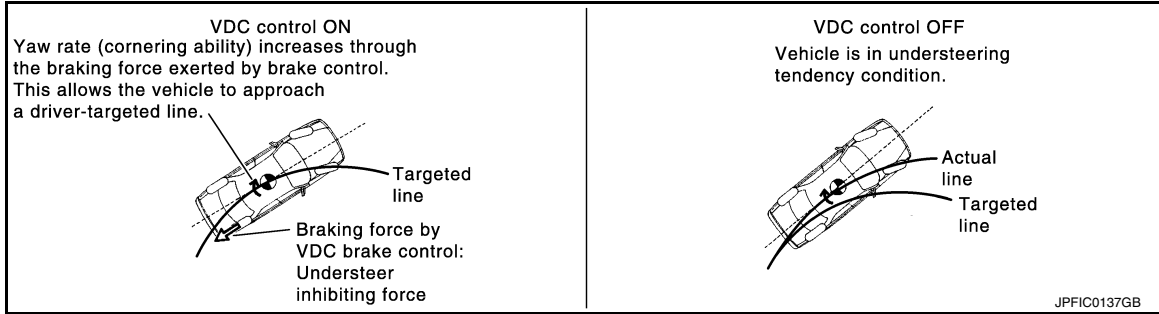


- Applying brakes during cornering on a slippery road, when there may be a tendency to understeer, engine output is controlled as well as brake force (brake fluid pressure) of 4 wheels. Understeer tendency decreases.

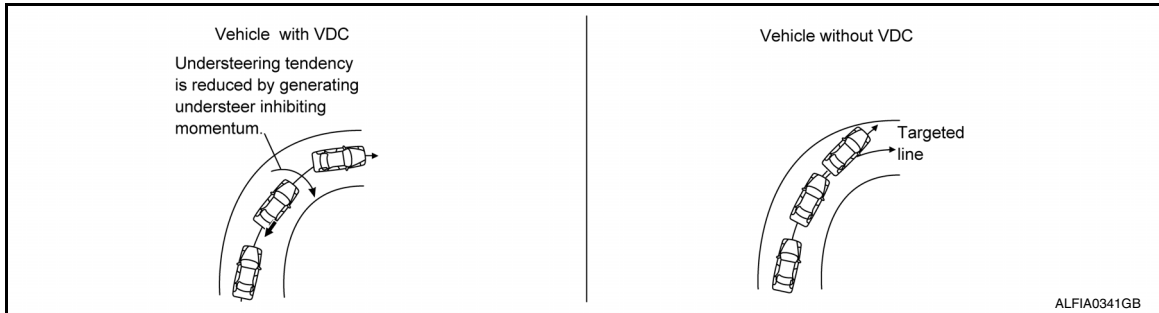

VDC/TCS/ABS : TCS Function

INFOID:000000009364891

SYSTEM DIAGRAM

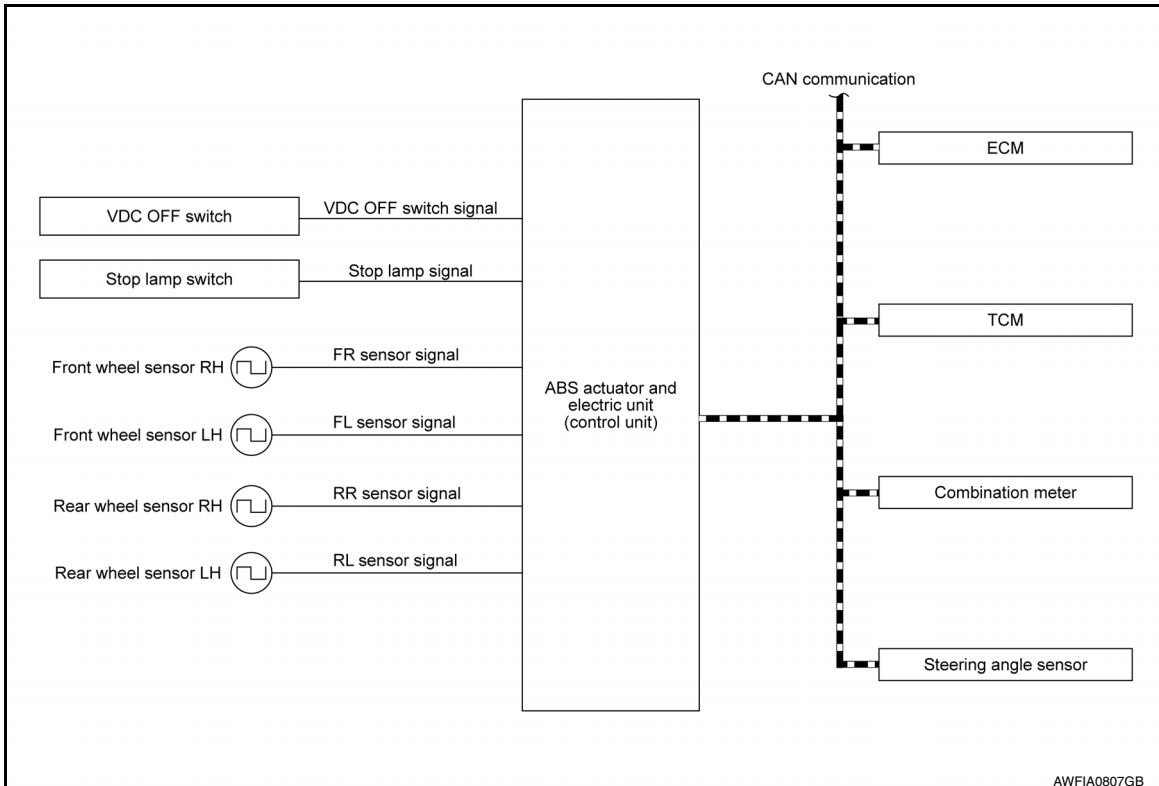


SYSTEM DESCRIPTION

SYSTEM

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

- Wheel spin status of drive wheel is detected by wheel sensor of 4 wheels. Engine output and transmission shift status is controlled so that slip rate of drive wheels is in appropriate level. When wheel spin occurs on drive wheel, ABS actuator and electric unit (control unit) perform brake force control of LH and RH drive wheels (apply brake force by increasing brake fluid pressure of drive wheel) and decrease engine torque by engine torque control. Wheel spin amount decreases. Engine torque is controlled to appropriate level.
- TCS function can be switched to non-operational status (OFF) by operating VDC OFF switch. In this case, VDC OFF indicator lamp turns ON.
- SLIP indicator lamp blinks while TCS function is in operation and indicates to the driver that the function is in operation.
- CONSULT can be used to diagnose the system.
- Fail-safe function is adopted. When a malfunction occurs in TCS function, the control is suspended for VDC function and TCS function. However, ABS function and EBD function operate normally. Refer to [BRC-38, "Fail-safe"](#).

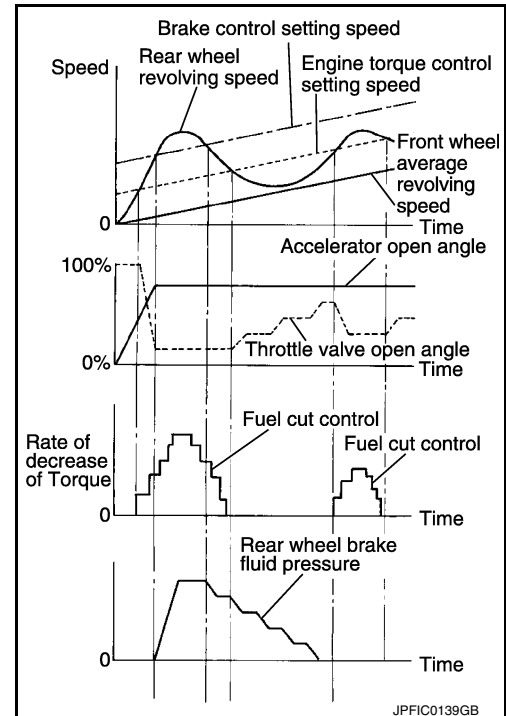

JPFIC0139GB

INPUT SIGNAL AND OUTPUT SIGNAL


Major signal transmission between each unit via communication lines is shown in the following table.

Component	Signal description
ECM	Transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. • Accelerator pedal position signal • Engine speed signal • Target throttle position signal
TCM	Transmits the current gear position signal to ABS actuator and electric unit (control unit) via CAN communication.
Steering angle sensor	Transmits the steering angle sensor signal to ABS actuator and electric unit (control unit) via CAN communication.
Combination meter	Transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. • Brake fluid level switch signal • Parking brake switch signal Receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. • VDC OFF indicator lamp signal • SLIP indicator lamp signal


VDC/TCS/ABS : ABS Function

INFOID:000000009364892

SYSTEM DIAGRAM

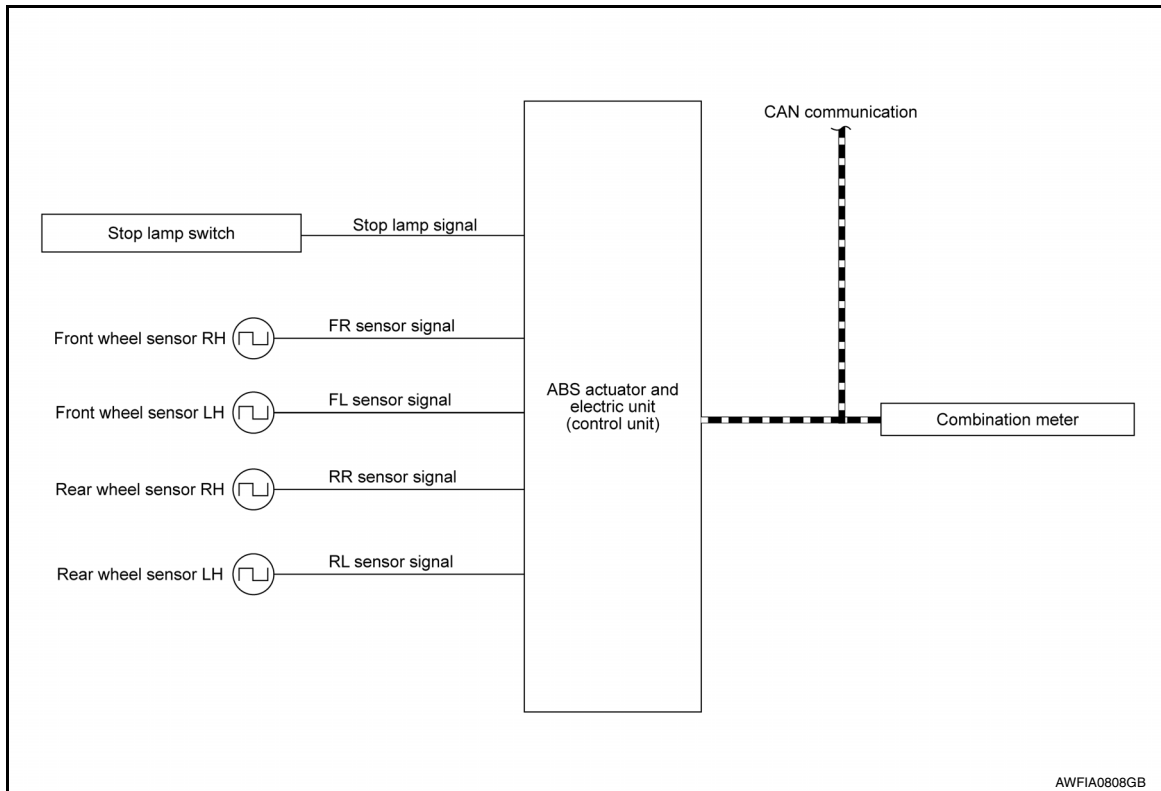

- By preventing wheel lock through brake force (brake fluid pressure) control that is electronically controlled by detecting wheel speed during braking, stability during emergency braking is improved so that obstacles can be easily bypassed by steering operation.
- During braking, control units calculate wheel speed and pseudo-vehicle speed, and transmit pressure increase, hold or decrease signals to actuator portion according to wheel slip status.
- The following effects are obtained by preventing wheel lock during braking.
 - Vehicle tail slip is prevented during braking when driving straight.
 - Understeer and oversteer tendencies are moderated during braking while cornering.
 - Obstacles may be easily bypassed by steering operation during braking.
- CONSULT can be used to diagnose the system.
- Fail-safe function is adopted. When a malfunction occurs in ABS function, the control is suspended for VDC function, TCS function and ABS function. However, EBD function operates normally. Refer to [BRC-27, "VDC/TCS/ABS : Fail-safe"](#).

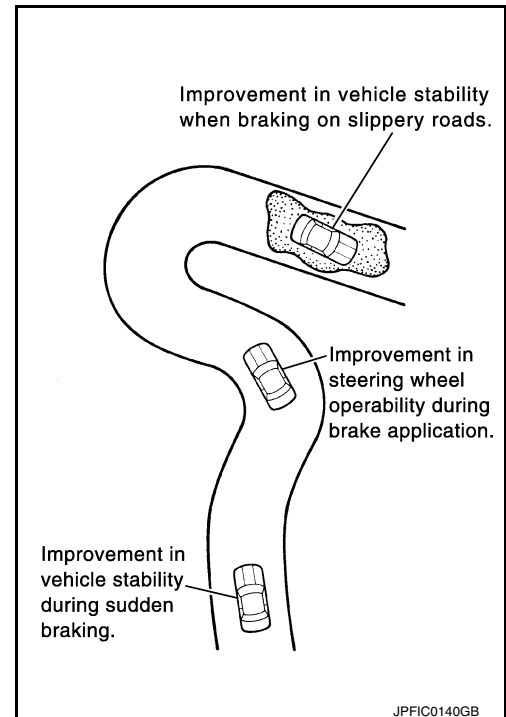

INPUT SIGNAL AND OUTPUT SIGNAL

SYSTEM

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]


Major signal transmission between each unit via communication lines is shown in the following table.

Component	Signal description
Combination meter	Receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. • VDC warning lamp signal • ABS warning lamp signal


VDC/TCS/ABS : EBD Function

INFOID:000000009364893

SYSTEM DIAGRAM

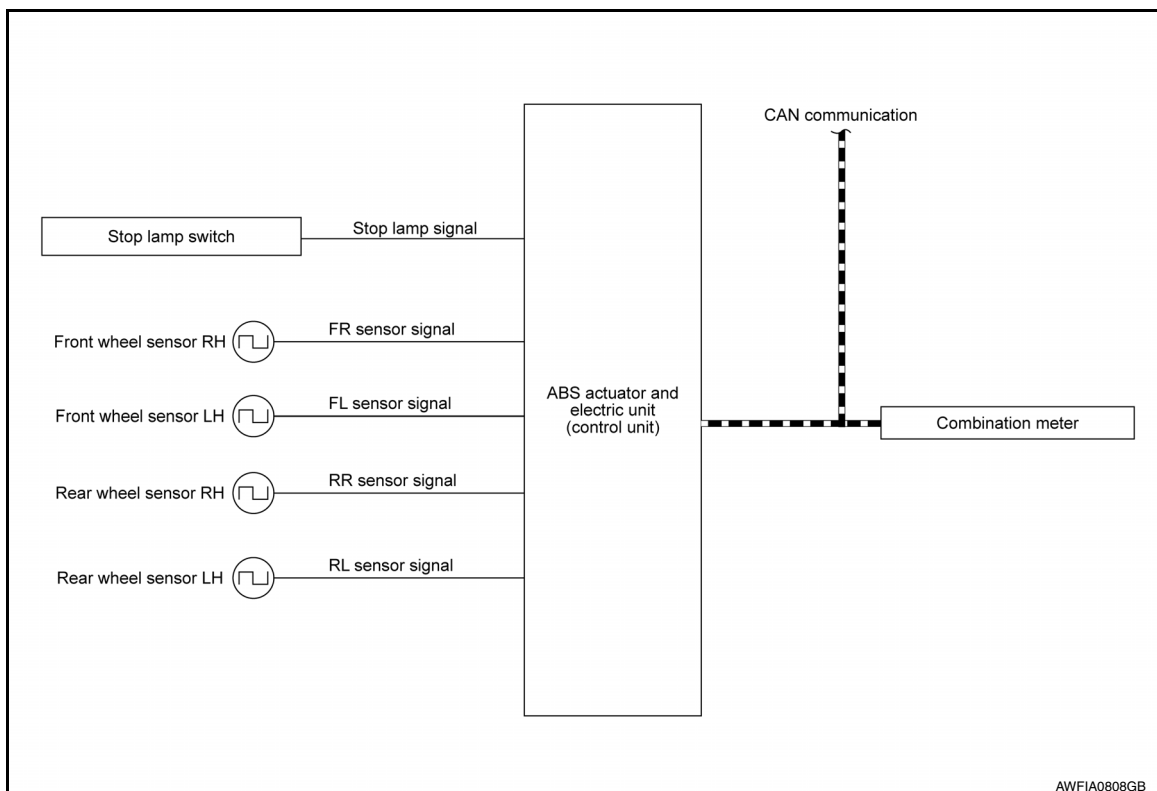

- By preventing rear wheel slip increase through rear wheel brake force (brake fluid pressure) control that is electronically controlled when slight skip on front and rear wheels are detected during braking, stability during braking is improved.
- EBD function is expanded and developed from conventional ABS function and corrects rear wheel brake force to appropriate level by electronic control according to load weight (number of passengers).

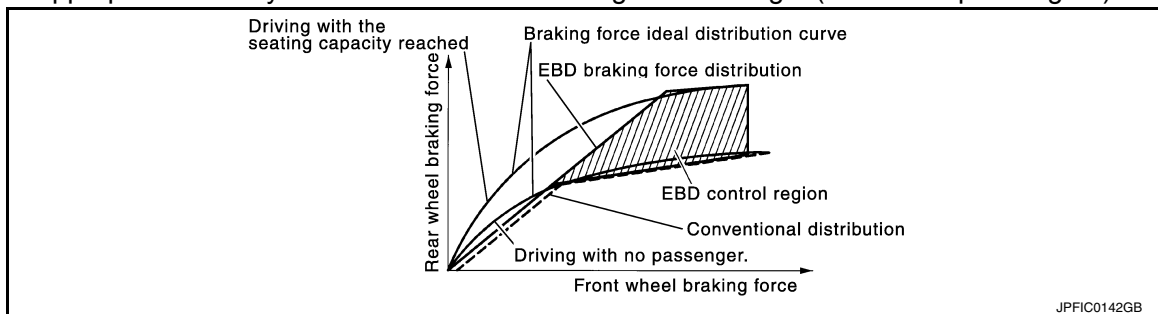


SYSTEM

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

- During braking, control unit portion compares slight slip on front and rear wheels by wheel speed sensor signal, transmits drive signal to actuator portion when rear wheel slip exceeds front wheel slip for the specified value or more, and controls rear wheel brake force (brake fluid pressure) so that increase of rear wheel slip is prevented and slips on front wheel and rear wheel are nearly equalized. ABS control is applied when slip on each wheel increases and wheel speed is the threshold value of ABS control or less.
- CONSULT can be used to diagnose the system.
- Fail-safe function is adopted. When a malfunction occurs in EBD function, the control is suspended for VDC function, TCS function, ABS function and EBD function. Refer to [BRC-27. "VDC/TCS/ABS : Fail-safe"](#).

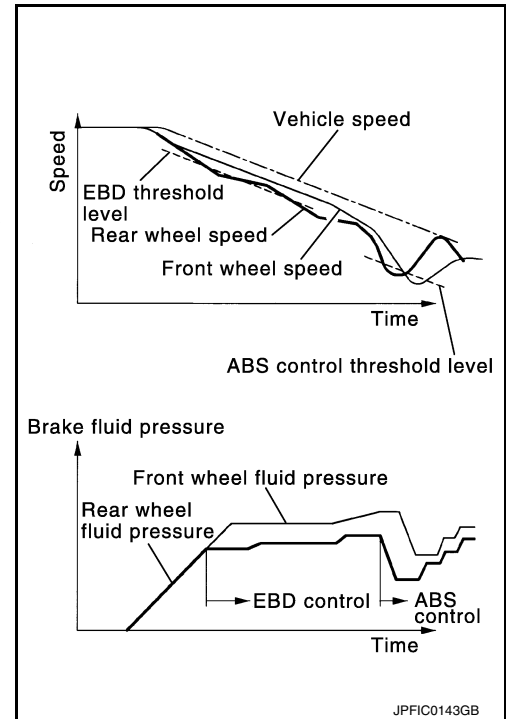

INPUT SIGNAL AND OUTPUT SIGNAL

Major signal transmission between each unit via communication lines is shown in the following table.

Component	Signal description
Combination meter	Receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. - ABS warning lamp signal - Brake warning lamp signal - SLIP indicator lamp signal

VDC/TCS/ABS : Fail-safe

INFOID:000000009364894

VDC AND TCS FUNCTIONS

VDC warning lamp in combination meter turns ON when a malfunction occurs in system [ABS actuator and electric unit (control unit)]. The control is suspended for VDC and TCS functions. However, ABS and EBD functions operate normally.

ABS FUNCTION

ABS warning lamp and SLIP indicator lamp in combination meter turn ON when a malfunction occurs in system [ABS actuator and electric unit (control unit)]. The control is suspended for VDC, TCS and ABS functions. However, EBD functions operate normally.

EBD FUNCTION

ABS warning lamp, brake warning lamp and SLIP indicator lamp in combination meter turn ON when a malfunction occurs in system [ABS actuator and electric unit (control unit)]. The control is suspended for VDC, TCS, ABS and EBD functions.

SYSTEM

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

DTC	Malfunction detected condition	Fail-safe condition
C1101	When an open circuit is detected in rear RH wheel sensor circuit.	The following functions are suspended: • VDC • ABS • EBD (only when both rear wheels are malfunctioning)
C1102	When an open circuit is detected in rear LH wheel sensor circuit.	
C1103	When an open circuit is detected in front RH wheel sensor circuit.	
C1104	When an open circuit is detected in front LH wheel sensor circuit.	
C1105	• When a short circuit is detected in rear RH wheel sensor circuit. • When power supply voltage of rear RH wheel sensor is in following state. - Rear RH wheel sensor power supply voltage: $7.2\text{ V} \geq$ Rear RH wheel sensor power supply voltage • When distance between rear RH wheel sensor and rear RH wheel sensor rotor is large. • When installation of rear RH wheel sensor or rear RH wheel sensor rotor is not normal.	
C1106	• When a short circuit is detected in rear LH wheel sensor circuit. • When power supply voltage of rear LH wheel sensor is in following state. - Rear LH wheel sensor power supply voltage: $7.2\text{ V} \geq$ Rear LH wheel sensor power supply voltage • When distance between rear LH wheel sensor and rear LH wheel sensor rotor is large. • When installation of rear LH wheel sensor or rear LH wheel sensor rotor is not normal.	
C1107	• When a short circuit is detected in front RH wheel sensor circuit. • When power supply voltage of front RH wheel sensor is in following state. - Front RH wheel sensor power supply voltage: $7.2\text{ V} \geq$ Front RH wheel sensor power supply voltage • When distance between front RH wheel sensor and front RH wheel sensor rotor is large. • When installation of front RH wheel sensor or front RH wheel sensor rotor is not normal.	
C1108	• When a short circuit is detected in front LH wheel sensor circuit. • When power supply voltage of front LH wheel sensor is in following state. - Front LH wheel sensor power supply voltage: $7.2\text{ V} \geq$ Front LH wheel sensor power supply voltage • When distance between front LH wheel sensor and front LH wheel sensor rotor is large. • When installation of front LH wheel sensor or front LH wheel sensor rotor is not normal.	
C1109	• When ignition power supply voltage is in following state. - Ignition power supply voltage: $10\text{ V} \geq$ Ignition power supply voltage. - Ignition power supply voltage: $16\text{ V} \leq$ Ignition power supply voltage.	The following functions are suspended: • VDC • TCS • ABS • EBD
C1110	When there is an internal malfunction in the ABS actuator and electric unit (control unit).	
C1111	When a malfunction is detected in motor or motor relay.	The following functions are suspended: • VDC • TCS • ABS
C1115	When difference in wheel speed between any wheel and others is detected when the vehicle is driven, because of installation of tires other than specified.	The following functions are suspended: • VDC • TCS • ABS • EBD
C1116	When stop lamp switch signal is not input when brake pedal operates.	The following functions are suspended: • VDC • TCS

SYSTEM

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

DTC	Malfunction detected condition	Fail-safe condition	
C1120	When a malfunction is detected in front LH ABS IN valve.	The following functions are suspended: • VDC • TCS • ABS • EBD	A
C1121	When a malfunction is detected in front LH ABS OUT valve.		
C1122	When a malfunction is detected in front RH ABS IN valve.		B
C1123	When a malfunction is detected in front RH ABS OUT valve.		
C1124	When a malfunction is detected in rear LH ABS IN valve.		
C1125	When a malfunction is detected in rear LH ABS OUT valve.		C
C1126	When a malfunction is detected in rear RH ABS IN valve.		
C1127	When a malfunction is detected in rear RH ABS OUT valve.	The following functions are suspended: • VDC • TCS	D
C1130	When a malfunction is detected in ECM system.		E
C1140	When a malfunction is detected in actuator relay.	The following functions are suspended: • VDC • TCS • ABS • EBD	BRC
C1142	When a malfunction is detected in VDC pressure sensor.	The following functions are suspended: • VDC • TCS	G
C1143	When a malfunction is detected in steering angle sensor.		
C1144	When neutral position adjustment of steering angle sensor is not complete.		H
C1145	When a malfunction is detected in yaw rate signal, or signal line of yaw rate/side/ decel G sensor is open or shorted.		
C1146	When a malfunction is detected in side G signal, or signal line of yaw rate/side/decel G sensor is open or shorted.		I
C1153	When ABS actuator and electric unit (control unit) is malfunctioning. (Pressure increase is too much or too little.)	The following functions are suspended: • VDC • TCS • ABS	J
C1155	When brake fluid level low signal is detected.	The following functions are suspended: • VDC • TCS	K
C1164	When a malfunction is detected in cut valve 1.	The following functions are suspended: • VDC • TCS • ABS • EBD	L
C1165	When a malfunction is detected in cut valve 2.		
C1166	When a malfunction is detected in suction valve 1.		M
C1167	When a malfunction is detected in suction valve 2.		
C1170	When the information in ABS actuator and electric unit (control unit) is not the same.	The following functions are suspended: • VDC • TCS • ABS	N
U1000	When CAN communication signal is not continuously transmitted or received for 2 seconds or more.	The following functions are suspended: • VDC • TCS	O
U1002	When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or less.		P
U1010	When detecting error during the initial diagnosis of CAN controller of ABS actuator and electric unit (control unit)		

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

CONSULT Function (ABS)

INFOID:000000009364895

APPLICATION ITEMS

CONSULT can display each diagnostic item using the following direct diagnostic modes.

Direct Diagnostic Mode	Description
ECU identification	The ABS actuator and electric unit (control unit) part number is displayed.
Self Diagnostic Result	The ABS actuator and electric unit (control unit) self diagnostic results are displayed.
Data Monitor	The ABS actuator and electric unit (control unit) input/output data is displayed in real time.
Active Test	The ABS actuator and electric unit (control unit) activates outputs to test components.
Work support	The settings for ABS actuator and electric unit (control unit) functions can be changed.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication is displayed.

ECU IDENTIFICATION

ABS actuator and electric unit (control unit) part number is displayed.

SELF DIAGNOSTIC RESULT

Operation Procedure

1. Before performing the self-diagnosis, start engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.

How To Erase Self Diagnostic Result

1. After erasing DTC memory, start engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute as the final inspection, and make sure that the ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp turn OFF.

CAUTION:

If memory cannot be erased, perform applicable diagnosis.

NOTE:

- When the wheel sensor malfunctions, after inspecting the wheel sensor system, the ABS warning lamp, SLIP indicator lamp and brake warning lamp will not turn OFF even when the system is normal, unless the vehicle is driven at approximately 30 km/h (19 MPH) or more for approximately 1 minute.
- Brake warning lamp will turn ON in case of parking brake operation (when switch is ON) or of brake fluid level switch operation (when brake fluid is insufficient).
- VDC OFF switch should not stay in ON position.

Display Item List

Refer to [BRC-41. "DTC Index"](#).

DATA MONITOR

Item (Unit)	Data monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
FR LH SENSOR (km/h, mph)	×	×	×	Wheel speed (km/h, mph) calculated by front wheel sensor LH signal is displayed.
FR RH SENSOR (km/h, mph)	×	×	×	Wheel speed (km/h, mph) calculated by front wheel sensor RH signal is displayed.
RR LH SENSOR (km/h, mph)	×	×	×	Wheel speed (km/h, mph) calculated by rear wheel sensor LH signal is displayed.
RR RH SENSOR (km/h, mph)	×	×	×	Wheel speed (km/h, mph) calculated by rear wheel sensor RH signal is displayed.

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Item (Unit)	Data monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
FR RH IN SOL (On/Off)	—	×	×	Front RH IN ABS solenoid (On/Off) status is displayed.
FR RH OUT SOL (On/Off)	—	×	×	Front RH OUT ABS solenoid (On/Off) status is displayed.
FR LH IN SOL (On/Off)	—	×	×	Front LH IN ABS solenoid (On/Off) status is displayed.
FR LH OUT SOL (On/Off)	—	×	×	Front LH OUT ABS solenoid (On/Off) status is displayed.
RR RH IN SOL (On/Off)	—	×	×	Rear RH IN ABS solenoid (On/Off) status is displayed.
RR RH OUT SOL (On/Off)	—	×	×	Rear RH OUT ABS solenoid (On/Off) status is displayed.
RR LH IN SOL (On/Off)	—	×	×	Rear LH IN ABS solenoid (On/Off) status is displayed.
RR LH OUT SOL (On/Off)	—	×	×	Rear LH OUT ABS solenoid (On/Off) status is displayed.
EBD WARN LAMP (On/Off)	—	—	×	Brake warning lamp (On/Off) status is displayed.
STOP LAMP SW (On/Off)	×	×	×	Stop lamp switch (On/Off) status is displayed.
MOTOR RELAY (On/Off)	—	×	×	ABS motor relay signal (On/Off) status is displayed.
ACTUATOR RLY (On/Off)	—	×	×	ABS actuator relay signal (On/Off) status is displayed.
ABS WARN LAMP (On/Off)	—	×	×	ABS warning lamp (On/Off) status is displayed.
OFF LAMP (On/Off)	—	×	×	VDC OFF Lamp (On/Off) status is displayed.
OFF SW	×	×	×	VDC OFF Switch (On/Off) position is displayed
SLIP/VDC LAMP (On/Off)	—	×	×	SLIP indicator lamp (On/Off) status is displayed.
BATTERY VOLT (V)	×	×	×	Voltage (V) supplied to ABS actuator and electric unit (control unit) is displayed.
GEAR (1, 2, 3, 4, 5)	×	×	×	Gear position (1, 2, 3, 4, 5) judged by transmission range switch signal is displayed.
SLCT LVR POSI	×	×	×	Current gear position judged from current gear position signal is displayed.
ENGINE SPEED	×	×	×	Engine speed judged by CAN communication signal is displayed.
YAW RATE SEN (d/s)	×	×	×	Yaw rate (d/s) detected by yaw rate sensor is displayed.
R POSI SIG (On/Off)	—	—	×	Reverse shift position (On/Off) judged by transmission range switch signal.
N POSI SIG (On/Off)	—	—	×	Neutral position (On/Off) judged by transmission range switch signal.
P POSI SIG (On/Off)	—	—	×	Park position (On/Off) judged by transmission range switch signal.
CV1 (On/Off)	—	—	×	Cut valve 1(On/Off) status is displayed.
CV2 (On/Off)	—	—	×	Cut valve 2 (On/Off) status is displayed.

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Item (Unit)	Data monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
SV1 (On/Off)	—	—	×	Suction valve 1(On/Off) status is displayed.
SV2 (On/Off)	—	—	×	Suction valve 2 (On/Off) status is displayed.
ACCEL POS SIG (%)	×	—	×	Throttle valve open/close status judged by CAN communication signal is displayed.
SIDE G-SENSOR (m/s ²)	×	—	×	Transverse acceleration detected by side G-sensor is displayed.
STR ANGLE SIG (deg)	×	—	×	Steering angle detected by steering angle sensor is displayed.
PRESS SENSOR (bar)	×	—	×	Brake pressure detected by pressure sensor is displayed.
EBD SIGNAL (On/Off)	—	—	×	EBD operation (On/Off) status is displayed.
ABS SIGNAL (On/Off)	—	—	×	ABS operation (On/Off) status is displayed.
TCS SIGNAL (On/Off)	—	—	×	TCS operation (On/Off) status is displayed.
VDC SIGNAL (On/Off)	—	—	×	VDC operation (On/Off) status is displayed.
EBD FAIL SIG (On/Off)	—	—	×	EBD fail signal (On/Off) status is displayed.
ABS FAIL SIG (On/Off)	—	—	×	ABS fail signal (On/Off) status is displayed.
TCS FAIL SIG (On/Off)	—	—	×	TCS fail signal (On/Off) status is displayed.
VDC FAIL SIG (On/Off)	—	—	×	VDC fail signal (On/Off) status is displayed.
CRANKING SIG (On/Off)	—	—	×	The input state of the key SW START position signal is displayed.
FLUID LEV SW (On/Off)	×	—	×	Brake fluid level switch (On/Off) status is displayed.

×: Applicable

—: Not applicable

ACTIVE TEST MODE

CAUTION:

- Do not perform active test while driving vehicle.
- Make sure to completely bleed air from brake system.
- The active test cannot be performed with the ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp or brake warning lamp on.
- ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp turn on during active test.

NOTE:

- When active test is performed while depressing the pedal, the pedal depression amount will change. This is normal.
- “TEST IS STOPPED” is displayed 10 seconds after operation start.
- After “TEST IS STOPPED” is displayed, to perform test again, touch BACK.

Test Item

ABS SOLENOID VALVE

- Select “Up”, “Keep” and “Down”. Then use screen monitor to check that solenoid valve operates as shown in the table below.

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Test item	Display item	Display (Note)		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*

*: On for 1 to 2 seconds after the select, and then Off.

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ABS SOLENOID VALVE (ACT)

- Select "Up", "ACT UP" and "ACT KEEP". Then use screen monitor to check that solenoid valve operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	ACT UP	ACT KEEP
FR RH ABS SOLENOID (ACT)	FR RH IN SOL	Off	Off	Off
	FR RH OUT SOL	Off	Off	Off
	CV1	Off	On	On
	CV2	Off	On*	Off
	SV1	Off	On	On
	SV2	Off	On	Off
FR LH ABS SOLENOID (ACT)	FR LH IN SOL	Off	Off	Off
	FR LH OUT SOL	Off	Off	Off
	CV1	Off	On	On
	CV2	Off	On*	Off
	SV1	Off	On	On
	SV2	Off	On	Off
RR RH ABS SOLENOID (ACT)	RR RH IN SOL	Off	Off	Off
	RR RH OUT SOL	Off	Off	Off
	CV1	Off	On	On
	CV2	Off	On*	Off
	SV1	Off	On	On
	SV2	Off	On	Off
RR LH ABS SOLENOID (ACT)	RR LH IN SOL	Off	Off	Off
	RR LH OUT SOL	Off	Off	Off
	CV1	Off	On	On
	CV2	Off	On*	Off
	SV1	Off	On	On
	SV2	Off	On	Off

*: On for 1 to 2 seconds after the select, and then Off.

NOTE:

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ABS MOTOR

- Select “On” and “Off”. Make sure motor relay and actuator relay operates as shown in table below.

Test item	Display item	Display	
		On	Off
ABS MOTOR	MOTOR RELAY	On	Off
	ACTUATOR RLY (Note)	On	On

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

WORK SUPPORT

Conditions	Description
ST ANGLE SENSOR ADJUSTMENT	Steering angle sensor neutral position adjustment can be performed. Refer to BRC-53, "Work Procedure" .

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

ECU DIAGNOSIS INFORMATION

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Reference Value

INFOID:000000009364896

VALUES ON THE DIAGNOSIS TOOL

CAUTION:

The display shows the control unit calculation data, so a normal value might be displayed even in the event the output circuit (harness) is open or short-circuited.

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
FR LH SENSOR	Wheel speed	0 [km/h, mph]	Vehicle stopped
		Nearly matches the speed meter display ($\pm 10\%$ or less)	Vehicle running (Note 1)
FR RH SENSOR	Wheel speed	0 [km/h, mph]	Vehicle stopped
		Nearly matches the speed meter display ($\pm 10\%$ or less)	Vehicle running (Note 1)
RR LH SENSOR	Wheel speed	0 [km/h, mph]	Vehicle stopped
		Nearly matches the speed meter display ($\pm 10\%$ or less)	Vehicle running (Note 1)
RR RH SENSOR	Wheel speed	0 [km/h, mph]	Vehicle stopped
		Nearly matches the speed meter display ($\pm 10\%$ or less)	Vehicle running (Note 1)
FR RH IN SOL	Operation status of all solenoid valves	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR RH OUT SOL	Operation status of all solenoid valves	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR LH IN SOL	Operation status of all solenoid valves	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR LH OUT SOL	Operation status of all solenoid valves	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR RH IN SOL	Operation status of all solenoid valves	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
RR RH OUT SOL	Operation status of all solenoid valves	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR LH IN SOL	Operation status of all solenoid valves	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR LH OUT SOL	Operation status of all solenoid valves	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
EBD WARN LAMP	EBD warning lamp (Note 2)	When EBD warning lamp is ON	On
		When EBD warning lamp is OFF	Off
STOP LAMP SW	Brake pedal operation	When brake pedal is depressed	On
		When brake pedal is not depressed	Off
MOTOR RELAY	Motor and motor relay operation	When the motor relay and motor are operating	On
		When the motor relay and motor are not operating	Off
ACTUATOR RLY	Actuator relay operation	When the actuator relay is operating	On
		When the actuator relay is not operating	Off
ABS WARN LAMP	ABS warning lamp (Note 2)	When ABS warning lamp is ON	On
		When ABS warning lamp is OFF	Off
OFF LAMP	VDC OFF indicator lamp (Note 2)	When VDC OFF indicator lamp is ON	On
		When VDC OFF indicator lamp is OFF	Off
OFF SW	VDC OFF switch	When VDC OFF switch is in ON	On
		When VDC OFF switch is in OFF	Off
SLIP/VDC LAMP	SLIP indicator lamp (Note 2)	When SLIP indicator lamp is ON	On
		When SLIP indicator lamp is OFF	Off
BATTERY VOLT	Battery voltage supplied to the ABS actuator and electric unit (control unit)	Ignition switch ON	10 – 16 V
GEAR	Manual mode gear position determined by TCM	1st gear 2nd gear 3rd gear 4th gear 5th gear	1 2 3 4 5
SLCT LVR POSI	Selector lever position.	Vehicle stopped	N/P
ENGINE SPEED	With engine running	When engine running	RPM
YAW RATE SEN	Yaw rate detected by yaw rate/side G sensor	When vehicle stop	Approx. 0 d/s
		When vehicle turning	-75 to 75 d/s
R POSI SIG	Transmission range switch signal ON/OFF condition	CVT shift position = R position	On
		CVT shift position = other than R position	Off

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
N POSI SIG	Transmission range switch signal ON/OFF condition	CVT shift position = N position	On
		CVT shift position = other than N position	Off
P POSI SIG	Transmission range switch signal ON/OFF condition	CVT shift position = P position	On
		CVT shift position = other than P position	Off
CV1	ABS actuator cut valve 1	When the cut valve is active	On
		When the cut valve is inactive	Off
CV2	ABS actuator cut valve 2	When the cut valve is active	On
		When the cut valve is inactive	Off
SV1	ABS actuator suction valve	When the suction valve is active	On
		When the suction valve is inactive	Off
SV2	ABS actuator suction valve 2	When the suction valve is active	On
		When the suction valve is inactive	Off
ACCEL POS SIG	Throttle actuator opening/closing is displayed (linked with accelerator pedal)	Accelerator pedal not depressed (ignition switch is ON)	0 %
		Depress accelerator pedal (ignition switch is ON)	0 - 100 %
SIDE G-SENSOR	Transverse G detected by side G sensor	Vehicle stopped	Approx. 0 m/s ²
		Vehicle turning right	Negative value (m/s ²)
		Vehicle turning left	Positive value (m/s ²)
STR ANGLE SIG	Steering angle detected by steering angle sensor	Straight-ahead	Approx. 0°
		Steering wheel turned	-720 to 720°
PRESS SENSOR	Brake fluid pressure detected by pressure sensor	With ignition switch turned ON and brake pedal released	Approx. 0 bar
		With ignition switch turned ON and brake pedal depressed	-40 to 300 bar
EBD SIGNAL	EBD operation	EBD is active	On
		EBD is inactive	Off
ABS SIGNAL	ABS operation	ABS is active	On
		ABS is inactive	Off
TCS SIGNAL	TCS operation	TCS is active	On
		TCS is inactive	Off
VDC SIGNAL	VDC operation	VDC is active	On
		VDC is inactive	Off
EBD FAIL SIG	EBD fail-safe signal	In EBD fail-safe	On
		EBD is normal	Off
ABS FAIL SIG	ABS fail-safe signal	In ABS fail-safe	On
		ABS is normal	Off
TCS FAIL SIG	TCS fail-safe signal	In TCS fail-safe	On
		TCS is normal	Off
VDC FAIL SIG	VDC fail-safe signal	In VDC fail-safe	On
		VDC is normal	Off

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
CRANKING SIG	Crank operation	Crank is active	On
		Crank is inactive	Off
FLUID LEV SW	Brake fluid level switch	When brake fluid level switch ON	On
		When brake fluid level switch OFF	Off

Note 1: Confirm tire pressure is normal.

Note 2: On and off timing for warning lamps and indicator lamps.

- Refer to [BRC-21, "VDC/TCS/ABS : VDC Function"](#).
- Refer to [BRC-23, "VDC/TCS/ABS : TCS Function"](#).
- Refer to [BRC-25, "VDC/TCS/ABS : ABS Function"](#).
- Refer to [BRC-26, "VDC/TCS/ABS : EBD Function"](#).

Fail-safe

INFOID:000000009364897

VDC AND TCS FUNCTIONS

VDC warning lamp in combination meter turns ON when a malfunction occurs in system [ABS actuator and electric unit (control unit)]. The control is suspended for VDC and TCS functions. However, ABS and EBD functions operate normally.

ABS FUNCTION

ABS warning lamp and SLIP indicator lamp in combination meter turn ON when a malfunction occurs in system [ABS actuator and electric unit (control unit)]. The control is suspended for VDC, TCS and ABS functions. However, EBD functions operate normally.

EBD FUNCTION

ABS warning lamp, brake warning lamp and SLIP indicator lamp in combination meter turn ON when a malfunction occurs in system [ABS actuator and electric unit (control unit)]. The control is suspended for VDC, TCS, ABS and EBD functions.

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

DTC	Malfunction detected condition	Fail-safe condition	
C1101	When an open circuit is detected in rear RH wheel sensor circuit.	The following functions are suspended: • VDC • ABS • EBD (only when both rear wheels are malfunctioning)	A
C1102	When an open circuit is detected in rear LH wheel sensor circuit.		B
C1103	When an open circuit is detected in front RH wheel sensor circuit.		C
C1104	When an open circuit is detected in front LH wheel sensor circuit.		D
C1105	- When a short circuit is detected in rear RH wheel sensor circuit. - When power supply voltage of rear RH wheel sensor is in following state. - Rear RH wheel sensor power supply voltage: $7.2\text{ V} \geq$ Rear RH wheel sensor power supply voltage - When distance between rear RH wheel sensor and rear RH wheel sensor rotor is large. - When installation of rear RH wheel sensor or rear RH wheel sensor rotor is not normal.		E
C1106	- When a short circuit is detected in rear LH wheel sensor circuit. - When power supply voltage of rear LH wheel sensor is in following state. - Rear LH wheel sensor power supply voltage: $7.2\text{ V} \geq$ Rear LH wheel sensor power supply voltage - When distance between rear LH wheel sensor and rear LH wheel sensor rotor is large. - When installation of rear LH wheel sensor or rear LH wheel sensor rotor is not normal.		BRC
C1107	- When a short circuit is detected in front RH wheel sensor circuit. - When power supply voltage of front RH wheel sensor is in following state. - Front RH wheel sensor power supply voltage: $7.2\text{ V} \geq$ Front RH wheel sensor power supply voltage - When distance between front RH wheel sensor and front RH wheel sensor rotor is large. - When installation of front RH wheel sensor or front RH wheel sensor rotor is not normal.		G
C1108	- When a short circuit is detected in front LH wheel sensor circuit. - When power supply voltage of front LH wheel sensor is in following state. - Front LH wheel sensor power supply voltage: $7.2\text{ V} \geq$ Front LH wheel sensor power supply voltage - When distance between front LH wheel sensor and front LH wheel sensor rotor is large. - When installation of front LH wheel sensor or front LH wheel sensor rotor is not normal.		H
C1109	- When ignition power supply voltage is in following state. - Ignition power supply voltage: $10\text{ V} \geq$ Ignition power supply voltage. - Ignition power supply voltage: $16\text{ V} \leq$ Ignition power supply voltage.		I
C1110	When there is an internal malfunction in the ABS actuator and electric unit (control unit).		J
C1111	When a malfunction is detected in motor or motor relay.		K
C1115	When difference in wheel speed between any wheel and others is detected when the vehicle is driven, because of installation of tires other than specified.	The following functions are suspended: • VDC • TCS • ABS • EBD	L
C1116	When stop lamp switch signal is not input when brake pedal operates.		M

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

DTC	Malfunction detected condition	Fail-safe condition
C1120	When a malfunction is detected in front LH ABS IN valve.	The following functions are suspended: • VDC • TCS • ABS • EBD
C1121	When a malfunction is detected in front LH ABS OUT valve.	
C1122	When a malfunction is detected in front RH ABS IN valve.	
C1123	When a malfunction is detected in front RH ABS OUT valve.	
C1124	When a malfunction is detected in rear LH ABS IN valve.	
C1125	When a malfunction is detected in rear LH ABS OUT valve.	
C1126	When a malfunction is detected in rear RH ABS IN valve.	
C1127	When a malfunction is detected in rear RH ABS OUT valve.	
C1130	When a malfunction is detected in ECM system.	The following functions are suspended: • VDC • TCS
C1140	When a malfunction is detected in actuator relay.	The following functions are suspended: • VDC • TCS • ABS • EBD
C1142	When a malfunction is detected in VDC pressure sensor.	The following functions are suspended: • VDC • TCS
C1143	When a malfunction is detected in steering angle sensor.	
C1144	When neutral position adjustment of steering angle sensor is not complete.	
C1145	When a malfunction is detected in yaw rate signal, or signal line of yaw rate/side/decel G sensor is open or shorted.	
C1146	When a malfunction is detected in side G signal, or signal line of yaw rate/side/decel G sensor is open or shorted.	
C1153	When ABS actuator and electric unit (control unit) is malfunctioning. (Pressure increase is too much or too little.)	The following functions are suspended: • VDC • TCS • ABS
C1155	When brake fluid level low signal is detected.	The following functions are suspended: • VDC • TCS
C1164	When a malfunction is detected in cut valve 1.	The following functions are suspended: • VDC • TCS • ABS • EBD
C1165	When a malfunction is detected in cut valve 2.	
C1166	When a malfunction is detected in suction valve 1.	
C1167	When a malfunction is detected in suction valve 2.	
C1170	When the information in ABS actuator and electric unit (control unit) is not the same.	The following functions are suspended: • VDC • TCS • ABS
U1000	When CAN communication signal is not continuously transmitted or received for 2 seconds or more.	The following functions are suspended: • VDC • TCS
U1002	When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or less.	
U1010	When detecting error during the initial diagnosis of CAN controller of ABS actuator and electric unit (control unit)	

DTC Inspection Priority Chart

INFOID:000000009364898

When multiple DTCs are displayed simultaneously, check each one using the following priority list.

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Priority	Detected item (DTC)
1	• U1000 CAN COMM CIRCUIT • U1002 SYSTEM COMM(CAN) • U1010 CAN CONTROLLER CIRCUIT
2	• C1110 CONTROLLER FAILURE • C1153 EMERGENCY BRAKE • C1170 VARIANT CORDING
3	• C1130 ENGINE SIGNAL 1 • C1144 ST ANG SEN SIGNAL
4	• C1109 BATTERY VOLTAGE [ABNORMAL] • C1111 PUMP MOTOR • C1140 ACTUATOR RLY
5	• C1101 RR RH SENSOR-1 • C1102 RR LH SENSOR-1 • C1103 FR RH SENSOR-1 • C1104 FR LH SENSOR-1 • C1105 RR RH SENSOR-2 • C1106 RR LH SENSOR-2 • C1107 FR RH SENSOR-2 • C1108 FR LH SENSOR-2 • C1115 ABS SENSOR [ABNORMAL SIGNAL] • C1116 STOP LAMP SW • C1120 FR LH IN ABS SOL • C1121 FR LH OUT ABS SOL • C1122 FR RH IN ABS SOL • C1123 FR RH OUT ABS SOL • C1124 RR LH IN ABS SOL • C1125 RR LH OUT ABS SOL • C1126 RR RH IN ABS SOL • C1127 RR RH OUT ABS SOL • C1142 PRESS SEN CIRCUIT • C1143 ST ANG SEN CIRCUIT • C1145 YAW RATE SENSOR • C1146 SIDE G-SEN CIRCUIT • C1164 CV1 • C1165 CV2 • C1166 SV1 • C1167 SV2
6	• C1155 BR FLUID LEVEL LOW

DTC Index

INFOID:000000009364899

DTC	Items (CONSULT screen terms)	Reference
C1101	RR RH SENSOR-1	BRC-55, "DTC Logic"
C1102	RR LH SENSOR-1	
C1103	FR RH SENSOR-1	
C1104	FR LH SENSOR-1	
C1105	RR RH SENSOR-2	BRC-59, "DTC Logic"
C1106	RR LH SENSOR-2	
C1107	FR RH SENSOR-2	
C1108	FR LH SENSOR-2	
C1109	BATTERY VOLTAGE [ABNORMAL]	BRC-61, "DTC Logic"
C1110	CONTROLLER FAILURE	BRC-63, "DTC Logic"
C1111	PUMP MOTOR	BRC-64, "DTC Logic"
C1115	ABS SENSOR [ABNORMAL SIGNAL]	BRC-66, "DTC Logic"

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

DTC	Items (CONSULT screen terms)	Reference
C1116	STOP LAMP SW	BRC-68, "DTC Logic"
C1120	FR LH IN ABS SOL	BRC-70, "DTC Logic"
C1121	FR LH OUT ABS SOL	BRC-72, "DTC Logic"
C1122	FR RH IN ABS SOL	BRC-70, "DTC Logic"
C1123	FR RH OUT ABS SOL	BRC-72, "DTC Logic"
C1124	RR LH IN ABS SOL	BRC-70, "DTC Logic"
C1125	RR LH OUT ABS SOL	BRC-72, "DTC Logic"
C1126	RR RH IN ABS SOL	BRC-70, "DTC Logic"
C1127	RR RH OUT ABS SOL	BRC-72, "DTC Logic"
C1130	ENGINE SIGNAL 1	BRC-74, "DTC Logic"
C1140	ACTUATOR RLY	BRC-75, "DTC Logic"
C1142	PRESS SEN CIRCUIT	BRC-77, "DTC Logic"
C1143	ST ANG SEN CIRCUIT	BRC-78, "DTC Logic"
C1144	ST ANG SEN SIGNAL	BRC-80, "DTC Logic"
C1145	YAW RATE SENSOR	BRC-81, "DTC Logic"
C1146	SIDE G-SEN CIRCUIT	
C1155	BR FLUID LEVEL LOW	BRC-82, "DTC Logic"
C1164	CV 1	BRC-84, "DTC Logic"
C1165	CV 2	
C1166	SV 1	
C1167	SV 2	
U1000	CAN COMM CIRCUIT	BRC-86, "DTC Logic"
U1002	SYSTEM COMM(CAN)	BRC-87, "DTC Logic"
U1010	CAN CONTROLLER CIRCUIT	BRC-88, "DTC Logic"

BRAKE CONTROL SYSTEM

< WIRING DIAGRAM >

[VDC/TCS/ABS]


WIRING DIAGRAM

BRAKE CONTROL SYSTEM

Wiring Diagram

INFOID:000000009364900

BRAKE CONTROL SYSTEM

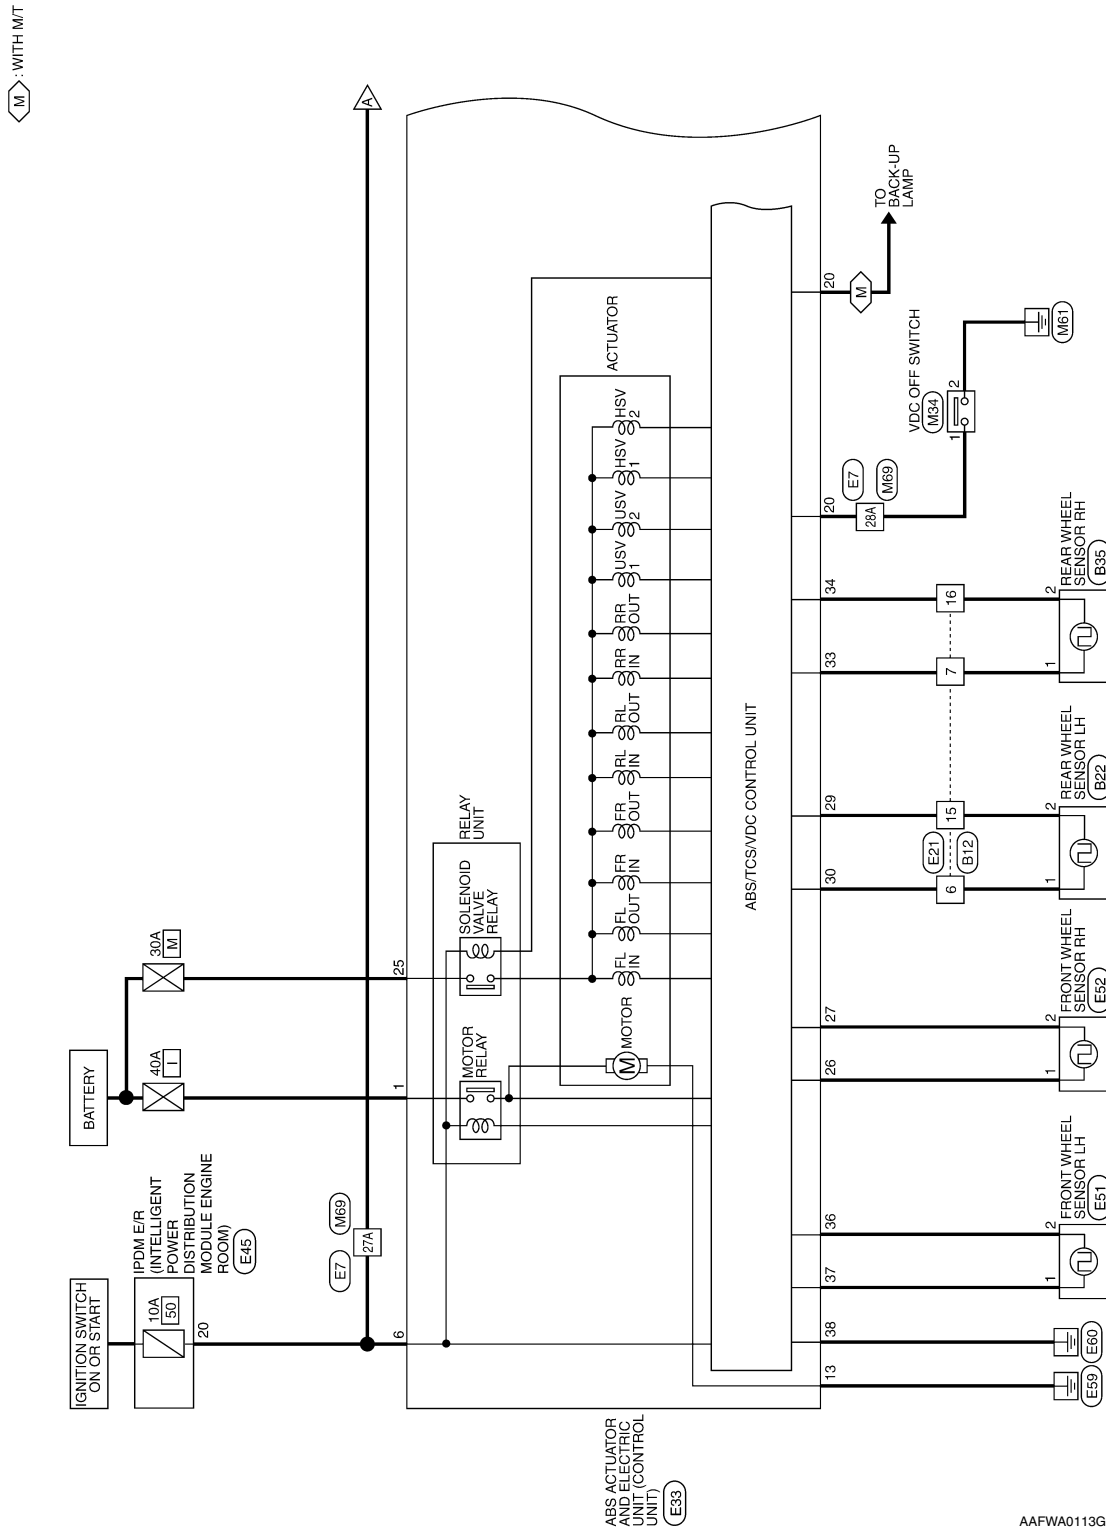


AAFWA0113GB

BRAKE CONTROL SYSTEM

< WIRING DIAGRAM >

[VDC/TCS/ABS]

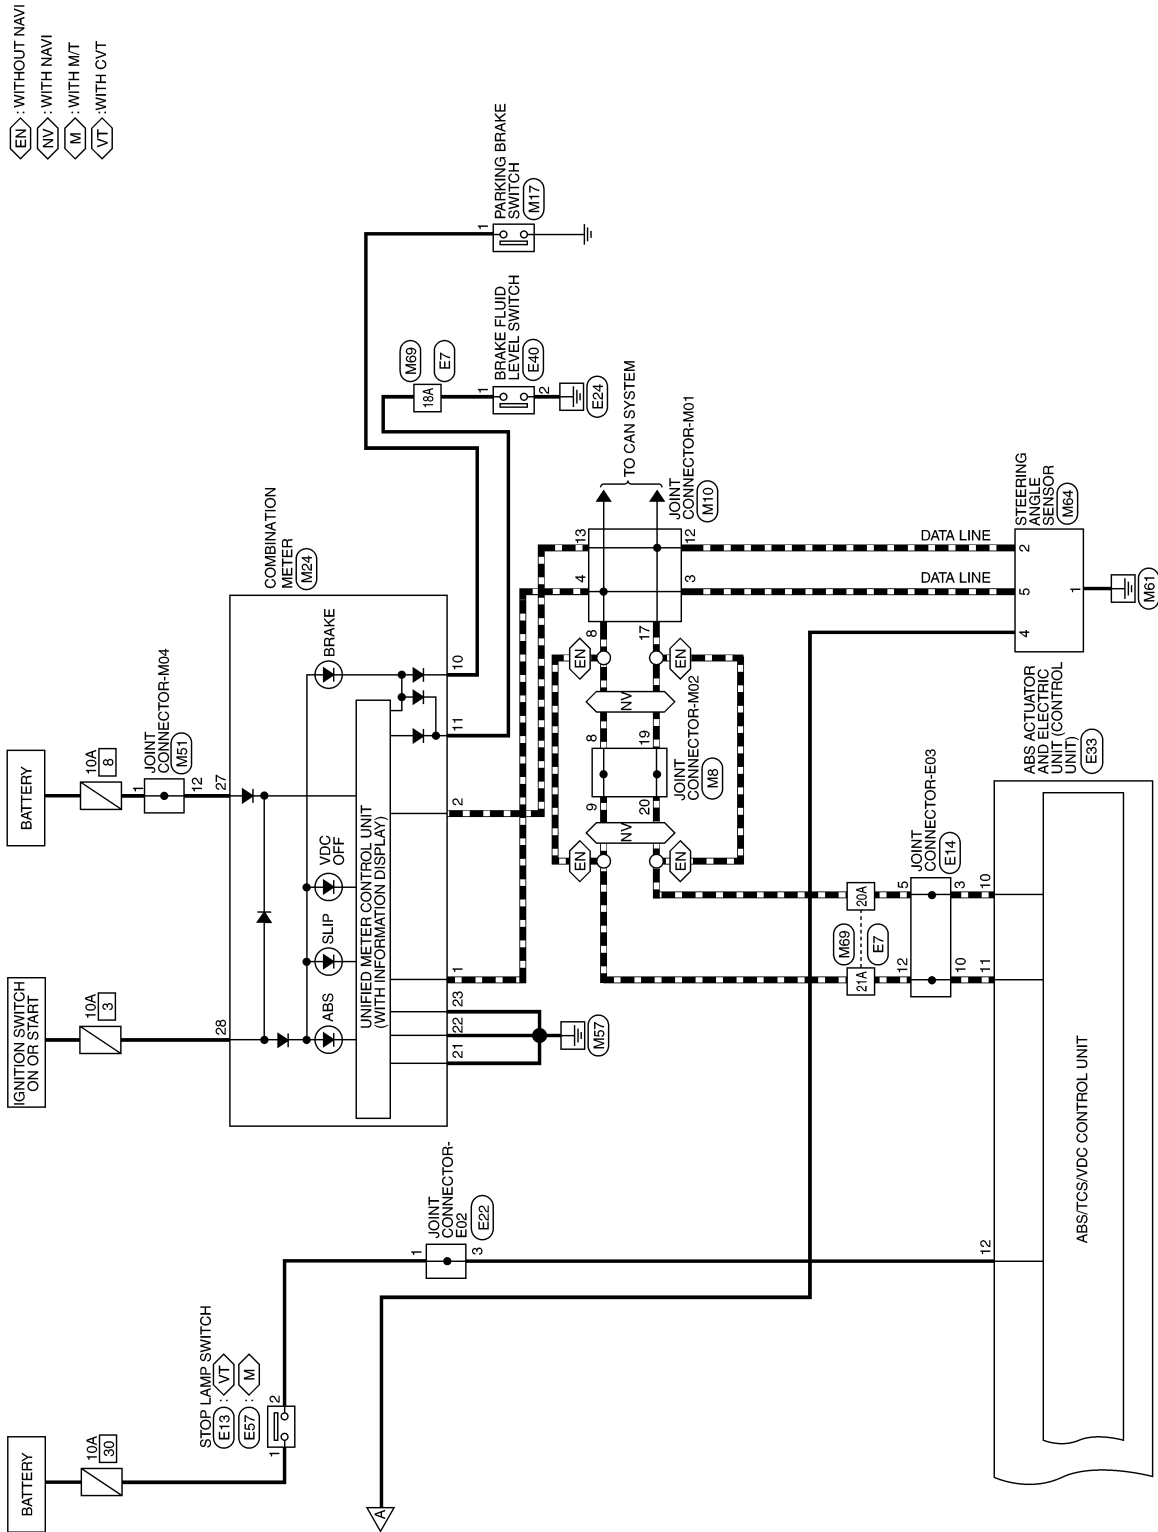

AAFWA0114GB

BRAKE CONTROL SYSTEM

< WIRING DIAGRAM >

[VDC/TCS/ABS]

BRAKE CONTROL SYSTEM CONNECTORS

Connector No.	M8
Connector Name	JOINT CONNECTOR-M02
Connector Color	GREEN



H.S.



H.S.

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--



Terminal No.	Color of Wire	Signal Name
8	L	-
9	L	-
19	P	-
20	P	-

Connector No.	M10
Connector Name	JOINT CONNECTOR-M01
Connector Color	BLUE

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--



Terminal No.	Color of Wire	Signal Name
3	L	-
4	L	-
8	L	-
12	P	-
13	P	-
17	P	-

Connector No.	M17
Connector Name	PARKING BRAKE SWITCH
Connector Color	BLACK



1

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE



20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21

Terminal No.	Color of Wire	Signal Name
1	SB	-

Terminal No.	Color of Wire	Signal Name
1	L	CAN-H
2	P	CAN-L
10	SB	PKB SW
11	BR	BRAKE OIL SW
21	B	GND (ILLUMINATION)
22	B	GND (POWER)
23	B	GND (CIRCUIT)
27	R/W	BAT
28	GR	IGN

Connector No.	M34
Connector Name	VDC OFF SWITCH
Connector Color	GRAY



6	5	4	3	2	1
---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	SB	-
2	B	-


AAFIA0171GB

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

BRAKE CONTROL SYSTEM

< WIRING DIAGRAM >

[VDC/TCS/ABS]

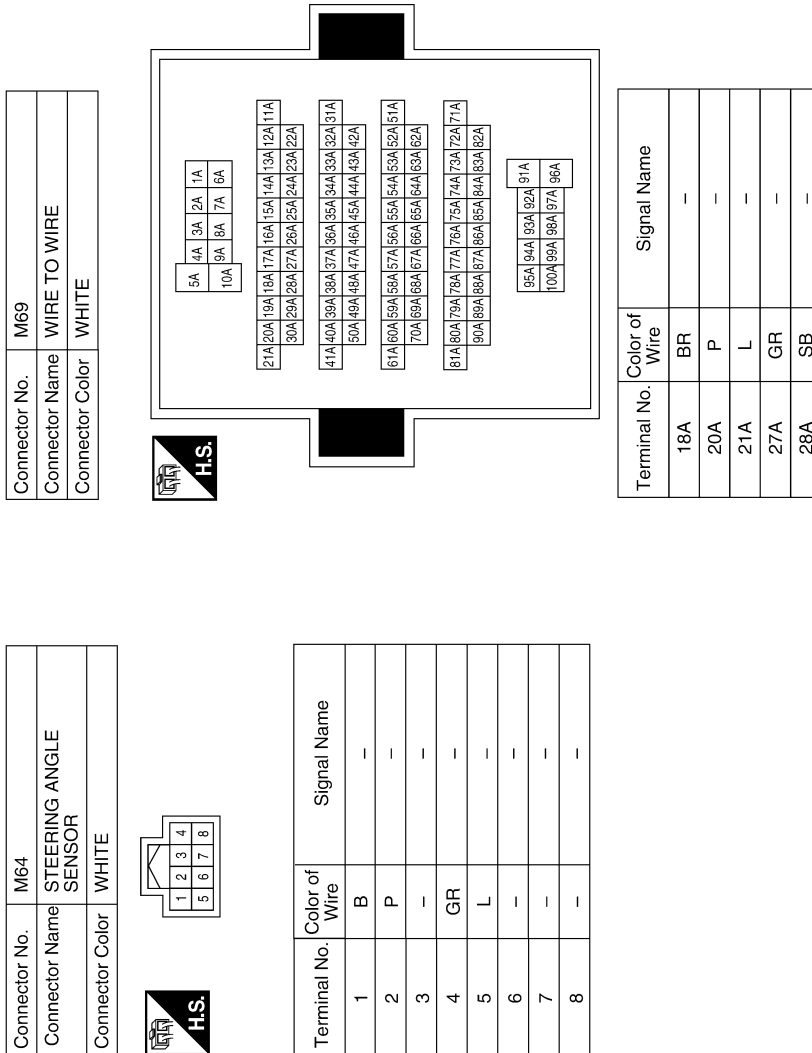

AAFIA0172GB

BRAKE CONTROL SYSTEM

< WIRING DIAGRAM >

[VDC/TCS/ABS]

Connector No.	E13
Connector Name	STOP LAMP SWITCH (WITH CVT)
Connector Color	WHITE


3	4
1	2




Terminal No.	Color of Wire	Signal Name
1	SB	—
2	LG	—

Terminal No.	Color of Wire	Signal Name
18A	LG	—
20A	P	—
21A	L	—
27A	BR	—
28A	R	—

Connector No.	E7
Connector Name	WIRE TO WIRE
Connector Color	WHITE

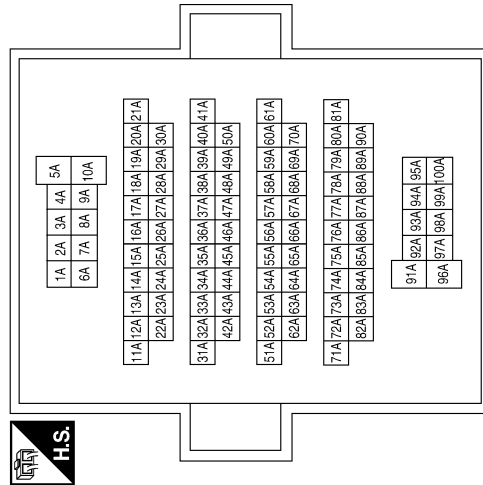


Connector No.	E22
Connector Name	JOINT CONNECTOR-E02
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	LG	—
3	LG	—

Connector No.	E21
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
6	B	—
7	SB	—
15	W	—
16	V	—

Connector No.	E14
Connector Name	JOINT CONNECTOR-E03
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
3	P	—
5	P	—
10	L	—
12	L	—

AAFA0173GB

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

BRAKE CONTROL SYSTEM


< WIRING DIAGRAM >

[VDC/TCS/ABS]

Terminal No.	Color of Wire	Signal Name
24	—	—
25	W	VALVE/ECU SUPPLY
26	LG	WSS FR SIG (-)
27	Y	WSS FR PWR (+)
28	—	—
29	W	WSS RL PWR (+)
30	B	WSS RL SIG (-)
31	—	—
32	—	—
33	SB	WSS RR SIG (-)
34	V	WSS RR PWR (+)
35	—	—
36	R	WSS FL PWR (+)
37	G	WSS FL SIG (-)
38	B	GND (SOL)

Terminal No.	Color of Wire	Signal Name
7	—	—
8	—	—
9	—	—
10	P	CAN-L
11	L	CAN-H
12	LG	BLS
13	B	GND (MTR)
14	—	—
15	—	—
16	—	—
17	—	—
18	—	—
19	—	—
20	R	VDC OFF SW
21	—	—
22	—	—
23	—	—

Connector No.	E33
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Color	BLACK

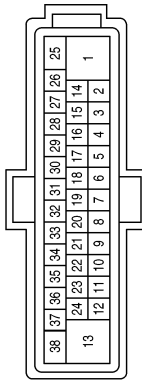

Terminal No.	Color of Wire	Signal Name
1	Y	MOTOR SUPPLY
2	SB	SHIFT R
3	—	—
4	—	—
5	—	—
6	BR	IGN

Connector No.	E51
Connector Name	FRONT WHEEL SENSOR LH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	G	—
2	R	—

Connector No.	E45
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
20	BR	ABS ECU

Connector No.	E40
Connector Name	BRAKE FLUID LEVEL SWITCH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	LG	—
2	B	—

AAFIA0174GB

BRAKE CONTROL SYSTEM

< WIRING DIAGRAM >

[VDC/TCS/ABS]

Connector No.	B12
Connector Name	WIRE TO WIRE
Connector Color	GRAY



1	2	3			4	5	6	7
8	9	10	11	12	13	14	15	16

Terminal No.	Color of Wire	Signal Name
6	V	-
7	SB	-
15	W	-
16	O	-

Connector No.	E57
Connector Name	STOP LAMP SWITCH (WITH M/T)
Connector Color	BLACK



2	1
---	---

Terminal No.	Color of Wire	Signal Name
1	SB	-
2	LG	-

Connector No.	E52
Connector Name	FRONT WHEEL SENSOR RH
Connector Color	BLACK



1	2
---	---

Terminal No.	Color of Wire	Signal Name
1	LG	-
2	Y	-

Connector No.	B35
Connector Name	REAR WHEEL SENSOR RH
Connector Color	BLACK



1	2
---	---

Terminal No.	Color of Wire	Signal Name
1	SB	-
2	O	-

Connector No.	B22
Connector Name	REAR WHEEL SENSOR LH
Connector Color	GRAY



1	2
---	---

Terminal No.	Color of Wire	Signal Name
1	V	-
2	W	-

AAFI0175GB

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000009364901

OVERALL SEQUENCE

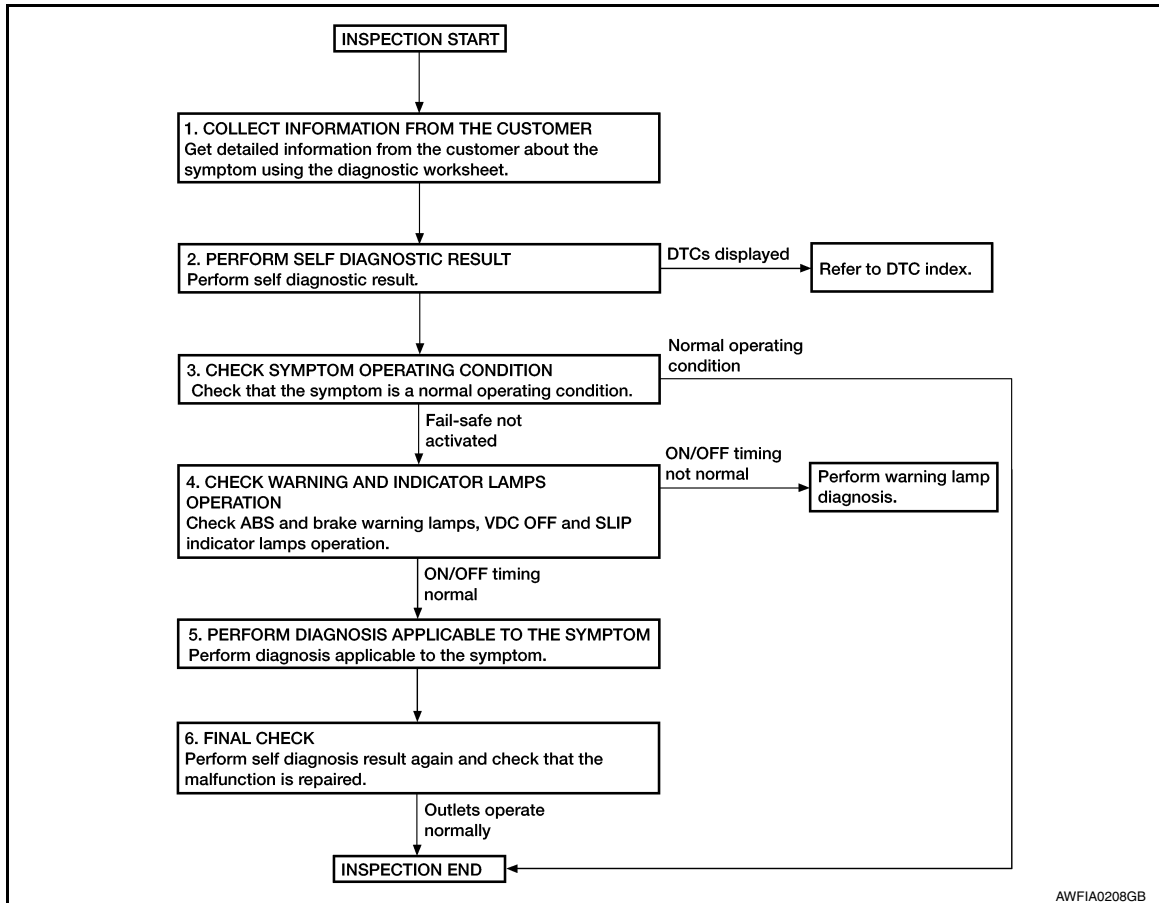

DETAILED FLOW

1.COLLECT INFORMATION FROM THE CUSTOMER

Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using the diagnostic worksheet. Refer to [BRC-51, "Diagnostic Work Sheet"](#).

>> GO TO 2.

2.PERFORM SELF DIAGNOSTIC RESULT

Perform self diagnostic result. Refer to [BRC-30, "CONSULT Function \(ABS\)"](#).

Are any DTCs displayed?

YES >> Refer to [BRC-41, "DTC Index"](#).

NO >> GO TO 3.

3.CHECK SYMPTOM OPERATING CONDITION

Check that the symptom is a normal operating condition. Refer to [BRC-104, "Description"](#).

Is the symptom a normal operating condition?

YES >> Inspection End.

NO >> GO TO 4.

4.CHECK WARNING AND INDICATOR LAMPS OPERATION

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

Check ABS and brake warning lamps, and VDC OFF and SLIP indicator lamps operation. Refer to [MWI-7. "METER SYSTEM : System Description"](#).

Is ON/OFF timing normal?

YES >> GO TO 5.

NO >> Perform warning lamp diagnosis. Refer to [BRC-93. "Component Function Check"](#) (ABS warning lamp), [BRC-94. "Component Function Check"](#) (brake warning lamp), [BRC-95. "Component Function Check"](#) (VDC OFF indicator lamp) or [BRC-96. "Component Function Check"](#) (SLIP indicator lamp).

5.PERFORM DIAGNOSIS APPLICABLE TO THE SYMPTOM

Perform diagnosis applicable to the symptom. Refer to [BRC-97. "Symptom Table"](#).

>> GO TO 6.

6.FINAL CHECK

Perform self diagnostic result again, and check that the malfunction is repaired. After checking, erase the self diagnosis memory. Refer to [BRC-30. "CONSULT Function \(ABS\)"](#).

>> Inspection End.

Diagnostic Work Sheet

INFOID:000000009364902

Customer name MR/MS	Model & Year	VIN	
Engine #	Trans.	Mileage	
Incident Date	Manuf. Date	In Service Date	
Symptoms	☐ Noise and vibration (from engine compartment) ☐ Noise and vibration (from axle)	☐ Warning / Indicator activate	☐ Firm pedal operation Large stroke pedal operation
	☐ TCS does not work (Rear wheels slip when accelerating)	☐ ABS does not work (Wheels lock when braking)	☐ Lack of sense of acceleration
Engine conditions	☐ When starting ☐ After starting		
Road conditions	☐ Low friction road (☐ Snow ☐ Gravel ☐ Other) ☐ Bumps / potholes		
Driving conditions	☐ Full-acceleration ☐ High speed cornering ☐ Vehicle speed: Greater than 10 km/h (6 MPH) ☐ Vehicle speed: 10 km/h (6 MPH) or less ☐ Vehicle is stopped		
Applying brake conditions	☐ Suddenly ☐ Gradually		
Other conditions	☐ Operation of electrical equipment ☐ Shift change ☐ Other descriptions		

SFIA3265E

ADDITIONAL SERVICE WHEN REPLACING ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< BASIC INSPECTION >

[VDC/TCS/ABS]

ADDITIONAL SERVICE WHEN REPLACING ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Description

INFOID:000000009364903

After replacing the ABS actuator and electric unit (control unit), perform the neutral position adjustment for the steering angle sensor. Refer to [BRC-53, "Work Procedure"](#).

Work Procedure

INFOID:000000009364904

1.PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

Perform the neutral position adjustment for the steering angle sensor.

>> Refer to [BRC-53, "Work Procedure"](#).

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

< BASIC INSPECTION >

[VDC/TCS/ABS]

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Description

INFOID:000000009364905

Refer to the table below to determine if adjustment of steering angle sensor neutral position is required.

×: Required —: Not required

Situation	Adjustment of steering angle sensor neutral position
Removing/Installing ABS actuator and electric unit (control unit)	—
Replacing ABS actuator and electric unit (control unit)	×
Removing/Installing steering angle sensor	×
Replacing steering angle sensor	×
Removing/Installing steering components	×
Replacing steering components	×
Removing/Installing suspension components	×
Replacing suspension components	×
Change tires to new ones	—
Tire rotation	—
Adjusting wheel alignment	×

Work Procedure

INFOID:000000009364906

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

CAUTION:

**To adjust neutral position of steering angle sensor, make sure to use CONSULT.
(Adjustment cannot be done without CONSULT).**

1.ALIGN THE VEHICLE STATUS

Stop vehicle with front wheels in straight-ahead position.

>> GO TO 2

2.PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

1. On the CONSULT screen, touch "WORK SUPPORT" and "ST ANG SEN ADJUSTMENT" in order.
2. Touch "START".

CAUTION:

Do not touch steering wheel while adjusting steering angle sensor.

3. After approximately 10 seconds, touch "END".

NOTE:

After approximately 60 seconds, it ends automatically.

4. Turn ignition switch OFF, then turn it ON again.

CAUTION:

Be sure to perform above operation.

>> GO TO 3

3.CHECK DATA MONITOR

1. Run vehicle with front wheels in straight-ahead position, then stop.
2. Select "DATA MONITOR". Then make sure "STR ANGLE SIG" is within $0 \pm 2.5^\circ$.

Is the steering angle within the specified range?

YES >> GO TO 4

NO >> Perform the neutral position adjustment for the steering angle sensor again, GO TO 1

4.ERASE THE SELF-DIAGNOSIS MEMORY

Erase the self-diagnosis memory of the ABS actuator and electric unit (control unit) and ECM.

- ABS actuator and electric unit (control unit): Refer to [BRC-30, "CONSULT Function \(ABS\)"](#).

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

< BASIC INSPECTION >

[VDC/TCS/ABS]

- ECM: Refer to [EC-60, "CONSULT Function"](#).

Are the memories erased?

YES >> Inspection End

NO >> Check the items indicated by the self-diagnosis.

C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

DTC/CIRCUIT DIAGNOSIS

C1101, C1102, C1103, C1104 WHEEL SENSOR

DTC Logic

INFOID:000000009641656

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1101	RR RH SENSOR-1	- When power supply voltage of rear wheel sensor RH is low. - When an open or shorted circuit is detected in rear wheel sensor RH circuit.	- Harness or connector - Wheel sensor - ABS actuator and electric unit (control unit)
C1102	RR LH SENSOR-1	- When power supply voltage of rear wheel sensor LH is low. - When an open or shorted circuit is detected in rear wheel sensor LH circuit.	
C1103	FR RH SENSOR-1	- When power supply voltage of front wheel sensor RH is low. - When an open or shorted circuit is detected in front wheel sensor RH circuit.	
C1104	FR LH SENSOR-1	- When power supply voltage of front wheel sensor LH is low. - When an open or shorted circuit is detected in front wheel sensor LH circuit.	

DTC CONFIRMATION PROCEDURE

1.CHECK SELF-DIAGNOSTIC RESULT

ⓘ With CONSULT.

- Start engine and drive vehicle at approximately 21 km/h (13 MPH) or more for approximately 5 minutes.
- Perform self-diagnostic result.

Is DTC C1101, C1102, C1103 or C1104 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-55. "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009641657

Regarding Wiring Diagram information, refer to [BRC-43. "Wiring Diagram"](#).

1.CONFIRM DTC

ⓘ With CONSULT

- Perform self-diagnostic result of ABS and record all active DTCs.
- Clear all DTCs.
- Perform DTC confirmation procedure. Refer to [BRC-55. "DTC Logic"](#).

Does DTC C1101, C1102, C1103 or C1104 reset?

- YES >> GO TO 2.
NO >> Refer to [GI-41. "Intermittent Incident"](#).

2.INSPECT WHEEL SENSOR

Inspect the suspect wheel sensor for damage or deformation.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace as necessary.

3.HARNESS AND CONNECTOR INSPECTION

C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

1. Disconnect ABS actuator and electric unit (control unit) connector E33 and wheel sensor connector of suspect wheel.
2. Check harness, connectors and terminals for corrosion, deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace as necessary.

4. CHECK WHEEL SENSOR OUTPUT SIGNAL

1. Connect ABS active wheel sensor tester (J-45741) to wheel sensor using appropriate adapter.
2. Turn on the ABS active wheel sensor tester power switch.

NOTE:

The green POWER indicator should illuminate. If the POWER indicator does not illuminate, replace the battery in the ABS active wheel sensor tester before proceeding.

3. Spin the wheel of the vehicle by hand and observe the red SENSOR indicator on the ABS active wheel sensor tester. The red SENSOR indicator should flash ON and OFF to indicate an output signal.

NOTE:

If the red SENSOR indicator illuminates but does not flash, reverse the polarity of the tester leads and retest.

Does the ABS active wheel sensor tester detect a signal?

YES >> GO TO 5.

NO >> Replace the wheel sensor. Refer to [BRC-105, "FRONT WHEEL SENSOR : Removal and Installation"](#) or [BRC-106, "REAR WHEEL SENSOR : Removal and Installation"](#).

5. CHECK WIRING HARNESS FOR SHORT TO VOLTAGE

1. Turn ignition switch ON.
2. Check voltage between wheel sensor harness connector terminals of suspect wheel and ground.

Wheel Sensor			Ground	Voltage
Wheel	Connector	Terminal		
Front LH	E51	1	—	0V
		2		
Front RH	E52	1		
		2		
Rear LH	B22	1		
		2		
Rear RH	B35	1		
		2		

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair the circuit.

6. CHECK WIRING HARNESS FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Check continuity between wheel sensor harness connector terminals of suspect wheel and ground.

Wheel Sensor			Ground	Continuity
Wheel	Connector	Terminal		

C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Front LH	E51	1	—	No
		2		
Front RH	E52	1		
		2		
Rear LH	B22	1		
		2		
Rear RH	B35	1		
		2		

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair the circuit.

7.CHECK WIRING HARNESS FOR SHORT BETWEEN CIRCUITS

Check continuity between wheel sensor harness connector terminals of suspect wheel.

Wheel Sensor		(+)	(-)	Continuity
Wheel	Connector	Terminal	Terminal	
Front LH	E51	1	2	No
Front RH	E52			
Rear LH	B22			
Rear RH	B35			

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair the circuit.

8.CHECK WIRING HARNESS FOR OPEN CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) harness connector E33 and harness connector of suspect wheel sensor.

Wheel sensor	ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
	Connector	Terminal	Connector	Terminal	Yes
Front LH	E33	37	E51	1	
		36		2	
26		E52	1		
27			2		
Rear LH		30	B22	1	
		29		2	
Rear RH		33	B35	1	
		34		2	

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair the circuit.

9.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between ABS actuator and electric unit (control unit) harness connector E33 terminal and ground.

C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
E33	6	—	Ignition switch ON	Battery voltage
			Ignition switch OFF	0V

Is the inspection result normal?

YES >> GO TO 10.

NO >> Check the following:

- 10A fuse No. 50 located in the IPDM E/R
- Harness between ABS actuator and electric unit (control unit) and IPDM E/R

10.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between ABS actuator and electric unit (control unit) connector E33 terminals and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E33	13	Ground	Yes
	38		

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace malfunctioning components.

11.CHECK WHEEL SENSOR INPUT VOLTAGE

1. Connect ABS actuator and electric unit (control unit) connector E33.
2. Turn ignition switch ON.
3. Check voltage between suspect wheel sensor harness connector terminals.

Wheel Sensor		(+)	(-)	Voltage (Approx.)
Wheel	Connector	Terminal	Terminal	
Front LH	E51	1	2	Battery voltage
Front RH	E52			
Rear LH	B22			
Rear RH	B35			

Is the inspection result normal?

YES >> Replace wheel sensor. Refer to [BRC-105, "FRONT WHEEL SENSOR : Removal and Installation"](#) or [BRC-106, "REAR WHEEL SENSOR : Removal and Installation"](#). Then, GO TO 12.

NO >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

12.CONFIRM REPAIR

Ⓔ With CONSULT

1. Clear all DTCs.
2. Perform DTC confirmation procedure. Refer to [BRC-55, "DTC Logic"](#).

Does DTC C1101, C1102, C1103 or C1104 reset?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

NO >> Inspection End.

C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1105, C1106, C1107, C1108 WHEEL SENSOR

DTC Logic

INFOID:000000009641658

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1105	RR RH SENSOR-2	- When distance between rear wheel sensor RH and rear wheel sensor RH rotor is large. - When installation of rear wheel sensor RH or rear wheel sensor RH rotor is not normal.	- Wheel sensor - ABS actuator and electric unit (control unit) - Sensor rotor
C1106	RR LH SENSOR-2	- When distance between rear wheel sensor LH and rear wheel sensor LH rotor is large. - When installation of rear wheel sensor LH or rear wheel sensor LH rotor is not normal.	
C1107	FR RH SENSOR-2	- When distance between front wheel sensor RH and front wheel sensor RH rotor is large. - When installation of front wheel sensor RH or front wheel sensor RH rotor is not normal.	
C1108	FR LH SENSOR-2	- When distance between front wheel sensor LH and front wheel sensor LH rotor is large. - When installation of front wheel sensor LH or front wheel sensor LH rotor is not normal.	

DTC CONFIRMATION PROCEDURE

1.CHECK SELF-DIAGNOSTIC RESULT

ⓘ With CONSULT.

- Start engine and drive vehicle at approximately 21 km/h (13 MPH) or more for approximately 5 minutes.
- Perform self-diagnostic result.

Is DTC C1105, C1106, C1107 or C1108 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-59, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009641659

Regarding Wiring Diagram information, refer to [BRC-43, "Wiring Diagram"](#).

1.CONFIRM DTC

ⓘ With CONSULT

- Perform self-diagnostic result of ABS and record all active DTCs.
- Clear all DTCs.
- Perform DTC confirmation procedure. Refer to [BRC-55, "DTC Logic"](#).

Does DTC C1105, C1106, C1107 or C1108 reset?

- YES >> GO TO 2.
NO >> Refer to GI-XX, "Intermittent Incident".

2.CHECK TIRE PRESSURE AND TIRE WEAR

Check tires for excessive wear and proper inflation. Refer to [WT-41, "Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace as necessary.

3.CHECK WHEEL SENSOR

Check wheel sensor for the following:

- Proper installation

C1105, C1106, C1107, C1108 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

- Physical damage
- Contamination

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace as necessary.

4.CHECK SENSOR ROTOR

Check sensor rotor for the following:

- Contamination
- Physical damage (missing teeth, cracks, etc.)
- Foreign material
- Looseness

Is the inspection result normal?

YES >> Replace the wheel sensor. Refer to [BRC-105, "FRONT WHEEL SENSOR : Removal and Installation"](#) or [BRC-106, "REAR WHEEL SENSOR : Removal and Installation"](#). Then, GO TO 5.

NO >> Repair or replace as necessary.

5.CONFIRM REPAIR

④ With CONSULT

1. Clear all DTCs.
2. Perform DTC confirmation procedure. Refer to [BRC-55, "DTC Logic"](#).

Does DTC C1105, C1106, C1107 or C1108 reset?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

NO >> Inspection End.

C1109 POWER AND GROUND SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1109 POWER AND GROUND SYSTEM

DTC Logic

INFOID:000000009637502

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1109	BATTERY VOLTAGE [ABNORMAL]	- When ignition voltage is 10 V or less. - When ignition voltage is 16 V or more.	- Harness or connector - ABS actuator and electric unit (control unit) - Fuse - Ignition power supply system - Battery

DTC CONFIRMATION PROCEDURE

1.CHECK SELF DIAGNOSTIC RESULT

Ⓐ With CONSULT.

- Turn the ignition switch ON.
- Perform self diagnostic result.

Is DTC C1109 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-61, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637503

Regarding Wiring Diagram information, refer to [BRC-43, "Wiring Diagram"](#).

1.CONNECTOR INSPECTION

- Turn ignition switch OFF.
- Disconnect ABS actuator and electric unit (control unit) connectors.
- Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace as necessary.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) IGNITION POWER SUPPLY CIRCUIT

Check voltage between ABS actuator and electric unit (control unit) connector E33 terminal 6 and ground.

ABS actuator and electric unit (control unit)		Ground	Condition	Voltage
Connector	Terminal			
E33	6	—	Ignition switch ON	Battery voltage
			Ignition switch OFF	0V

Is the inspection result normal?

- YES >> GO TO 3
NO >> Repair or replace malfunctioning components.

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

- Turn ignition switch OFF.
- Check continuity between ABS actuator and electric unit (control unit) connector E33 terminals 13, 38 and ground.

C1109 POWER AND GROUND SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E33	13	Ground	Yes
	38		

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning components.

C1110, C1153, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) [VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

C1110, C1153, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

DTC Logic

INFOID:0000000009637504

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1110	CONTROLLER FAILURE	When there is an internal malfunction in the ABS actuator and electric unit (control unit).	• ABS actuator and electric unit (control unit)
C1153	EMERGENCY BRAKE	When ABS actuator and electric unit (control unit) is malfunctioning. (Pressure increase is too much or too little)	
C1170	VARIANT CODING	In a case where VARIANT CODING is different.	

DTC CONFIRMATION PROCEDURE

1.CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
CONTROLLER FAILURE
EMERGENCY BRAKE
VARIANT CODING

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-63, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000009637505

1.REPLACE ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

CAUTION:

Replace ABS actuator and electric unit (control unit) when self diagnostic result shows items other than those applicable.

- >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

C1111 PUMP MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1111 PUMP MOTOR

DTC Logic

INFOID:000000009637506

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1111	PUMP MOTOR	- When a malfunction is detected in motor or motor relay. - When a low pressure malfunction is detected in accumulator. - When a malfunction is detected in accumulator pressure sensor.	- Harness or connector - ABS actuator and electric unit (control unit) - Fusible link - Battery power supply system - Motor/accumulator assembly

DTC CONFIRMATION PROCEDURE

1.CHECK SELF DIAGNOSTIC RESULT

④ With CONSULT.

1. Turn ignition switch OFF.
2. Depress brake pedal 20 times or more.
3. Start the engine and wait for 3 minutes or more.
4. Perform self diagnostic result.

Is DTC C1111 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-64, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637507

Regarding Wiring Diagram information, refer to [BRC-109, "Removal and Installation"](#).

1.CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connectors.
3. Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace as necessary.

2.CHECK ABS MOTOR AND MOTOR RELAY BATTERY POWER SUPPLY

Check voltage between ABS actuator and electric unit (control unit) connector E33 terminal 1 and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E33	1	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace malfunctioning components.

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E33 terminals 13, 38 and ground.

C1111 PUMP MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E33	13	Ground	Yes
	38		

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning components.

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

C1115 ABS SENSOR [ABNORMAL SIGNAL]

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1115 ABS SENSOR [ABNORMAL SIGNAL]

DTC Logic

INFOID:000000009637508

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1115	ABS SENSOR [ABNORMAL SIGNAL]	When difference in wheel speed between any wheel and others is detected while the vehicle is driven, because of installation of tires other than specified.	• Harness or connector • Wheel sensor • Sensor rotor • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.CHECK SELF DIAGNOSTIC RESULT

④ With CONSULT.

1. Start engine and drive vehicle at approximately 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform self diagnostic result.

Is DTC C1115 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-66, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637509

Regarding Wiring Diagram information, refer to [BRC-43, "Wiring Diagram"](#).

CAUTION:

Do not check between wheel sensor terminals.

1.CONNECTOR INSPECTION

1. Disconnect ABS actuator and electric unit (control unit) connector E33 and wheel sensor connector of wheel with DTC.
2. Check terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace as necessary.

2.CHECK WHEEL SENSOR OUTPUT SIGNAL

1. Connect ABS active wheel sensor tester (J-45741) to wheel sensor using appropriate adapter.
2. Turn on the ABS active wheel sensor tester power switch.

NOTE:

The green POWER indicator should illuminate. If the POWER indicator does not illuminate, replace the battery in the ABS active wheel sensor tester before proceeding.

3. Spin the wheel of the vehicle by hand and observe the red SENSOR indicator on the ABS active wheel sensor tester. The red SENSOR indicator should flash on and off to indicate an output signal.

NOTE:

If the red SENSOR indicator illuminates but does not flash, reverse the polarity of the tester leads and retest.

Does the ABS active wheel sensor tester detect a signal?

- YES >> GO TO 3
NO >> Replace the wheel sensor. Refer to [BRC-105, "FRONT WHEEL SENSOR : Removal and Installation"](#) (front) or [BRC-106, "REAR WHEEL SENSOR : Removal and Installation"](#) (rear).

3.CHECK TIRES

Check the inflation pressure, wear and size of each tire.

Is the inspection result normal?

C1115 ABS SENSOR [ABNORMAL SIGNAL]

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

YES >> GO TO 4

NO >> Adjust tire pressure, or replace tire(s).

4.CHECK WIRING HARNESS FOR SHORT CIRCUIT

Check continuity between wheel sensor connector terminals and ground of wheel with DTC.

Wheel Sensor			Ground	Continuity
Wheel	Connector	Terminal		
Front LH	E51	1	—	No
		2		
Front RH	E52	1		
		2		
Rear LH	B22	1		
		2		
Rear RH	B35	1		
		2		

Is the inspection result normal?

YES >> GO TO 5

NO >> Repair the circuit.

5.CHECK WIRING HARNESS FOR OPEN CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E33 and wheel sensor connector of wheel with DTC.

Wheel sensor	ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
	Connector	Terminal	Connector	Terminal	Yes
Front LH	E33	37	E51	1	
		36		2	
Front RH		26	E52	1	
		27		2	
Rear LH		30	B22	1	
		29		2	
Rear RH		33	B35	1	
		34		2	

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

NO >> Repair the circuit.

C1116 STOP LAMP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1116 STOP LAMP SWITCH

DTC Logic

INFOID:000000009637510

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1116	STOP LAMP SW	When stop lamp switch circuit is open.	• Harness or connector • Stop lamp switch • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
STOP LAMP SW

Is above displayed on the self-diagnosis display?

YES >> Proceed to diagnosis procedure. Refer to [BRC-68. "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637511

Regarding Wiring Diagram information, refer to [BRC-43. "Wiring Diagram"](#).

1.CONNECTOR INSPECTION

1. Disconnect stop lamp switch connector and ABS actuator and electric unit (control unit) connector.
2. Check terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace as necessary.

2.CHECK STOP LAMP SWITCH CIRCUIT

1. Connect stop lamp switch connector.
2. Check voltage between ABS actuator and electric unit (control unit) connector E33 terminal 12 and ground.

ABS actuator and electric unit (control unit)		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
E33	12	—	Brake pedal depressed	Battery voltage
			Brake pedal released	0V

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109. "Removal and Installation"](#).

NO >> GO TO 3

3.CHECK STOP LAMP SWITCH CIRCUIT FOR OPEN

1. Disconnect stop lamp switch connector.
2. Check continuity between ABS actuator and electric unit (control unit) connector E33 terminal 12 and stop lamp switch connector E13 (with CVT) or E57 (with M/T) terminal 2.

C1116 STOP LAMP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		Stop lamp switch		Continuity
Connector	Terminal	Connector	Terminal	
E33	12	E13 (with CVT)	2	Yes
		E57 (with M/T)		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace as necessary.

4.CHECK STOP LAMP SWITCH CIRCUIT FOR SHORT

Check continuity between ABS actuator and electric unit (control unit) connector E33 terminal 12 and ground.

ABS actuator and electric unit (control unit)		Ground	Continuity
Connector	Terminal		
E33	12	—	No

Is the inspection result normal?

YES >> Replace stop lamp switch.

NO >> Repair harness or connectors.

C1120, C1122, C1124, C1126 ABS IN VALVE SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1120, C1122, C1124, C1126 ABS IN VALVE SYSTEM

DTC Logic

INFOID:000000009637512

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1120	FR LH IN ABS SOL	When a malfunction is detected in front LH ABS IN valve.	• Harness or connector • ABS actuator and electric unit (control unit) • Fusible link • Battery power supply system
C1122	FR RH IN ABS SOL	When a malfunction is detected in front RH ABS IN valve.	
C1124	RR LH IN ABS SOL	When a malfunction is detected in rear LH ABS IN valve.	
C1126	RR RH IN ABS SOL	When a malfunction is detected in rear RH ABS IN valve.	

DTC CONFIRMATION PROCEDURE

1.CHECK SELF DIAGNOSTIC RESULT

 With CONSULT.

1. Turn ignition switch ON.
2. Perform self diagnostic result.

Is DTC C1120, C1122, C1124 or C1126 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-70, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637513

Regarding Wiring Diagram information, refer to [BRC-43, "Wiring Diagram"](#).

1.CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check connector and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace as necessary.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) BATTERY POWER SUPPLY

Check voltage between ABS actuator and electric unit (control unit) connector E33 terminal 25 and ground.

ABS actuator and electric unit (control unit)		—	Voltage (Approx.)
Connector	Terminal		
E33	25	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace malfunctioning components.

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E33 terminals 13, 38 and ground.

C1120, C1122, C1124, C1126 ABS IN VALVE SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E33	13	Ground	Yes
	38		

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning components.

BRC

C1121, C1123, C1125, C1127 ABS OUT VALVE SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1121, C1123, C1125, C1127 ABS OUT VALVE SYSTEM

DTC Logic

INFOID:000000009637514

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1121	FR LH OUT ABS SOL	When a malfunction is detected in front LH ABS OUT valve.	• Harness or connector • ABS actuator and electric unit (control unit) • Fusible link • Battery power supply system
C1123	FR RH OUT ABS SOL	When a malfunction is detected in front RH ABS OUT valve.	
C1125	RR LH OUT ABS SOL	When a malfunction is detected in rear LH ABS OUT valve.	
C1127	RR RH OUT ABS SOL	When a malfunction is detected in rear RH ABS OUT valve.	

DTC CONFIRMATION PROCEDURE

1.CHECK SELF DIAGNOSTIC RESULT

 With CONSULT.

1. Turn ignition switch ON.
2. Perform self diagnostic result.

Is DTC C1121, C1123, C1125 or C1127 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-72, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637515

Regarding Wiring Diagram information, refer to [BRC-43, "Wiring Diagram"](#).

1.CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check connector and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace as necessary.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) BATTERY POWER SUPPLY

Check voltage between ABS actuator and electric unit (control unit) connector E33 terminal 25 and ground.

ABS actuator and electric unit (control unit)		—	Voltage (Approx.)
Connector	Terminal		
E33	25	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace malfunctioning components.

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E33 terminals 13, 38 and ground.

C1121, C1123, C1125, C1127 ABS OUT VALVE SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E33	13	Ground	Yes
	38		

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning components.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BRC

C1130 ENGINE SIGNAL

DTC Logic

INFOID:000000009637516

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1130	ENGINE SIGNAL 1	When a malfunction is detected in ECM system.	• ECM • ABS actuator and electric unit (control unit) • CAN communication line

DTC CONFIRMATION PROCEDURE

1. CHECK SELF DIAGNOSTIC RESULT

Ⓔ With CONSULT.

1. Turn ignition switch ON.
2. Perform self diagnostic result.

Is DTC C1130 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-74, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637517

1. CHECK SELF DIAGNOSTIC RESULT FOR ENGINE SYSTEM

Ⓔ With CONSULT.

Perform self diagnostic result. Refer to [BRC-30, "CONSULT Function \(ABS\)"](#).

Are any ECM DTCs detected?

- YES >> Refer to [BRC-41, "DTC Index"](#).
 NO >> GO TO 2.

2. CHECK SELF DIAGNOSTIC RESULT FOR ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Ⓔ With CONSULT.

1. Perform self diagnostic result and erase DTCs.
2. Turn ignition switch OFF.
3. Start engine and drive vehicle for a short period of time.
4. Check that malfunction indicator lamp (MIL) turns OFF.
5. Stop vehicle and perform self diagnostic result.

Is DTC C1130 detected?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).
 NO >> Check pin terminals and connection of connectors for abnormal conditions. Repair or replace malfunctioning components.

C1140 ACTUATOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1140 ACTUATOR RELAY SYSTEM

DTC Logic

INFOID:000000009637518

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1140	ACTUATOR RLY	When a malfunction is detected in actuator relay.	• Harness or connector • ABS actuator and electric unit (control unit) • Fusible link • Battery power supply system

DTC CONFIRMATION PROCEDURE

1.CHECK SELF DIAGNOSTIC RESULT

④ With CONSULT.

1. Turn ignition switch ON.
2. Perform self diagnostic result.

Is DTC C1140 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-75, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637519

Regarding Wiring Diagram information, refer to [BRC-43, "Wiring Diagram"](#).

1.CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check connector and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace as necessary.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) BATTERY POWER SUPPLY

Check voltage between ABS actuator and electric unit (control unit) connector E33 terminal 25 and ground.

ABS actuator and electric unit (control unit)		—	Voltage (Approx.)
Connector	Terminal		
E33	25	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace malfunctioning components.

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E33 terminals 13, 38 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E33	13	Ground	Yes
	38		

C1140 ACTUATOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).
- NO >> Repair or replace malfunctioning components.

C1142 PRESS SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1142 PRESS SENSOR

DTC Logic

INFOID:000000009637520

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1142	PRESS SEN CIRCUIT	When a malfunction is detected in master cylinder pressure sensor.	• Stop lamp switch system • ABS actuator and electric unit (control unit) • Brake system

DTC CONFIRMATION PROCEDURE

1.CHECK SELF DIAGNOSTIC RESULT

Ⓔ With CONSULT.

1. Turn ignition switch ON.
2. Perform self diagnostic result.

Is DTC C1142 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-77, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637521

1.CHECK STOP LAMP SWITCH SYSTEM

Check stop lamp switch system. Refer to [BRC-68, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace malfunctioning components.

2.CHECK BRAKE FLUID LEAKAGE

Check brake fluid leakage. Refer to [BR-11, "Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace malfunctioning components.

3.CHECK BRAKE PEDAL

Check brake pedal. Refer to [BR-8, "Inspection and Adjustment"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace malfunctioning components.

4.CHECK SELF DIAGNOSTIC RESULT

Ⓔ With CONSULT.

1. Turn ignition switch ON.
2. Perform self diagnostic result.
3. Erase DTCs.
4. Start engine and drive vehicle for a short period of time.
5. Turn ignition switch ON.
6. Perform self diagnostic result.

Is DTC C1142 detected?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).
NO >> Inspection End.

C1143 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1143 STEERING ANGLE SENSOR

DTC Logic

INFOID:000000009637522

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1143	ST ANG SEN CIRCUIT	When a malfunction is detected in steering angle sensor.	• Harness or connector • Steering angle sensor • ABS actuator and electric unit (control unit) • Fuse • Ignition power supply system • CAN communication line

DTC CONFIRMATION PROCEDURE

1.CHECK SELF DIAGNOSTIC RESULT

 With CONSULT.

1. Turn ignition switch ON.
2. Perform self diagnostic result.

Is DTC C1143 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-78, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637523

Regarding Wiring Diagram information, refer to [BRC-43, "Wiring Diagram"](#).

1.CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) and steering angle sensor connectors.
3. Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace as necessary.

2.CHECK STEERING ANGLE SENSOR MOUNTING CONDITION

Check steering angle sensor mounting condition.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace malfunctioning components.

3.CHECK STEERING ANGLE SENSOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect steering angle sensor connector.
3. Turn ignition switch ON.
4. Check voltage between steering angle sensor connector M64 terminal 4 and ground.

Steering angle sensor		—	Voltage (Approx.)
Connector	Terminal		
M64	4	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 5.

C1143 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

NO >> GO TO 4.

4.CHECK STEERING ANGLE SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector E45.
3. Check continuity between steering angle sensor connector M64 terminal 4 and IPDM E/R connector E45 terminal 20.

Steering angle sensor		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M64	4	E45	20	Yes

4. Check continuity between steering angle sensor connector M64 terminal 4 and ground.

Steering angle sensor		—	Continuity
Connector	Terminal		
M64	4	Ground	No

Is the inspection result normal?

YES >> Perform trouble diagnosis for ignition power supply. Refer to [PCS-22, "Wiring Diagram"](#) (with I-Key) or [PCS-51, "Wiring Diagram"](#) (without I-Key).

NO >> Repair or replace malfunctioning components.

5.CHECK STEERING ANGLE SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between steering angle sensor connector M64 terminal 1 and ground.

Steering angle sensor		—	Continuity
Connector	Terminal		
M64	1	Ground	Yes

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace malfunctioning components.

6.CHECK CAN COMMUNICATION LINE

Check "STRG BRANCH LINE CIRCUIT". Refer to [LAN-65, "Diagnosis Procedure"](#) (type 1) or [LAN-78, "Diagnosis Procedure"](#) (type 2) or [LAN-79, "Diagnosis Procedure"](#) (type 3).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning components.

C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT

DTC Logic

INFOID:000000009637524

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1144	ST ANG SEN SIGNAL	When neutral position adjustment of steering angle sensor is not complete.	• Harness or connector • Steering angle sensor • ABS actuator and electric unit (control unit) • Incomplete neutral position adjustment of steering angle sensor

DTC CONFIRMATION PROCEDURE

1.CHECK SELF DIAGNOSTIC RESULT

④With CONSULT.

1. Turn ignition switch ON.
2. Perform self diagnostic result.

Is DTC C1144 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-80, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637525

1.ADJUST THE NEUTRAL POSITION OF STEERING ANGLE SENSOR

Perform neutral position adjustment of steering angle sensor. Refer to [BRC-53, "Work Procedure"](#).

>> GO TO 2.

2.CHECK SELF DIAGNOSTIC RESULT

④With CONSULT.

Perform self diagnostic result.

Is DTC C1144 detected?

- YES >> GO TO 3.
NO >> Inspection End.

3.CHECK STEERING ANGLE SENSOR SYSTEM

Check steering angle sensor system. Refer to [BRC-78, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).
NO >> Repair or replace malfunctioning components.

C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR

DTC Logic

INFOID:000000009637526

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1145	YAW RATE SENSOR	- When a malfunction is detected in yaw rate signal. - When yaw rate signal is not continuously received for 2 seconds or more. - When side G signal is not continuously received for 2 seconds or more. - When decel G signal is not continuously received for 2 seconds or more.	- Harness or connector - Yaw rate/side/decel G sensor - ABS actuator and electric unit (control unit) - Ignition power supply system - Fuse
C1146	SIDE G-SEN CIRCUIT	When a malfunction is detected in side/decel G signal.	

DTC CONFIRMATION PROCEDURE

1.CHECK SELF DIAGNOSTIC RESULT

④With CONSULT.

- Turn ignition switch OFF to ON.
- Perform self diagnostic result.

Is DTC C1145 or C1146 detected?

YES >> Proceed to diagnosis procedure. Refer to [BRC-81. "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637527

1.REPLACE ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Replace ABS actuator and electric unit (control unit).

>> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109. "Removal and Installation"](#).

C1155 BR FLUID LEVEL LOW

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1155 BR FLUID LEVEL LOW

DTC Logic

INFOID:000000009637528

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1155	BR FLUID LEVEL LOW	Brake fluid level is low or communication line between the ABS actuator and electric unit (control unit) and brake fluid level switch is open or shorted.	• Harness or connector • Brake fluid level switch

DTC CONFIRMATION PROCEDURE

1.CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
BR FLUID LEVEL LOW

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-82, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637529

Regarding Wiring Diagram information, refer to [BRC-43, "Wiring Diagram"](#).

NOTE:

Check brake fluid level in brake reservoir tank before starting inspection.

1.CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect combination meter and brake fluid level switch connectors.
3. Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace as necessary.

2.CHECK BRAKE FLUID LEVEL SWITCH

Perform the brake fluid level switch component inspection. Refer to [BRC-83, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3
NO >> Replace brake fluid level switch. Refer to [BRC-9, "Brake Fluid Level Switch"](#).

3.CHECK BRAKE FLUID LEVEL SWITCH HARNESS

1. Check continuity between combination meter connector and brake fluid level switch connector E40 terminal 1.

Combination meter		Brake fluid level switch		Continuity
Connector	Terminal	Connector	Continuity	
M24	11	E40	1	Yes

2. Check continuity between combination meter connector and ground.

C1155 BR FLUID LEVEL LOW

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Combination meter		—	Continuity
Connector	Terminal		
M24	11	Ground	No

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair or replace malfunctioning components.

4.CHECK BRAKE FLUID LEVEL SWITCH GROUND CIRCUIT

Check continuity between brake fluid level switch connector E40 terminal 2 and ground.

Brake fluid level switch		—	Continuity
Connector	Terminal		
E40	2	Ground	Yes

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#)

NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:0000000009637530

1.CHECK BRAKE FLUID LEVEL SWITCH

1. Turn ignition switch OFF.
2. Disconnect brake fluid level switch connector.
3. Check continuity between brake fluid level switch terminals 1 and 2.

Brake fluid level switch terminals	Condition	Continuity
1— 2	Brake fluid reservoir full	No
	Brake fluid reservoir empty	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace brake fluid level switch. Refer to [BR-27, "Exploded View"](#).

C1164, C1165, C1166, C1167 CV/SV SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1164, C1165, C1166, C1167 CV/SV SYSTEM

DTC Logic

INFOID:000000009637531

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1164	CV 1	When a malfunction is detected in cut valve 1.	• Harness or connector • ABS actuator and electric unit (control unit) • Fusible link • Battery power supply system
C1165	CV 2	When a malfunction is detected in cut valve 2.	
C1166	SV 1	When a malfunction is detected in suction valve 1.	
C1167	SV 2	When a malfunction is detected in suction valve 2.	

DTC CONFIRMATION PROCEDURE

1.CHECK SELF DIAGNOSTIC RESULT

 With CONSULT.

1. Turn ignition switch OFF to ON.
2. Perform self diagnostic result.

Is DTC C1164, C1165, C1166 or C1167 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-84, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637532

Regarding Wiring Diagram information, refer to [BRC-43, "Wiring Diagram"](#).

1.CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check connector and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace as necessary.

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) BATTERY POWER SUPPLY

Check voltage between ABS actuator and electric unit (control unit) connector E33 terminal 25 and ground.

ABS actuator and electric unit (control unit)		—	Voltage (Approx.)
Connector	Terminal		
E33	25	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace malfunctioning components.

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E33 terminals 13, 38 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E33	13	Ground	Yes
	38		

C1164, C1165, C1166, C1167 CV/SV SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).
- NO >> Repair or replace malfunctioning components.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BRC

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

U1000 CAN COMM CIRCUIT

DTC Logic

INFOID:000000009637533

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
U1000	CAN COMM CIRCUIT	When CAN communication signal is not continuously received for 2 seconds or more	CAN communication system malfunction

Diagnosis Procedure

INFOID:000000009637534

1. CHECK DTC DETECTION

Ⓔ With CONSULT.

1. Turn ignition switch ON.
2. Perform self diagnostic result.

Is DTC U1000 detected?

- YES >> Proceed to diagnosis procedure. Refer to [LAN-15. "Trouble Diagnosis Flow Chart"](#).
- NO >> Refer to [GI-41. "Intermittent Incident"](#).

U1002 SYSTEM COMM (CAN)

DTC Logic

INFOID:000000009637535

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1002	SYSTEM COMM(CAN)	When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or less.	- CAN communication line - ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2.DTC REPRODUCTION PROCEDURE

 With CONSULT

- Turn the ignition switch ON.
- Perform self diagnosis for "ABS".

Is DTC "U1002" detected?

- YES >> Proceed to [BRC-87. "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009637536

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.

1.CHECK CAN DIAGNOSIS SUPPORT MONITOR

- Select "ABS" and "CAN Diagnosis Support Monitor" in order with CONSULT.
- Check malfunction history between each control unit connected to ABS actuator and electric unit (control unit).

Check the result of "PAST"?

All items are "OK">>Refer to [GI-41. "Intermittent Incident"](#).

"TRANSMIT DIAG" is other than "OK">>GO TO 2.

A control unit other than ABS actuator and electric unit (control unit) is anything other than "OK">>GO TO 3.

2.CHECK TRANSMITTING SIDE UNIT

Check the ABS actuator and electric unit (control unit) harness connector terminals 10 and 11 for damage or loose connection.

Is the inspection result normal?

- YES >> Erase self-diagnosis results. Then perform self-diagnosis for "ABS" with CONSULT.
 NO >> Recheck terminals for damage or loose connection.

3.CHECK APPLICABLE CONTROL UNIT

Check damage or loose connection of each CAN communication line harness connector terminals.

Is the inspection result normal?

- YES >> Erase self-diagnosis results. Then perform self-diagnosis for applicable control unit with CONSULT.
 NO >> Recheck terminals for damage or loose connection.

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

U1010 CONTROL UNIT (CAN)

Description

INFOID:000000009681922

Initial diagnosis of ABS actuator and electric unit (control unit)

DTC Logic

INFOID:000000009681923

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
U1010	CONTROL UNIT (CAN)	When detecting error during the initial diagnosis of CAN controller of ABS actuator and electric unit (control unit).	ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF-DIAGNOSIS

Ⓔ With CONSULT.

1. Turn ignition switch ON.
2. Perform self diagnostic result.

Is DTC U1010 detected?

YES >> Proceed to diagnosis procedure. Refer to [BRC-88, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009681924

1.REPLACE ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

>> Inspection End.

PARKING BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

PARKING BRAKE SWITCH

Component Function Check

INFOID:000000009637537

1.CHECK PARKING BRAKE SWITCH OPERATION

Check that brake warning lamp in combination meter turns ON/OFF when parking brake is actuated.

Is the inspection result normal?

YES >> Inspection End.

NO >> Proceed to diagnosis procedure. Refer to [BRC-89, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009637538

Regarding Wiring Diagram information, refer to [BRC-43, "Wiring Diagram"](#).

1.CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect combination meter and parking brake switch connectors.
3. Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace as necessary.

2.CHECK PARKING BRAKE SWITCH

Check parking brake switch. Refer to [BRC-90, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace parking brake switch. Refer to [PB-9, "Removal and Installation"](#).

3.CHECK PARKING BRAKE SWITCH SIGNAL

☞With CONSULT.

1. Connect combination meter connector and parking brake switch connectors.
2. Turn ignition switch ON.
3. In "DATA MONITOR" select "PARK BRAKE SW" and check parking brake switch signal.

Condition	DATA MONITOR
Actuate parking brake	On
Release parking brake	Off

Is the inspection result normal?

YES >> Refer to [BRC-50, "Work Flow"](#).

NO >> GO TO 4.

4.CHECK PARKING BRAKE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter and parking brake switch connectors.
3. Check continuity between combination meter connector and parking brake switch connector M17 terminal 1.

Combination meter		Parking brake switch		Continuity
Connector	Terminal	Connector	Terminal	
M24	10	M17	1	Yes

4. Check continuity between combination meter connector and ground.

PARKING BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Combination meter		—	Continuity
Connector	Terminal		
M24	10	Ground	No

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-54. "Removal and Installation"](#).
NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:0000000009637539

1. CHECK PARKING BRAKE SWITCH

1. Turn ignition switch OFF.
2. Disconnect parking brake switch connector.
3. Check continuity between parking brake switch terminal 1 and ground.

Parking brake switch terminal	—	Condition	Continuity
1	Ground	Parking brake actuated	Yes
		Parking brake released	No

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace parking brake switch. Refer to [PB-9. "Removal and Installation"](#).

VDC OFF SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

VDC OFF SWITCH

Component Function Check

INFOID:000000009637540

1.CHECK VDC OFF SWITCH OPERATION

Check that VDC OFF indicator lamp in combination meter turns ON/OFF when VDC OFF switch is operated.

Is the inspection result normal?

YES >> Inspection End.

NO >> Proceed to diagnosis procedure. Refer to [BRC-91, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009637541

Regarding Wiring Diagram information, refer to [BRC-43, "Wiring Diagram"](#).

1.CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) and VDC OFF switch connectors.
3. Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace as necessary.

2.CHECK VDC OFF SWITCH

Check VDC OFF switch. Refer to [BRC-92, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace VDC OFF switch. Refer to [BRC-111, "Removal and Installation"](#).

3.CHECK VDC OFF SWITCH SIGNAL

☞With CONSULT.

1. Connect ABS actuator and electric unit (control unit) and VDC OFF switch connectors.
2. Turn ignition switch ON.
3. In "DATA MONITOR" select "OFF SW" and check VDC OFF switch signal.

Condition	DATA MONITOR
VDC OFF switch is pressed and released	On
VDC OFF switch is pressed and released again	Off

Is the inspection result normal?

YES >> Refer to [BRC-50, "Work Flow"](#).

NO >> GO TO 4.

4.CHECK VDC OFF SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) and VDC OFF switch connectors.
3. Check continuity between ABS actuator and electric unit (control unit) connector E33 terminal 20 and VDC OFF switch connector M34 terminal 1.

ABS actuator and electric unit (control unit)		VDC OFF switch		Continuity
Connector	Terminal	Connector	Terminal	
E33	20	M34	1	Yes

4. Check continuity between ABS actuator and electric unit (control unit) connector terminal E33 terminal 20 and ground.

VDC OFF SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E33	20	Ground	No

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning components.

5.CHECK VDC OFF SWITCH GROUND CIRCUIT

Check continuity between VDC OFF switch connector M34 terminal 2 and ground.

VDC OFF switch		—	Continuity
Connector	Terminal		
M34	2	Ground	Yes

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:0000000009637542

1.CHECK VDC OFF SWITCH

1. Turn ignition switch OFF.
2. Disconnect VDC OFF switch connector.
3. Check continuity between terminals of VDC OFF switch connector.

VDC OFF switch terminals	Condition	Continuity
1 – 2	VDC OFF switch pressed	Yes
	VDC OFF switch released	No

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace VDC OFF switch. Refer to [BRC-111, "Removal and Installation"](#).

ABS WARNING LAMP

Component Function Check

INFOID:0000000009637543

1.CHECK ABS WARNING LAMP FUNCTION

Check that ABS warning lamp in combination meter turns ON for approximately 2 seconds after ignition switch is turned ON.

Is the inspection result normal?

YES >> Inspection End.

NO >> Proceed to diagnosis procedure. Refer to [BRC-93, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000009637544

1.PERFORM THE SELF-DIAGNOSIS

 With CONSULT.

Perform self diagnostic result.

Are any DTCs detected?

YES >> Refer to [BRC-41, "DTC Index"](#).

NO >> GO TO 2.

2.CHECK COMBINATION METER

Check if indication and operation of combination meter are normal. Refer to [MWI-7, "METER SYSTEM : System Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

NO >> Replace combination meter. Refer to [MWI-54, "Removal and Installation"](#).

BRAKE WARNING LAMP**Component Function Check**

INFOID:000000009637545

1.CHECK BRAKE WARNING LAMP FUNCTION (1)

Check that brake warning lamp in combination meter turns ON for approximately 2 seconds after ignition switch is turned ON.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to [BRC-94, "Diagnosis Procedure"](#).

2.CHECK BRAKE WARNING LAMP FUNCTION (2)

Check that brake warning lamp in combination meter turns ON/OFF when parking brake is operated.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check parking brake switch system. Refer to [BRC-89, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009637546

1.PERFORM THE SELF-DIAGNOSIS

Ⓔ With CONSULT.

Perform self diagnostic result.

Are any DTCs detected?

YES >> Refer to [BRC-41, "DTC Index"](#).

NO >> GO TO 2.

2.CHECK COMBINATION METER

Check if indication and operation of combination meter are normal. Refer to [MWI-7, "METER SYSTEM : System Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

NO >> Replace combination meter. Refer to [MWI-54, "Removal and Installation"](#).

VDC OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

VDC OFF INDICATOR LAMP

Component Function Check

INFOID:0000000009637547

1.CHECK VDC OFF INDICATOR LAMP FUNCTION

Check that VDC OFF indicator lamp in combination meter turns ON for approximately 2 seconds after ignition switch is turned ON.

Is the inspection result normal?

YES >> Inspection End.

NO >> Proceed to diagnosis procedure. Refer to [BRC-95. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000009637548

1.PERFORM THE SELF-DIAGNOSIS

 With CONSULT.

Perform self diagnostic result.

Are any DTCs detected?

YES >> Refer to [BRC-41. "DTC Index"](#).

NO >> GO TO 2.

2.CHECK COMBINATION METER

Check if indication and operation of combination meter are normal. Refer to [MWI-7. "METER SYSTEM : System Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109. "Removal and Installation"](#).

NO >> Replace combination meter. Refer to [MWI-54. "Removal and Installation"](#).

SLIP INDICATOR LAMP

Component Function Check

INFOID:000000009637549

1.CHECK SLIP INDICATOR LAMP FUNCTION

Check that slip indicator lamp in combination meter turns ON for approximately 2 seconds after ignition switch is turned ON.

Is the inspection result normal?

YES >> Inspection End.

NO >> Proceed to diagnosis procedure. Refer to [BRC-96, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009637550

1.PERFORM THE SELF-DIAGNOSIS

 With CONSULT.

Perform self diagnostic result.

Are any DTCs detected?

YES >> Refer to [BRC-41, "DTC Index"](#).

NO >> GO TO 2.

2.CHECK COMBINATION METER

Check if indication and operation of combination meter are normal. Refer to [MWI-7, "METER SYSTEM : System Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109, "Removal and Installation"](#).

NO >> Replace combination meter. Refer to [MWI-54, "Removal and Installation"](#).

SYMPTOM DIAGNOSIS

VDC/TCS/ABS

Symptom Table

INFOID:000000009364960

If ABS warning lamp and SLIP indicator lamp turn ON, perform self-diagnosis.

Symptom	Check item	Reference
Excessive ABS function operation frequency	Brake force distribution	BRC-98, "Diagnosis Procedure"
	Looseness of front and rear axle	
	Wheel sensor and rotor system	
Unexpected pedal reaction	Brake pedal stroke	BRC-99, "Diagnosis Procedure"
	Make sure the braking force is sufficient when the ABS is not operating.	
The braking distance is long	Check stopping distance when the ABS is not operating.	BRC-100, "Diagnosis Procedure"
ABS function does not operate (Note 1)	ABS actuator and electric unit (control unit)	BRC-101, "Diagnosis Procedure"
Pedal vibration or ABS operation sound occurs (Note 2)	Brake pedal	BRC-102, "Diagnosis Procedure"
	ABS actuator and electric unit (control unit)	
Vehicle jerks during VDC/TCS/ABS control	ABS actuator and electric unit (control unit)	BRC-103, "Diagnosis Procedure"
	TCM	
	ECM	

NOTE:

- 1: The ABS does not operate when the speed is 10 km/h (6 MPH) or less.
- 2: Under the following conditions, ABS is activated and vibration is felt when brake pedal is lightly depressed (just place a foot on it). However, this is normal.
 - When shifting gears
 - When driving on slippery road
 - During cornering at high speed
 - When passing over bumps or grooves [approximately 50 mm (1.97 in) or more]
 - When pulling away just after starting engine [at approximately 10 km/h (6 MPH) or higher]

EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

Diagnosis Procedure

INFOID:000000009364961

1.CHECK START

Check front and rear brake force distribution using a brake tester.

Is the inspection result normal?

YES >> GO TO 2

NO >> Check brake system.

2.CHECK FRONT AND REAR AXLE

Make sure that there is no excessive play in the front and rear axles. Refer to front: [FAX-7. "Inspection"](#), rear: [RAX-5. "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace malfunctioning components.

3.CHECK WHEEL SENSOR AND SENSOR ROTOR

Check the following:

- Wheel sensor installation for damage
- Sensor rotor installation for damage
- Wheel sensor connector
- Wheel sensor harness

Is the inspection result normal?

YES >> GO TO 4

- NO >> • Replace wheel sensor [BRC-105. "FRONT WHEEL SENSOR : Removal and Installation"](#) (front) or [BRC-108. "REAR SENSOR ROTOR : Removal and Installation"](#) (rear).
- Replace sensor rotor [BRC-108. "FRONT SENSOR ROTOR : Removal and Installation"](#) (front) or [BRC-108. "REAR SENSOR ROTOR : Removal and Installation"](#) (rear).
- Repair harness.

4.CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp is turned off after the ignition switch is turned ON or when driving.

Is the inspection result normal?

YES >> Inspection End.

NO >> Perform self diagnostic result. Refer to [BRC-30. "CONSULT Function \(ABS\)"](#).

UNEXPECTED PEDAL REACTION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

UNEXPECTED PEDAL REACTION

Diagnosis Procedure

INFOID:000000009364962

1.CHECK BRAKE PEDAL STROKE

Check brake pedal stroke. Refer to [BR-8, "Inspection and Adjustment"](#).

Is the stroke too big?

- YES >> • Bleed air from brake line and hose. Refer to [BR-12, "Bleeding Brake System"](#).
• Check brake pedal, brake booster, and master cylinder for mount play, looseness, brake system fluid leakage, etc. Refer to brake pedal: [BR-8, "Inspection and Adjustment"](#) or brake booster assembly [BR-14, "Inspection"](#).

NO >> GO TO 2

2.CHECK ABS FUNCTION

1. Disconnect ABS actuator and electric unit (control unit) connector to deactivate ABS.
2. Check if braking force is normal in this condition.
3. Reconnect connector after inspection.

Is the inspection result normal?

- YES >> Inspection End.
NO >> Check brake system.

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

THE BRAKING DISTANCE IS LONG

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

THE BRAKING DISTANCE IS LONG

Diagnosis Procedure

INFOID:000000009364963

CAUTION:

The stopping distance on slippery road surfaces might be longer with the ABS operating than when the ABS is not operating.

1. CHECK ABS FUNCTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector to deactivate ABS.
3. Check stopping distance.
4. After inspection, reconnect connector.

Is the inspection result normal?

- YES >> Inspection End.
NO >> Check brake system.

ABS FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

ABS FUNCTION DOES NOT OPERATE

Diagnosis Procedure

INFOID:000000009364964

CAUTION:

ABS does not operate when speed is 10 km/h (6 MPH) or lower.

1. CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp turns OFF after ignition switch is turned ON or when driving.

Is the inspection result normal?

YES >> Inspection End.

NO >> Perform self diagnostic result. Refer to [BRC-30, "CONSULT Function \(ABS\)"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BRC

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

Diagnosis Procedure

INFOID:000000009364965

CAUTION:

Under the following conditions, ABS is activated and vibration is felt when brake pedal is lightly depressed (just place a foot on it). However, this is normal.

- When shifting gears
- When driving on slippery road
- During cornering at high speed
- When passing over bumps or grooves [approximately 50 mm (1.97 in) or more]
- When pulling away just after starting engine [at approximately 10 km/h (6 MPH) or higher]

1. SYMPTOM CHECK 1

Check that there are pedal vibrations when the engine is started.

Do symptoms occur?

YES >> GO TO 2

NO >> Inspect the brake pedal.

2. SYMPTOM CHECK 2

Check that there are ABS operation noises when the engine is started.

Do symptoms occur?

YES >> GO TO 3

NO >> Perform self diagnostic result. Refer to [BRC-30. "CONSULT Function \(ABS\)".](#)

3. SYMPTOM CHECK 3

Check symptoms when electrical component (headlamps, etc.) switches are operated.

Do symptoms occur?

YES >> Check if there is a radio, antenna, antenna lead wire, or wiring close to the control unit. If there is, move it farther away.

NO >> Inspection End.

VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

Diagnosis Procedure

INFOID:000000009364966

1.SYMPTOM CHECK

Check if the vehicle jerks during VDC/TCS/ABS control.

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 2

2.CHECK SELF DIAGNOSTIC RESULT

Perform self diagnostic result of ABS actuator and electric unit (control unit). Refer to [BRC-30. "CONSULT Function \(ABS\)".](#)

Are self diagnostic results indicated?

YES >> Check corresponding items, make repairs, and perform ABS actuator and electric unit (control unit) self diagnostic result again. Refer to [BRC-30. "CONSULT Function \(ABS\)".](#)

NO >> GO TO 3

3.CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminals for deformation, disconnection, looseness, etc.
4. Securely reconnect connector and perform ABS actuator and electric unit (control unit) self diagnostic result. Refer to [BRC-30. "CONSULT Function \(ABS\)".](#)

Are self diagnostic results indicated?

YES >> If poor contact, damage, open or short circuit of connector terminal is found, repair or replace.

NO >> GO TO 4

4.CHECK ECM AND TCM SELF DIAGNOSTIC RESULT

1. Perform ECM self diagnostic result. Refer to [EC-60. "CONSULT Function".](#)
2. Perform TCM self diagnostic result. Refer to [TM-93. "CONSULT Function".](#)

Are self diagnostic results indicated?

YES >> Check the corresponding items.

- ECM: Refer to [EC-86. "DTC Index".](#)

- TCM: Refer to [TM-93. "CONSULT Function".](#)

NO >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-109. "Removal and Installation".](#)

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

NORMAL OPERATING CONDITION

Description

INFOID:000000009364967

Symptom	Result
Slight vibrations are felt on the brake pedal and operation noises occur when VDC, TCS or ABS is activated.	This is a normal condition due to the VDC, TCS or ABS activation.
Stopping distance is longer than that of vehicles without ABS when the vehicle drives on rough, gravel, or snow-covered (fresh, deep snow) roads.	
The brake pedal moves and generates noises when TCS or VDC is activated due to rapid acceleration or sharp turn.	
The brake pedal vibrates and motor operation noises occur from the engine room after the engine starts and just after the vehicle starts.	This is normal, and it is caused by the ABS operation check.
Depending on the road conditions, the driver may experience a sluggish feel in the brake pedal.	This is normal, because TCS places the highest priority on the optimum traction (stability).
TCS may activate momentarily if wheel speed changes when driving where road friction coefficient varies, when downshifting, or when fully depressing accelerator pedal.	
The ABS warning lamp and SLIP indicator lamp may turn ON when the vehicle is subject to strong shaking or large vibration, such as when the vehicle is rotating on a turntable or located on a ship while the engine is running.	In this case, restart the engine on a normal road. If the normal condition is restored, there is no malfunction. At that time, erase the self-diagnosis memory.
VDC may not operate normally or the ABS warning lamp, and SLIP indicator lamp may illuminate when driving on a road that is extremely slanted (e.g., bank in a circuit course).	
A malfunction may occur in the yaw rate/side/decel G sensor system when the vehicle turns sharply, such as during a spin turn, axle turn, or drift driving, while the VDC function is OFF (VDC OFF indicator lamp illuminated).	
The vehicle speed will not increase even though the accelerator pedal is depressed, when inspecting the speedometer on a 2-wheel chassis dynamometer.	Normal (Deactivate the VDC/TCS function before performing an inspection on a chassis dynamometer.)
SLIP indicator lamp may simultaneously turn ON when low tire pressure warning lamp turns ON.	This is not a VDC system error but results from characteristic change of tire.


REMOVAL AND INSTALLATION

WHEEL SENSOR

FRONT WHEEL SENSOR

FRONT WHEEL SENSOR : Exploded View

INFOID:000000009364968

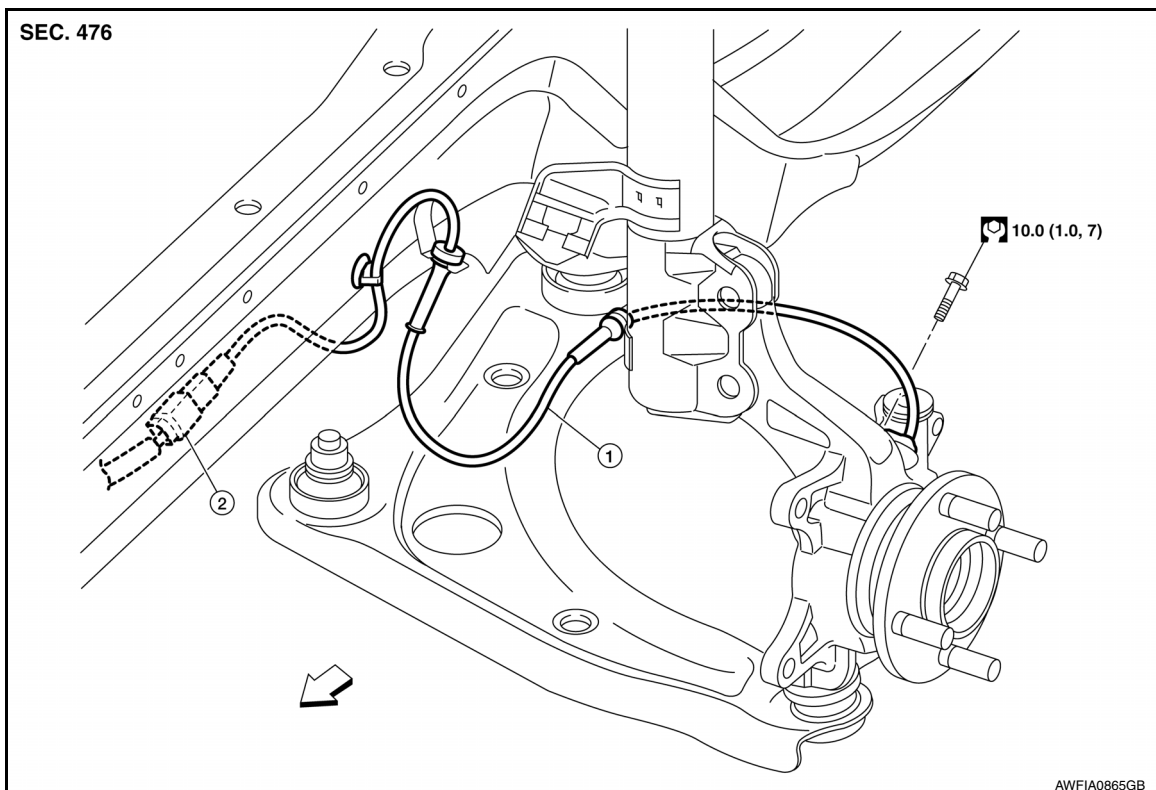

1. Front wheel sensor

2. Harness connector

↩ Front

FRONT WHEEL SENSOR : Removal and Installation

INFOID:000000009364969

CAUTION:

- Be careful not to damage front wheel sensor edge and sensor rotor teeth.
- When removing the front wheel hub, first remove the front wheel sensor from the steering knuckle. Failure to do so may result in damage to the front wheel sensor, making the front wheel sensor inoperative.
- Pull out the front wheel sensor, being careful to turn it as little as possible. Do not pull on the front wheel sensor harness.
- Before installation, check if foreign objects, such as iron fragments, are adhered to the pick-up part of the front wheel sensor or to the inside of the hole in the steering knuckle for the front wheel sensor, or if a foreign object is caught in the surface of the sensor rotor. Fix as necessary and then install the front wheel sensor.

REMOVAL

1. Remove wheel and tire using power tool. Refer to [WT-45, "Removal and Installation"](#).
2. Remove fender protector. Refer to [EXT-36, "Removal and Installation"](#).
3. Disconnect the harness connector from the front wheel sensor.
4. Remove bolt and front wheel sensor from steering knuckle.
5. Release front wheel sensor harness clips from the vehicle.

INSTALLATION

Installation is in the reverse order of the removal.


WHEEL SENSOR

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

CAUTION:


Do not twist front wheel sensor harness when installing front wheel sensor. Check that grommet (2) is fully inserted to bracket (1). Check that front wheel sensor harness is not twisted after installation.

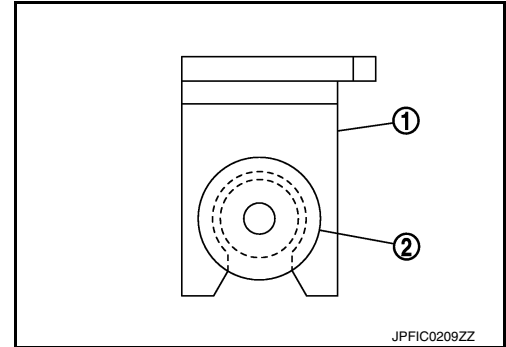

REAR WHEEL SENSOR

REAR WHEEL SENSOR : Exploded View

INFOID:000000009364970

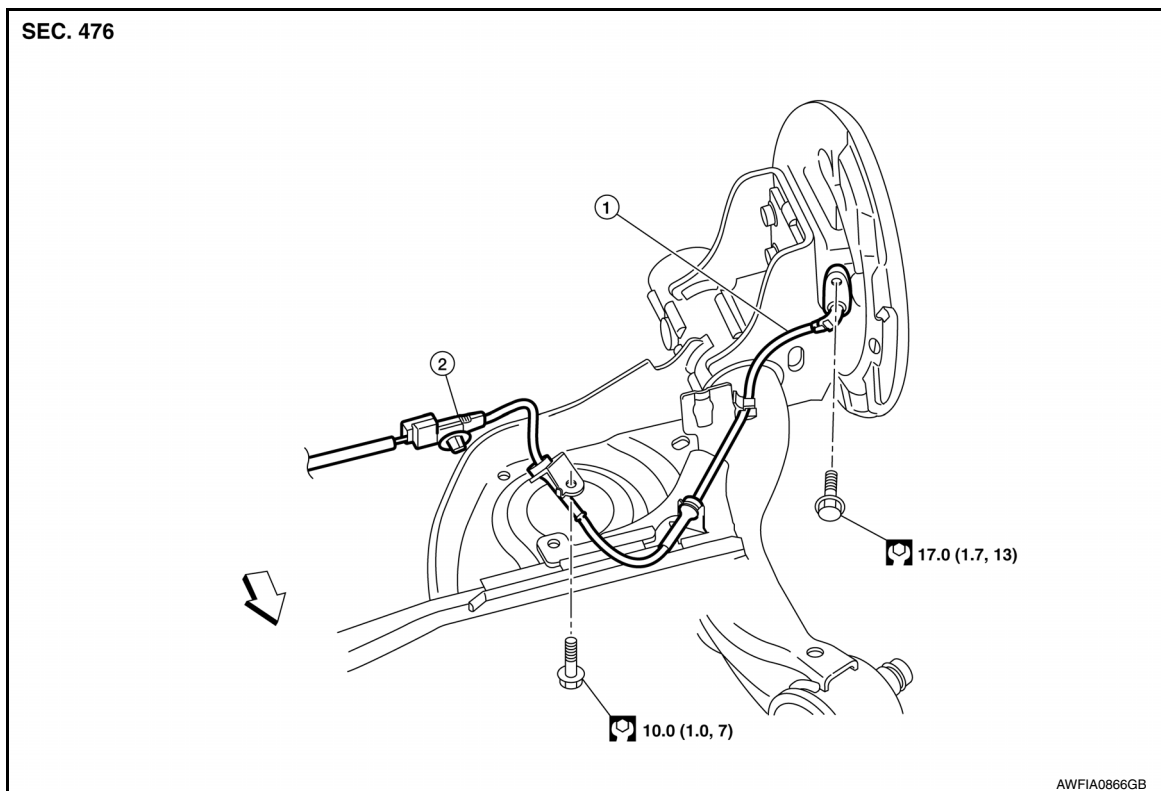

1. Rear wheel sensor

2. Harness connector

← Front

REAR WHEEL SENSOR : Removal and Installation

INFOID:000000009364971

CAUTION:

- Be careful not to damage rear wheel sensor edge and sensor rotor teeth.
- When removing the rear wheel hub, first remove the rear wheel sensor from the back plate. Failure to do so may result in damage to the rear wheel sensor, making the rear wheel sensor inoperative.
- Pull out the rear wheel sensor, being careful to turn it as little as possible. Do not pull on the rear wheel sensor harness.
- Before installation, check if foreign objects, such as iron fragments, are adhered to the pick-up part of the rear wheel sensor or to the inside of the hole in the back plate for the rear wheel sensor, or if a foreign object is caught in the surface of the sensor rotor. Fix as necessary and then install the rear wheel sensor.


REMOVAL

WHEEL SENSOR

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

1. Remove bolts (A) and support bracket (1) (LH side only).

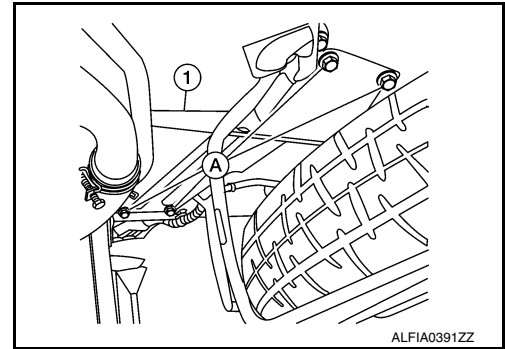


2. Disconnect the harness connector from the rear wheel sensor.
3. Release rear wheel sensor harness clips from the vehicle.
4. Remove bolts and rear wheel sensor from back plate.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Do not twist rear wheel sensor harness when installing rear wheel sensor. Check that grommet (2) is fully inserted to bracket (1). Check that rear wheel sensor harness is not twisted after installation.

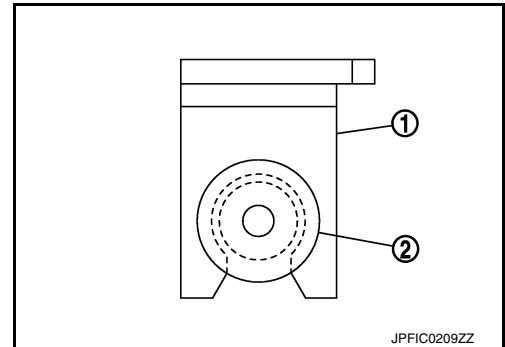

SENSOR ROTOR

FRONT SENSOR ROTOR

FRONT SENSOR ROTOR : Removal and Installation

INFOID:000000009364972

REMOVAL

Remove sensor rotor from steering knuckle. Refer to [FAX-9, "Exploded View"](#).

INSTALLATION

Installation is in the reverse order of removal.

REAR SENSOR ROTOR

REAR SENSOR ROTOR : Removal and Installation

INFOID:000000009364973

REMOVAL

Remove sensor rotor from brake drum. Refer to [RAX-6, "Exploded View"](#).

CAUTION:

Do not reuse rear sensor rotor.

INSTALLATION

Installation is in the reverse order of removal.

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)


< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Exploded View

INFOID:000000009364974

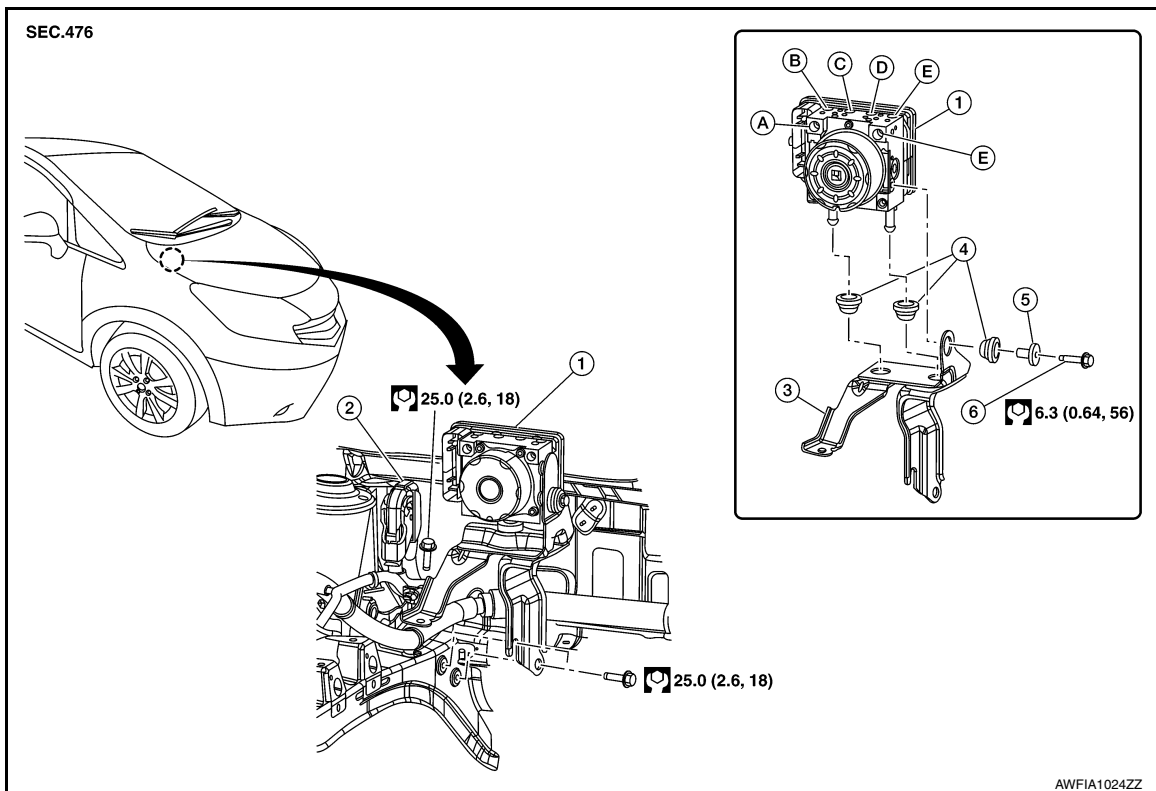

- | | | |
|--|--|------------------------------------|
| 1. ABS actuator and electric unit (control unit) | 2. ABS actuator and electric unit (control unit) harness connector | 3. Bracket |
| 4. Bushing | 5. Insulating clip | 6. Bolt |
| A. To master cylinder secondary side | B. To rear brake tube (RH) | C. To front brake tube (LH) |
| D. To front brake tube (RH) | E. To rear brake tube (LH) | F. To master cylinder primary side |

Removal and Installation

INFOID:000000009364975

REMOVAL

CAUTION:

- Before servicing, disconnect the battery cable from negative terminal.
- Do not remove actuator by holding harness.

NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.


1. Disconnect negative battery cable. Refer to [PG-67, "Removal and Installation \(Battery\)"](#).
2. Disconnect vacuum hose from intake manifold. Refer to [BR-32, "Exploded View"](#).

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

3. Remove ground harness bolt (A) and ground harness from radiator core support.

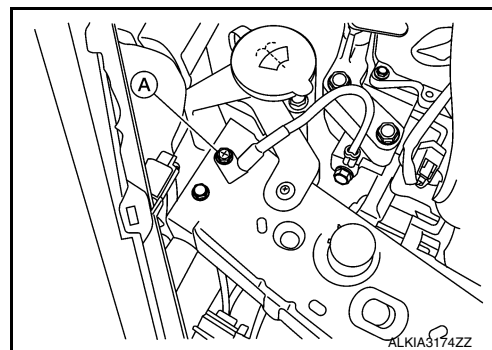

4. Disconnect high-pressure pipe from expansion valve. Refer to [HA-27, "Exploded View"](#).
CAUTION:
Cap or wrap the joint of the A/C piping and expansion valve with suitable material such as vinyl tape to avoid the entry of air.
5. Remove low-pressure flexible hose. Refer to [HA-27, "LOW-PRESSURE FLEXIBLE HOSE : Removal and Installation"](#).
6. Loosen flare nut from brake tubes using a flare nut wrench, then remove brake tubes from ABS actuator and electric unit (control unit). Refer to [BR-21, "FRONT : Exploded View"](#).
7. Disconnect the harness connector from the ABS actuator and electric unit (control unit).
8. Remove ABS actuator and electric unit (control unit) bracket bolts.
9. Remove the ABS actuator and electric unit (control unit) and bracket as an assembly.
10. Remove bracket and bushing from ABS actuator and electric unit (if necessary).

INSTALLATION

Installation is in the reverse order of removal.

- Bleed the brake system. Refer to [BR-12, "Bleeding Brake System"](#).
- Adjust the neutral position of steering angle sensor. Refer to [BRC-52, "Work Procedure"](#).

CAUTION:

- **Replace the ABS actuator electric unit (control unit) if it has been dropped or sustained an impact.**
- **Do not install actuator by holding harness.**
- **After installing harness connector in the ABS actuator and electric unit (control unit), make sure harness connector is securely locked.**

VDC OFF SWITCH

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]


VDC OFF SWITCH

Removal and Installation

INFOID:000000009364976

REMOVAL

1. Remove the instrument lower panel LH. Refer to [IP-24. "Removal and Installation"](#).
2. Release pawls (A) using suitable tool and remove the VDC OFF switch.

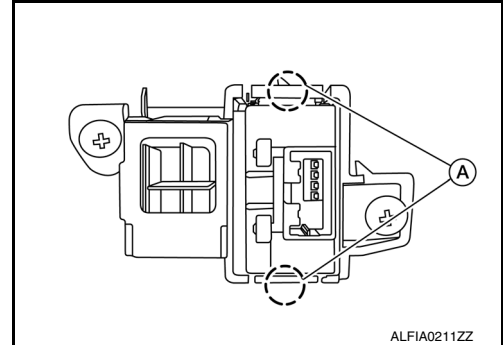

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

STEERING ANGLE SENSOR


< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

STEERING ANGLE SENSOR

Exploded View

INFOID:000000009654075

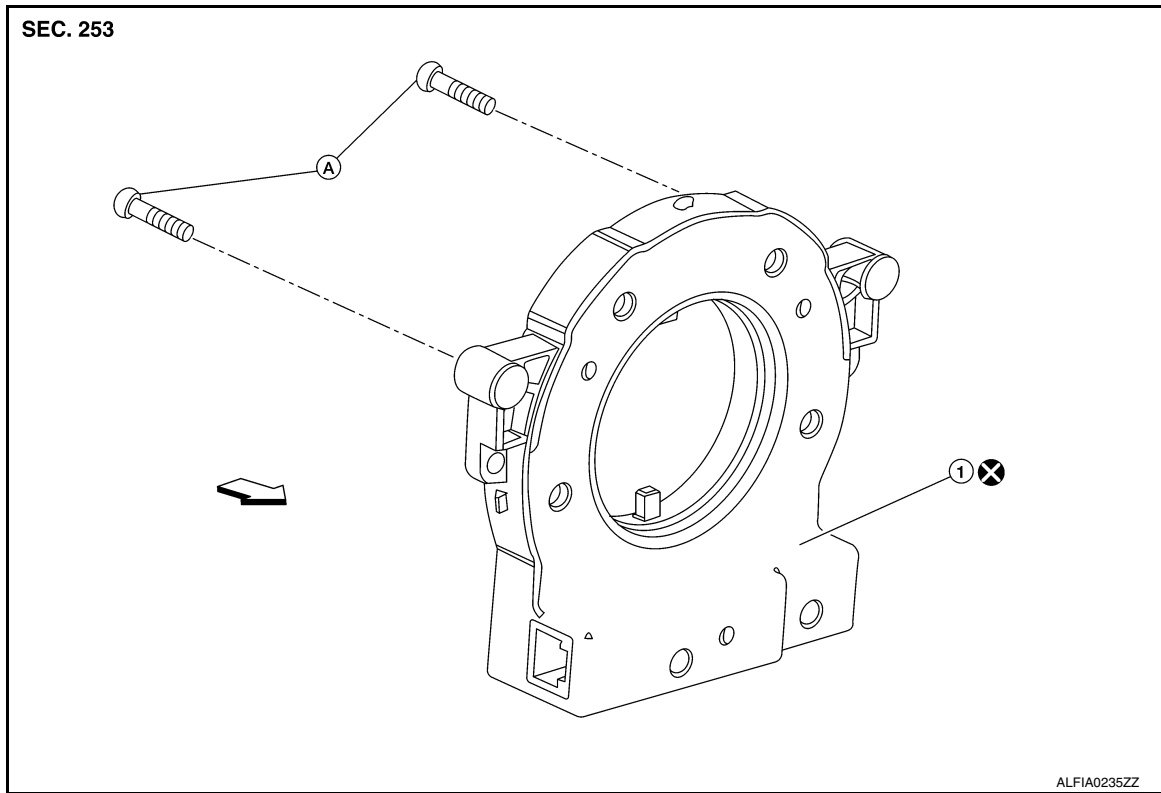


Removal and Installation

INFOID:000000009364977

REMOVAL

1. Remove the spiral cable. Refer to [SR-15, "Removal and Installation"](#).
2. Remove the screws (A), then release the pawls (B) and remove the steering angle sensor (2) from the spiral cable (1).

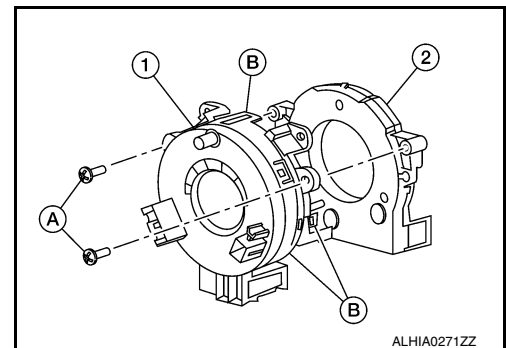

INSTALLATION

Installation is in the reverse order of removal.

Adjust the neutral position of the steering angle sensor. Refer to [BRC-53, "Work Procedure"](#).

CAUTION:

Do not reuse steering angle sensor.