

MECHANICAL

ME(DOHC TURBO)

	Page
1. General Description.....	2
2. Compression	22
3. Idle Speed	23
4. Ignition Timing	24
5. Intake Manifold Vacuum.....	25
6. Engine Oil Pressure	26
7. Fuel Pressure	27
8. Valve Clearance	28
9. Engine Assembly	33
10. Engine Mounting	42
11. Preparation for Overhaul.....	43
12. V-belt	44
13. Crankshaft Pulley	46
14. Belt Cover.....	47
15. Timing Belt Assembly	48
16. Camshaft Sprocket.....	56
17. Crankshaft Sprocket.....	57
18. Camshaft	58
19. Cylinder Head Assembly	63
20. Cylinder Block	70
21. Engine Trouble in General	91
22. Engine Noise	97

GENERAL DESCRIPTION

Mechanical

1. General Description S183001

A: SPECIFICATIONS S183001E49

Engine	Type		Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine
	Valve arrangement		Belt driven, double overhead camshaft, 4-valve/cylinder
	Bore x Stroke	mm (in)	92 x 75 (3.62 x 2.95)
	Piston displacement	cm ³ (cu in)	1,994 (121.67)
	Compression ratio		8.0
	Compression pressure (at 200 — 300 rpm)	kPa (kg/cm ² , psi)	981 — 1,177 (10 — 12, 142 — 171)
	Number of piston rings		Pressure ring: 2, Oil ring: 1
	Intake valve timing	Opening	3° BTDC
		Closing	33° ABDC
	Exhaust valve timing	Opening	33° BBDC
		Closing	3° ATDC
	Valve clearance	Intake mm (in)	0.20±0.02 (0.0079±0.0008)
		Exhaust mm (in)	0.25±0.02 (0.0098±0.0008)
	Idling speed [At neutral position on MT; "P" or "N" position on AT]		700±100 (No load) 800±150 (A/C switch ON)
	Firing order		1 → 3 → 2 → 4
	Ignition timing		12°±10°/700 rpm

NOTE:

STD: Standard I.D.: Inner Diameter O.D.: Outer Diameter OS: Oversize US: Undersize

ME(DOHC TURBO)-2

GENERAL DESCRIPTION

Mechanical

Belt tension adjuster	Protrusion of adjuster rod			5.2 — 6.2 mm (0.205 — 0.244 in)
Belt tensioner	Spacer O.D.			17.955 — 17.975 mm (0.7069 — 0.7077 in)
	Tensioner bush I.D.			18.0 — 18.08 mm (0.7087 — 0.7118 in)
	Clearance between spacer and bush		STD	0.025 — 0.125 mm (0.0010 — 0.0049 in)
			Limit	0.175 mm (0.0069 in)
	Side clearance of spacer		STD	0.2 — 0.55 mm (0.0079 — 0.0217 in)
			Limit	0.81 mm (0.0319 in)
Camshaft	Bend limit			0.020 mm (0.0079 in)
	Thrust clearance		STD	0.015 — 0.070 mm (0.0006 — 0.0028 in)
			Limit	0.10 mm (0.0039 in)
	Cam lobe height	Intake	STD	44.75 — 44.85 mm (1.7618 — 1.7657 in)
			Limit	44.65 mm (1.759 in)
		Exhaust	STD	44.60 — 44.70 mm (1.7559 — 1.7598 in)
			Limit	44.50 mm (1.7520 in)
	Journal O.D.	STD	Front	37.946 — 37.963 mm (1.4939 — 1.4946 in)
			Center rear	29.946 — 29.963 mm (1.1790 — 1.1796 in)
	Oil clearance		STD	0.037 — 0.072 mm (0.0015 — 0.0028 in)
			Limit	0.10 mm (0.0039 in)
Cylinder head	Surface warpage limit			0.05 mm (0.0020 in)
	Surface grinding limit			0.3 mm (0.012 in)
	Standard height			127.5 mm (5.02 in)
Valve seat	Refacing angle			90°
	Contacting width	Intake	STD	1.0 mm (0.039 in)
			Limit	1.7 mm (0.067 in)
		Exhaust	STD	1.5 mm (0.059 in)
			Limit	2.2 mm (0.087 in)
Valve guide	Inner diameter			6.000 — 6.015 mm (0.2362 — 0.2368 in)
	Protrusion above head			12.0 — 12.4 mm (0.472 — 0.488 in)
Valve	Head edge thickness	Intake	STD	1.2 mm (0.047 in)
			Limit	0.8 mm (0.031 in)
		Exhaust	STD	1.5 mm (0.059 in)
			Limit	0.8 mm (0.031 in)
	Stem diameter		Intake	5.950 — 5.965 mm (0.2343 — 0.2348 in)
			Exhaust	5.950 — 5.965 mm (0.2343 — 0.2348 in)
	Stem oil clearance	STD	Intake	0.035 — 0.062 mm (0.0014 — 0.0024 in)
			Exhaust	0.040 — 0.067 mm (0.0016 — 0.0026 in)
		Limit	—	0.15 mm (0.0059 in)
	Overall length		Intake	104.4 mm (4.110 in)
Exhaust			104.7 mm (4.122 in)	
Valve spring	Free length			44.67 mm (1.7587 in)
	Squareness			2.5°, 2.0 mm (0.079 in)
	Tension/spring height			220.7±15.7 N (22.5±1.6 kgf, 49.6±3.5 lb)/36.0 mm (1.417 in) 510.9±25.5 N (52.1±2.6 kgf, 114.9±5.7 lb)/26.6 mm (1.047 in)

ME(DOHC TURBO)-3

GENERAL DESCRIPTION

Mechanical

Cylinder block	Surface warpage limit (mating with cylinder head)			0.05 mm (0.0020 in)
	Surface grinding limit			0.1 mm (0.004 in)
	Cylinder bore	STD	A	92.005 — 92.015 mm (3.6222 — 3.6226 in)
			B	91.995 — 92.005 mm (3.6218 — 3.6222 in)
	Taper		STD	0.015 mm (0.0006 in)
			Limit	0.050 mm (0.0020 in)
	Out-of-roundness		STD	0.010 mm (0.0004 in)
			Limit	0.050 mm (0.0020 in)
	Piston clearance		STD	0.010 — 0.030 mm (0.0004 — 0.0012 in)
Limit			0.050 mm (0.0020 in)	
Enlarging (boring) limit			0.5 mm (0.020 in)	
Piston	Outer diameter	STD	A	91.985 — 91.995 mm (3.6214 — 3.6218 in)
			B	91.975 — 91.985 mm (3.6211 — 3.6214 in)
		0.25 mm (0.0098 in) OS		92.225 — 92.235 mm (3.6309 — 3.6313 in)
		0.50 mm (0.0197 in) OS		92.475 — 92.485 mm (3.6407 — 3.6411 in)
Piston pin	Standard clearance between piston pin and hole in piston		STD	0.004 — 0.008 mm (0.0002 — 0.0003 in)
			Limit	0.020 mm (0.0008 in)
	Degree of fit			Piston pin must be fitted into position with thumb at 20°C (68°F).
Piston ring	Piston ring gap	Top ring	STD	0.20 — 0.26 mm (0.0079 — 0.0102 in)
			Limit	1.0 mm (0.039 in)
		Second ring	STD	0.35 — 0.50 mm (0.0138 — 0.0197 in)
			Limit	1.0 mm (0.039 in)
		Oil ring	STD	0.20 — 0.70 mm (0.0079 — 0.0276 in)
			Limit	1.5 mm (0.059 in)
	Clearance between piston ring and piston ring groove	Top ring	STD	0.040 — 0.080 mm (0.0016 — 0.0031 in)
			Limit	0.15 mm (0.0059 in)
		Second ring	STD	0.030 — 0.070 mm (0.0012 — 0.0028 in)
			Limit	0.15 mm (0.0059 in)
Connecting rod	Bend twist per 100 mm (3.94 in) in length		Limit	0.10 mm (0.0039 in)
	Side clearance		STD	0.070 — 0.330 mm (0.0028 — 0.0130 in)
			Limit	0.4 mm (0.016 in)
Connecting rod bearing	Oil clearance		STD	0.020 — 0.046 mm (0.0008 — 0.0018 in)
			Limit	0.05 mm (0.0020 in)
	Thickness at center portion		STD	1.492 — 1.501 mm (0.0587 — 0.0591 in)
			0.03 mm (0.0012 in) US	1.510 — 1.513 mm (0.0594 — 0.0596 in)
			0.05 mm (0.0020 in) US	1.520 — 1.523 mm (0.0598 — 0.0600 in)
			0.25 mm (0.0098 in) US	1.620 — 1.623 mm (0.0638 — 0.0639 in)
Connecting rod bushing	Clearance between piston pin and bushing		STD	0 — 0.022 mm (0 — 0.0009 in)
			Limit	0.030 mm (0.0012 in)

ME(DOHC TURBO)-4

GENERAL DESCRIPTION

Mechanical

Crankshaft	Bend limit		0.035 mm (0.0014 in)	
	Crank pin and crank journal	Out-of-roundness		0.020 mm (0.0008 in) or less
		Grinding limit		0.25 mm (0.0098 in)
	Crank pin outer diameter		STD	51.984 — 52.000 mm (2.0466 — 2.0472 in)
			0.03 mm (0.0012 in) US	51.954 — 51.970 mm (2.0454 — 2.0461 in)
			0.05 mm (0.0020 in) US	51.934 — 51.950 mm (2.0466 — 2.0453 in)
			0.25 mm (0.0098 in) US	51.734 — 51.750 mm (2.0368 — 2.0374 in)
	Crank journal outer diameter	#1, #3, #5	STD	59.992 — 60.008 mm (2.3619 — 2.3625 in)
			0.03 mm (0.0012 in) US	59.962 — 59.978 mm (2.3607 — 2.3613 in)
			0.05 mm (0.0020 in) US	59.942 — 59.958 mm (2.3599 — 2.3605 in)
			0.25 mm (0.0098 in) US	59.742 — 59.758 mm (2.3520 — 2.3527 in)
		#2, #4	STD	59.992 — 60.008 mm (2.3619 — 2.3625 in)
			0.03 mm (0.0012 in) US	59.962 — 59.978 mm (2.3607 — 2.3613 in)
			0.05 mm (0.0020 in) US	59.942 — 59.958 mm (2.3599 — 2.3605 in)
			0.25 mm (0.0098 in) US	59.742 — 59.758 mm (2.3520 — 2.3527 in)
	Thrust clearance		STD	0.030 — 0.115 mm (0.0012 — 0.0045 in)
			Limit	0.25 mm (0.0098 in)
Oil clearance		STD	0.010 — 0.030 mm (0.0004 — 0.0012 in)	
		Limit	0.040 mm (0.0016 in)	
Crankshaft bearing	Crankshaft bearing thickness	#1, #3	STD	1.998 — 2.011 mm (0.0787 — 0.0792 in)
			0.03 mm (0.0012 in) US	2.017 — 2.020 mm (0.0794 — 0.0795 in)
			0.05 mm (0.0020 in) US	2.027 — 2.030 mm (0.0798 — 0.0799 in)
			0.25 mm (0.0098 in) US	2.127 — 2.130 mm (0.0837 — 0.0839 in)
		#2, #4, #5	STD	2.000 — 2.013 mm (0.0787 — 0.0793 in)
			0.03 mm (0.0012 in) US	2.019 — 2.022 mm (0.0795 — 0.0796 in)
			0.05 mm (0.0020 in) US	2.029 — 2.032 mm (0.0799 — 0.0800 in)
			0.25 mm (0.0098 in) US	2.129 — 2.132 mm (0.0838 — 0.0839 in)

ME(DOHC TURBO)-5

GENERAL DESCRIPTION

Mechanical

MEMO:

ME(DOHC TURBO)-6

GENERAL DESCRIPTION


Mechanical

B: COMPONENT

S183001A05

1. TIMING BELT

S183001A0501

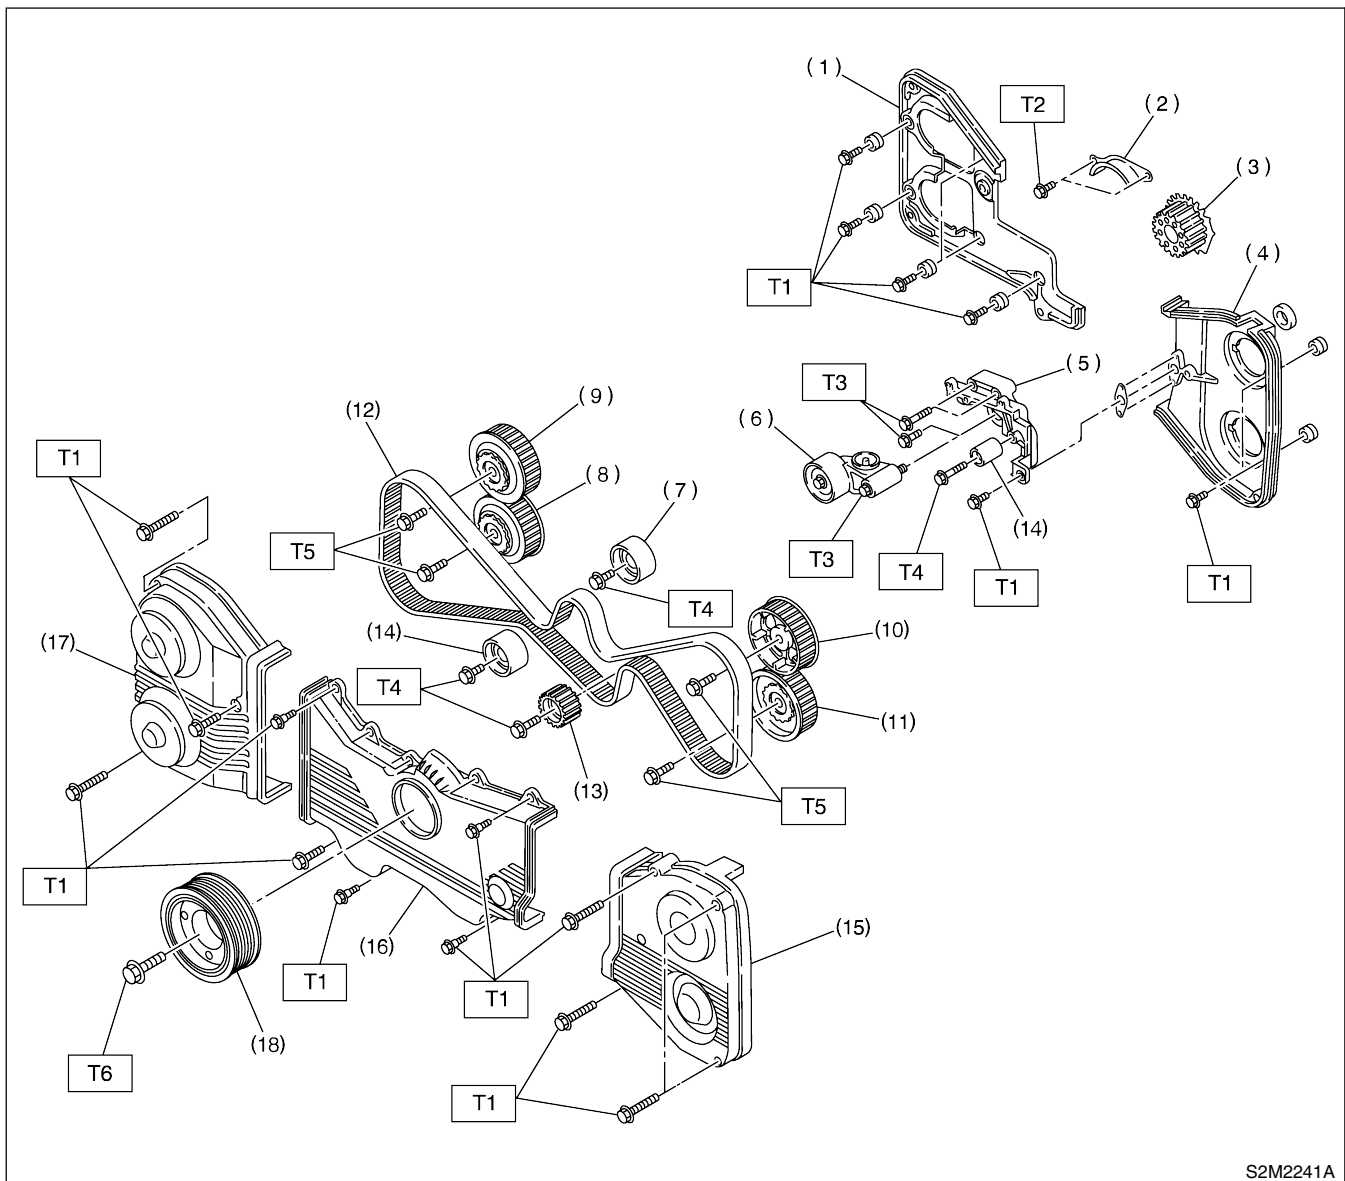

S2M2241A

- (1) Right-hand belt cover No. 2
- (2) Timing belt guide (MT vehicles only)
- (3) Crankshaft sprocket
- (4) Left-hand belt cover No. 2
- (5) Tensioner bracket
- (6) Automatic belt tension adjuster ASSY
- (7) Belt idler
- (8) Right-hand exhaust camshaft sprocket

- (9) Right-hand intake camshaft sprocket
- (10) Left-hand intake camshaft sprocket
- (11) Left-hand exhaust camshaft sprocket
- (12) Timing belt
- (13) Belt idler No. 2
- (14) Belt idler
- (15) Left-hand belt cover
- (16) Front belt cover

- (17) Right-hand belt cover
- (18) Crankshaft pulley

Tightening torque: N·m (kgf-m, ft-lb)

T1: 5 (0.5, 3.6)

T2: 10 (1.0, 7)

T3: 25 (2.5, 18.1)

T4: 39 (4.0, 28.9)


T5: 98 (10, 72.4)

T6: 127 (13, 94.0)

ME(DOHC TURBO)-7

GENERAL DESCRIPTION

2. CYLINDER HEAD AND CAMSHAFT S183001A0502

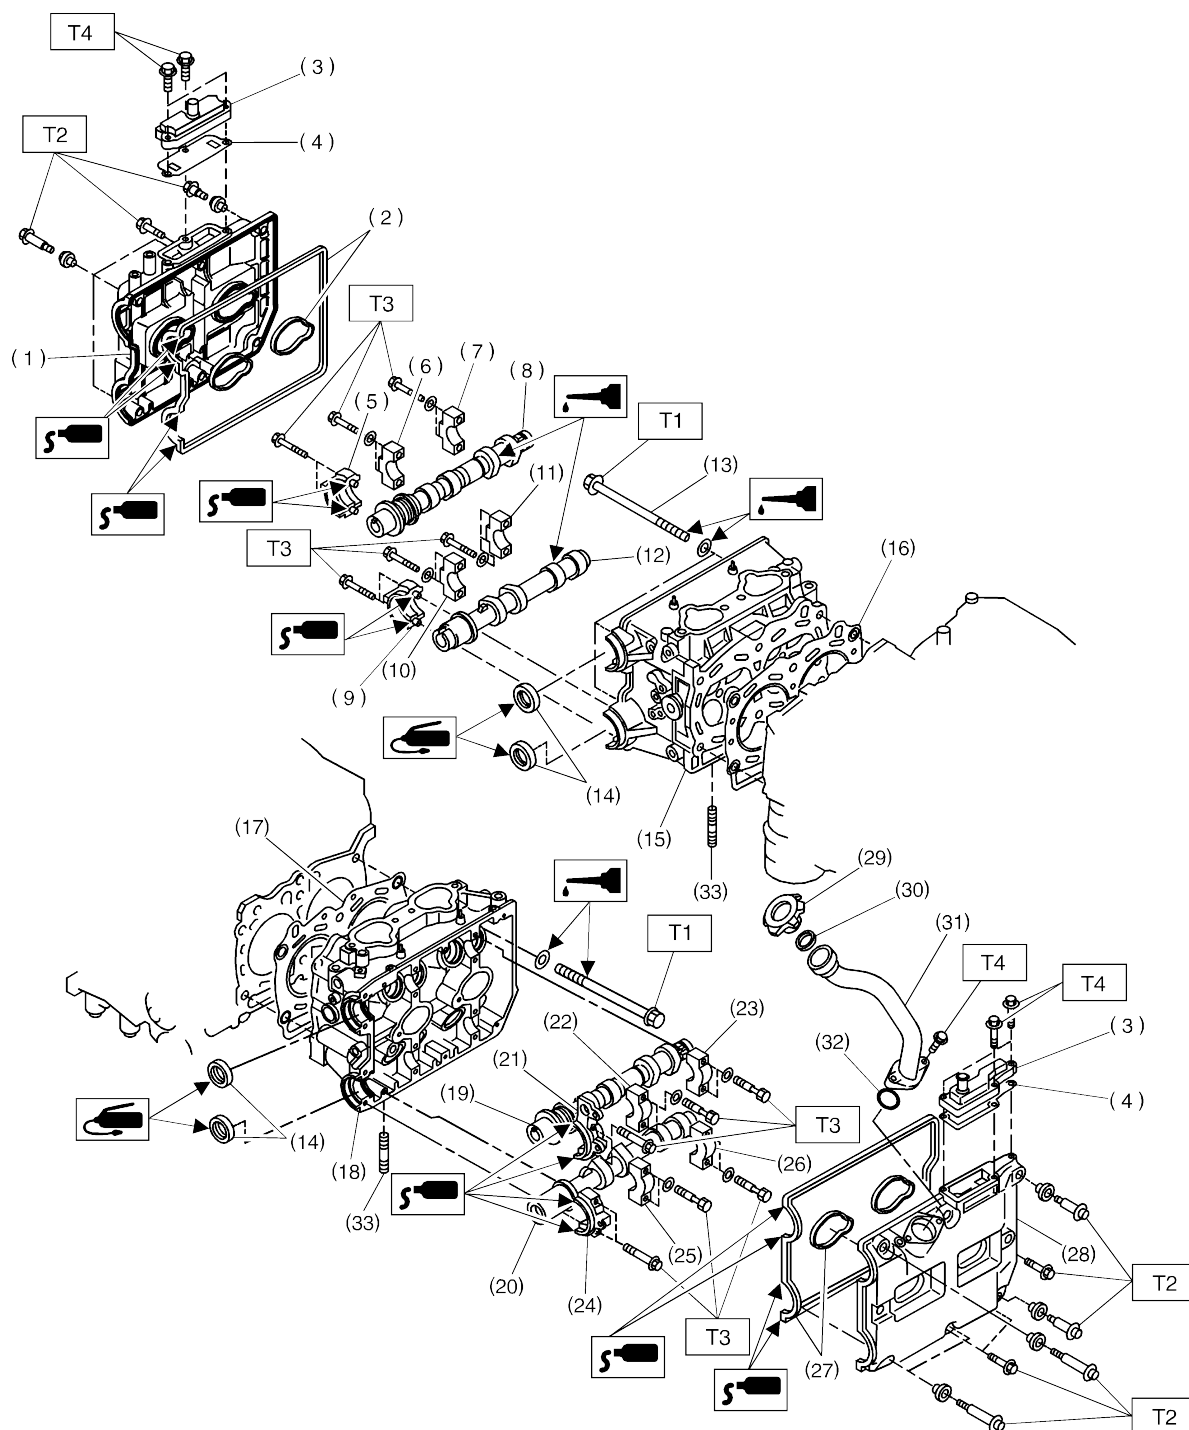

S2M1188A

ME(DOHC TURBO)-8

GENERAL DESCRIPTION

Mechanical

(1) Rocker cover (RH)	(14) Oil seal	(28) Rocker cover (LH)
(2) Rocker cover gasket (RH)	(15) Cylinder head (RH)	(29) Oil filler cap
(3) Oil separator cover	(16) Cylinder head gasket (RH)	(30) Gasket
(4) Gasket	(17) Cylinder head gasket (LH)	(31) Oil filler duct
(5) Intake camshaft cap (Front RH)	(18) Cylinder head (LH)	(32) O-ring
(6) Intake camshaft cap (Center RH)	(19) Intake camshaft (LH)	(33) Stud bolt
(7) Intake camshaft cap (Rear RH)	(20) Exhaust camshaft (LH)	
(8) Intake camshaft (RH)	(21) Intake camshaft cap (Front LH)	
(9) Exhaust camshaft cap (Front RH)	(22) Intake camshaft cap (Center LH)	
(10) Exhaust camshaft cap (Center RH)	(23) Intake camshaft cap (Rear LH)	
(11) Exhaust camshaft cap (Rear RH)	(24) Exhaust camshaft (Front LH)	
(12) Exhaust camshaft (RH)	(25) Exhaust camshaft cap (Center LH)	
(13) Cylinder head bolt	(26) Exhaust camshaft cap (Rear LH)	
	(27) Rocker cover gasket (LH)	

Tightening torque: N·m (kgf-m, ft-lb)

T1: <Ref. to ME(DOHC TURBO)-63, INSTALLATION, Cylinder Head Assembly.>


T2: 5 (0.5, 3.6)

T3: 10 (1.0, 7)

T4: 6.4 (0.65, 4.7)

GENERAL DESCRIPTION

3. CYLINDER HEAD AND VALVE ASSEMBLY S183001A0503

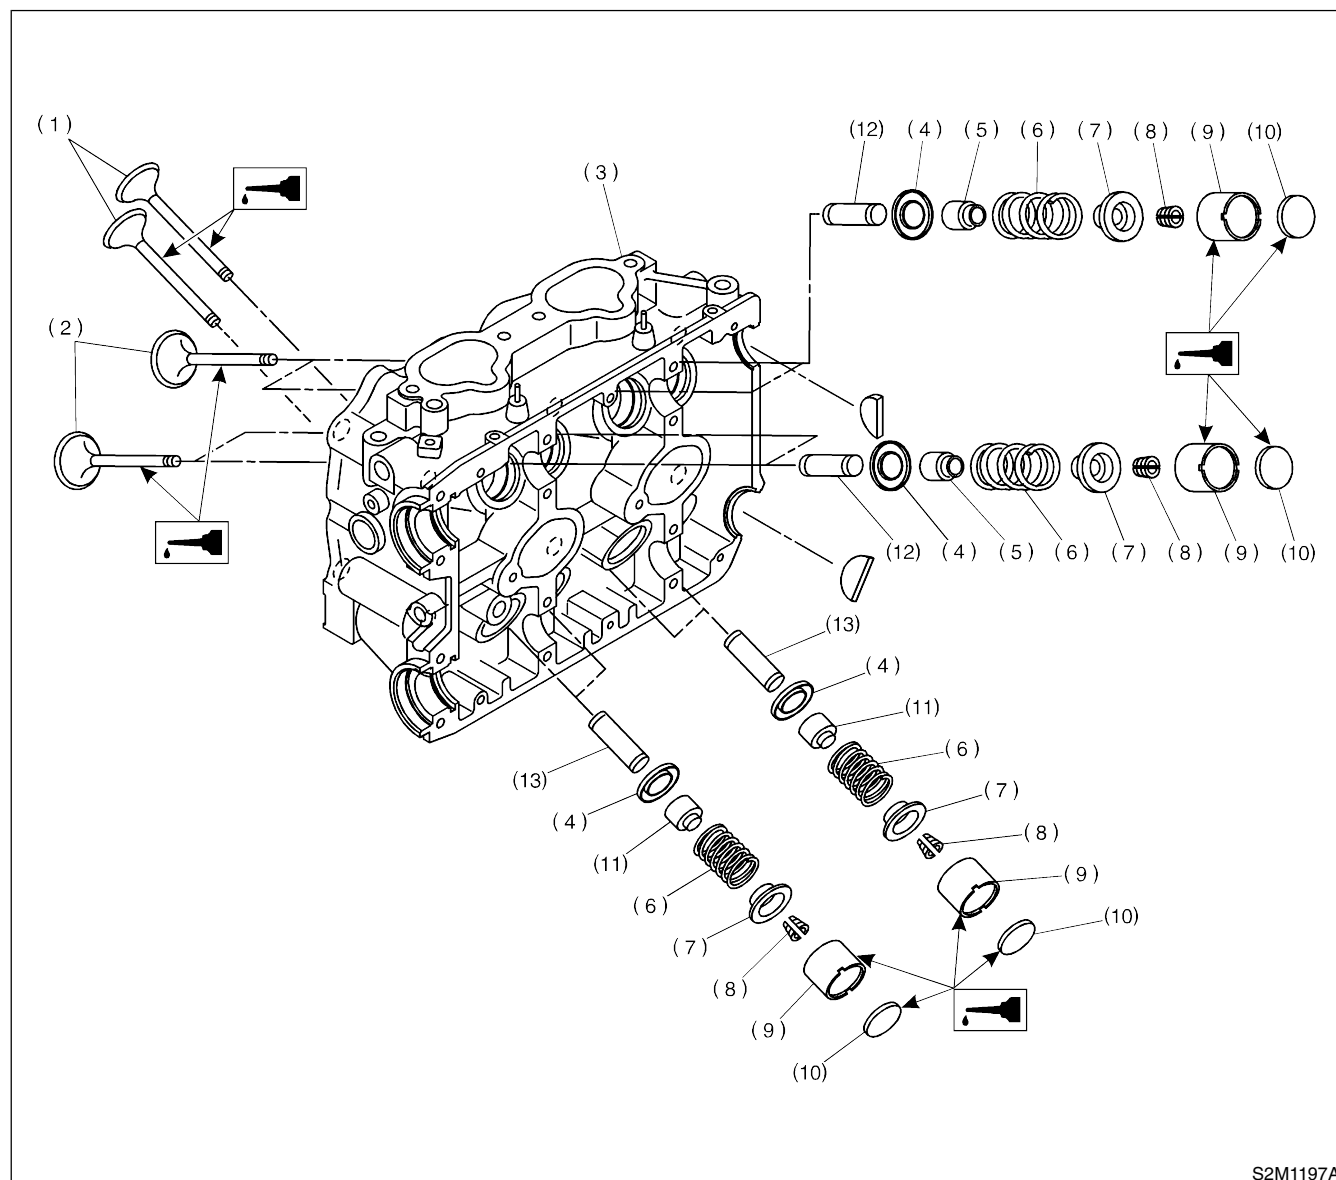

S2M1197A

- | | | |
|---------------------------|------------------|-----------------------------|
| (1) Exhaust valve | (6) Valve spring | (11) Exhaust valve oil seal |
| (2) Intake valve | (7) Retainer | (12) Intake valve guide |
| (3) Cylinder head | (8) Retainer key | (13) Exhaust valve guide |
| (4) Valve spring seat | (9) Valve lifter | |
| (5) Intake valve oil seal | (10) Shim | |

ME(DOHC TURBO)-10

4. CYLINDER BLOCK S183001A0504

en0144



EN0144

- | | |
|--------------------------|----------------------------|
| (1) Oil pressure switch | (15) Oil cooler |
| (2) Cylinder block (RH) | (16) Waster by-pass pipe |
| (3) Service hole plug | (17) Connector |
| (4) Gasket | (18) Oil strainer |
| (5) Oil separator cover | (19) Gasket |
| (6) Water by-pass pipe | (20) Oil pan |
| (7) Oil pump | (21) Drain plug |
| (8) Front oil seal | (22) Metal gasket |
| (9) Rear oil seal | (23) Oil level gauge guide |
| (10) O-ring | (24) Oil filter |
| (11) Service hole cover | (25) Gasket |
| (12) Cylinder block (LH) | (26) Water pump hose |
| (13) Water pump | (27) Plug |
| (14) Baffle plate | |

Tightening torque: N·m (kgf-m, ft-lb)

- T1: 5 (0.5, 3.6)**
T2: 6.4 (0.65, 4.7)
T3: 10 (1.0, 7)
T4: 25 (2.5, 18.1)
T5: 47 (4.8, 34.7)
T6: 69 (7.0, 50.6)
T7: First 12 (1.2, 8.7)
Second 12 (1.2, 8.7)
T8: 16 (1.6, 11.6)
T9: 44 (4.5, 33)
T10: 25 (2.5, 18.1)
T11: 55 (5.5, 40)

GENERAL DESCRIPTION

5. CRANKSHAFT AND PISTON S183001A0505

en0415



EN0415


- (1) Flywheel (MT vehicles only)
- (2) Ball bearing (MT vehicles only)
- (3) Reinforcement (AT vehicles only)
- (4) Drive plate (AT vehicles only)
- (5) Top ring
- (6) Second ring
- (7) Oil ring
- (8) Piston

- (9) Piston pin
- (10) Circlip
- (11) Connecting rod bolt
- (12) Connecting rod
- (13) Connecting rod bearing
- (14) Connecting rod cap
- (15) Crankshaft
- (16) Woodruff key

- (17) Crankshaft bearing #1, #3
- (18) Crankshaft bearing #2, #4
- (19) Crankshaft bearing #5

Tightening torque: N·m (kgf·m, ft·lb)
T1: 44.6 (4.55, 32.9)
T2: 72 (7.3, 52.8)

6. ENGINE MOUNTING S183001A0506

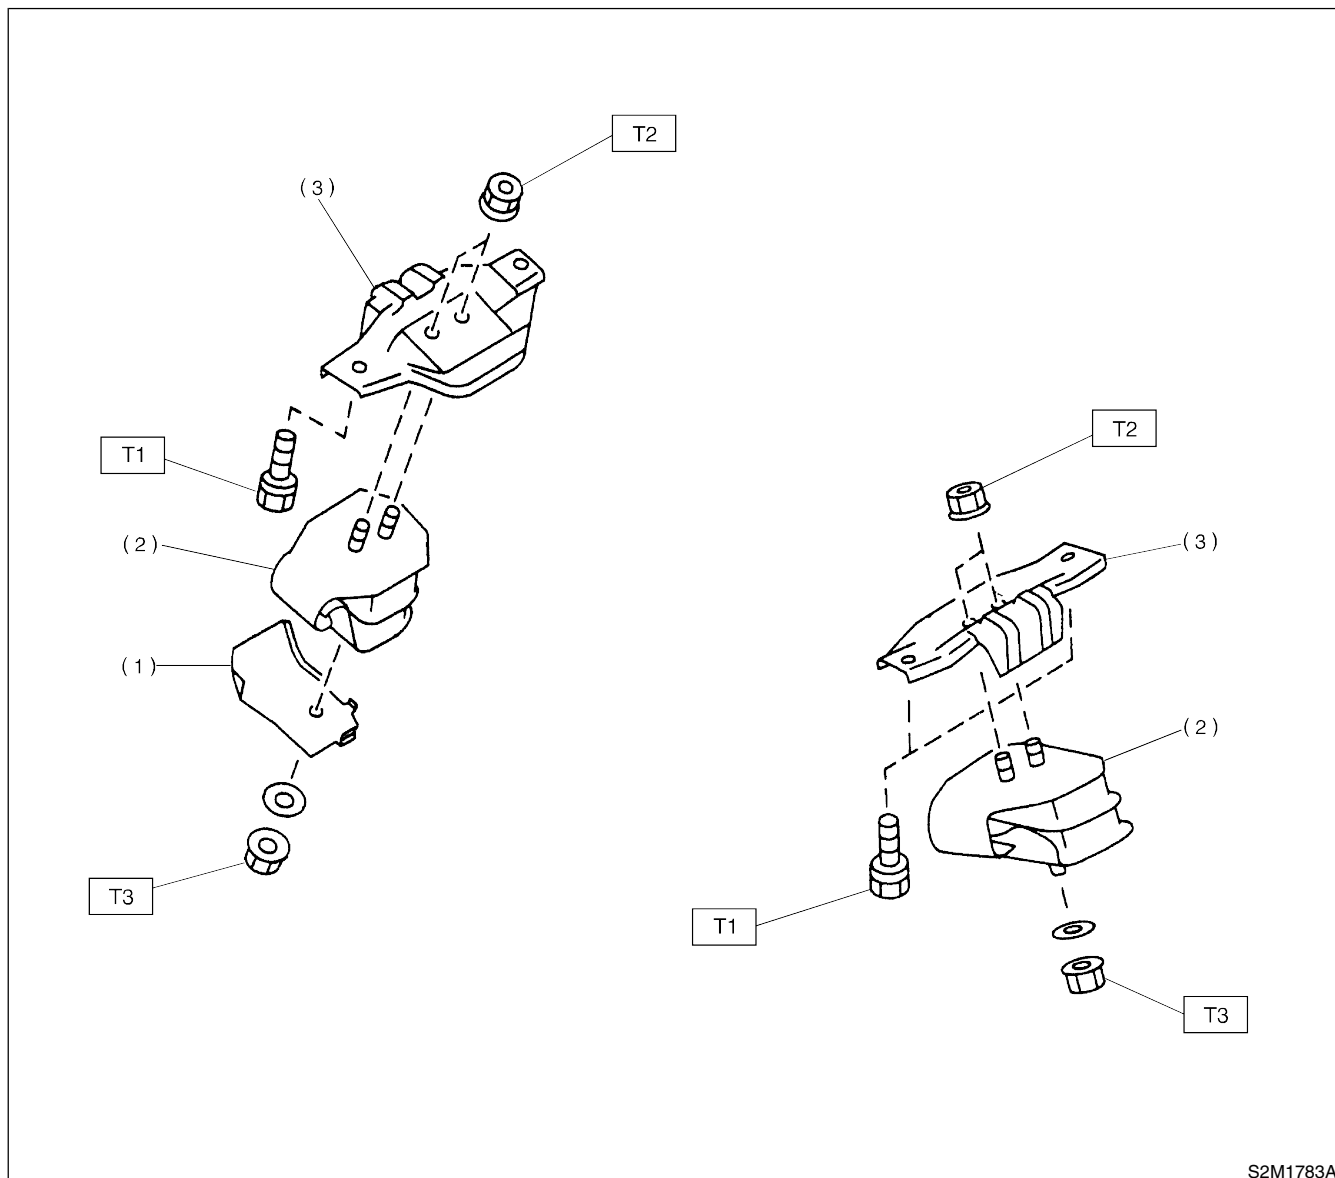

S2M1783A

- (1) Hear shield cover
- (2) Front cushion rubber
- (3) Front engine mounting bracket

Tightening torque: N·m (kgf-m, ft-lb)

T1: 35 (3.6, 25.8)

T2: 42 (4.3, 30.9)

T3: 85 (8.7, 62.7)

GENERAL DESCRIPTION


C: CAUTION S183001A03

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part in the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect negative terminal from battery.
- All parts should be thoroughly cleaned, paying special attention to the engine oil passages, pistons and bearings.
- Rotating parts and sliding parts such as piston, bearing and gear should be coated with oil prior to assembly.

- Be careful not to let oil, grease or coolant contact the timing belt, clutch disc and flywheel.
- All removed parts, if to be reused, should be reinstalled in the original positions and directions.
- Bolts, nuts and washers should be replaced with new ones as required.
- Even if necessary inspections have been made in advance, proceed with assembly work while making rechecks.
- Remove or install engine in an area where chain hoists, lifting devices, etc. are available for ready use.
- Be sure not to damage coated surfaces of body panels with tools or stain seats and windows with coolant or oil. Place a cover over fenders, as required, for protection.
- Prior to starting work, prepare the following:
Service tools, clean cloth, containers to catch coolant and oil, wire ropes, chain hoist, transmission jacks, etc.
- Lift-up or lower the vehicle when necessary. Make sure to support the correct positions.





D: PREPARATION TOOL S183001A17

1. SPECIAL TOOLS S183001A1701




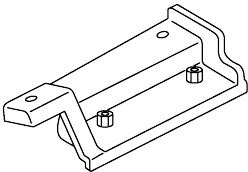
ILLUSTRATION en0147	TOOL NUMBER	DESCRIPTION	REMARKS
EN0147	498267600	CYLINDER HEAD TABLE	● Used for replacing valve guides. ● Used for removing and installing valve springs.
 B2M3851	498457000	ENGINE STAND ADAPTER RH	Used with ENGINE STAND (499817000).

GENERAL DESCRIPTION

Mechanical

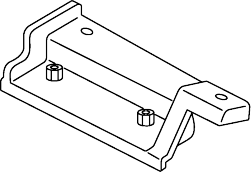
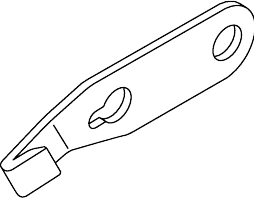
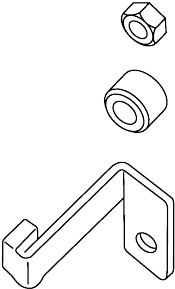
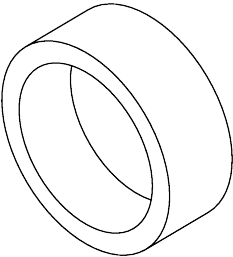
ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 B2M3852	498457100	ENGINE STAND ADAPTER LH	Used with ENGINE STAND (499817000).
 B2M3853	498497100	CRANKSHAFT STOPPER	Used for stopping rotation of flywheel when loosening and tightening crankshaft pulley bolt, etc.
 B3M2043	498277200	STOPPER SET	Used for removing and installing automatic transmission assembly to engine
 B2M3854	398744300	PISTON GUIDE	Used for installing piston in cylinder.

GENERAL DESCRIPTION

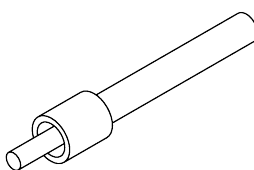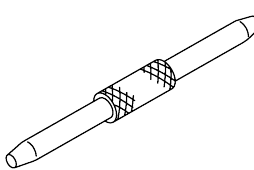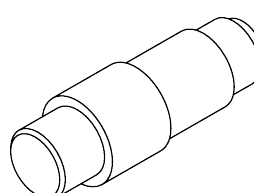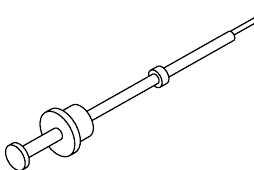ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 B2M3855	498857100	VALVE OIL SEAL GUIDE	Used for press-fitting of intake and exhaust valve guide oil seals.
 B2M3856	499017100	PISTON PIN GUIDE	Used for installing piston pin, piston and connecting rod.
 B2M3857	499037100	CONNECTING ROD BUSHING REMOVER & INSTALLER	Used for removing and installing connecting rod bushing.
 B2M3858	499097700	PISTON PIN REMOVER ASSY	Used for removing piston pin.





GENERAL DESCRIPTION

Mechanical

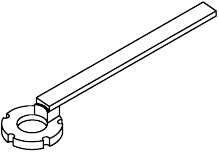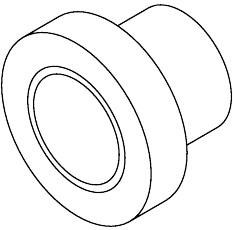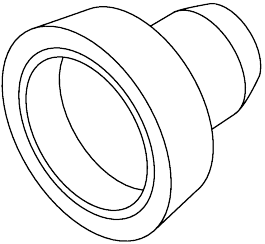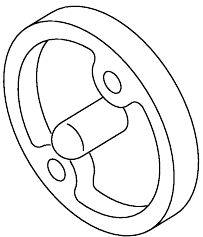ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 B2M4158	499207400	CAMSHAFT SPROCKET WRENCH	Used for removing and installing camshaft sprocket.
 B2M3860	499587700	CAMSHAFT OIL SEAL INSTALLER	Used for installing cylinder head plug.
 B2M3861	499587200	CRANKSHAFT OIL SEAL INSTALLER	• Used for installing crankshaft oil seal. • Used with CRANKSHAFT OIL SEAL GUIDE (499597100).
 B2M3863	499597100	CRANKSHAFT OIL SEAL GUIDE	• Used for installing crankshaft oil seal. • Used with CRANKSHAFT OIL SEAL INSTALLER (499587200).

GENERAL DESCRIPTION





Mechanical

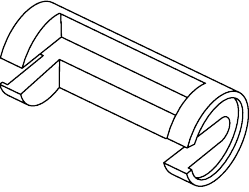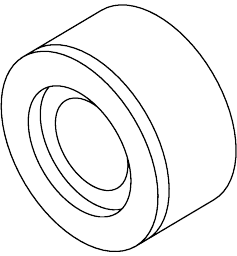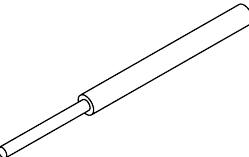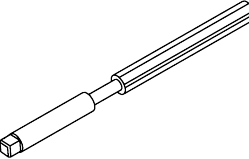ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 B2M3864	499718000	VALVE SPRING REMOVER	Used for removing and installing valve spring.
 B2M3865	498267700	VALVE GUIDE ADJUSTER	Used for installing intake and exhaust valve guides.
 B2M3867	499767200	VALVE GUIDE REMOVER	Used for removing valve guides.
 B2M3868	499767400	VALVE GUIDE REAMER	Used for reaming valve guides.

ME(DOHC TURBO)-18






GENERAL DESCRIPTION

Mechanical

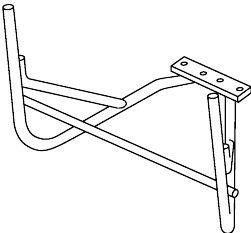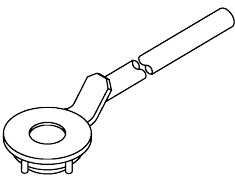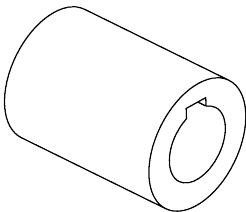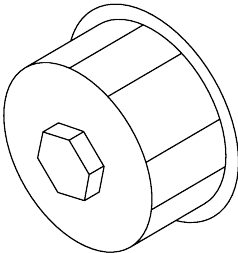ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 B2M3869	499817000	ENGINE STAND	- Stand used for engine disassembly and assembly. - Used with ENGINE STAND ADAPTER RH (498457000) & LH (498457100).
 B2M4157	499977300	CRANK PULLEY WRENCH	Used for stopping rotation of crankshaft pulley when loosening and tightening crankshaft pulley bolts.
 B2M3871	499987500	CRANKSHAFT SOCKET	Used for rotating crankshaft.
 B2M3872	498547000	OIL FILTER WRENCH	Used for removing and installing oil filter.

GENERAL DESCRIPTION

Mechanical

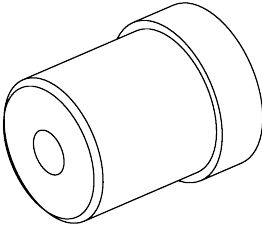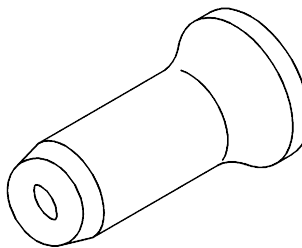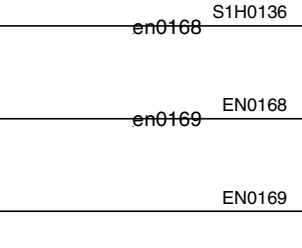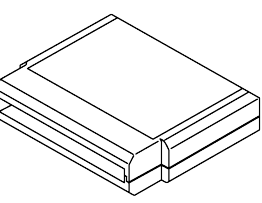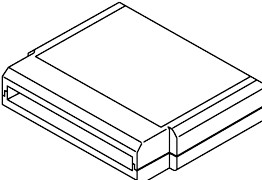ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 B2M3875	499587100	OIL SEAL INSTALLER	Used for installing oil pump oil seal.
 en0168 S1H0136	499587600	OIL SEAL GUIDE	Used for installing camshaft oil seal.
 en0169 EN0168	499597200	OIL SEAL GUIDE	Used for installing camshaft oil seal. Used with OIL SEAL GUIDE (499587600).
 EN0169	49818200	SHIM REPLACER	Used for correct valve clearance.
 B2M3876	24082AA150 (Newly adopted tool)	CARTRIDGE	Troubleshooting for electrical systems.
 B2M3877	22771AA030	SELECT MONITOR KIT	Troubleshooting for electrical systems. - English: 22771AA030 (Without printer) - German: 22771AA070 (Without printer) - French: 22771AA080 (Without printer) - Spanish: 22771AA090 (Without printer)

2. GENERAL PURPOSE TOOLS S183001A1702

ME(DOHC TURBO)-20

GENERAL DESCRIPTION

Mechanical

TOOL NAME	REMARKS
Compression Gauge	Used for measuring compression.
Timing Light	Used for measuring ignition timing.

E: PROCEDURE

S183001E45

It is possible to conduct the following service procedures with engine on the vehicle, however, the procedures described in this section are based on the condition that the engine is removed from the vehicle.

- V-belt
- Timing Belt
- Camshaft
- Cylinder Head

2. Compression S183081

A: INSPECTION S183081A10

CAUTION:

After warming-up, engine becomes very hot. Be careful not to burn yourself during measurement.


- 1) After warming-up the engine, turn ignition switch to OFF.
- 2) Make sure that the battery is fully charged.
- 3) Release fuel pressure. <Ref. to FU(DOHC TURBO)-50, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
- 4) Remove all the spark plugs. <Ref. to IG(DOHC TURBO)-4, REMOVAL, Spark Plug.>
- 5) Fully open throttle valve.
- 6) Check the starter motor for satisfactory performance and operation.
- 7) Hold the compression gauge tight against the spark plug hole.

CAUTION:

When using a screw-in type compression gauge, the screw (put into cylinder head spark plug hole) should be less than 18 mm (0.71 in) long.

- 8) Crank the engine by means of the starter motor, and read the maximum value on the gauge when the pointer is steady.

en0172

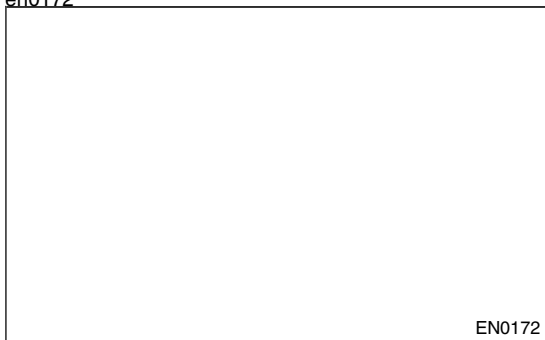

- 9) Perform at least two measurements per cylinder, and make sure that the values are correct.

Compression (350 rpm and fully open throttle):**Standard;**

981 — 1,177 kPa (10.0 — 12.0 kg/cm², 142 — 171 psi)

Limit;

981 kPa (10.0 kg/cm², 142 psi)

Difference between cylinders;

49 kPa (0.5 kg/cm², 7 psi)

3. Idle Speed S183082

A: INSPECTION S183082A10

1) Before checking idle speed, check the following:

- (1) Ensure that air cleaner element is free from clogging, ignition timing is correct, spark plugs are in good condition, and that hoses are connected properly.
- (2) Ensure that malfunction indicator light (CHECK ENGINE light) does not illuminate.

2) Warm-up the engine.

3) Stop the engine, and turn ignition switch to OFF.

4) Insert the cartridge to SUBARU SELECT MONITOR.

5) Connect SUBARU SELECT MONITOR to the data link connector.

6) Turn ignition switch to ON, and SUBARU SELECT MONITOR switch to ON.

7) Select {2. Each System Check} in Main Menu.

8) Select {Engine Control System} in Selection Menu.

9) Select {1. Current Data Display & Save} in Engine Control System Diagnosis.

10) Select {1.12 Data Display} in Data Display Menu.

11) Start the engine, and read engine idle speed.

12) Check idle speed when unloaded. (With headlights, heater fan, rear defroster, radiator fan, air conditioning, etc. OFF)

Idle speed [No load and gears in neutral (MT), or N or P position (AT)]:

700±100 rpm

13) Check idle speed when loaded. (Turn air conditioning switch to "ON" and operate compressor for at least one minute before measurement.)

Idle speed [A/C "ON", no load and gears in neutral]:

800±150 rpm

CAUTION:

Never rotate idle adjusting screw. If idle speed is out of specifications, refer to General On-board Diagnosis Table under "Engine Control System". <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>

4. Ignition Timing S183086

A: INSPECTION S183086A10

- 1) Before checking ignition timing speed, check the following:
 - (1) Ensure that air cleaner element is free from clogging, spark plugs are in good condition, and that hoses are connected properly.
 - (2) Ensure that malfunction indicator light (CHECK ENGINE light) does not illuminate.
- 2) Warm-up the engine.
- 3) Stop the engine, and turn ignition switch to OFF.
- 4) Insert the cartridge to SUBARU SELECT MONITOR.
- 5) Connect SUBARU SELECT MONITOR to the data link connector.
- 6) Turn ignition switch to ON, and SUBARU SELECT MONITOR switch to ON.
- 7) Select {2. Each System Check} in Main Menu.
- 8) Select {Engine Control System} in Selection Menu.
- 9) Select {1. Current Data Display & Save} in Engine Control System Diagnosis.
- 10) Select {1.12 Data Display} in Data Display Menu.
- 11) Start the engine, at idle speed and check the ignition timing.

Ignition timing [BTDC/rpm]:

12°±10°/700

If the timing is not correct, check the ignition control system. Refer to Engine Control System. <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>

INTAKE MANIFOLD VACUUM

Mechanical


5. Intake Manifold Vacuum S183654

A: INSPECTION S183654A10

- 1) Warm-up the engine.
- 2) Disconnect the brake vacuum hose and install the vacuum gauge to the hose fitting on the manifold.

- 3) Keep the engine at the idle speed and read the vacuum gauge indication.

By observing the gauge needle movement, the internal condition of the engine can be diagnosed as described below.

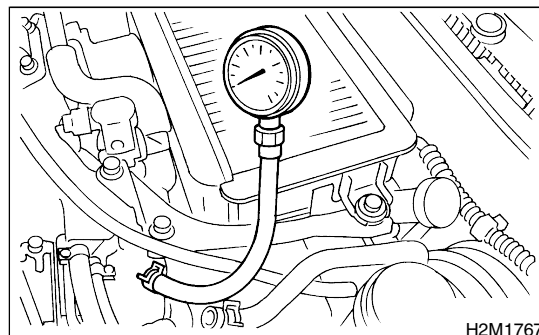

Vacuum pressure (at idling, A/C "OFF"):
Less than -60.0 kPa (-450 mmHg, -17.72 inHg)

Diagnosis of engine condition by measurement of manifold vacuum	
Vacuum gauge indication	Possible engine condition
1. Needle is steady but lower than normal position. This tendency becomes more evident as engine temperature rises.	Leakage around intake manifold gasket or disconnection or damaged vacuum hose
2. When engine speed is reduced slowly from higher speed, needle stops temporarily when it is lowering or becomes steady above normal position.	Back pressure too high, or exhaust system clogged
3. Needle intermittently drops to position lower than normal position.	Leakage around cylinder
4. Needle drops suddenly and intermittently from normal position.	Sticky valves
5. When engine speed is gradually increased, needle begins to vibrate rapidly at certain speed, and then vibration increases as engine speed increases.	Weak or broken valve springs
6. Needle vibrates above and below normal position in narrow range.	Defective ignition system or throttle chamber idle adjustment

- 4) After measuring intake manifold vacuum, install brake vacuum hose.


6. Engine Oil Pressure

S183655


Tightening torque:**25 N·m (2.5 kgf-m, 18.1 ft-lb)****A: INSPECTION**

S183655A10

- 1) Remove oil pressure switch from engine cylinder block. <Ref. to LU-21, REMOVAL, Oil Pressure Switch.>
- 2) Connect oil pressure gauge hose to cylinder block.
- 3) Connect battery ground cable.

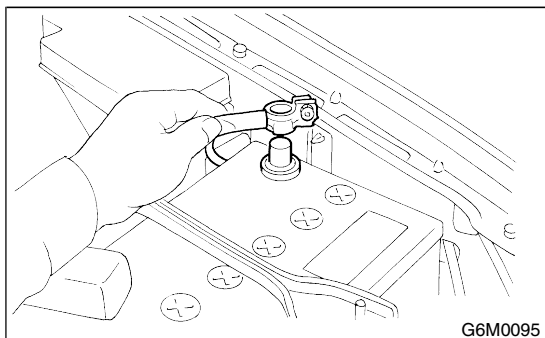

- 4) Start the engine, and measure oil pressure.

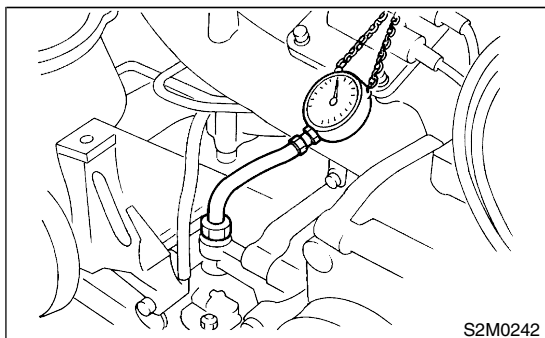**Oil pressure:****98 kPa (1.0 kg/cm², 14 psi) or more at 800 rpm****294 kPa (3.0 kg/cm², 43 psi) or more at 5,000 rpm****CAUTION:**

- If oil pressure is out of specification, check oil pump, oil filter and lubrication line. <Ref. to LU-25, INSPECTION, Engine Lubrication System Trouble in General.>
- If oil pressure warning light is turned ON and oil pressure is in specification, replace oil pressure switch. <Ref. to LU-25, INSPECTION, Engine Lubrication System Trouble in General.>

NOTE:

The specified data is based on an engine oil temperature of 80°C (176°F).

- 5) After measuring oil pressure, install oil pressure switch. <Ref. to LU-21, INSTALLATION, Oil Pressure Switch.>

7. Fuel Pressure S183656

A: INSPECTION S183656A10


WARNING:

Before removing fuel pressure gauge, release fuel pressure.


NOTE:

If out of specification, check or replace pressure regulator and pressure regulator vacuum hose.


- 1) Release fuel pressure. <Ref. to FU(DOHC TURBO)-50, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
- 2) Open fuel flap lid, and remove fuel filler cap.

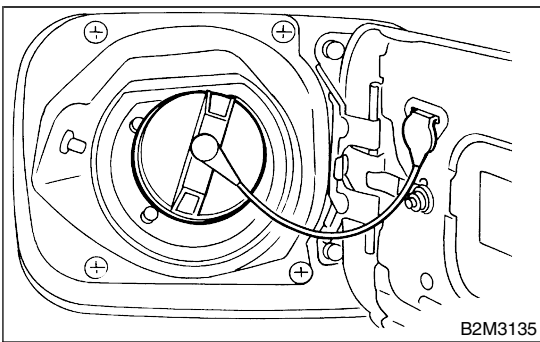

- 3) Disconnect fuel delivery hoses from fuel filter, and connect fuel pressure gauge.

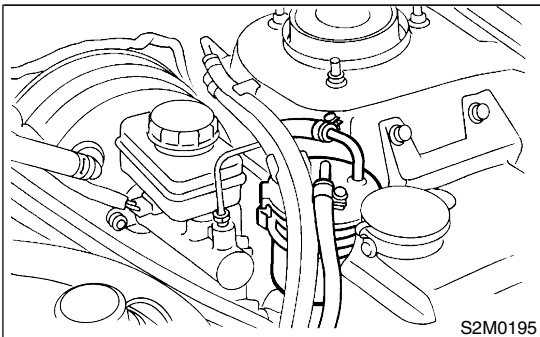


- 4) Connect connector of fuel pump relay.

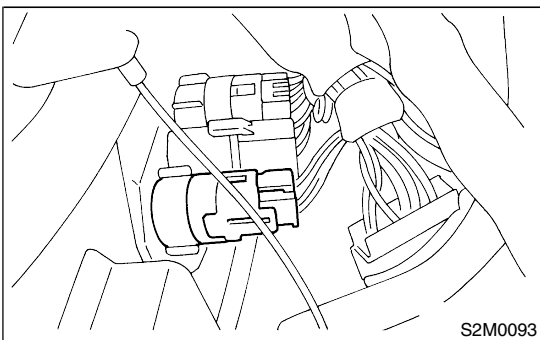

- 5) Start the engine.
- 6) Measure fuel pressure while disconnecting pressure regulator vacuum hose from intake manifold.

Fuel pressure:


Standard; 284 — 314 kPa (2.9 — 3.2 kg/cm², 41 — 46 psi)

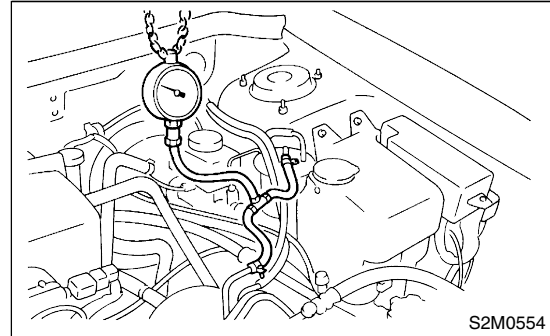

- 7) After connecting pressure regulator vacuum hose, measure fuel pressure.

Fuel pressure:

Standard; 230 — 260 kPa (2.35 — 2.65 kg/cm², 33 — 38 psi)

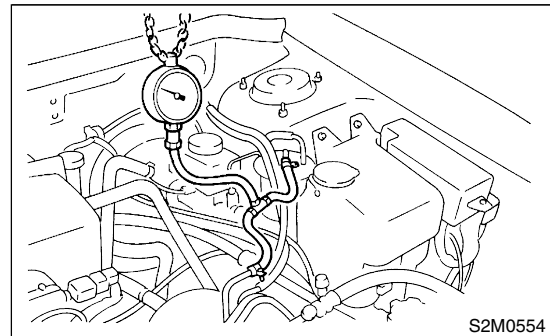

NOTE:

The fuel pressure gauge registers 10 to 20 kPa (0.1 to 0.2 kg/cm², 1 to 3 psi) higher than standard values during high-altitude operations.

VALVE CLEARANCE


8. Valve Clearance S183083

A: INSPECTION S183083A10


CAUTION:

Inspection and adjustment of valve clearance should be performed while engine is cold.

- 1) Set the vehicle onto the lift.
- 2) Disconnect battery ground cable.

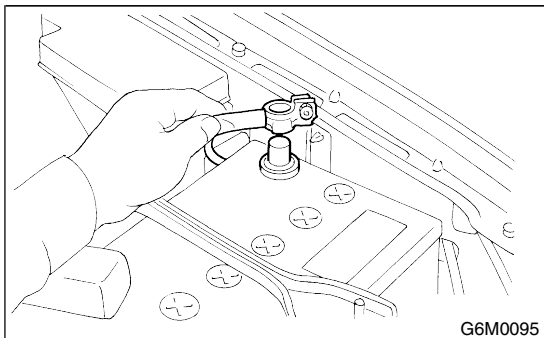


- 3) Remove air intake duct. <Ref. to IN(DOHC TURBO)-8, REMOVAL , Air Intake Duct.>
- 4) Remove one bolt which secures timing belt cover (RH).
- 5) Lift-up the vehicle.
- 6) Remove under cover.
- 7) Loosen remaining bolts which secure timing belt cover (RH), then remove belt cover.
- 8) Lower the vehicle.
- 9) When inspecting #1 and #3 cylinders:
 - (1) Pull out engine harness connector with bracket from air cleaner upper cover.

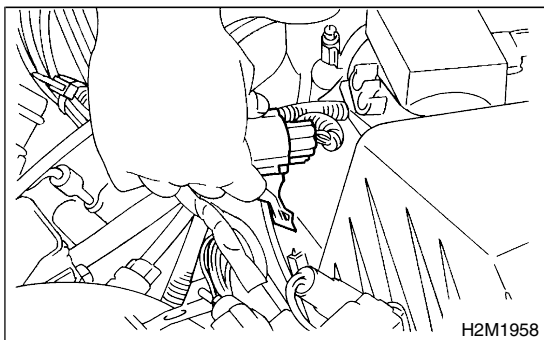


- (2) Remove air cleaner case. <Ref. to IN(DOHC TURBO)-7, REMOVAL, Air Cleaner.>
- (3) Disconnect spark plug cords from spark plugs (#1 and #3 cylinders).
- (4) Place suitable container under the vehicle.
- (5) Disconnect PCV hose from rocker cover (RH).
- (6) Remove bolts, then remove rocker cover (RH).


- 10) When inspecting #2 and #4 cylinders;
 - (1) Disconnect battery cables, and then remove battery and battery carrier.

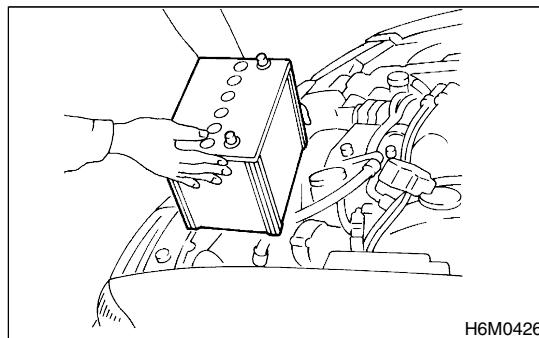


- (2) Remove bolt which secures engine harness bracket onto body.

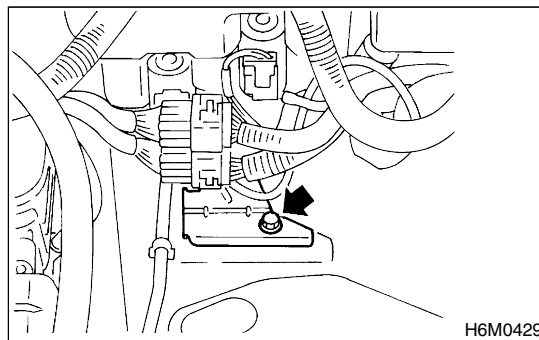

- (3) Remove washer tank mounting bolts.

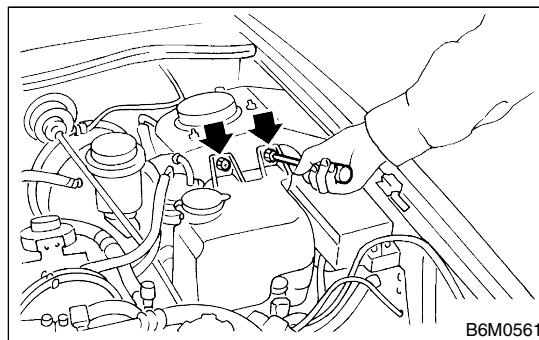


- (4) Disconnect washer motor connectors.

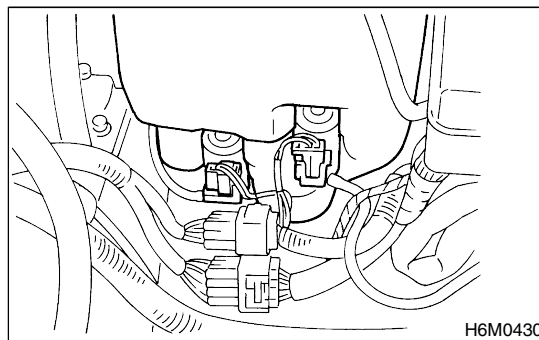

VALVE CLEARANCE

Mechanical

- (5) Move washer tank upward.

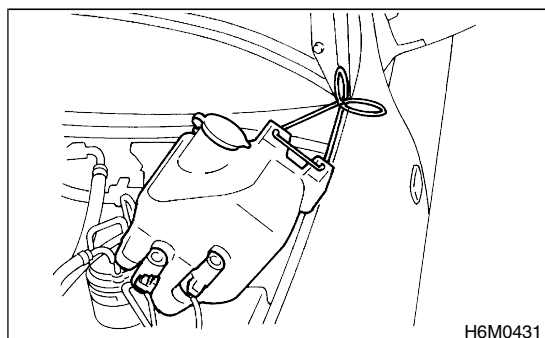

- (6) Disconnect spark plug cords from spark plugs (#2 and #4 cylinders).

- (7) Place suitable container under the vehicle.

- (8) Disconnect PCV hose from rocker cover (LH).


- (9) Remove bolts, then remove rocker cover (LH).

- 11) Turn crankshaft pulley clockwise until arrow mark on camshaft sprocket is set to position shown in figure.

NOTE:

Turn crankshaft using ST.

ST 499987500 CRANKSHAFT SOCKET

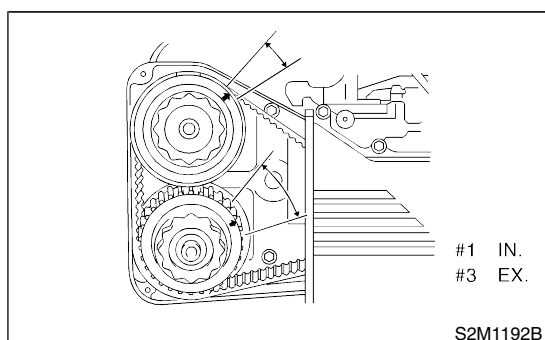

- 12) Measure #1 cylinder intake valve and #3 cylinder exhaust valve clearance by using thickness gauge (A).

CAUTION:

- Insert the thickness gauge in as horizontal a direction as possible with respect to the shim.
- Measure exhaust valve clearances while lifting-up the vehicle.


Valve clearance:

Intake: 0.20 ± 0.02 mm (0.0079 ± 0.0008 in)

Exhaust: 0.25 ± 0.02 mm (0.0098 ± 0.0008 in)

NOTE:


If the measured value is not within specification, take notes of the value in order to adjust the valve clearance later on.

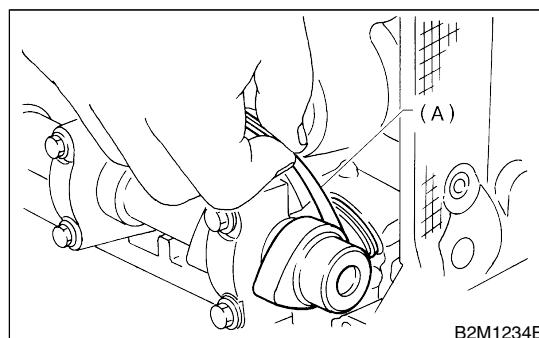


- 13) If necessary, adjust the valve clearance. <Ref. to ME(DOHC TURBO)-30, ADJUSTMENT, Valve Clearance.>

- 14) Further turn crankshaft pulley clockwise. Using the same procedures described previously, then measure valve clearances again.

- (1) Set arrow mark on camshaft sprocket to position shown in figure, and measure #2 cylinder exhaust valve and #3 cylinder intake valve clearances.

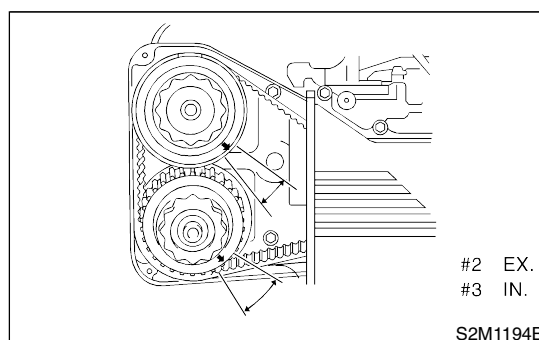


- (2) Set arrow mark on camshaft sprocket to position shown in figure, and measure #2 cylinder intake valve and #4 cylinder exhaust valve clearances.

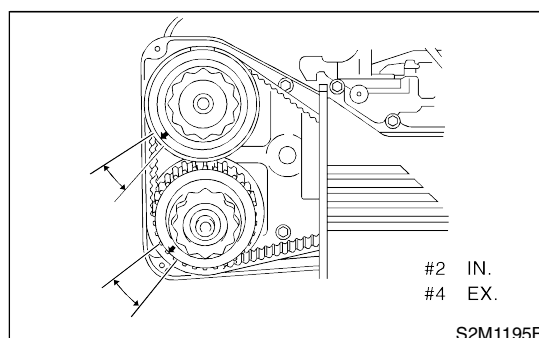

VALVE CLEARANCE

Mechanical

(3) Set arrow mark on camshaft sprocket to position shown in figure, and measure #1 cylinder exhaust valve and #4 cylinder intake valve clearances.

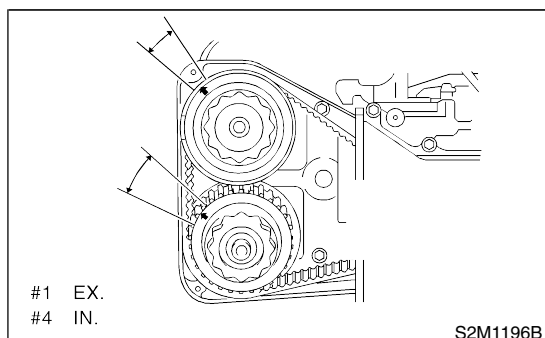


15) After inspection, install the related parts in the reverse order of removal.

Tightening torque:

32 N·m (3.3 kgf-m, 24 ft-lb)

en0191

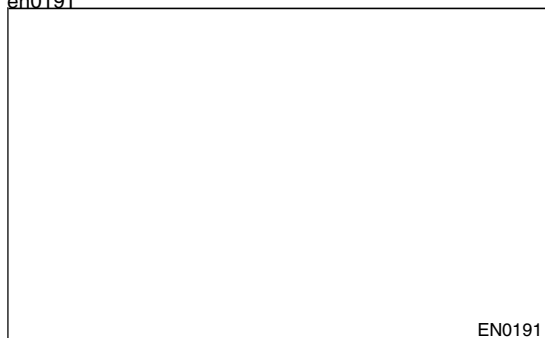

B: ADJUSTMENT

S183083A01


CAUTION:

Adjustment of valve clearance should be performed while engine is cold.

1) Measure all valve clearances. <Ref. to ME(DOHC TURBO)-28, INSPECTION, Valve Clearance.>


NOTE:

Record each valve clearance after it has been measured.

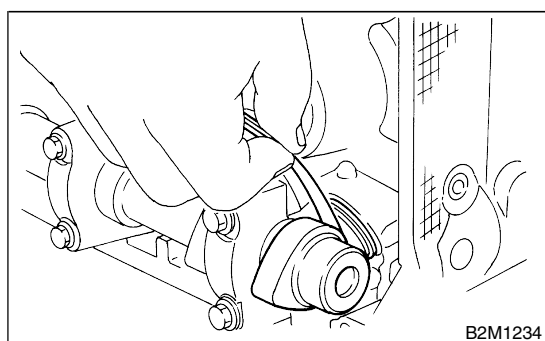


2) Remove shim from valve lifter.


(1) Prepare the ST.
ST 498187200 SHIM REPLACER

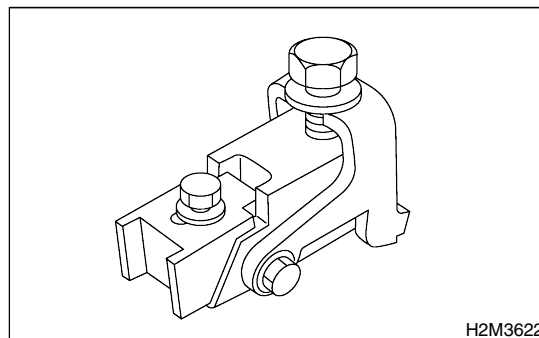

(2) Rotate the notch of the valve lifter outward by 45°.

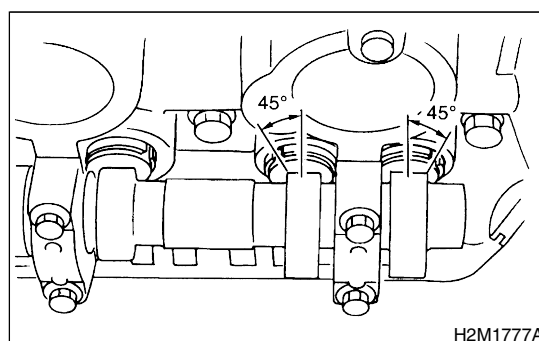

(3) Adjust SHIM REPLACER notch to valve lifter and set it.

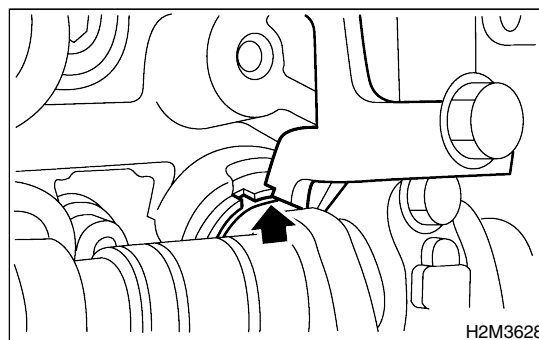

NOTE:

When setting, be careful SHIM REPLACER edge does not touch shim.


(4) Tighten bolt (A) and install it to the cylinder head.

ME(DOHC TURBO)-30


VALVE CLEARANCE

Mechanical

- (5) Tighten bolt (B) and insert the valve lifter.

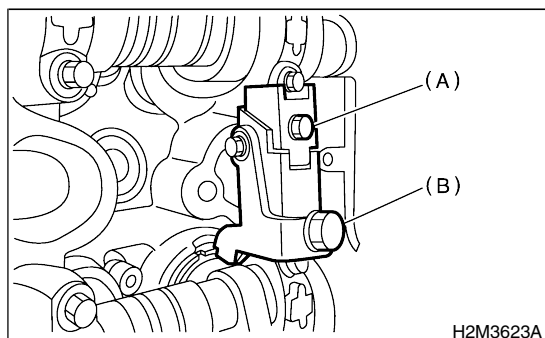


- (6) Insert tweezers into the notch of the valve lifter, and take the shim out.

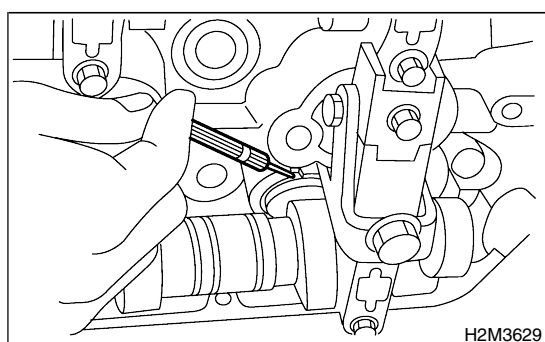


NOTE:

By using a magnet (A), the shim (B) can be taken out without dropping it.

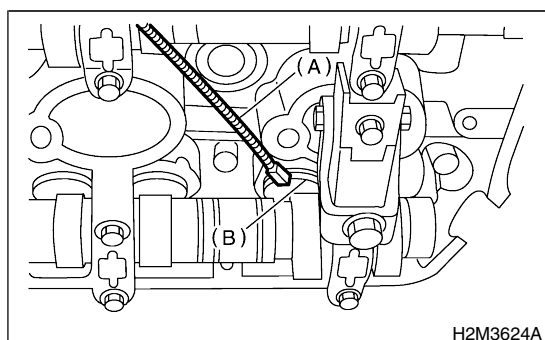

- 3) Measure thickness of shim with micrometer.

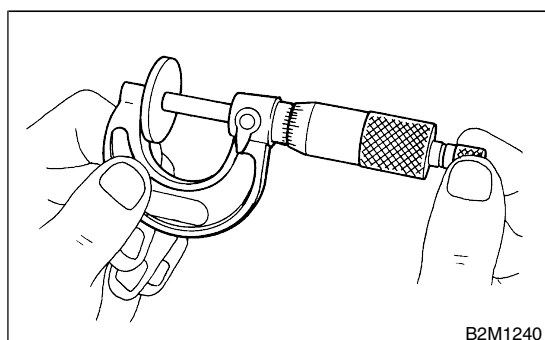

- 4) Select a shim of suitable thickness using measured valve clearance and shim thickness, by referring to the following table.

- 5) Set suitable shim selected in step 4) to valve lifter.

Unit: mm	
Intake valve: $S = (V + T) - 0.20$	
Exhaust valve: $S = (V + T) - 0.25$	
S: Shim thickness to be used	
V: Measured valve clearance	
T: Shim thickness required	

Part No.	Thickness mm (in)
13218 AK010	2.00 (0.0787)
13218 AK020	2.02 (0.0795)
13218 AK030	2.04 (0.0803)
13218 AK040	2.06 (0.0811)
13218 AK050	2.08 (0.0819)
13218 AK060	2.10 (0.0827)
13218 AK070	2.12 (0.0835)
13218 AK080	2.14 (0.0843)
13218 AK090	2.16 (0.0850)
13218 AK100	2.18 (0.0858)
13218 AK110	2.20 (0.0866)
13218 AE710	2.22 (0.0874)
13218 AE730	2.24 (0.0882)
13218 AE750	2.26 (0.0890)
13218 AE770	2.28 (0.0898)
13218 AE790	2.30 (0.0906)
13218 AE810	2.32 (0.0913)
13218 AE830	2.34 (0.0921)
13218 AE850	2.36 (0.0929)
13218 AE870	2.38 (0.0937)
13218 AE890	2.40 (0.0945)
13218 AE910	2.42 (0.0953)
13218 AE920	2.43 (0.0957)
13218 AE930	2.44 (0.0961)
13218 AE940	2.45 (0.0965)
13218 AE950	2.46 (0.0969)
13218 AE960	2.47 (0.0972)
13218 AE970	2.48 (0.0976)
13218 AE980	2.49 (0.0980)
13218 AE990	2.50 (0.0984)
13218 AF000	2.51 (0.0988)
13218 AF010	2.52 (0.0992)
13218 AF020	2.53 (0.0996)
13218 AF030	2.54 (0.1000)
13218 AF040	2.55 (0.1004)
13218 AF050	2.56 (0.1008)
13218 AF060	2.57 (0.1012)
13218 AF070	2.58 (0.1016)
13218 AF090	2.60 (0.1024)
13218 AF110	2.62 (0.1031)

VALVE CLEARANCE

Mechanical

13218 AF130	2.64 (0.1039)
13218 AF150	2.66 (0.1047)
13218 AF170	2.68 (0.1055)
13218 AF190	2.70 (0.1063)


6) Inspect all valves for clearance again at this stage. If the valve clearance is not correct, repeat the procedure over again from the first step.

7) After inspection, install the related parts in the reverse order of removal.


9. Engine Assembly S183079

A: REMOVAL S183079A18

- 1) Set the vehicle on lift arms.
- 2) Open front hood fully and support with stay.
- 3) Raise rear seat, and turn floor mat up.
- 4) Release fuel pressure.
 - (1) Disconnect fuel pump relay connector.

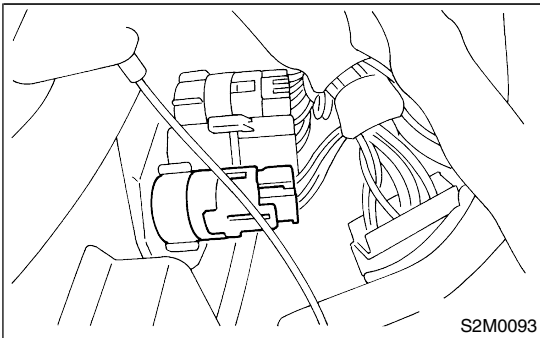


- (2) Start the engine, and run until stalls.
- (3) After the engine stalls, crank it for five seconds more.
- (4) Turn ignition switch to "OFF".
- 5) Remove filler cap.
- 6) Disconnect battery ground terminal.

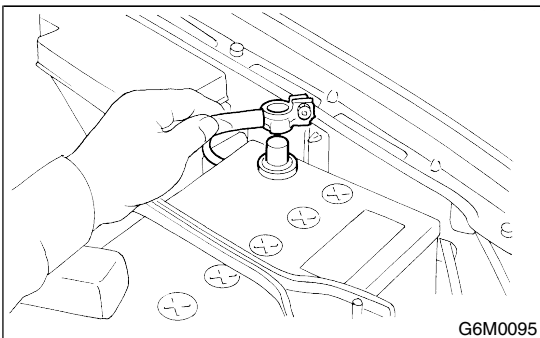


- 7) Remove radiator from vehicle. <Ref. to CO-25, REMOVAL, Radiator.>
- 8) Remove coolant filler tank. <Ref. to CO-37, REMOVAL, Coolant Filler Tank.>
- 9) Collect refrigerant, and remove pressure hoses.
 - (1) Place and connect the attachment hose to the refrigerant recycle system.
 - (2) Collect refrigerant from A/C system.

- (3) Disconnect A/C pressure hoses from A/C compressor.

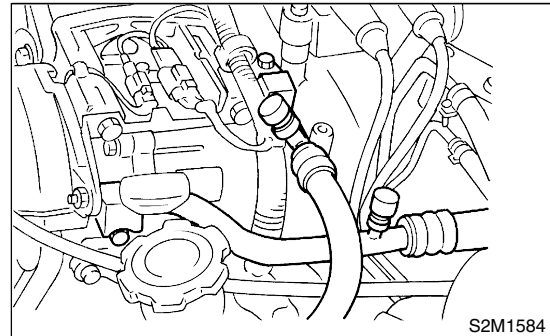


- 10) Remove intercooler. <Ref. to IN(DOHC TURBO)-10, REMOVAL, Intercooler.>
- 11) Disconnect the following connectors and cable.


- (1) Engine harness connector

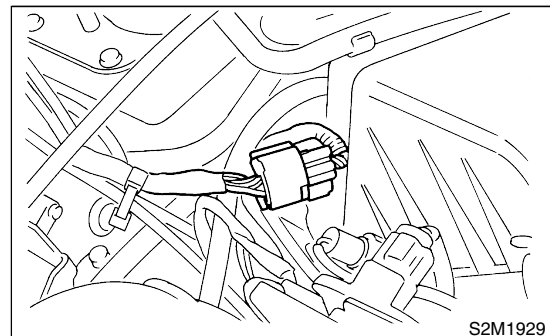

- (2) Engine ground terminal

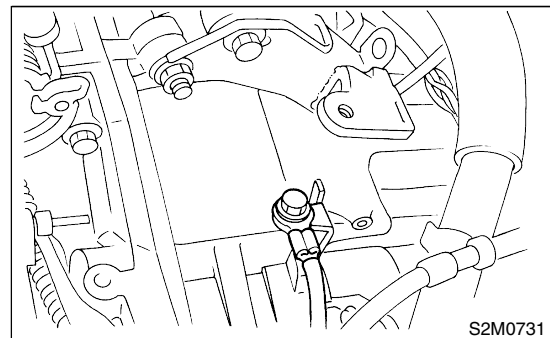


- (3) Engine harness connector

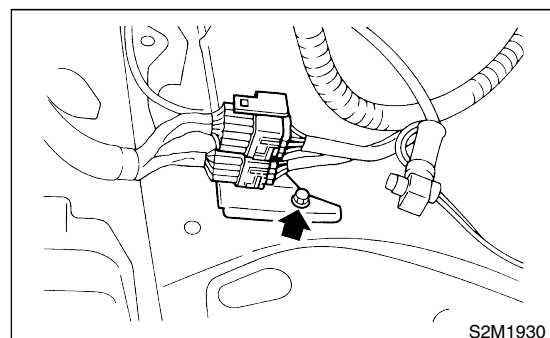

ENGINE ASSEMBLY


Mechanical

- (4) Generator connector, terminal and A/C compressor connectors

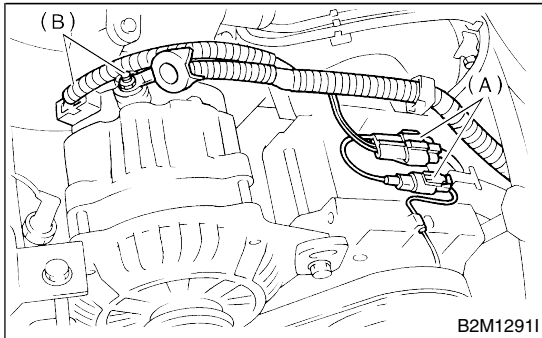


- (A) A/C compressor connector
(B) Generator connector and terminal

- (5) Accelerator cable

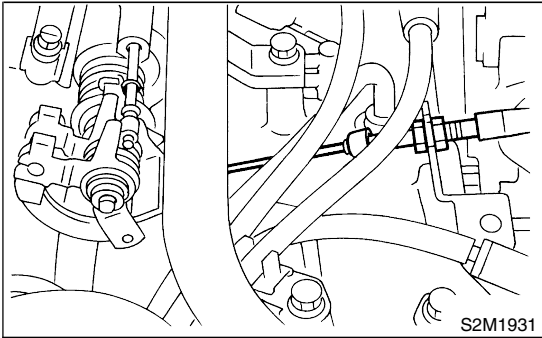

- (6) Clutch release spring

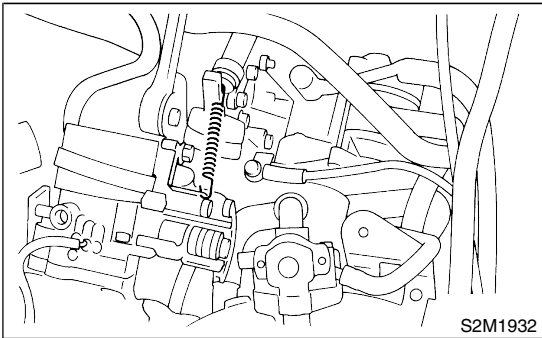

- 12) Disconnect the following hoses


- (1) Brake booster vacuum hose

en0204



- (2) Heater inlet outlet hose

en0205

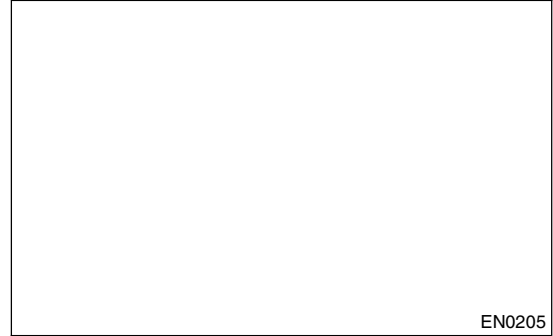

- 13) Remove power steering pump from bracket.


- (1) Loosen lock bolt and slider bolt, and remove front side V-belt. <Ref. to ME(DOHC TURBO)-44, FRONT SIDE BELT, REMOVAL, V-belt.>

- (2) Disconnect the power steering switch connector.


en0360



- (3) Remove pipe with bracket from intake manifold.

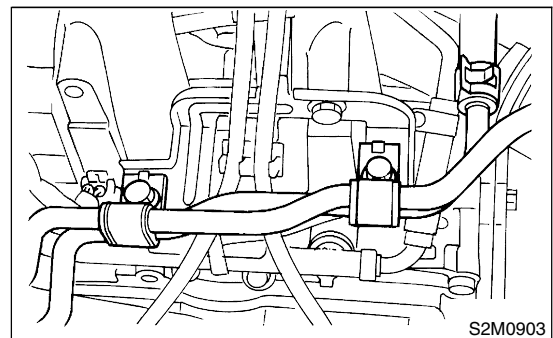

- (4) Remove power steering pump from engine.

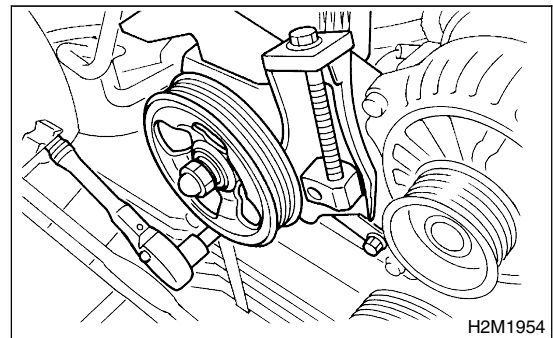

ENGINE ASSEMBLY

Mechanical

- (5) Remove power steering tank from the bracket by pulling it upward.

en0361



EN0361

- (6) Place power steering pump on the right side wheel apron.


en0208



EN0208


- 14) Remove center exhaust pipe. <Ref. to EX(DOHC TURBO)-9, REMOVAL, Center Exhaust Pipe.>

- 15) Remove nuts which hold lower side of transmission to engine.

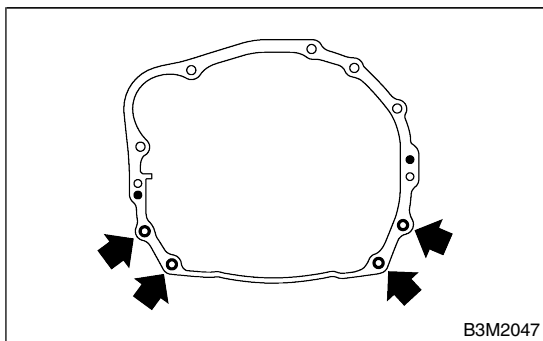

B3M2047

- 16) Remove nuts which install front cushion rubber onto front crossmember.

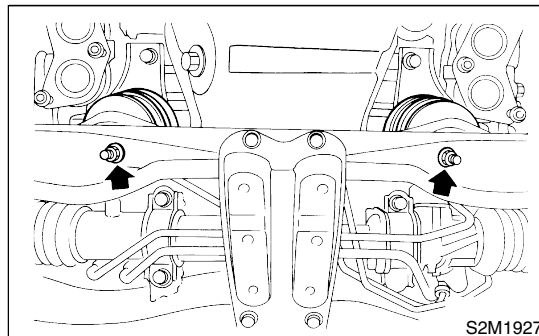


S2M1927

- 17) Separate clutch release fork from release bearing. (MT vehicles)

- (1) Remove clutch operating cylinder from transmission.

- (2) Remove plug using 10 mm hexagon wrench.

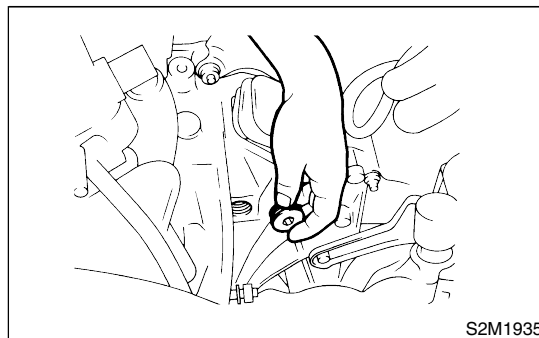


S2M1935

ENGINE ASSEMBLY

Mechanical

- (3) Screw 6 mm dia. bolt into release fork shaft, and remove it.

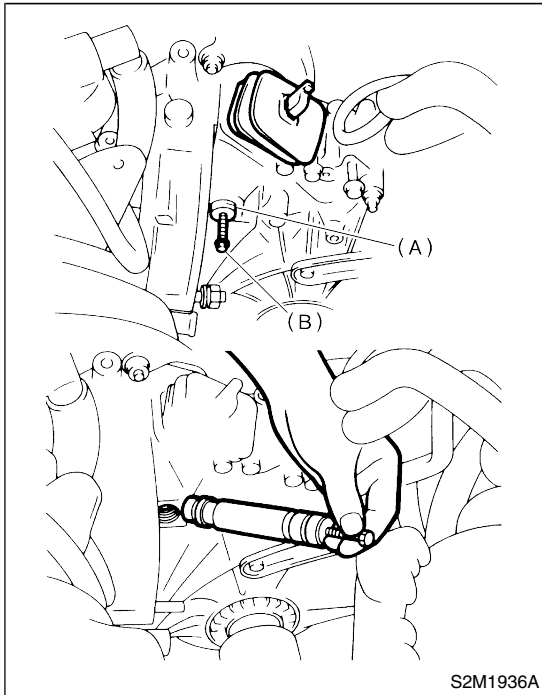

- (A) Shaft
(B) Bolt

- (4) Raise release fork and unfasten release bearing tabs to free release fork.


CAUTION:

Step (4) is required to prevent interference with engine when removing engine from transmission.


- 18) Select torque converter clutch from drive plate. (AT vehicles)

- (1) Lower the vehicle.
- (2) Remove service hole plug.
- (3) Remove bolts which hold torque converter clutch to drive plate.
- (4) Remove other bolts while rotating the engine using ST.

ST 499977300 CRANK PULLEY WRENCH

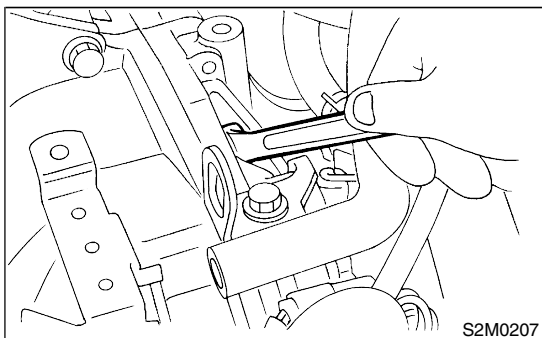

- 19) Remove pitching stopper.

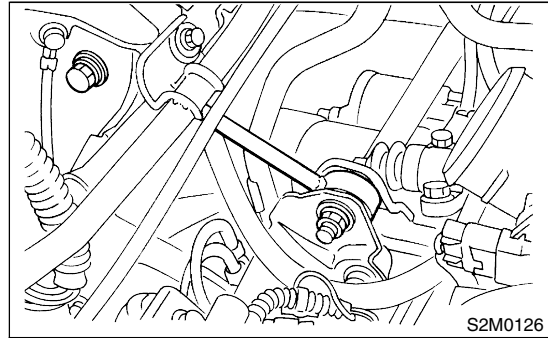


- 20) Disconnect fuel delivery hose, return hose and evaporation hose.

CAUTION:

- Catch fuel from hose into container.
- Disconnect hose with its end wrapped with cloth to prevent fuel from splashing.




- 21) Remove fuel filter and bracket.

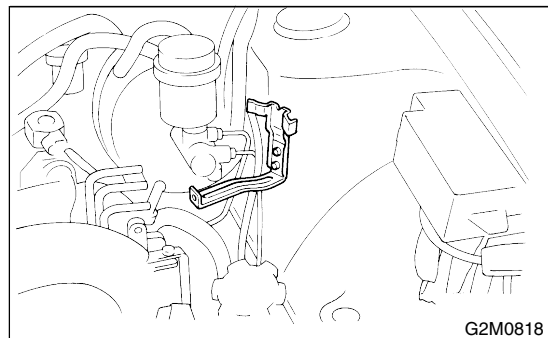

ENGINE ASSEMBLY

Mechanical


- 22) Support engine with a lifting device and wire ropes.

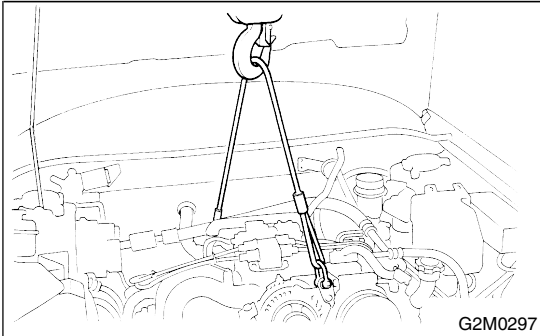

- 23) Support transmission with a garage jack.

CAUTION:


Before moving engine away from transmission, check to be sure no work has been overlooked. Doing this is very important in order to facilitate re-installation and because transmission lowers under its own weight.

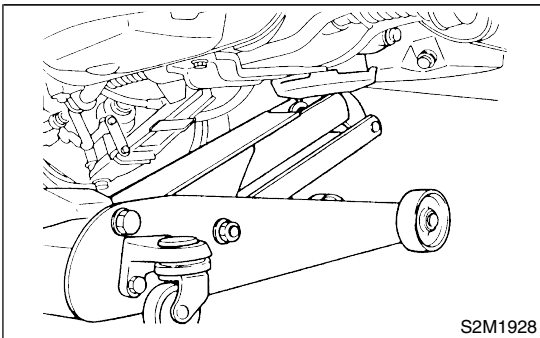


- 24) Separation of engine and transmission.

- (1) Remove starter. <Ref. to SC-5, REMOVAL, Starter.>
- (2) Install ST to torque converter clutch case. (AT vehicles)

ST 498277200 STOPPER SET

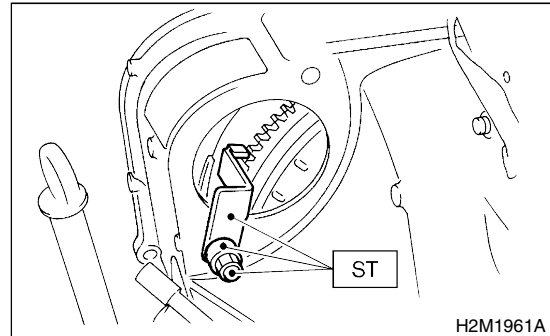

- (3) Remove bolt which holds right upper side of transmission to engine.

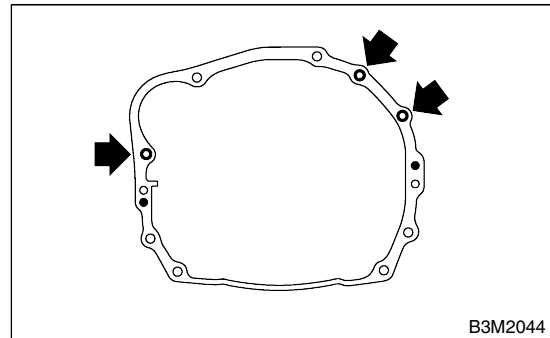

- 25) Remove engine from vehicle.

- (1) Slightly raise engine.
- (2) Raise transmission with garage jack.
- (3) Move engine horizontally until mainshaft is withdrawn from clutch cover.
- (4) Slowly move engine away from engine compartment.

CAUTION:

Be careful not to damage adjacent parts or body panels with crank pulley, oil pressure gauge, etc.


- 26) Remove front cushion rubbers.

B: INSTALLATION S183079A11


- 1) Install clutch release fork and bearing onto transmission. (MT vehicles)

ENGINE ASSEMBLY

- (1) Remove release bearing from clutch cover with flat type screw driver.

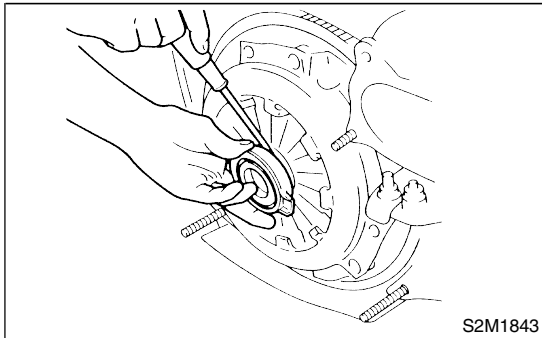


- (2) Install release bearing on transmission.
(3) Install release fork into release bearing tab.

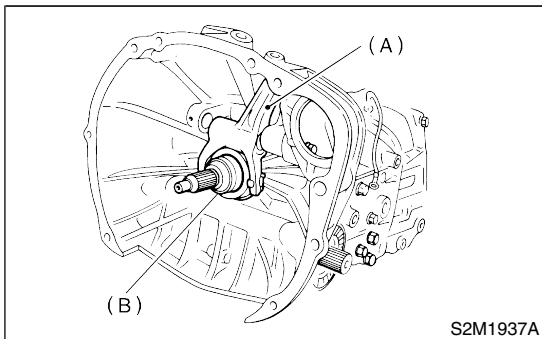

- (A) Release fork
(B) Release bearing


- (4) Apply grease to specified points.
● Spline FX2200
● Shaft SUNLIGHT 2

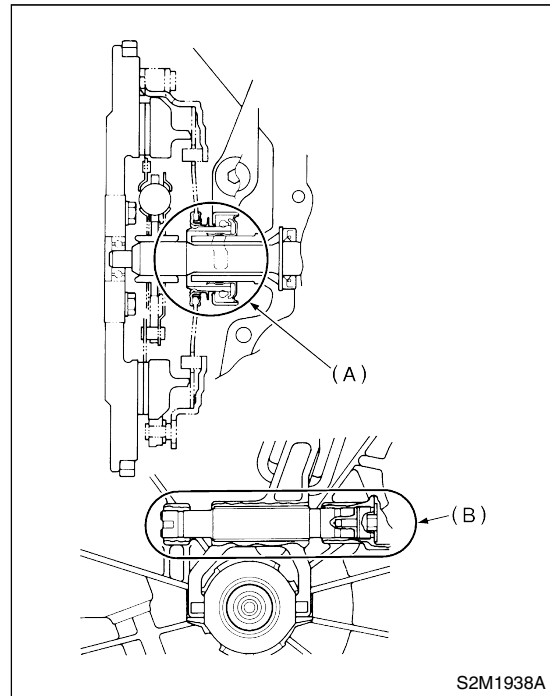

- (A) Spline (FX2200)
(B) Shaft (SUNLIGHT 2)

- (5) Insert release fork shaft into release fork.

CAUTION:
Make sure the cutout portion of release fork shaft contacts spring pin.

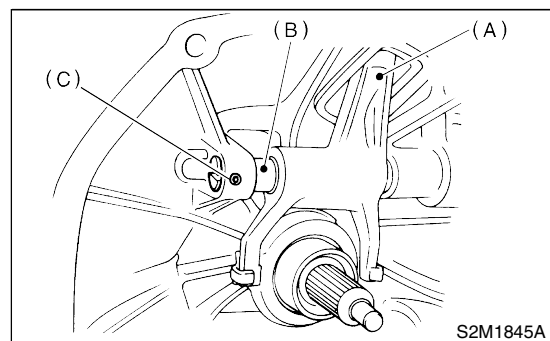


- (A) Release fork
(B) Release shaft
(C) Spring pin

(6) Tighten plug.

Tightening torque:

44 N·m (4.5 kgf-m, 32.5 ft-lb)

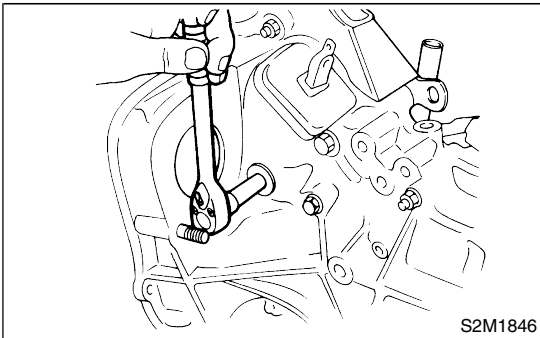

2) Install front cushion rubbers to engine.

Tightening torque:

34 N·m (3.5 kgf-m, 25.3 ft-lb)

3) Install engine onto transmission.

(1) Position engine in engine compartment and align it with transmission.

CAUTION:


Be careful not to damage adjacent parts or body panels with crank pulley, oil pressure gauge, etc.

(2) Apply a small amount of grease to splines of mainshaft. (MT vehicles)

4) Tighten bolt which hold right upper side of transmission to engine.


Tightening torque:

50 N·m (5.1 kgf-m, 36.9 ft-lb)

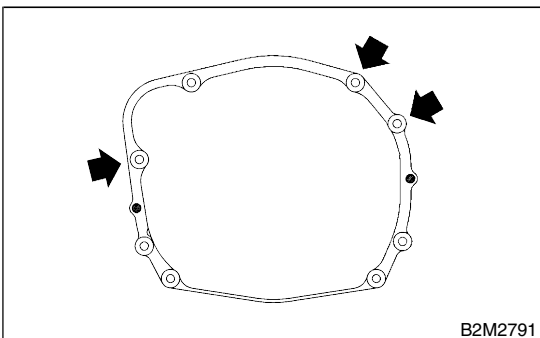

5) Remove lifting device and wire ropes.

6) Remove garage jack.

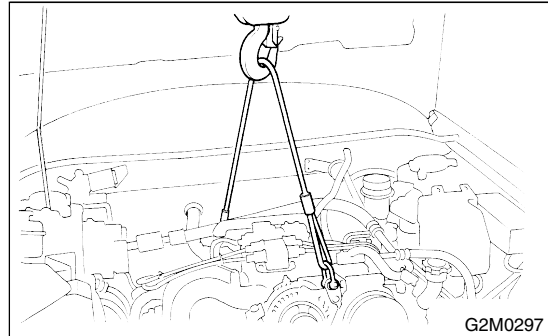


7) Install pitching stopper.

Tightening torque:

T1: 49 N·m (5.0 kgf-m, 36.2 ft-lb)

T2: 57 N·m (5.8 kgf-m, 42 ft-lb)

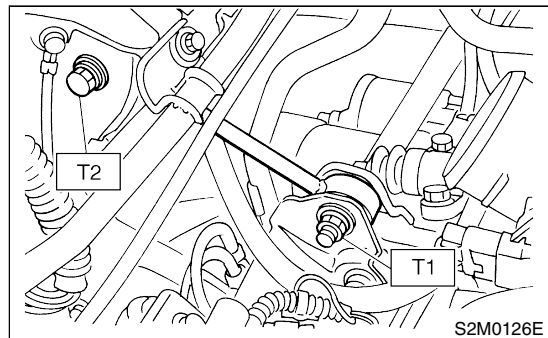

8) Remove ST from torque converter clutch case. (AT vehicles)

NOTE:

Be careful not to drop the ST into the torque converter clutch case when removing ST.

ST 498277200 STOPPER SET

9) Install starter. <Ref. to SC-6, INSTALLATION, Starter.>

10) Install torque converter clutch onto drive plate. (AT vehicles)

(1) Tighten bolts which hold torque converter clutch to drive plate.

ENGINE ASSEMBLY

Mechanical

- (2) Tighten other bolts while rotating the engine by using ST.


CAUTION:

Be careful not to drop bolts into torque converter clutch housing.


ST 499977300 CRANK PULLEY WRENCH

Tightening torque:


25 N·m (2.5 kgf-m, 18.1 ft-lb)

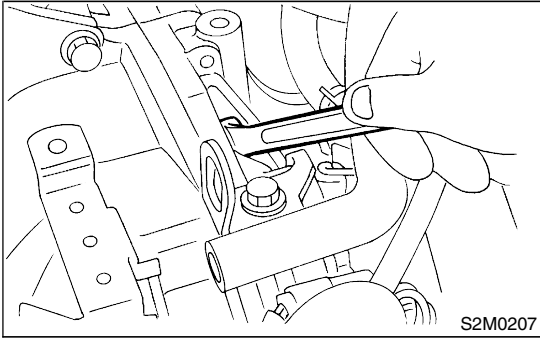

- (3) Clog plug onto service hole.
11) Push clutch release lever to fit bearing into clutch cover.

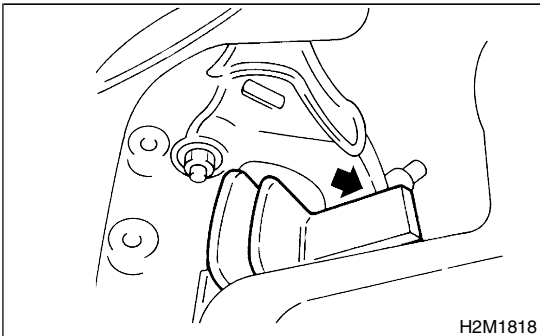


- 12) Install fuel filter and bracket.

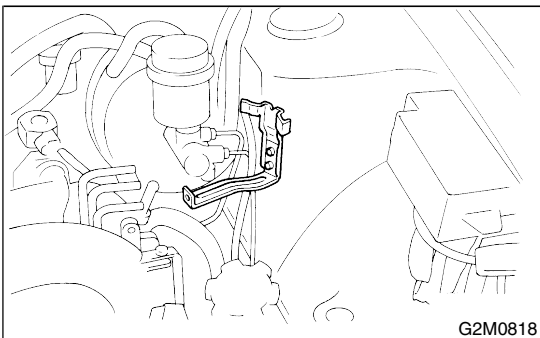

- 13) Install power steering pump on bracket.


- (1) Install the power steering tank on bracket.
en0361

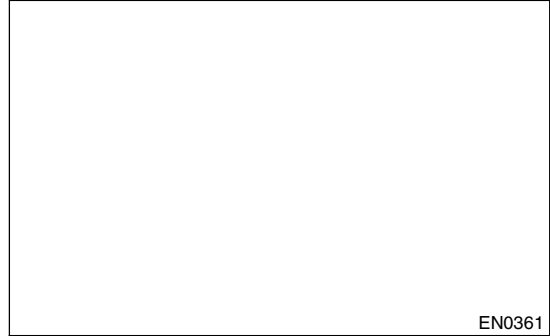


- (2) Install power steering pump on bracket, and tighten bolts.

Tightening torque:

20.1 N·m (2.05 kgf-m, 14.8 ft-lb)

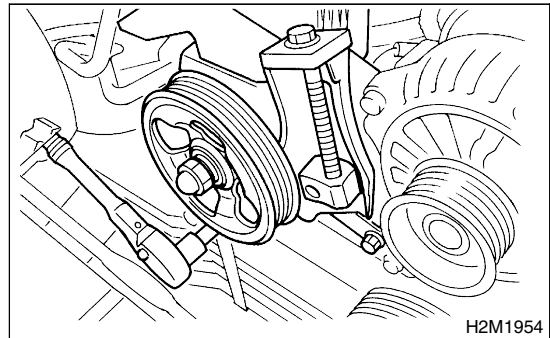

- (3) Install power steering pipe bracket on right side intake manifold, and install spark plug codes.

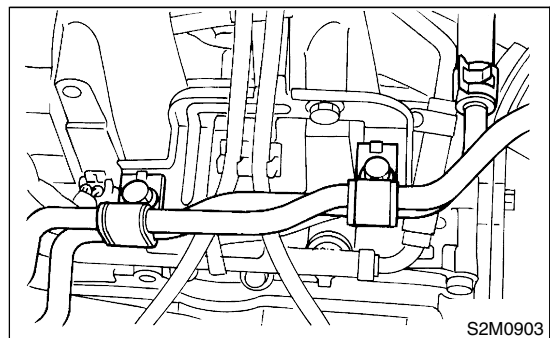

- (4) Connect power steering switch connector.
en0360




ME(DOHC TURBO)-40

- (5) Install front side V-belt, and adjust it. <Ref. to ME(SOHC)-42, FRONT SIDE BELT, INSTALLATION, V-belt.>

14) Tighten nuts which hold lower side of transmission to engine.

Tightening torque:

50 N·m (5.1 kgf-m, 36.9 ft-lb)

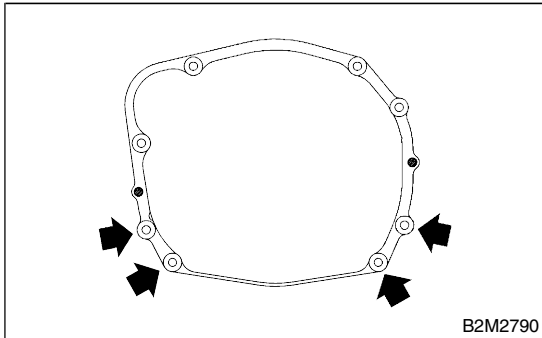


15) Tighten nuts which install front cushion rubber onto crossmember.

Tightening torque:

83 N·m (8.5 kgf-m, 61 ft-lb)

CAUTION:

Make sure the front cushion rubber mounting bolts (A) and locator (B) are securely installed.

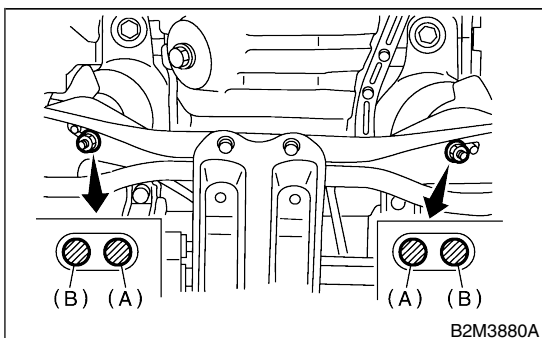

16) Install center exhaust pipe. <Ref. to EX(DOHC TURBO)-7, INSTALLATION, Front Exhaust Pipe.>

17) Connect the following hoses.

- (1) Fuel delivery hose, return hose and evaporation hose
- (2) Heater inlet and outlet hoses
- (3) Brake booster vacuum hose

18) Connect the following connectors and terminals.

- (1) Engine ground terminal
- (2) Engine harness connectors
- (3) Generator connector and terminal
- (4) A/C compressor connectors (With A/C)

19) Connect the following cables.


- (1) Accelerator cable
- (2) Clutch release spring

CAUTION:

After connecting each cable, adjust them.

20) Install air intake system.

- (1) Install intercooler. <Ref. to IN(DOHC TURBO)-10, INSTALLATION, Intercooler.>
- (2) Install air cleaner element and air cleaner upper cover.
- (3) Install engine harness connector bracket.
- (4) Install filler hose to air cleaner case.

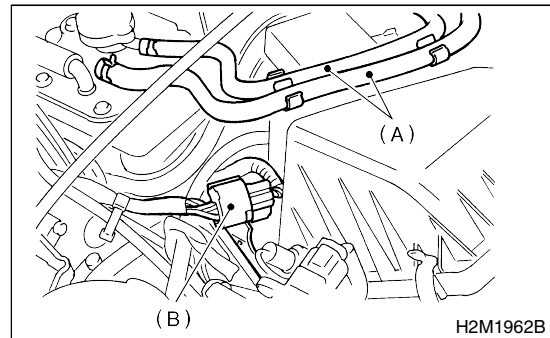

- (A) Filler hose
(B) Connector bracket


21) Install A/C pressure hoses. (With A/C)

CAUTION:

Use new O-rings.

Tightening torque:

25 N·m (2.5 kgf-m, 18.1 ft-lb)

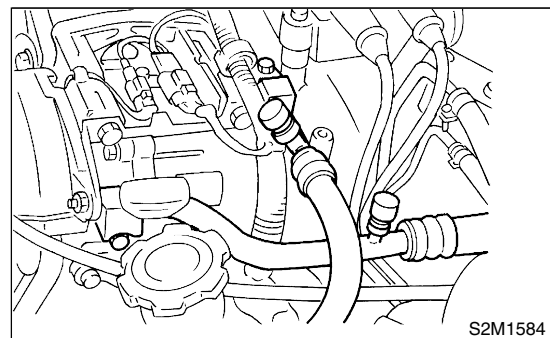

22) Install radiator. <Ref. to CO-27, INSTALLATION, Radiator.>

23) Install coolant filler tank. <Ref. to CO-27, INSTALLATION, Radiator.>

24) Install window washer tank.

25) Install battery in the vehicle, and connect cables.

26) Fill coolant.

<Ref. to CO-27, INSTALLATION, Radiator.>

27) Charge A/C system with refrigerant.

<Ref. to AC-20, OPERATION, Refrigerant Charging Procedure.>

28) Remove front hood stay, and close front hood.

29) Take off the vehicle from lift arms.

10. Engine Mounting S183085

A: REMOVAL S183085A18

- 1) Remove engine assembly. <Ref. to ME(DOHC TURBO)-33, REMOVAL, Engine Assembly.>
- 2) Remove engine mounting from engine assembly.

B: INSTALLATION S183085A11

Install in the reverse order of removal.

Tightening torque:

Engine mounting;

35 N·m (3.6 kgf-m, 25.8 ft-lb)

C: INSPECTION S183085A10


Make sure there are no cracks or other damage.

11. Preparation for Overhaul S183091

A: PROCEDURE S183091E45

1) After removing the engine from the body, secure it in the ST shown below.

ST1	498457000	ENGINE STAND ADAPTER
		RH
ST2	498457100	ENGINE STAND ADAPTER
		LH
ST3	499817000	ENGINE STAND

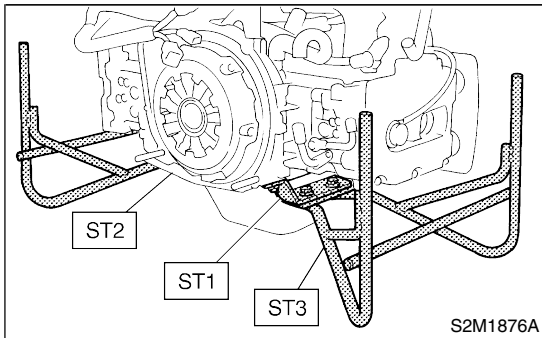

2) In this section the procedures described under each index are all connected and stated in order. It will be the complete procedure for overhauling of the engine itself when you go through all steps in the process.

Therefore, in this section, to conduct the particular procedure within the flow of a section, you need to go back and conduct the procedure described previously in order to do that particular procedure.


V-BELT

12. V-belt S183080A: REMOVAL S183080A181. FRONT SIDE BELT S183080A1801

NOTE:

Perform the following procedures 1) to 4) with the engine installed to the body.

- 1) Remove V-belt cover.

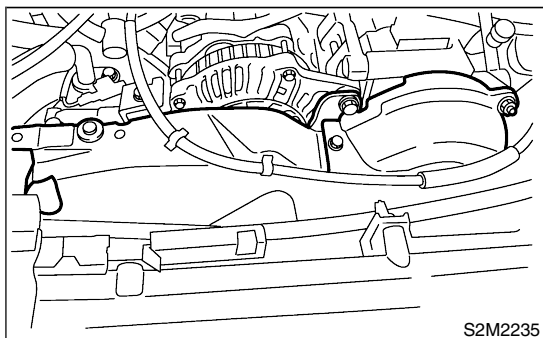

- 2) Loosen the lock bolt (A).
- 3) Loosen the slider bolt (B).
- 4) Remove the front side belt (C).

en0225


2. REAR SIDE BELT S183080A1802

- 1) Loosen the lock nut (A).
- 2) Loosen the slider bolt (B).

en0226



- 3) Remove the A/C belt.
- 4) Remove the A/C belt tensioner.

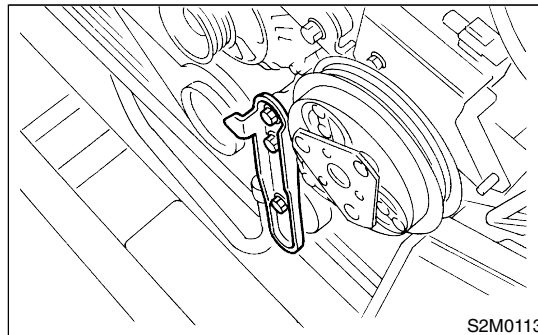B: INSTALLATION S183080A111. FRONT SIDE BELT S183080A1101

CAUTION:

Wipe off any oil or water on the belt and pulley.

- 1) Install a belt, and tighten the slider bolt so as to obtain the specified belt tension <Ref. to ME(DOHC TURBO)-45, INSPECTION, V-belt.>
- 2) Tighten the lock bolt (A)
- 3) Tighten slider bolt (B).

Tightening torque:

Lock bolt through bolt:

25 N·m (2.5 kgf-m, 18 ft-lb)

Slider bolt:

8 N·m (0.8 kgf-m, 5.5 ft-lb)

en0225



2. REAR SIDE BELT

S183080A1102


- 1) Install a belt, and tighten the slider bolt (B) so as to obtain the specified belt tension. <Ref. to ME(DOHC TURBO)-45, INSPECTION, V-belt.>
- 2) Tighten the lock nut (A).

Tightening torque:

Lock nut (A);

22.6 N·m (2.3 kgf-m, 16.6 ft-lb)

en0226

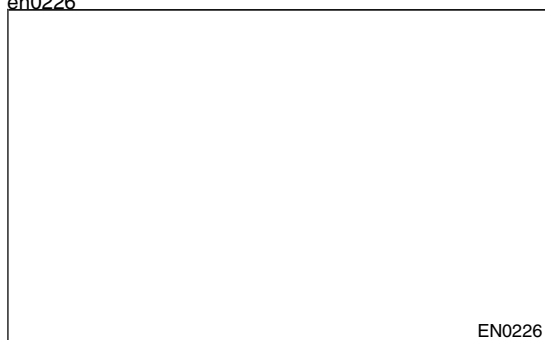

C: INSPECTION

S183080A10

- 1) Replace belts, if cracks, fraying or wear is found.
- 2) Check drive belt tension and adjust it if necessary by changing generator installing position and/or idler pulley installing position.

Belt tension

(A)

replaced: 7 — 9 mm (0.276 — 0.354 in)


reused: 9 — 11 mm (0.354 — 0.433 in)

(B)*

replaced: 7.5 — 8.5 mm (0.295 — 0.335 in)

reused: 9.0 — 10.0 mm (0.354 — 0.394 in)

***: With Air conditioner**

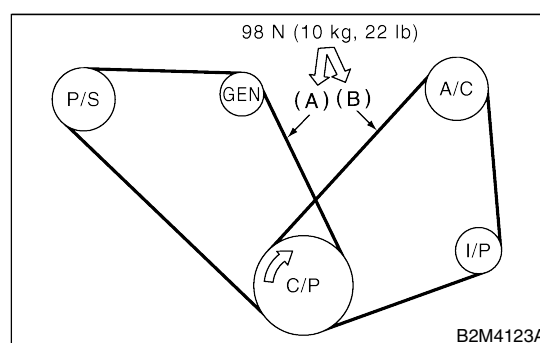

C/P Crankshaft pulley

GEN Generator

P/S Power steering oil pump pulley

A/C Air conditioning compressor pulley


I/P Idler pulley

CRANKSHAFT PULLEY

13. Crankshaft Pulley S183098

A: REMOVAL S183098A18

- 1) Remove V-belt. <Ref. to ME(DOHC TURBO)-44, REMOVAL, V-belt.>
- 2) Remove crankshaft pulley bolt. To lock crankshaft, use ST.
ST 499977300
CRANKSHAFT PULLEY WRENCH

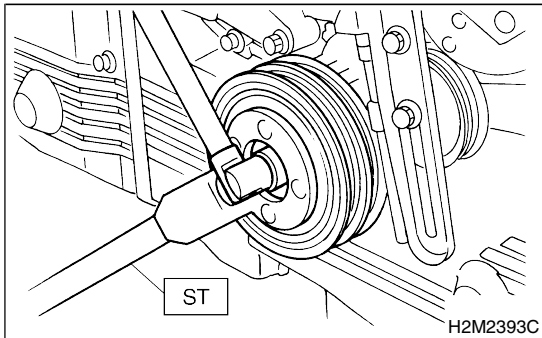


- 3) Remove crankshaft pulley.

B: INSTALLATION S183098A11

- 1) Install crankshaft pulley.
- 2) Install pulley bolt.
To lock crankshaft, use ST.
ST 499977300 CRANKSHAFT PULLEY WRENCH
- (1) Clean the crankshaft pulley thread using an air gun.
- (2) Apply engine oil to the crankshaft pulley bolt seat and thread.
- (3) Tighten the bolts temporarily with tightening torque of 44 N·m (4.5 kgf-m, 33 ft-lb).
- (4) Tighten the crankshaft pulley bolts.

Tightening torque:
127 N·m (13.0 kgf-m, 94.0 ft-lb)

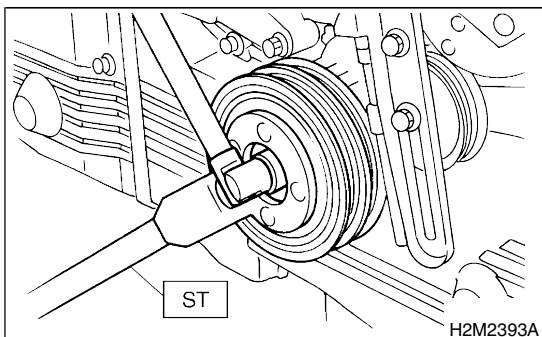

- 3) Confirm that the tightening angle of the crankshaft pulley bolt is 45 degrees or more. If not, conduct the following procedures (1) through (4).

CAUTION:

If the tightening angle of crankshaft pulley bolt is less than 45 degrees, the bolt should be damaged. In this case, the bolt must be replaced.

- (1) Replace the crankshaft pulley bolts and clean them.


Crankshaft pulley bolt: 12369AA011

- (2) Clean the crankshaft thread using an air gun.
- (3) Tighten the bolts temporarily with tightening torque of 44 N·m (4.5 kgf-m, 33 ft-lb).
- (4) Tighten the crankshaft pulley bolts keeping them in an angle between 65 degrees and 75 degrees.


CAUTION:

Conduct the tightening procedures by confirming the turning angle of the crankshaft pulley bolt referring to the gauge indicated on the belt cover.

- 4) Install A/C belt tensioner.

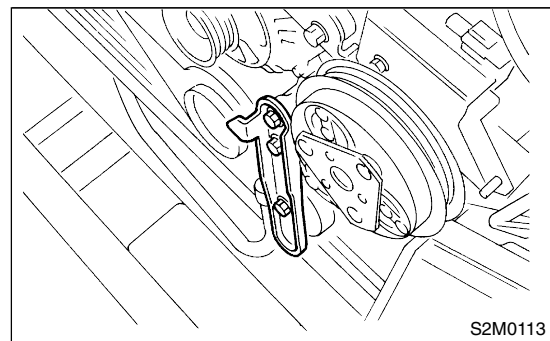

- 5) Install A/C belt.

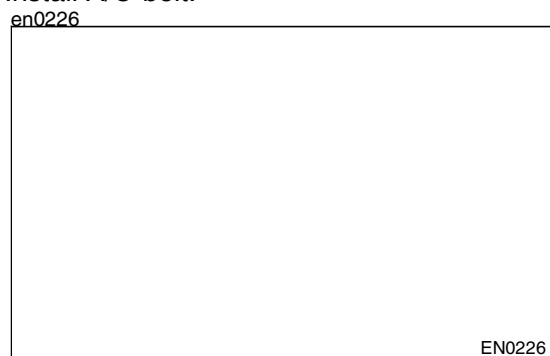


C: INSPECTION S183098A10

- 1) Make sure the V-belt is not worn or otherwise damaged.
- 2) Check the tension of the belt. <Ref. to ME(DOHC TURBO)-45, INSPECTION, V-belt.>

14. Belt Cover S183582

A: REMOVAL S183582A18

- 1) Remove V-belt. <Ref. to ME(DOHC TURBO)-44, REMOVAL, V-belt.>
- 2) Remove crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>
- 3) Remove left-hand belt cover (A).
- 4) Remove right-hand belt cover (B).
- 5) Remove front belt cover (C).

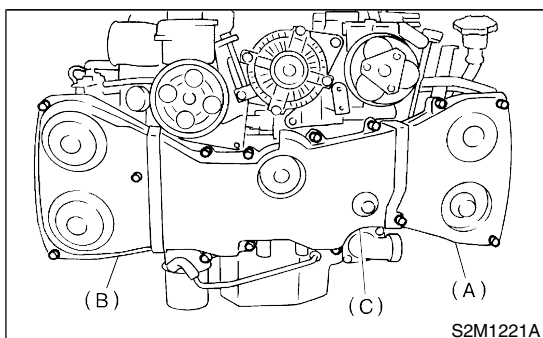

B: INSTALLATION S183582A11

- 1) Install front belt cover (C).

Tightening torque:

5 N·m (0.5 kgf-m, 3.6 ft-lb)

- 2) Install right-hand belt cover (B).


Tightening torque:

5 N·m (0.5 kgf-m, 3.6 ft-lb)

- 3) Install left-hand belt cover (A).

Tightening torque:

5 N·m (0.5 kgf-m, 3.6 ft-lb)

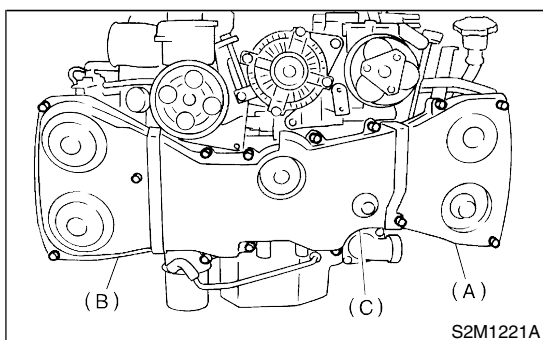

- 4) Install crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, INSTALLATION, Crankshaft Pulley.>
- 5) Install V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>


C: INSPECTION S183582A10

Make sure the cover is not damaged.

TIMING BELT ASSEMBLY

15. Timing Belt Assembly S183099**A: REMOVAL** S183099A18**1. TIMING BELT** S183099A1801

- 1) Remove V-belt. <Ref. to ME(DOHC TURBO)-44, REMOVAL, V-belt.>
- 2) Remove crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>
- 3) Remove belt cover. <Ref. to ME(DOHC TURBO)-47, REMOVAL, Belt Cover.>
- 4) Remove timing belt guides. (MT vehicle only)

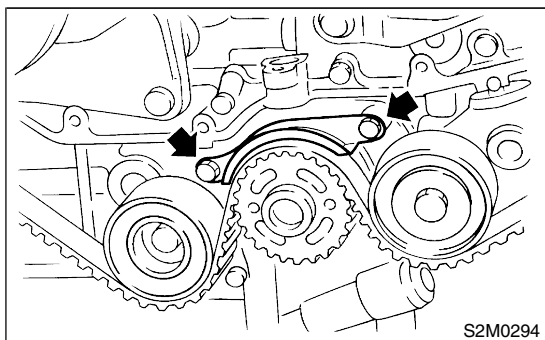

en0257



en0258




en0259



- 5) If alignment mark and/or arrow mark (which indicates rotation direction) on timing belt fade away, put new marks before removing timing belt as follows:

- (1) Turn crankshaft using ST, and align alignment marks on crankshaft sprocket, left-hand intake camshaft sprocket, left-hand exhaust camshaft sprocket, right-hand intake camshaft sprocket and right hand exhaust camshaft sprocket with notches of belt cover and cylinder block.


ST 499987500 CRANKSHAFT SOCKET

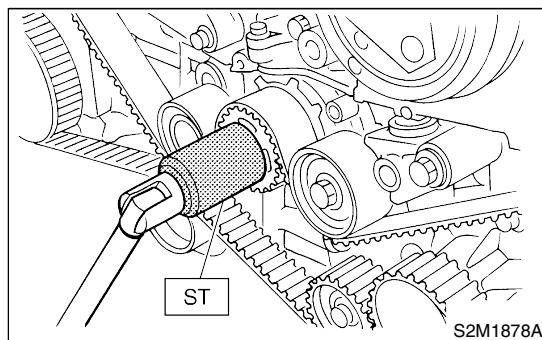


- (2) Using white paint, put alignment and/or arrow marks on timing belts in relation to the sprockets.

en0233




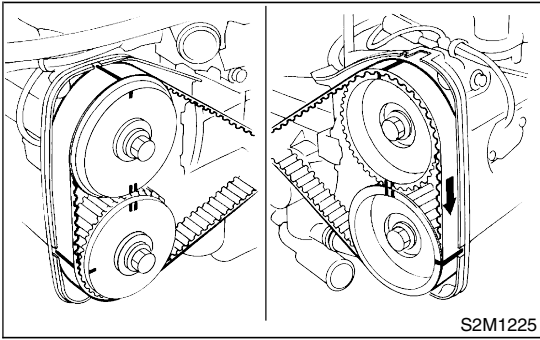

Z₁: 54.5 tooth length
Z₂: 51 tooth length
Z₃: 28 tooth length

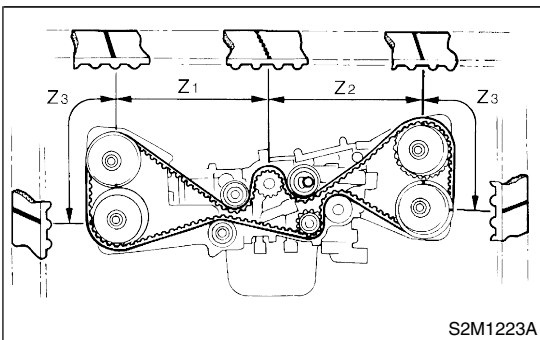

6) Remove belt idler (A).

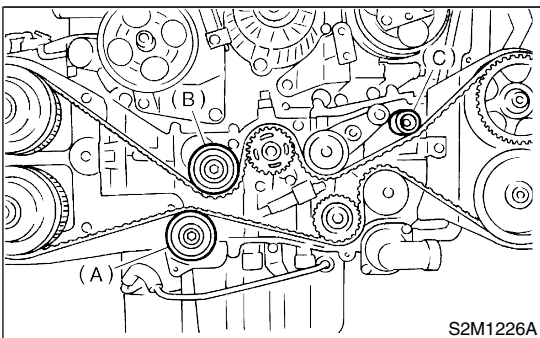


7) Remove timing belt.

CAUTION:


After timing belt has been removed, never rotate intake and exhaust, camshaft sprocket. If camshaft sprocket is rotated, the intake and exhaust valve heads strike together and valve stems are bent.

2. BELT IDLER AND AUTOMATIC BELT TENSION ADJUSTER ASSEMBLY S183099A1802


1) Remove belt idler (B) and (C).

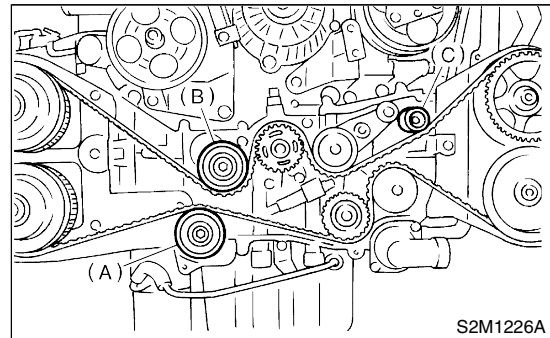

2) Remove belt idler No. 2.

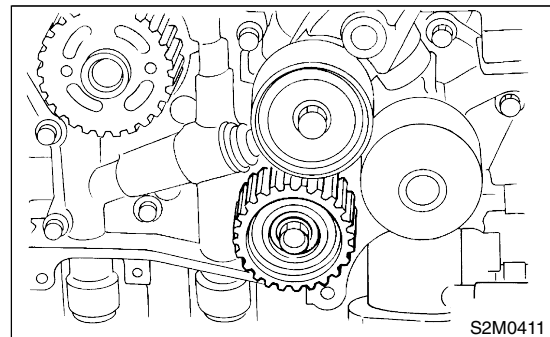

3) Remove automatic belt tension adjuster assembly.

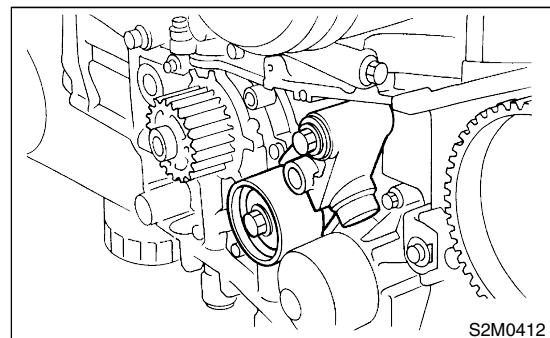

B: INSTALLATION S183099A11

1. AUTOMATIC BELT TENSION ADJUSTER ASSEMBLY AND BELT IDLER

S183099A1101

1) Preparation for installation of automatic belt tension adjuster assembly:

CAUTION:


- Always use a vertical type pressing tool to move the adjuster rod down.
- Do not use a lateral type vise.
- Push adjuster rod vertically.

TIMING BELT ASSEMBLY


- Be sure to slowly move the adjuster rod down applying a pressure of 294 N (30 kgf, 66 lb).
- Press-in the push adjuster rod gradually taking more than three minutes.
- Do not allow press pressure to exceed 9,807 N (1,000 kgf, 2,205 lb).
- Press the adjuster rod as far as the end surface of the cylinder. Do not press the adjuster rod into the cylinder. Doing so may damage the cylinder.
- Do not release press pressure until stopper pin is completely inserted.

(1) Attach the automatic belt tension adjuster assembly to the vertical pressing tool.

(2) Slowly move the adjuster rod down with a pressure of 294 N (30 kgf, 66 lb) until the adjuster rod is aligned with the stopper pin hole in the cylinder.

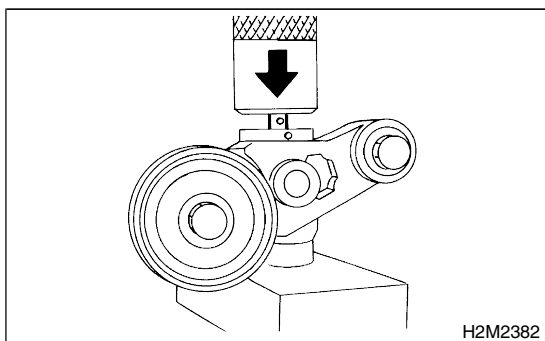


(3) With a 2 mm (0.08 in) dia. stopper pin or a 2 mm (0.08 in) (nominal) dia. hex bar wrench inserted into the stopper pin hole in the cylinder, secure the adjuster rod.

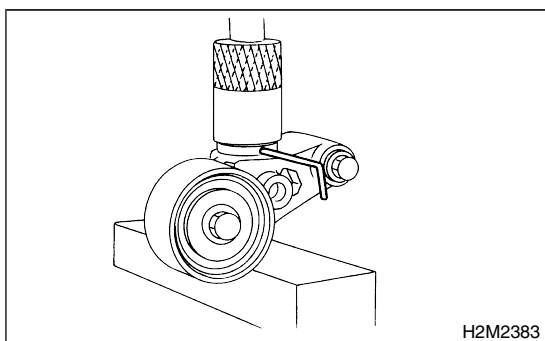

2) Install automatic belt tension adjuster assembly.

Tightening torque:


39 N·m (4.0 kgf-m, 28.9 ft-lb)

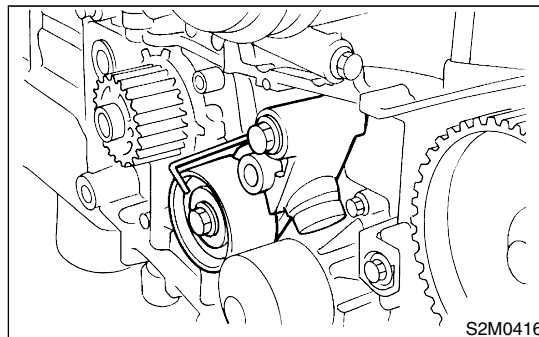

3) Install belt idler No. 2.

Tightening torque:


39 N·m (4.0 kgf-m, 28.9 ft-lb)

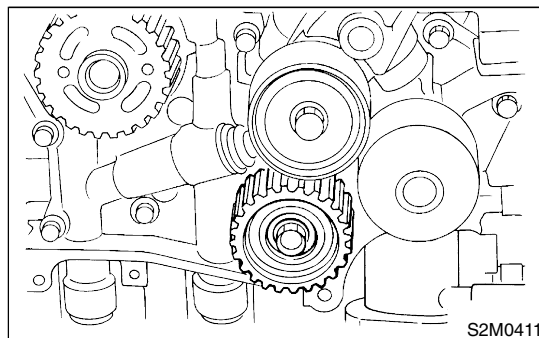

4) Install belt idler.

Tightening torque:

39 N·m (4.0 kgf-m, 28.9 ft-lb)

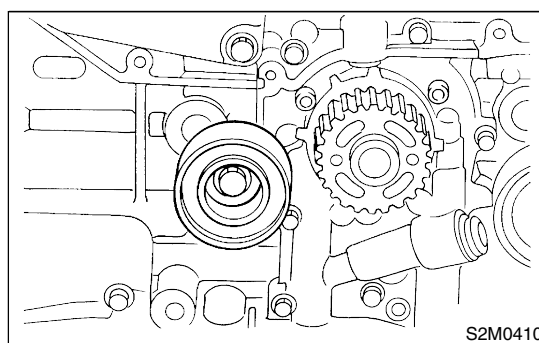

2. TIMING BELT S183099A1102

1) Preparation for installation of automatic belt tension adjuster assembly. <Ref. to ME(DOHC TURBO)-49, AUTOMATIC BELT TENSION ADJUSTER ASSEMBLY AND BELT IDLER, INSTALLATION, Timing Belt Assembly.>


2) Crankshaft and camshaft sprocket alignment.

TIMING BELT ASSEMBLY


Mechanical

- (1) Align mark (A) on crankshaft sprocket with mark on the oil pump cover at cylinder block.


en0243

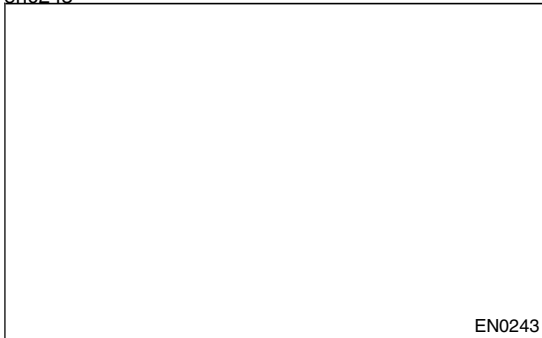


- (2) Align single line mark (A) on right-hand exhaust camshaft sprocket with notch (B) on belt cover.

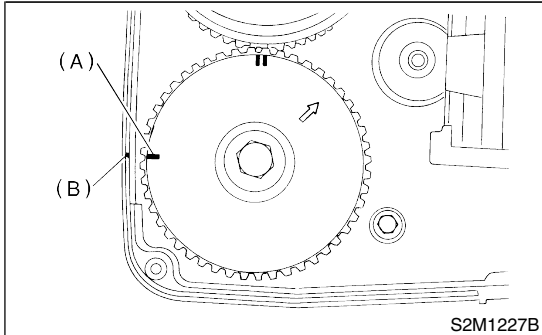


- (3) Align single line mark (A) on right-hand intake camshaft sprocket with notch (B) on belt cover.
(Make sure double lines (C) on intake camshaft and exhaust camshaft sprockets are aligned.)

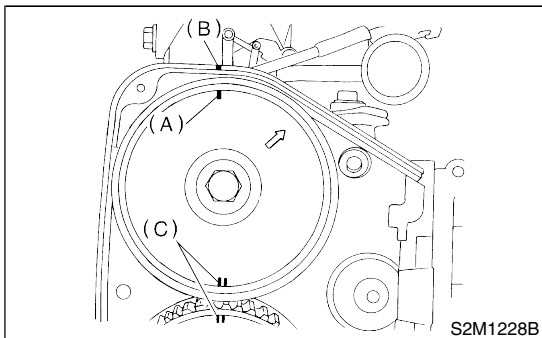

- (4) Align single line mark (A) on left-hand exhaust camshaft sprocket with notch (B) on belt cover by turning sprocket counterclockwise (as viewed from front of engine).

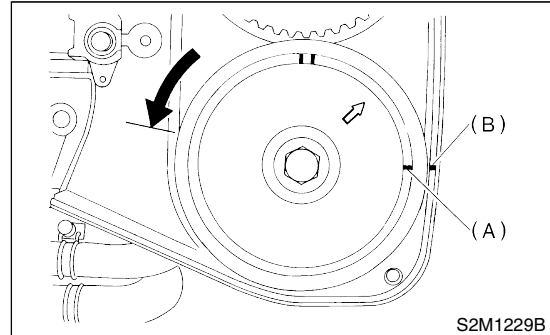

- (5) Align single line mark (A) on left-hand intake camshaft sprocket with notch (B) on belt cover by turning sprocket clockwise (as viewed from front of engine).
Ensure double lines (C) on intake and exhaust camshaft sprockets are aligned.

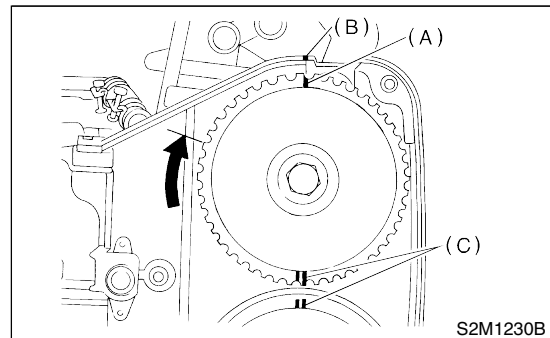


- (6) Ensure camshaft and crankshaft sprockets are positioned properly.

TIMING BELT ASSEMBLY

CAUTION:

● Intake and exhaust camshafts for this DOHC engine can be independently rotated with timing belts removed. As can be seen from the figure, if intake and exhaust valves are lifted simultaneously, their heads will interfere with each other, resulting in bent valves.

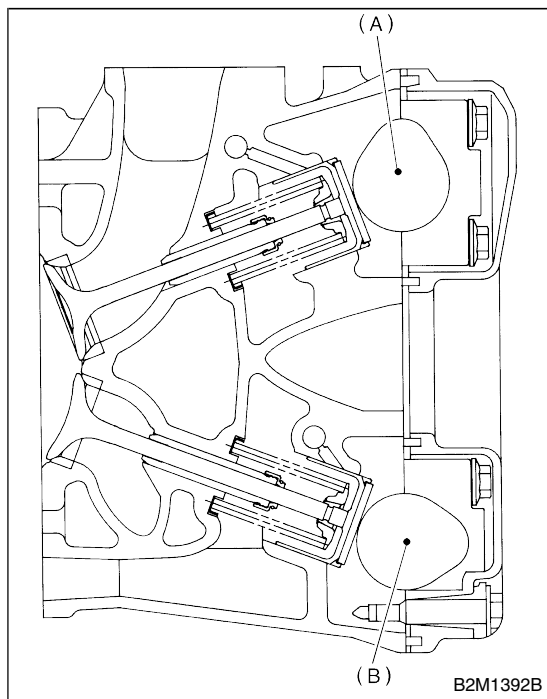

(A) Intake camshaft
(B) Exhaust camshaft


● When timing belts are not installed, four camshafts are held at the “zero-lift” position, where all cams on camshafts do not push intake and exhaust valves down. (Under this condition, all valves remain unlifted.)

● When camshafts are rotated to install timing belts, #2 intake and #4 exhaust cam of left-hand camshafts are held to push their corresponding valves down. (Under this condition, these valves are held lifted.) Right-side camshafts are held so that their cams do not push valves down.


● Left-hand camshafts must be rotated from the “zero-lift” position to the position where

timing belt is to be installed at as small an angle as possible, in order to prevent mutual interference of intake and exhaust valve heads.

● Do not allow camshafts to rotate in the direction shown in the figure as this causes both intake and exhaust valves to lift simultaneously, resulting in interference with their heads.

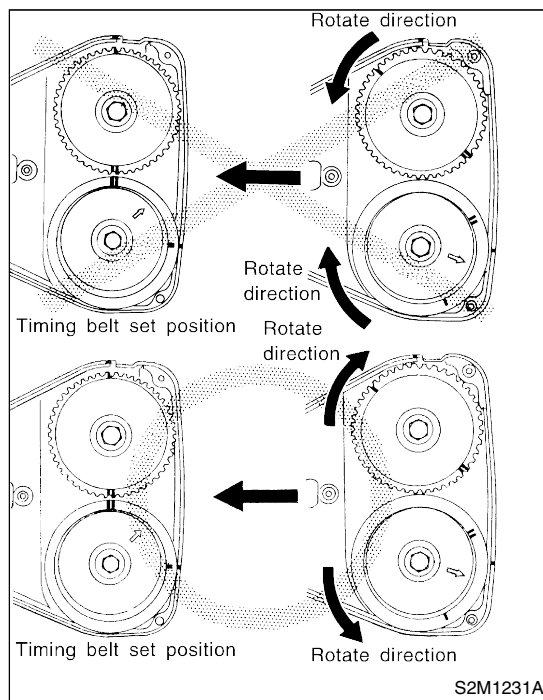

3) Installation of timing belt

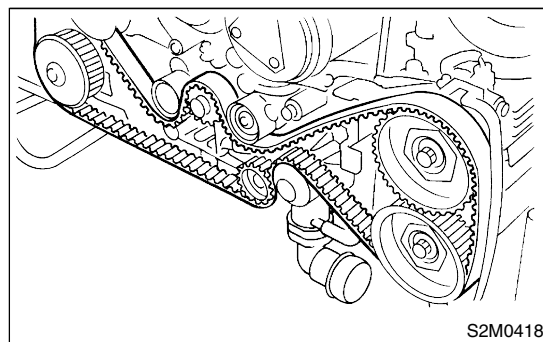


Mechanical

Align alignment mark on timing belt with marks on sprockets in the alphabetical order shown in figure. While aligning marks, position timing belt properly.

CAUTION:

- Disengagement of more than three timing belt teeth may result in interference between the valve and piston.
- Ensure belt's rotating direction is correct.

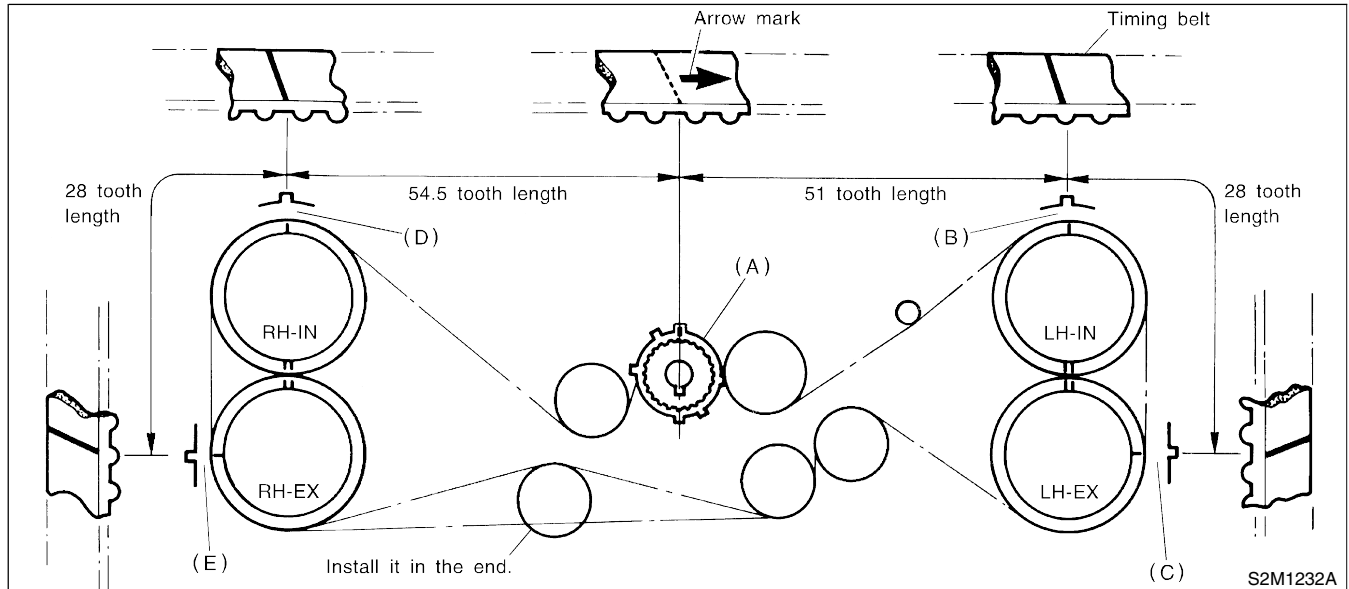


4) Install belt idlers.

Tightening torque:

39 N·m (4.0 kgf-m, 28.9 ft-lb)


CAUTION:

Make sure that the marks on timing belt and sprockets are aligned.

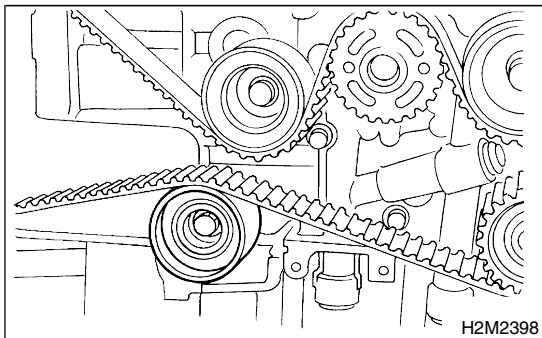

Clearance:

1.0±0.5 mm (0.039±0.020 in)

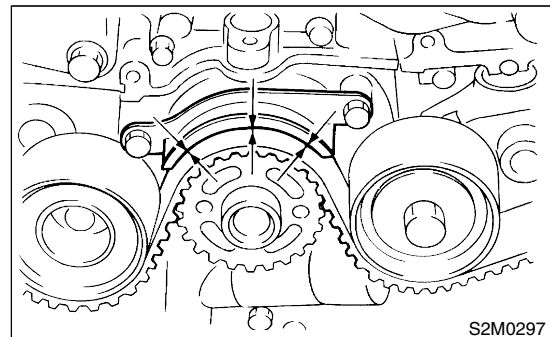

en0254

EN0254

5) After ensuring that the marks on timing belt and sprockets are aligned, remove stopper pin from tensioner adjuster.

6) Install timing belt guide. (MT vehicle only)

- (1) Temporarily tighten remaining bolts.
- (2) Check and adjust clearance between timing belt and timing belt guide.

TIMING BELT ASSEMBLY

en0255



EN0255

en0258



EN0258

en0256



EN0256

en0259




EN0259

(3) Tighten remaining bolts.

Tightening torque:

9.8 N·m (1.0 kgf-m, 7.2 ft-lb)

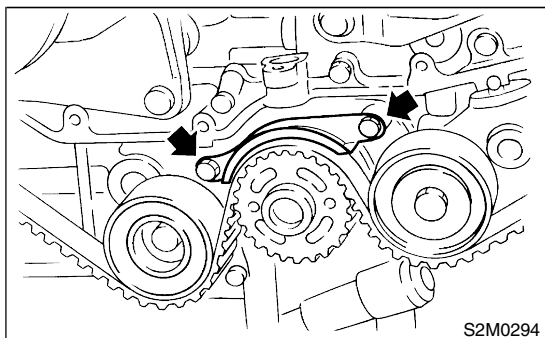

S2M0294

en0257



EN0257

7) Install belt cover. <Ref. to ME(DOHC TURBO)-47, INSTALLATION, Belt Cover.>

8) Install crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>

9) Install V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>

C: INSPECTION

S183099A10

1. TIMING BELT

S183099A1001

1) Check timing belt teeth for breaks, cracks, and wear. If any fault is found, replace belt.


2) Check the condition of back side of belt; if any crack is found, replace belt.

CAUTION:

- Be careful not to let oil, grease or coolant contact the belt. Remove quickly and thoroughly if this happens.
- Do not bend the belt sharply.

Bending radius: h

60 mm (2.36 in) or more

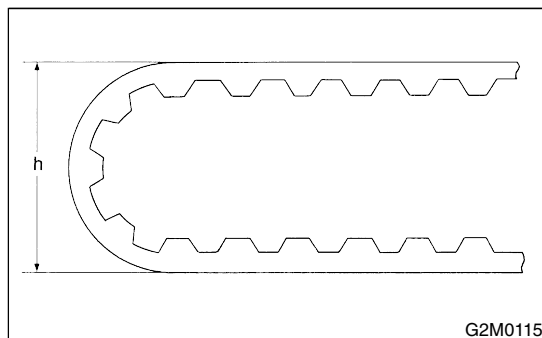

G2M0115

2. AUTOMATIC BELT TENSION ADJUSTER

S183099A1002

1) Visually check oil seals for leaks, and rod ends for abnormal wear or scratches. If necessary, replace automatic belt tension adjuster assembly.

CAUTION:

Slight traces of oil at rod's oil seal does not indicate a problem.

2) Check that the adjuster rod does not move when a pressure of 294 N (30 kgf, 66 lb) is applied to it. This is to check adjuster rod stiffness.

3) If the adjuster rod is not stiff and moves freely when applying 294 N (30 kgf, 66 lb), check it using the following procedures:

(1) Slowly press the adjuster rod down to the end surface of the cylinder. Repeat this motion 2 or 3 times.

(2) With the adjuster rod moved all the way up, apply a pressure of 294 N (30 kgf, 66 lb) to it. Check adjuster rod stiffness.

(3) If the adjuster rod is not stiff and moves down, replace the automatic belt tension adjuster assembly with a new one.


CAUTION:

- Always use a vertical type pressing tool to move the adjuster rod down.
- Do not use a lateral type vise.
- Push adjuster rod vertically.
- Press-in the push adjuster rod gradually taking more than three minutes.
- Do not allow press pressure to exceed 9,807 N (1,000 kgf, 2,205 lb).
- Press the adjuster rod as far as the end surface of the cylinder. Do not press the adjuster rod into the cylinder. Doing so may damage the cylinder.

4) Measure the extension of rod beyond the body. If it is not within specifications, replace with a new one.

Rod extension: H

$5.7 \pm 0.5 \text{ mm } (0.224 \pm 0.020 \text{ in})$

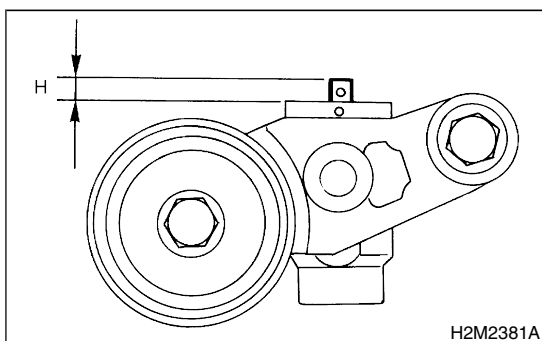

3. BELT TENSION PULLEY

S183099A1003

1) Check mating surfaces of timing belt and contact point of adjuster rod for abnormal wear or scratches. Replace belt tension pulley if faulty.

2) Check belt tension pulley for smooth rotation. Replace if noise or excessive play is noted.

3) Check belt tension pulley for grease leakage.

4. BELT IDLER

S183099A1004

1) Check idler for smooth rotation. Replace if noise or excessive play is noted.

2) Check outer contacting surfaces of idler pulley for abnormal wear and scratches.

3) Check idler for grease leakage.

CAMSHAFT SPROCKET

16. Camshaft Sprocket


S183097

A: REMOVAL

S183097A18

- 1) Remove V-belt. <Ref. to ME(DOHC TURBO)-44, REMOVAL, V-belt.>
- 2) Remove crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>
- 3) Remove belt cover. <Ref. to ME(DOHC TURBO)-47, REMOVAL, Belt Cover.>
- 4) Remove timing belt assembly. <Ref. to ME(DOHC TURBO)-48, REMOVAL, Timing Belt Assembly.>
- 5) Remove camshaft position sensor. <Ref. to FU(DOHC TURBO)-31, REMOVAL, Camshaft Position Sensor.>
- 6) Remove camshaft sprockets. To lock camshaft, use ST.

ST 499207400 CAMSHAFT SPROCKET WRENCH

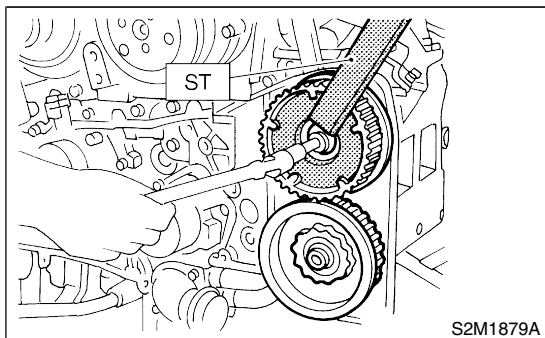

B: INSTALLATION

S183097A11

- 1) Install camshaft sprocket No. 1. and No. 2. To lock camshaft, use ST.


ST 499207100 CAMSHAFT SPROCKET WRENCH

Tightening torque:

98 N·m (10 kgf-m, 72.4 ft-lb)

CAUTION:

Do not confuse left and right side camshaft sprockets during installation. The camshaft sprocket No. 2 is identified by a projection used to monitor camshaft position sensor.

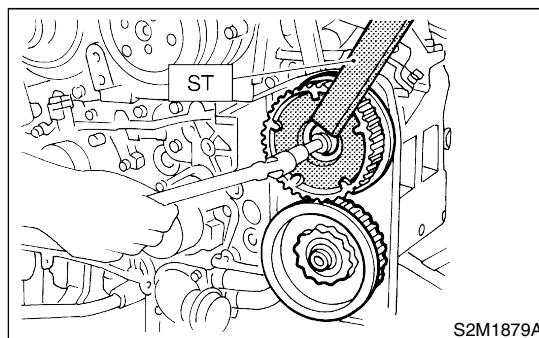

- 2) Install camshaft position sensor. <Ref. to FU(DOHC TURBO)-31, INSTALLATION, Camshaft Position Sensor.>
- 3) Install timing belt assembly. <Ref. to ME(DOHC TURBO)-49, INSTALLATION, Timing Belt Assembly.>
- 4) Install belt cover. <Ref. to ME(DOHC TURBO)-47, INSTALLATION, Belt Cover.>
- 5) Install crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, INSTALLATION, Crankshaft Pulley.>
- 6) Install V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>

C: INSPECTION


S183097A10

- 1) Check sprocket teeth for abnormal wear and scratches.
- 2) Make sure there is no free play between sprocket and key.
- 3) Check crankshaft sprocket notch for sensor for damage and contamination of foreign matter.

17. Crankshaft Sprocket S183101

A: REMOVAL S183101A18

- 1) Remove V-belt. <Ref. to ME(DOHC TURBO)-44, REMOVAL, V-belt.>
- 2) Remove crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>
- 3) Remove belt cover. <Ref. to ME(DOHC TURBO)-47, REMOVAL, Belt Cover.>
- 4) Remove timing belt assembly. <Ref. to ME(DOHC TURBO)-48, REMOVAL, Timing Belt Assembly.>
- 5) Remove camshaft sprocket. <Ref. to ME(DOHC TURBO)-56, REMOVAL, Camshaft Sprocket.>
- 6) Remove crankshaft sprocket.

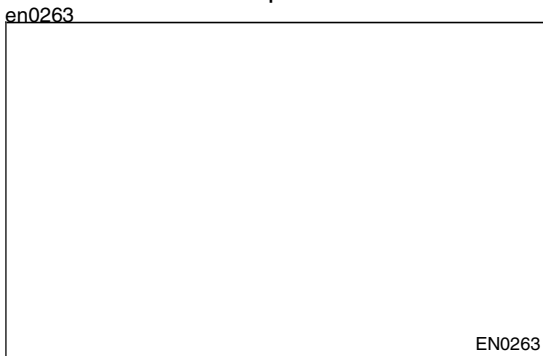

B: INSTALLATION S183101A11

- 1) Install crankshaft sprocket.



- 2) Install camshaft sprocket. <Ref. to ME(DOHC TURBO)-56, INSTALLATION, Camshaft Sprocket.>
- 3) Install timing belt assembly. <Ref. to ME(DOHC TURBO)-49, INSTALLATION, Timing Belt Assembly.>
- 4) Install belt cover. <Ref. to ME(DOHC TURBO)-47, INSTALLATION, Belt Cover.>
- 5) Install crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, INSTALLATION, Crankshaft Pulley.>
- 6) Install V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>


C: INSPECTION S183101A10

- 1) Check sprocket teeth for abnormal wear and scratches.
- 2) Make sure there is no free play between sprocket and key.
- 3) Check crankshaft sprocket notch for sensor for damage and contamination of foreign matter.


CAMSHAFT

18. Camshaft S183092**A: REMOVAL** S183092A18


- 1) Remove V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>
- 2) Remove crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>
- 3) Remove belt cover. <Ref. to ME(DOHC TURBO)-47, REMOVAL, Belt Cover.>
- 4) Remove timing belt assembly. <Ref. to ME(DOHC TURBO)-48, REMOVAL, Timing Belt Assembly.>
- 5) Remove camshaft sprocket. <Ref. to ME(DOHC TURBO)-56, REMOVAL, Camshaft Sprocket.>
- 6) Remove crankshaft sprocket. <Ref. to ME(DOHC TURBO)-57, REMOVAL, Crankshaft Sprocket.>
- 7) Remove left-hand belt cover No. 2.

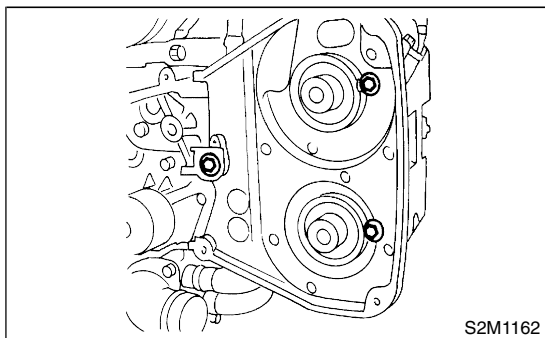


- 8) Remove right-hand belt cover No.2.

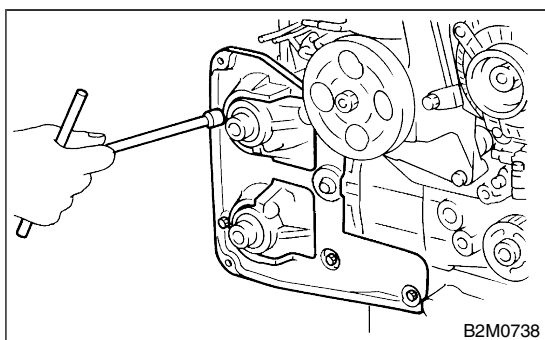


- 9) Remove tensioner bracket.

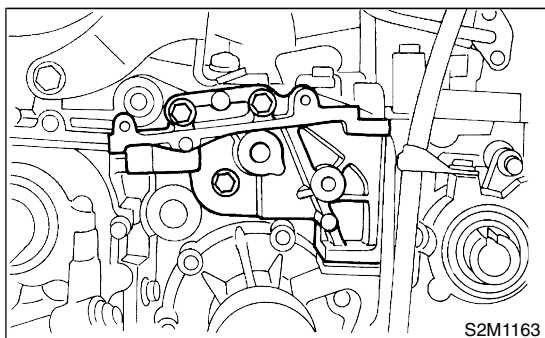

- 10) Remove oil level gauge guide. (LH side only)
- 11) Remove spark plug cord.
- 12) Remove rocker cover and gasket.
- 13) Loosen intake camshaft cap bolts equally, a little at a time in alphabetical sequence shown in figure.

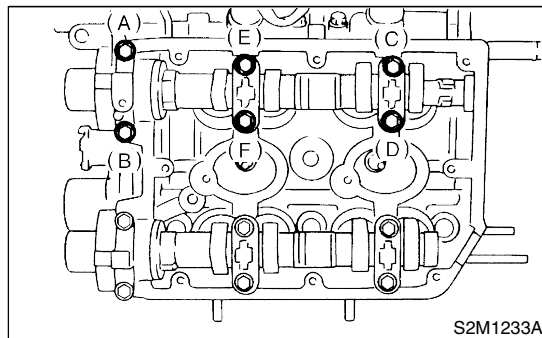

- 14) Remove camshaft caps and intake camshaft.
- 15) Loosen exhaust camshaft cap bolts equally, a little at a time in alphabetical sequence shown in figure.

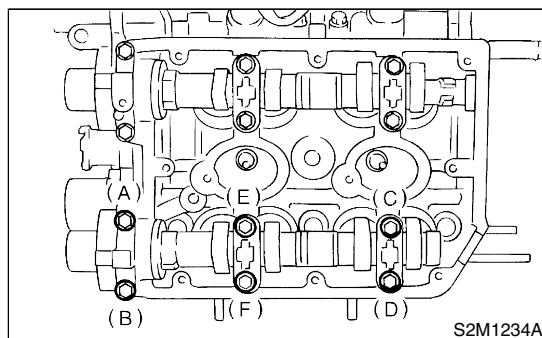

- 16) Remove camshaft caps and exhaust camshaft.

CAUTION:
Arrange camshaft caps in order so that they can be installed in their original positions.

- 17) Similarly, remove right-hand camshafts and related parts.


B: INSTALLATION

S183092A11

1) Camshaft installation Apply engine oil to cylinder head at camshaft bearing location before installing camshaft. Install camshaft so that each valves is close to or in contact with "base circle" of cam lobe.

CAUTION:

- When camshafts are positioned as shown in figure, camshafts need to be rotated at a minimum to align with timing belt during installation.
- Right-hand camshaft need not be rotated when set at position shown in figure. Left-hand intake camshaft: Rotate 80° clockwise. Left-hand exhaust camshaft: Rotate 45° counterclockwise.

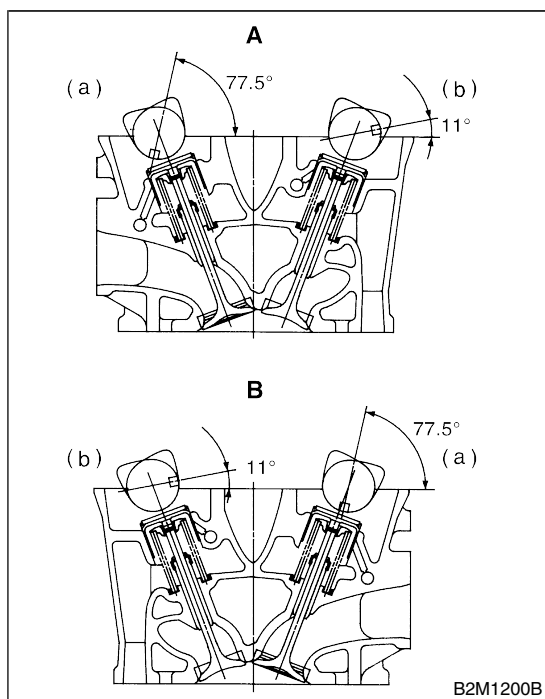

- A Left side cylinder head
 B Right side cylinder head
 (a) Intake camshaft
 (b) Exhaust camshaft

2) Camshaft cap installation


- (1) Apply fluid packing sparingly to cap mating surface.

CAUTION:

Do not apply fluid packing excessively. Failure to do so may cause excess packing to come out and flow toward oil seal, resulting in oil leaks.

Fluid packing:

THREE BOND 1215 or equivalent

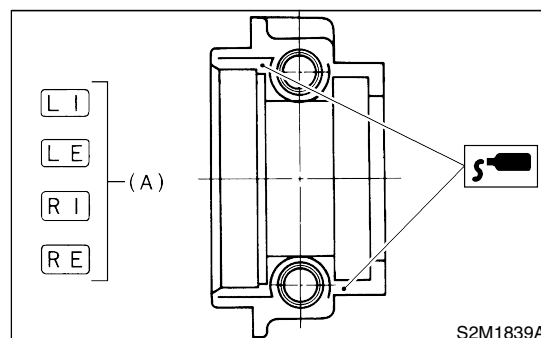


- (2) Apply engine oil to cap bearing surface and install cap on camshaft as shown by identification mark (A).

- (3) Gradually tighten cap in at least two stages in alphabetical sequence shown in figure, and then tighten to specified torque.

Tightening torque:

20 N·m (2.0 kgf-m, 14.5 ft-lb)

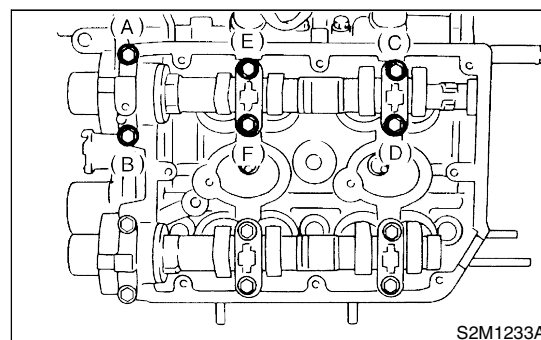

- (4) Similarly, tighten cap on exhaust side. After tightening cap, ensure camshaft rotates only slightly while holding it at "base" circle.

Tightening torque:

20 N·m (2.0 kgf-m, 14.5 ft-lb)

CAMSHAFT


Mechanical

3) Camshaft oil seal installation Apply grease to new oil seal lips and press onto front end of camshaft by using ST1 and ST2.

CAUTION:

Use a new oil seal.

ST1 499587600 OIL SEAL INSTALLER
ST2 499597200 OIL SEAL GUIDE

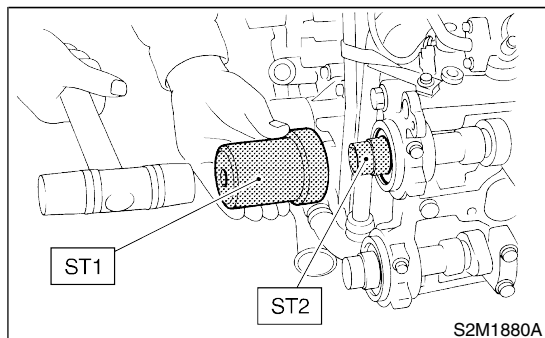


4) Rocker cover installation

- (1) Install gasket on rocker cover. Install peripheral gasket and ignition coil gasket.
- (2) Apply fluid packing to four front open edges of peripheral gasket.

Fluid packing:

THREE BOND 1215 or equivalent

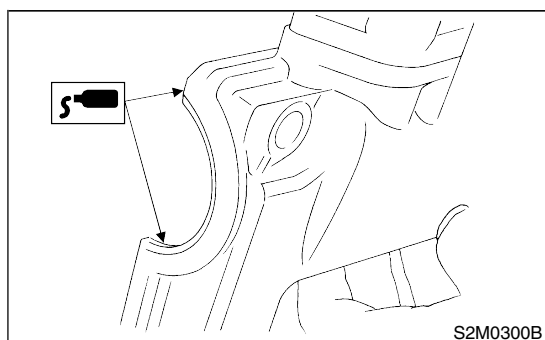


(3) Install rocker cover on cylinder head. Ensure gasket is properly positioned during installation.

- 5) Install spark plug cord.
- 6) Similarly, install parts on right-hand side.

7) Install right-hand belt cover No. 2.

Tightening torque:


5 N·m (0.5 kgf-m, 3.6 ft-lb)

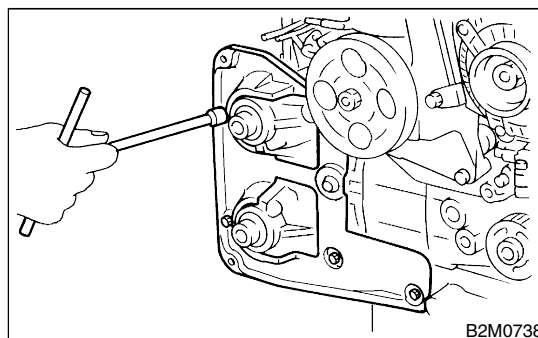

8) Install left-hand belt cover No. 2.

Tightening torque:


5 N·m (0.5 kgf-m, 3.6 ft-lb)

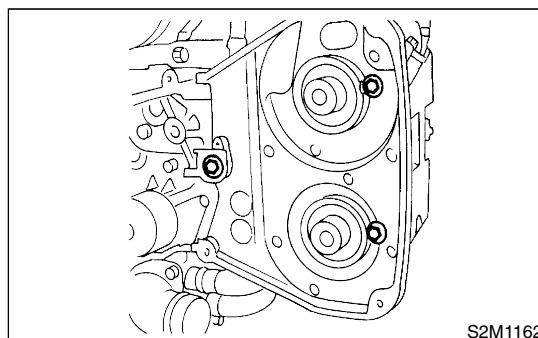

9) Install tensioner bracket.

Tightening torque:

25 N·m (2.5 kgf-m, 18.1 ft-lb)

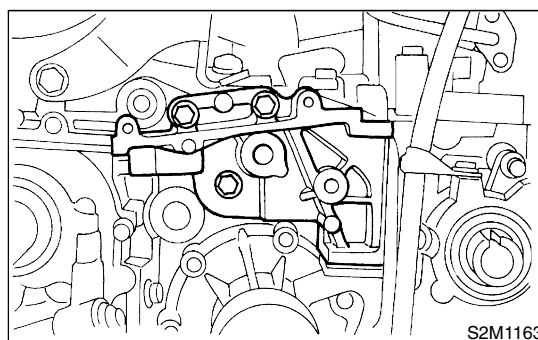

10) Install crankshaft sprocket. <Ref. to ME(DOHC TURBO)-56, INSTALLATION, Camshaft Sprocket.>

11) Install camshaft sprockets. <Ref. to ME(DOHC TURBO)-56, INSTALLATION, Camshaft Sprocket.>

12) Install timing belt assembly. <Ref. to ME(DOHC TURBO)-49, INSTALLATION, Timing Belt Assembly.>

13) Install belt cover. <Ref. to ME(DOHC TURBO)-47, INSTALLATION, Belt Cover.>

ME(DOHC TURBO)-60

CAMSHAFT

Mechanical

- 14) Install crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, INSTALLATION, Crankshaft Pulley.>
- 15) Install V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>


C: INSPECTION

S183092A10

- 1) Measure the bend, and repair or replace if necessary.

Limit:

0.020 mm (0.0008 in)

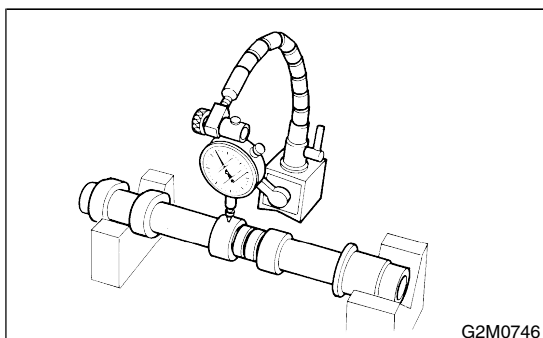

- 2) Check journal for damage and wear. Replace if faulty.
- 3) Measure outside diameter of camshaft journal. If the journal diameter is not as specified, check the oil clearance.


	Camshaft journal	
	Front	Center, rear
Standard	37.946 — 37.963 (1.4939 — 1.4946 in)	29.946 — 29.963 (1.1790 — 1.1796 in)

- 4) Measurement of the camshaft journal oil clearance

- (1) Clean the bearing caps and camshaft journals.
- (2) Place the camshafts on the cylinder head. (Without installing valve rocker.)
- (3) Place plastigauge across each of the camshaft journals.
- (4) Gradually tighten cap in at least two stages in alphabetical sequence shown in figure, and then tighten to specified torque.

Tightening torque:

20 N·m (2.0 kgf-m, 14.5 ft-lb)

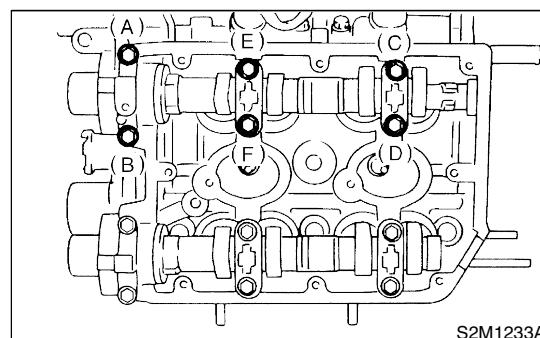

CAUTION:

Do not turn the camshaft.


- (5) Remove the bearing caps.
- (6) Measure the widest point of the plastigauge on each journal. If the oil clearance exceeds the limit, replace the camshaft. If necessary, replace the camshaft caps and cylinder head as a set.

Standard:

0.037 — 0.072 mm (0.0015 — 0.0028 in)

Limit:

0.10 mm (0.0039 in)

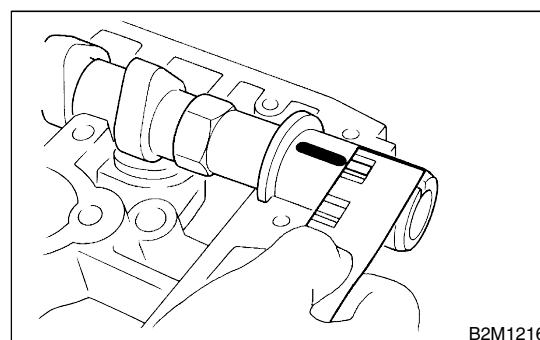

- (7) Completely remove the plastigauge.
- 5) Check cam face condition; remove minor faults by grinding with oil stone. Measure the cam height H; replace if the limit has been exceeded.

CAMSHAFT

Mechanical

Cam height: H Standard:

Intake:

44.75 — 44.85 mm (1.7618 — 1.7657 in)

Exhaust:

44.60 — 44.70 mm (1.7559 — 1.7598 in)

Limit:

Intake:


44.65 mm (1.7579 in)

Exhaust:

44.50 mm (1.7520 in)

Cam base circle diameter A:

37.0 mm (1.457 in)

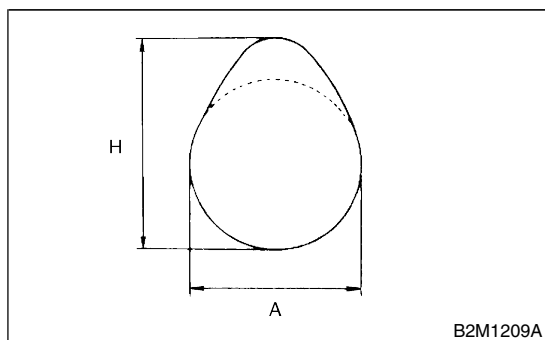


6) Measure the thrust clearance of camshaft with dial gauge. If the clearance exceeds the limit, replace caps and cylinder head as a set. If necessary replace camshaft.

Standard:

0.015 — 0.070 mm (0.0006 — 0.0028 in)

Limit:

0.1 mm (0.004 in)

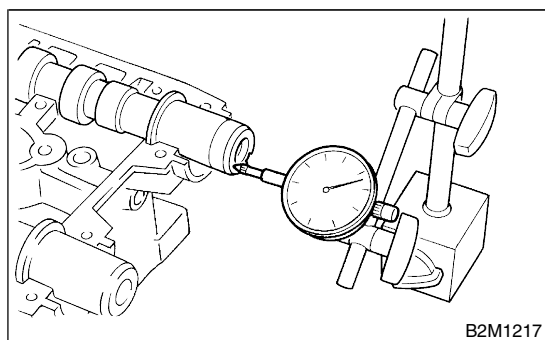


19. Cylinder Head Assembly S183093

A: REMOVAL S183093A18


- 1) Remove V-belt. <Ref. to ME(DOHC TURBO)-44, REMOVAL, V-belt.>
- 2) Remove crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>
- 3) Remove belt cover. <Ref. to ME(DOHC TURBO)-47, REMOVAL, Belt Cover.>
- 4) Remove timing belt assembly. <Ref. to ME(DOHC TURBO)-48, REMOVAL, Timing Belt Assembly.>
- 5) Remove camshaft sprocket. <Ref. to ME(DOHC TURBO)-56, REMOVAL, Camshaft Sprocket.>
- 6) Remove intake manifold. <Ref. to FU(DOHC TURBO)-15, REMOVAL, Intake Manifold.>
- 7) Remove bolt which installs A/C compressor bracket on cylinder head.
- 8) Remove camshaft. <Ref. to ME(DOHC TURBO)-58, REMOVAL, Camshaft.>
- 9) Remove cylinder head bolts in alphabetical sequence shown in figure.

CAUTION:

Leave bolts (A) and (D) engaged by three or four threads to prevent cylinder head from falling.

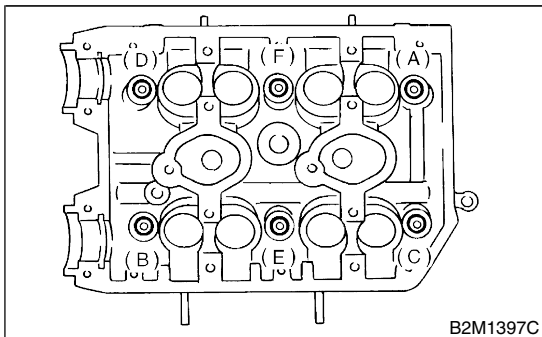

- 10) While tapping cylinder head with a plastic hammer, separate it from cylinder block. Remove bolts (A) and (D) to remove cylinder head.

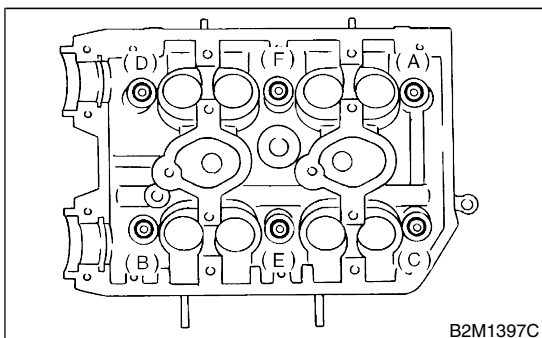

- 11) Remove cylinder head gasket.

CAUTION:

Do not scratch the mating surface of cylinder head and cylinder block.

- 12) Similarly, remove right side cylinder head.


B: INSTALLATION S183093A11

- 1) Install cylinder head and gaskets on cylinder block.


CAUTION:

- Use new cylinder head gaskets.
- Be careful not to scratch the mating surface of cylinder head and cylinder block.

- 2) Tighten cylinder head bolts.
 - (1) Apply a coat of engine oil to washers and bolt threads.
 - (2) Tighten all bolts to 29 N·m (3.0 kgf-m, 22 ft-lb) in alphabetical sequence.
 - Then tighten all bolts to 69 N·m (7.0 kgf-m, 51 ft-lb) in alphabetical sequence.
 - (3) Back off all bolts by 180° first; back them off by 180° again.
 - (4) Tighten bolts (A) and (B) to 34 N·m (3.5 kgf-m, 25 ft-lb).

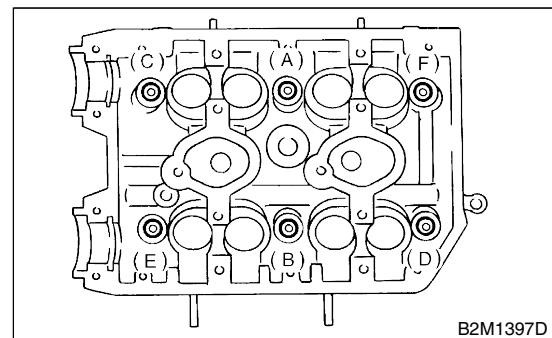

- (5) Tighten bolts (C), (D), (E) and (F) to 15 N·m (1.5 kgf-m, 11 ft-lb).

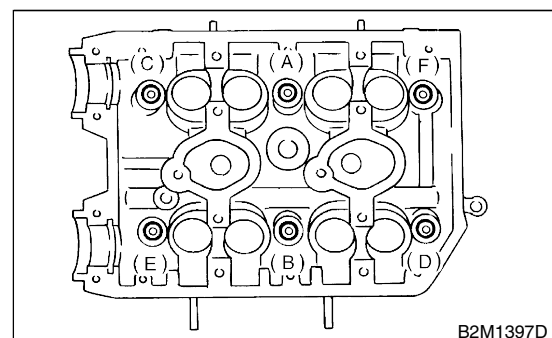

- (6) Tighten all bolts by 80 to 90° in alphabetical sequence.

CAUTION:

Do not tighten bolts more than 90°.

- (7) Further tighten all bolts by 80 to 90° in alphabetical sequence.

CYLINDER HEAD ASSEMBLY

Mechanical

CAUTION:

Ensure that the total “re-tightening angle” [in the two previous steps] do not exceed 180°.

- 3) Install camshaft. <Ref. to ME(DOHC TURBO)-59, INSTALLATION, Camshaft.>
- 4) Install A/C compressor bracket on cylinder head.
- 5) Install intake manifold. <Ref. to ME(DOHC TURBO)-59, INSTALLATION, Camshaft.>
- 6) Install camshaft sprocket. <Ref. to ME(DOHC TURBO)-56, INSTALLATION, Camshaft Sprocket.>
- 7) Install timing belt assembly. <Ref. to ME(DOHC TURBO)-49, INSTALLATION, Timing Belt Assembly.>
- 8) Install belt cover. <Ref. to ME(DOHC TURBO)-47, INSTALLATION, Belt Cover.>
- 9) Install crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, INSTALLATION, Crankshaft Pulley.>
- 10) Install V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>

C: DISASSEMBLY

S183093A06


- 1) Remove valve shims and valve lifters.
- 2) Compress the valve spring and remove the valve spring retainer key. Remove each valve and valve spring.

ST 498267600 CYLINDER HEAD TABLE

ST 499718000 VALVE SPRING REMOVER

CAUTION:

- Keep removed parts in order for re-installing in their original positions.
- Mark each valve to prevent confusion.
- Use extreme care not to damage the lips of the intake valve oil seals and exhaust valve oil seals.

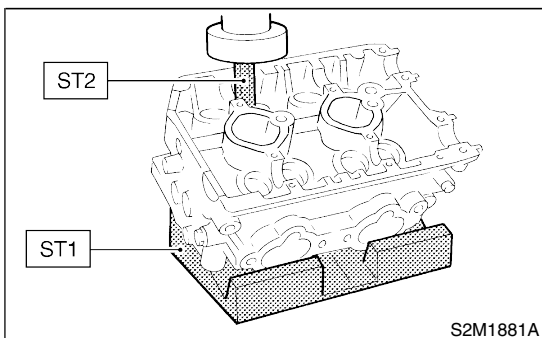


ME(DOHC TURBO)-64

CYLINDER HEAD ASSEMBLY

Mechanical

D: ASSEMBLY

S183093A02

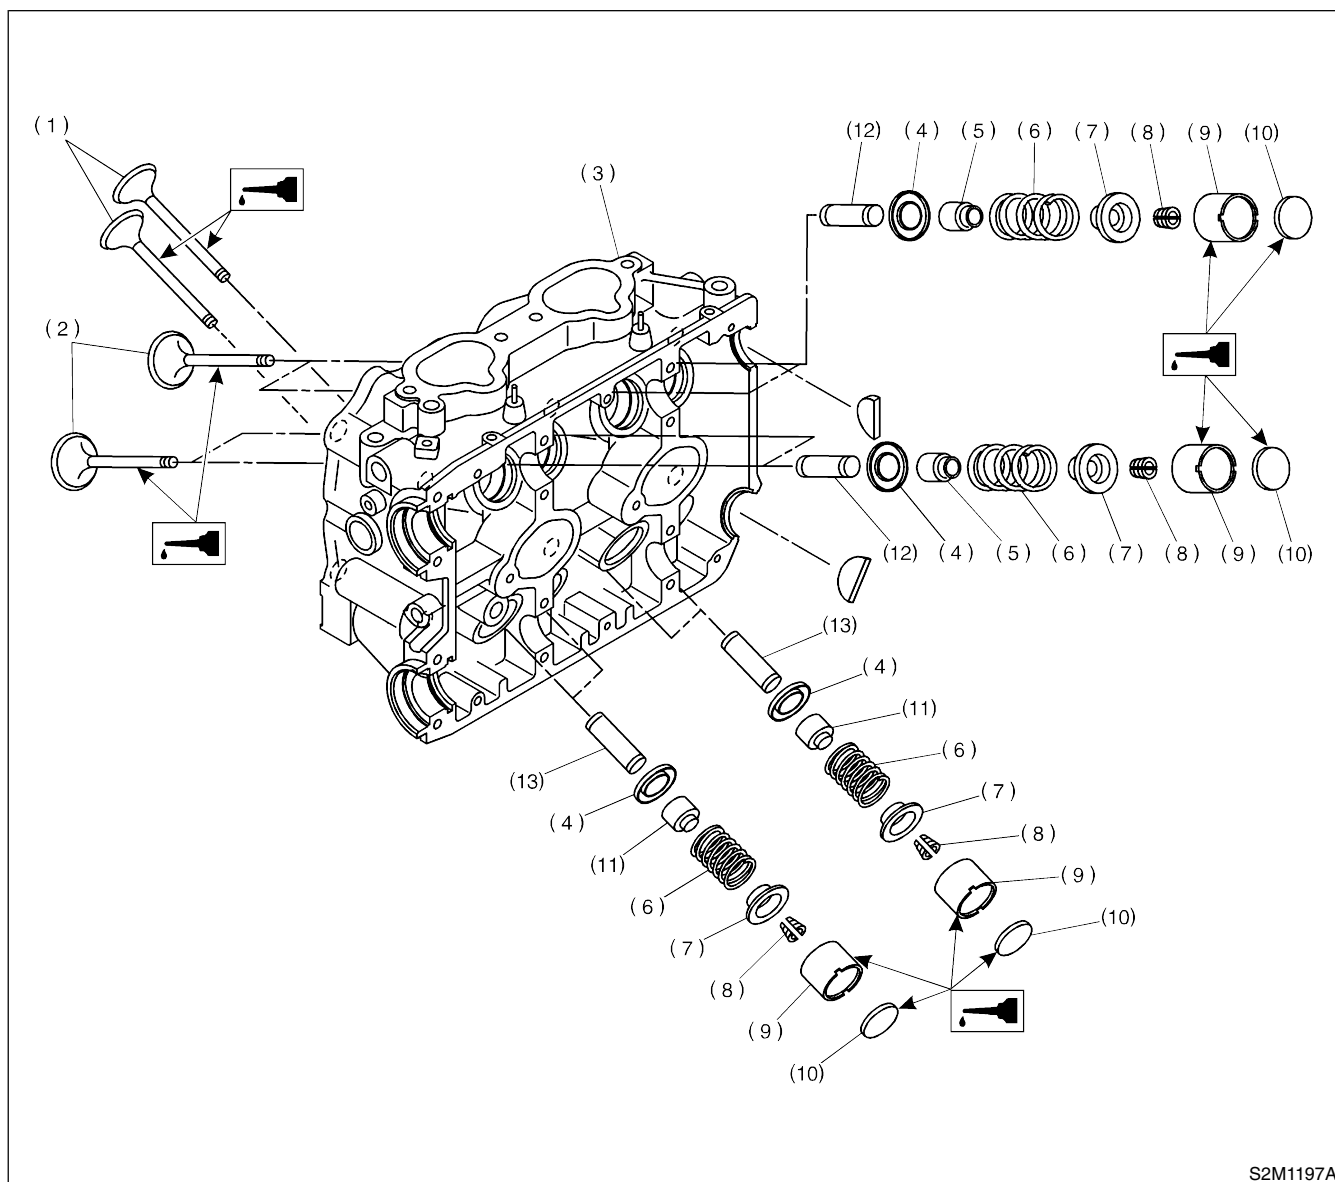

S2M1197A

- | | | |
|---------------------------|------------------|-----------------------------|
| (1) Exhaust valve | (6) Valve spring | (11) Exhaust valve oil seal |
| (2) Intake valve | (7) Retainer | (12) Intake valve guide |
| (3) Cylinder head | (8) Retainer key | (13) Exhaust valve guide |
| (4) Valve spring seat | (9) Valve lifter | |
| (5) Intake valve oil seal | (10) Shim | |

- 1) Installation of valve spring and valve
 (1) Coat stem of each valve with engine oil and insert valve into valve guide.

CAUTION:

When inserting valve into valve guide, use special care not to damage the oil seal lip.

- (2) Set cylinder head on ST1.
 (3) Install valve spring and retainer using ST2.

ST 498267600 CYLINDER HEAD TABLE
 ST 499718000 VALVE SPRING REMOVER


ME(DOHC TURBO)-65

CYLINDER HEAD ASSEMBLY

Mechanical

CAUTION:

Be sure to install the valve springs with their close-coiled end facing the seat on the cylinder head.

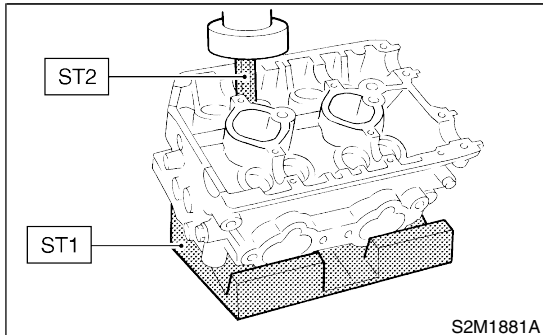

(4) Compress valve spring and fit valve spring retainer key.

(5) After installing, tap valve spring retainers lightly with wooden hammer for better seating.

2) Apply oil to the surface of the valve lifter and valve shim.

3) Install valve lifter and valve shim.

E: INSPECTION

S183093A10

1. CYLINDER HEAD

S183093A1001

1) Make sure that no crack or other damage exists. In addition to visual inspection, inspect important areas by means of red check.

2) Measure the warping of the cylinder head surface that mates with crankcase by using a straight edge (A) and thickness gauge (B).

If the warping exceeds 0.05 mm (0.0020 in), grind the surface with a surface grinder.

Warping limit:

0.05 mm (0.0020 in)

Grinding limit:


0.3 mm (0.012 in)

Standard height of cylinder head:

127.5 mm (5.02 in)

CAUTION:

Uneven torque for the cylinder head nuts can cause warping. When reassembling, pay special attention to the torque so as to tighten evenly.

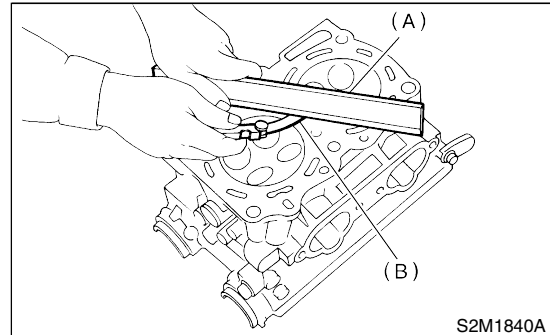

2. VALVE SEAT

S183093A1002

Inspect intake and exhaust valve seats, and correct the contact surfaces with valve seat cutter if they are defective or when valve guides are replaced.

Valve seat width: W

Intake


Standard 1.0 mm (0.039 in)

Limit 1.7 mm (0.067 in)

Exhaust

Standard 1.5 mm (0.059 in)

Limit 2.2 mm (0.087 in)

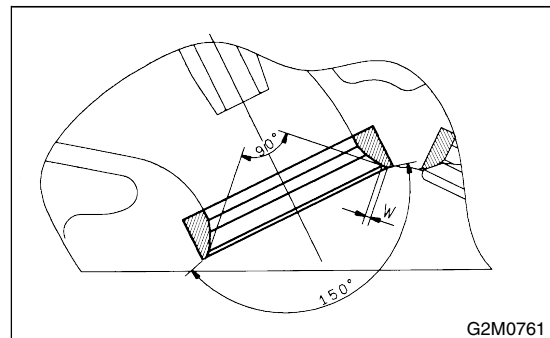

3. VALVE GUIDE

S183093A1003

1) Check the clearance between valve guide and stem. The clearance can be checked by measuring the outside diameter of valve stem and the inside diameter of valve guide with outside and inside micrometers respectively.

CYLINDER HEAD ASSEMBLY

Mechanical

Clearance between the valve guide and valve stem:

Standard

Intake 0.035 — 0.062 mm (0.0014 — 0.0024 in)

Exhaust 0.040 — 0.067 mm (0.0016 — 0.0026 in)

Limit

0.15 mm (0.0059 in)

2) If the clearance between valve guide and stem exceeds the limit, replace valve guide or valve itself whichever shows greater amount of wear. See following procedure for valve guide replacement.

Valve guide inner diameter:

6.000 — 6.012 mm (0.2362 — 0.2367 in)

Valve stem outer diameters:

Intake

5.950 — 5.965 mm (0.2343 — 0.2348 in)


Exhaust

5.945 — 5.960 mm (0.2341 — 0.2346 in)

(1) Place cylinder head on ST1 with the combustion chamber upward so that valve guides enter the holes in ST1.


(2) Insert ST2 into valve guide and press it down to remove valve guide.

ST1 498267600 CYLINDER HEAD TABLE
ST2 499767200 VALVE GUIDE REMOVER

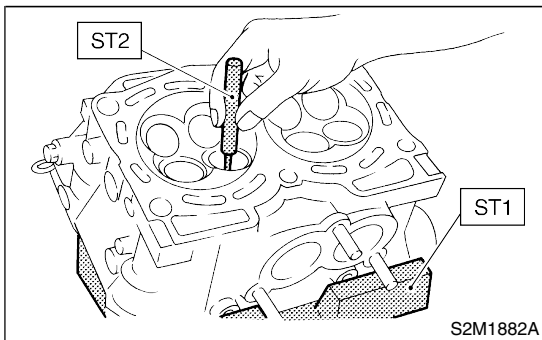

(3) Turn cylinder head upside down and place ST as shown in the figure.


ST 498767700 VALVE GUIDE ADJUSTER

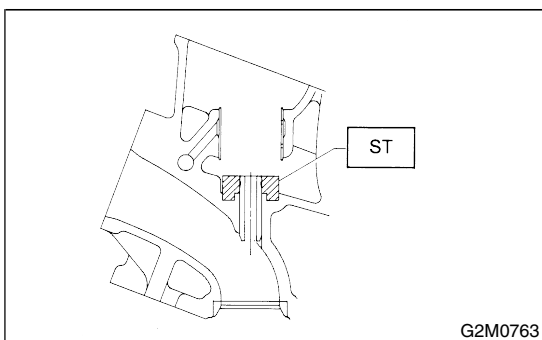

(4) Before installing new valve guide, make sure that neither scratches nor damages exist on the inside surface of the valve guide holes in cylinder head.

(5) Put new valve guide, coated with sufficient oil, in cylinder, and insert ST1 into valve guide. Press in until the valve guide upper end is flush with the upper surface of ST2.

ST1 499767200 VALVE GUIDE REMOVER
ST2 498267700 VALVE GUIDE ADJUSTER

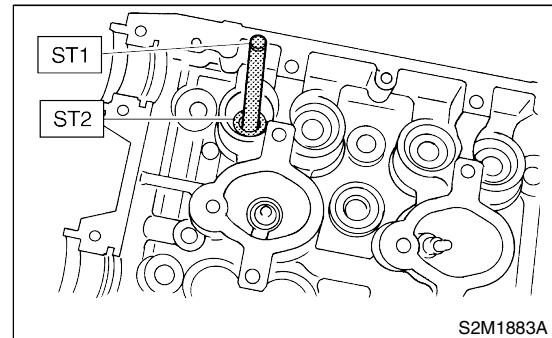

(6) Check the valve guide protrusion.

Valve guide protrusion: L

12.0 — 12.4 mm (0.472 — 0.488 in)

(7) Ream the inside of valve guide with ST. Gently rotate the reamer clockwise while pressing it lightly into valve guide, and return it also rotating clockwise. After reaming, clean valve guide to remove chips.

ST 499767400 VALVE GUIDE REAMER

CAUTION:

- Apply engine oil to the reamer when reaming.
- If the inner surface of the valve guide is torn, the edge of the reamer should be slightly ground with an oil stone.
- If the inner surface of the valve guide becomes lustrous and the reamer does not chips, use a new reamer or remedy the reamer.

(8) Recheck the contact condition between valve and valve seat after replacing valve guide.

CYLINDER HEAD ASSEMBLY

Mechanical

4. INTAKE AND EXHAUST VALVE S183093A1004

1) Inspect the flange and stem of valve, and replace if damaged, worn, or deformed, or if "H" is less than the specified limit.

H:

Intake

Standard 1.2 mm (0.047 in)

Limit 0.8 mm (0.031 in)

Exhaust

Standard 1.5 mm (0.059 in)

Limit 0.8 mm (0.031 in)


Valve overall length:

Intake

104.4 mm (4.110 in)

Exhaust

104.7 mm (4.122 in)

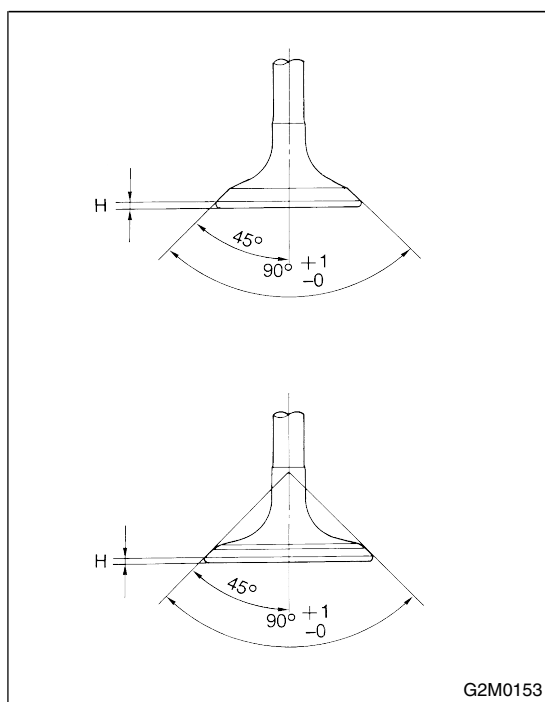


2) Put a small amount of grinding compound on the seat surface and lap the valve and seat surface. Install a new intake valve oil seal after lapping.

5. VALVE SPRINGS S183093A1005

1) Check valve springs for damage, free length, and tension. Replace valve spring if it is not to the specifications presented in the table.

2) To measure the squareness of the valve spring, stand the spring on a surface plate and measure its deflection at the top using a try square.

	Valve spring
Free length	44.67 mm (1.7587 in)
Tension/spring height	220.7±15.7 N (22.5±1.6 kgf, 49.6±3.5 lb)/36.0 mm (1.417 in)
	510.9±25.5 N (52.1±2.6 kgf, 114.9±5.7 lb)/26.6 mm (1.047 in)
Squareness	2.5°, 2.0 mm (0.079 in)

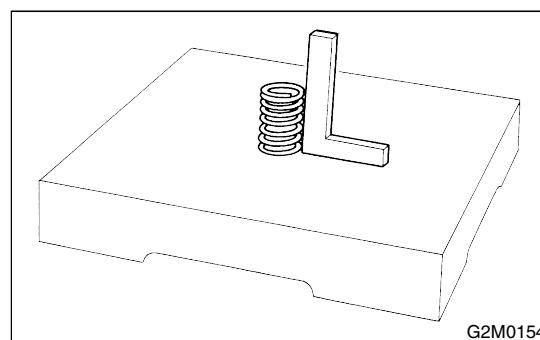

6. INTAKE AND EXHAUST VALVE OIL SEAL

S183093A1006

Replace oil seal with new one, if lip is damaged or spring out of place, or when the surfaces of intake valve and valve seat are reconditioned or intake valve guide is replaced.

- 1) Place cylinder head on ST1.
- 2) Press in oil seal to the specified dimension indicated in the figure by using ST2.

ST1 498267600 CYLINDER HEAD TABLE
ST2 498857100 VALVE GUIDE REMOVER

CAUTION:

- Apply engine oil to oil seal before force-fitting.
- Differentiate between intake valve oil seal and exhaust valve oil seal by noting their difference in color.

Color of rubber part:


Intake [Black]

Exhaust [Brown]

Color of spring part:

Intake [Silver]

Exhaust [Silver]

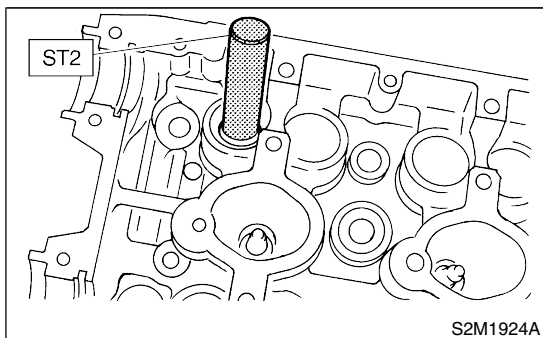


7. VALVE LIFTER

S183093A1007

- 1) Check valve lifter visually.
- 2) Measure outer diameter of valve lifter.

Outer diameter:


34.959 — 34.975 mm (1.3763 — 1.3770 in)

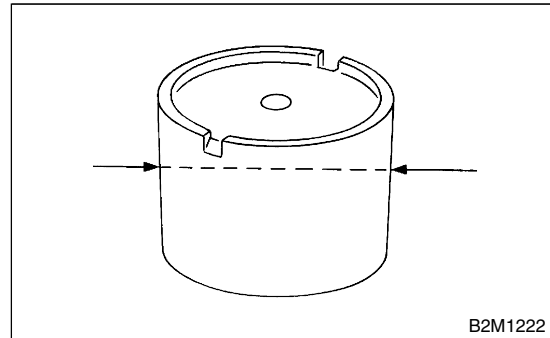

- 3) Measure inner diameter of valve lifter mating part on cylinder head.

Inner diameter:

34.994 — 35.016 mm (1.3777 — 1.3786 in)

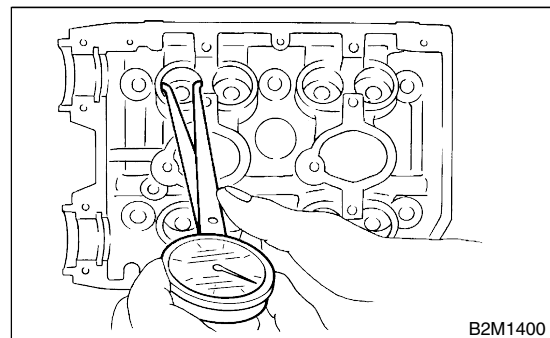

CAUTION:

If difference between outer diameter of valve lifter and inner diameter of valve lifter mating part is over the limit, replace cylinder head.

Standard:

0.019 — 0.057 mm (0.0007 — 0.0022 in)

Limit:

0.100 mm (0.0039 in)

CYLINDER BLOCK

20. Cylinder Block S183090

A: REMOVAL S183090A18

NOTE:

Before conducting this procedure, drain engine oil completely if applicable.


- 1) Remove intake manifold. <Ref. to FU(DOHC TURBO)-15, REMOVAL, Intake Manifold.>
- 2) Remove V-belt. <Ref. to ME(DOHC TURBO)-44, REMOVAL, V-belt.>
- 3) Remove crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, REMOVAL, Crankshaft Pulley.>
- 4) Remove belt cover. <Ref. to ME(DOHC TURBO)-47, REMOVAL, Belt Cover.>
- 5) Remove timing belt assembly. <Ref. to ME(DOHC TURBO)-48, REMOVAL, Timing Belt Assembly.>
- 6) Remove camshaft sprocket. <Ref. to ME(DOHC TURBO)-56, REMOVAL, Camshaft Sprocket.>
- 7) Remove crankshaft sprocket. <Ref. to ME(DOHC TURBO)-57, REMOVAL, Crankshaft Sprocket.>
- 8) Remove generator and A/C compressor with their brackets.
- 9) Remove cylinder head assembly. <Ref. to ME(DOHC TURBO)-63, REMOVAL, Cylinder Head Assembly.>
- 10) Remove clutch housing cover. (MT vehicles only)

- 11) Remove flywheel (MT vehicle) or drive plate (AT vehicle).


Using ST, lock crankshaft.

ST 498497100 CRANKSHAFT STOPPER

● MT VEHICLES

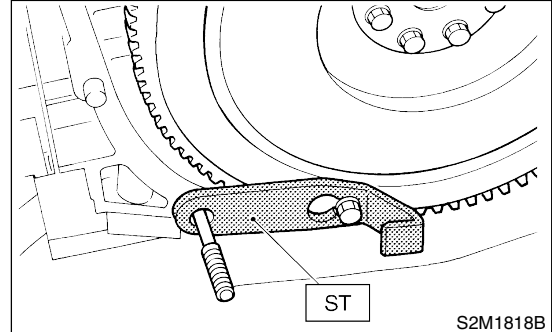

● AT VEHICLES

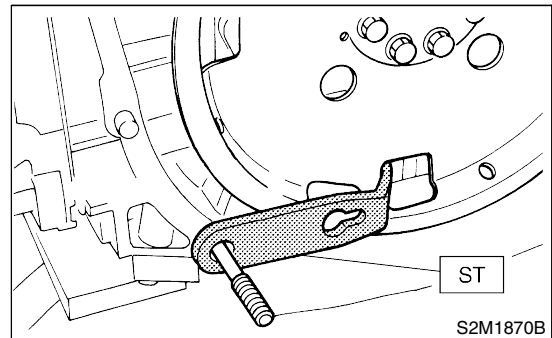


- 12) Remove oil separator cover.
- 13) Remove water by-pass pipe for heater.
- 14) Remove oil filter.

CYLINDER BLOCK

Mechanical

15) Remove oil cooler.

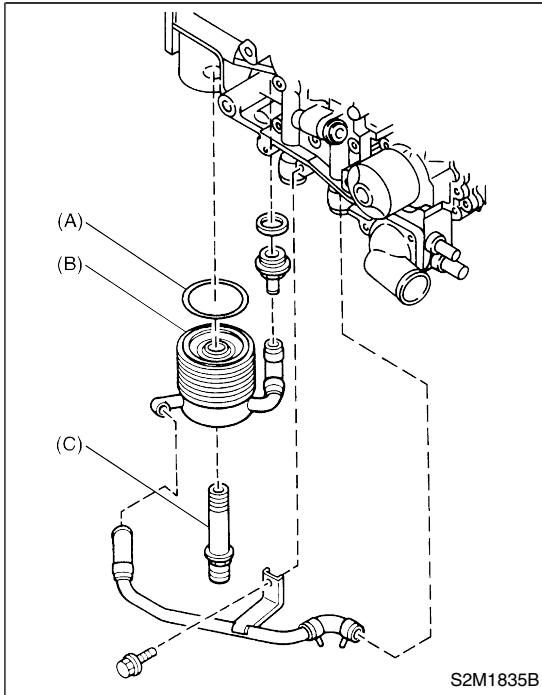


- (A) Gasket
- (B) Oil cooler
- (C) Connector

16) Removal of oil pan

- (1) Turn cylinder block with #2 and #4 piston sides facing upward.
- (2) Remove bolts which secure oil pan to cylinder block.
- (3) Insert a oil pan cutter blade between cylinder block-to-oil pan clearance and remove oil pan.

CAUTION:

Do not use a screwdriver or similar tool in place of oil pan cutter.

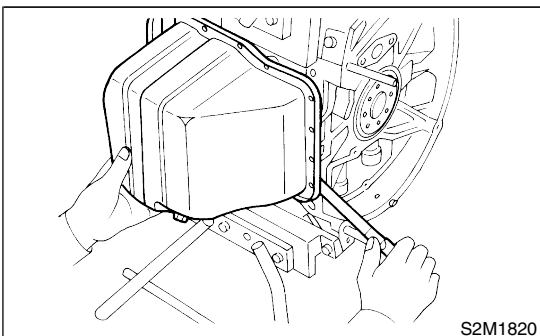

17) Remove oil strainer stay.

18) Remove oil strainer.

19) Remove baffle plate.

20) Remove water pips.


21) Remove water pump.

22) Remove oil pump from cylinder block.

Use a flat-bladed screwdriver as shown in figure when removing oil pump.

CAUTION:

Be careful not to scratch the mating surface of cylinder block and oil pump.

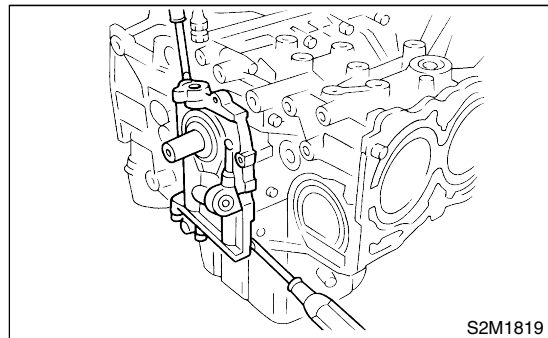

CYLINDER BLOCK

Mechanical

en0294


EN0294

- (1) Service hole plug
- (2) Gasket


- (3) Circlip
- (4) Piston pin

- (5) Service hole cover
- (6) O-ring

23) Remove service hole cover and service hole plugs using hexagon wrench [14 mm (0.55 in)].

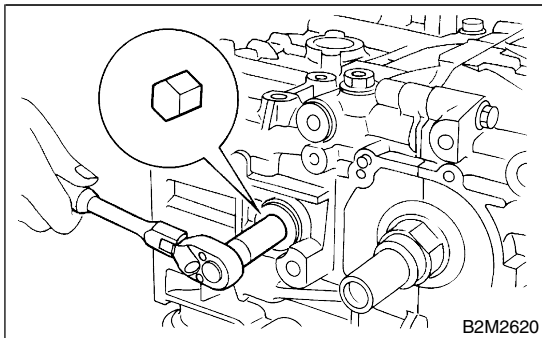

24) Rotate crankshaft to bring #1 and #2 pistons to bottom dead center position, then remove piston circlip through service hole of #1 and #2 cylinders.

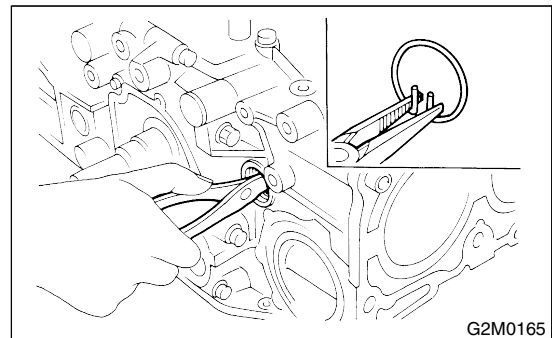

ME(DOHC TURBO)-72

CYLINDER BLOCK


Mechanical

25) Draw out piston pin from #1 and #2 pistons using ST.

ST 499097700 PISTON PIN REMOVER

CAUTION:

Be careful not to confuse original combination of piston, piston pin and cylinder.

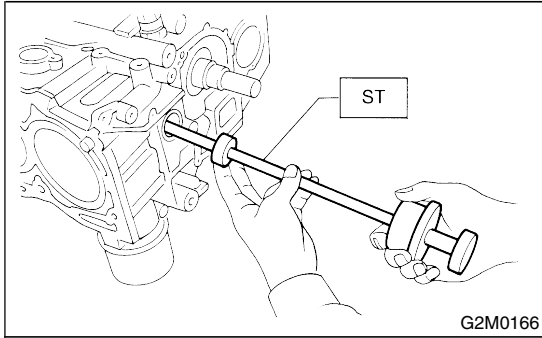

26) Similarly remove piston pins from #3 and #4 pistons.

27) Remove bolts which connect cylinder block on the side of #2 and #4 cylinders.


28) Back off bolts which connect cylinder block on the side of #1 and #3 cylinders two or three turns.

29) Set up cylinder block so that #1 and #3 cylinders are on the upper side, then remove cylinder block connecting bolts.

30) Separate left-hand and right-hand cylinder blocks.

CAUTION:

When separating cylinder block, do not allow the connecting rod to fall and damage the cylinder block.

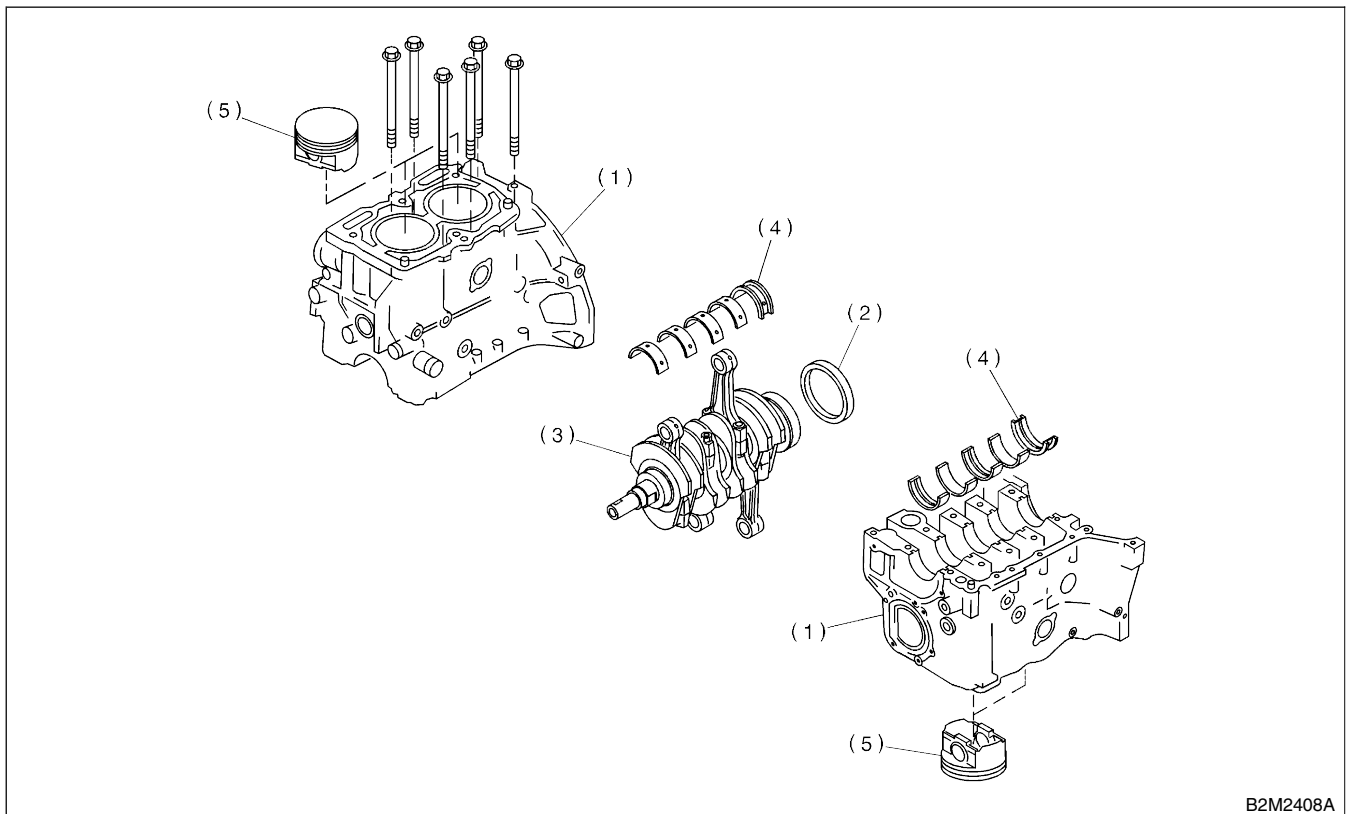

(1) Cylinder block

(3) Crankshaft

(5) Piston

(2) Rear oil seal

(4) Crankshaft bearing

31) Remove rear oil seal.

32) Remove crankshaft together with connecting rod.

33) Remove crankshaft bearings from cylinder block using hammer handle.

CAUTION:

Do not confuse combination of crankshaft bearings. Press bearing at the end opposite to locking lip.

34) Draw out each piston from cylinder block using wooden bar or hammer handle.

ME(DOHC TURBO)-73

CYLINDER BLOCK


Mechanical

CAUTION:

Do not confuse combination of piston and cylinder.

B: INSTALLATION

S183090A11

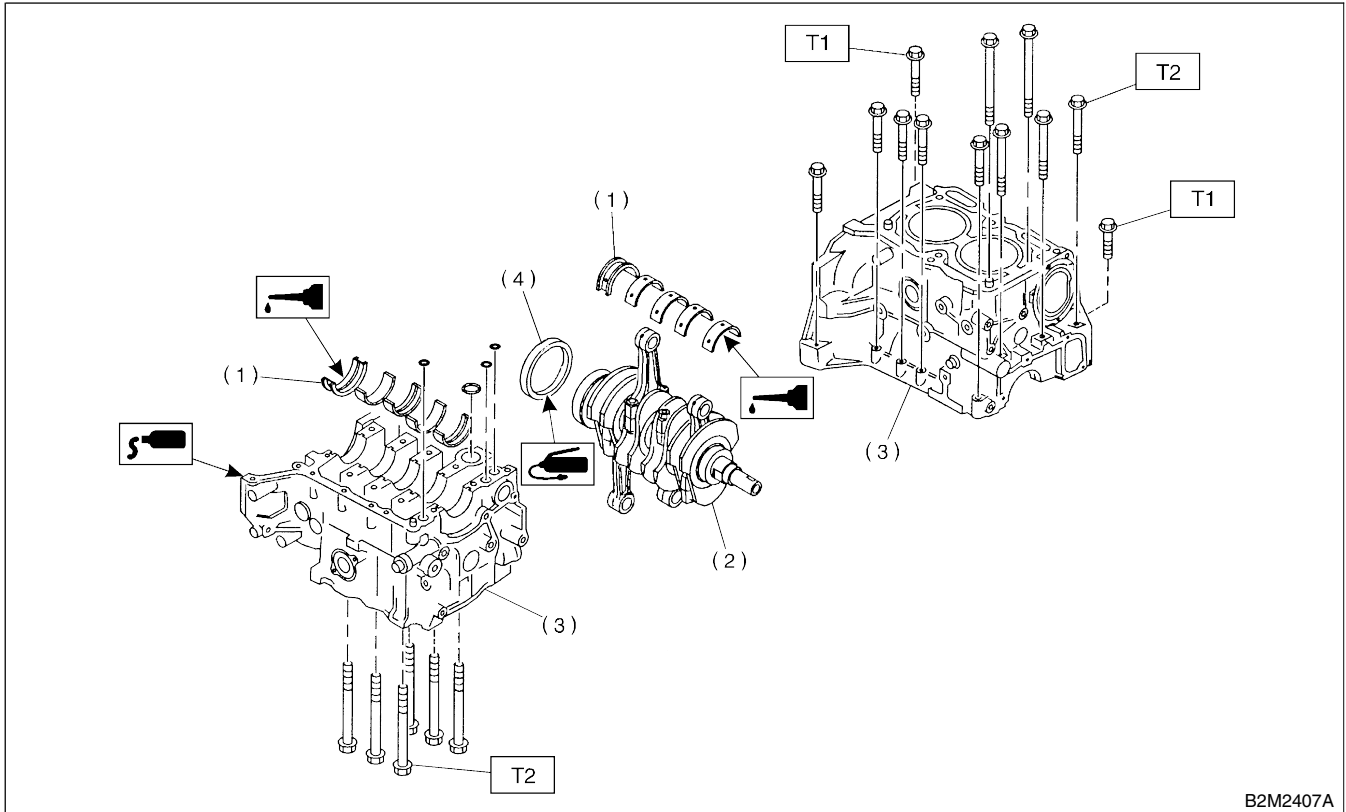

- (1) Crankshaft bearing
- (2) Crankshaft
- (3) Cylinder block
- (4) Rear oil seal

Tightening torque: N·m (kgf-m, ft-lb)

T1: 25 (2.5, 18.1)

T2: 47 (4.8, 34.7)

CAUTION:

Remove oil in the mating surface of bearing and cylinder block before installation. Also apply a coat of engine oil to crankshaft pins.


- 1) Position crankshaft on the #2 and #4 cylinder block.
- 2) Apply fluid packing to the mating surface of #1 and #3 cylinder block, and position it on #2 and #4 cylinder block.

Fluid packing:

THREE BOND 1215 or equivalent

CAUTION:

Do not allow fluid packing to jut into O-ring grooves, oil passages, bearing grooves, etc.

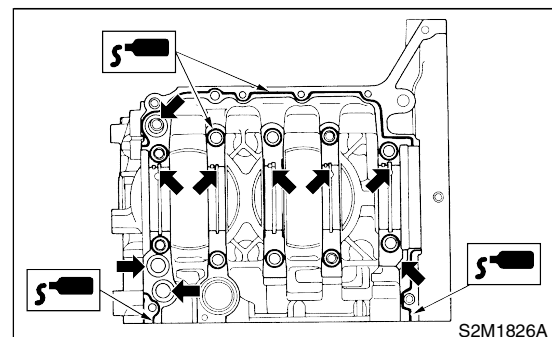


ME(DOHC TURBO)-74

CYLINDER BLOCK

Mechanical


3) Temporarily tighten 10 mm cylinder block connecting bolts in alphabetical sequence shown in figure.

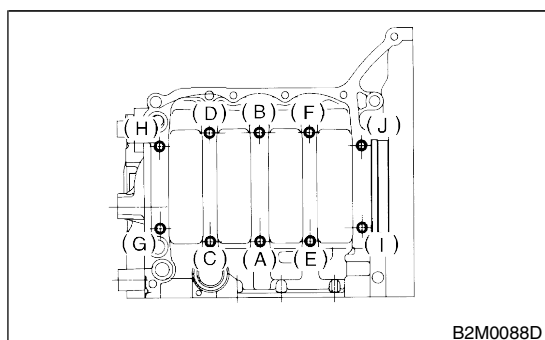

4) Tighten 10 mm cylinder block connecting bolts in alphabetical sequence.

Tightening torque:

47 N·m (4.8 kgf-m, 34.7 ft-lb)

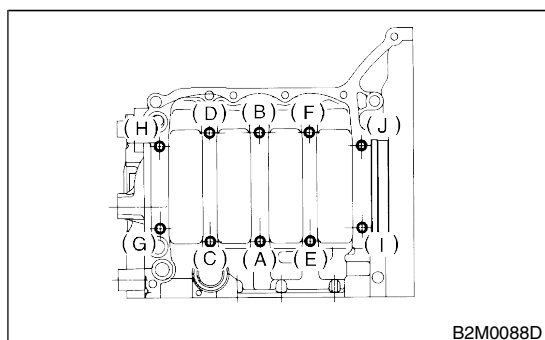


5) Tighten 8 mm and 6 mm cylinder block connecting bolts in alphabetical sequence shown in figure.

Tightening torque:

(A) — (G): 25 N·m (2.5 kgf-m, 18.1 ft-lb)


(H): 6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

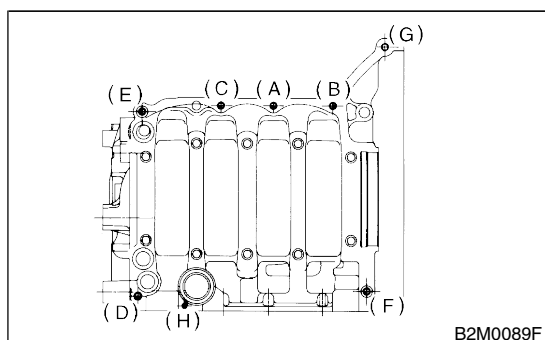

6) Install rear oil seal using ST1 and ST2.


ST1 499597100 OIL SEAL GUIDE

ST2 499587200 OIL SEAL INSTALLER

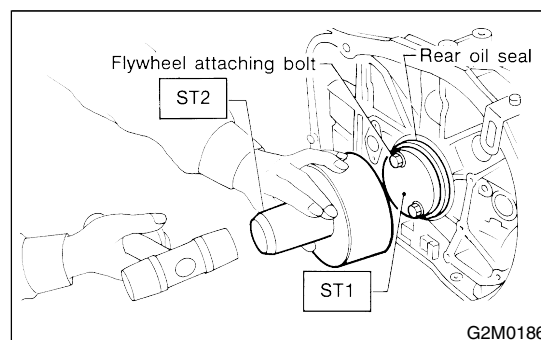

7) Position the top ring gap at (A) or (B) in the figure.

en0304

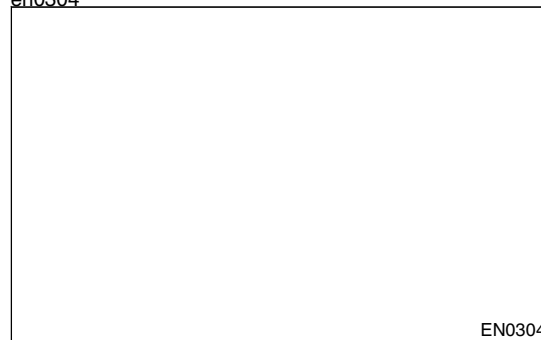

8) Position the second ring gap at 180° on the reverse side for the top ring gap.

9) Position the upper rail gap at (C) or (D) in the figure.

en0305



10) Position the expander gap at 180° of the reverse side for the upper rail gap.

CYLINDER BLOCK


Mechanical

11) Position the lower rail gap at (E) or (F) in the figure.

CAUTION:

- Ensure ring gaps do not face the same direction.
- Ensure ring gaps are not within the piston skirt area.

en0305

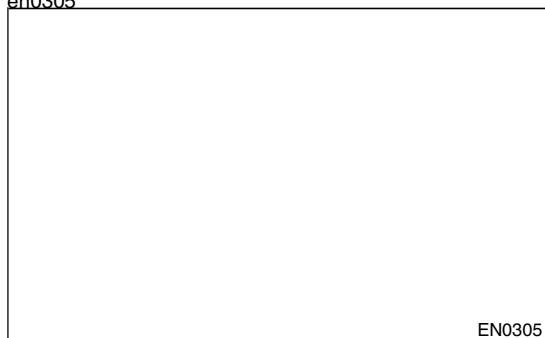


12) Install circlip.

Install circlips in piston holes located opposite service holes in cylinder block, when positioning all pistons in the corresponding cylinders.

CAUTION:

Use new circlips.

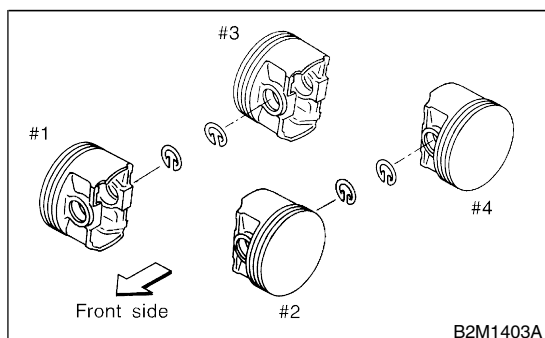

CAUTION:

Piston front mark faces towards the front of the engine.


en0307



(A) Front mark

CYLINDER BLOCK

Mechanical

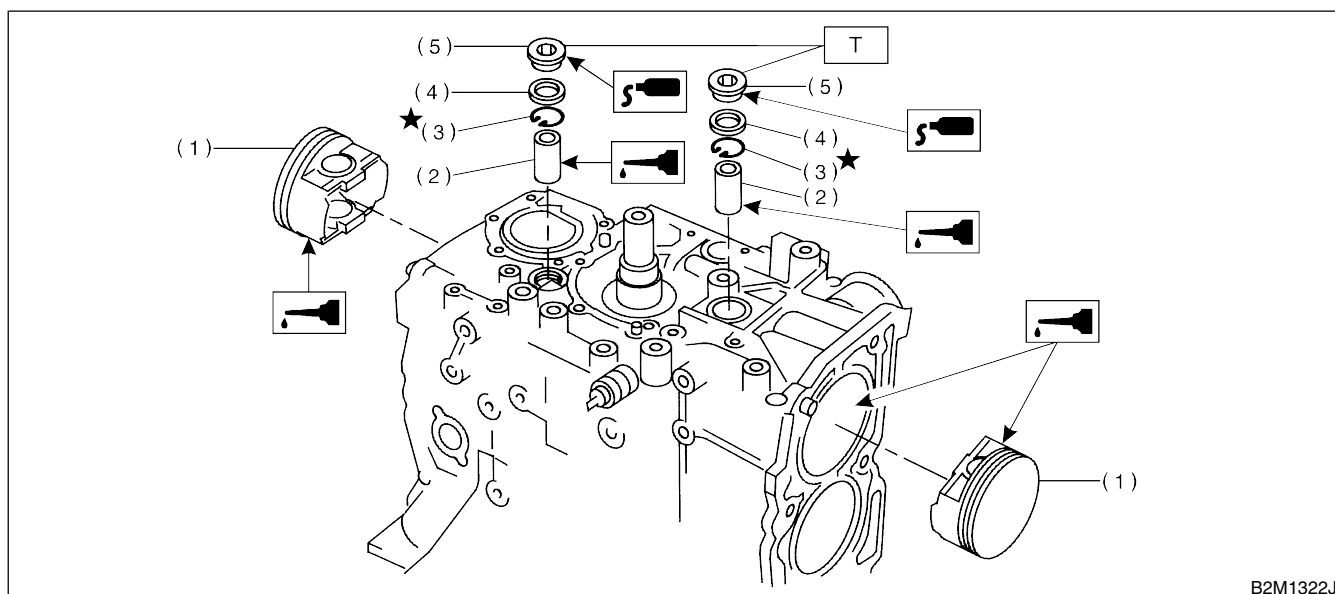

- | | |
|----------------|-----------------------|
| (1) Piston | (4) Gasket |
| (2) Piston pin | (5) Service hole plug |
| (3) Circlip | |

Tightening torque: N·m (kgf-m, ft-lb)
T: 69 (7.0, 50.6)

13) Installing piston


(1) Turn cylinder block so that #1 and #2 cylinders face upward.

(2) Using ST1, turn crankshaft so that #1 and #2 connecting rods are set at bottom dead center.

ST1 499987500 CRANKSHAFT SOCKET

(3) Apply a coat of engine oil to pistons and cylinders and insert pistons in their cylinders using ST2.


ST2 498744300 PISTON GUIDE

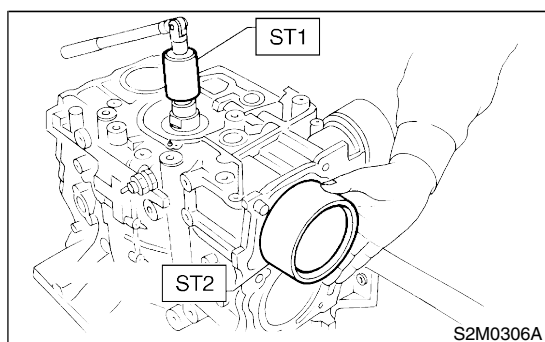

(1) Insert ST3 into service hole to align piston pin hole with connecting rod small end.

CAUTION:
Apply a coat of engine oil to ST3 before insertion.

ST3 499017100 PISTON PIN GUIDE

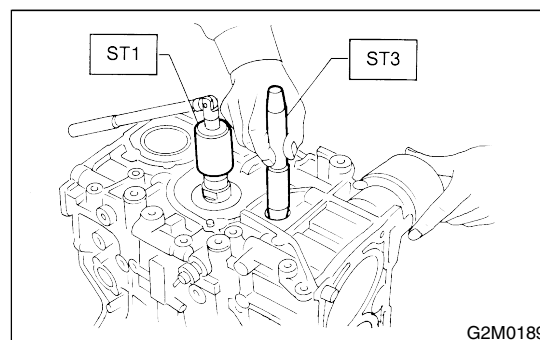

(2) Apply a coat of engine oil to piston pin and insert piston pin into piston and connecting rod through service hole.

14) Installing piston pin


ME(DOHC TURBO)-77

CYLINDER BLOCK

(3) Install circlip.

CAUTION:


Use new circlips.

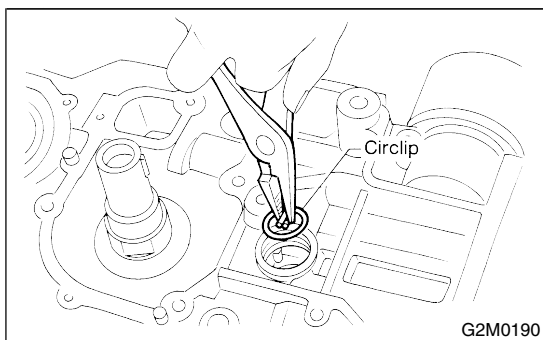

(4) Apply fluid packing around the service hole plug.

Fluid packing:


THREE BOND 1215 or equivalent

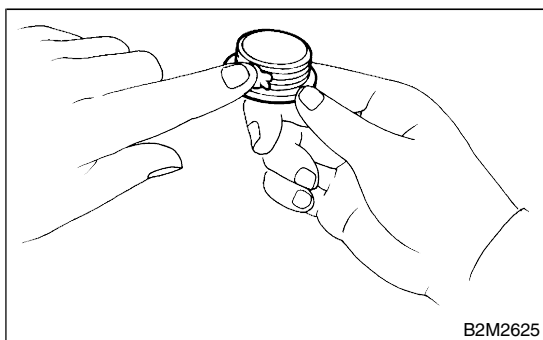

(5) Install service hole plug and gasket.


CAUTION:

Use a new gasket.

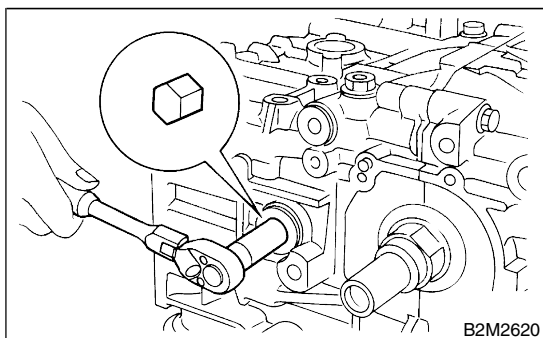

CYLINDER BLOCK

Mechanical

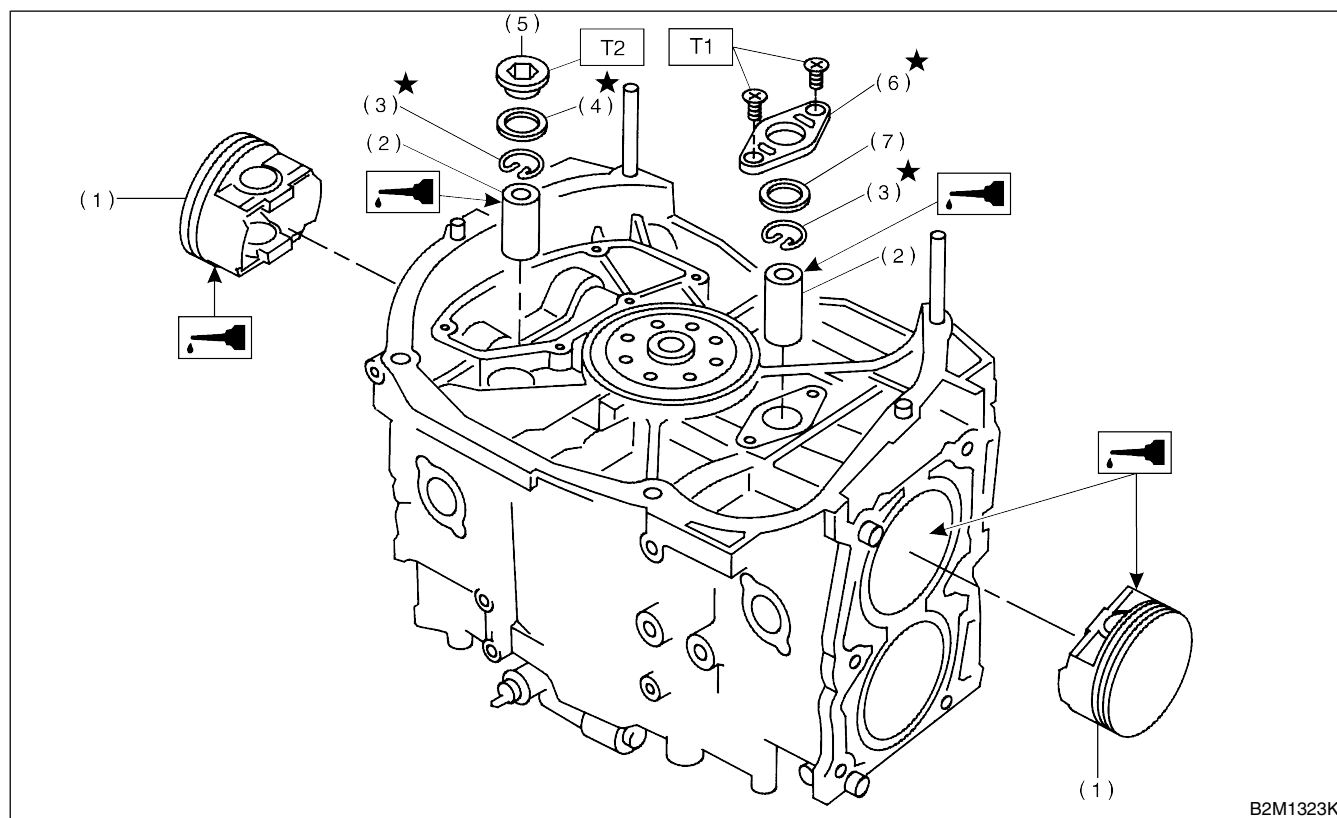

B2M1323K

- | | |
|----------------|------------------------|
| (1) Piston | (5) Service hole plug |
| (2) Piston pin | (6) Service hole cover |
| (3) Circlip | (7) O-ring |
| (4) Gasket | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 6.4 (0.65, 4.7)

T2: 69 (7.0, 50.6)

(6) Turn cylinder block so that #3 and #4 cylinders face upward. Using the same procedures as used for #1 and #2 cylinders, install pistons and piston pins.

15) Install water pipe.

16) Install baffle plate.

Tightening torque:

6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

17) Install oil strainer and O-ring

Tightening torque:


10 N·m (1.0 kgf-m, 7 ft-lb)

18) Install oil strainer stay.

19) Apply fluid packing to matching surfaces and install oil pan.

Fluid packing:

THREE BOND 1215 or equivalent

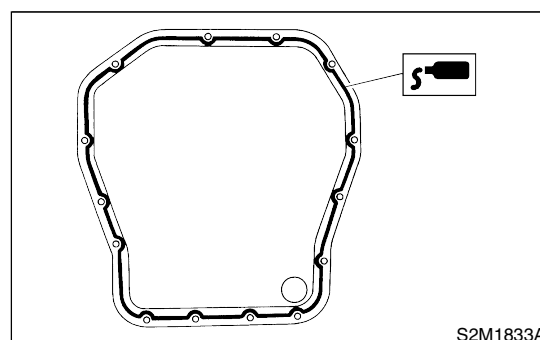

S2M1833A

ME(DOHC TURBO)-79


CYLINDER BLOCK

Mechanical

20) Apply fluid packing to matching surfaces and install oil separator cover.

Fluid packing:

THREE BOND 1215 or equivalent

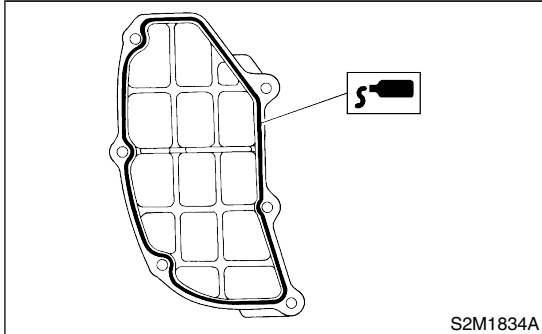

21) Install flywheel (MT vehicles) or drive plate (AT vehicles).


To lock crankshaft, use ST.

ST 498497100 CRANKSHAFT STOPPER


Tightening torque:

72 N·m (7.3 kgf-m, 52.8 ft-lb)

● MT VEHICLES

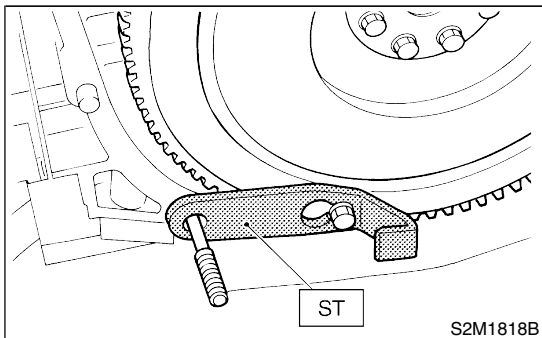

● AT VEHICLES

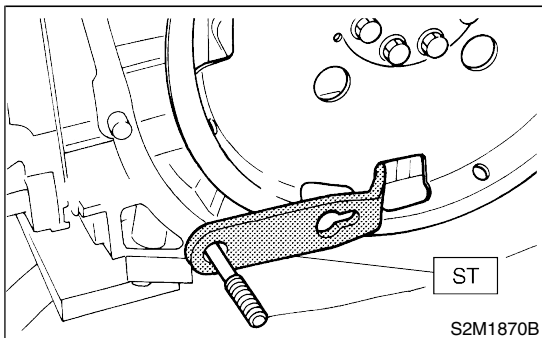


22) Install clutch housing cover.

23) Installation of oil pump

(1) Discard front oil seal after removal. Replace with a new one using ST.


ST 499587100 OIL SEAL INSTALLER

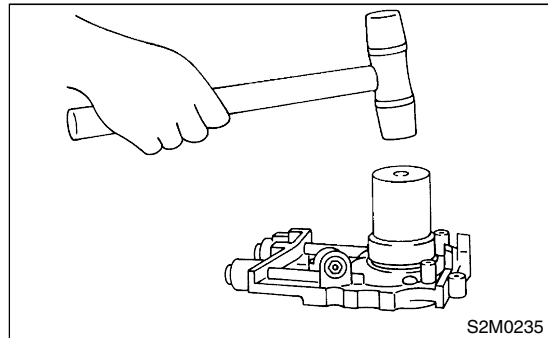

(2) Apply fluid packing to matching surface of oil pump.


Fluid packing:

THREE BOND 1215 or equivalent

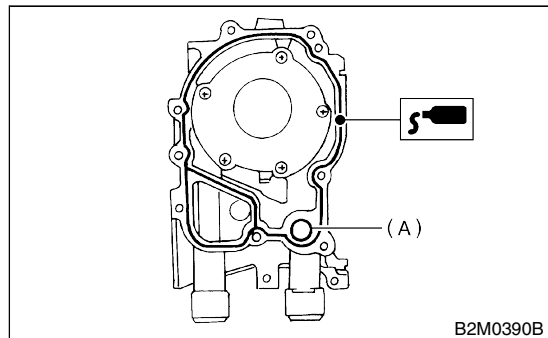

(A) O-ring

(3) Apply a coat of engine oil to the inside of the oil seal.

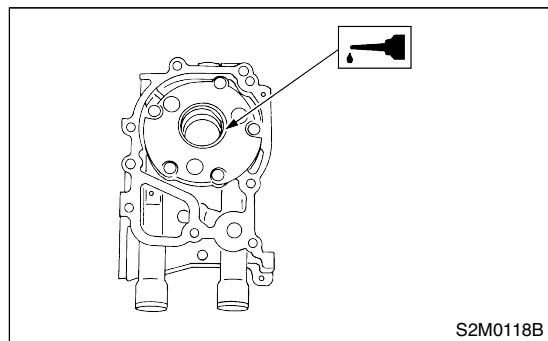

(4) Install oil pump on cylinder block. Be careful not to damage oil seal during installation.

Tightening torque:

6.4 N·m (0.65 kgf-m, 4.7 ft-lb)

CAUTION:

- Do not forget to install O-ring and seal when installing oil pump.
- Align flat surface of oil pump's inner rotor with crankshaft before installation.

24) Install water pump and gasket.

CYLINDER BLOCK

Mechanical


Tightening torque:

First; 12 N·m (1.2 kgf-m, 8.7 ft-lb)

Second; 12 N·m (1.2 kgf-m, 8.7 ft-lb)

CAUTION:

- Be sure to use a new gasket.
- When installing water pump, tighten bolts in two stages in alphabetical sequence as shown in figure.

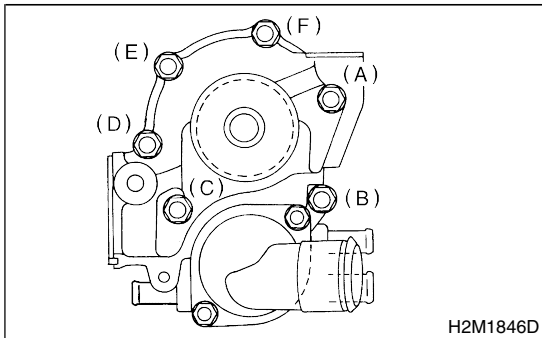


25) Install water by-pass pipe for heater.

26) Install oil cooler.

Tightening torque:

T1: 55 N·m (5.5 kgf-m, 40 ft-lb)

T2: 69 N·m (7.0 kgf-m, 50.6 ft-lb)

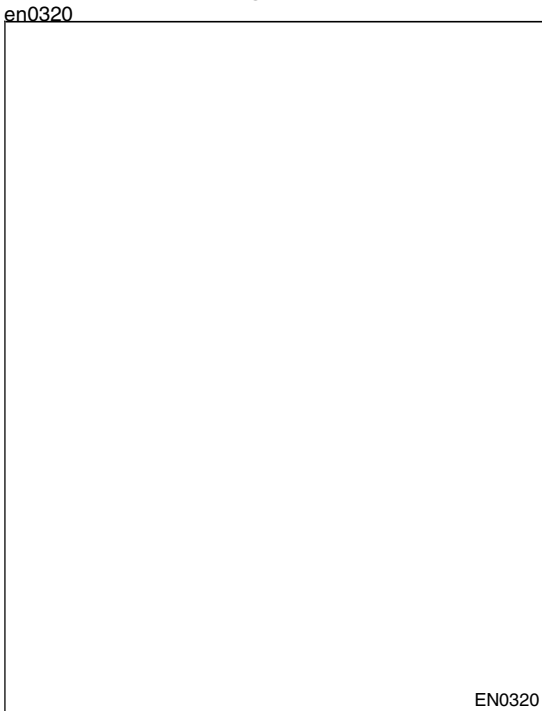


- (A) O-ring
(B) Oil cooler
(C) Connector

27) Install oil filter using ST.

ST 498547000 OIL FILTER WRENCH

28) Install water by-pass pipe between oil cooler and water pump.

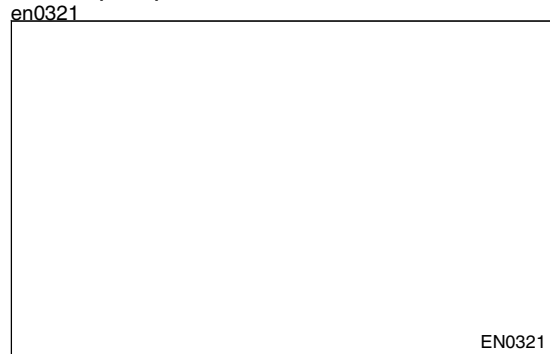

29) Install water pipe.

CAUTION:

Always use a new O-ring.

30) Install cylinder head assembly. <Ref. to ME(DOHC TURBO)-63, INSTALLATION, Cylinder Head Assembly.>

31) Install oil level gauge guide and tighten attaching bolt (left side only).

32) Install rocker cover.

33) Install crankshaft sprocket. <Ref. to ME(DOHC TURBO)-57, INSTALLATION, Crankshaft Sprocket.>

34) Install camshaft sprocket. <Ref. to ME(DOHC TURBO)-56, INSTALLATION, Camshaft Sprocket.>

35) Install timing belt assembly. <Ref. to ME(DOHC TURBO)-49, INSTALLATION, Timing Belt Assembly.>

36) Install belt cover. <Ref. to ME(DOHC TURBO)-47, INSTALLATION, Belt Cover.>

37) Install crankshaft pulley. <Ref. to ME(DOHC TURBO)-46, INSTALLATION, Crankshaft Pulley.>

38) Install generator and A/C compressor brackets on cylinder head.


39) Install V-belt. <Ref. to ME(DOHC TURBO)-44, INSTALLATION, V-belt.>

40) Install intake manifold. <Ref. to FU(DOHC TURBO)-15, REMOVAL, Intake Manifold.>

CYLINDER BLOCK

C: DISASSEMBLY

S183090A06

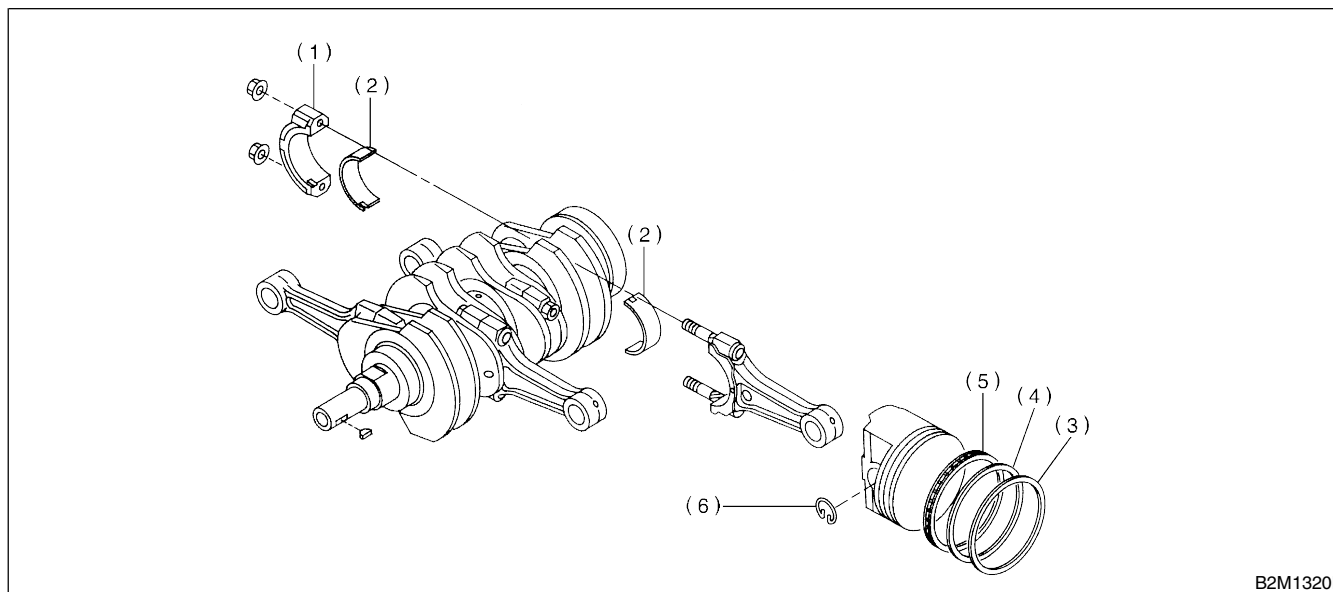

- (1) Connecting rod cap
(2) Connecting rod bearing

- (3) Top ring
(4) Second ring

- (5) Oil ring
(6) Circlip

- 1) Remove connecting rod cap.
2) Remove connecting rod bearing.

CAUTION:

Arrange removed connecting rod, connecting rod cap and bearing in order to prevent confusion.

- 3) Remove piston rings using the piston ring expander.
4) Remove the oil ring by hand.

CAUTION:

Arrange the removed piston rings in good order to prevent confusion.


- 5) Remove circlip.

CYLINDER BLOCK

Mechanical

D: ASSEMBLY

S183090A02

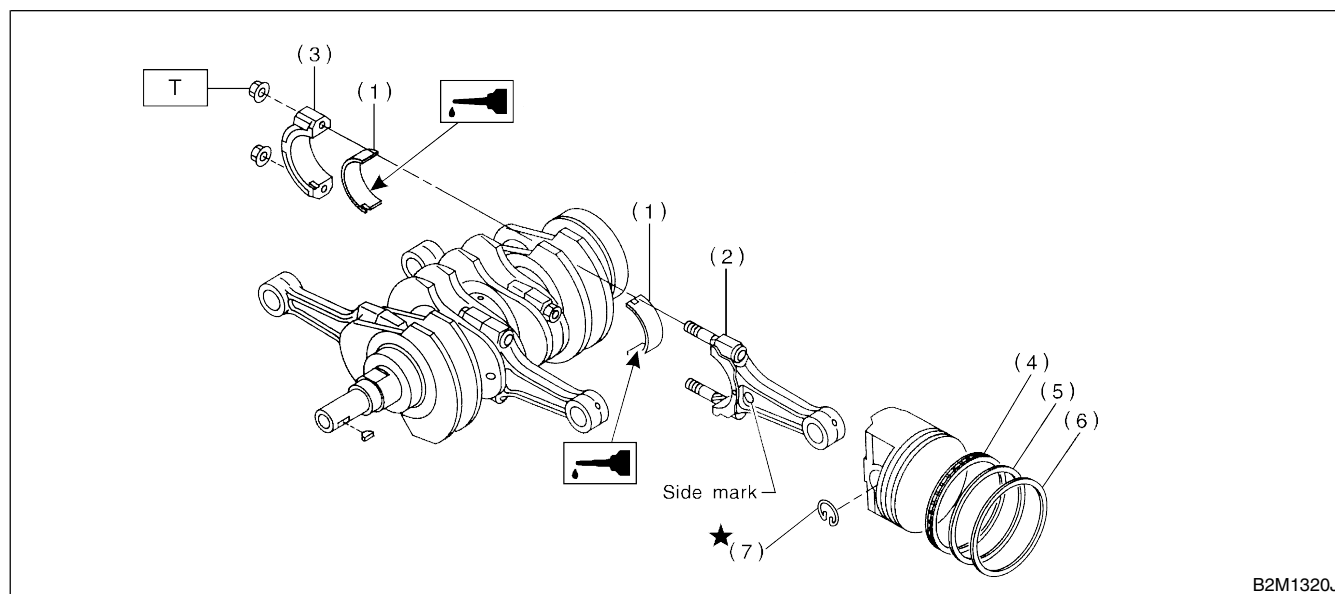

- | | |
|----------------------------|-----------------|
| (1) Connecting rod bearing | (5) Second ring |
| (2) Connecting rod | (6) Top ring |
| (3) Connecting rod cap | (7) Circlip |
| (4) Oil ring | |

Tightening torque: N·m (kgf-m, ft-lb)
T: 44.6 (4.55, 32.9)

- 1) Install connecting rod bearings on connecting rods and connecting rod caps.

CAUTION:

Apply oil to the surfaces of the connecting rod bearings.

- 2) Install connecting rod on crankshaft.

CAUTION:

Position each connecting rod with the side marked facing forward.

- 3) Install connecting rod cap with connecting rod nut.

Ensure the arrow on connecting rod cap faces the front during installation.

CAUTION:

- Each connecting rod has its own mating cap. Make sure that they are assembled correctly by checking their matching number.
- When tightening the connecting rod nuts, apply oil on the threads.

- 4) Install oil ring spacer, upper rail and lower rail in this order by hand. Then install second ring and top ring with a piston ring expander.

E: INSPECTION

S183090A10

1. CYLINDER BLOCK

S183090A1001

- 1) Visually check for cracks and damage. Especially, inspect important parts by means of red lead check.
- 2) Check the oil passages for clogging.
- 3) Inspect crankcase surface that mates with cylinder head for warping by using a straight edge, and correct by grinding if necessary.

Warping limit:

0.05 mm (0.0020 in)

Grinding limit:

0.1 mm (0.004 in)

Standard height of cylinder block:

201.0 mm (7.91 in)

CYLINDER BLOCK

2. CYLINDER AND PISTON S183090A1002

1) The cylinder bore size is stamped on the cylinder block's front upper surface.

CAUTION:

Measurement should be performed at a temperature 20°C (68°F).


NOTE:

Standard sized pistons are classified into two grades, "A" and "B". These grades should be used as a guide line in selecting a standard piston.

Standard diameter:

A: 92.005 — 92.015 mm (3.6222 — 3.6226 in)

B: 91.995 — 92.005 mm (3.6218 — 3.6222 in)

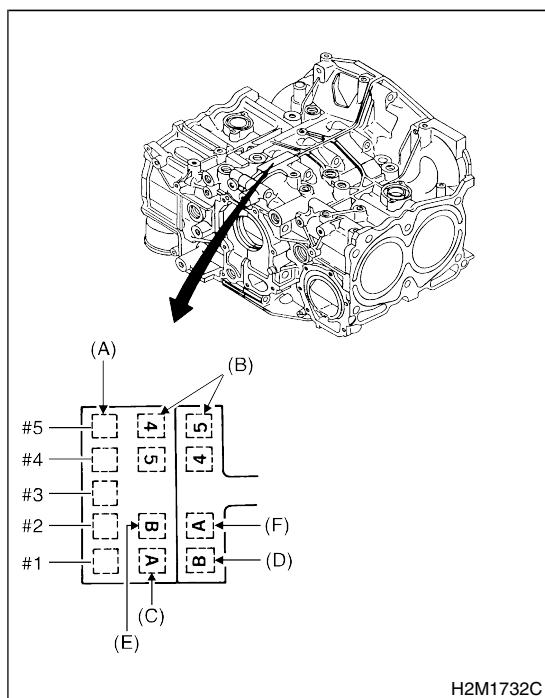

H2M1732C

- (A) Main journal size mark
- (B) Cylinder block RH-LH combination mark
- (C) #1 cylinder bore size mark
- (D) #2 cylinder bore size mark
- (E) #3 cylinder bore size mark
- (F) #4 cylinder bore size mark

2) How to measure the inner diameter of each cylinder

Measure the inner diameter of each cylinder in both the thrust and piston pin directions at the heights shown in the figure, using a cylinder bore gauge.

CAUTION:

Measurement should be performed at a temperature 20°C (68°F).

Taper:

Standard

0.015 mm (0.0006 in)

Limit

0.050 mm (0.0020 in)


Out-of-roundness:

Standard

0.010 mm (0.0004 in)

Limit

0.050 mm (0.0020 in)

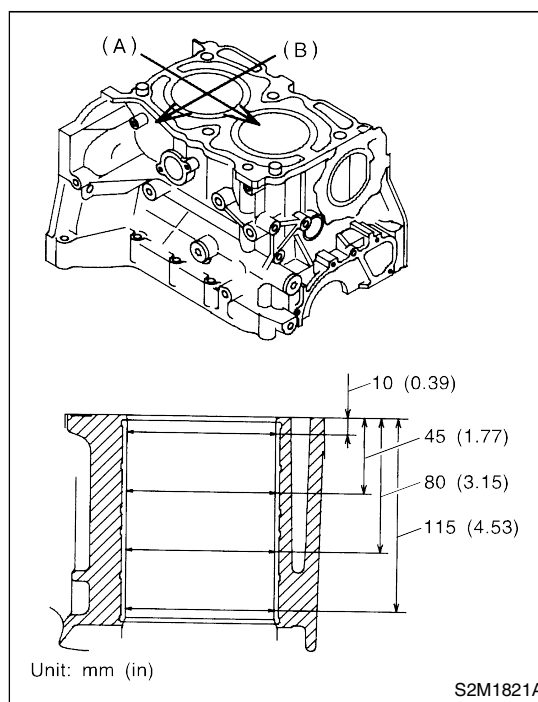

Unit: mm (in)

S2M1821A

- (A) Piston pin direction
- (B) Thrust direction

3) When piston is to be replaced due to general or cylinder wear, determine a suitable sized piston by measuring the piston clearance.

4) How to measure the outer diameter of each piston

Measure the outer diameter of each piston at the height shown in the figure. (Thrust direction)

CAUTION:

Measurement should be performed at a temperature of 20°C (68°F).

Piston grade point H:
37.0 mm (1.457 in)


Piston outer diameter:
Standard

A: 91.985 — 91.995 mm
(3.6214 — 3.6218 in)

B: 91.975 — 91.985 mm
(3.6211 — 3.6214 in)

0.25 mm (0.0098 in) oversize
92.225 — 92.235 mm
(3.6309 — 3.6313 in)

0.50 mm (0.0197 in) oversize
92.475 — 92.485 mm
(3.6407 — 3.6411 in)

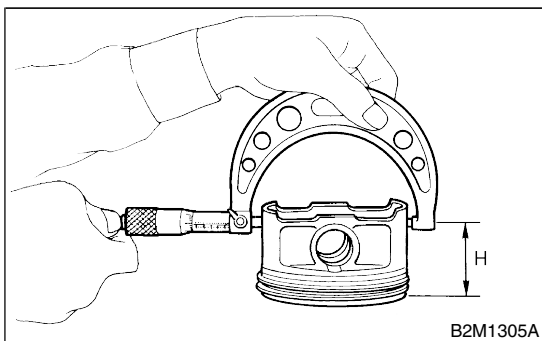

5) Calculate the clearance between cylinder and piston.

CAUTION:
Measurement should be performed at a temperature of 20°C (68°F).

Cylinder to piston clearance at 20°C (68°F):

Standard
0.010 — 0.030 mm (0.0004 — 0.0012 in)

Limit
0.050 mm (0.0020 in)

6) Boring and honing
(1) If the value of taper, out-of-roundness, or cylinder-to-piston clearance measured exceeds the specified limit or if there is any damage on the cylinder wall, rebore it to use an oversize piston.

CAUTION:
When any of the cylinders needs reboring, all other cylinders must be bored at the same time, and use oversize pistons. Do not perform boring on one cylinder only, nor use an oversize piston for one cylinder only.

(2) If the cylinder inner diameter exceeds the limit after boring and honing, replace the crankcase.

CAUTION:

Immediately after reboring, the cylinder diameter may differ from its real diameter due to temperature rise. Thus, pay attention to this when measuring the cylinder diameter.

Limit of cylinder enlarging (boring):
0.5 mm (0.020 in)



3. PISTON AND PISTON PIN S183090A1003

- 1) Check pistons and piston pins for damage, cracks, and wear and the piston ring grooves for wear and damage. Replace if defective.
- 2) Measure the piston-to-cylinder clearance at each cylinder. <Ref. to ME(DOHC TURBO)-84, CYLINDER AND PISTON, INSPECTION, Cylinder Block.> If any of the clearances is not to specification, replace the piston or bore the cylinder to use an oversize piston.
- 3) Make sure that piston pin can be inserted into the piston pin hole with a thumb at 20°C (68°F). Replace if defective.

Standard clearance between piston pin and hole in piston:


Standard
0.004 — 0.008 mm (0.0002 — 0.0003 in)

Limit
0.020 mm (0.0008 in)

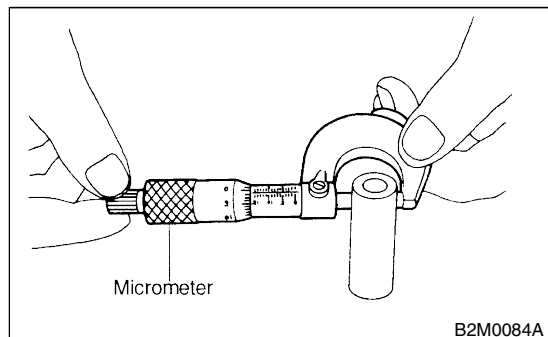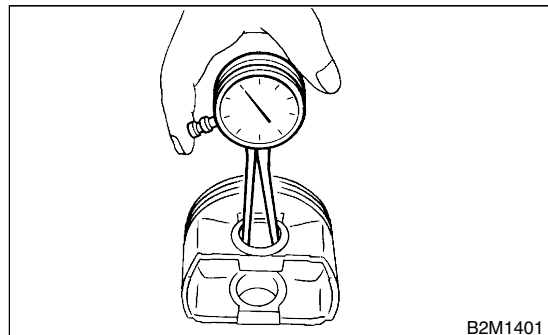

CYLINDER BLOCK

4) Check circlip installation groove on the piston for burr (A). If necessary, remove burr from the groove so that piston pin can lightly move.

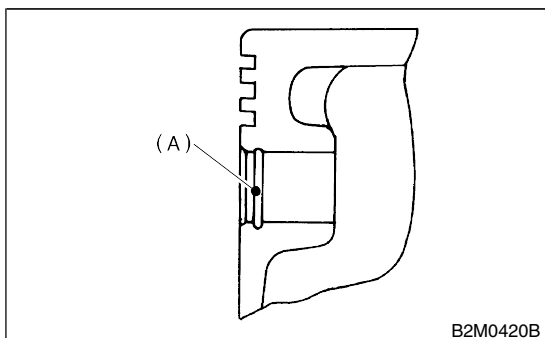


5) Check piston pin circlip for distortion, cracks and wear.

4. PISTON RING S183090A1004

1) If piston ring is broken, damaged, or worn, or if its tension is insufficient, or when the piston is replaced, replace piston ring with a new one of the same size as the piston.

CAUTION:

● “N” is marked on the end of the top and second rings. When installing the rings to the piston, face this mark upward.

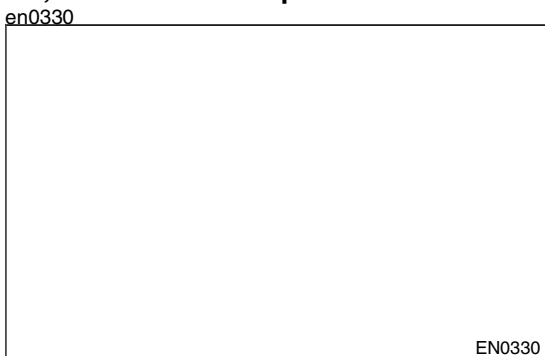


● The oil ring is a combined ring consisting of two rails and a spacer in between. When installing, be careful to assemble correctly.



- (A) Top ring
- (B) Second ring
- (C) Oil ring
- (a) Upper rail
- (b) Spacer
- (c) Lower rail

2) Squarely place piston ring and oil ring in cylinder, and measure the piston ring gap with a thickness gauge.

Unit: mm (in)			
		Standard	Limit
Piston ring gap	Top ring	0.20 — 0.35 (0.0079 — 0.0138)	1.0 (0.039)
	Second ring	0.35 — 0.50 (0.0138 — 0.0197)	1.0 (0.039)
	Oil ring rail	0.20 — 0.70 (0.0079 — 0.0276)	1.5 (0.059)

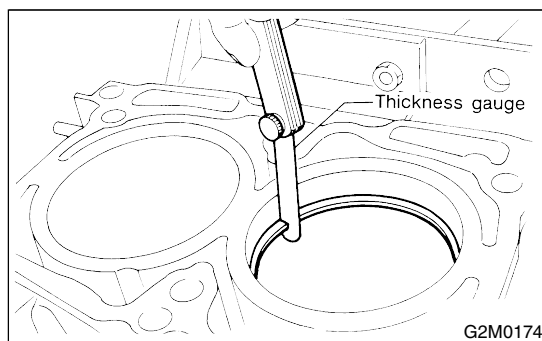

CYLINDER BLOCK


Mechanical

3) Measure the clearance between piston ring and piston ring groove with a thickness gauge.

CAUTION:

Before measuring the clearance, clean the piston ring groove and piston ring.

		Unit: mm (in)	
		Standard	Limit
Clearance between piston ring and piston ring groove	Top ring	0.040 — 0.080 (0.0016 — 0.0031)	0.15 (0.0059)
	Second ring	0.030 — 0.070 (0.0012 — 0.0028)	0.15 (0.0059)

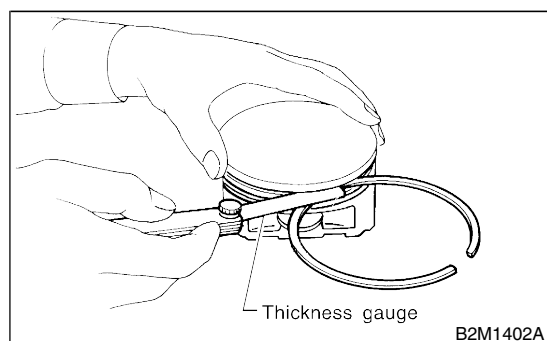


5. CONNECTING ROD S183090A1005

- 1) Replace connecting rod, if the large or small end thrust surface is damaged.
- 2) Check for bend or twist using a connecting rod aligner. Replace connecting rod if the bend or twist exceeds the limit.

Limit of bend or twist per 100 mm (3.94 in) in length:

0.10 mm (0.0039 in)

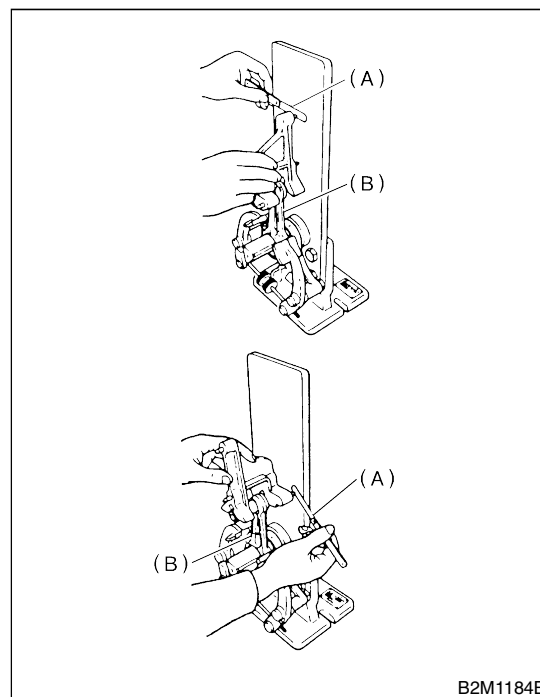

- (A) Thickness gauge
(B) Connecting rod

3) Install connecting rod fitted with bearing to crankshaft and measure the side clearance (thrust clearance). Replace connecting rod if the side clearance exceeds the specified limit.

Connecting rod side clearance:


Standard

0.070 — 0.330 mm (0.0028 — 0.0130 in)

Limit

0.4 mm (0.016 in)

en0335

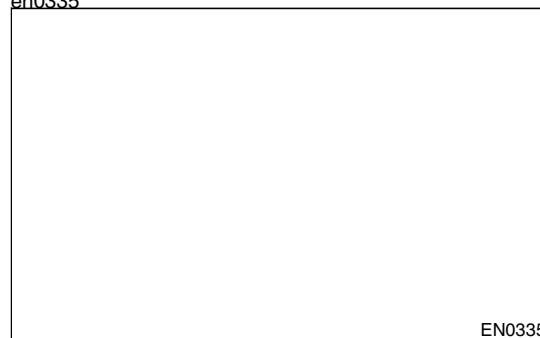

CYLINDER BLOCK

Mechanical

4) Inspect connecting rod bearing for scar, peeling, seizure, melting, wear, etc.

5) Measure the oil clearance on individual connecting rod bearings by means of plastigauge. If any oil clearance is not within specification, replace the defective bearing with a new one of standard size or undersize as necessary. (See the table below.)

Connecting rod oil clearance:

Standard

0.020 — 0.046 mm (0.0008 — 0.0018 in)

Limit

0.05 mm (0.0020 in)

Unit: mm (in)		
Bearing	Bearing size (Thickness at center)	Outer diameter of crank pin
Standard	1.492 — 1.501 (0.0587 — 0.0591)	51.984 — 52.000 (2.0466 — 2.0472)
0.03 (0.0012) undersize	1.510 — 1.513 (0.0594 — 0.0596)	51.954 — 51.970 (2.0454 — 2.0461)
0.05 (0.0020) undersize	1.520 — 1.523 (0.0598 — 0.0600)	51.934 — 51.950 (2.0446 — 2.0453)
0.25 (0.0098) undersize	1.620 — 1.623 (0.0638 — 0.0639)	51.734 — 51.750 (2.0368 — 2.0374)

6) Inspect bushing at connecting rod small end, and replace if worn or damaged. Also measure the piston pin clearance at the connecting rod small end.



Clearance between piston pin and bushing:

Standard

0 — 0.022 mm (0 — 0.0009 in)


Limit

0.030 mm (0.0012 in)

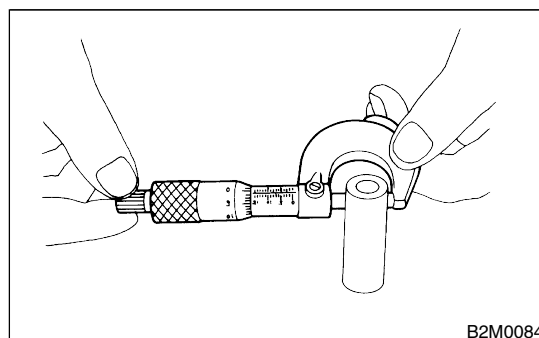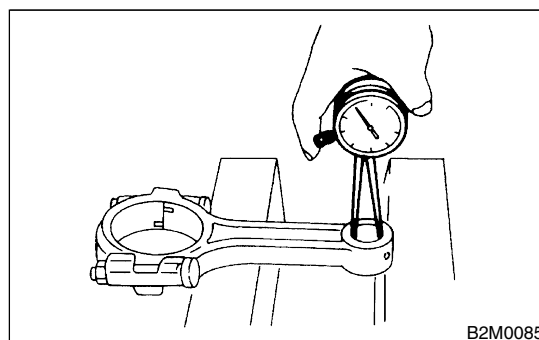

- 7) Replacement procedure is as follows.
- (1) Remove bushing from connecting rod with ST and press.
 - (2) Press bushing with ST after applying oil on the periphery of bushing.

ST 499037100 CONNECTING ROD BUSHING REMOVER AND INSTALLER

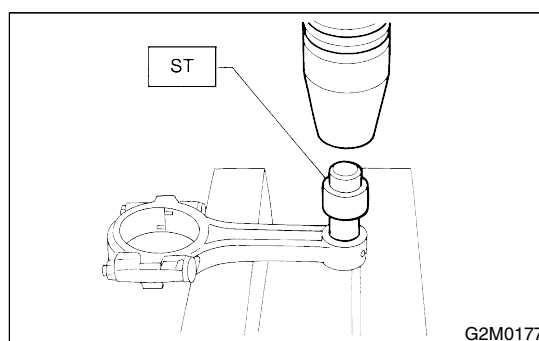

- (3) Make two 3 mm (0.12 in) holes in bushing. Ream the inside of bushing.
- (4) After completion of reaming, clean bushing to remove chips.

CYLINDER BLOCK

Mechanical

6. CRANKSHAFT AND CRANKSHAFT BEARING

S183090A1006

1) Clean crankshaft completely and check for cracks by means of red lead check etc., and replace if defective.

2) Measure the crankshaft bend, and correct or replace if it exceeds the limit.

CAUTION:

If a suitable V-block is not available, install #1 and #5 crankshaft bearing on cylinder block, position crankshaft on these bearings and measure crankshaft bend using a dial gauge.

Crankshaft bend limit:

0.035 mm (0.0014 in)

en0339



3) Inspect the crank journal and crank pin for wear. If they are not within the specifications, replace bearing with a suitable (undersize) one, and replace or recondition crankshaft as necessary. When grinding crank journal or crank pin, finish them to the specified dimensions according to the undersize bearing to be used.

Crank pin and crank journal:

Out-of-roundness


0.020 mm (0.0008 in) or less

Taper limit

0.07 mm (0.0028 in)

Grinding limit

0.250 mm (0.0098 in)

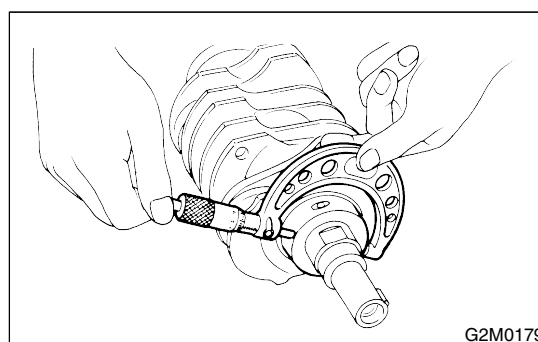

Unit: mm (in)				
		Crank journal diameter		Crank pin diameter
		#1, #3, #5	#2, #4	
Standard	Journal O.D.	59.992 — 60.008 (2.3619 — 2.3625)	59.992 — 60.008 (2.3619 — 2.3625)	51.984 — 52.000 (2.0466 — 2.0472)
	Bearing size (Thickness at center)	1.998 — 2.011 (0.0787 — 0.0792)	2.000 — 2.013 (0.0787 — 0.0793)	1.492 — 1.510 (0.0587 — 0.0591)
0.03 (0.0012) undersize	Journal O.D.	59.962 — 59.978 (2.3607 — 2.3613)	59.962 — 59.978 (2.3607 — 2.3613)	51.954 — 51.970 (2.0454 — 2.0461)
	Bearing size (Thickness at center)	2.017 — 2.020 (0.0794 — 0.0795)	2.019 — 2.022 (0.0795 — 0.0796)	1.510 — 1.513 (0.0594 — 0.0596)
0.05 (0.0020) undersize	Journal O.D.	59.942 — 59.958 (2.3599 — 2.3605)	59.942 — 59.958 (2.3599 — 2.3605)	51.934 — 51.950 (2.0446 — 2.0453)
	Bearing size (Thickness at center)	2.027 — 2.030 (0.0798 — 0.0799)	2.029 — 2.032 (0.0799 — 0.0800)	1.520 — 1.523 (0.0598 — 0.0600)
0.25 (0.0098) undersize	Journal O.D.	59.742 — 59.758 (2.3520 — 2.3527)	59.742 — 59.758 (2.3520 — 2.3527)	51.734 — 51.750 (2.0368 — 2.0374)
	Bearing size (Thickness at center)	2.127 — 2.130 (0.0837 — 0.0839)	2.129 — 2.132 (0.0838 — 0.0839)	1.620 — 1.623 (0.0638 — 0.0639)

O.D. ... Outer Diameter

CYLINDER BLOCK

4) Measure the thrust clearance of crankshaft at center bearing. If the clearance exceeds the limit, replace bearing.

Crankshaft thrust clearance:

Standard

0.030 — 0.115 mm (0.0012 — 0.0045 in)

Limit

0.25 mm (0.0098 in)

en0341



EN0341

5) Inspect individual crankshaft bearings for signs of flaking, seizure, melting, and wear.

6) Measure the oil clearance on each crankshaft bearing by means of plastigauge. If the measurement is not within the specification, replace defective bearing with an undersize one, and replace or recondition crankshaft as necessary.

Unit: mm (in)	
Crankshaft oil clearance	
Standard	0.010 — 0.030 (0.0004 — 0.0012)
Limit	0.040 (0.0016)

ENGINE TROUBLE IN GENERAL

Mechanical

21. Engine Trouble in General S183095

A: INSPECTION S183095A10

NOTE:

“RANK” shown in the chart refer to the possibility of reason for the trouble in order (“Very often” to “Rarely”)

A — Very often

B — Sometimes

C — Rarely

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
1. Engine will not start.			
1) Starter does not turn.	● Starter	● Defective battery-to-starter harness	B
		● Defective starter switch	C
		● Defective inhibitor switch or neutral switch	C
		● Defective starter	B
	● Battery	● Poor terminal connection	A
		● Run-down battery	A
		● Defective charging system	B
	● Friction	● Seizure of crankshaft and connecting rod bearing	C
		● Seized camshaft	C
		● Seized or stuck piston and cylinder	C
2) Initial combustion does not occur.	● Starter	● Defective starter	C
	● Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	● Fuel line	● Defective fuel pump and relay	A
		● Lack of or insufficient fuel	B
	● Belt	● Defective	B
		● Defective timing	B
	● Compression	● Incorrect valve clearance	C
		● Loosened spark plugs or defective gasket	C
		● Loosened cylinder head bolts or defective gasket	C
		● Improper valve seating	C
		● Defective valve stem	C
		● Worn or broken valve spring	B
		● Worn or stuck piston rings, cylinder and piston	C
		● Incorrect valve timing	B
		● Improper engine oil (low viscosity)	B

ENGINE TROUBLE IN GENERAL

Mechanical

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
3) Initial combustion occur.	● Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	● Intake system	● Defective intake manifold gasket	B
		● Defective throttle body gasket	B
	● Fuel line	● Defective fuel pump and relay	C
		● Clogged fuel line	C
		● Lack of or insufficient fuel	B
	● Belt	● Defective	B
		● Defective timing	B
	● Compression	● Incorrect valve clearance	C
		● Loosened spark plugs or defective gasket	C
		● Loosened cylinder head bolts or defective gasket	C
		● Improper valve seating	C
		● Defective valve stem	C
		● Worn or broken valve spring	B
		● Worn or stuck piston rings, cylinder and piston	C
		● Incorrect valve timing	B
		● Improper engine oil (low viscosity)	B
4) Engine stalls after initial combustion.	● Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	● Intake system	● Loosened or cracked intake duct	B
		● Loosened or cracked PCV hose	C
		● Loosened or cracked vacuum hose	C
		● Defective intake manifold gasket	B
		● Defective throttle body gasket	B
		● Dirty air cleaner element	C
	● Fuel line	● Clogged fuel line	C
		● Lack of or insufficient fuel	B
	● Belt	● Defective	B
		● Defective timing	B
	● Compression	● Incorrect valve clearance	C
		● Loosened spark plugs or defective gasket	C
		● Loosened cylinder head bolts or defective gasket	C
		● Improper valve seating	C
		● Defective valve stem	C
		● Worn or broken valve spring	B
		● Worn or stuck piston rings, cylinder and piston	C
		● Incorrect valve timing	B
		● Improper engine oil (low viscosity)	B

ME(DOHC TURBO)-92

ENGINE TROUBLE IN GENERAL

Mechanical

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
2. Rough idle and engine stall	● Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	● Intake system	● Loosened or cracked intake duct	A
		● Loosened or cracked PCV hose	A
		● Loosened or cracked vacuum hose	A
		● Defective intake manifold gasket	B
		● Defective throttle body gasket	B
		● Defective PCV valve	C
		● Loosened oil filler cap	B
		● Dirty air cleaner element	C
	● Fuel line	● Defective fuel pump and relay	C
		● Clogged fuel line	C
		● Lack of or insufficient fuel	B
	● Belt	● Defective timing	C
	● Compression	● Incorrect valve clearance	B
		● Loosened spark plugs or defective gasket	B
		● Loosened cylinder head bolts or defective gasket	B
		● Improper valve seating	B
		● Defective valve stem	C
		● Worn or broken valve spring	B
		● Worn or stuck piston rings, cylinder and piston	B
		● Incorrect valve timing	A
		● Improper engine oil (low viscosity)	B
	● Lubrication system	● Incorrect oil pressure	B
		● Defective rocker cover gasket	C
	● Cooling system	● Overheating	C
	● Others	● Malfunction of evaporative emission control system	A
		● Stuck or damaged throttle valve	B
		● Accelerator cable out of adjustment	C

ENGINE TROUBLE IN GENERAL

Mechanical

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
3. Low output, hesitation and poor acceleration	● Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	● Intake system	● Loosened or cracked intake duct	A
		● Loosened or cracked PCV hose	A
		● Loosened or cracked vacuum hose	B
		● Defective intake manifold gasket	B
		● Defective throttle body gasket	B
		● Defective PCV valve	B
		● Loosened oil filler cap	B
		● Dirty air cleaner element	A
	● Fuel line	● Defective fuel pump and relay	B
		● Clogged fuel line	B
		● Lack of or insufficient fuel	C
	● Belt	● Defective timing	B
	● Compression	● Incorrect valve clearance	B
		● Loosened spark plugs or defective gasket	B
		● Loosened cylinder head bolts or defective gasket	B
		● Improper valve seating	B
		● Defective valve stem	C
		● Worn or broken valve spring	B
		● Worn or stuck piston rings, cylinder and piston	C
		● Incorrect valve timing	A
		● Improper engine oil (low viscosity)	B
	● Lubrication system	● Incorrect oil pressure	B
	● Cooling system	● Overheating	C
		● Over cooling	C
	● Others	● Malfunction of evaporative emission control system	A
4. Surging	● Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	● Intake system	● Loosened or cracked intake duct	A
		● Loosened or cracked PCV hose	A
		● Loosened or cracked vacuum hose	A
		● Defective intake manifold gasket	B
		● Defective throttle body gasket	B
		● Defective PCV valve	B
		● Loosened oil filler cap	B
		● Dirty air cleaner element	B
	● Fuel line	● Defective fuel pump and relay	B
		● Clogged fuel line	B
		● Lack of or insufficient fuel	C
	● Belt	● Defective timing	B
	● Compression	● Incorrect valve clearance	B
		● Loosened spark plugs or defective gasket	C
		● Loosened cylinder head bolts or defective gasket	C
		● Improper valve seating	C
		● Defective valve stem	C
		● Worn or broken valve spring	C
		● Worn or stuck piston rings, cylinder and piston	C
		● Incorrect valve timing	A
		● Improper engine oil (low viscosity)	B
	● Cooling system	● Overheating	B
	● Others	● Malfunction of evaporative emission control system	C

ME(DOHC TURBO)-94

ENGINE TROUBLE IN GENERAL

Mechanical

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
5. Engine does not return to idle.	● Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	● Intake system	● Loosened or cracked vacuum hose	A
	● Others	● Stuck or damaged throttle valve	A
		● Accelerator cable out of adjustment	B
6. Dieseling (Run-on)	● Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	● Cooling system	● Overheating	B
	● Others	● Malfunction of evaporative emission control system	B
7. After burning in exhaust system	● Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	● Intake system	● Loosened or cracked intake duct	C
		● Loosened or cracked PCV hose	C
		● Loosened or cracked vacuum hose	B
		● Defective PCV valve	B
		● Loosened oil filler cap	C
	● Belt	● Defective timing	B
	● Compression	● Incorrect valve clearance	B
		● Loosened spark plugs or defective gasket	C
		● Loosened cylinder head bolts or defective gasket	C
		● Improper valve seating	B
		● Defective valve stem	C
		● Worn or broken valve spring	C
		● Worn or stuck piston rings, cylinder and piston	C
		● Incorrect valve timing	A
	● Lubrication system	● Incorrect oil pressure	C
	● Cooling system	● Over cooling	C
	● Others	● Malfunction of evaporative emission control system	C
8. Knocking	● Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	● Intake system	● Loosened oil filler cap	B
	● Belt	● Defective timing	B
	● Compression	● Incorrect valve clearance	C
		● Incorrect valve timing	B
9. Excessive engine oil consumption	● Cooling system	● Overheating	A
	● Intake system	● Loosened or cracked PCV hose	A
		● Defective PCV valve	B
		● Loosened oil filler cap	C
	● Compression	● Defective valve stem	A
		● Worn or stuck piston rings, cylinder and piston	A
	● Lubrication system	● Loosened oil pump attaching bolts and defective gasket	B
		● Defective oil filter seal	B
		● Defective crankshaft oil seal	B
		● Defective rocker cover gasket	B
		● Loosened oil drain plug or defective gasket	B
		● Loosened oil pan fitting bolts or defective oil pan	B

ENGINE TROUBLE IN GENERAL

Mechanical

TROUBLE	PROBLEM PARTS, ETC.	POSSIBLE CAUSE	RANK
10. Excessive fuel consumption	● Engine control system <Ref. to EN(DOHC TURBO)-2, Basic Diagnostic Procedure.>		A
	● Intake system	● Dirty air cleaner element	A
	● Belt	● Defective timing	B
	● Compression	● Incorrect valve clearance	B
		● Loosened spark plugs or defective gasket	C
		● Loosened cylinder head bolts or defective gasket	C
		● Improper valve seating	B
		● Defective valve stem	C
		● Worn or broken valve spring	C
		● Worn or stuck piston rings, cylinder and piston	B
		● Incorrect valve timing	B
	● Lubrication system	● Incorrect oil pressure	C
	● Cooling system	● Over cooling	C
	● Others	● Accelerator cable out of adjustment	B

22. Engine Noise S183096

A: INSPECTION S183096A10

Type of sound	Condition	Possible cause
Regular clicking sound	Sound increases as engine speed increases.	- Valve mechanism is defective. - Incorrect valve clearance - Worn valve rocker - Worn camshaft - Broken valve spring
Heavy and dull clank	Oil pressure is low.	- Worn crankshaft main bearing - Worn connecting rod bearing (big end)
	Oil pressure is normal.	- Loose flywheel mounting bolts - Damaged engine mounting
High-pitched clank (Spark knock)	Sound is noticeable when accelerating with an overload.	- Ignition timing advanced - Accumulation of carbon inside combustion chamber - Wrong spark plug - Improper gasoline
Clank when engine speed is medium (1,000 to 2,000 rpm).	Sound is reduced when fuel injector connector of noisy cylinder is disconnected. (NOTE*)	- Worn crankshaft main bearing - Worn bearing at crankshaft end of connecting rod
Knocking sound when engine is operating under idling speed and engine is warm	Sound is reduced when fuel injector connector of noisy cylinder is disconnected. (NOTE*)	- Worn cylinder liner and piston ring - Broken or stuck piston ring - Worn piston pin and hole at piston end of connecting rod
	Sound is not reduced if each fuel injector connector is disconnected in turn. (NOTE*)	- Unusually worn valve lifter - Worn cam gear - Worn camshaft journal bore in crankcase
Squeaky sound	—	Insufficient generator lubrication
Rubbing sound	—	Defective generator brush and rotor contact
Gear scream when starting engine	—	- Defective ignition starter switch - Worn gear and starter pinion
Sound like polishing glass with a dry cloth	—	- Loose drive belt - Defective water pump shaft
Hissing sound	—	- Loss of compression - Air leakage in air intake system, hoses, connections or manifolds
Timing belt noise	—	- Loose timing belt - Belt contacting case/adjacent part
Valve tappet noise	—	Incorrect valve clearance

NOTE*:

When disconnecting fuel injector connector, Malfunction Indicator Light (CHECK ENGINE light) illuminates and trouble code is stored in ECM memory.

Therefore, carry out the CLEAR MEMORY MODE <Ref. to EN(DOHC TURBO)-47, OPERATION, Clear Memory Mode.> and INSPECTION MODE <Ref. to EN(DOHC TURBO)-44, OPERATION, Inspection Mode.> after connecting fuel injector connector.

ENGINE NOISE

Mechanical

MEMO:

ME(DOHC TURBO)-98