VSC BUZZER CIRCUIT

CIRCUIT DESCRIPTION

The skid control buzzer sounds during VSC operation.

WIRING DIAGRAM

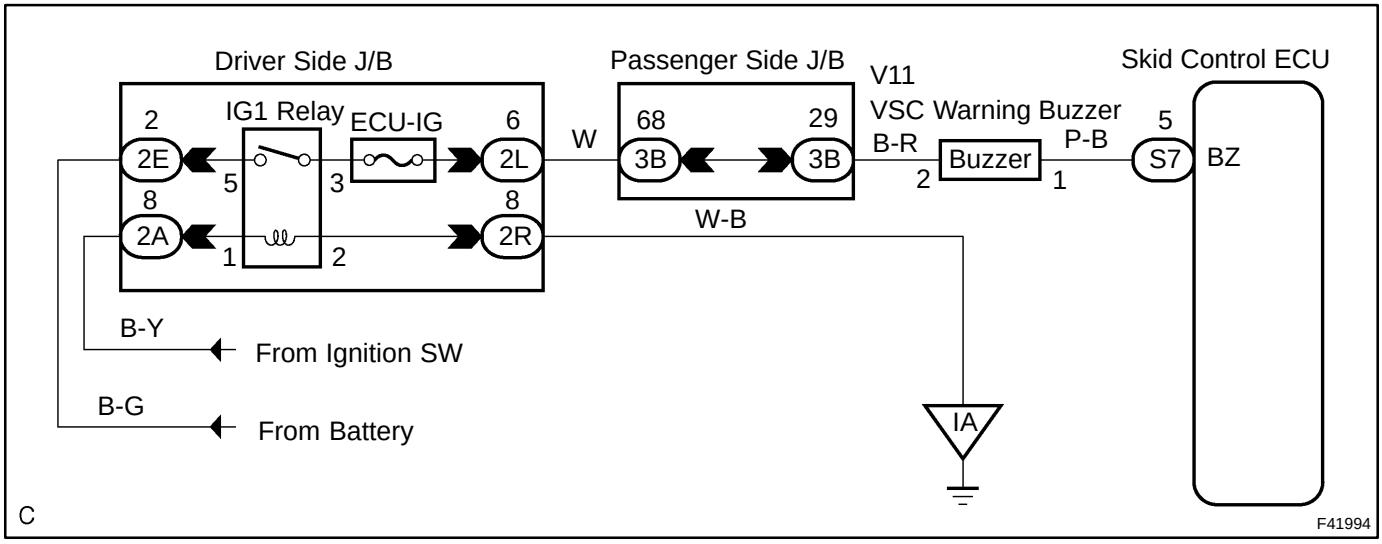

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the hand-held tester and start from step 2 in case of not using the hand-held tester.

1	**PERFORM ACTIVE TEST BY HAND-HELD TESTER(SKID CONTROL BUZZER OPERATION)**

(a) Select the item "VSC/BR WARN BUZ" in the ACTIVE TEST and operate the skid control buzzer on the hand-held tester.

(b) Check that skid control buzzer sounds "ON" and "OFF" with the hand-held tester.

OK → **CHECK AND REPLACE SKID CONTROL ECU ASSY**

NG

2	INSPECT SKID CONTROL BUZZER ASSY

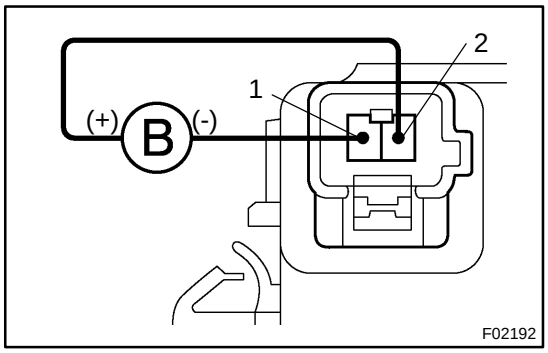

(a) Disconnect the skid control buzzer connector.
(b) Apply battery positive voltage to the terminals 1 and 2 of skid control buzzer connector, check that the buzzer sounds.

NG → REPLACE SKID CONTROL BUZZER ASSY

OK

3	CHECK HARNESS AND CONNECTOR(SKID CONTROL BUZZER - SKID CONTROL ECU)(See page 01-31)

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY