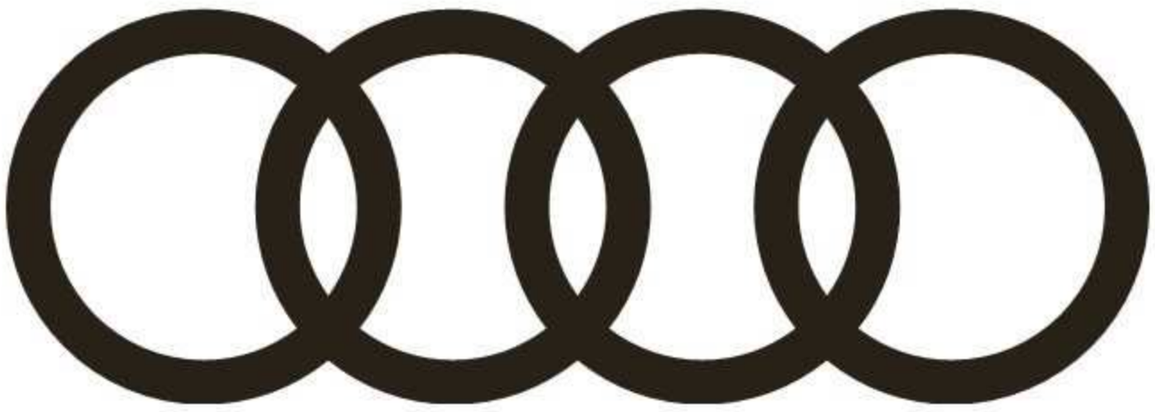


Owner's Manual

2019 A4

Audi Vorsprung durch Technik

Foreword

Thank you for choosing an Audi – we value your trust in us.

Your new Audi will allow you to experience the best in groundbreaking technology and premium quality equipment that a vehicle has to offer. We recommend that you read your Owner's Manual thoroughly so that you quickly become acquainted with your Audi and make use of all of its features.

In addition to explaining how the different features work, we provide many useful tips and information concerning your safety, how to care for your vehicle, and how to maintain your vehicle's value. We also give you useful tips and information on how to drive your vehicle more efficiently and in an environmentally-friendly manner.

We hope you enjoy driving your Audi and we wish you safe and pleasant motoring.

AUDI AG

WARNING

Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

8W0012721BG

Table of contents

About this Owner's Manual 6

Summary 8
Quick access 8
Cockpit overview 8
Indicator lights overview 10

Display and operation 13
Instrument cluster 13
Instrument cluster overview 13
Coolant temperature indicator 14
Tachometer 14
Fuel level 15
Odometer 15
Multifunction steering wheel plus 15
Multifunction steering wheel 18
Vehicle functions 19
Messages 21

Head-up display 27
Description 27

Starting and driving 28
Opening and closing 28
Central locking 28
Luggage compartment lid 35
Child safety lock 40
Power windows 41
Sliding/tilting sunroof 42
Panoramic glass roof 43
Valet parking 43
Garage door opener 44

Lights and Vision 47
Exterior lighting 47
Interior lighting 50
Vision 51
Windshield wipers 53
Digital compass 56

Seats 58
General information 58
Front seats 58
Head restraints 59
Memory function 60

Stowing and using 62
Ashtray 62
Cigarette lighter 62
Power sources 62
Storage 63
Luggage compartment 64
Roof rack 70

Warm and cold 71
Climate control system 71
3-zone deluxe automatic climate control . 72
Steering wheel heating 74

Driving 76
General information 76
Steering 77
Shifting into gear 77
Starting and stopping the engine 78
Start/Stop system 80
Electromechanical parking brake 82
Starting to drive 83
Driving offroad 84
Automatic transmission 85

Trailer towing 93
Driving with a trailer 93

Driver assistance 95
Assist systems 95
Speed warning system 95
Cruise control system 95
Camera-based traffic sign recognition . . . 97
Lap timer 99
Predictive efficiency assist 100
Audi adaptive cruise control 102
Audi pre sense 112
Audi active lane assist 117
Audi side assist 121
Audi drive select 126

Parking aid 129
General information 129
Rear parking system 130
Parking system plus 130
Rearview camera 132
Peripheral cameras 133

Adjusting the parking aid 136
Error messages 137

Intelligent Technology 138
Electronic Stabilization Control (ESC) 138
Brakes 141
Electromechanical steering, Dynamic steering 142
All wheel drive (quattro) 143
Energy management 143
Notice about data recorded by the Event Data Recorder and vehicle control modules 143

Infotainment system 145
Multi Media Interface 145
Traffic safety information 145
Introduction 145
MMI On/Off knob with joystick function . . 145
Infotainment system display 146
MMI operation 147
MMI touch 148
Control knob with joystick function 150
Shortcut keys 152
Letter/number speller 152
Free text search 154
Menus and Symbols 155

Multifunction steering wheel 157
Introduction 157
Radio 157
Media 157
Telephone 158
Navigation 159

Voice recognition system 164
Operating 163
Command overview information 164
Commands 165
External voice operation 169

Telephone 171
Introduction 171
Setup 171
Using the Audi phone box 174
Using the telephone 175
Favorites 178
Messages 178
Listening to voicemail 181
Directory 181
Additional settings 183
Troubleshooting 184

Audi connect 186
Introduction 186
Audi connect Infotainment 186
Audi connect Infotainment services 187
Audi connect vehicle control services 190
Settings 192
Data Privacy 194
Troubleshooting 195

Emergency call 196
Introduction 196
Emergency call 196
Online roadside assistance 197

Navigation 198
Opening navigation 198
Entering a destination 198
Personal route assistance 204
Alternative routes 205
Additional settings 205
Map 207
Satellite map 210
Map update 211
Traffic information 212
Troubleshooting 214

Radio 215
Opening the radio 215
Radio functions 216
Radio menu 218
Presets 218
Additional settings 218
Troubleshooting 219

Media 220
Introduction 220
Notes 220
Media drives 221
Bluetooth audio player 223
Wi-Fi audio player 224
Online media and Internet radio 225
Multimedia connections 226
Playing media 229

8W0012721BG

Additional settings 232
Supported media and file formats 235
Troubleshooting 236

Audi smartphone interface 238
Setup 238
Operating 239
Troubleshooting 239

System settings 240
Setting the date and time 240
MMI settings 240
Connection manager 241
System update 244
Sound settings 244
Volume settings 245
Restarting the MMI 246
Software license information 246

Safety first 247
Driving safety 247
Basics 247
Correct passenger seating positions 248
Driver's and front passenger's footwell . . 251
Pedal area 252

Safety belts 253
General information 253
Why use safety belts? 254
Safety belts 256
Belt tensioners 259

Airbag system 261
Important information 261
Front airbags 265
Monitoring the Advanced Airbag System . 273
Knee airbags 277
Side airbags 279
Side curtain airbags 282

Child safety 285
Important information 285
Child safety seats 291
Securing child safety seats 296
LATCH system (lower anchorages and tethers for children) 299
Additional information 304

Maintenance and Care 305
Checking and Filling 305
Fuel 305
Refueling 306
Catalytic converter 308
On Board Diagnostic System (OBD) 308
Engine compartment 309
Engine oil 312
Cooling system 315
Brake fluid 317
Electrical system 317
Battery 318
Windshield washer system 320
Service interval display 320

Wheels 322
Wheels and Tires 322
Tire pressure monitoring system 339

Care and cleaning 342
General information 342
Car washes 342
Cleaning and care information 343
Taking your vehicle out of service 347

Do It Yourself 348
Emergency assistance 348
General information 348
Equipment 348
Tire mobility kit 349
Changing a tire 351
Space-saving spare tire 355
Collapsible spare tire 355

Fuses and bulbs 357
Fuses 357
Bulbs 361

Emergency situations 362
General 362
Starting by pushing or towing 362
Starting with jumper cables 362
Using the jump start cable 363
Towing with a tow truck 364
Raising the vehicle 365

Customer information 367
Accessories and technical changes 367
Warranty 367
Audi Literature Shop 367
Driving in other countries 367
Maintenance, repairs, and technical modifications 367
Accessories and parts 369
Reporting Safety Defects 369
Declaration of compliance for telecommunications equipment and electronic systems 370

Technical data 372
Identification data 372
Vehicle data 372

Index 374

8W0012721BG

This Owner's Manual applies to all versions of this model. It contains important information, tips, suggestions, and warnings for using your vehicle.

Keep this manual in your vehicle at all times. This is especially important if you loan your vehicle to others or sell it.

This owner's manual describes the **equipment range** specified for this model at the time of printing. Individual equipment options described may only be available at a later date or may only be offered in certain countries.

Some sections in this manual do not apply to all vehicles. When this is the case, the beginning of the section indicates the **validity**, for example “Applies to: vehicles with cruise control system”. Optional or vehicle-specific equipment is also identified with an asterisk “*”.

The **illustrations** in this manual are a guide. Some of the details in your vehicle may differ from the illustration.

All **directions**, such as “left”, “right”, “front” and “rear”, are based on the vehicle's direction of travel.

* Optional or vehicle-specific equipment

▶ The section continues on the next page.

⇨ ⚠ Cross reference to a “WARNING” within a section. If a page number is indicated, the WARNING is located outside of the section.

Tips

Text with this symbol contains additional useful information.

WARNING

Text with this symbol contains information about safety and how to reduce the risk of serious personal injury or death.

Note

Text with this symbol contains information about reducing the risk of damage to your vehicle.

For the sake of the environment

Text with this symbol contains information on protecting the environment.

Quick access

Cockpit overview

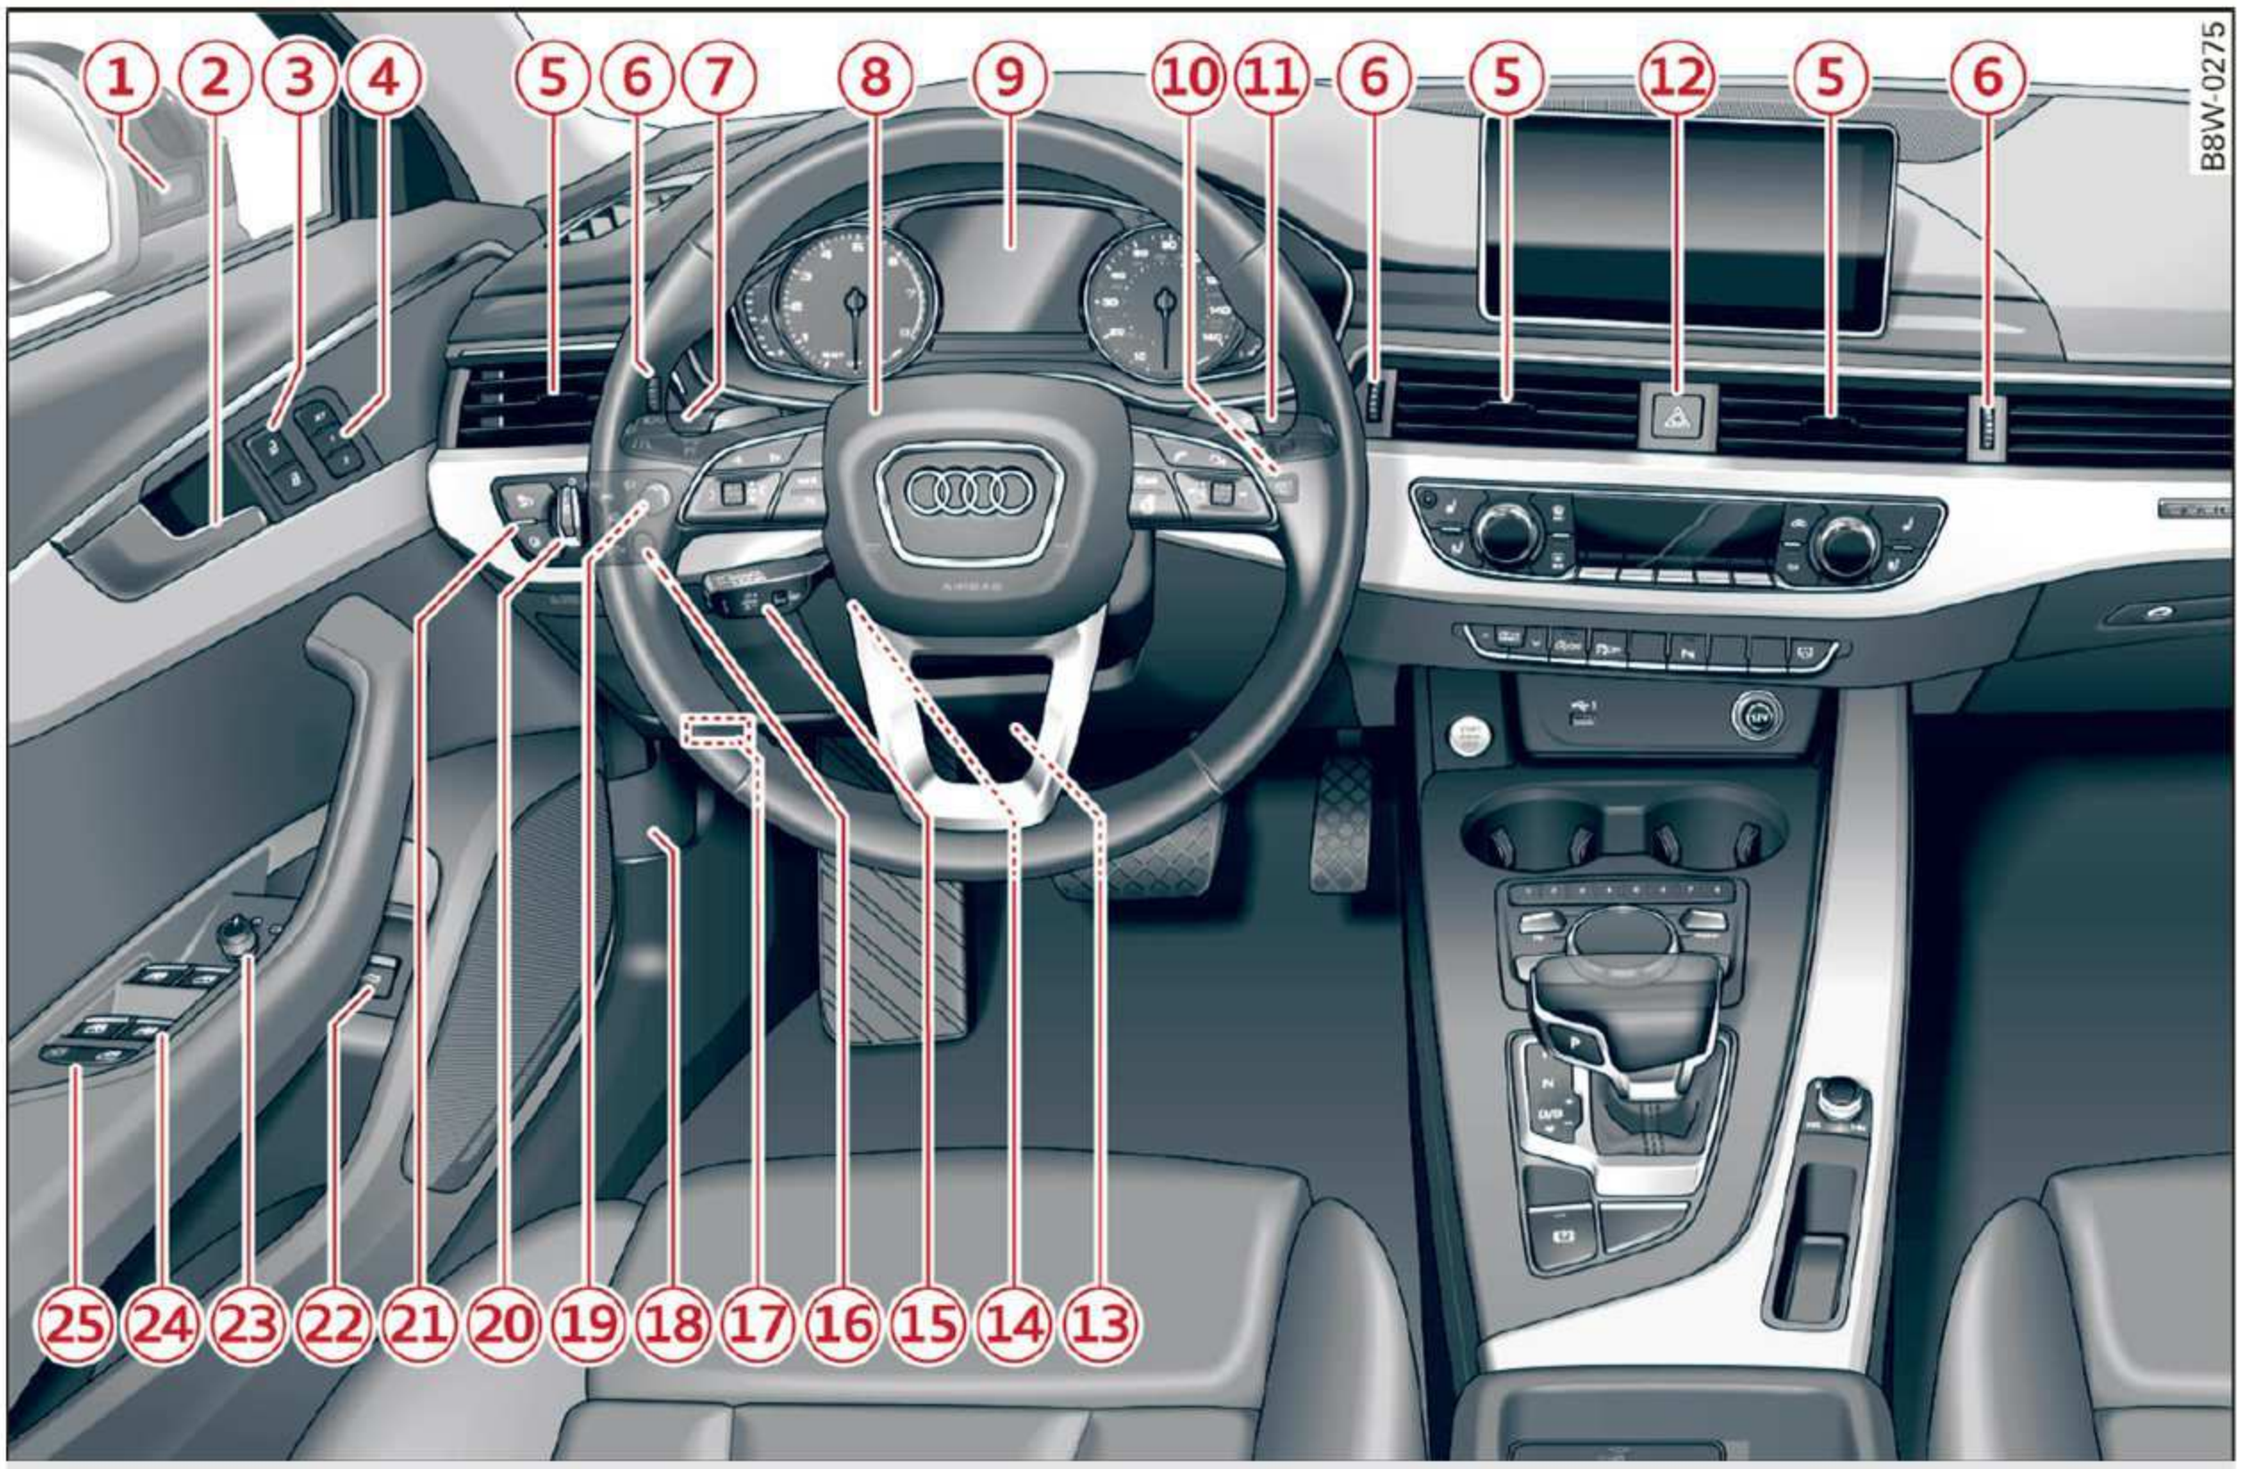


Fig. 1 Cockpit: left section

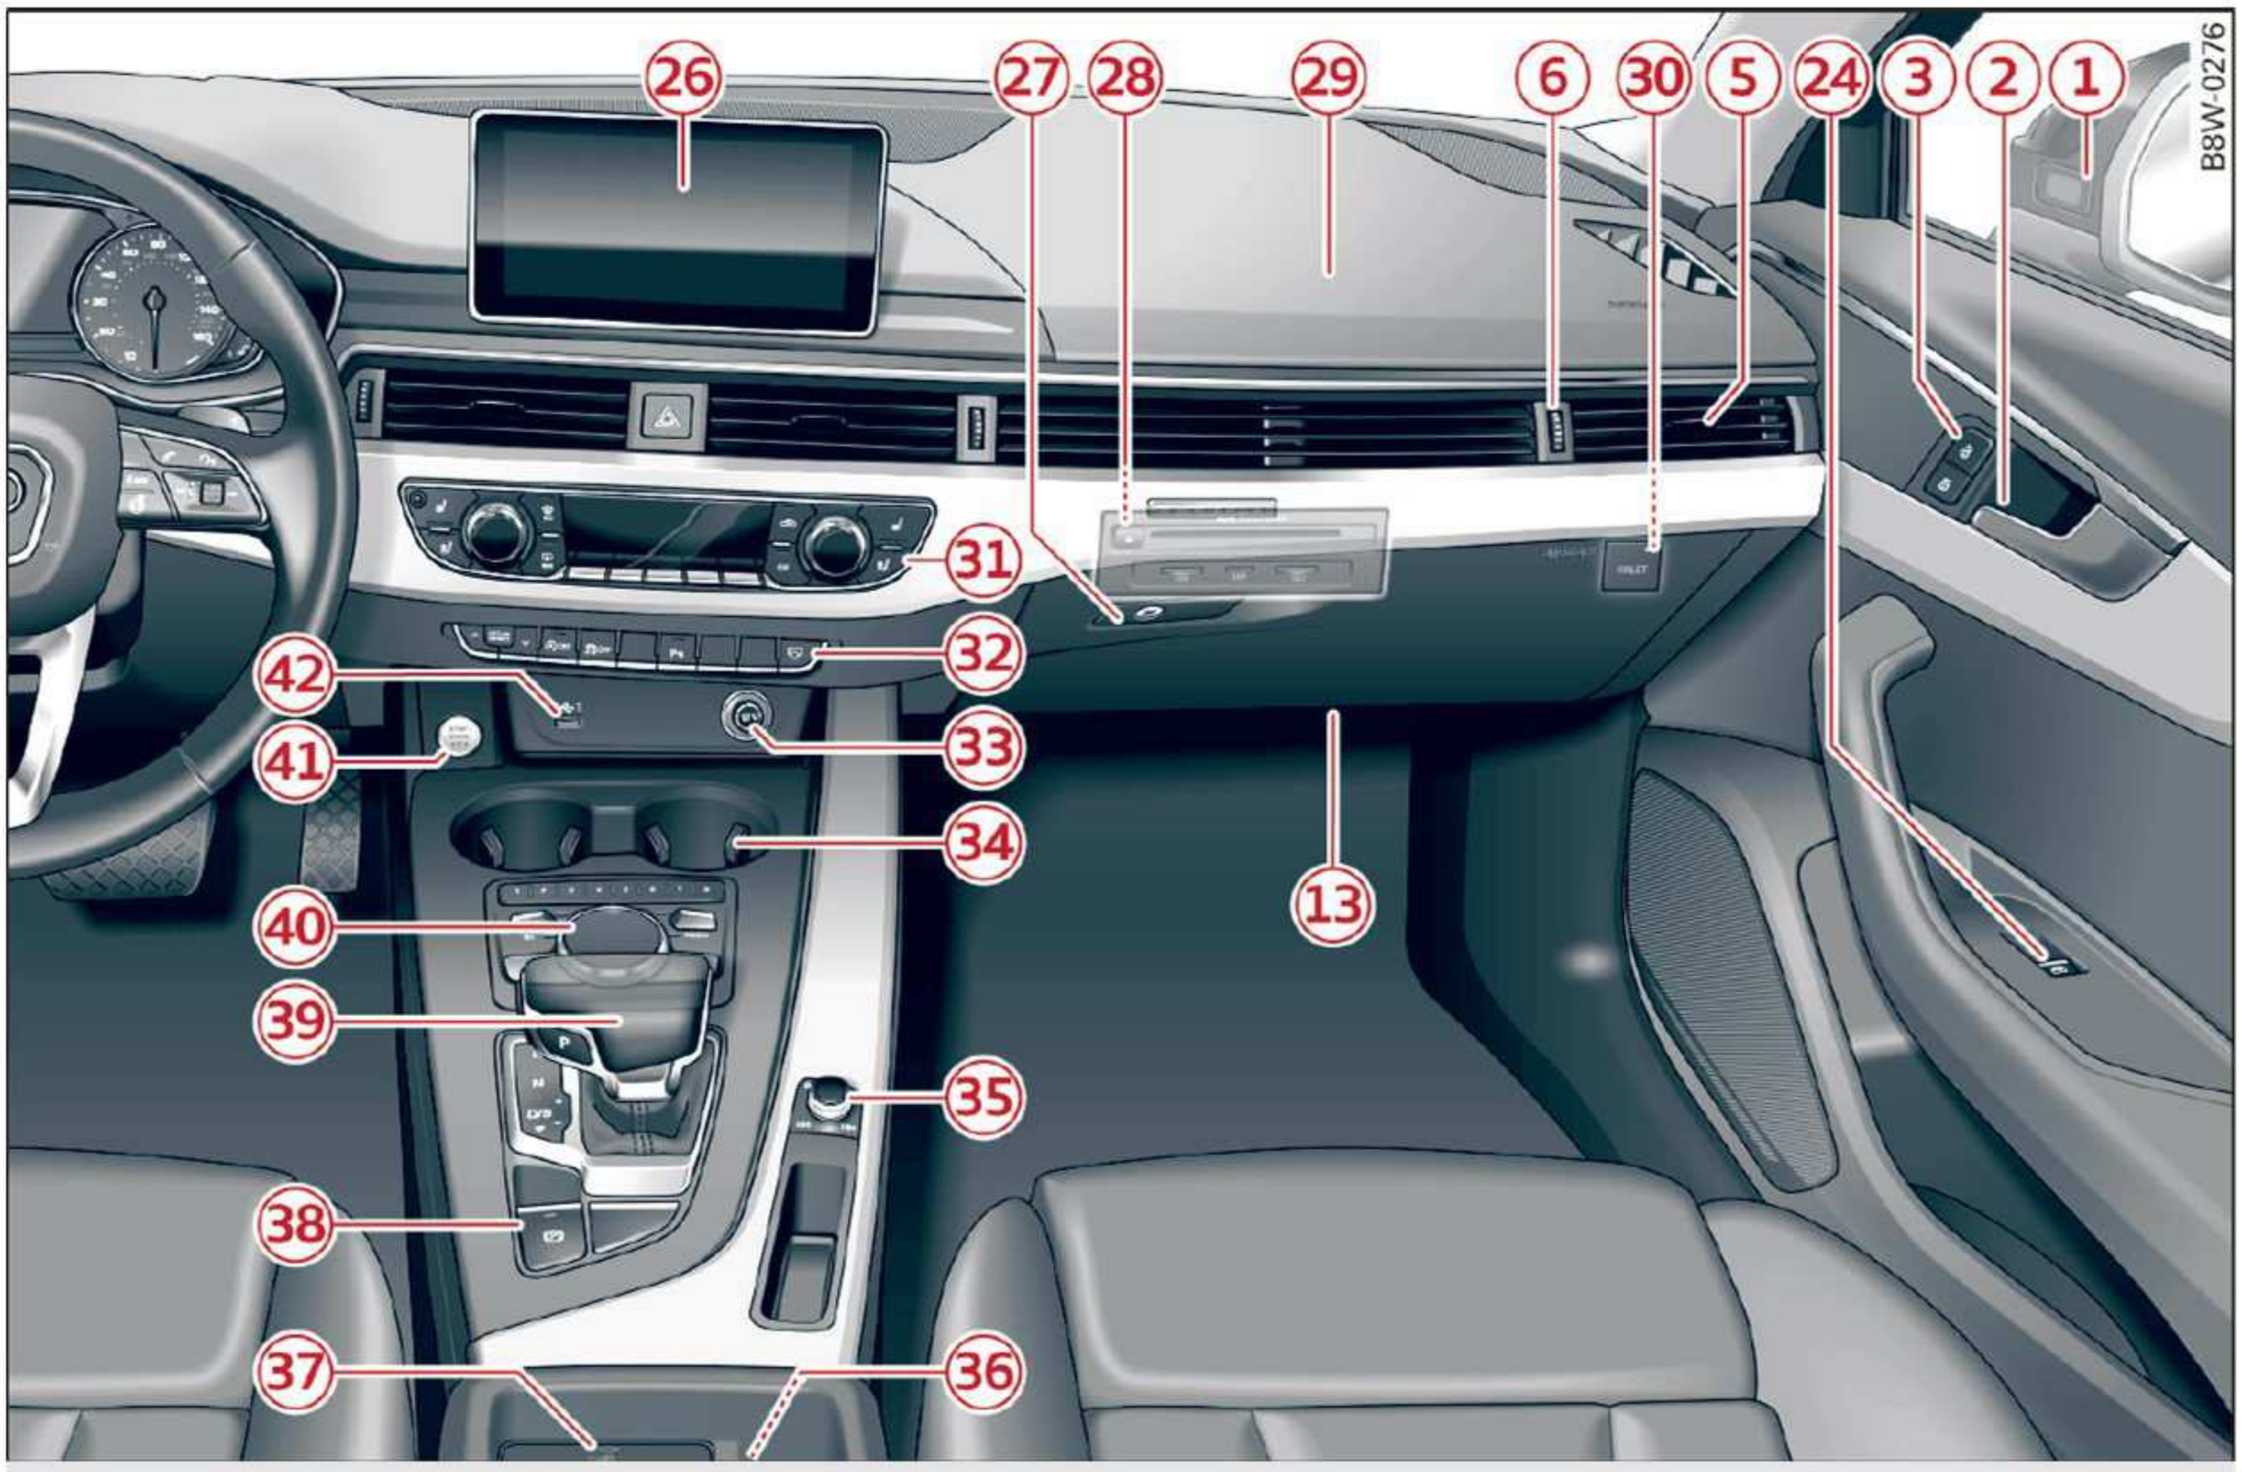


Fig. 2 Cockpit: right section

① side assist displays, warning about exiting the vehicle 121
② Door handle
③ Central locking switch 32
④ Memory buttons 60
⑤ Vent
⑥ Thumbwheel for vent
⑦ Lever for:
– Turn signals and high beams 48
– High beam assistant 48
– Active lane assist 117
– Traffic jam assist 109
⑧ Multifunction steering wheel with:
– Horn
– Driver's airbag 265
– Driver information system controls 15, 18
– Audio/video, telephone, navigation, and voice recognition controls 17, 18
– ✳/steering wheel heating button . 17
– Shift paddles 88
⑨ Instrument cluster 13
⑩ Resetting the trip odometer 15
⑪ Windshield washer system lever . . 53
⑫ Emergency flashers 49
⑬ Knee airbag 277
⑭ Adjustable steering column 77
⑮ Lever for:
– Cruise control system 95
– Adaptive cruise control 102
⑯ Instrument illumination 51
⑰ Data link connector for On Board Diagnostic System (OBD II) 309
⑱ Hood release 310
⑲ Button for switching the head-up display on/off, adjusting the height . 27
⑳ Light switch 47
㉑ Buttons for:
– All-weather lights 47
– Rear fog lights 47
㉒ Switch for luggage compartment lid 35
㉓ Power exterior mirror adjustment . 51
㉔ Power windows 41
㉕ Child safety lock 40
㉖ Infotainment system display 146
㉗ Lockable glove compartment 63
㉘ Drives for CD, DVD, SIM cards 221
㉙ Front passenger's airbag 265
㉚ Valet Parking function 43
㉛ Climate control system 71
㉜ Depending on equipment, buttons for:
– drive select 126
– Start/Stop system 80
– Electronic Stabilization Control (ESC) 139
– Parking aid 129
– Hill descent assist 140
– Infotainment system display 146
㉝ Socket 62
㉞ Cup holders 63
㉟ Infotainment system on/off button . 145
㊱ Center armrest with storage compartment. Depending on vehicle equipment, it may have:
– Audi music interface 226
– Audi phone box 174
㊲ Starting the engine when there is a malfunction 79
㊳ Electromechanical parking brake . . 82
㊴ Depending on equipment:
– Selector lever (automatic transmission) 85
– Gearshift lever (manual transmission)
㊵ Infotainment unit 145
㊶ START ENGINE STOP button 78
㊷ Audi music interface 226

Tips

Some the equipment listed here is only installed in certain models or is available as an option.

8W0012721BG

Indicator lights overview

Description

The indicator lights in the instrument cluster blink or turn on. They indicate functions or malfunctions.

Messages may appear with some indicator lights. A warning signal will sound at the same time. The indicator lights and messages may be covered by other displays. To show them again, select the second tab for messages with the multifunction steering wheel ⇨ *page 15* or ⇨ *page 18*.

Some indicator lights in the display can display in several colors.

⚠ Central indicator light

If the ⚠ or ⚠ indicator light turns on, check the message in the instrument cluster.

Overview

Some indicator lights turn on briefly as a function check when you switch the ignition on. These systems are marked with a ✓ in the following tables. If one of these indicator lights does not turn on, there is a malfunction in that system.

Your vehicle has either a monochrome display or a multicolored display, depending on vehicle equipment. Some indicator lights appear white on a monochrome display. The ⚠ or ⚠ central indicator light turns on at the same time to indicate the priority of these indicator lights.

The following indicator lights may be available, depending on the vehicle equipment:

Red indicator lights	
	Central indicator light ⇨ *page 10*, Audi pre sense ⇨ *page 112*
BRAKE	Brake system ✓ ⇨ *page 21*
	Brake system ✓ ⇨ *page 21*
PARK	Electromechanical parking brake ⇨ *page 22*
(P)	Electromechanical parking brake ⇨ *page 22*
	Cooling system ⇨ *page 22*
	Engine oil pressure ⇨ *page 312*
MIN	Engine oil level (MIN) ⇨ *page 312*
	Electrical system ⇨ *page 317*
	Safety belt ⇨ *page 23*
!	Electromechanical steering ✓ ⇨ *page 142*
	Steering lock ⇨ *page 23*
	Engine start system ⇨ *page 23*
	Transmission (automatic transmission) ⇨ *page 90*, Clutch (manual transmission) ⇨ *page 23*
	Hood ⇨ *page 24*
	Adaptive cruise control ✓ ⇨ *page 105*
	Traffic jam assist ⇨ *page 109*
	Drive system ⇨ *page 24*

Yellow indicator lights	
	Central indicator light ⇨ *page 10*
	Electronic Stabilization Control (ESC) ⇨ *page 24*
OFF	Electronic Stabilization Control (ESC) ✓ ⇨ *page 24*

ESC OFF	Electronic Stabilization Control (ESC) ⇨ *page 139*
	Brake system ⇨ *page 21*
ABS	Anti-lock braking system (ABS) ✓ ⇨ *page 24*
ABS	Anti-lock braking system (ABS) ✓ ⇨ *page 24*
	Safety systems ✓ ⇨ *page 23*
	Brake pads ⇨ *page 21*
	Electromechanical parking brake ⇨ *page 22*
	Tire pressure ⇨ *page 340*
TPMS	Tire pressure ⇨ *page 340*
	Drive system ⇨ *page 24*
	Malfunction Indicator Lamp (MIL) ✓ ⇨ *page 308*
	Engine speed limitation ⇨ *page 24*
MIN	Engine oil level (MIN) ⇨ *page 312*
MAX	Engine oil level (MAX) ⇨ *page 312*
SENSOR	Engine oil sensor ⇨ *page 312*
	Engine warm-up request ⇨ *page 313*
	Electrical system ⇨ *page 317*
	Tank system ⇨ *page 24*
	Washer fluid level ⇨ *page 25*
	Windshield wipers ⇨ *page 25*

	Keys ⇨ *page 78*
	Driver's door ⇨ *page 25*
	Battery in vehicle key ⇨ *page 30*
	Bulb failure indicator ⇨ *page 25*
	Headlight range control system ⇨ *page 25*
	Adaptive light ⇨ *page 25*
	Light/rain sensor ⇨ *page 25*
	Active lane assist ⇨ *page 118*
	Audi side assist ⇨ *page 126*
	Audi pre sense ⇨ *page 117*
P	Parking aid ⇨ *page 137*
	Transmission (automatic transmission) ⇨ *page 90*, Clutch (manual transmission) ⇨ *page 23*
	Steering lock ⇨ *page 23*
	Engine start system ⇨ *page 23*
	Electromechanical steering ⇨ *page 142*
	Suspension control ⇨ *page 26*
	All wheel drive/sport differential ⇨ *page 26*
SOS	Emergency call function ⇨ *page 197*

Other indicator lights

	Turn signals ⇨ *page 26*

CRUISE	Cruise control system ⇨ *page 95*
	Cruise control system ⇨ *page 95*
	Adaptive cruise control ⇨ *page 105*
	Adaptive cruise control ⇨ *page 105*
	Adaptive cruise control ⇨ *page 105*
	Adaptive cruise control ⇨ *page 105*
	Adaptive cruise control ⇨ *page 106*, ⇨ *page 101*
	Adaptive cruise control ⇨ *page 101*
	Traffic jam assist ⇨ *page 109*
	Active lane assist ⇨ *page 118*
	Predictive efficiency assist ⇨ *page 100*
MPH	Predictive efficiency assist ⇨ *page 100*
km/h	Predictive efficiency assist ⇨ *page 100*
	Predictive efficiency assist ⇨ *page 100*
	Predictive efficiency assist ⇨ *page 100*
	Predictive efficiency assist ⇨ *page 100*
	Hill descent assist ⇨ *page 140*
	Start/Stop system ⇨ *page 80*
	Start/Stop system ⇨ *page 80*
	Keys ⇨ *page 79*
	Automatic transmission ⇨ *page 90*

	Dynamic steering ⇨ *page 142*
	Adaptive cruise control ⇨ *page 106*, Traffic jam assist ⇨ *page 111*
	Traffic jam assist ⇨ *page 111*
	Audi pre sense ⇨ *page 117*
PARK BRAKE	Electromechanical parking brake ⇨ *page 22*
	Electromechanical parking brake ⇨ *page 22*
	Hill descent assist ⇨ *page 140*
	Child safety lock ⇨ *page 40*
MPH	Speed warning system ⇨ *page 95*
Km/h	Speed warning system ⇨ *page 95*
	Active lane assist ⇨ *page 118*
	Audi side assist ⇨ *page 126*
	Camera-based traffic sign recognition ⇨ *page 98*
	High beams ⇨ *page 48*
AUTO	High beam assistant ⇨ *page 48*
AUTO	High beam assistant ⇨ *page 48*

Instrument cluster

Instrument cluster overview

The instrument cluster is the central information center for the driver.

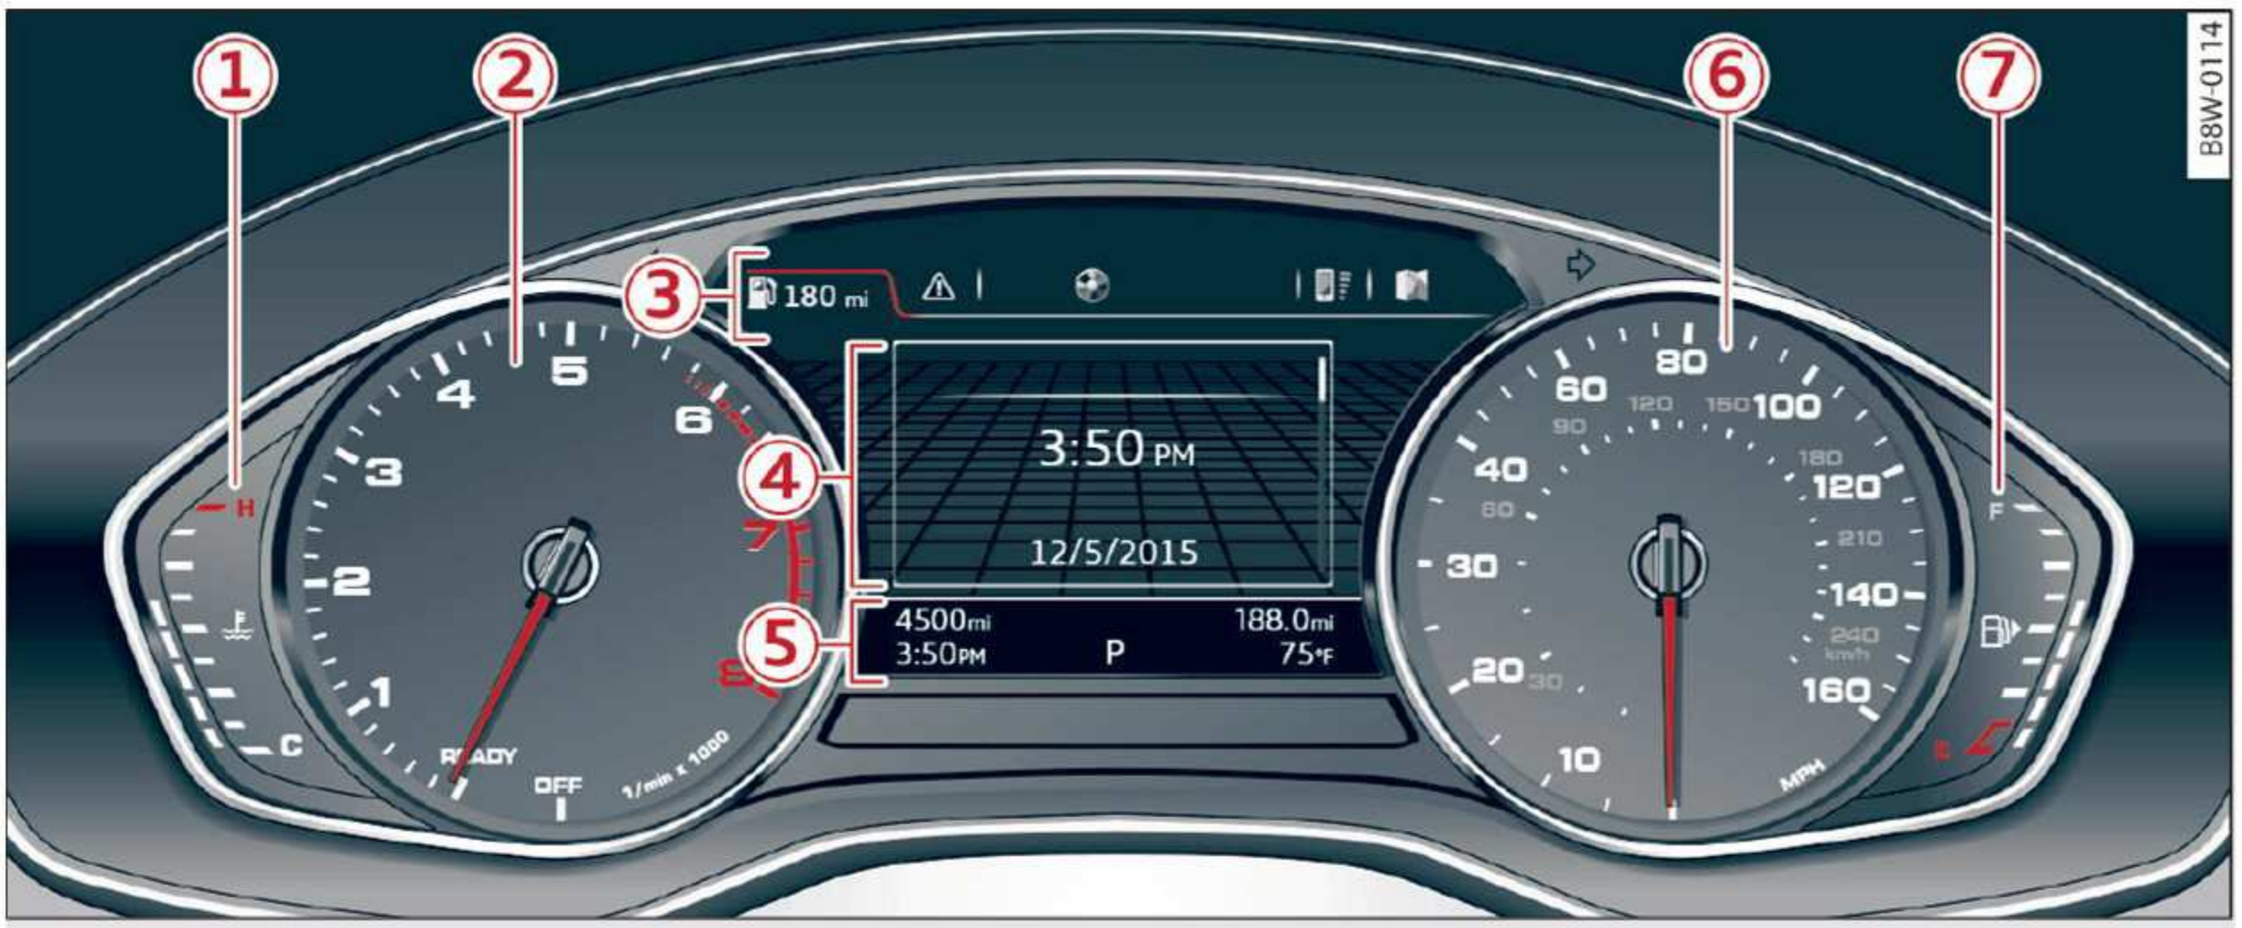


Fig. 3 Instrument cluster overview (analog)



Fig. 4 Instrument cluster overview (Audi virtual cockpit)

① Engine coolant temperature gauge . 14
② Tachometer 14
– With **OFF** status indicator 78
– With **READY** status indicator . . . 78, 80
③ Tab area 15
④ Central area with
– Driver information system 15, 18
– Indicator lights 10
⑤ Status line (displayed on one or two lines)
⑥ Speedometer/convenience display
⑦ Fuel level 15
⑧ Speedometer
⑨ Left additional display

There may be additional indicator lights in the tachometer ②, the speedometer ⑥, the status line ⑤ and, depending on the instrument cluster, above or below the central area ④.

The following pages will primarily show illustrations of the multi-color analog instrument cluster*. The display and/or position of the element shown may vary in monochrome instrument clusters or in the Audi virtual cockpit*. ▶

Certain instrument cluster content can also be displayed in the head-up display* ⇨ *page 27*.

WARNING

Do not assume the roads are free of ice based on the outside temperature display. Be aware that there may be ice on roads even when the outside temperature is around 41 °F (+5 °C) and that ice can increase the risk of accidents.

Tips

– Depending on vehicle equipment, the instrument illumination (needles and gauges) may turn on when the lights are off and the ignition is switched on. The illumination for the gauges reduces automatically and eventually turns off as brightness outside increases. This function reminds the driver to turn the low beams on at the appropriate time.
– You can select the units used for temperature, speed, and other measurements in the Infotainment system ⇨ *page 240*.
– If your vehicle is stationary or if you are driving at very low speeds, the temperature displayed may be slightly higher than the actual temperature outside due to the heat radiating from the engine.
– At temperatures below 41 °F (+5 °C), a snowflake symbol appears in front of the temperature display ⇨ ⚠.

Coolant temperature indicator

The coolant temperature display ① ⇨ *page 13, fig. 3* or ⇨ *page 13, fig. 4* only functions when the ignition is switched on. To reduce the risk of engine damage, please observe the following notes about the temperature ranges.

Cold range

If only the LEDs at the bottom of the gauge turn on, the engine has not reached operating temperature yet. Avoid high engine speeds, full acceleration, and heavy engine loads.

Normal range

The engine has reached its operating temperature once the LEDs up to the center of the gauge turn on. If the indicator light in the instrument cluster display turns on, the coolant temperature is too high ⇨ *page 22*.

Note

– Auxiliary headlights and other accessories in front of the air intake impair the cooling effect of the coolant. This increases the risk of the engine overheating during high outside temperatures and heavy engine load.
– The front spoiler also helps to distribute cooling air correctly while driving. If the spoiler is damaged, the cooling effect will be impaired and the risk of the engine overheating will increase. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Tachometer

The tachometer displays the engine speed in revolutions per minute (RPM).

The beginning of the red zone in the tachometer indicates the maximum permissible engine speed for all gears once the engine has been broken in and when it is warmed up to operating temperature. Before reaching this zone, you should shift into the next highest gear, select the "D/S" selector lever position, or remove your foot from the accelerator pedal.

Note

The needle in the tachometer ② ⇨ *page 13, fig. 3* or ⇨ *page 13, fig. 4* may only be in the red area of the gauge for a short time or there is a risk of engine damage. The location where the red zone begins varies depending on the engine.

For the sake of the environment

Upshifting early helps you to save fuel and reduces operating noise.

Fuel level

The display (7) ⇨ *page 13, fig. 3* or ⇨ *page 13, fig. 4* only functions when the ignition is switched on. When the display has reached the reserve mark, a red LED turns on and the ⛽ indicator light turns on ⇨ *page 24*.

For the tank capacity in your vehicle, refer to the Technical Data ⇨ *page 373*.

Note

Never drive until the tank is completely empty. The irregular supply of fuel that results from that can cause engine misfires. Uncombusted fuel will then enter the exhaust system. This can cause overheating and damage to the catalytic converter.

Odometer



Fig. 5 Instrument cluster: odometer and reset button

Trip odometer and odometer

The trip odometer shows the distance driven since it was last reset. It can be used to measure short distances.

The trip odometer can be reset to zero by pressing the 00 reset button.

The odometer shows the total distance that the vehicle has been driven.

Malfunction indicator

If there is a malfunction in the instrument cluster, **DEF** will appear in the trip odometer display. Have the malfunction corrected as soon as possible.

Tips

The units of measurement can be set in the Infotainment system ⇨ *page 240*.

Multifunction steering wheel plus

Operating

Applies to: vehicles with multifunction steering wheel plus

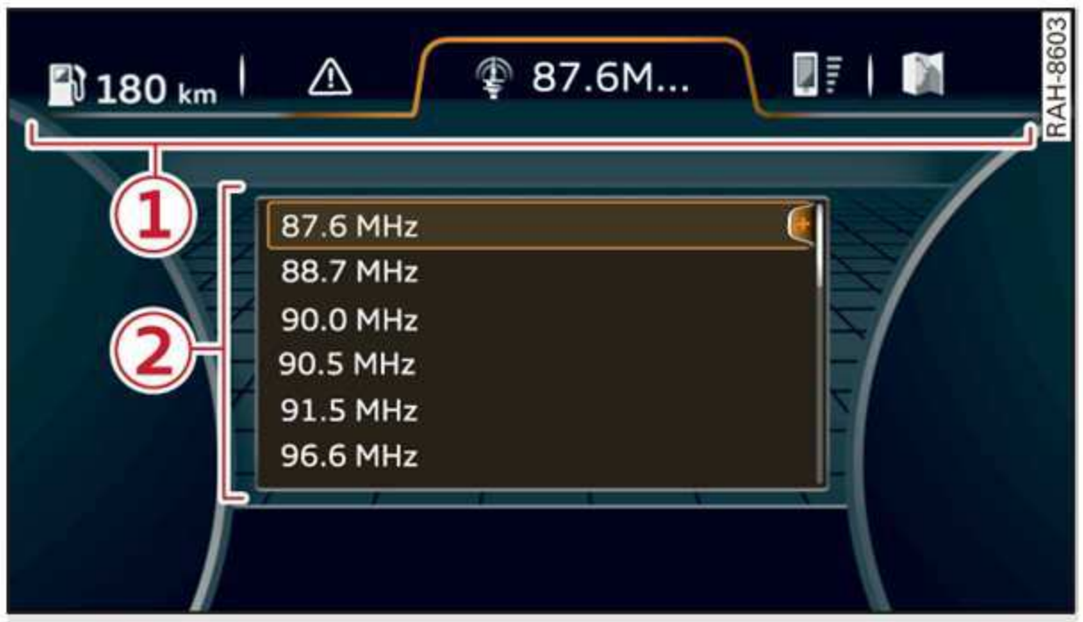


Fig. 6 Driver information system display

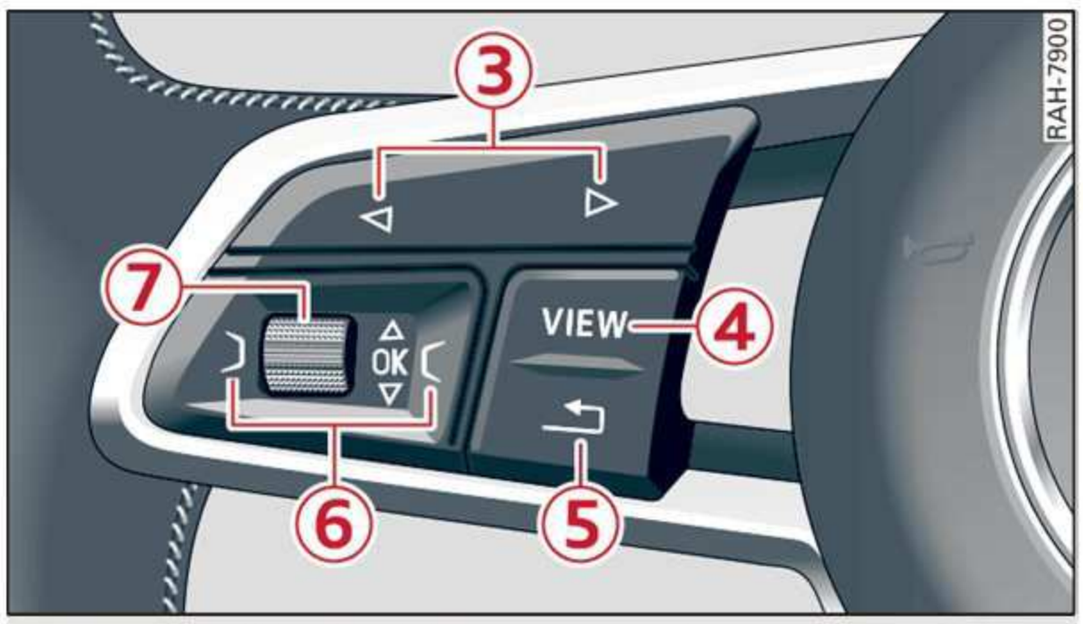


Fig. 7 Left side of multifunction steering wheel

Requirement: the ignition must be switched on.

The driver information system contains multiple tabs (1) ⇨ *fig. 6* that display various information (2).

The following tabs may be available, depending on vehicle equipment:

First tab	Vehicle functions ⇨ *page 19*
Second tab[a)]	Messages
Third tab	Radio ⇨ *page 157* Media ⇨ *page 157*

8W0012721BG

Fourth tab	Telephone* ⇨ *page 158*
Fifth tab	Navigation* ⇨ *page 159* Map* ⇨ *page 160*

a) This tab is only visible when there is at least one indicator light or message displayed.

③ Button ◁ ▷

– **Switching tabs**: press the ◁ ▷ button repeatedly until the desired tab is shown (for example, Radio).

④ VIEW button

Switching views or reducing the display ⇨ *page 17*.

⑤ Button ⮌

Return to functions at higher levels.

⑥ Control buttons ❩ and ❨

Open/close the selection menu or options menu ⇨ *page 16*.

⑦ Left thumbwheel

– **Selecting a function in a menu/list**: turn the left thumbwheel to the desired function (for example, selecting a frequency).
– **Confirming a selection**: press the left thumbwheel ⑦ ⇨ *fig. 7*.
– **Zooming in/out on the map**: when a map is displayed, turn the left thumbwheel to zoom in and out on the map.

Control buttons

Applies to: vehicles with multifunction steering wheel plus

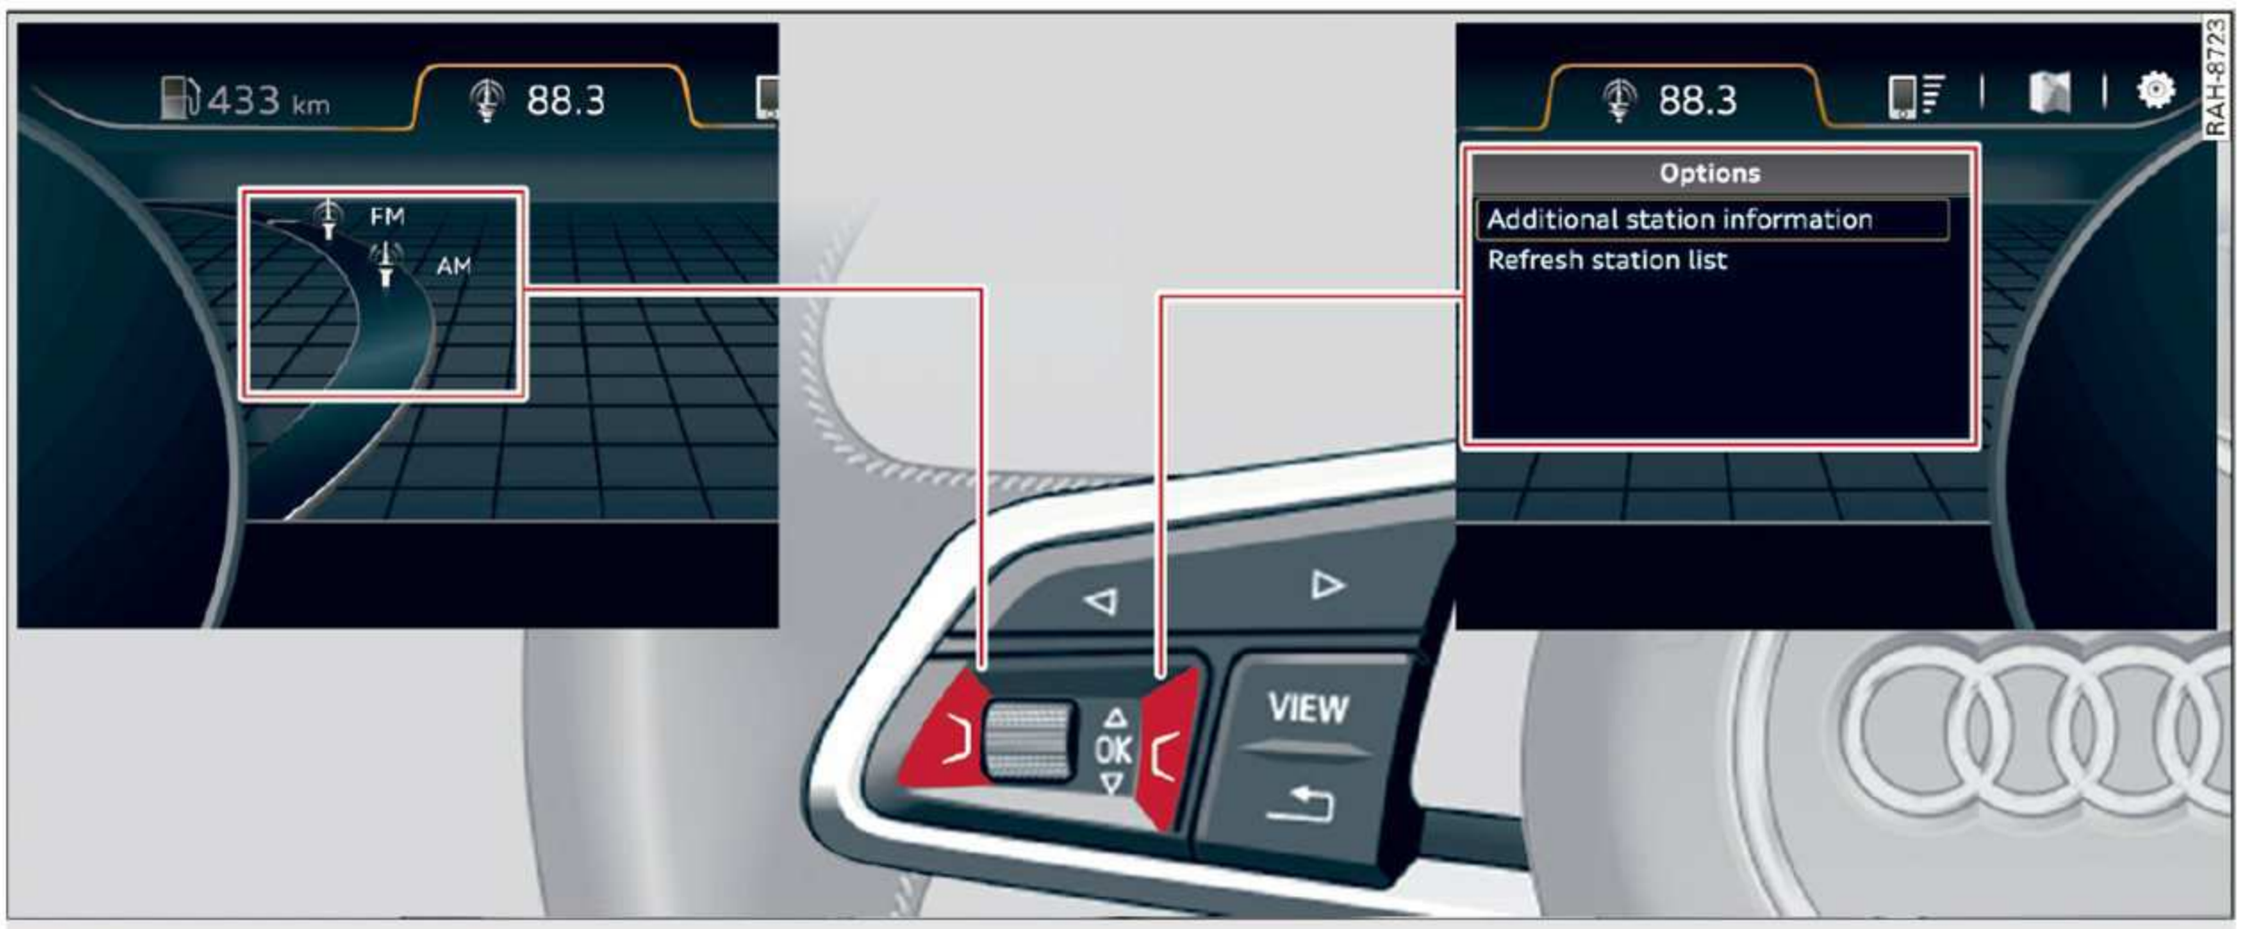


Fig. 8 Selection menu and options menu view

Left control button

– **Opening and closing the selection menu**: press the respective left control button on the steering wheel ⇨ *fig. 8* . You can select and confirm a function in the selection menu using the left thumbwheel (for example, selecting a frequency band).

Right control button

– **Opening/closing the options menu**: press the respective right control button on the steering wheel ⇨ *fig. 8* . You can change any context-dependent functions and settings using the left thumbwheel (for example, additional station information).

Tips

The availability of a selection menu or options menu depends on the function that is selected.

Switching views

Applies to: vehicles with multifunction steering wheel plus

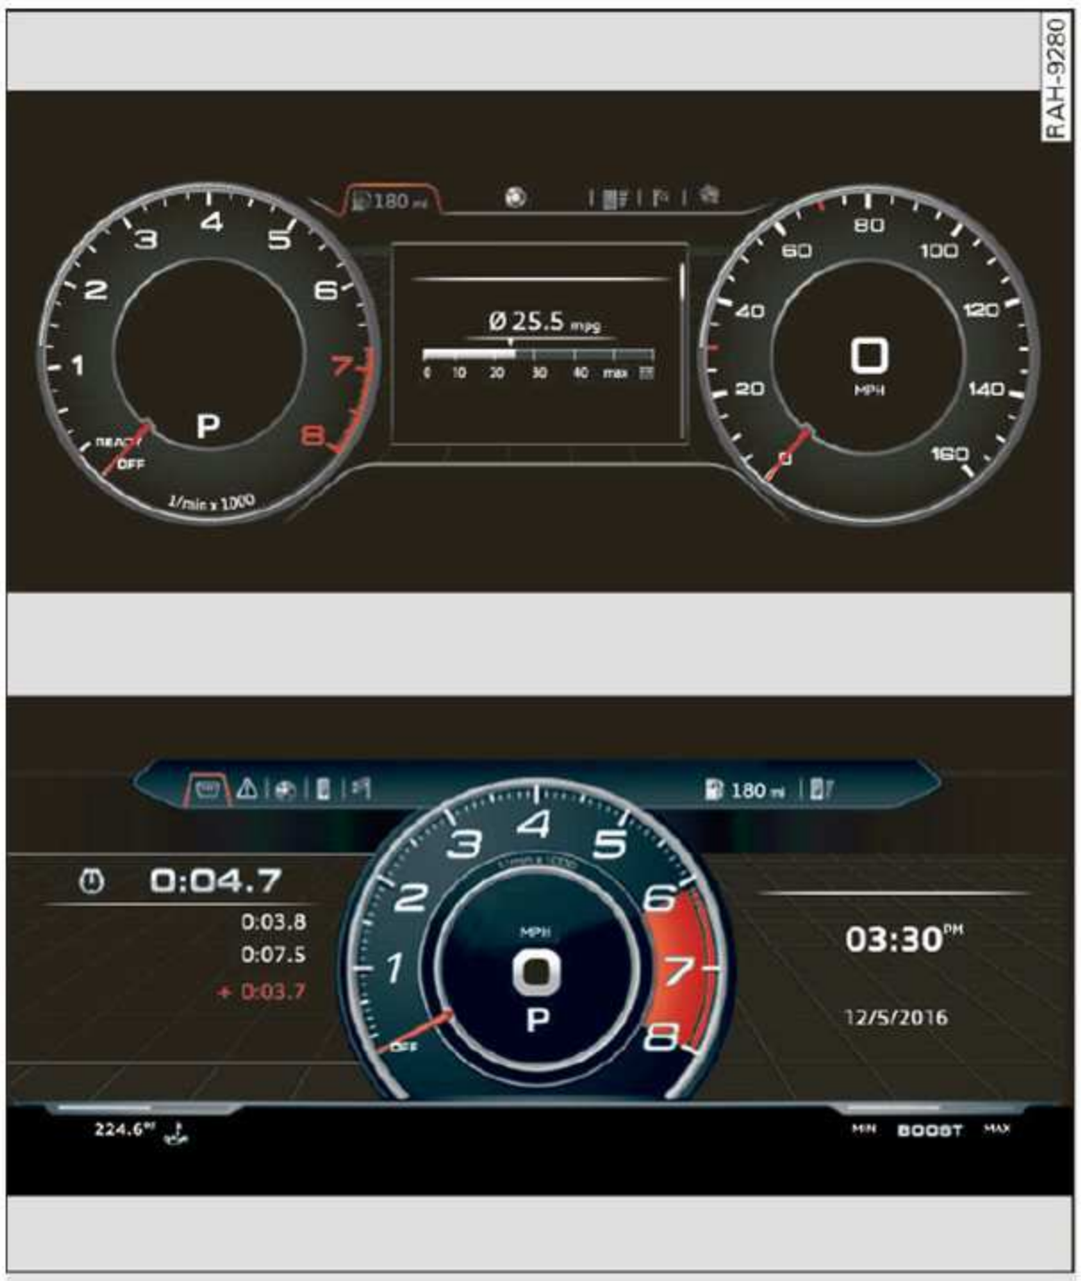


Fig. 9 -Applies to: vehicles with Audi virtual cockpit-Default view: classic/sport*



Fig. 10 -Applies to: vehicles with Audi virtual cockpit-Enhanced view

Change view

Applies to: vehicles with Audi virtual cockpit

- Press the VIEW button ④ ⇨ *page 15, fig. 7* to switch from the default view ⇨ *fig. 9* to the enhanced view ⇨ *fig. 10*. To return to the default view, press the VIEW button again.

Setting the default view

Applies to: vehicles with sport view

Depending on the vehicle equipment, you can choose between the classic and the sport view.

- Open the first vehicle functions tab using the ◁ ▷ button on the multifunction steering wheel.
- Select on the multifunction steering wheel: left control button > **Layout** > **Sport layout** or **Classic layout**.

Reducing the display

Applies to: vehicles with analog instrument cluster

- Press the VIEW button to switch from the classic to the reduced display. To return to the classic view, press the VIEW button again.

Adjusting the additional display

Applies to: vehicles with Audi virtual cockpit

Depending on the vehicle equipment, the additional displays that can be selected may vary.

- Open the first vehicle functions tab using the ◁ ▷ button on the multifunction steering wheel.
- Select on the multifunction steering wheel: right control button > **Additional display**.
- Select the desired additional display.

Tips

Applies to: vehicles with sport view

Always set the desired default view before driving, because the display functions will not be available for several seconds.

Other function buttons

Applies to: vehicles with multifunction steering wheel plus

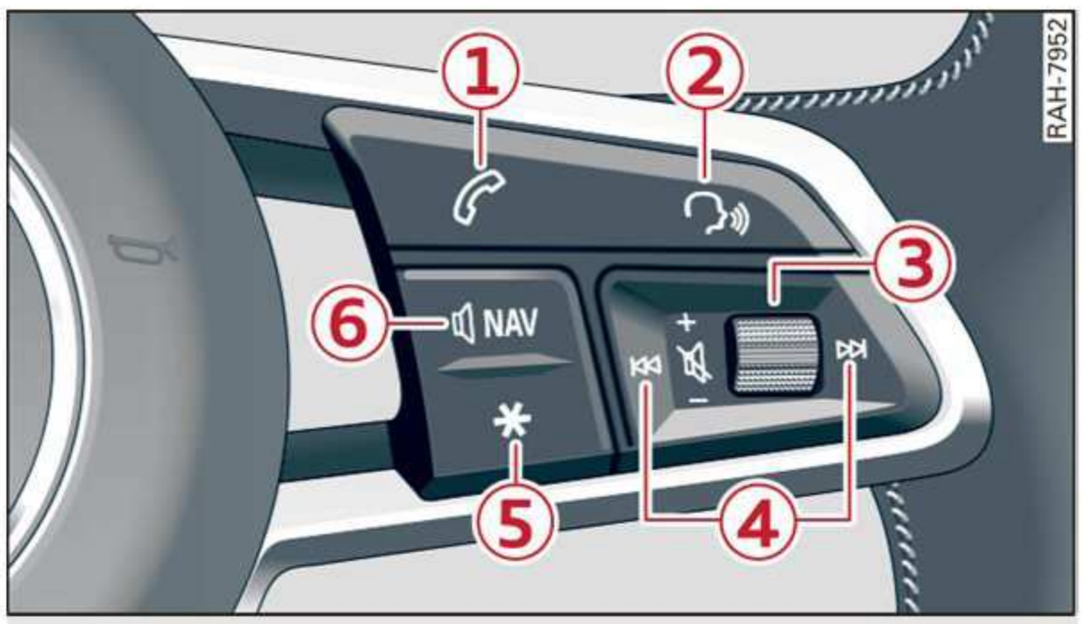


Fig. 11 Right side of the multifunction steering wheel

① Button ✆

– **Accepting a call**: press the ✆ button when there is an incoming call. ▶

– **Ending a call**: press the button during a phone call to end the call.
– **Opening the call list**: if no phone call is in progress and there are no incoming calls, press the button.

② Button

– **Switching the voice recognition system on**: briefly press the button. Say the desired command after the **Beep**.
– **Switching the voice recognition system off**: press and hold the button. **Or**: say the command **Cancel**.

For more information about the voice recognition system, see ⇨ *page 164, Voice recognition system* or ⇨ *page 241*.

③ Right thumbwheel

You can adjust the volume of an audio source or a system message (for example, from the voice recognition system) when the sound is playing.

– **Increasing or decreasing the volume**: turn the right thumbwheel up or down.
– **Muting or pausing**: turn the right thumbwheel down. **Or**: press the right thumbwheel.
– **Unmuting or resuming**: turn the right thumbwheel up. **Or**: press the right thumbwheel.

④ / Button

– **Selecting the previous/next track or station**: press the or button.
– **Fast forwarding/rewinding audio files**: press and hold the or button until the desired location in the file is reached.

⑤ Button / steering wheel heating

– **Steering wheel heating***: you can find additional information in ⇨ *page 74*.
– **Programmable steering wheel button - opening a function**: press the button on the multifunction steering wheel.
– **Programmable steering wheel button - requesting a function**: press and hold the button.
– **Programmable steering wheel button - changing a function**: press and hold the button. Select and confirm an entry. **Or**

– Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Vehicle settings** > **Steering wheel button assignment**.

⑥ Button NAV

– **Repeating the last navigation prompt**: press the NAV button when route guidance is active.
– **Changing the voice guidance volume**: when route guidance is active, turn the right thumbwheel upward or downward during a navigation prompt.

Multifunction steering wheel

Operating

Applies to: vehicles with multifunction steering wheel

With the multifunction steering wheel, you can operate the driver information system as well as the MMI functions and you can also adjust the volume.

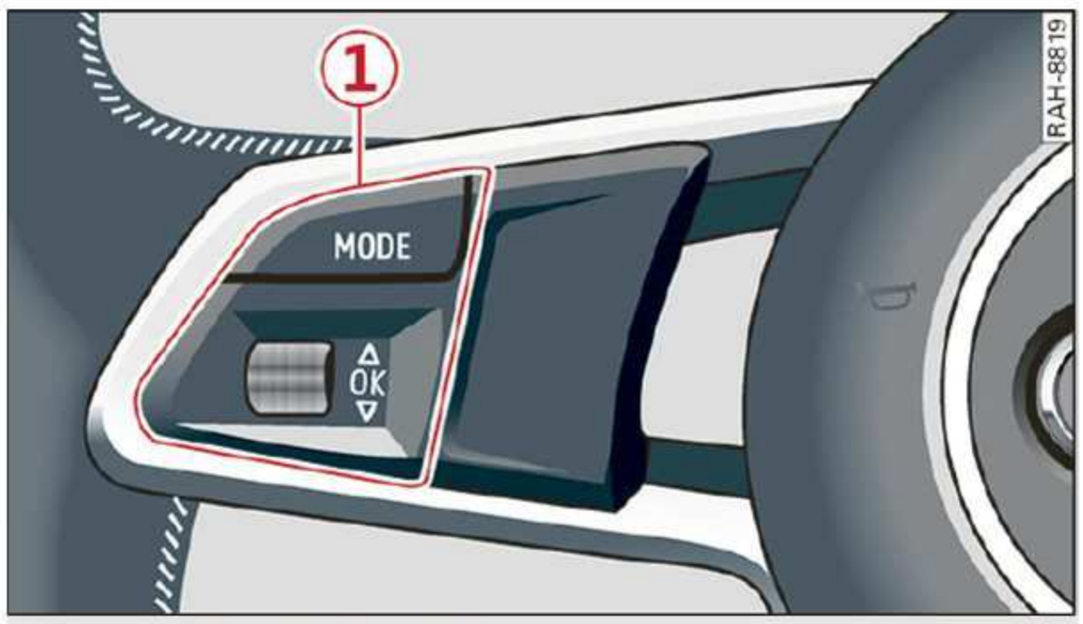


Fig. 12 Left side of multifunction steering wheel

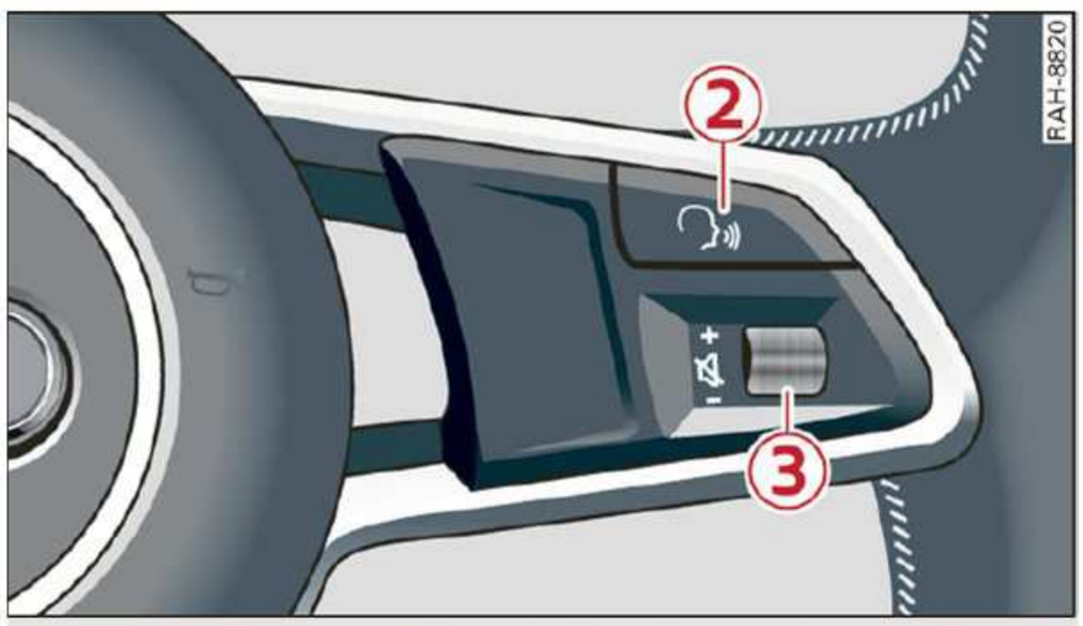


Fig. 13 Right side of the multifunction steering wheel

Requirement: the ignition must be switched on. ▶

① Operating the driver information system

The driver information system contains multiple tabs ① ⇨ *page 15, fig. 6* that display various information ② ⇨ *page 15, fig. 6*.

The following tabs may be available, depending on vehicle equipment:

First tab	On-board computer ⇨ *page 19*
Second tab[a)]	Messages
Third tab	Radio ⇨ *page 157* Media ⇨ *page 157*
Fourth tab	Telephone ⇨ *page 158*

a) This tab is only visible when there is at least one indicator light or message displayed.

– **Switching tabs**: press the MODE button ⇨ *fig. 12* on the multifunction steering wheel repeatedly until the desired tab is displayed.
– **Selecting a function in the menu/list**: turn the left thumbwheel on the multifunction steering wheel to the desired function.
– **Confirming a selection**: press the left thumbwheel on the multifunction steering wheel to confirm your selection.
– **Scrolling within the lists**: turn the left thumbwheel on the multifunction steering wheel quickly to scroll within the lists.

② Button

– **Switching the voice recognition system on**: briefly press the button ⇨ *fig. 13*. Say the desired command after the **Beep**.
– **Switching the voice recognition system off**: press and hold the button. **Or**: say the command **Cancel**.

For more information about the voice recognition system, see ⇨ *page 164, Voice recognition system* or ⇨ *page 241*.

③ Right thumbwheel

The volume of an audio source or a system message (such as traffic announcements) can be directly adjusted during the audio output.

– **Increasing or decreasing the volume**: turn the right thumbwheel ⇨ *fig. 13* up or down.
– **Muting or pausing**: turn the right thumbwheel down. **Or**: press the right thumbwheel.
– **Unmuting or resuming**: turn the right thumbwheel upward. **Or**: press the right thumbwheel.

Vehicle functions

Overview

The trip computer is displayed in the first tab of the driver information system. Additional vehicle functions can be accessed depending on the vehicle equipment.

► Press the left control button.

– On-board computer ⇨ *page 19*
– Lap times ⇨ *page 99*
– Statistics ⇨ *page 99*
– Layout ⇨ *page 17*

Trip computer



Fig. 14 Instrument cluster: fuel consumption display

Resetting values to zero

Requirement: the **Fuel consumption**, **Short-term memory**, or **Long-term memory** display must be selected.

► To reset the values in the respective memory to zero, press and hold the left thumbwheel on the multifunction steering wheel for one second. Or
► On the multifunction steering wheel, select: the right control button > **Reset values***.

In the trip computer, you can call up the following displays one after the other by turning the left thumbwheel on the multifunction steering wheel: ▶

– Time and date ⇨ *page 240*
– Digital speedometer*
– Average consumption
– Remaining range*
– Short-term memory overview
– Long-term memory overview
– Energy consumers* ⇨ *page 20*
– Driver assistance* ⇨ *page 102*
– Traffic sign recognition* ⇨ *page 97*

The short-term memory collects driving information from the time the ignition is switched on until it is switched off. If you continue driving within two hours after switching the ignition off, the new values are included when calculating the current trip information.

Unlike the short-term memory, the long-term memory is not erased automatically. You can select the time period for evaluating trip information yourself.

Fuel consumption

The current fuel consumption can be shown using a bar graph ⇨ *fig. 14*. The average consumption stored in the short-term memory is also displayed. If the bars are green or the gray tone on the bars changes (depending on the equipment), your vehicle is saving fuel by the following function:

– **Recuperation**: electrical energy can be stored in the vehicle battery when the vehicle is coasting or driving downhill. The bar will move toward /.

Tips

The date, time of day, and time and date format can be set in the Infotainment system ⇨ *page 240*.

Energy consumers

Applies to: vehicles with energy consumers

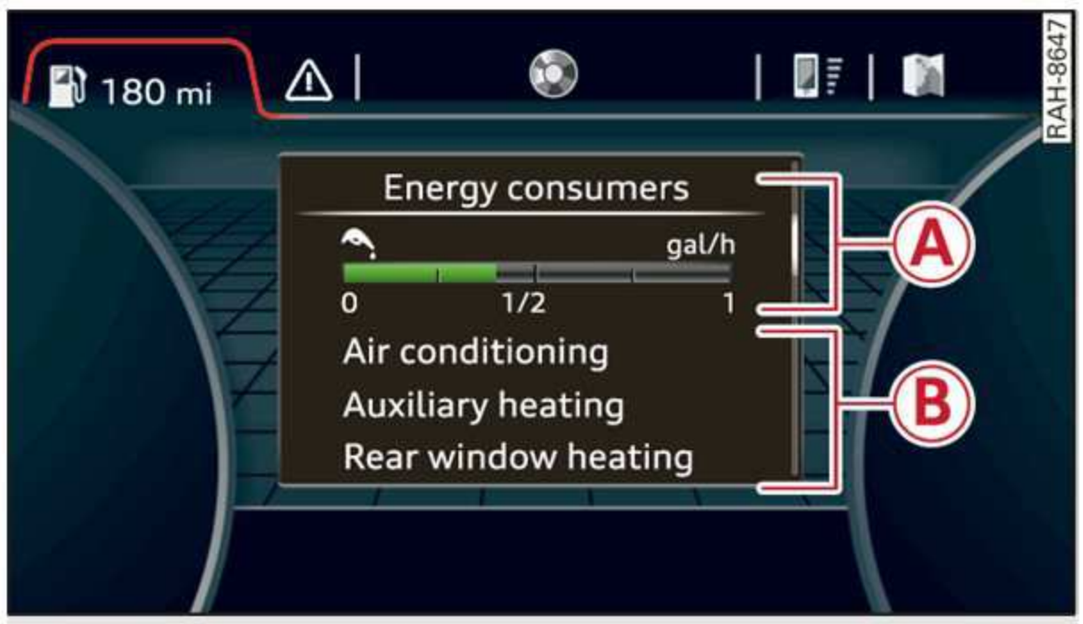


Fig. 15 Instrument cluster: energy consumers

In the **Energy consumers** view, the other equipment that is currently affecting fuel consumption is listed in the first tab (on-board computer). The display shows up to three energy consumers Ⓑ ⇨ *fig. 15*. The equipment using the most power is listed first. If more than three items using power are switched on, the equipment that is currently using the most power is displayed.

A gauge Ⓐ also shows the current total consumption of all other consumers.

Engine oil temperature display and boost indicator

Applies to: vehicles with engine oil temperature display/boost indicator

Applies to: vehicles with analog instrument cluster

The engine oil temperature and boost indicator are only shown in the lap timer display ⇨ *page 99*.

Engine oil temperature indicator

Applies to: vehicles with Audi virtual cockpit

The engine oil temperature is only shown in the enhanced view or in the sport view ⇨ *page 17*.

When engine oil temperatures are low, the display --- °F (--- °C) appears in the instrument cluster.

The engine has reached its operating temperature when the engine oil temperature is between 176 °F (80 °C) and 248 °F (120 °C) under normal driving conditions. The engine oil temperature ▶

may be higher if there is heavy engine load and high temperatures outside. This is not a cause for concern as long as the  ⇨ *page 312* or  ⇨ *page 312* indicator lights do not turn on.

Boost indicator

Applies to: vehicles with Audi virtual cockpit

The boost indicator is only displayed in the sport view ⇨ *page 17*.

The current engine load (meaning the current boost pressure) is indicated by a bar.

Messages

BRAKE/(!)/(○)/(!) Brake system

If this indicator light turns on, there is a malfunction in the brake system.

BRAKE (!) Brakes: stop vehicle and check brake fluid level

Stop the vehicle and check the brake fluid level. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

BRAKE / (!) Brakes: malfunction! Stop vehicle safely

If the indicator light turns on and this message appears, there is a malfunction in the brake brake system.

If ABS / (ABS) and  also turn on, there is a malfunction in the ABS, ESC, and braking distribution.

Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance ⇨ ⚠.

BRAKE / (!) Parking brake: malfunction! Safely stop vehicle. See owner's manual

– If the indicator light and the message appear **when the vehicle is stationary or after switching the ignition on**, check if you can release the parking brake. If you cannot release the parking brake, see an authorized Audi dealer or authorized Audi Service Facility. If you can release the parking brake and the message still appears, see an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

– If the indicator light and message appear **while driving**, the hill start assist or emergency braking function may be malfunctioning. It may not be possible to set the parking brake or release it once it has been set. Do not park your vehicle on hills. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

BRAKE / (○) Brake pads: wear limit reached. You can continue driving. Please contact Service

The brake pads are worn. Drive to an authorized Audi dealer or authorized Audi Service Facility as soon as possible to have the malfunction corrected.

(!) Brakes overheating. Please shift to D

(!) Brakes overheating. Please select a gear and follow gear recommendation

There was a heavy load on the brakes. Engage a suitable gear (manual transmission) or place the selector lever in the "D/S" position (automatic transmission) to use the engine braking effect and reduce the load on the brakes.

Brake booster: limited functionality. You can continue driving. Please contact Service

There is a malfunction in the brake booster. The brake booster is available, but its effectiveness is reduced. Braking behavior may be different from how it normally functions and the brake pedal may vibrate. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

⚠ WARNING

– Read and follow the warnings in ⇨ *page 309, Working in the engine compartment* before opening the hood and checking the brake fluid level.
– If the brake system indicator light does not turn off or it turns on while driving, the brake fluid level in the reservoir is too low, and this increases the risk of an accident. Stop the vehicle and do not continue driving. See an authorized Audi dealer or ▶

authorized Audi Service Facility for assistance.
– If the brake system indicator light turns on together with the ABS and ESC indicator lights, the ABS/ESC regulating function may be malfunctioning. Functions that stabilize the vehicle are no longer available. This could cause the vehicle to swerve, which increases the risk that the vehicle will slide. Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

PARK/Ⓟ/Ⓟ Electromechanical parking brake

If the PARK / Ⓟ indicator light turns on, the parking brake was set.

If the PARK / Ⓟ indicator light flashes, the braking force has not built up enough or it has decreased. Secure the vehicle also by shifting into 1st gear (manual transmission) or selecting the "P" selector lever position (automatic transmission). Make sure the indicator light is off before you start driving.

Ⓟ Parking brake: malfunction! Please contact Service

There is a malfunction in the parking brake. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected. Do not park the vehicle on hills, because it could roll.

PARK BRAKE / Ⓟ Parking brake: warning! Vehicle parked too steep

There is not enough braking force to hold the vehicle in place. The brakes have overheated. The vehicle could roll away, even on a small incline.

PARK BRAKE / Ⓟ Parking brake: applied

If this message appears, press the brake pedal first and then release the parking brake if necessary.

PARK BRAKE / Ⓟ Parking brake: emergency braking

The emergency braking function was triggered.

Tips

For additional information on the parking brake, see ⇨ *page 82*.

Cooling system

Turn off engine and check coolant level. See owner's manual

The coolant level is too low.

Stop driving and switch the engine off. Check the coolant level ⇨ *page 315*.

– If the coolant level is too low, add coolant ⇨ *page 316*. Only continue driving once the indicator light turns off.

Coolant temperature: too high. Let engine run while vehicle is stationary

Let the engine run at idle for a few minutes to cool off, until the indicator light turns off.

– If the indicator light does not turn off, do not continue driving the vehicle. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

WARNING

– Never open the hood if you can see or hear steam or coolant escaping from the engine compartment. This increases the risk of burns. When you no longer see or hear steam or coolant escaping, you may open the engine compartment with caution.
– The engine compartment in any vehicle can be a dangerous area. Stop the engine and allow it to cool before working in the engine compartment. Always follow the information found in ⇨ *page 309, Working in the engine compartment*.

Note

Do not continue driving if the indicator light turns on as this increases the risk of engine damage.

Safety systems

The indicator light monitors the safety systems.

If the indicator light turns on or blinks, there is a malfunction in a safety system.

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

WARNING

Have the safety systems inspected immediately. Otherwise, there is a risk that the systems may not activate during a collision, which increases the risk of serious injury or death.

Safety belt

The indicator light stays on until the driver's and front passenger's safety belts are fastened. Above a certain speed, there will also be a warning tone.

Tips

For additional information on safety belts, see ⇨ *page 253*.

Steering lock

Steering: malfunction! Please stop vehicle

There is a malfunction in the electronic steering lock. You cannot turn the ignition on.

Do **not** tow your vehicle because it cannot be steered. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Steering lock: malfunction! Please contact Service

There is a malfunction in the electronic steering lock.

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

WARNING

Do not tow your vehicle if there is a malfunction in the electronic steering lock because this increases the risk of an accident.

Engine start system

Engine start system: malfunction! Please contact Service

Do **not** switch the ignition off because you may not be able to switch it on again.

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Engine start system: malfunction! Please contact Service

There is a malfunction in the engine starting system.

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Clutch

Applies to: vehicles with manual transmission

Clutch: malfunction! Safely stop vehicle

There is an ongoing malfunction in the clutch. Stop the vehicle safely. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Clutch: malfunction! Adapt driving style. Please contact Service

There is an ongoing malfunction in the clutch. The engine torque that can be transferred is reduced. You may continue driving. Avoid using the clutch in any way that will place a heavy load on it. For example, do not let the clutch rub when starting on hills or when maneuvering the vehicle. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Clutch: malfunction! You can continue driving

▶

There is a malfunction in the clutch. The engine torque that can be transferred is reduced. You may continue driving. Avoid using the clutch in the future in any way that will place a heavy load on it. For example, do not let the clutch rub when starting on hills or when maneuvering the vehicle. The indicator light turns off once the clutch is fully operable again.

Hood

If the indicator light turns on, the hood lock is not latched correctly.

Stop immediately and close the hood ⇨ *page 310*.

Electronic Stabilization Control (ESC)

If the indicator light blinks while driving, the ESC or ASR (Anti-Slip Regulation) is actively regulating.

If the indicator light turns on, the system has switched the ESC off. In this case, you can switch the ignition off and then on to switch the ESC on again. The indicator light turns off when the system is fully functional.

If the indicator light turns on, ESC was switched off using the OFF button ⇨ *page 139*.

Stabilization control (ESC/ABS): malfunction! See owner's manual

If the indicator lamp and the ABS / ABS indicator lamp turn on and this message appears, the ABS or electronic differential lock is malfunctioning. This also causes the ESC to malfunction. The brakes still function with their normal power, but ABS is not active.

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Tips

For additional information on ESC and ABS, see ⇨ *page 138*.

Drive system

Drive system: malfunction! Safely stop vehicle

There is a malfunction in the drive system. The brake booster and the power steering may stop working. Stop the vehicle immediately or as soon as possible and do not continue driving. Have the problem corrected by an authorized Audi dealer or authorized Audi Service Facility.

Drive system: malfunction! Please contact Service

There is a malfunction in the drive system. Drive slowly to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Engine speed limitation

If the indicator light turns on, the engine will be automatically limited to the RPM displayed in the instrument cluster. This protects the engine from overheating.

The engine speed limitation deactivates once the engine is no longer in the critical temperature range and you have released the accelerator pedal once.

If the engine speed limitation was activated by an engine control malfunction, the indicator light also turns on. Make sure the engine speed does not go above the speed displayed, for example when downshifting. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Tank system

Please refuel

If the indicator light turns on for the first time and the message appears, there are about 2.1 gallons (8 liters) of fuel left in the tank.

Please refuel immediately

If the indicator light turns on and this message appears, the fuel tank is almost empty. Refuel the vehicle immediately. ▶

Tank system: malfunction! Please contact Service

There is a malfunction in the fuel tank system. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Tips

For more information on fueling, see ⇨ *page 306*.

Washer fluid level

If the indicator light turns on, the washer fluid is almost out. Fill the washer fluid for the windshield washer system and the headlight washer system* when the ignition is switched off ⇨ *page 320*.

Windshield wipers

If the indicator light turns on, then there is a windshield wiper malfunction. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Driver's door

Driver's door: malfunction! Shift to P before leaving vehicle. See owner's manual

There is a malfunction in the driver's door. Select the "P" selector lever position (automatic transmission) to secure the vehicle.

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Bulb failure indicator

If the indicator light turns on, a bulb has failed. The message indicates the location of the bulb. Replace the bulb immediately.

Vehicle lights: malfunction! Please contact Service

There is a malfunction in the headlights or the light switch. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

WARNING

- Light bulbs are under pressure and can explode when bulbs are replaced, which increases the risk of injury.
- With HID headlights (xenon headlights), the high-voltage component must be handled correctly. Otherwise, there is a risk of fatal injury.

Dynamic headlight range control

Headlight range control: malfunction! See owner's manual

There is a malfunction in the headlight range control system, which may cause glare for other drivers.

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Audi adaptive light

Applies to: vehicles with Audi adaptive light

Audi adaptive light: malfunction! See owner's manual

Adaptive light is not working. The headlights still function.

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Light/rain sensor

Automatic headlights: malfunction! See owner's manual

Automatic wipers: malfunction! See owner's manual

The light/rain sensor is malfunctioning.

The low beams remain switched on at all times for safety reasons when the light switch is in the **AUTO** position. However, you can continue to turn the lights on and off using the light switch. ▶

You can still control all functions that are independent of the rain sensor through the windshield wiper lever.

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Suspension control

Applies to: vehicles with suspension control

Suspension: malfunction! You may continue driving

There is a malfunction. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

All wheel drive/sport differential

Applies to: vehicles with all wheel drive/sport differential

All-wheel drive: malfunction! You may continue driving. Please contact Service

Sport differential: malfunction! Please contact Service

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

All-wheel drive overheating. Please adapt driving style. See owner's manual

Sport differential: temperature too high. Please adapt driving style

The transmission temperature has increased significantly due to the sporty driving manner. Drive in a less sporty manner until the temperature returns to the normal range and the indicator light switches of.

WARNING

Contact an authorized Audi dealer or authorized Audi Service Facility if the all wheel drive/sport differential is faulty or malfunctioning. The repair must be performed by trained personnel using the correct oil in order to ensure safety.

Turn signals

If the ⇦ or ⇨ indicator light blinks, a turn signal is turned on. If both indicator lights are blinking, the emergency flashers are on.

If an indicator light blinks twice as fast as usual, a turn signal bulb has failed. Carefully drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Head-up display

Description

Applies to: vehicles with head-up display



Fig. 16 Instrument panel: knob for the head-up display

The head-up display projects certain warnings or selected information from the assist systems* or navigation system* on the windshield. The display appears within the driver's field of vision.

Switching on and off

- ▸ To switch the head-up display on, press the knob.
- ▸ To switch the head-up display off, press the knob.

Adjusting the height

The height of the display can be adjusted to the individual driver.

- ▸ Make sure you are seated correctly ⇨ *page 248*.
- ▸ Turn the knob to adjust the display.

Settings in the Infotainment system

- ▸ Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Driver assistance** > **Head-up display**.

Display content

In the Infotainment system, you can specify which information should be displayed: For example, this can include navigation information*, adaptive cruise control* or camera-based traffic sign recognition*.

The display of certain information and some of the red indicator lights cannot be hidden in the Infotainment system.

Brightness

You can adjust the display brightness in the Infotainment system. The display brightness decreases automatically as the amount of light decreases. The background brightness is adjusted with the instrument illumination ⇨ *page 51*.

Picture rotation

You can rotate the picture in the Infotainment system clockwise or counterclockwise.

Note

To prevent scratches on the glass covering the head-up display, do not place any objects in the projection opening.

Tips

- – Sunglasses with polarization filters and unfavorable lighting conditions can impair visibility of the display.
- – An optimum display depends on the seat position and the height adjustment of the head-up display.
- – A special windshield is needed for the head-up display function.
- – For information on cleaning, see ⇨ *table Interior cleaning on page 344*.

8W0012721BG

Opening and closing

Central locking

Description

You can lock and unlock the vehicle centrally. You have the following options:

– Vehicle key ⇨ *page 31*
– Sensors in the door handles* ⇨ *page 31*
– Lock cylinder on the driver's door ⇨ *page 33*
– Interior central locking switch ⇨ *page 32*

Vehicle key

The term “vehicle key” refers to the remote control key or convenience key*. The convenience key* is a remote control key with special functions ⇨ *page 31* and ⇨ *page 78*.

Turn signals

The turn signals flash twice when you unlock the vehicle and flash once when you lock the vehicle. If they do not flash, then one of the doors, the luggage compartment lid or the hood is not closed completely.

Automatic locking (Auto Lock)

The Auto Lock function locks all doors and the luggage compartment lid once the speed has exceeded approximately 9 mph (15 km/h).

The vehicle can be unlocked if the opening function in the central locking system switch is used or one of the door handles is pulled.

In the event of a crash with airbag deployment, the doors will also automatically unlock to allow access to the vehicle.

Selective door unlocking

The doors and luggage compartment lid will lock when they close. You can set in the Infotainment system whether *only* the driver's door or the entire vehicle should be unlocked when unlocking ⇨ *page 33*.

Unintentionally locking yourself out

Only lock your vehicle when all of the doors and the luggage compartment lid are closed and the vehicle key is not in the vehicle. This reduces the risk of locking yourself out accidentally.

The following features help to reduce the risk of locking your vehicle key in the vehicle:

– If the driver's door is open, the vehicle cannot be locked by pressing the button on the vehicle key or by touching the locking sensor* on a door.
– Applies to: sedan: If the convenience key* that was used last is detected inside the luggage compartment, the luggage compartment lid will automatically unlock and open again after closing it.
– If the last convenience key* that was used is detected inside the vehicle, the vehicle cannot be locked from the outside for a brief time.

WARNING

– If you leave the vehicle, switch the ignition off and take the vehicle key with you. This applies particularly when children remain in the vehicle. Otherwise, children could start the engine or operate electrical equipment (such as power windows), which increases the risk of an accident.
– No one, especially children, should stay in the vehicle when it is locked from the outside, because the windows can no longer be opened from the inside ⇨ *page 34*. Locked doors make it more difficult for emergency workers to enter the vehicle, which puts lives at risk.

Note

Applies to: vehicles with convenience key

– Applies to: sedan: If the convenience key that was last used is detected inside the passenger compartment, then will not be possible to lock the vehicle from the outside. The turn signals will flash several times to indicate this. If you do not open the vehicle within a short time to remove the vehicle key, then the vehicle will lock automatically. This prevents the vehicle from being left unlocked for long periods of time. The key will then be locked inside the vehicle. ▶

– Applies to: allroad: If the convenience key that was last used is detected inside the vehicle, then it will not be possible to lock the vehicle from the outside. The turn signals will flash several times to indicate this. If you do not open the vehicle within a short time to remove the vehicle key, then the vehicle will lock automatically. This prevents the vehicle from being left unlocked for long periods of time. The key will then be locked inside the vehicle.

Tips

– Do not leave valuables unattended in the vehicle. A locked vehicle is not a safe!
– The LED in the driver's door rail blinks when you lock the vehicle. If the LED lights up for approximately 30 seconds after locking, there is a malfunction in the central locking system. Have the problem corrected by an authorized Audi dealer or authorized Audi Service Facility.

Key set

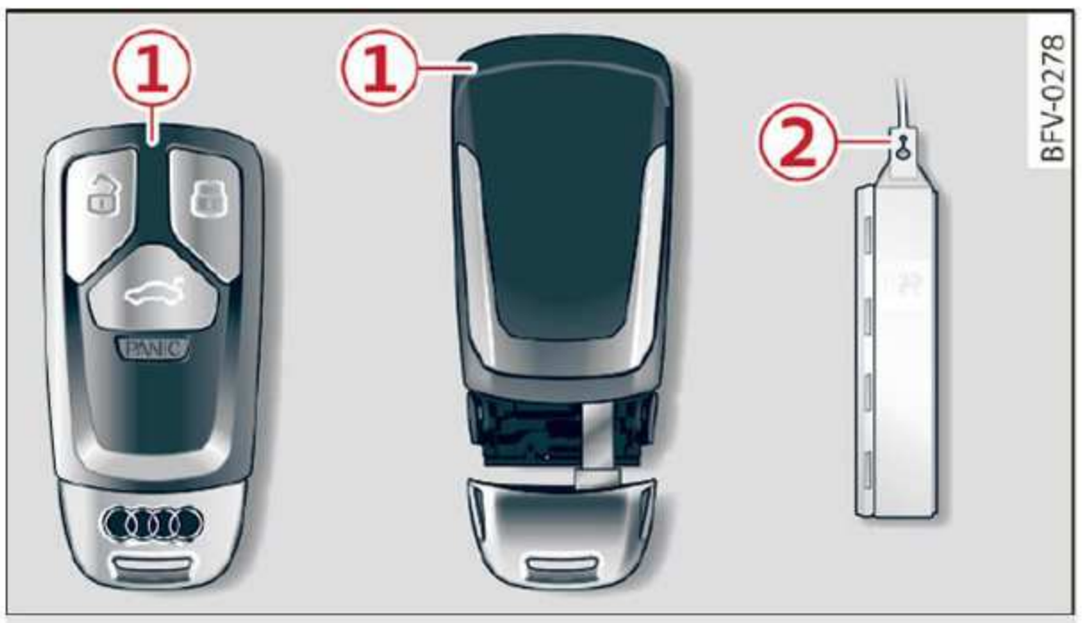


Fig. 17 Your vehicle key set

① Vehicle key

The vehicle key is a remote control key or convenience key*. The convenience key* is a remote control key with special functions ⇨ *page 31* and ⇨ *page 78*. You can unlock or lock your vehicle with the vehicle key. A mechanical key is integrated in the vehicle key ⇨ *page 30*.

② Key tag with vehicle code

Applies to: vehicles with Audi connect vehicle control

Open the key tag and scratch to reveal the vehicle code. You can unlock the Audi connect vehicle control services* for your vehicle with this vehicle code. For additional information, see ⇨ *page 190*. If a key fob is lost, contact an authorized Audi dealer or authorized Audi Service Facility.

Vehicle key replacement

If a key is lost, see an authorized Audi dealer or authorized Audi Service Facility. Have this vehicle key deactivated. It is important to bring all keys with you. If a key is lost, you should report it to your insurance company.

Number of keys

You can check the number of keys programmed to your vehicle in the Infotainment system. To do this, select the MENU button > **Vehicle** > left control button > **Service & checks** > **Vehicle information**. This way, you can make sure that you have all the keys when purchasing a used vehicle.

Electronic immobilizer

The immobilizer prevents unauthorized use of the vehicle.

In some cases, it may not be possible to start the vehicle if there is a vehicle key from a different vehicle manufacturer on the key chain.

Data in the vehicle key

When driving, service and maintenance-relevant data is continuously stored in your vehicle key. Your Audi service advisor can read out this data and tell you about the work your vehicle needs. This applies also to vehicles with a convenience key*.

Personal convenience settings

If two people use one vehicle, it is recommended that each person always uses their own vehicle key. When the ignition is turned off or when the vehicle is locked, personal convenience settings for the following systems are stored and assigned to the vehicle key:

– Climate control system
– Steering wheel heating*
– Central locking system
– Interior lighting*

– Exterior lighting
– Rain sensor
– Memory function*
– Parking aid*
– Adaptive cruise control*
– Active lane assist*
– Side assist*
– Traffic jam assist*
– Distance warning*
– Audi pre sense*
– Speed warning*

The stored settings are automatically recalled when you unlock the vehicle, open the doors or turn on the ignition.

Note

Protect the key against high temperatures and direct sunlight.

Tips

– The vehicle key function can be temporarily disrupted by interference from transmitters near the vehicle working in the same frequency range (such as a mobile device or radio equipment). Always check if your vehicle is locked.
– For an explanation on conformity with the FCC regulations in the United States and the Industry Canada regulations, see ⇨ *page 370*.

Removing the mechanical key

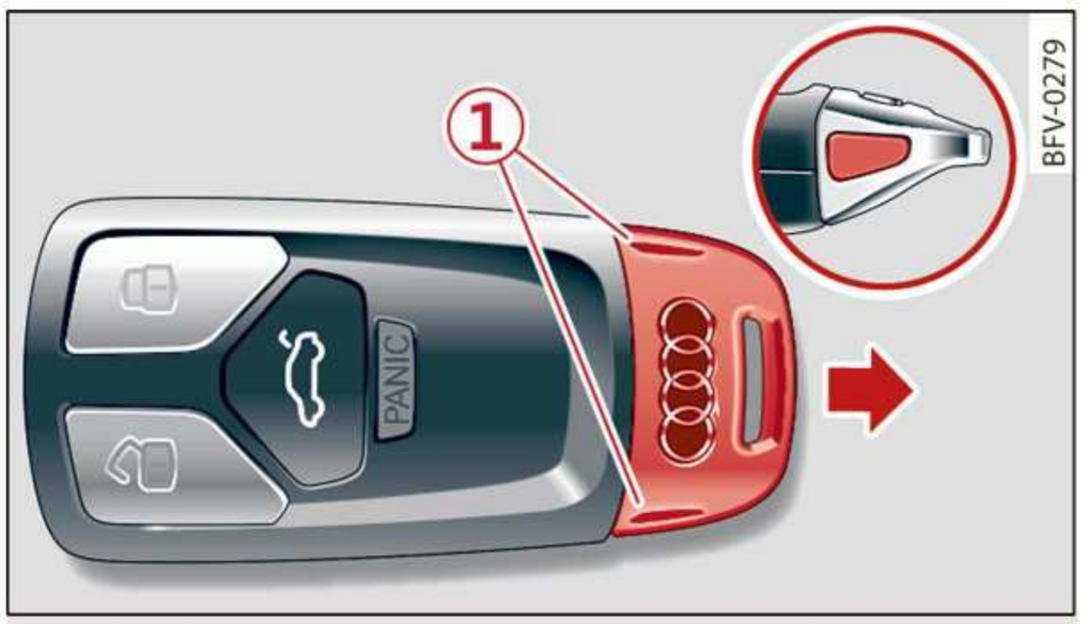


Fig. 18 Vehicle key: removing the mechanical key

▸ Press the release buttons ① ⇨ *fig. 18* and remove the mechanical key from the vehicle key.

Using the mechanical key, you can:

– Lock/unlock the glove compartment.
– Locking and unlocking the lockable* rear bench seat ⇨ *page 66*.
– Manually lock or unlock the vehicle ⇨ *page 33*.
– Mechanically lock the doors ⇨ *page 33*.
– Switch the child safety locks on in the rear doors ⇨ *page 40, fig. 35*.

LED and battery in the vehicle key

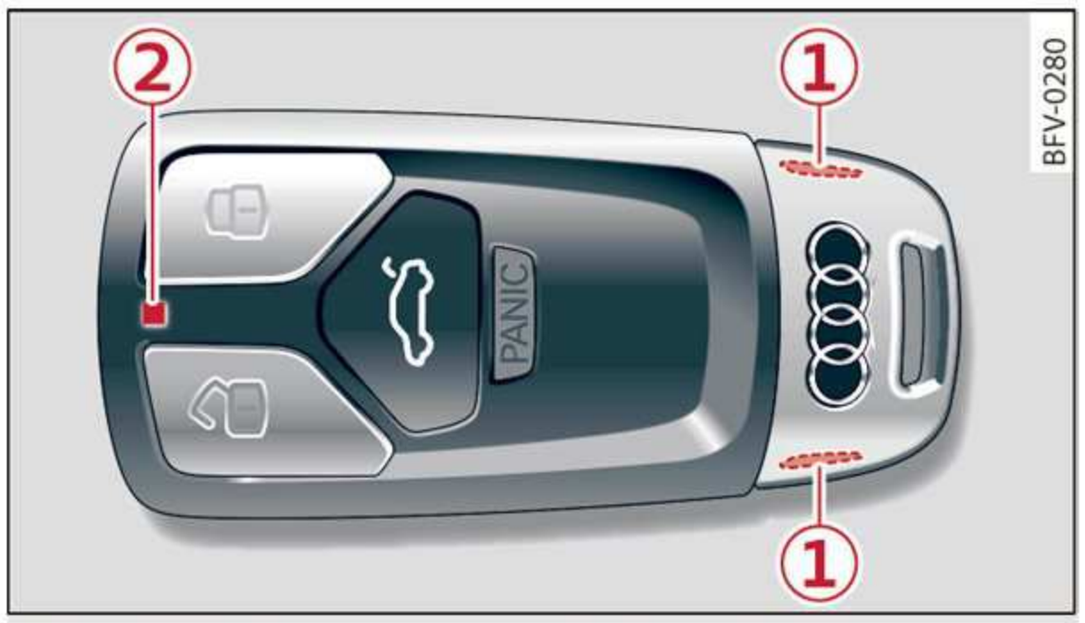


Fig. 19 Vehicle key: removing the battery holder

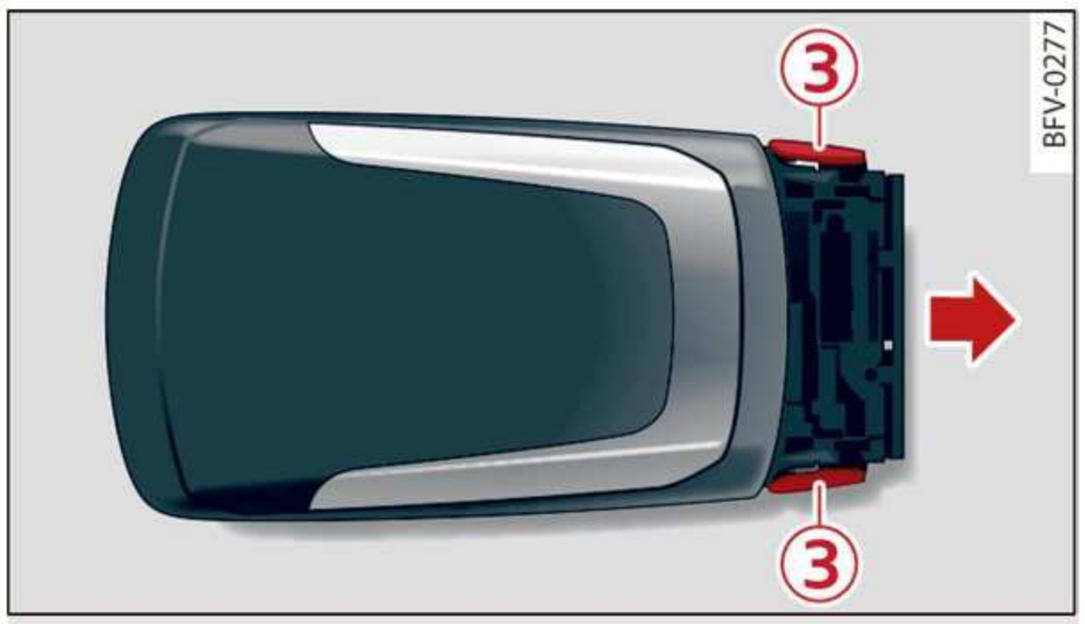


Fig. 20 Vehicle key (rear side): removing the battery holder

LED in the vehicle key

The LED ② indicates the vehicle key function.

▸ If you press a button briefly, the LED blinks once.
▸ If you press and hold a button (convenience opening/closing), the LED blinks several times.
▸ If the LED does not blink, the vehicle key battery is drained. Replace the battery in the vehicle key.

Replacing the vehicle key battery

▸ Press the release buttons ① ⇨ *fig. 19* and remove the mechanical key.
▸ Press the release buttons ③ ⇨ *fig. 20* while pulling the battery holder out of the vehicle key in the direction of the arrow. ▶

- ▸ Insert the new battery with the “+” facing down.
- ▸ Slide the battery holder carefully into the vehicle key.
- ▸ Insert the mechanical key.

For the sake of the environment

Discharged batteries must be disposed of using methods that will not harm the environment. Do not dispose of them in household trash.

Tips

Replacement batteries for the vehicle key must meet the same specifications as the original battery.

Unlocking and locking by remote control

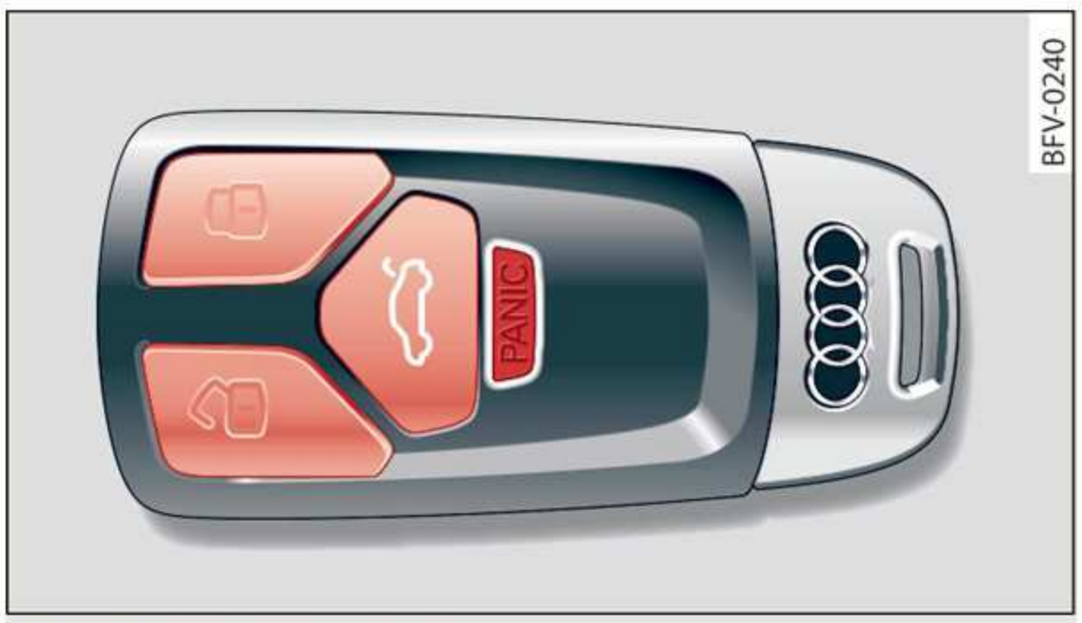


Fig. 21 Vehicle key: button programming

- ▸ To unlock the vehicle, press the button ⇨ *fig. 21*.
- ▸ To lock the vehicle, press the button **one time** ⇨ ⚠.
- ▸ To unlock the luggage compartment lid, press the button briefly.
- ▸ To open the luggage compartment lid, press and hold the button for at least one second.
- ▸ To trigger the alarm, press the red PANIC button. The vehicle horn and emergency flashers will activate.
- ▸ To switch off the alarm, press the red PANIC button again.

If you unlock the vehicle and do not open any of the doors, the hood, or the luggage compartment lid within 45 seconds, the vehicle will automatically lock again. This feature prevents the vehicle from being accidentally left unlocked for a long period of time.

The settings in the Infotainment system determine if the entire vehicle or only the driver's door is unlocked when unlocking the vehicle ⇨ *page 33*.

WARNING

No one, especially children, should stay in the vehicle when it is locked from the outside, because the windows can no longer be opened from the inside ⇨ *page 34*. Locked doors make it more difficult for emergency workers to enter the vehicle, which puts lives at risk.

Tips

– Only use the vehicle key when you can see the vehicle.
– Applies to: vehicles with automatic transmission: The vehicle can only be locked when the selector lever is in "P".
– Do not use the remote control when you are inside the vehicle. Otherwise, you could unintentionally lock the vehicle. If you then try to open a door, the anti-theft alarm will trigger. If this happens, press the unlock button .
– Only use the panic function in an emergency.

Unlocking and locking with the convenience key

Applies to: vehicles with convenience key

The doors and luggage compartment lid can be unlocked and locked without using the vehicle key.



Fig. 22 Door handle: locking the vehicle ▶

Unlocking the vehicle

- Grip the door handle. The door unlocks automatically.
- Pull on the door handle to open the door.

Locking the vehicle

- Applies to: vehicles with automatic transmission: Select the "P" position, otherwise the vehicle will not lock.
- To lock the vehicle, close the door and touch the sensor in the door handle **once** ⇨ *fig. 22*. Do not hold the door handle while doing this.

You can unlock/lock the vehicle at every door. The vehicle key cannot be more than approximately 4 feet (1.5 m) away from the door handle. The function should not be impaired if the vehicle key is in your jacket pocket or in your briefcase, for example.

If you hold the door handle while locking, this can impair the locking function.

The door cannot be opened for a brief period directly after locking it. This way you have the opportunity to check if the doors locked correctly.

The settings in the Infotainment system determine if the entire vehicle or only one of the doors is unlocked when unlocking the vehicle ⇨ *page 33*.

WARNING

Read and following all WARNINGS ⇨ ⚠ *in Description on page 28*.

Tips

If your vehicle is left standing for a long period of time, note the following:

– The energy management system gradually turns off unnecessary convenience functions to prevent the vehicle battery from draining and to maintain the vehicle's ability to start for as long as possible. You then may no longer be able to unlock your vehicle with the sensors.

Tips

Unlocking with the convenience key (keyless access) can be deactivated in the Infotainment system ⇨ *page 33*.

Central locking switch



Fig. 23 Driver's door: central locking switch

- To lock the vehicle, press the 🔒 button ⇨ ⚠.
- To unlock the vehicle, press the 🔓 button.

When locking the vehicle with the central locking switch, the following applies:

– The doors and the luggage compartment lid cannot be opened from the outside for security reasons, such as to prevent unauthorized opening while stopped at a light.
– The LED in the central locking switch turns on when all doors are closed and locked.
– You can open the doors individually from the inside by pulling the door handle.
– In the event of a crash with airbag deployment, the doors unlock automatically to allow access to the vehicle.

WARNING

– The central locking switch also works when the ignition is switched off and automatically locks the entire vehicle when the 🔒 button is pressed.
– The central locking switch is inoperative when the vehicle is locked from the outside.
– Locked doors make it more difficult for emergency workers to enter the vehicle, which puts lives at risk. Do not leave anyone behind in the vehicle, especially children. ▶

– Read and following all WARNINGS ⇨ ⚠ *in Description on page 28*.

Tips

Your vehicle locks automatically when it reaches a speed of 9 mph (15 km/h) (Auto Lock) ⇨ *page 28*. You can unlock the vehicle again using the button in the central locking switch.

Setting the central locking system

You can adjust the central locking system to your preferences. The settings depend on the vehicle equipment.

► Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Vehicle settings** > **Central locking**.

Door unlocking - you can decide if **All** doors or only the **Driver's door** should unlock. The luggage compartment lid also unlocks when **All** is selected. If you select Driver's door* in a vehicle with a **convenience key**, only the driver's door will unlock when you grasp the driver's door handle. If you grasp another door handle, the entire vehicle will be unlocked.

If you select **Driver's door**, all the doors and luggage compartment lid will unlock if you press the button on the vehicle key twice.

Long press to open windows - you can select if all windows and the roof should open using the vehicle key ⇨ *page 41, Convenience opening and closing*. If you press and hold the button on the vehicle key, all of the windows and the roof will close.

Applies to: vehicles with convenience key: **Open with convenience key** – you can deactivate the function for unlocking via the sensor. The function for locking via the sensor will still be enabled ⇨ *page 31*.

Disable rear lid handle - if you select **On**, the luggage compartment lid handle is locked. In this case, the luggage compartment lid can be opened with the button on the vehicle key or with the unlock button in the driver's door. In vehicles with a convenience key*, you can still open the luggage compartment lid using the handle if an authorized convenience key is near the proximity sensor*.

Fold mirrors - if you select **On**, the exterior rearview mirrors will fold in automatically when you press the button on the vehicle key or touch the sensor* in the handle.

Tone when locking[1)] - if you select **On**, a tone will sound when you lock the vehicle.

Mechanically unlocking and locking the doors

If the central locking fails, you must unlock or lock the doors separately.

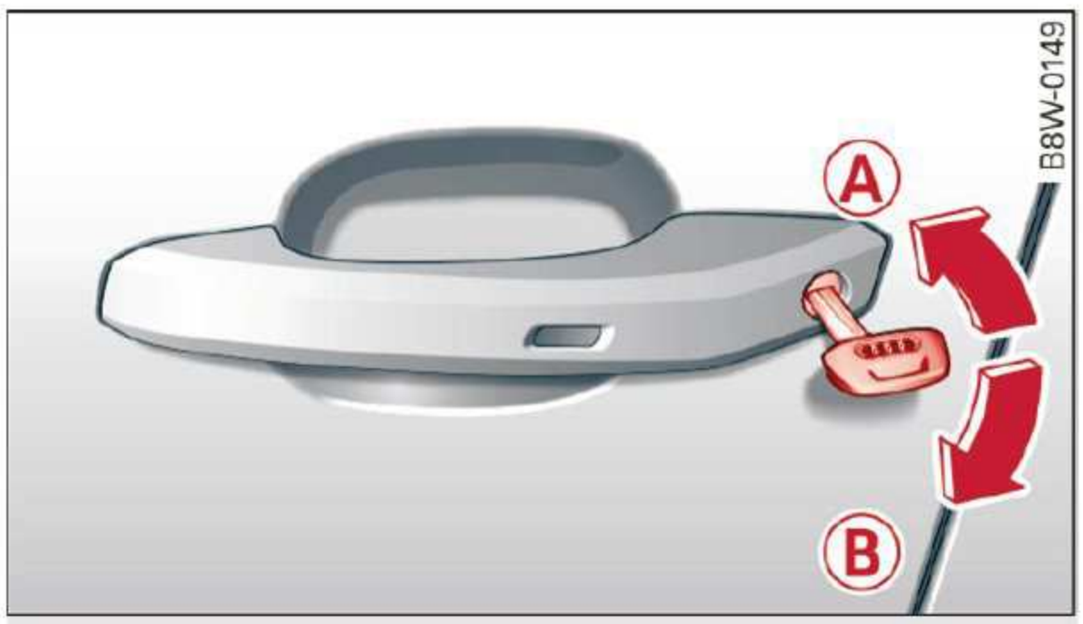


Fig. 24 Driver's door: door lock cylinder



Fig. 25 Door: mechanically locking

Unlocking and locking the driver's door with the mechanical key

► Remove the mechanical key ⇨ *page 30*.

► To unlock the driver's door, turn the key to the unlock position Ⓐ ⇨ *fig. 24*.

1) This function is not available in all countries.

- ▸ To lock the driver's door, select the "P" position (automatic transmission) and turn the key **once** to the closing position Ⓑ⇨ ⚠.

Locking the front passenger's door or rear doors with the mechanical key

The mechanical lock is located on the edge of the front passenger's door and the rear doors. It is only visible when the door is open.

- ▸ Remove the mechanical key ⇨ *page 30*.
- ▸ Remove the cap from the opening ⇨ *fig. 25*.
- ▸ Insert the key in the inside slot and turn it all the way to the right (right door) or left (left door).

⚠ WARNING

Read and following all WARNINGS ⇨ ⚠ *in Description on page 28*.

Anti-theft alarm system

Applies to: vehicles with anti-theft alarm system

If the anti-theft alarm system detects a vehicle break-in, audio and visual warning signals are triggered. The anti-theft alarm system is switched on or off when locking or unlocking your vehicle. If the alarm is triggered, it will shut off automatically after a certain amount of time.

Switching the alarm off manually

- ▸ To switch the alarm off, press the button on the vehicle key or switch the ignition on.

Depending on the vehicle equipment, the anti-theft alarm system may have the following features:

Break-in security feature

The alarm will sound if there is a break-in at the doors, hood, and/or luggage compartment lid.

Interior/towing protection monitor*

The alarm will be triggered if there are movements detected in the vehicle interior (for example, by animals) or if there is a change in the vehicle angle (for example, when the vehicle is being towed).

You can prevent the alarm from being triggered by deactivating the interior/towing protection monitor.

Deactivating the interior/towing protection monitor

There are the following options for deactivating the interior/towing protection monitor:

- ▸ Press the button on the vehicle key a second time **within two seconds**. Or
- ▸ Applies to: vehicles with convenience key: Touch the sensor on the door handle a second time **within two seconds**. Or
- ▸ Turn the mechanical key in the door lock to the close position a second time **within 2 seconds**.

If you lock the vehicle, then the interior/towing protection monitor will stay off until the next time the vehicle is unlocked.

⚠ WARNING

No one, especially children, should stay in the vehicle when it is locked from the outside, because the windows can no longer be opened from the inside. Locked doors make it more difficult for emergency workers to enter the vehicle, which puts lives at risk.

Tips

The interior/towing protection monitoring* only functions correctly when the windows and the roof* are closed.

Luggage compartment lid

Opening and closing the luggage compartment lid



Fig. 26 Driver's door: opening the luggage compartment lid

Opening the luggage compartment lid

- ► When the ignition is switched off, press and hold the button on the vehicle key for at least one second. Or
- ► Applies to: vehicles with automatic transmission: Engage the "P" selector lever position and pull the * button in the driver's door. Or
- ► Applies to: vehicles with manual transmission: Set the parking brake and pull the * button in the driver's door. Or
- ► Applies to: vehicles without convenience key: Unlock the vehicle using the / button on the vehicle key and press the handle in the luggage compartment lid. Or
- ► Applies to: vehicles with convenience key: Press the handle in the luggage compartment lid. The vehicle key cannot be more than approximately 4 feet (1.5 m) away from the luggage compartment.

Closing the luggage compartment lid

- ► Applies to: vehicles without automatic luggage compartment lid: Use the inside grip to pull the luggage compartment lid down and allow it to drop gently to close it ⇨ ⚠. Or
- ► Applies to: vehicles with automatic luggage compartment lid: Note ⇨ *page 36*.

⚠ WARNING

- – After closing the luggage compartment lid, make sure that it is latched. Otherwise, the luggage compartment lid could open suddenly when driving, which increases the risk of an accident.
- – Never drive with the luggage compartment lid ajar or open, because poisonous gases can enter the vehicle interior and create the risk of asphyxiation.
- – Never leave your vehicle unattended when the luggage compartment lid is open. A child could climb into the vehicle through the luggage compartment. If the luggage compartment lid was then closed, the child would be trapped in the vehicle and unable to escape. To reduce the risk of injury, do not allow children to play in or around the vehicle. Always keep the luggage compartment lid and the doors closed when the vehicle is not in use.
- – Always make sure no one is in the luggage compartment lid's range of motion when it is closing, especially near the hinges. Fingers or hands could be pinched.

Tips

- – When the vehicle is locked, the luggage compartment lid can be unlocked separately by pressing the button on the vehicle key. The luggage compartment lid locks automatically when it is closed again.
- – The settings in the Infotainment system determine if the luggage compartment lid can be opened using the handle ⇨ *page 33*.
- – In case of an emergency or a faulty handle, the luggage compartment lid can be opened manually from the inside ⇨ *page 38*.

Automatic luggage compartment lid

Applies to: vehicles with automatic luggage compartment lid

The luggage compartment lid can be opened and closed electrically.



Fig. 27 Driver's door: opening the luggage compartment lid



Fig. 28 Luggage compartment lid: Ⓐ closing button*, Ⓑ lock button (vehicles with convenience key*)

Opening the luggage compartment lid

- ▸ Press and hold the button on the vehicle key for at least one second. Or
- ▸ Press the handle in the luggage compartment lid. The vehicle key cannot be more than approximately 4 feet (1.5 m) away from the luggage compartment. Or
- ▸ Applies to: vehicles with automatic transmission: Engage the "P" selector lever position and pull the * button in the driver's door.
- ▸ Applies to: vehicles with manual transmission: Set the parking brake and pull the * button in the driver's door.

Closing the luggage compartment lid

- ▸ When the ignition is switched on, pull the switch in the driver's door until the luggage compartment lid is closed ⇨ ⚠. Or
- ▸ Press the button in the luggage compartment lid ⇨ *fig. 28*. The luggage compartment lid will automatically lower and close ⇨ ⚠. Or
- ▸ Applies to: vehicles with convenience key: Press the button on the vehicle key until the luggage compartment lid closes ⇨ ⚠. Make sure there is enough distance between you and the luggage compartment lid. There should be a maximum 9 feet (3 m) of distance. Or
- ▸ Applies to: vehicles with convenience key: Press the button in the luggage compartment lid ⇨ *fig. 28*. The vehicle key must not be more than approximately 4 feet (1.5 m) away from the luggage compartment and it must not be inside the vehicle. The luggage compartment lid will automatically lower and close. The vehicle locks ⇨ ⚠. Or
- ▸ Lightly pull the luggage compartment lid using the inner grip. The luggage compartment lid will automatically lower and close ⇨ ⚠. Or
- ▸ Press the handle in the luggage compartment lid. The luggage compartment lid will automatically lower and close ⇨ ⚠.

Storing the luggage compartment lid opening position

- ▸ Bring the luggage compartment lid into the desired open position. The position must be at a certain height or higher to store.
- ▸ Press and hold the button in the luggage compartment lid for at least four seconds to store the new open position. A visual and audio signal will follow.
- ▸ To set a higher open position, wait at least five seconds and then carefully press the luggage compartment lid upward.
- ▸ Press and hold the button again for at least four seconds to store the desired opening position.

The opening or closing process will stop immediately if:

– You pull or release the switch in the driver's door, or
– Applies to: vehicles with convenience key: You press or release the button on the vehicle key , or

▶

– Applies to: vehicles with convenience key: Press the button or the button in the luggage compartment lid, or
– You push the handle in the luggage compartment lid, or
– If something blocks the luggage compartment lid or makes it difficult for the lid to move.

If you press the handle or one of the or buttons (vehicles with convenience key*) now, the luggage compartment lid will either open or close, depending on its angle.

WARNING

– After closing the luggage compartment lid, make sure that it is latched. Otherwise, the luggage compartment lid could open suddenly when driving, which increases the risk of an accident.
– Pay careful attention when closing the luggage compartment lid. Otherwise, you could cause serious injury to yourself or others despite the pinch protection.
– To reduce the risk of injuries by pinching, always make sure that no one is in the operating area of the luggage compartment lid, including the hinge areas and the upper and lower edge of the luggage compartment lid.
– Never drive with the luggage compartment lid ajar or open, because poisonous gases can enter the vehicle interior and create the risk of asphyxiation.
– If there is a luggage rack (such as a bicycle rack) on the luggage compartment lid, the luggage compartment lid may not open completely under certain circumstances or it could close by itself if open due to the extra weight. Therefore, the open luggage compartment lid must be given additional support or the cargo must first be removed from the luggage rack.

Tips

– The settings in the Infotainment system determine if the luggage compartment lid can be opened using the handle ⇨ *page 33*.
– There are audible signals when closing the luggage compartment lid with the vehicle key (vehicles with convenience key*) or with the button in the driver's door.
– When the vehicle is locked, the luggage compartment lid can be unlocked separately by pressing the button on the vehicle key. The luggage compartment lid locks automatically when it is closed again.
– Applies to: vehicles with convenience key: The luggage compartment lid can be closed with the vehicle key from a distance up to approximately 9 ft (3 m).
– The luggage compartment lid can be operated manually if the vehicle battery is low. It is necessary to use more force when doing this. Move the lid slowly to reduce the amount of force needed.
– When the trailer socket is being used (for example, for a bicycle rack), the luggage compartment lid can be opened and closed using the handle or the foot motion activation (vehicles with convenience key*).
– In case of an emergency or a faulty handle, the luggage compartment lid can be opened manually from the inside ⇨ *page 38*.

Opening and closing the luggage compartment lid with foot motion (kicking movement)

Applies to: vehicles with sensor-controlled luggage compartment lid



Fig. 29 Rear of the vehicle: foot movement

Applies to: sedan

You can open the luggage compartment lid with foot motion activation. ▶

Applies to: allroad

You can open and close the luggage compartment lid with foot motion activation[1)].

Requirements: you must be carrying your convenience key* with you. You must be standing at the center behind the luggage compartment lid. The ignition must be switched off. Make sure you have firm footing.

– Move your foot back and forth under the bumper one time ⇨ *fig. 29*. Do not touch the bumper. The luggage compartment lid will open or close once the system detects the movement.

The luggage compartment lid will only open or close if you perform the movement as described. This prevents the luggage compartment lid from opening or closing due to similar movements, such as when you walk between the rear of the vehicle and your garage door.

The closing of the luggage compartment lid is indicated by a warning signal and can be canceled by making the described movement again.

The foot movement does not lock the vehicle.

General information

In some situations, the function may be limited or temporarily unavailable. This may happen if:

– The luggage compartment lid was closed or opened immediately before
– You park close to a hedge and the branches move back and forth under the vehicle for a long period of time
– You clean your vehicle, for example with a pressure washer or in a car wash
– There is heavy rain
– The bumper is very dirty, for example after driving on salt-covered roads
– There is interference to the vehicle key's radio signal, such as from mobile devices or remote controls

WARNING

– Pay careful attention when closing the luggage compartment lid. Otherwise, you could cause serious injury to yourself or others despite the pinch protection.
– To reduce the risk of injuries by pinching, always make sure that no one is in the operating area of the luggage compartment lid, including the hinge areas and the upper and lower edge of the luggage compartment lid.
– Never drive with the luggage compartment lid ajar or open, because poisonous gases can enter the vehicle interior and create the risk of asphyxiation.
– Applies to: allroad: if there is a luggage rack (such as a bicycle rack) on the luggage compartment lid, the luggage compartment lid may not open completely under certain circumstances, or it could close by itself if open due to the extra weight. Therefore, the open luggage compartment lid must be given additional support or the cargo must first be removed from the luggage rack.

Trunk escape latch

Applies to: vehicles with trunk escape latch

In case of an emergency, the rear lid can be opened from the inside using the trunk escape latch.

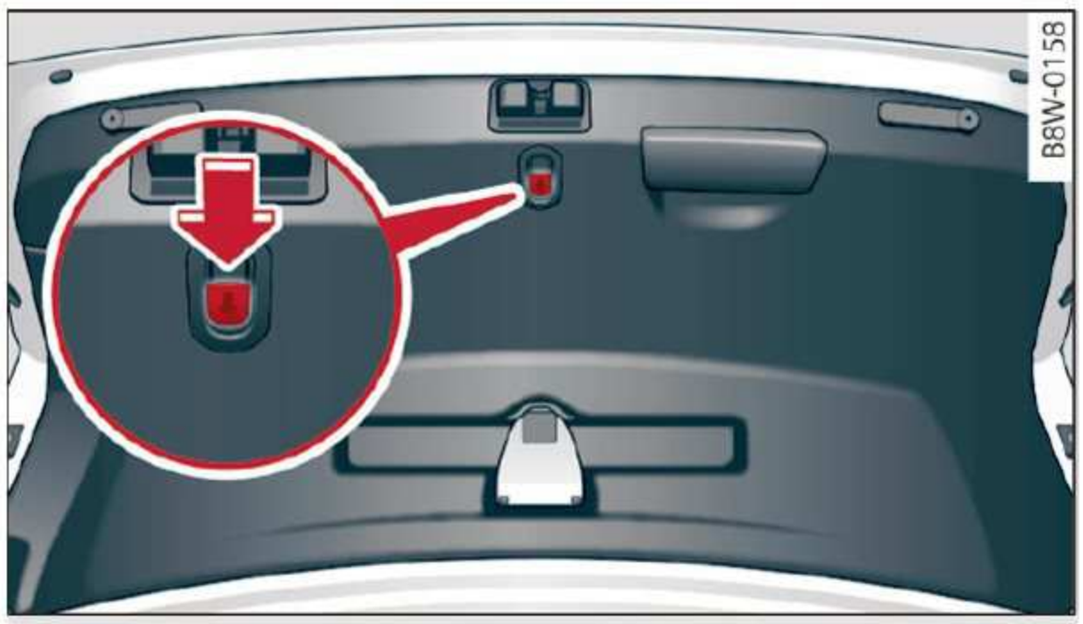


Fig. 30 Luggage compartment: Trunk escape latch

► Push the latch in the direction of the arrow until the lock releases. ▶

1) The closing function applies to vehicles that also have automatic luggage compartment lid operation.

The trunk escape latch inside the rear lid is made of fluorescent material to glow in the dark.

WARNING

The trunk escape latch is to be used only in an emergency.

Tips

The emergency release lever should *never* be used as a handle for closing the luggage compartment lid.

Mechanically unlocking the luggage compartment lid

Applies to: sedan

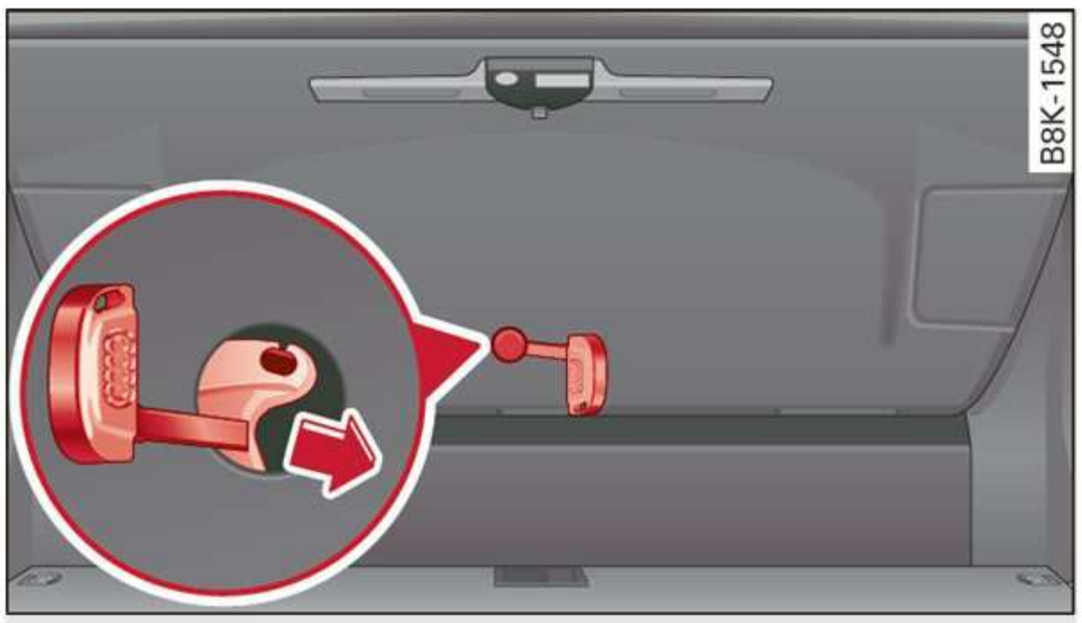


Fig. 31 Inner luggage compartment lid: access to the emergency release

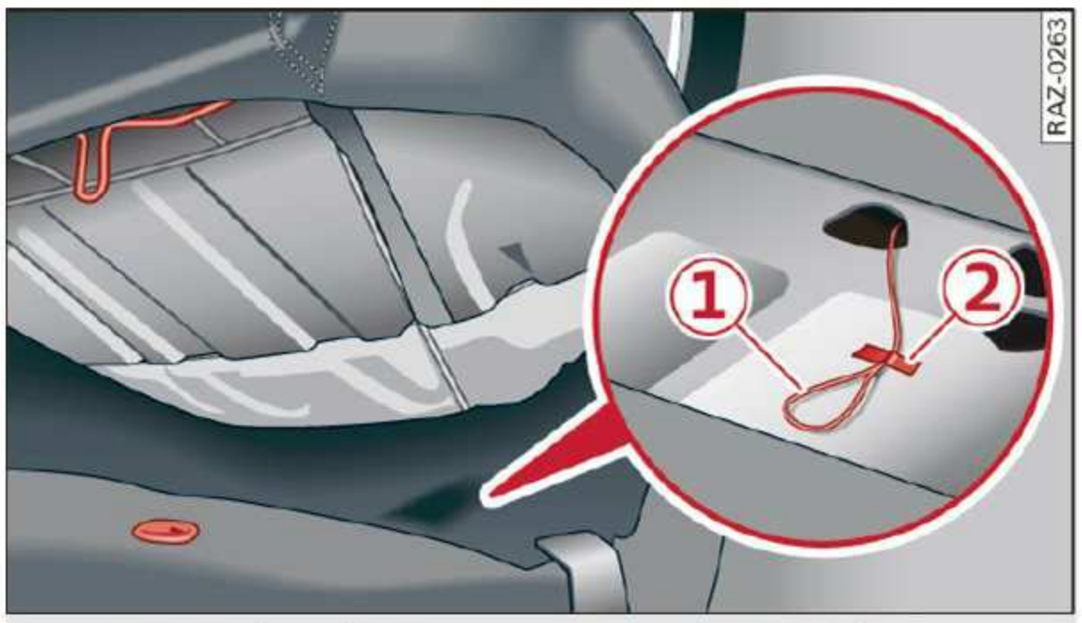


Fig. 32 Rear bench seat: emergency release cable

The rear lid can be opened from the luggage compartment or from the rear bench seat using the emergency release.

Folding rear seat backrest

- ▸ Remove the mechanical key ⇨ *page 30*.
- ▸ Using the emergency key, pry off the cover in the luggage compartment lid trim panel ⇨ *fig. 31*.
- ▸ Press the lever with the mechanical key in the direction of the arrow to release the luggage compartment lid.

Fixed rear seat backrest

- ▸ Carefully pull the left side of the rear bench seat out of its mount until you can reach the release cable ⇨ *fig. 32*.
- ▸ Remove the Velcro® tape (2).
- ▸ Pull on the loop (1) until the luggage compartment lid releases.
- ▸ Tape the release cable back in place and press the bench seat back into its retainer.

WARNING

After opening the luggage compartment lid using the emergency release in vehicles with a fixed rear seat backrest, make sure the bracket under the rear bench seat locks securely into the mounting eyelet again.

Mechanically unlocking the luggage compartment lid

Applies to: allroad

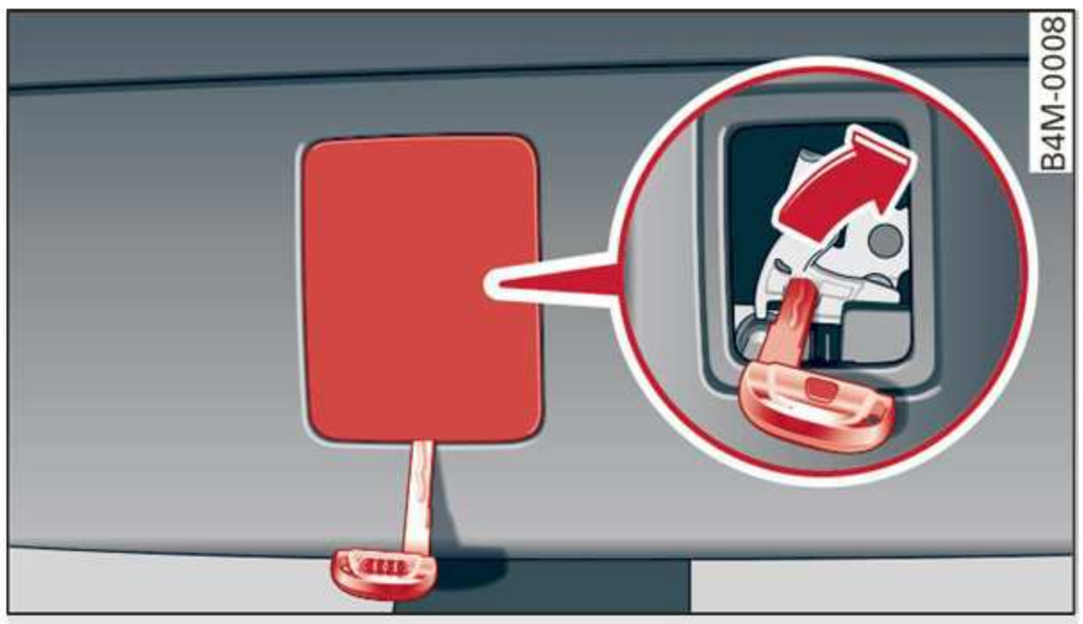


Fig. 33 Inner luggage compartment lid: access to the emergency release

- ▸ Remove the mechanical key ⇨ *page 30*.
- ▸ Pry out the cover using the mechanical key ⇨ *fig. 33*.
- ▸ Press the lever with the mechanical key in the direction of the arrow to release the luggage compartment lid.

Child safety lock

The child safety lock prevents the rear doors from being opened from the inside and the rear power windows from being operated.

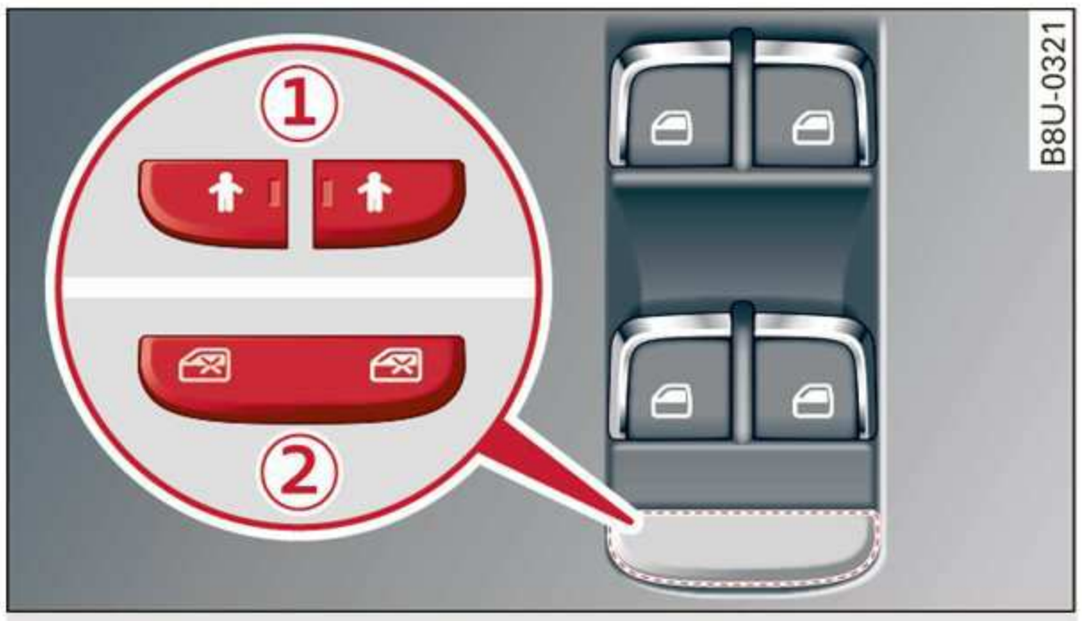


Fig. 34 Section of driver's door: controls



Fig. 35
-Applies to: vehicles with manual child safety locks:-Rear door: manual child safety lock

Vehicles with button

Applies to: vehicles with power child safety locks

- To activate and deactivate the child safety lock (door handle and power window switch) for the a rear door, press the left or right button in the driver's door (1) that corresponds to that rear door ⇨ *fig. 34*. The indicator light in the button turns on/blinks.
- Make sure the child safety lock is working by checking the function on the rear power window switch and door handle.

Vehicles with button

Applies to: vehicles with manual child safety lock

- To activate or deactivate the child safety lock for the power window switch in the rear doors, press the button in the driver's door (2) ⇨ *fig. 34*. The indicator light in the button turns on/blinks.
- To activate or deactivate the manual child safety lock for the rear door handle, open the respective rear door and turn the key switch with the mechanical key in the direction of the arrow or opposite the direction of the arrow ⇨ *fig. 35*. This will disable the function of the rear door handle.
- Make sure the child safety lock is working by checking the function on the rear power window switch and door handle.

It is not possible to operate the rear climate control system* when the child safety lock is switched on. The **SET REAR** function allows you to apply all settings to the rear using the climate control system controls in the cockpit ⇨ *page 73*.

Message in the instrument cluster display

Childproof catch: malfunction! Please contact Service

There is a malfunction in the child safety lock. Press the / button again.

If the message stays on, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

WARNING

- If you leave the vehicle, switch the ignition off and take the vehicle key with you. This applies particularly when children remain in the vehicle. Otherwise children could start the engine or operate electrical equipment (such as power windows), which increases the risk of an accident.
- A malfunction in the child safety lock could allow the rear doors to be opened from the inside, which increases the risk of an accident.

Power windows

Controls

The driver can control all power windows.

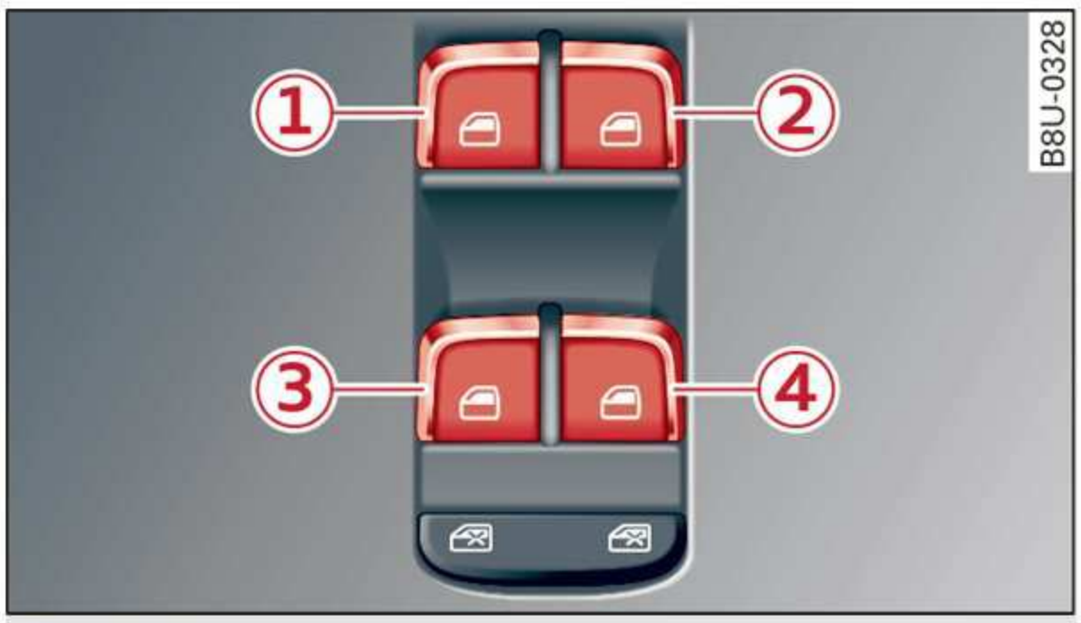


Fig. 36 Driver's door: power window controls

All power window switches are equipped with a two-stage function:

Opening and closing the windows

- ► To open or close the window completely, press the switch down or pull the switch up briefly to the second level. The operation will stop if the switch is pressed or pulled again.
- ► To select a position in between opened and closed, press or pull the switch to the first level until the desired window position is reached.

Power window switches

① Left front door
② Right front door
③ Left rear door
④ Right rear door

WARNING

– If you leave the vehicle, switch the ignition off and take the vehicle key with you. This applies particularly when children remain in the vehicle. Otherwise children could start the engine or operate electrical equipment (such as power windows), which increases the risk of an accident. The power windows continue to function until the driver's door or front passenger's door has been opened.
– Pay careful attention when closing the windows. Pinching could cause serious injuries.
– When locking the vehicle from outside, the vehicle must be unoccupied since the windows can no longer be opened in an emergency.

Tips

You can still open and close the windows for approximately 10 minutes after turning the ignition off. The power windows do not switch off until the driver's door or front passenger's door has been opened.

Convenience opening and closing

Applies to: vehicles with convenience key

All of the windows and the roof can be opened/closed at the same time.*

Convenience opening feature

- ► Press and hold the button on the vehicle key until all of the windows reach the desired position and the roof* is tilted open.

Convenience closing feature

- ► Press the button on the vehicle key until all windows and the roof* are closed ⇨ ⚠, or
- ► Touch the sensor* on the door handle until all of the windows and the roof* are closed. Do not place your hand in the door handle when doing this.

When all of the windows and the roof* are closed, the turn signals will flash once.

Setting convenience opening in the Infotainment system

- ► Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Vehicle settings** > **Central locking** > **Long press to open windows**.

WARNING

– Never close the windows or the roof* carelessly or in an uncontrolled manner, because this increases the risk of injury.
– For security reasons, the windows and the roof* can only be opened and closed with the vehicle key at a maximum distance of approximately 6.5 feet (2 m) away from the vehicle. Always pay attention when using the button to close the windows and the ▶

roof* so that no one is pinched. The closing process will stop immediately when the button is released.

Tips

Applies to: vehicles with panoramic glass roof: The power sunshade also opens or closes when opening or closing the roof.

Correcting power window malfunctions

You can reactivate the one-touch up/down function if it malfunctions.

- ▸ Pull the power window switch up until the window is completely raised.
- ▸ Release the switch and pull it up again for at least one second.

Sliding/tilting sunroof

Operation

Applies to: vehicles with sliding/tilting sunroof

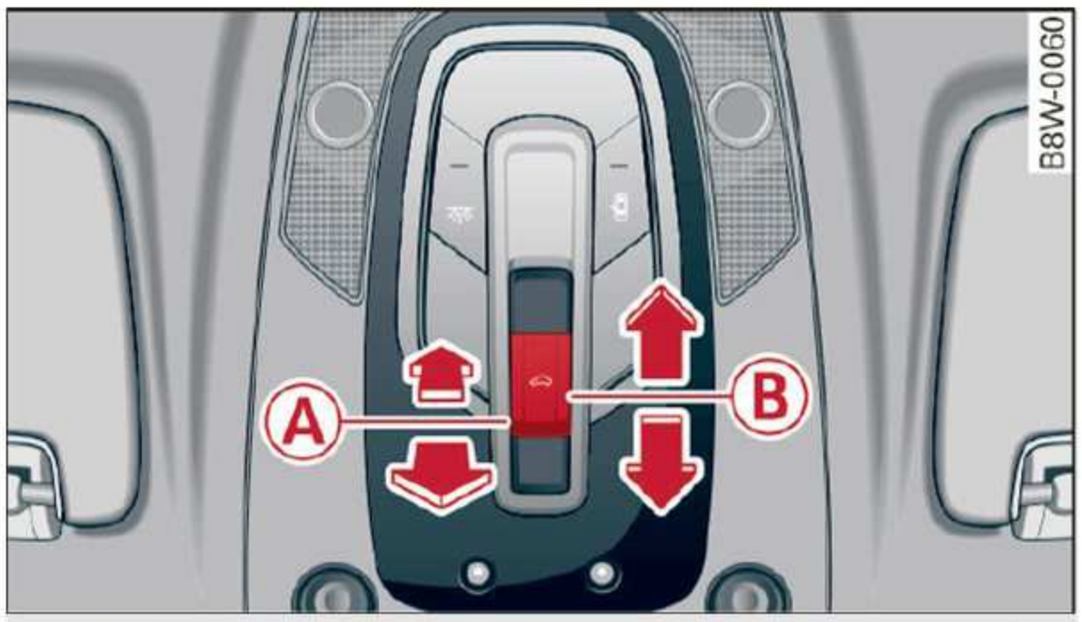


Fig. 37 Section of front headliner: sliding/tilting sunroof button

Ⓐ Tilting and closing the roof

- ▸ To tilt the sunroof completely open, press the button up briefly to the second level.
- ▸ To close the sunroof completely, pull the button down briefly to the second level ⇨ ⚠.
- ▸ To set a partially open position, press or pull the button to the first level until the roof reaches the desired position.

Ⓑ Opening and closing the roof

- ▸ To open the sunroof completely, push the button back briefly to the second level.
- ▸ To close the sunroof completely, push the button forward briefly to the second level ⇨ ⚠.
- ▸ To select a partially open position, push the button forward or back to the first level until the desired position is reached.

The sunshade can be opened and closed manually in any position. The sunshade opens automatically when the roof is opened.

WARNING

To reduce the risk of injury, always pay attention when closing the sliding/tilting sunroof. Always switch the ignition off when leaving the vehicle and always take the vehicle key with you.

Note

Always close your sliding/tilting sunroof when leaving your vehicle. Rain can cause damage to the interior equipment of your vehicle, particularly the electronic equipment.

Tips

- For information about convenience opening and closing, see ⇨ *page 41*.
- You can still operate the sliding/tilting sunroof for about 10 minutes after the ignition is switched off. The switch is deactivated once the driver's or front passenger's door is opened.
- The sunroof will only open down to -20 °C (-4 °F).

Sliding/tilting sunroof emergency closing

Applies to: vehicles with sliding/tilting sunroof

If an object is detected when closing, the roof will open again automatically. In this case, you can then close it with the power emergency closing function.

- ▸ Within five seconds after the sunroof opens automatically, pull the applicable button until the roof is closed.

Panoramic glass roof

Opening and closing the panoramic glass roof and sunshade

Applies to: vehicles with panoramic glass roof

The front segment can tilt and slide open.

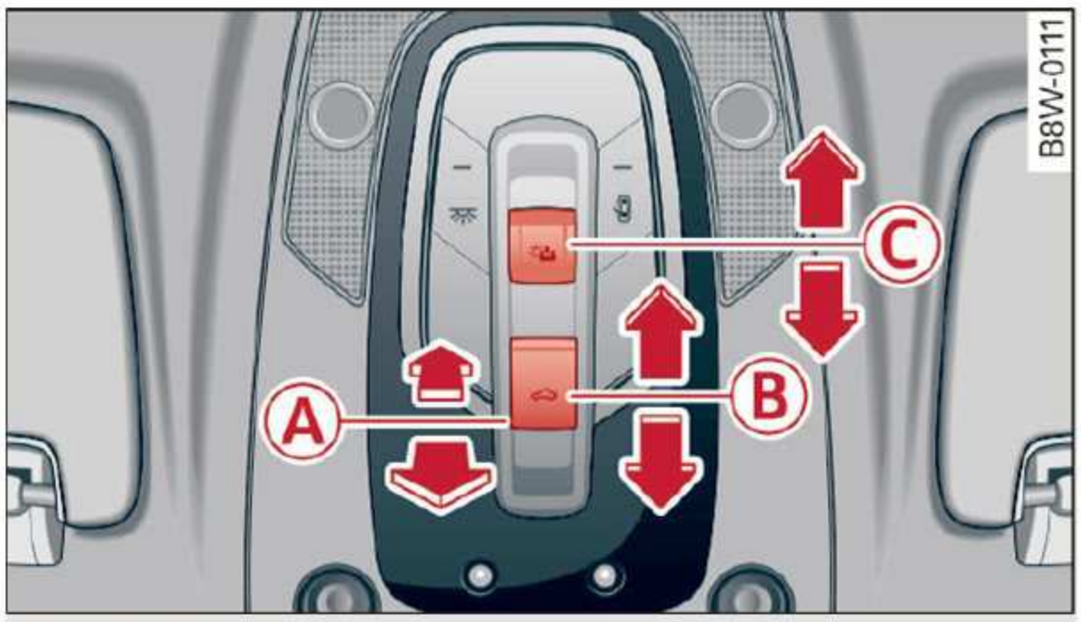


Fig. 38 Section of the front headliner: panoramic glass roof button

Ⓐ Tilting and closing the roof

- ▸ To tilt the sunroof completely open, press the button up briefly to the second level.
- ▸ To close the sunroof completely, pull the button down briefly to the second level ⇨ ⚠.
- ▸ To set a partially open position, press or pull the button to the first level until the roof reaches the desired position.

Ⓑ Opening and closing the roof

- ▸ To open the sunroof completely, push the button back briefly to the second level.
- ▸ To close the sunroof completely, push the button forward briefly to the second level ⇨ ⚠.
- ▸ To select a partially open position, push the button forward or back to the first level until the desired position is reached.

Ⓒ Opening and closing the sunshade

- ▸ To open the sunshade completely, slide the switch back briefly to the second level.
- ▸ To close the sunshade completely, slide the switch forward briefly to the second level.
- ▸ To select a partially open position, slide the switch to the first level until the sunshade reaches the desired position.

⚠ WARNING

To reduce the risk of injury, always pay attention when closing the panoramic glass roof. Always switch the ignition off when leaving the vehicle and always take the vehicle key with you.

Note

Always close the panoramic glass roof when leaving your vehicle. Rain can cause damage to the interior equipment of your vehicle, particularly the electronic equipment.

Tips

- For information about convenience opening and closing, see ⇨ *page 41*.
- You can still operate the panoramic glass roof for about 10 minutes after the ignition is switched off. The switch is deactivated once the driver's or front passenger's door is opened.
- The panoramic glass roof will only open at temperatures down to -4°F (-20°).

Panoramic glass roof emergency closing

Applies to: vehicles with panoramic glass roof

If an object is detected when closing, the roof will open again automatically. In this case, you can then close it with the power emergency closing function.

- ▸ Within five seconds after the sunroof opens automatically, pull the applicable button until the roof is closed.

Valet parking

Applies to: vehicles with valet parking function

The valet parking function can protect the luggage compartment from unauthorized access.

The VALET button for valet parking is in the glove compartment. ▶

You can switch the valet parking function on, for example when someone else is parking your vehicle [1]. The vehicle can be driven, locked, and unlocked using the vehicle key, but access to the luggage compartment is blocked.

- ▸ Remove the mechanical key ⇨ *page 30*.
- ▸ Press the VALET button in the glove compartment. The LED in the button turns on if the function is switched on.
- ▸ Lock the glove compartment with the mechanical key.
- ▸ Applies to: vehicles with lockable pass-through and lockable rear seat backrests: To secure the luggage compartment from the vehicle interior, lock the pass-through and the rear seat backrests using the mechanical key ⇨ *page 69* or ⇨ *page 66*.
- ▸ Give your vehicle key to the service personnel who are parking your vehicle and keep the mechanical key.

The following buttons are deactivated when the valet parking function is switched on:

– 🚗* button in the driver's door
– 🚗 button on the vehicle key
– Handle in the luggage compartment lid

If the valet parking function is switched on, a message will appear every time the ignition is switched on.

Tips

Please note that the luggage compartment can still be accessed from the vehicle interior in vehicles with fixed rear seat backrests or ones that cannot be locked, even when the valet parking function is switched on.

Garage door opener

Description

Applies to: vehicles with garage door opener



Fig. 39 Garage door opener: examples of usage for different systems

With the garage door opener, you can activate systems such as the garage doors, security systems or house lights from inside your vehicle. Three buttons are integrated in the headliner that can be programmed to up to three remote controls.

To be able to operate systems using the garage door opener, the buttons in the headliner must first be programmed.

WARNING

When operating or programming the garage door opener, make sure that no people or objects are in the area immediately surrounding the equipment. People can be injured or property can be damaged if struck when closing.

Tips

– For security reasons, we recommend that you clear the programmed buttons before selling the vehicle.
– For additional information about HomeLink, visit www.homelink.com.
– For an explanation on conformity with the FCC regulations in the United States and the Industry Canada regulations, see ⇨ *page 370*.

[1] This function is not available in all countries.

Operating

Applies to: vehicles with garage door opener

Requirements: the button in the headliner must be programmed ⇨ *page 45* and the vehicle must be within range of the system, such as the garage door.

- ► Press the button to open the garage door. The LED Ⓐ ⇨ *page 45, fig. 40* blinks or turns on.
- ► Press the button again to open the garage door.

Tips

When opening or closing the garage door, do not press and hold the button longer ten seconds or the garage door opener will switch to programming mode.

Programming buttons

Applies to: vehicles with garage door opener

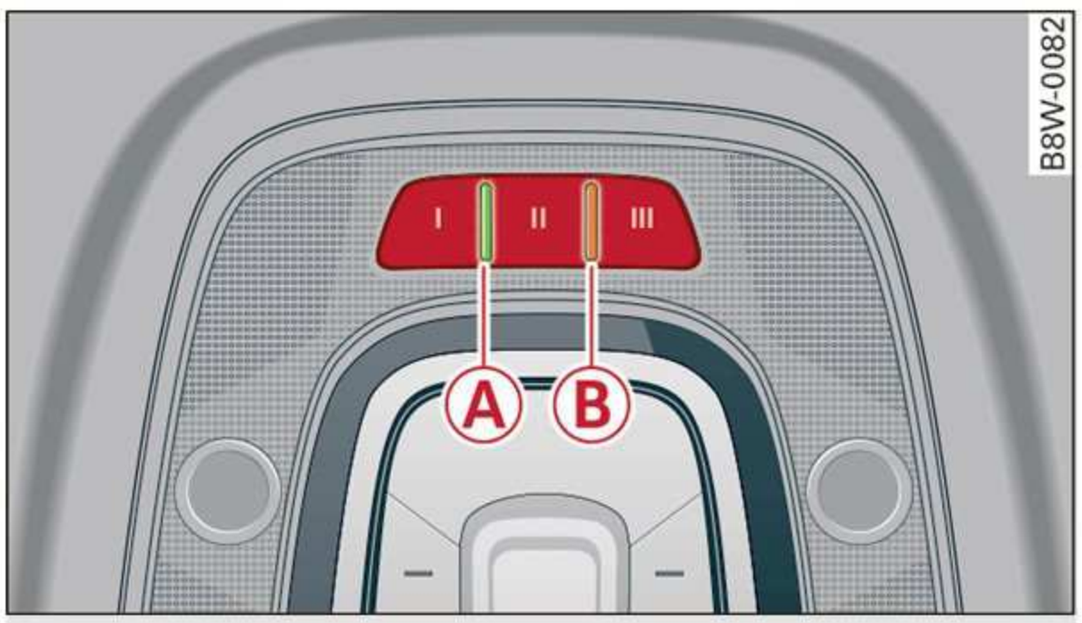


Fig. 40 Headliner: controls

You can program both fixed code and rolling code systems using this procedure.

Programming/reprogramming buttons

Requirement: the vehicle must be in range of the system, such as the garage door, that you would like to program.

- ► Switch the ignition on.
- ► Press and hold the button in the headliner that you would like to program for at least two seconds. Or
- ► Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Vehicle settings** > **Garage door opener** > **Program garage door opener** > **Program button I/Program button II/Program button III** (reprogram). The yellow LED Ⓑ blinks.
- ► Follow the instructions in the Infotainment system.

Synchronizing a button[1)]

Requirement: the button must already be programmed and must be synchronized with the system that you would like to program.

- ► Switch the ignition on.
- ► Press the button in the headliner that you would like to synchronize.
- ► Follow the instructions in the Infotainment system.

Deleting button programming

The programmed buttons cannot be deleted individually. They must be deleted all at once. Reprogram the buttons if necessary.

- ► Switch the ignition on.
- ► Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Vehicle settings** > **Garage door opener** > **Delete button programming** > **Yes, delete now**.

Displaying the version/status/country code

- ► Select in the Infotainment system: MENU button > **Vehicle** > left control button >**Vehicle settings** > **Garage door opener** > **Version information**.

Tips

– The garage door opener may need to be synchronized with the system motor after the programming. Follow the manufacturer's instructions for doing this.
– The programming process can take up to 30 seconds. The hand transmitter may need to be operated again during the process.
– Make sure the batteries in the hand transmitter are charged before starting the programming process.
– In some cases, the system must be programmed using an alternative mode. Select in the Infotainment system: MENU >

1) Only applies to rolling code systems

Vehicle > left control button > **Vehicle settings** > **Garage door opener** > **Program garage door opener** > right control button > **UR-Mode/D-Mode**.

Lights and Vision

Exterior lighting

Switching the lights on and off



Fig. 41 Instrument panel: light switch with button

Light switch

Turn the light switch to the corresponding position when the ignition is switched on. and the selected position turn on (except position 0).

0 - The daytime running lights automatically turn on. In vehicles for certain markets, you can switch the automatic daytime running lights on and off in the Infotainment* system.

AUTO - The headlights automatically adapt to the surrounding brightness.

- Parking lights

- Low beam headlights

Button

When you turn the light switch to the AUTO or low beam headlight position , you can activate the following functions:

- All-weather lights. The headlights automatically adjust so that there will be less glare, for example when the road surface is wet.

Automatic headlight range control system

Your vehicle is equipped with an automatic headlight range control system that reduces glare for oncoming traffic if the vehicle load changes. The headlight range adjusts automatically.

Audi adaptive light

Applies to: vehicles with adaptive light

Adaptive light provides better visibility when it is dark by adapting the lights to the road conditions based on speed, such as on expressways, rural roads, at intersections, and in curves. The adaptive light only functions when the light switch is in the AUTO position.

WARNING

Automatic headlights* are only intended to assist the driver. They do not relieve the driver of responsibility to check the headlights and to turn them on manually based on the current light and visibility conditions. For example, fog cannot be detected by the light sensors. So always switch on the low beams under these weather conditions and when driving in the dark .

Tips

- If the vehicle battery has been discharging for a while, the parking light may switch off automatically. Avoid using the parking lights for several hours.
- Follow the regulations applicable to the country where you are operating the vehicle when stopping the vehicle and when using the lighting systems.
- The light sensor for the automatic headlights* is in the rearview mirror mount. Do not place any stickers in this area on the windshield.
- A warning tone will sound if you open the door when the exterior lights are switched on.
- Only the front headlights turn on when the daytime running lights are switched on*. In vehicles in certain markets, the tail lights will also turn on.
- In cool or damp weather, the inside of the headlights, turn signals, and tail lights can fog over due to the temperature difference between the inside and outside. They will clear shortly after switching them on. This does not affect the service life of the lighting.

8W0012721BG

Turn signal and high beam lever

The lever operates the turn signals, the high beams and the headlight flasher.

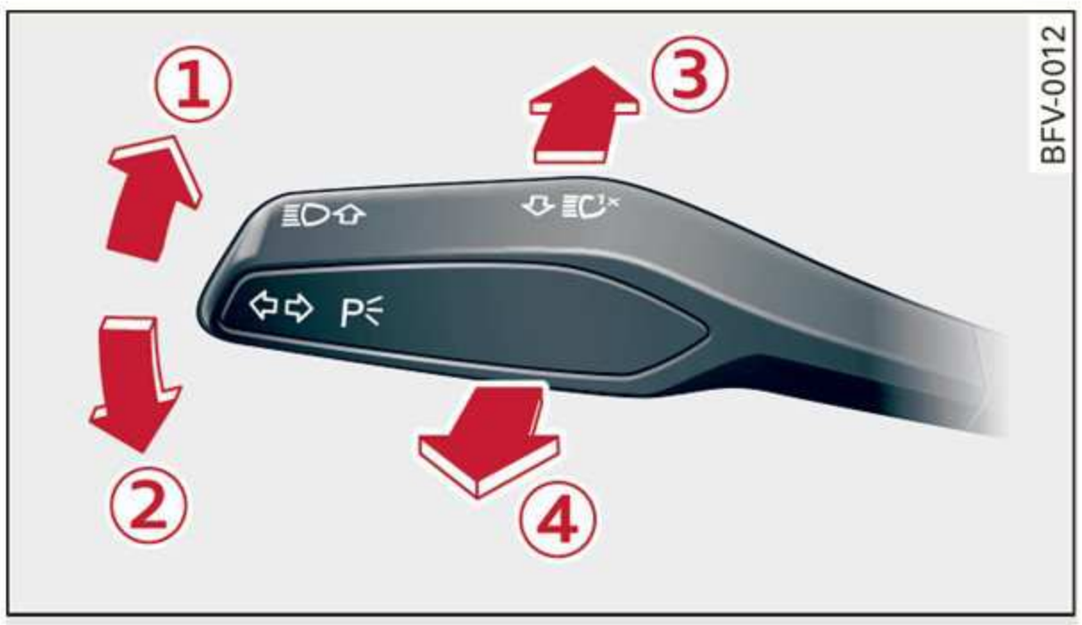


Fig. 42 Turn signal and high beam lever

Turn signals ⇦ ⇨

The turn signals activate when you move the lever into a turn signal position when the ignition is switched on.

① - Right turn signal

② - Left turn signal

The turn signal will blink three times if you just tap the lever.

High beams and headlight flasher

Move the lever to the corresponding position:

③ - High beams on (vehicles with high beam assistant*) ⇨ *page 48*

④ - High beams off or headlight flasher

The indicator light in the instrument cluster will turn on.

WARNING

High beams can cause glare for other drivers, which increases the risk of an accident. For this reason, only use the high beams or the headlight flasher when they will not create glare for other drivers.

High beam assistant

Applies to: vehicles with high beam assistant

The high beam assistant automatically turns the high beams on or off depending on the surrounding conditions.

A camera on the rearview mirror mount can detect light sources from other road users. The high beams switch on or off automatically depending on the position of vehicles driving ahead and oncoming vehicles, the vehicle speed, and other environmental and traffic conditions.

Activating high beam assistant

Requirement: the light switch must be set to the AUTO position and the high beam assistant must be switched on in the Infotainment system ⇨ *page 49*.

- ▸ To activate the high beam assistant, tap the lever forward ③ ⇨ *page 48, fig. 42*. The AUTO indicator light appears in the instrument cluster display and the high beams are switched on/off automatically. If the high beams were completely or partially switched on, the AUTO indicator light will turn on.

Switching the high beams on or off manually

If the high beams did not switch on or off automatically as expected, you may switch them on or off manually instead:

- ▸ To switch the high beams on manually, tap the lever forward ③ ⇨ *page 48, fig. 42*. The indicator light turns on.
- ▸ To switch the high beams off manually, pull the lever back ④ ⇨ *page 48, fig. 42*. The high beam assistant is deactivated.

Operating the headlight flasher

- ▸ To operate the headlight flasher when the high beam assistant is activated and high beams are switched off, pull the lever back ④ ⇨ *page 48, fig. 42*. The high beam assistant remains active.

Messages in the instrument cluster display

Audi adaptive light: malfunction! See owner's manual ▶

Headlight assistant: malfunction! See owner's manual

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected. You can still switch the high beams on or off manually.

Headlight assistant: currently unavailable. Camera view restricted due to surroundings. See owner's manual

The camera view is blocked, for example by a sticker or debris.

The sensor is located between the interior rear-view mirror and the windshield. Do not place any stickers in this area on the windshield.

WARNING

High beam assistant is only intended to assist the driver. The driver is still responsible for controlling the headlights and may need to switch them on and off manually depending on light and visibility conditions. It may be necessary to operate them manually in situations such as:

- In adverse weather conditions such as fog, heavy rain, blowing snow or spraying water.
- On roads where oncoming traffic may be partially obscured, such as expressways.
- When there are road users that do not have sufficient lighting, such as bicyclers or vehicles with dirty tail lamps.
- In tight curves and on steep hills.
- In poorly lit areas.
- With strong reflectors, such as signs.
- If the area of the windshield near the sensor is fogged over, dirty, icy or covered with a sticker.

Adjusting the exterior lighting

The functions are adjusted in the Infotainment system.

- Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Vehicle settings** > **Exterior lighting**.

Automatic headlights

You can adjust the following settings in the **Automatic headlights** menu:

Activation time - you can adjust if the headlights switch on **Early**, **Medium** or **Late** according to the sensitivity of the light sensor.

Headlight assistant* - you can switch the high beam assistant* on and off.

Entry/exit lighting

When it is dark, the **Entry/exit lighting** illuminates the area around the vehicle when unlocking the vehicle and after switching off the ignition and opening the driver's door.

The **Entry/exit lighting** only works when it is dark and the light switch is in the **AUTO** position.

Daytime running lights

USA models: the daytime running lights can be switched on/off. Select **On** or **Off**.

Canada models: this function cannot be switched off. They activate automatically each time the ignition is switched on.

Emergency flashers



Fig. 43 Center console: emergency flasher button

The emergency flashers makes other drivers aware of your vehicle in dangerous situations.

- Press the ⚠ button to switch the emergency flashers on or off.

You can indicate a lane change or a turn when the emergency flashers are switched on by using the turn signal lever. The emergency flashers stop temporarily. ▶

The emergency flashers also work when the ignition is turned off.

Tips

You should switch the emergency flashers on if:

– you are the last car in a traffic jam so that all other vehicles approaching from behind can see your vehicle
– your vehicle has broken down or you are having an emergency
– your vehicle is being towed or if you are towing another vehicle

Interior lighting

Front interior lighting

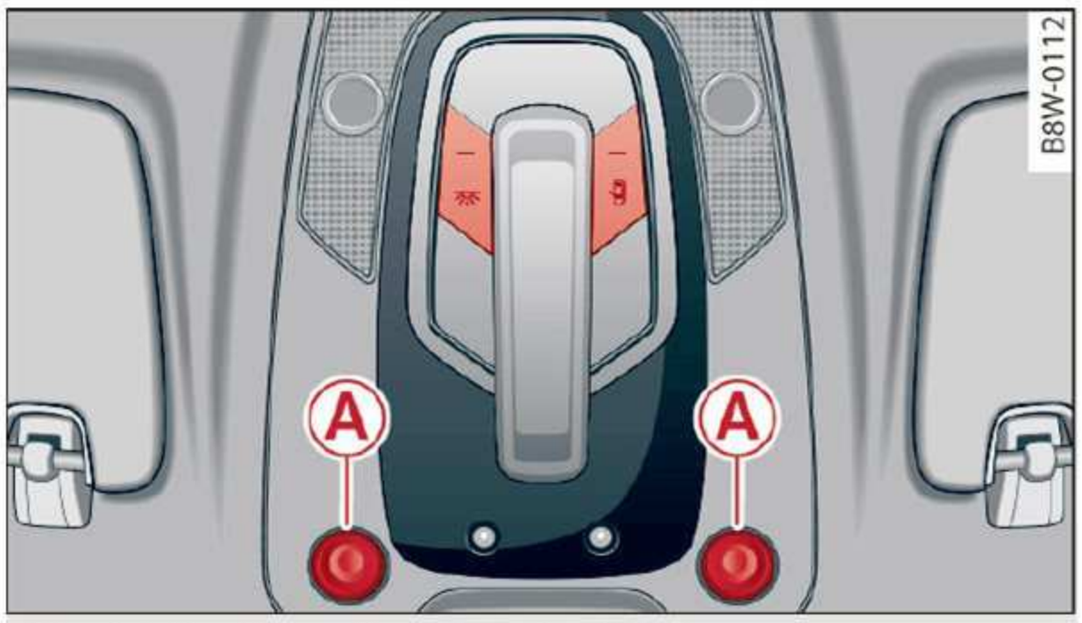


Fig. 44 Headliner: front interior lighting

Press the corresponding button ⇨ *fig. 44*:

- Door contact switch on/off. The interior lighting is controlled automatically.

- Interior lighting on/off

To turn a reading light on or off, touch the surface Ⓐ briefly. To activate the manual dimming function, touch the surface Ⓐ when the light is switched off and keep touching it until the desired brightness is reached.

Rear interior lighting

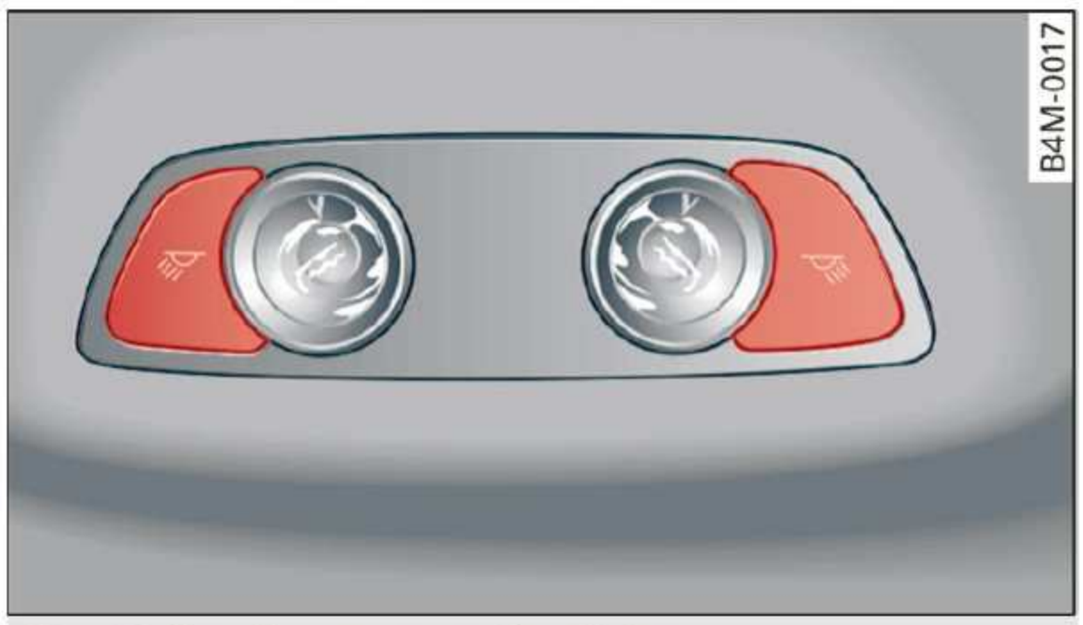


Fig. 45 Headliner: rear reading lights

- To turn a reading light on or off, press the button.
- To activate the manual dimming function*, touch the surface when the light is switched off and keep touching it until the desired brightness is reached.

Interior lighting

Applies to: vehicles with interior lighting

- Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Vehicle settings** > **Interior lighting**.

The interior lighting turns on when you switch the headlights on while the ignition is on.

Version 1

To adjust the brightness of individual zones, select **Front brightness***, **Door brightness** or **Footwell brightness**. Turn the control knob to the left or to the right. Press the control knob to confirm the brightness.

Version 2

Select and confirm one of the displayed profiles by pressing the control knob.

Individual: you can customize the brightness and color of individual zones. Press the right control button. Press the control knob again to confirm the settings.

Audi drive select: the interior and contour lighting color changes depending on the driving mode selected in drive select* ⇨ *page 126*. ▶

Tips

The setting is automatically stored and assigned to the remote control key that is being used.

Instrument illumination

The brightness of the illumination for the instruments, display and head-up display can be adjusted.*



Fig. 46 Instrument illumination

- ▸ Press the knob to release it.
- ▸ Turn the knob toward "-" or "+" to reduce or increase the brightness.
- ▸ Press the knob again to return it to its original position.

Tips

Depending on vehicle equipment, the instrument illumination (needles and gauges) may turn on when the lights are off and the ignition is switched on. The illumination for the gauges reduces automatically and eventually turns off as brightness outside increases. This function reminds the driver to turn the low beams on at the appropriate time.

Vision

Adjusting exterior mirrors



Fig. 47 Driver's door: knob for the exterior mirrors

Turn the knob to the desired position:

0 - All adjustment functions are deactivated.

◁ / ▷ - Adjusts the left/right exterior mirror. Move the knob in the desired direction.

- Heats* the mirror glass depending on the outside temperature.

- Folds the exterior mirrors*. To fold the mirrors out, turn the knob to one of the other positions. In the Infotainment system, you can select if the mirrors fold in automatically when you lock the vehicle ⇨ *page 33*.

Front passenger's exterior mirror tilt function*

To help you see the curb when backing into a parking space, the surface of the mirror tilts slightly. For this to happen, the knob must be in the position for the front passenger's exterior mirror.

You can adjust the tilted mirror surface by turning the knob in the desired direction. When you move out of reverse and into another gear, the new mirror position is stored and assigned to the key you are using.

The mirror goes back into its original position once you drive forward faster than 9 mph (15 km/h) or turn the ignition off.

WARNING

Curved mirror surfaces (for example convex) enlarge the field of vision. However, they ▶

make objects in the mirror appear smaller and farther away. You may estimate incorrectly when you use these mirrors to gauge your distance from the vehicles behind you when changing lanes, which increases the risk of an accident.

Note

– Applies to: vehicles with power folding exterior mirrors: If the mirror housing was moved by outside forces (such as an impact when maneuvering), you must use the power folding function to fold the mirror all the way out. The mirrors will make a loud noise when they latch into place. The mirror housing must not be moved back into place by hand because this could impair the function of the mirror mechanism.
– Applies to: vehicles without power folding exterior mirrors: If the mirror housing was moved by outside forces (such as an impact when maneuvering), you must move it back in place by hand.
– If you wash the vehicle in an automatic car wash, you must fold the exterior mirrors in to reduce the risk of damage to the mirrors. Never fold power folding exterior mirrors* by hand. Only fold them in and out using the power controls.

Tips

– If the power adjusting function malfunctions, the glass in both mirrors can be adjusted by pressing on the edge of it by hand.
– The exterior mirror settings are stored with the memory function* ⇨ *page 60*.

Dimming the mirrors

Your vehicle is equipped with a manual or automatic dimming rearview mirror.*

Manual dimming rearview mirror

► Pull the lever on the bottom of the mirror back.

Automatic dimming rearview mirror*

► The interior and exterior mirrors dim automatically when light shines on them, for example from headlights on a vehicle behind you.

WARNING

If the glass on an automatic dimming mirror breaks, electrolyte can leak out. This liquid can irritate the skin, eyes and respiratory system. If there is contact with the fluid, flush immediately with plenty of water. Consult a physician if necessary.
– Repeated or long-term exposure to electrolyte fluid can lead to irritation of the airways, especially in people with asthma or other respiratory conditions. Take deep breaths immediately after leaving the vehicle or, if this is not possible, open all of the doors and windows as wide as possible.
– If electrolyte fluid enters the eyes, flush them thoroughly with a large amount of clean water for at least 15 minutes and then seek medical attention.
– If electrolyte fluid comes into contact with the skin, flush the affected area with clean water for at least 15 minutes and then clean with soap and water and seek medical attention. Clean affected clothing and shoes thoroughly before wearing again.
– If the fluid was swallowed and the person is conscious, flush the mouth with water for at least 15 minutes. Do not induce vomiting unless this is recommended by medical professionals. Seek medical attention immediately.

Note

If the glass on an automatic dimming mirror breaks, electrolyte can leak out. This liquid damages plastic surfaces and paint. Clean this liquid as quickly as possible, for example with a wet sponge.

Tips

– If the light reaching the rearview mirror is obstructed, the automatic dimming mirror will not function correctly, ▶

– The automatic dimming mirrors do not dim when the interior lighting is turned on or the reverse gear is selected.

Sun visors

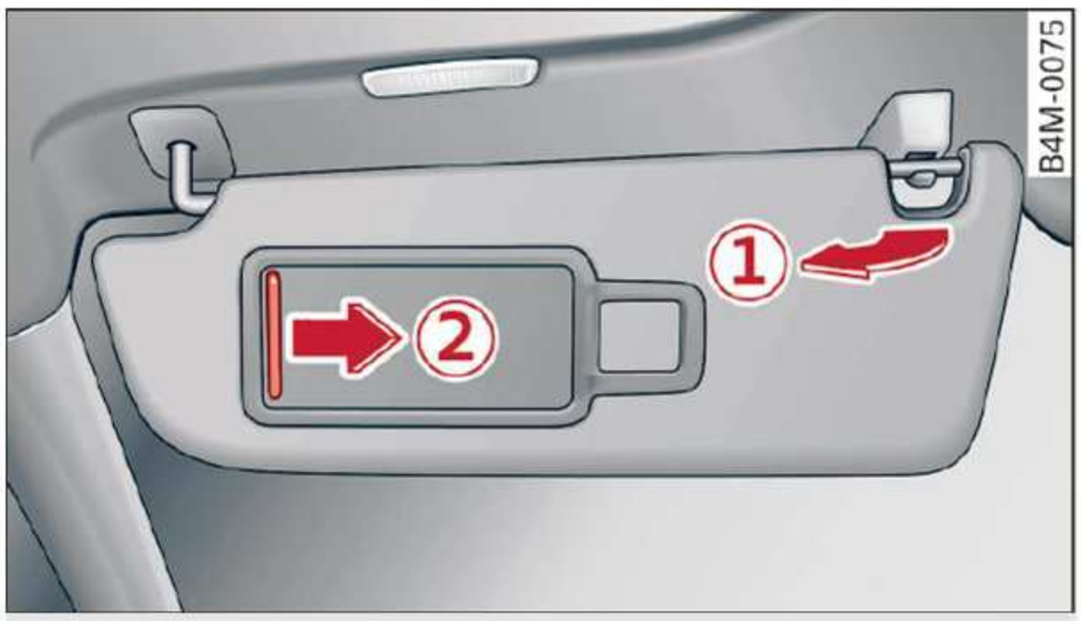


Fig. 48 Sun visor

Sun visor

The sun visors for the driver and front passenger can be released from their mounts and turned toward the doors ⇨ *fig. 48* ①.

They can also be moved back and forth lengthwise in this position.

Vanity mirror

The mirror lighting* switches on when the cover over the vanity mirror ② opens.

Sunshade

Applies to: vehicles with sunshade

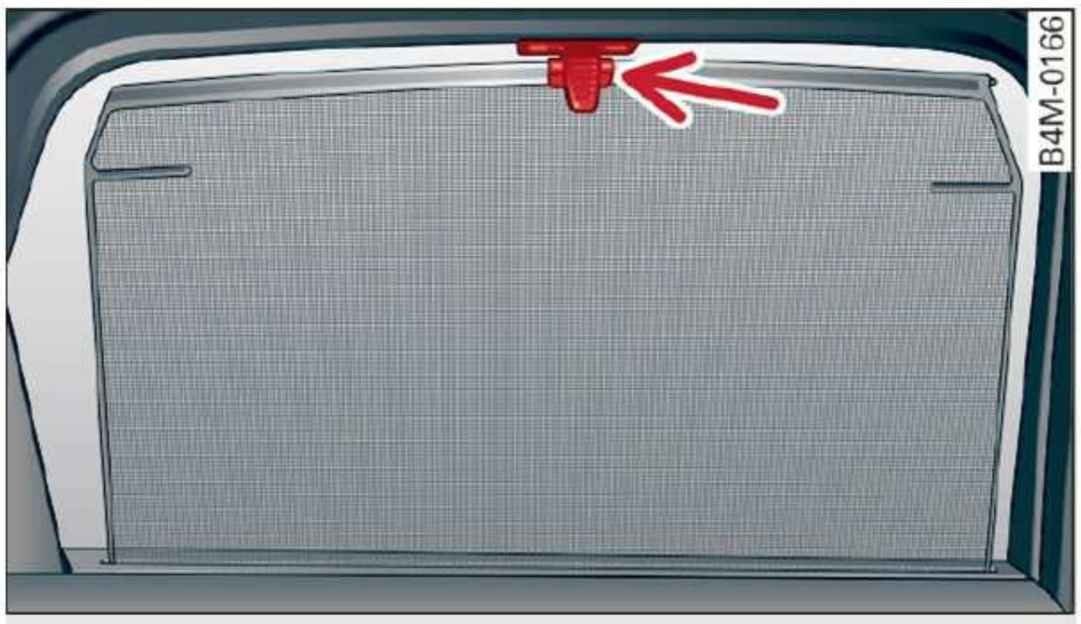


Fig. 49 Rear door: sunshade

Rear door sunshade

► Pull the sunshade out and attach it to the retainer on the upper door frame ⇨ *fig. 49*.

Windshield wipers

Switching the wipers on

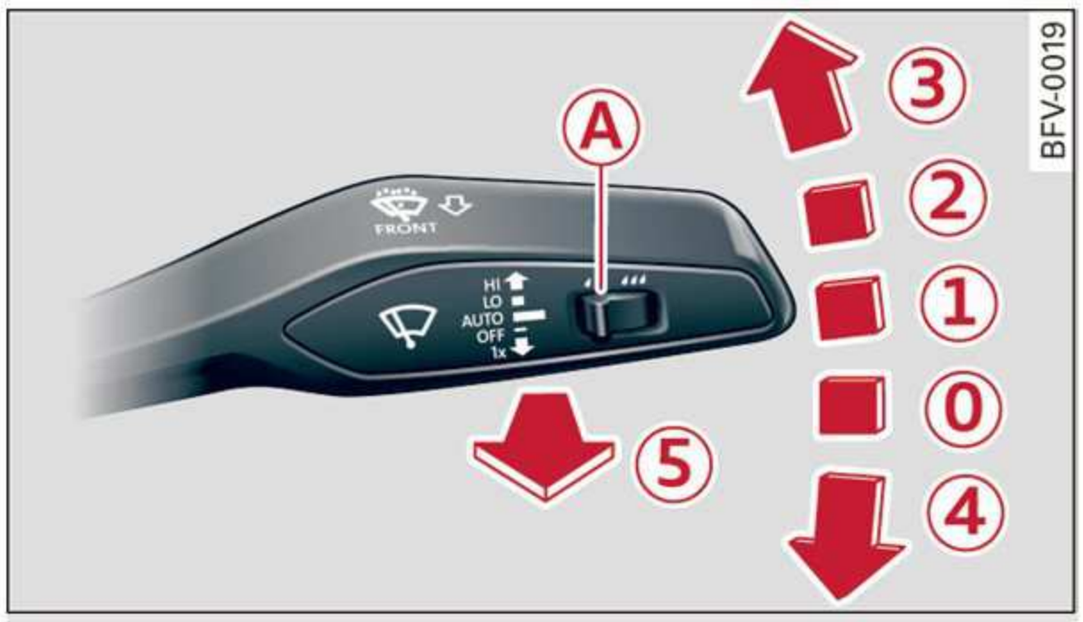


Fig. 50 Windshield wiper lever



Fig. 51 allroad: rear window wiper operation

Move the windshield wiper lever to the corresponding position:

⓪ - Windshield wipers off

① - Rain sensor mode. The windshield wipers switch on once the vehicle speed exceeds approximately 2 mph (4 km/h) and it is raining. The higher the sensitivity of the rain sensor that is set (switch Ⓐ to the right), the earlier the windshield wipers react to moisture on the windshield. You can deactivate the rain sensor mode in the Infotainment system, which switches the intermittent mode on. To do this, select: MENU button > **Vehicle** > left control button > **Driver assistance** > **Rain sensor**. In intermittent mode, you can adjust the interval time using the switch Ⓐ.

② - Slow wiping

③ - Fast wiping

④ - Single wipe. If you hold the lever in this position longer, the wipers switch from slow wiping to fast wiping. ▶

⑤ - Clean the windshield. The wipers wipe one time after several seconds of driving to remove water droplets. You can switch this function off by moving the lever to position ⑤ within 10 seconds of the afterwipe. The afterwipe function is reactivated the next time you switch the ignition on.

Clean the headlights*. The headlight washer system* operates only when the low beam headlights are on. If you move the lever into position ⑤, the headlights will be cleaned at fixed intervals.

Applies to: vehicles with rear window wiper: ⑥ - wiping the rear window. The number of wipes depends on the windshield wiper movement.

The rear wiper automatically switches on when the reverse gear is selected and the front windshield wipers are on and running.

Applies to: vehicles with rear window wiper: ⑦ - cleaning the rear window. The number of wipes depends on how long the lever is held in position ⑦. This may also clean the rearview camera, depending on the vehicle equipment.

WARNING

- The rain sensor is only intended to assist the driver. The driver may still be responsible for manually switching the wipers on based on visibility conditions.
- The windshield must not be treated with water-repelling windshield coating agents. Unfavorable conditions, such as wetness, darkness or low sun, can result in increased glare, which increases the risk of an accident. Wiper blade chatter is also possible.
- Properly functioning windshield wiper blades are required for a clear view and safe driving ⇨ *page 55, Replacing wiper blades*.

Note

- If there is frost, make sure the windshield wiper blades are not frozen to the windshield. Switching on the windshield wipers when the blades are frozen to the windshield can damage the wiper blades.
- The windshield wiper system must be switched off (lever in position 0) before using a car wash. This prevents the wipers from switching on unintentionally and causing damage to the windshield wiper system.

Tips

- The windshield wipers switch off when the ignition is switched off. You can activate the windshield wipers after the ignition is switched on again by moving the windshield wiper lever to any position.
- Worn or dirty windshield wiper blades result in streaking. This can affect the rain sensor function. Check your windshield wiper blades regularly.
- The washer fluid nozzles for the windshield washer system are heated when the ignition is on if the outside temperature is low.
- When stopping temporarily, such as at a traffic light, the speed of the windshield wipers automatically reduces by one level.

Cleaning the wiper blades

Clean the wiper blades when you see wiper streaks. Use a soft cloth and a glass cleaner.

Windshield wiper

▸ Place the windshield wiper arms in the service position ⇨ *page 55*.
▸ Fold the windshield wiper arms away from the windshield.

Rear window wiper

Applies to: allroad

▸ Fold the wiper arm away from the rear window.

WARNING

Dirty windshield wiper blades can impair vision, which increases the risk of an accident.

Replacing wiper blades

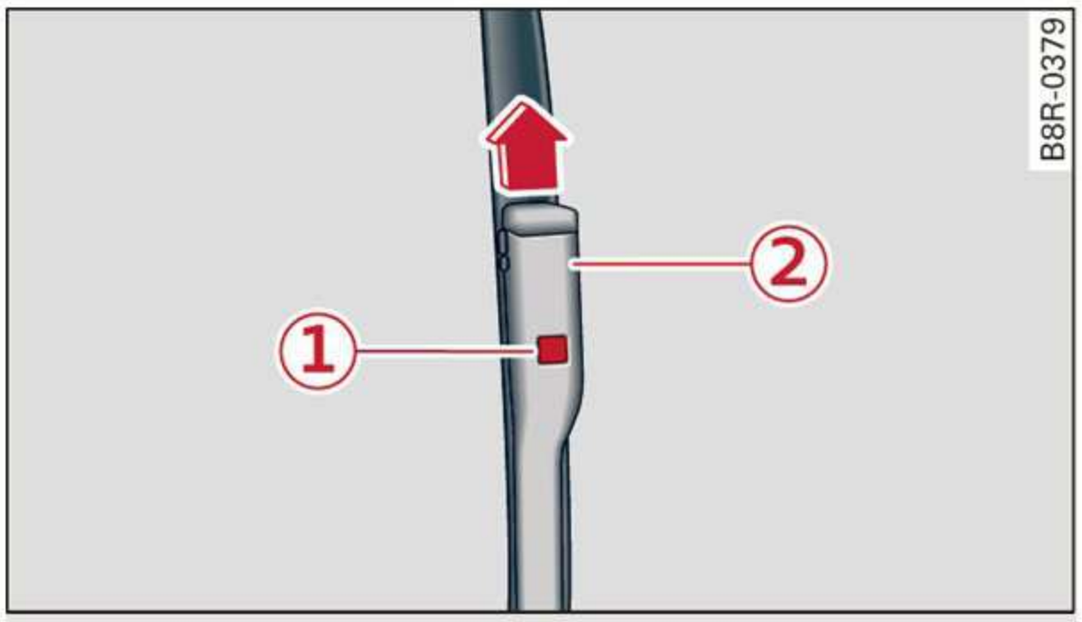


Fig. 52 Removing windshield wiper blades

Windshield wiper service position/blade replacement position

- ▸ Switch off the ignition and hold the windshield wiper lever in position ④ ⇨ *page 53, fig. 50* until the windshield wiper moves into the service position.
- ▸ To bring the windshield wipers back to the normal position, switch the ignition on and hold the windshield wiper lever in position ④ until the windshield wipers go back to the normal position, or drive faster than 8 mph (12 km/h).

You can also turn the service position on or off in the Infotainment system:

- ▸ Switch the windshield wipers off (position ⓪ ⇨ *page 53, fig. 50*).
- ▸ Select: MENU button > **Vehicle** > left control button > **Service & checks** > **Wiper change position**.

Removing the wiper blade

- ▸ Fold the windshield wiper arm away from the windshield.
- ▸ Press the locking knob ① ⇨ *fig. 52* on the wiper blade. Hold the wiper blade firmly.
- ▸ Remove the wiper blade in the direction of the arrow.

Installing the wiper blade

- ▸ Insert the new wiper blade into the mount on the wiper arm ② until it clicks into place.
- ▸ Place the wiper arm back on the windshield.
- ▸ Exit the service position.

WARNING

For safety reasons, the windshield wiper blades should be replaced once or twice each year.

Note

– Only fold the windshield wipers away when they are in the service position. Otherwise, you risk damaging the paint on the hood or the windshield wiper motor.

– You should not move your vehicle or operate the windshield wiper lever when the wiper arms are folded away from the windshield. The windshield wipers would move back into their original position and could damage the hood and windshield.

Tips

– You can also use the service position, for example, if you want to protect the windshield from icing by using a cover.

– You cannot activate the service position when the hood is open.

Replacing rear wiper blade

Applies to: vehicles with rear window wiper



Fig. 53 Rear window wiper: installing the wiper blade

Removing the wiper blade

- ▸ Fold the wiper arm away from the rear window.
- ▸ Remove the wiper blade from its holder.

Installing the wiper blade

- ▸ Press the wiper blade mount into the retainer.
- ▸ Fold the window wiper arm back onto the rear window. ▶

WARNING

For safety reasons, the windshield wiper blades should be replaced once or twice each year.

Digital compass

Switching the compass on and off

Applies to: vehicles with digital compass

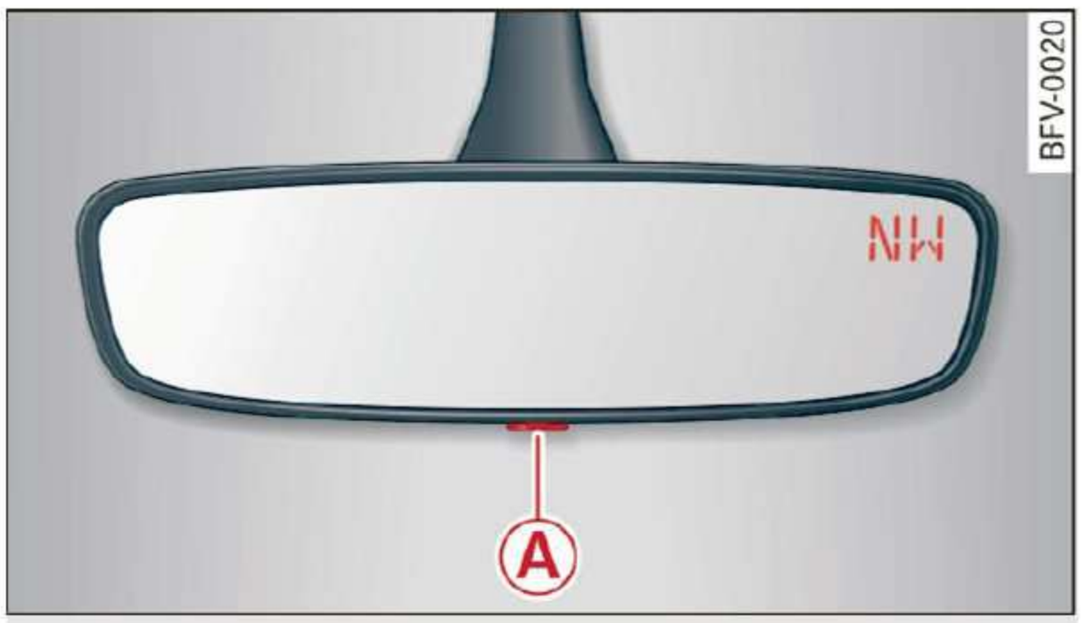


Fig. 54 Rearview mirror: digital compass is switched on

- To turn the compass on or off, press the button Ⓐ until the compass in the mirror appears or disappears.

The digital compass only works when the ignition is turned on. The directions are indicated with abbreviations: **N** (north), **NE** (northeast), **E** (east), **SE** (southeast), **S** (south), **SW** (southwest), **W** (west), **NW** (northwest).

Tips

To prevent inaccurate compass readings, do not bring any remote controls, electrical devices or metallic objects near the mirror.

Adjusting the magnetic zone

Applies to: vehicles with digital compass

The magnetic zone must be adjusted correctly for the compass to read accurately.

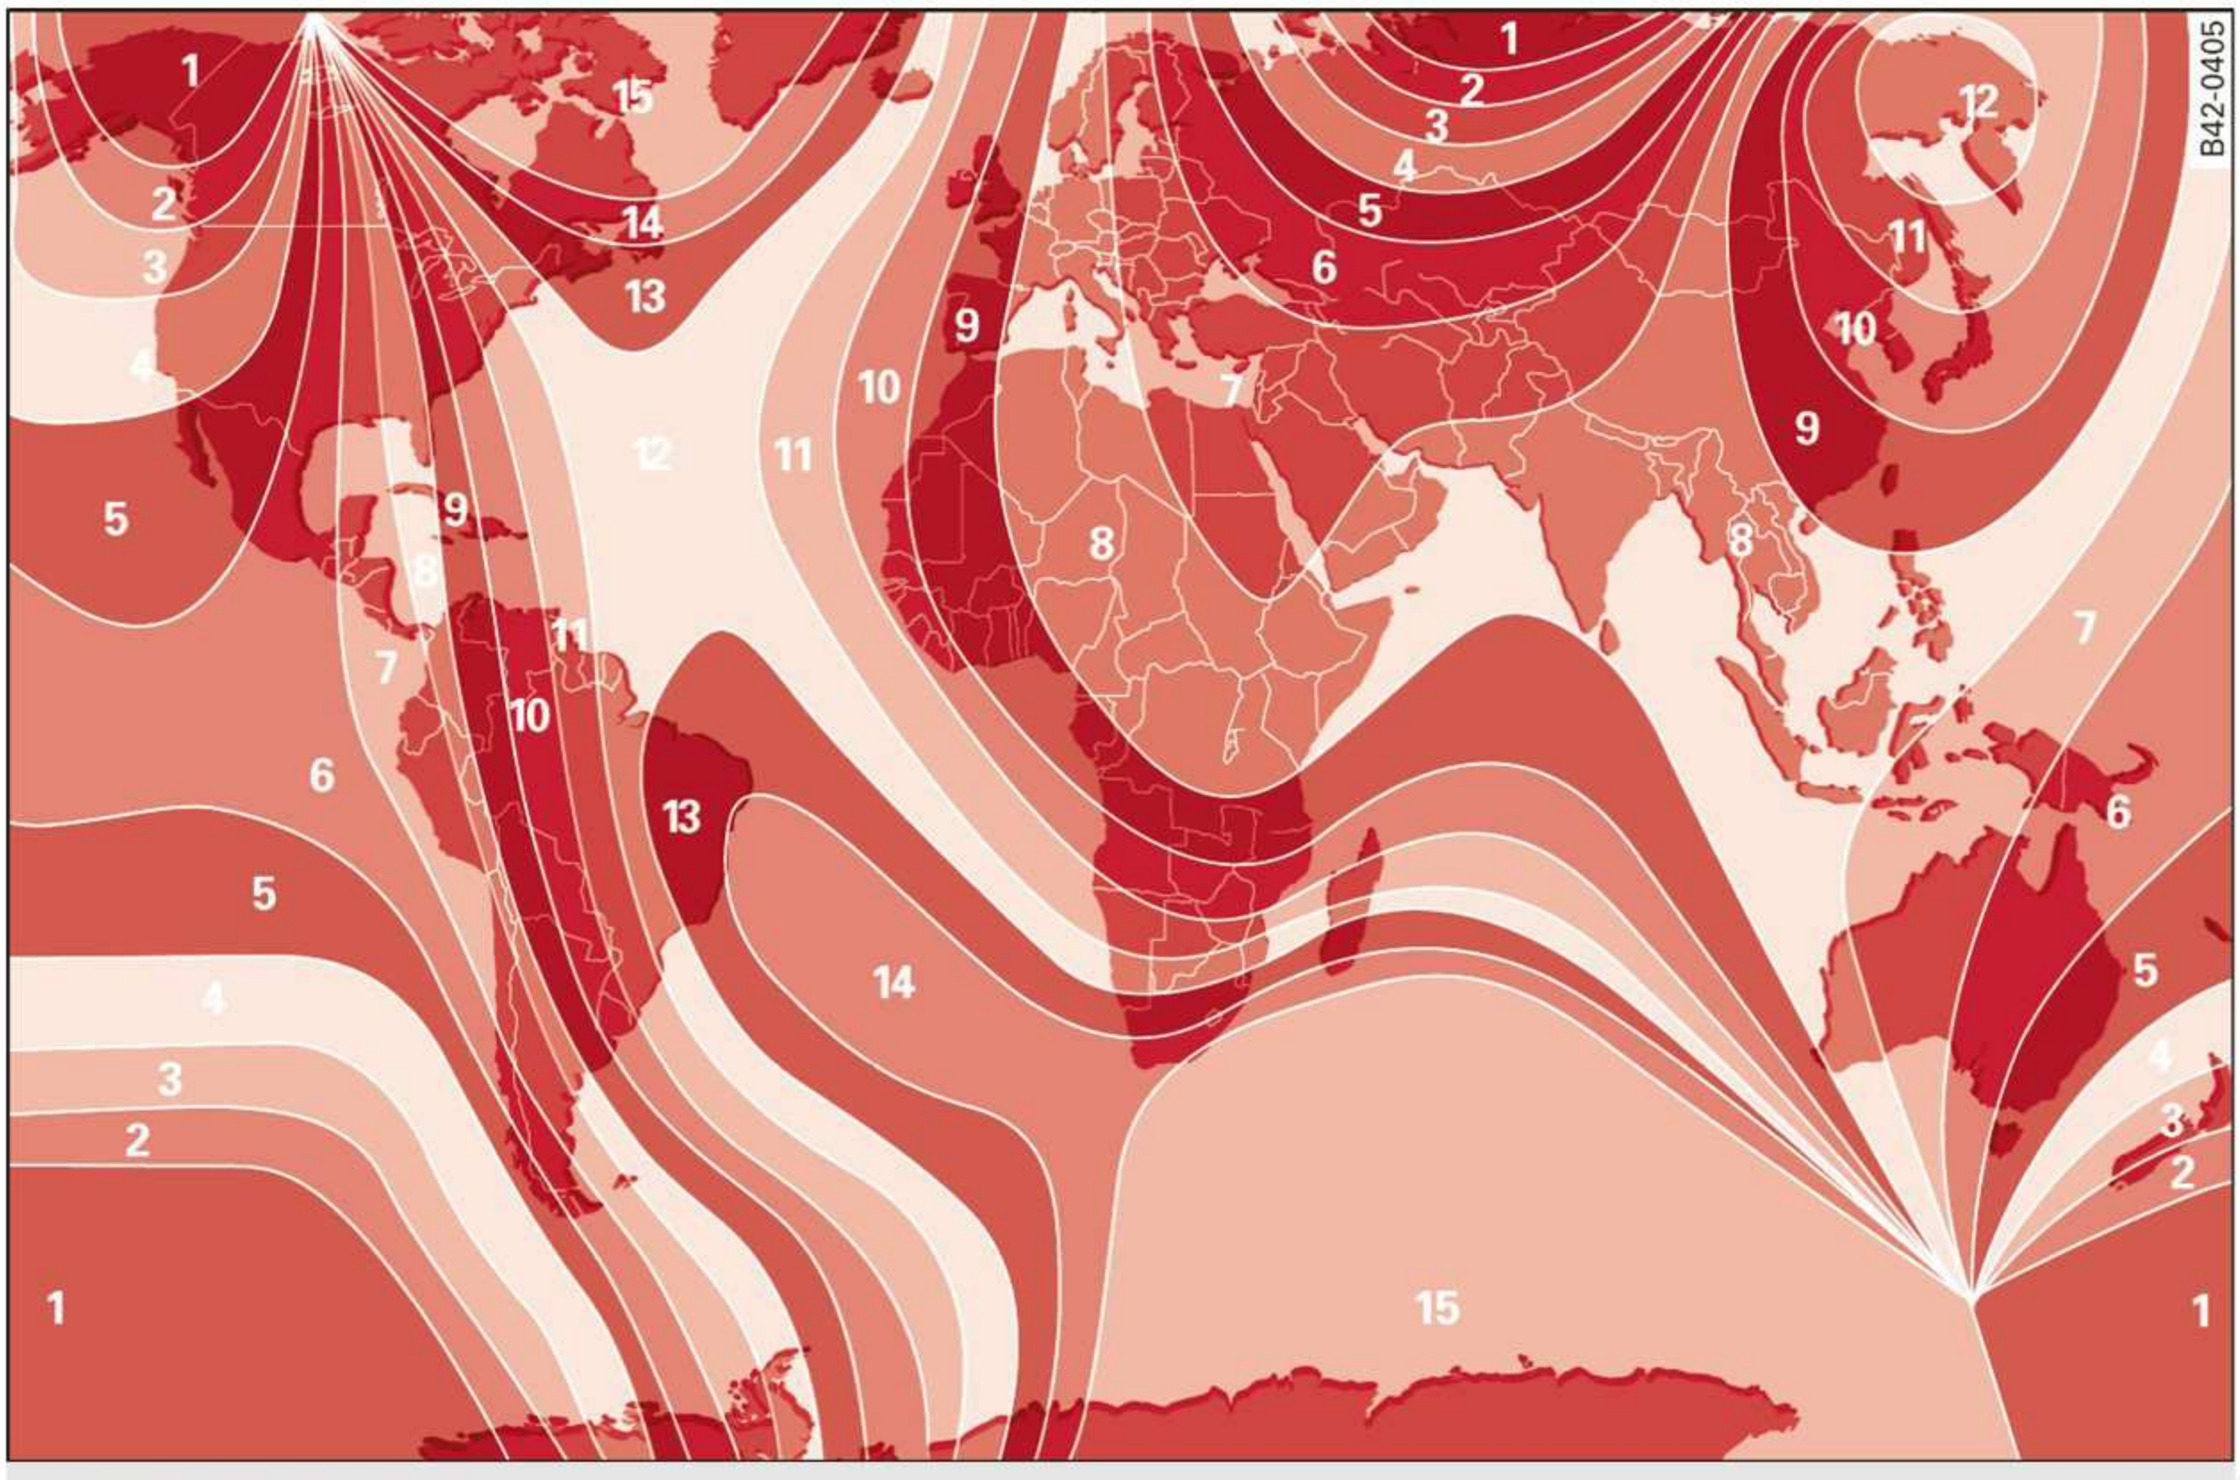


Fig. 55 Magnetic zone map

- ▸ Press and hold the button Ⓐ ⇨ *page 56, fig. 54* until the number of the selected magnetic zone appears in the rearview mirror.
- ▸ Press the button Ⓐ repeatedly to select the correct magnetic zone. The selection mode turns off after a few seconds.

Calibrating the compass

Applies to: vehicles with digital compass

If the display is incorrect or inaccurate, the compass must be recalibrated.

- ▸ Press and hold the button Ⓐ until a **C** appears in the rearview mirror.
- ▸ Drive in a circle at about 6 mph (10 km/h) until a direction is displayed in the interior rearview mirror.

WARNING

To reduce the risk to yourself and other drivers, calibrate the compass in an area where there is no traffic.

Seats

General information

WARNING

See ⇨ *page 247, Driving safety* for important information, tips, suggestions and warnings that you should read and follow for your own safety and the safety of your passengers.

Front seats

Power seat adjustment

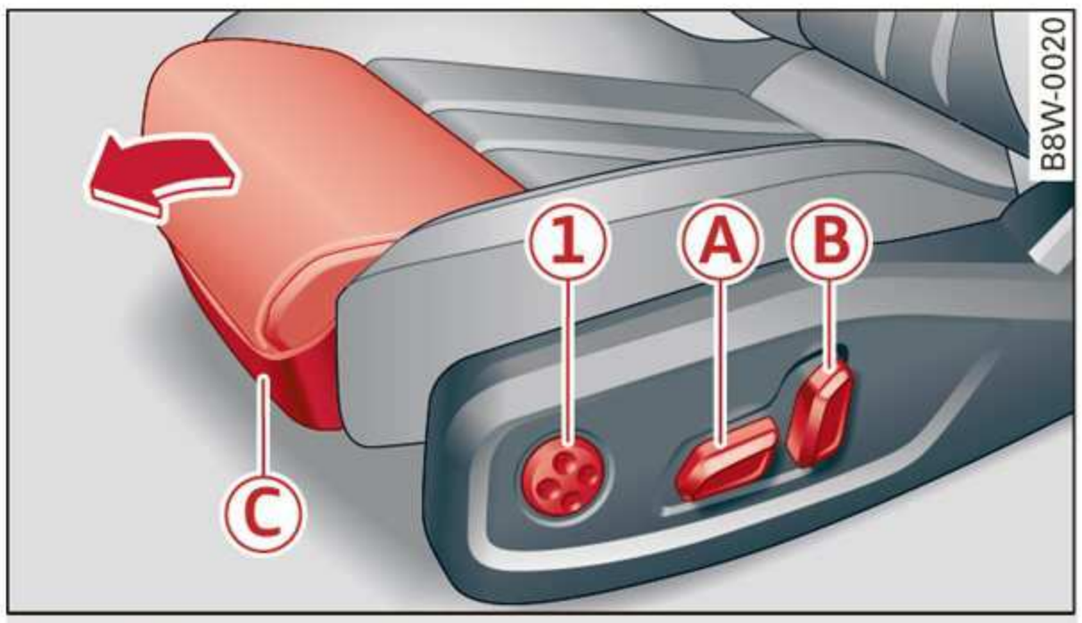


Fig. 56 Front seat: adjusting the seat (version A)

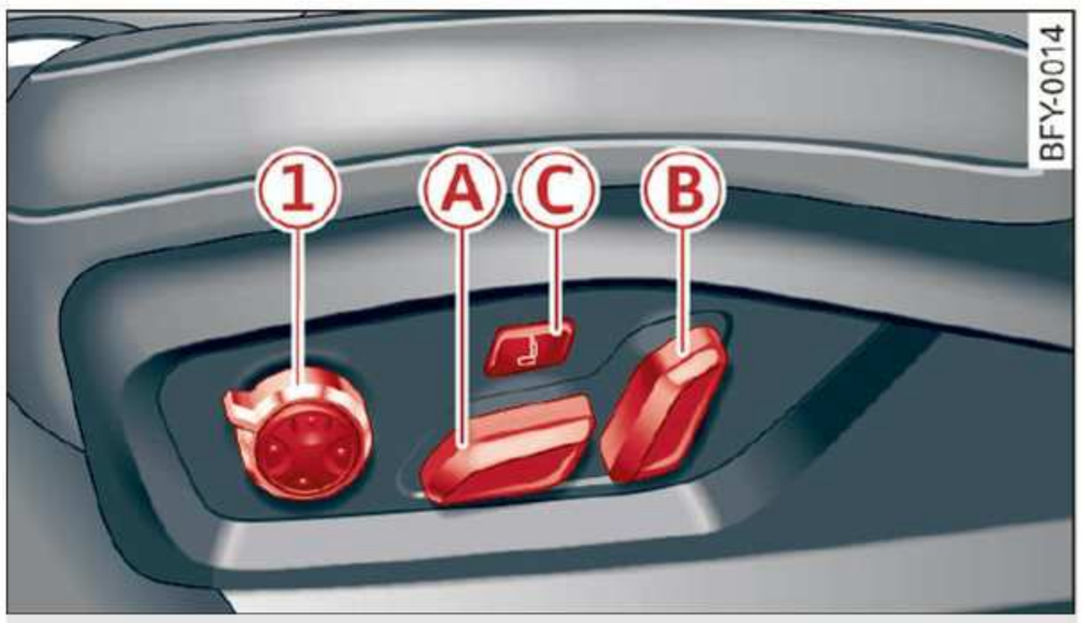


Fig. 57 Front seat: adjusting the seat (version B)

Ⓐ - Moving the seat forward/back: press the button forward/back.

Ⓐ - Moving the seat up/down: press the button up/down. To adjust the front seat cushion, press the front button up/down. To adjust the rear seat cushion, press the rear button up/down.

Ⓑ - Adjusting the backrest angle: press the button forward/back.

Ⓒ - Lengthening/shortening the upper thigh support* ⇨ *fig. 56*. Lift the grip handle. A spring moves the support forward.

Ⓒ - Switching the massage function* on/off ⇨ *fig. 57*. Select the type of massage with the multifunction button* ⇨ *page 58*.

① - Lumbar support* or multifunction button* ⇨ *page 58*. To adjust the lumbar support, press the button in the applicable location.

WARNING

- The power front seats can also be adjusted when the ignition is switched off. To reduce the risk of injury, children should never be left unattended in the vehicle for this reason.
- To reduce the risk of an accident, only adjust the driver's seat when the vehicle is stationary.
- Exercise caution when adjusting the seat height. Unsupervised or careless seat adjustment could cause parts of the body to get pinched, which increases the risk of injury.
- The front seat backrests must not be reclined too far back when driving, because this impairs the effectiveness of the safety belts and airbag system, which increases the risk of injury.

Multifunction button

Applies to: vehicles with multifunction button

You can adjust various seat settings with the multifunction steering wheel.

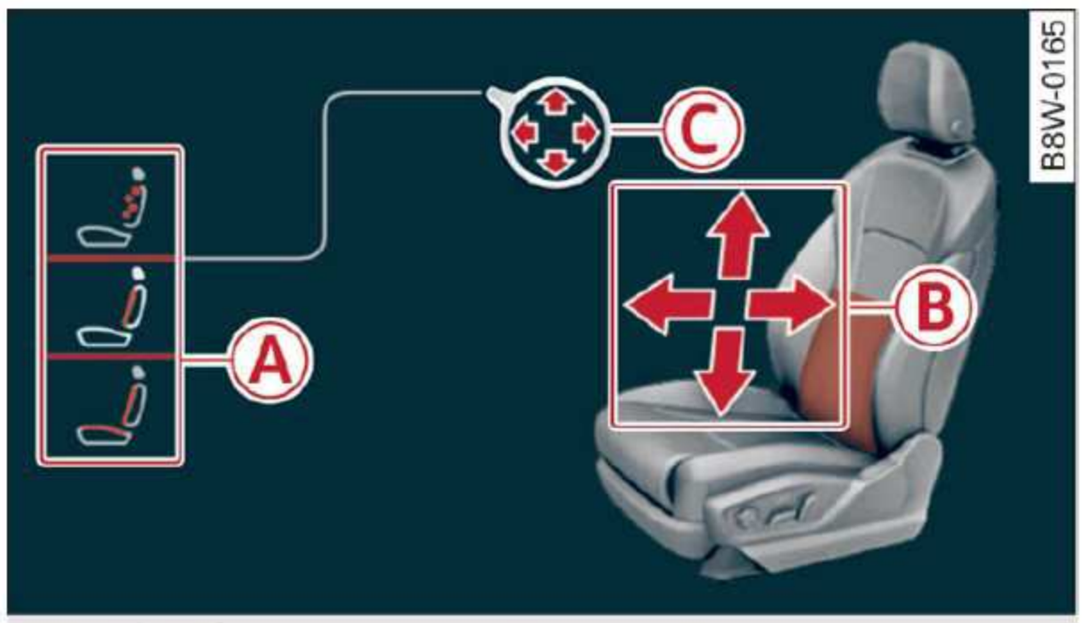


Fig. 58 Infotainment system: seat settings

Operating

▸ If you turn the multifunction button ① ⇨ *page 58, fig. 57* to the left or to the right, the possible seat settings Ⓐ are shown in the Infotainment system ⇨ *fig. 58*. ▶

- ▸ To select a seat setting, turn the multifunction button (1) in the corresponding direction until the desired seat setting is outlined in red.
- ▸ The arrows (B) represent the possible adjustments. For example, to lower the lumbar support, press the multifunction button (1) down. The corresponding arrow (C) lights up.

The following seat settings (A) are possible:

Massage function* - select the massage type **Wave**, **Stretch**, **Knead** or **Off**. You can adjust the intensity of each massage from 1 to 3. You can switch the selected massage on/off using the button (B) ⇨ *fig. 58*.

Lumbar support - you can adjust the lumbar support up/down and to be stronger/weaker.

Side bolsters* - you can increase/decrease the side support in the seat using the side bolsters on the seat backrest.

Tips

– The massage function switches off automatically after approximately 10 minutes.
– The air in the side bolsters* is released as soon as the driver's door opens. This makes is possible to enter and exit the vehicle more comfortably. As soon as you start driving the vehicle, the side bolsters fill.

Center armrest

Applies to: vehicles with a comfort front center armrest

There is a storage compartment under the armrest.



Fig. 59 Comfort center armrest between the driver's seat and front passenger's seat

- ▸ To adjust the angle, raise the armrest from the starting position notch by notch.
- ▸ To bring the armrest back into the starting position, raise it out of the top notch and fold it back down.

The armrest can slide forward and back.

Head restraints

Front head restraints

Applies to: vehicles with adjustable head restraints

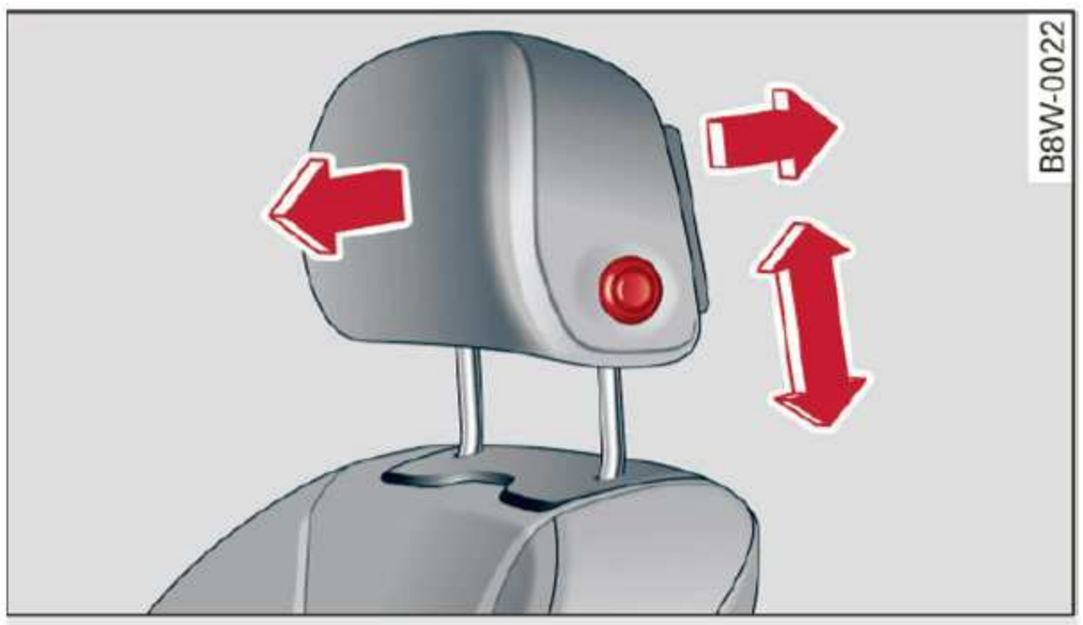


Fig. 60 Front seat: adjusting the head restraint*

Adjust the head restraints so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust as close to this position as possible.

Adjusting the head restraints

- ▸ To move a head restraint* upward or forward, hold it at the sides with both hands and slide it upward or forward until you feel it click into place.
- ▸ To move the head restraint* downward or backward, press the side button and slide the head restraint downward or backward. Release the button and slide the head restraint farther until it locks into place.

WARNING

Always read and follow the applicable warnings ⇨ *page 250, Proper adjustment of head restraints*.

Rear head restraints

Applies to: vehicles with adjustable head restraints

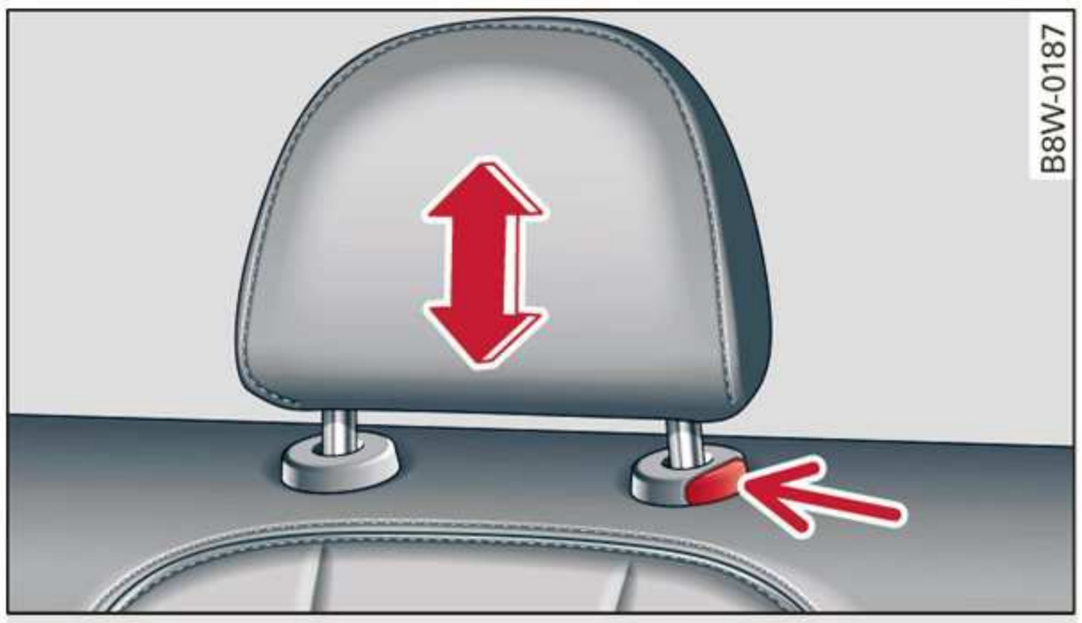


Fig. 61 Rear seat: adjusting the head restraint

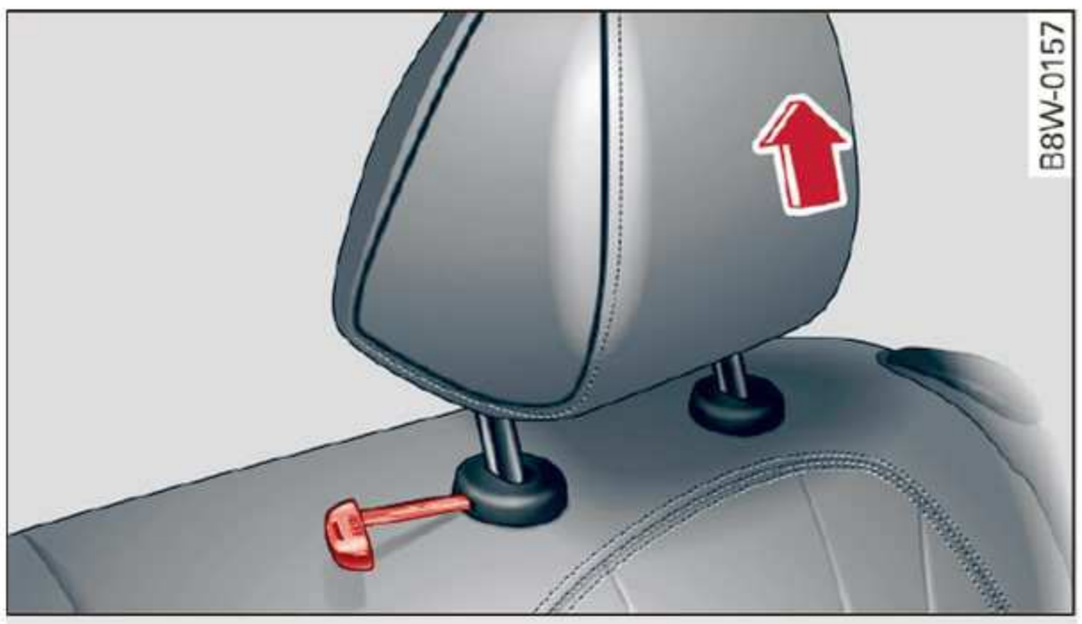


Fig. 62 Rear seat: removing the head restraint

If passengers are sitting in the outer rear seats, adjust the head restraints so that the upper edge of the head restraint is as level as possible with the upper part of their head. If that is not possible, try to adjust as close to this position as possible. If your vehicle has a middle seat, adjust that head restraint all the way up ⇨ ⚠.

Moving the head restraints

- ▸ To move the head restraint upward, hold it at the sides with both hands and slide it upward until it clicks into place ⇨ *fig. 61*.
- ▸ To move the head restraint down, press the button -arrow- ⇨ *fig. 61* and slide the head restraint downward.

Removing the head restraints

- ▸ Move the head restraint upward as far as it can go.
- ▸ Press the release point ⇨ *fig. 62* using the mechanical key ⇨ *page 29, Key set* and press the button -arrow- ⇨ *fig. 61*. Pull the head restraint out of the backrest at the same time ⇨ ⚠.

Installing the head restraints

- ▸ Slide the posts on the head restraint down into the guides until the posts click into place.
- ▸ Press the button -arrow- ⇨ *fig. 61* and slide the head restraint all the way down. You should not be able to remove the head restraint from the backrest without pressing the button.

⚠ WARNING

– Always read and follow the applicable warnings ⇨ *page 250, Proper adjustment of head restraints*.

– Only remove the head restraints from the rear seats when it is necessary for installing a child safety seat ⇨ *page 285, Child safety*. Install the head restraint again immediately once the child safety seat is removed. Driving with the head restraints removed or not in the upright position increases the risk of serious injury.

Memory function

Description

Applies to: vehicles with memory function

With the memory function, you can save and recall seat profiles using the memory buttons in the door trim panel and with the vehicle key.

The driver's seat profile is stored again and assigned to the vehicle key each time the vehicle is locked. When you open the door, the seat profile is automatically recalled. If two people use one vehicle, it is recommended that each person always uses “his or her own” vehicle key.

Depending on the equipment, it may be possible to store the following settings:

– **Driver's seat:** seat, exterior mirror*

Vehicle key

Applies to: vehicles with memory function

The driver's seat profile can be assigned to the vehicle key when the vehicle is locked.

- ▸ Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Vehicle** ▶

settings > **Seats** > **Driver's seat** > **Store settings on remote control key**.

Tips

If you do not wish to have the seat profile for another driver assigned to the vehicle key, switch the memory function off in the Infotainment system.

Memory buttons

Applies to: vehicles with memory function



Fig. 63 Driver's door: memory function buttons

Storing a seat profile

- ► Press the SET button. The LED in the button will turn on.
- ► Press memory button 1 or 2.

A signal tone will sound when it is successfully stored.

Recalling a seat profile

- ► If the driver's door is open and the ignition is switched off, press the memory button.
- ► If the driver's door is closed or the ignition is switched on, press and hold the memory button until the seat adjustment is complete.

WARNING

– For safety reasons, the seat setting can only be recalled when the vehicle is stationary to reduce the risk of an accident.
– In an emergency, seat adjustment operation can be stopped by pressing the SET button or the buttons Ⓐ or Ⓑ ⇨ *page 58, fig. 57*.

Stowing and using

Ashtray

Applies to: vehicles with ashtray



Fig. 64 Front center console: ashtray

Opening and closing

- ▸ To open/close the ashtray, fold the cover up/down.

Emptying

- ▸ To empty the ashtray, pull it upward and out.

WARNING

Never use the ashtray to hold paper, because this increases the risk of a fire.

Cigarette lighter

Applies to: vehicles with a cigarette lighter



Fig. 65 Front center console: cigarette lighter

- ▸ Press the cigarette lighter in.
- ▸ Remove the cigarette lighter when it pops out.

The cigarette lighter may be used as a power source for the tire mobility kit/compact spare tire* compressor only when absolutely necessary.

WARNING

The cigarette lighter only works when the ignition is switched on. Incorrect usage can lead to serious injuries or burns. To reduce the risk of injuries, never leave children unattended in the vehicle with the vehicle key.

Power sources

When the ignition is switched on, you may be able to use the electric power sources for external devices, depending on the vehicle equipment.

12 volt sockets

You can connect electrical accessories to the 12 volt sockets. The power usage must not exceed 120 watts.

The 12 volt sockets are labeled with the or 12V symbol. They are located in the front center console*, in the rear* and on the side trim panel in the luggage compartment*.

USB ports

Applies to: vehicles with USB input

You can charge mobile devices using the USB ports. The USB ports are labeled with the or symbol or CHARGE ONLY.

WARNING

- To reduce the risk of fatal injury, store all connected devices securely when driving so that they do not move around inside the vehicle when braking or in the event of an accident.
- Incorrect usage can lead to serious injuries or burns. To reduce the risk of injuries, never leave children unattended in the vehicle with the vehicle key.

Note

- Read the operating manuals for the connected devices.
- Disconnect the connectors from the power sources carefully to reduce the risk of damaging them.

– To reduce the risk of damage to the vehicle electrical system, never attempt to charge the vehicle battery by connecting accessories that provide power to the power sources.
– Do not connect any device whose network class (voltage) does not match the network class designed for the socket.

Storage

Cup holders



Fig. 66 Rear center armrest: cup holders*

Your vehicle has cup holders in the front center console and in the center rear seat*.

Cup holders in the rear center armrest*

- ▸ Fold the center armrest downward.
- ▸ To open the cup holders, pull the top cover on the cup holders forward ⇨ *fig. 66*.
- ▸ Set your beverage in the holder.
- ▸ To close the cup holder, fold the cover back until it clicks into place.

WARNING

– Do not put any hot beverages in the cup holder while the vehicle is moving. Hot beverages could spill, which increases the risk of injury.
– Do not use any breakable beverage containers (for example, made out of glass or porcelain). You could be injured by them in the event of an accident.

Note

Beverage containers in the cup holders should always have a lid. Otherwise, the liquid inside could spill and cause damage to vehicle equipment.

Cooled glove compartment

Applies to: vehicles with cooled glove compartment



Fig. 67 Glove compartment: switching cooling mode on/off

- ▸ Turn the knob Ⓐ counter-clockwise to switch the cooling on.
- ▸ Turn the knob Ⓐ clockwise to switch the cooling off. The symbols on the knob must appear as they do in ⇨ *fig. 67*.

The glove compartment cooling mode only functions when the vehicle A/C system is switched on. If the heating is switched on, switching the glove compartment cooling mode off is recommended.

Additional storage compartments

You will find a variety of storage compartments and holders at various locations in the vehicle.

– Glove compartment: the glove compartment can be locked* using the mechanical key ⇨ *page 29, Key set*
– In the door trim panels
– Storage compartment under the front center armrest
– Storage compartment* in the rear center armrest
– Storage compartment* under the light switch
– Garment hooks above the rear doors*
– Nets* on the backrests of the front seats
– Nets* on the left/right luggage compartment trim panel
– Tie-downs* on the left/right luggage compartment trim panel
– Bag hooks* in the luggage compartment ▶

WARNING

– To reduce the risk of injury, make sure the covers for all storage compartments are always closed while driving.
– Only use the storage compartments in the door trim panels to store small objects that will not stick out of the compartment and impair the function of the side airbags.
– Due to strength reasons, only secure objects up to 11 lbs (5 kg) with the tie-downs*. Heavier objects are not adequately secured. There is risk of personal injury.
– Make sure your view toward the rear is not blocked, for example by hanging clothing or objects in the vehicle.
– Only lightweight clothing should be hung from the garment hooks in the vehicle. The pockets of the clothing must not contain any heavy, breakable, or sharp-edged objects. Such objects endanger vehicle occupants and increase the risk of injury during sudden driving or braking maneuvers or in an accident, especially if the airbags deploy.
– Do not use coat hangers to hang garments because this could reduce the effectiveness of the side curtain airbags*.

Luggage compartment

General information

All luggage and other objects must be properly stowed and secured in the luggage compartment.

Loose items in the luggage compartment can shift suddenly, changing vehicle handling characteristics. Loose items can also increase the risk of serious personal injury in a sudden vehicle maneuver or in a collision.

► Distribute the load evenly in the luggage compartment.
► Always place and properly secure heavy items in the luggage compartment as low and as far forward as possible.
► Secure luggage using the tie-downs provided ⇨ *page 68*.
► Make sure that the rear seatback is securely latched in place.

WARNING

Improperly stored luggage or other items can fly through the vehicle causing serious personal injury in the event of hard braking or an accident. To help reduce the risk of serious personal injury:
– Always put objects, for example, luggage or other heavy items in the luggage compartment.
– Always secure objects in the luggage compartment using the tie-down eyelets and suitable straps.

WARNING

Heavy loads will influence the way your vehicle handles. To help reduce the risk of a loss of control leading to serious personal injury:
– Always keep in mind when transporting heavy objects, that a change in the center of gravity can also cause changes in vehicle handling:
  – Always distribute the load as evenly as possible.
  – Place heavy objects as far forward in the luggage compartment as possible.
– Never exceed the Gross Axle Weight Rating or the Gross Vehicle Weight Rating specified on the safety compliance sticker on the driver's side B-pillar respectively on the front end of the driver's door. Exceeding permissible weight standards can cause the vehicle to slide and handle differently.
– Please observe information on safe driving ⇨ *page 247*.

WARNING

To help prevent poisonous exhaust gas from being drawn into the vehicle, always keep the rear lid closed while driving.
– Never transport objects larger than those fitting completely into the luggage area because the rear lid cannot be fully closed. ▶

– If you absolutely must drive with the rear lid open, observe the following notes to reduce the risk of poisoning:
  – Close all windows,
  – Close the sunroof*,
  – Open all air outlets in the instrument panel,
  – Switch off the air recirculation,
  – Set the fresh air fan to the highest speed.

WARNING

Always make sure that the doors, all windows, the sunroof* and the rear lid are securely closed and locked to reduce the risk of injury when the vehicle is not being used.

– After closing the rear lid, always make sure that it is properly closed and locked.
– Never leave your vehicle unattended especially with the rear lid left open. A child could crawl into the vehicle through the luggage compartment and close the rear lid becoming trapped and unable to get out. Being trapped in a vehicle can lead to serious personal injury.
– Never let children play in or around the vehicle.
– Never let passengers ride in the luggage compartment. Vehicle occupants must always be properly restrained in one of the vehicle's seating positions.

Note

If you are transporting large items with the backrest folded down*, you should remove the Rear Seat Entertainment (RSE)* and its holder* to avoid damage.

Tips

– Air circulation helps to reduce window fogging. Stale air escapes to the outside through vents in the trim panel. Be sure to keep these slots free and open.
– The tire pressure must correspond to the load. The tire pressure label lists the recommended cold tire inflation pressures for the vehicle at its maximum capacity weight and the tires that were on your vehicle at the time it was manufactured. For recommended tire pressures for normal load conditions, please see chapter ⇨ *page 334*.

Luggage compartment cover

Applies to: vehicles with luggage compartment cover

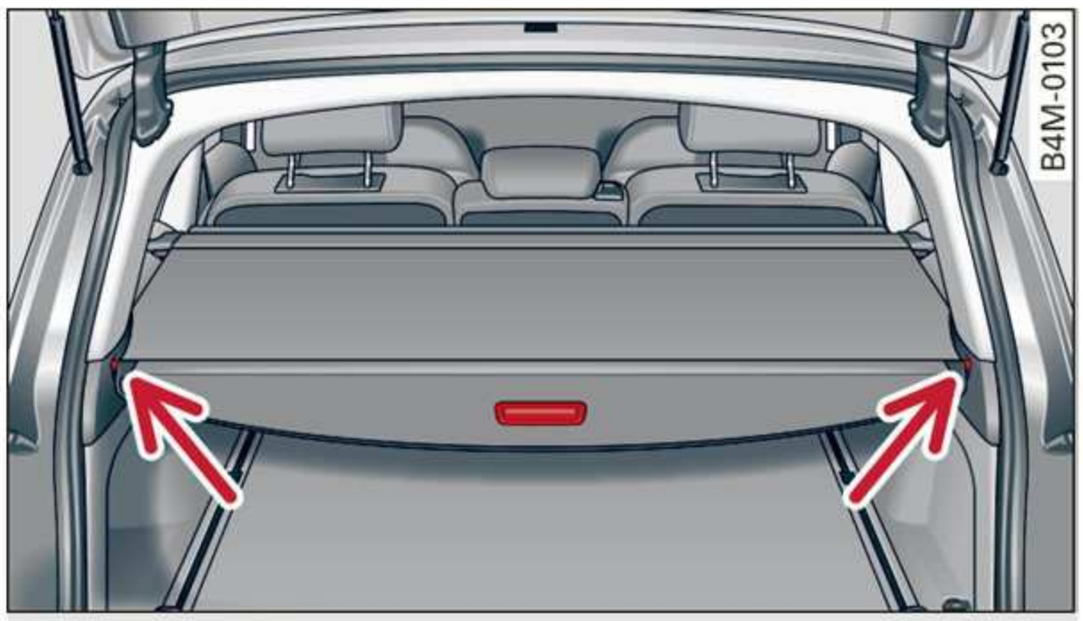


Fig. 68 Luggage compartment: cover attached

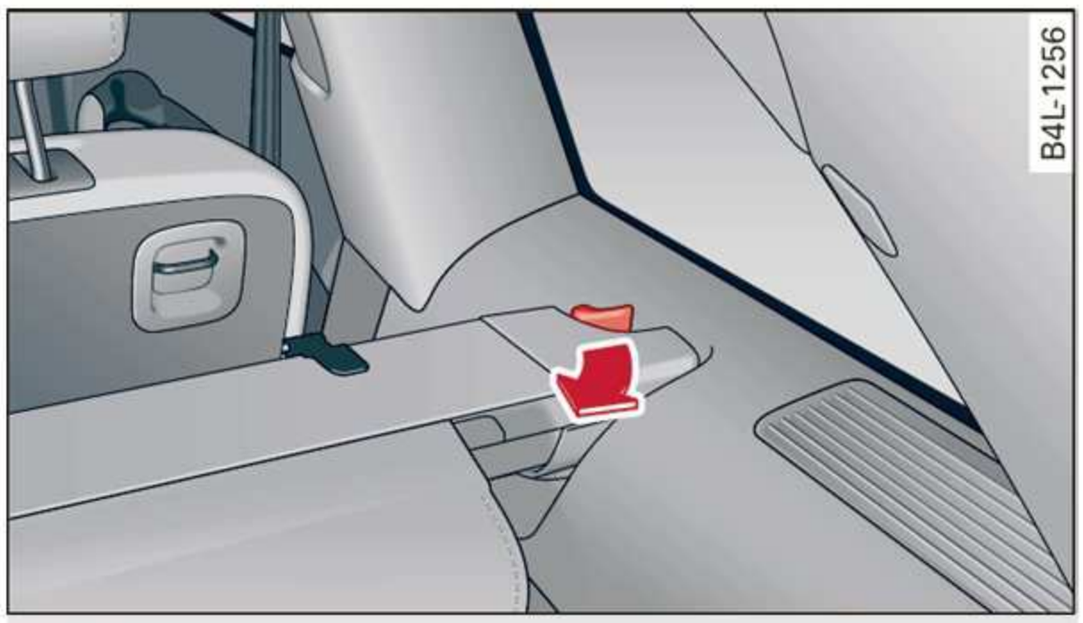


Fig. 69 Luggage compartment: removing and installing the luggage compartment cover

Attaching

► Pull the cover out and attach it in the mounting eyelets in the side trim panel ⇨ *fig. 68*.

Removing

► Pull the lever in the direction of the arrow ⇨ *fig. 69* and remove the cover upward.

Installing

► Place the left and right sides of the cover into the mounts on the side trim panel.
► Push the cover downward until it clicks into place.

WARNING

The luggage compartment cover is not a surface for storing objects. Objects placed on the cover increase the risk of injury to all vehicle ▶

occupants during sudden driving or braking maneuvers or in the event of an accident.

Note

Let the luggage compartment cover roll up slowly to reduce the risk of damage.

Increasing the size of the vehicle interior

Applies to: vehicles with folding backrests

The rear seat backrests can be folded forward either separately or together.*

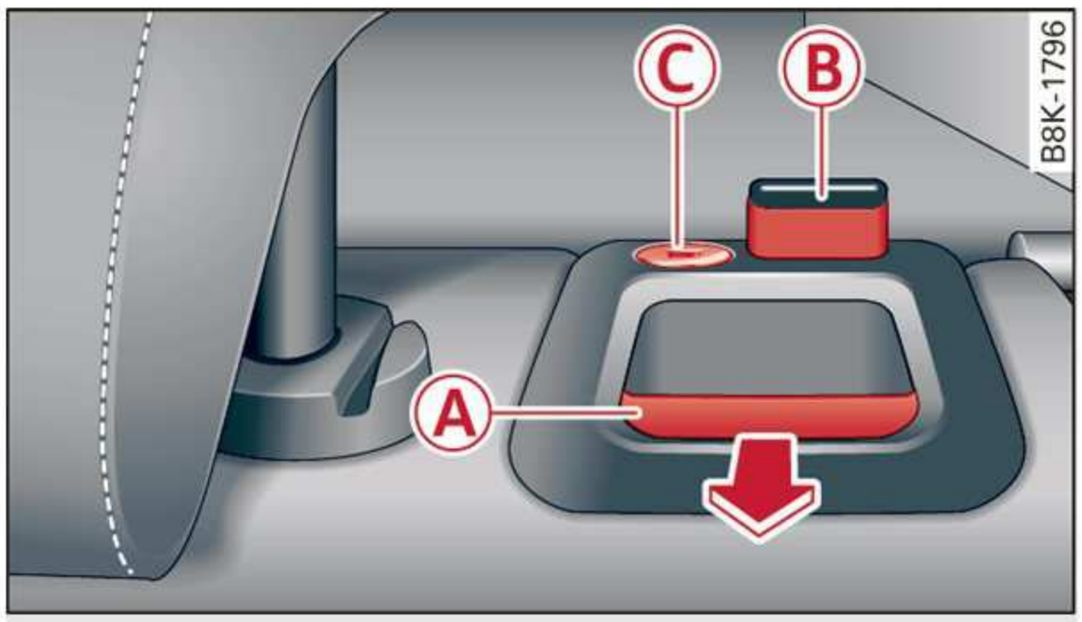


Fig. 70 Backrest: release lever, securing knob and lock*

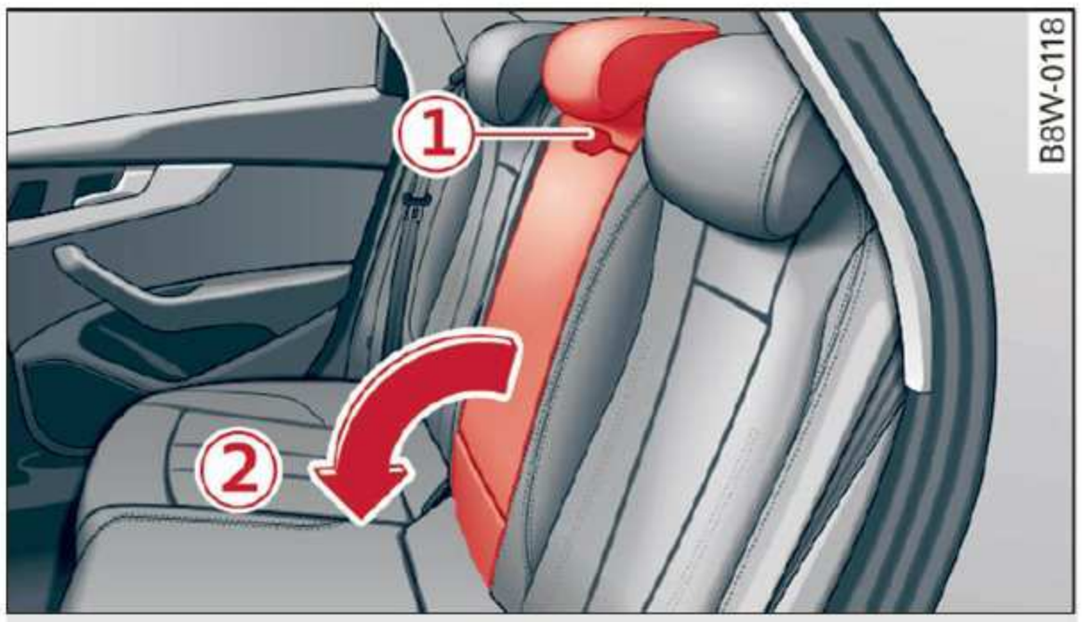


Fig. 71 Center backrest: folding the center backrest forward

Folding the outer rear backrests forward and backward

- ▸ Pull the release lever Ⓐ in the direction of the arrow and fold the backrest forward. Let the backrest latch into the lowest position.
- ▸ Fold the backrest back up again until it locks into place and the red marking Ⓑ is no longer visible ⇨ ⚠.

Folding the center rear backrest forward and backward

- ▸ Pull on the upper release lever ① and fold the backrest forward ②.
- ▸ Fold the backrest backward until it locks into place.

When secured, the backrest can be locked Ⓒ using the mechanical key ⇨ *page 30*. This prevents access into the luggage compartment from the vehicle interior. You can only enlarge the luggage compartment if the backrest is not locked.

WARNING

– Be careful when releasing the backrest and folding it forward. To reduce the risk of being pinched, pay attention and check when folding backrests forward.
– The backrest must be securely latched to ensure the safety belt is protecting the rear seat positions.
– The backrest must be securely latched so objects cannot slide forward out of the luggage compartment during sudden braking.

Note

– To reduce the risk of damaging the front seats, make sure there is enough space between the front seat and the rear seat equipment when folding the center backrest forward.
– If you move the front seat back when the rear seat backrest is folded forward, you could damage the head restraints on the rear seat.
– To reduce the risk of damage, move the rear head restraints down before folding the rear backrests forward ⇨ *page 60*.
– When folding the backrest forward, make sure the outer safety belts are in the belt guide recess so that they do not get pinched in the backrest lock and damaged. Other objects should be removed from the rear bench seat to protect the backrest from damage.

Increasing the size of the luggage compartment

Applies to: vehicles with release lever in the luggage compartment

The rear seat backrests can be folded forward either separately or together.*

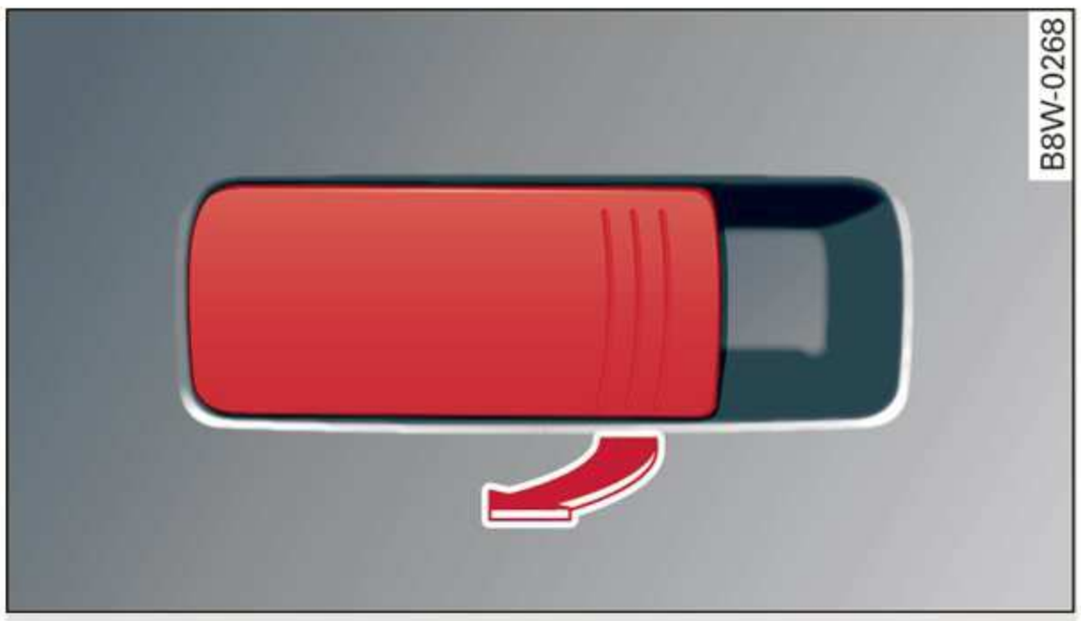


Fig. 72 Luggage compartment: release lever (example)

Folding the backrest forward

► Pull the release lever ⇨ *fig. 72* in the direction of the arrow to fold the backrest forward.

Folding the backrest back into the upright position

► Fold the backrest back up again until it latches or the red marking Ⓑ ⇨ *page 66, fig. 70* is no longer visible ⇨ ⚠ *in Increasing the size of the vehicle interior on page 66*.

⚠ WARNING

– Be careful when releasing the backrest and folding it forward. To reduce the risk of being pinched, pay attention and check when folding backrests forward.
– When releasing the rear seat backrest, make sure there are no people or animals within its range of motion. The backrest will fold forward automatically after it is released.

Note

– To reduce the risk of damage, move the rear head restraints down before folding the rear backrests forward ⇨ *page 60*.
– To reduce the risk of damage to the front seats, make sure there is enough space between the front seat and the rear seat equipment when operating the release lever.

Partition net (upright backrest position)

Applies to: vehicles with partition net

The partition net prevents objects from sliding from the luggage compartment into the passenger compartment.

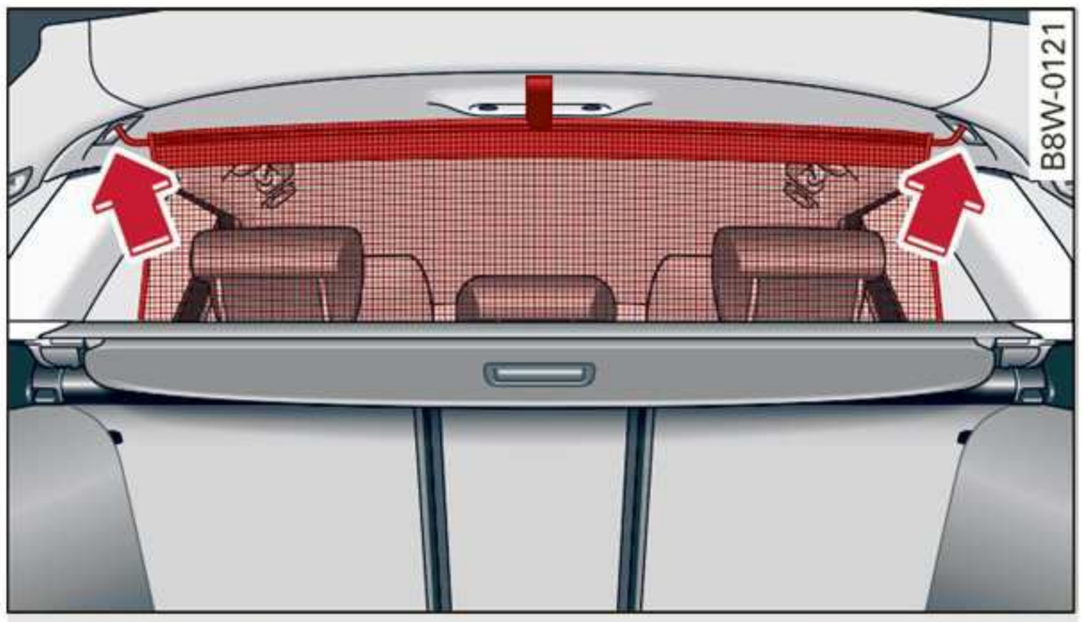


Fig. 73 Behind the backrest: hanging the partition net

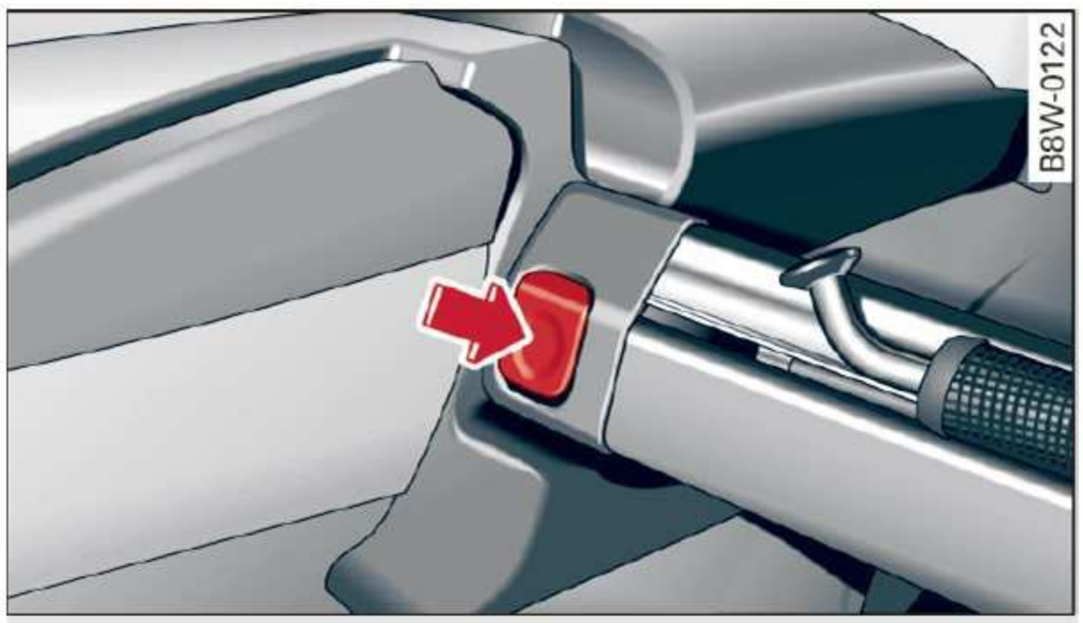


Fig. 74 Behind the backrest: removing the partition net

Attaching

► Pull the net upward. Attach the crossbrace to the mounting eyelets above the backrest -arrows- ⇨ *fig. 73*.

Removing

► Fold the backrests forward ⇨ *page 66*.
► Press the left and right buttons on the partition net and lift the net upward to remove it ⇨ *fig. 74*.

Installing

► Fold the backrests forward ⇨ *page 66*.
► Slide the left and right sides of the partition net into the mount.
► Press the partition net down diagonally at the left and right until it locks into place and the red markings on the buttons are no longer visible. ▶

Note

Let the partition net roll up slowly to prevent damage.

Partition net (backrests folded forward)

Applies to: vehicles with partition net

The partition net prevents objects from sliding from the luggage compartment into the passenger compartment.

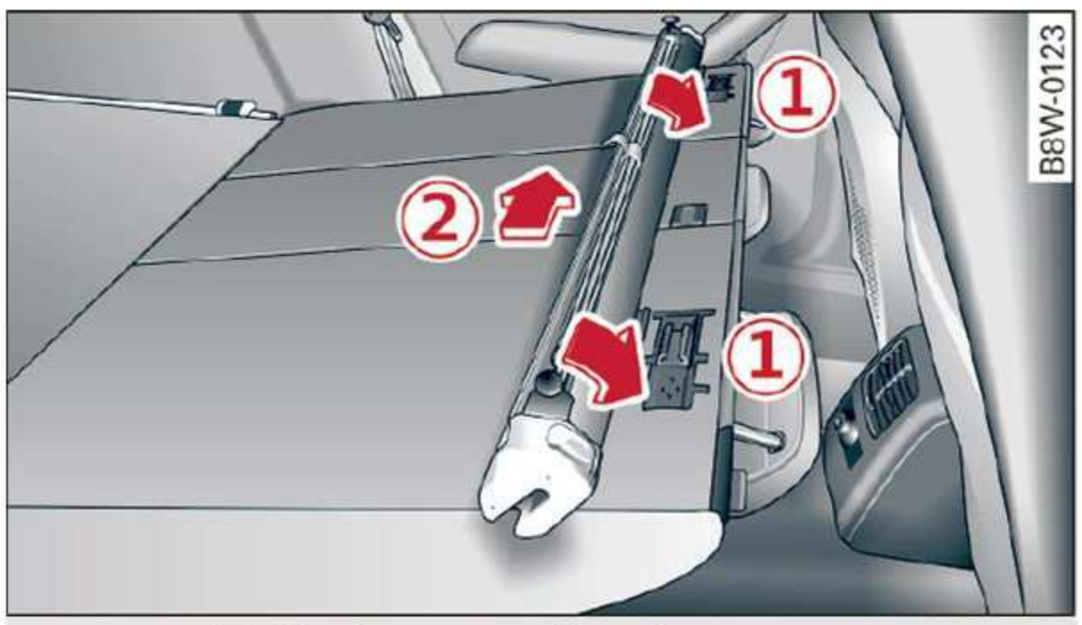


Fig. 75 Folded backrest: installing the partition net

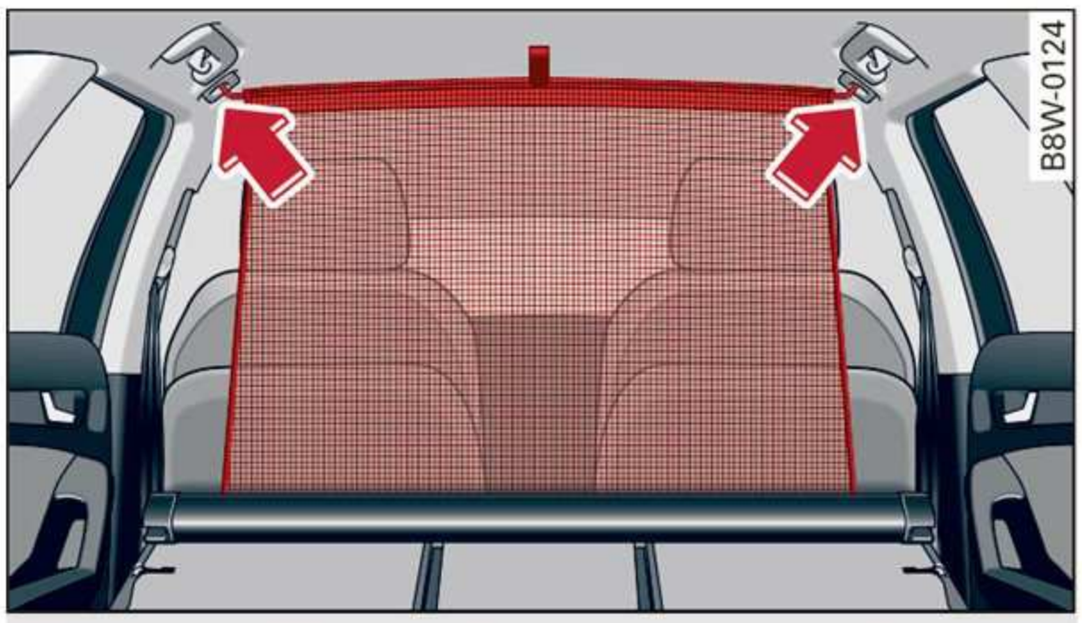


Fig. 76 Folded backrest: hanging the partition net

Installing

- ► Fold the backrests forward ⇨ *page 66*.
- ► Place the partition net on the recesses in the retaining rails ① and slide it all the way to the left ②.

Attaching

- ► Pull the net out and upward and attach it to the mounting eyelets above the front seats -arrows- ⇨ *fig. 76*.

Removing

- ► Slide the partition net to the right and lift it out of the retaining rails.

Note

- – You must remove the partition net before folding the backrest back into the upright position.
- – Let the partition net roll up slowly to prevent damage.

Tie-downs and luggage compartment net

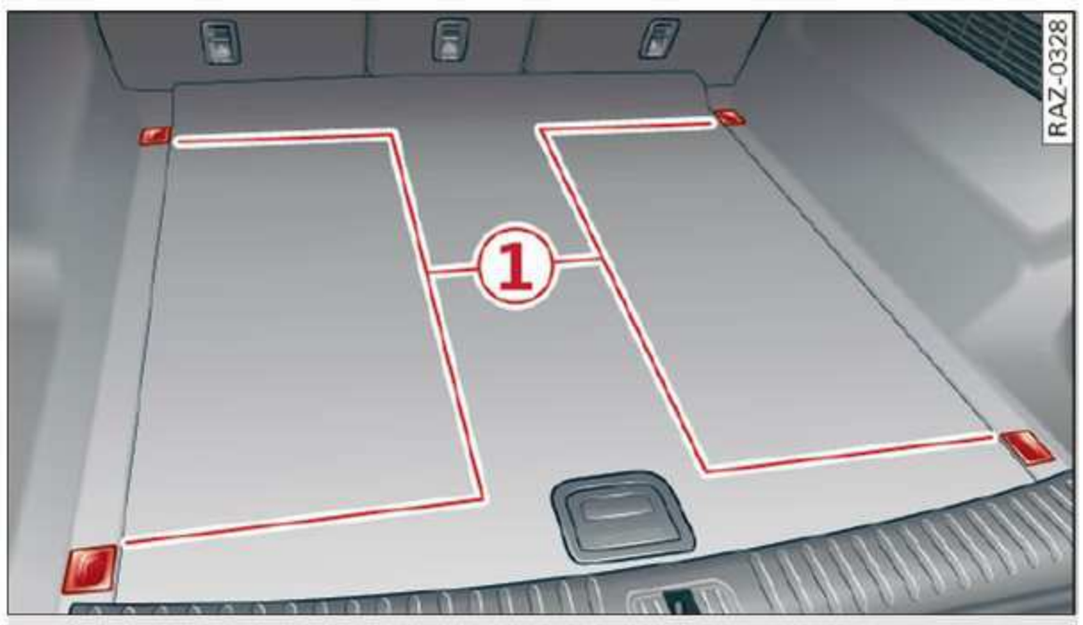


Fig. 77 Luggage compartment: location of the tie-downs (example)

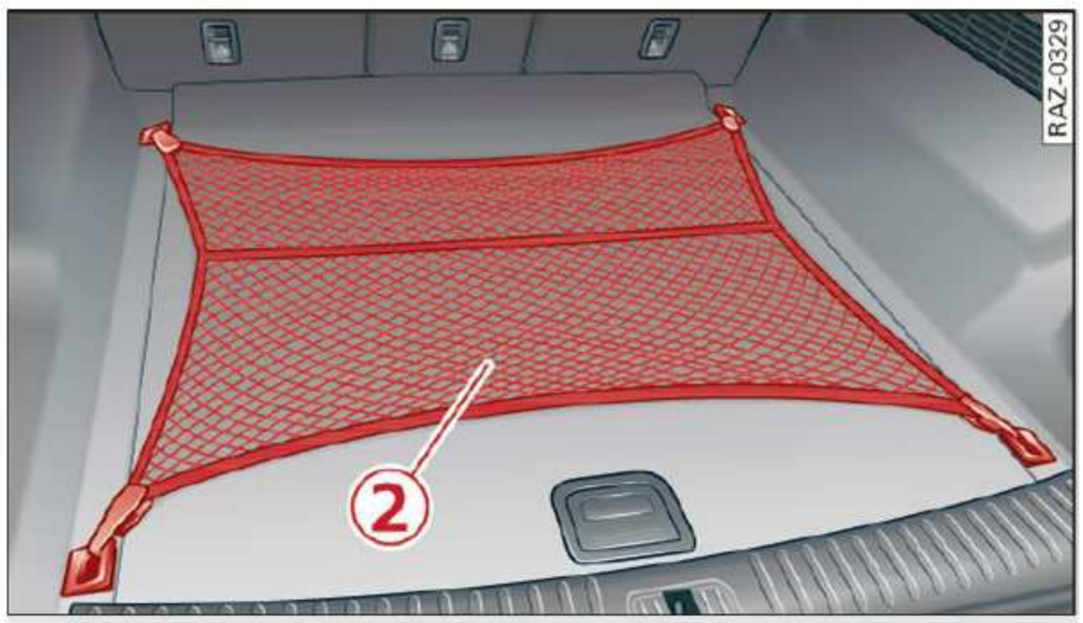


Fig. 78 Luggage compartment: tightened luggage compartment net (example)

Tie-downs

There are tie-downs ① in the luggage compartment to secure pieces of luggage and objects.

- ► Use the tie-downs to secure the cargo.

WARNING

- – Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Always stow objects securely in the luggage compartment and secure them at the tie-downs. Use straps suitable for heavy objects. ▶

– If pieces of luggage or objects are secured to the tie-downs with unsuitable or damaged straps, this can increase the risk of injury during braking maneuvers or accidents.
– Never secure a child safety seat to the tie-downs.

Pass-through

Applies to: vehicles with pass-through

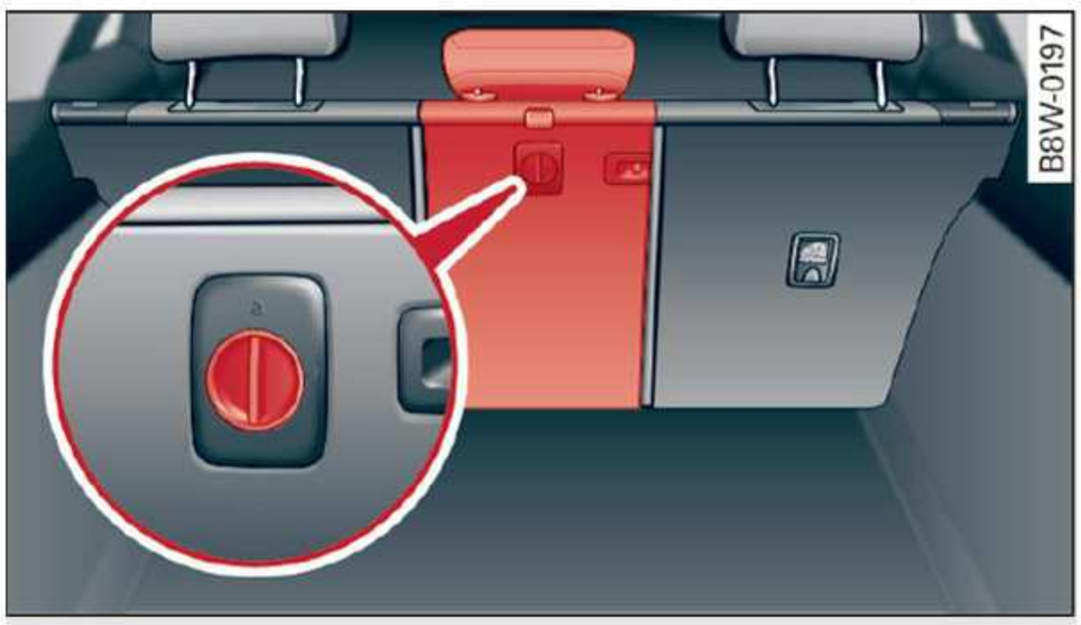


Fig. 79 Backrest: pass-through release

- ► To release the pass-through, turn the lock on the backrest.
- ► Fold the pass-through cover down.

WARNING

Make sure that all objects that you are transporting in the pass-through are secure. They could slide during sudden braking maneuvers and cause injuries.

Tips

You can lock or unlock the pass-through through the luggage compartment. This prevents any access to the luggage compartment from the vehicle interior.

Reversible cargo floor

Applies to: vehicles with reversible cargo floor

You can transport dirty and damp objects in the reversible cargo area floor.



Fig. 80 Luggage compartment: cargo area floor



Fig. 81 Luggage compartment: cargo area floor reversed

Reversing the cargo area floor

- ► Lift up the cargo area floor using the handle -arrow- ⇨ *fig. 80*.
- ► Flip the floor over and install it.

Roof rack

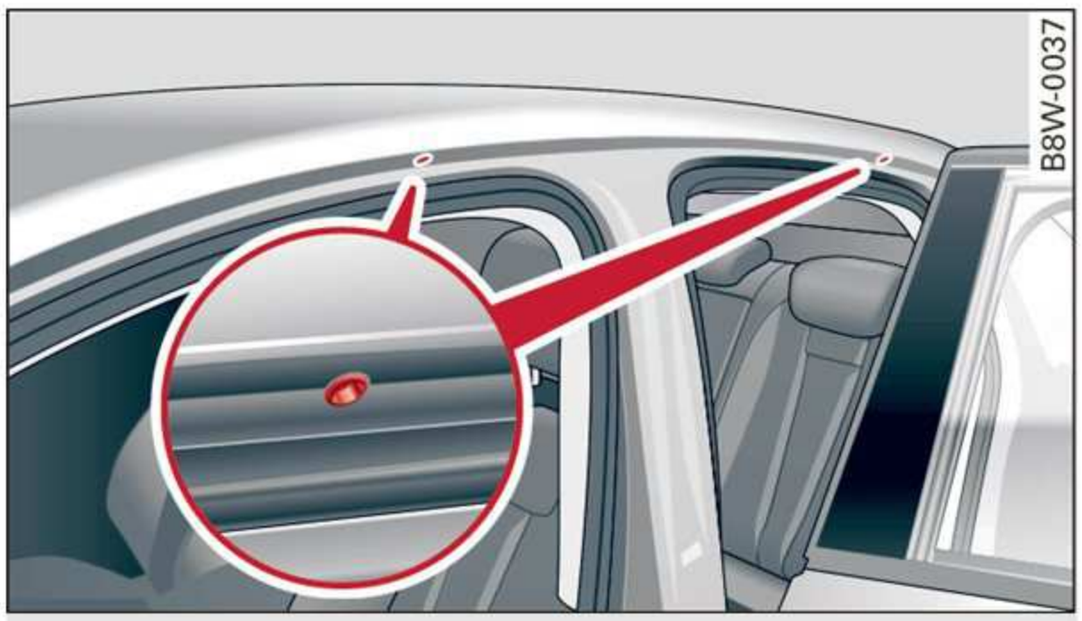


Fig. 82 -Applies to: sedan-Roof: mounting points

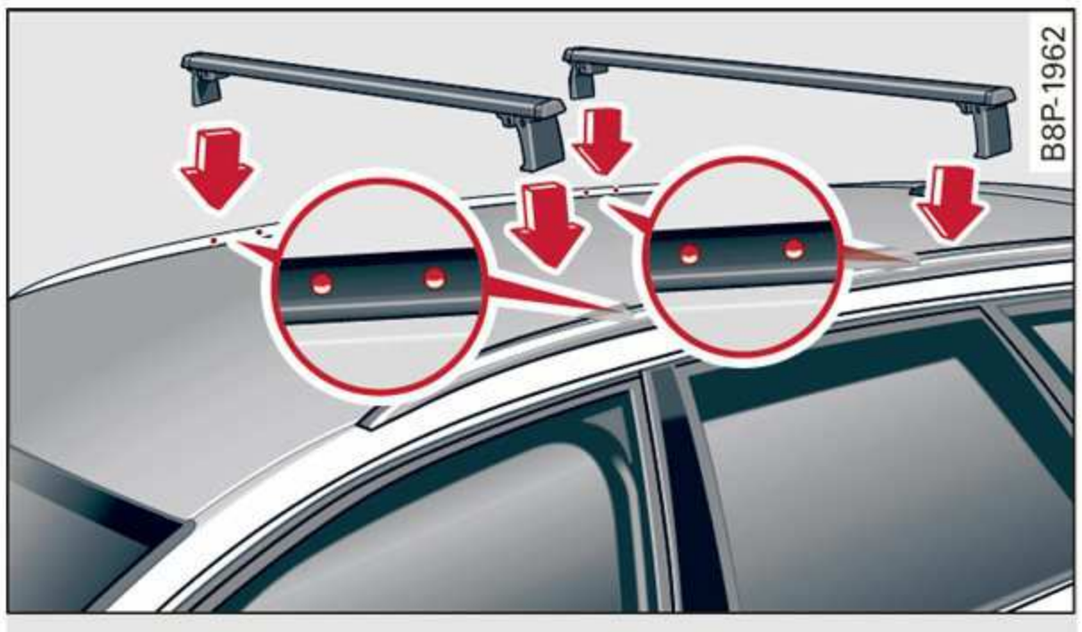


Fig. 83 -Applies to: allroad-Roof rail: mounting points

If luggage or cargo is to be carried on the roof, you must observe the following:

– Only approved roof racks may be used on your vehicle. These roof racks are the basis for a complete roof rack system. Additional attachments or carrier systems are needed to transport luggage and sports equipment. Roof racks and attachments from the Audi Genuine Accessories program are recommended.
– When installing the roof rack, make sure that it is mounted only at the designated points on the roof ⇨ *fig. 82* or ⇨ *fig. 83*.
– Note the permitted axle load, permitted total weight, and permitted roof load of your vehicle ⇨ *page 373*. The roof load is the total of the weight of the roof rack, the attachments and the cargo you are carrying. However, you must also note the permitted load of the carrier system being used.

WARNING

– Follow the installation instructions provided with the roof rack system. If you do not secure the roof rack system and objects on the roof correctly, they could come loose from the vehicle and cause an accident.
– The risk of an accident increases when using a roof rack system, because it changes the driving characteristics by shifting the center of gravity and/or the increasing the surface area exposed to wind. You may need to adapt your driving style and speed to the current conditions.

Note

Make sure that the open luggage compartment lid and the tilting/sliding sunroof* or panoramic glass roof* do not come into contact with objects on the roof.

For the sake of the environment

Fuel consumption will increase because of the increased wind resistance. Remove the roof rack when you are no longer using it.

Warm and cold

Climate control system

Description

The climate control system warms, cools and removes humidity from the air in the vehicle interior. It is most effective when the windows and sunroof* are closed. If there is a build-up of heat inside the vehicle, ventilation can help to speed up the cooling process.

In all heating mode functions except for *defrost*, the blower only switches to a higher speed once the engine coolant has reached a sufficient temperature.

Pollutant filter

The pollutant filter removes pollutants such as dust and pollen from the air.

Key recognition

The climate control settings are automatically stored and assigned to the vehicle key that is in use.

For the sake of the environment

If you would like to reduce fuel consumption, switch the air conditioning off. This will also reduce emissions.

Tips

– To prevent interference with the heating and cooling output and to prevent the windows from fogging over, the air intake in front of the windshield must be free of ice, snow, or leaves.
– Condensation from the cooling system can drip and form a puddle of water under the vehicle. This is normal and does not mean there is a leak.
– The energy management system may temporarily switch off certain functions, such as the seat heating* or rear window defogger. These systems are available again as soon as the energy supply has been restored.

8W0012721BG

3-zone deluxe automatic climate control

Operation

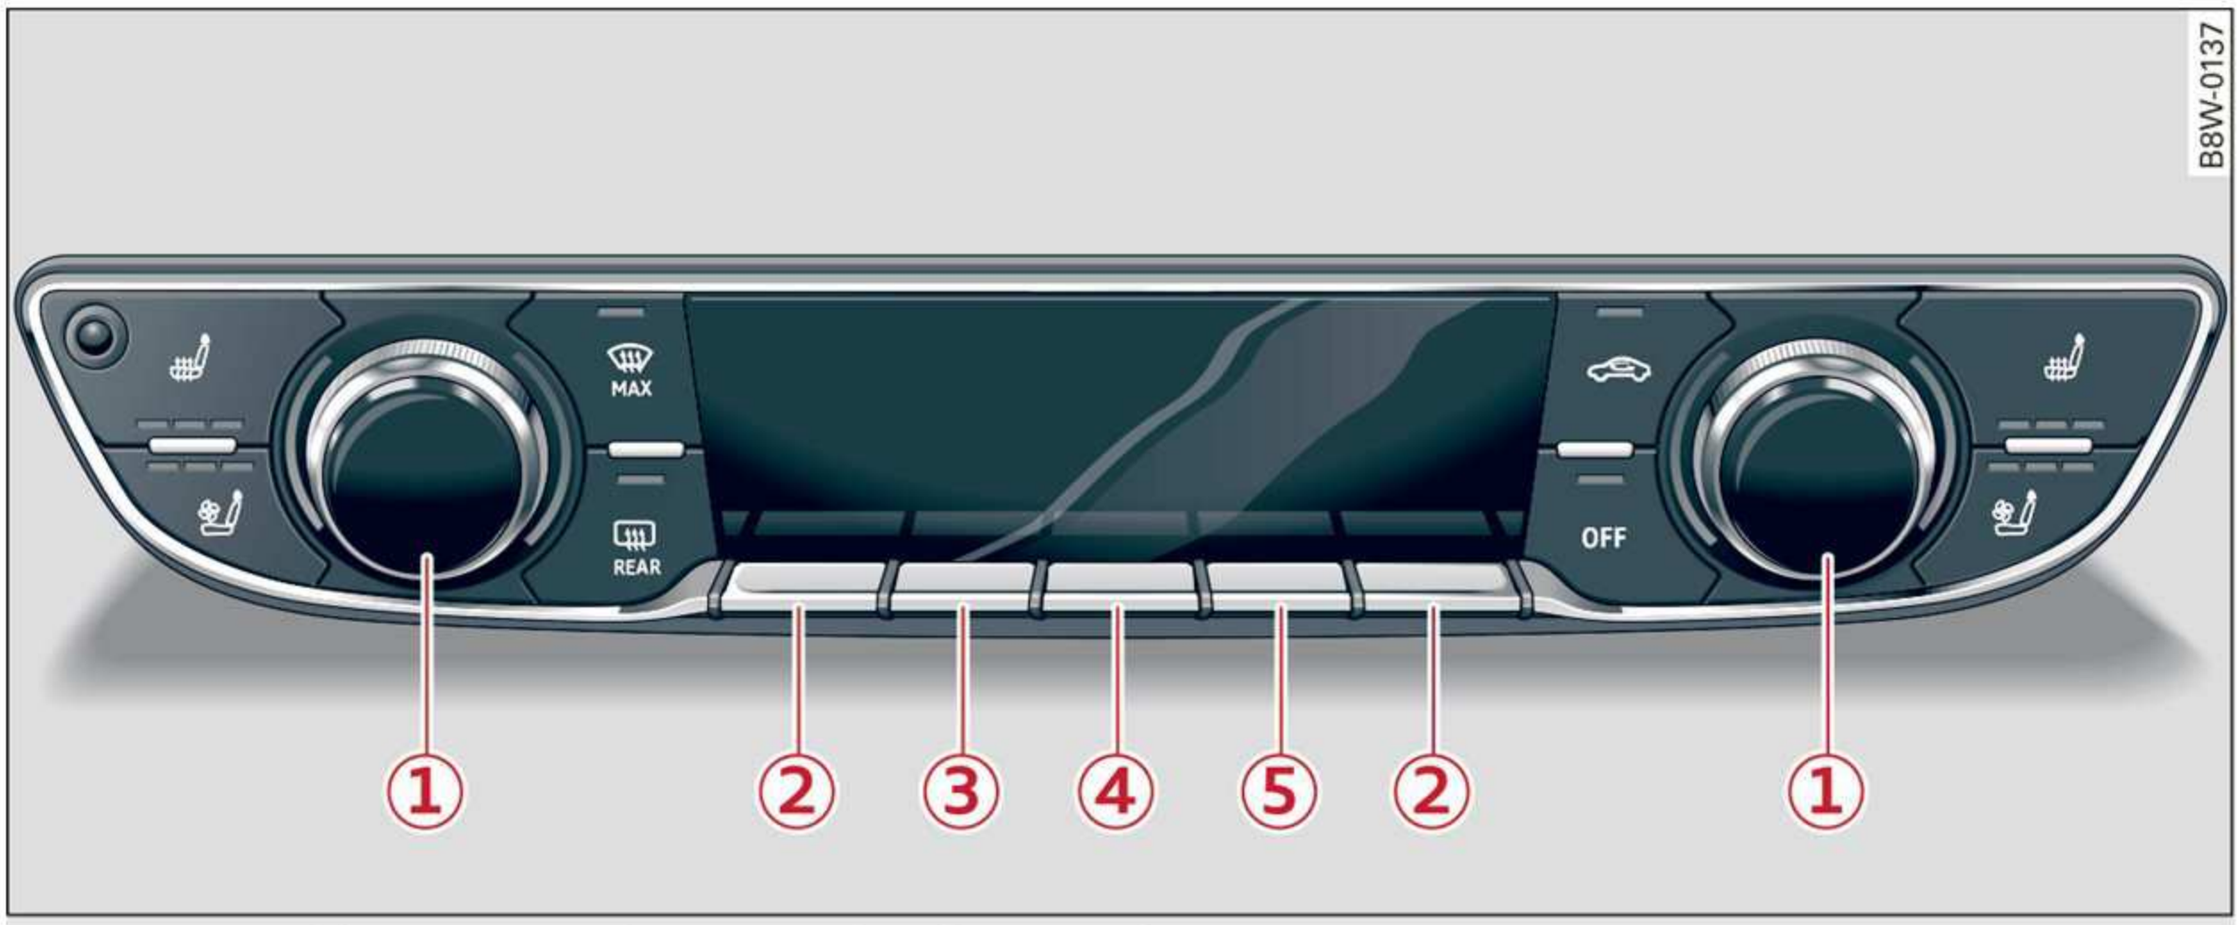


Fig. 84 3-zone deluxe automatic climate control: cockpit controls



Fig. 85 3-zone deluxe automatic climate control system: rear controls

Press the knobs, buttons or rocker switches to turn the functions on or off. When the function is switched on, the LED in the respective button or knob turns on ⇨ *fig. 84*.

The rocker switches are sensitive to touch. Some rocker switches can be assigned with multiple functions. The various functions can be activated by pressing on the switch multiple times. On right-hand drive vehicles*, the functions of the rocker switches ③ and ⑤ are reversed.

The driver and front passenger settings can be adjusted separately. You can adjust the settings for the rear of the vehicle using the controls in the rear ⇨ *fig. 85*.

OFF **climate control system**

The OFF button switches the climate control system on or off. It also switches on when you press another button or a knob. Airflow from outside is blocked when the climate control system is switched off.

A/C **/** A/C MAX* **/** A/C eco* **Cooling mode**

You can switch the respective cooling mode on and off with the rocker switch ③.

The cooling mode only functions with the blower turned on. The air is cooled and dehumidified in cooling mode. Otherwise the windows can fog ▶

up. Cooling mode switches off automatically when the outside temperature is below zero.

If you activate A/C ON, the cooling mode is automatically regulated. The cooling mode is switched off with A/C OFF.

If you activate A/C MAX*, the cooling mode will operate with maximum output. To reduce unnecessary fuel consumption, only use this function briefly.

If you activate A/C eco*, the climate control system will operate in energy-saving mode. This will save fuel.

Recirculation mode

In recirculation mode, the air inside the vehicle is circulated and filtered. This prevents the unfiltered air outside the vehicle from entering the vehicle interior. Switching recirculation mode on when driving through a tunnel or when sitting in traffic is recommended ⇨ ⚠.

You can switch the recirculation mode on or off using the button. You can also switch the recirculation mode off by pressing the knob ① or the MAX button.

AUTO automatic mode

Automatic mode maintains a constant temperature inside the vehicle. Air temperature, airflow and air distribution are controlled automatically. You can switch automatic mode on or off by pressing the knob ①.

Temperature

You can adjust the temperature between 60°F (+16°C) and 84°F (+28°C) by turning the knob ①. If outside of this range, **LO** or **HI** will appear in the climate control system display. In both settings, the climate control runs constantly at the maximum cooling or heating level. The temperature is not regulated.

The temperature can be adjusted in the rear using the rear controls ⇨ *fig. 85*.

Blower

You can adjust the volume of air generated by the blower to your preference using the rocker switch ④. The blower should always run at a low setting to prevent the windows from fogging and to ensure a continuous exchange of air inside the vehicle. To have the blower regulated automatically, press one of the knobs ①.

Air distribution

You can use the rocker switches ② to adjust the vents where the air will flow out of. Press the rocker switches ② repeatedly until the desired air distribution setting is displayed in the climate control system controls. To have the air distribution regulated automatically, press one of the knobs ①.

OPEN/CLOSE the wide vent

You can open and close the wide vent in the cockpit using the rocker switch ⑤.

SYNC Synchronization

Use the rocker switch ⑤ to select the function. When synchronization is switched on, the settings for the driver's side are applied to the front passenger's side and the rear (except for seat heating/ventilation*). When the settings on the front passenger's side or in the rear are changed, the synchronization is automatically switched off and **3-zone** appears in the display.

SET REAR function

Use the rocker switch ⑤ to select the function. When the function is switched on, you can adjust all settings for the rear using the climate control system controls in the cockpit. The rear climate control system controls cannot be operated at the same time. This function switches off automatically after a certain period of time or after leaving the menu.

Seat heating*

Pressing the button switches the seat heating on at the highest setting (level 3). The LEDs indicate the temperature level. To reduce the temperature, press the button again. To switch the seat heating off, press the button repeatedly until the LED turns off. ▶

Seat ventilation*

Pressing the button switches the seat ventilation on at the highest level (3). The LEDs indicate the temperature level. To reduce the ventilation level, press the button again. To switch the seat ventilation off, press the button repeatedly until the LED turns off.

Defrosting

The windshield and side windows are defrosted or cleared of condensation as quickly as possible. The maximum amount of air flows mainly from the vents below the windshield. Recirculation mode switches off. The temperature should be set at +72°F (+22°C) or higher. The temperature is controlled automatically.

You can switch the defroster on or off using the MAX button. You can switch the function off by pressing a knob (1).

Applies to: vehicles with windshield defogger: The windshield defogger switches on automatically when outside temperatures are low. If you would like to switch the windshield defogger on manually, press the MAX button. The LED in the button blinks.

REAR Rear window defogger

You can switch the rear window defogger on by pressing the REAR button. It only operates when the engine is running. It switches off automatically after 10 to 20 minutes, depending on the outside temperature.

To prevent the rear window defogger from switching off automatically, press and hold the REAR button for more than three seconds. This is stored until the ignition is switched off.

Vents

You can open or close the center and rear vents in the cockpit and the vents in the rear center console using the ridged thumbwheels. The levers adjust the direction of the airflow from the vents. The wide vent is opened and closed using the rocker switch (5).

Residual heat

You can activate the residual heat function when the ignition is switched off by pressing the knob (1). The residual heat from the coolant is used to heat the vehicle interior. The residual heat function switches off automatically after about 15 minutes.

WARNING

- You should not use the recirculation mode for an extended period of time, because no fresh air is drawn in and the windows can fog when cooling mode is switched off. This increases the risk of an accident.
- Individuals with reduced sensitivity to pain or temperature could develop burns when using the seat heating* function. To reduce the risk of injury, these individuals should not use seat heating*.

Note

To reduce the risk of damage to the seat heating* elements, do not kneel on the seats or place heavy pressure on one area of the seat.

Setup

The climate control system basic settings are accessed in the Infotainment system.

▸ Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Air conditioning**

Auto recirculation

When switched on, automatic recirculation controls the recirculation mode automatically.If the windows fog up, press the MAX button.

Automatic auxiliary heater*

The auxiliary heater helps to warm the vehicle interior more quickly.

Steering wheel heating

Applies to: vehicles with steering wheel heating

▸ Press the ⇨ *page 17, fig. 11* button on the multifunction steering wheel to switch the steering wheel heating on and off. The message ▶

Steering wheel heating: on/Steering wheel heating: off appears in the instrument cluster display.

The steering wheel heating settings are stored automatically and assigned to the vehicle key that is in use.

Driving

General information

Breaking in

A new vehicle must be broken in within the first 1,000 miles (1,500 km) so that all moving parts work smoothly together, which helps to increase the service life of the engine.

Do not drive higher than two-thirds of the maximum permitted engine RPM during the first 600 miles (1,000 km) and do not use full acceleration. The engine can be increased RPM gradually during the next 300 miles (500 km).

Reducing the risk of vehicle damage

The ground clearance is too low on some models to drive on rough terrain. Therefore, avoid off-road trips.

Note

When driving on poor roads, over curbs, and on steep ramps, make sure that components that hang below the vehicle, such as the spoiler and exhaust system, are not struck because they could be damaged. This especially applies to vehicles with low ground clearance and vehicles that are heavily loaded.

Driving through water on roads

Note the following to reduce the risk of vehicle damage when driving through water, for example on flooded roads:

– The water must not be any higher than the bottom of the vehicle body.
– Do not drive faster than walking speed.

WARNING

After driving through water or mud, the effectiveness of the brakes may be reduced due to moisture on the brake rotors and brake pads. A few careful brake applications should dry off the brakes and restore the full braking effect.

Note

– Vehicle components such as the engine, transmission, suspension, or electrical system, can be severely damaged by driving through water.
– Always switch the Start/Stop system* off when driving through water ⇨ *page 80*.

Tips

– Determine the depth before driving through water.
– Do not stop the vehicle, drive in reverse, or switch the engine off when driving through water.
– Keep in mind that oncoming vehicles may create waves that raise the water level and make it too deep for your vehicle to drive through safely.
– Avoid driving through salt water, because this can cause corrosion.

Efficient and environmentally-conscious driving

The amount of fuel consumption, the environmental impact, and the wear to the engine, brakes, and tires depends mostly on your driving style. Note the following information for efficient and environmentally-conscious driving:

– Do not let the engine run while the vehicle parked.
– Use the Start/Stop system ⇨ *page 80*.
– Turn off electrical equipment that is not needed, for example seat heating*.
– Anticipate upcoming traffic situations while driving to avoid unnecessary acceleration and braking.
– Utilize the engine braking effect.
– Avoid driving short distances or at high speeds when possible.
– Avoid adding extra weight to the vehicle if possible, for example by not leaving roof racks or bike racks installed when they are not needed.
– Have maintenance performed regularly on the vehicle.
– Do not drive with winter tires during the summer. ▶

– Make sure the tire pressure is correct ⇨ *page 332*.

Tips

The amount of noise produced by the vehicle can increase significantly when driving with a sporty style. Show respect to others around you and the environment with the way you operate your vehicle, especially at night.

Steering

Adjusting the steering wheel position

The steering wheel position is adjustable up and down and forward and back.

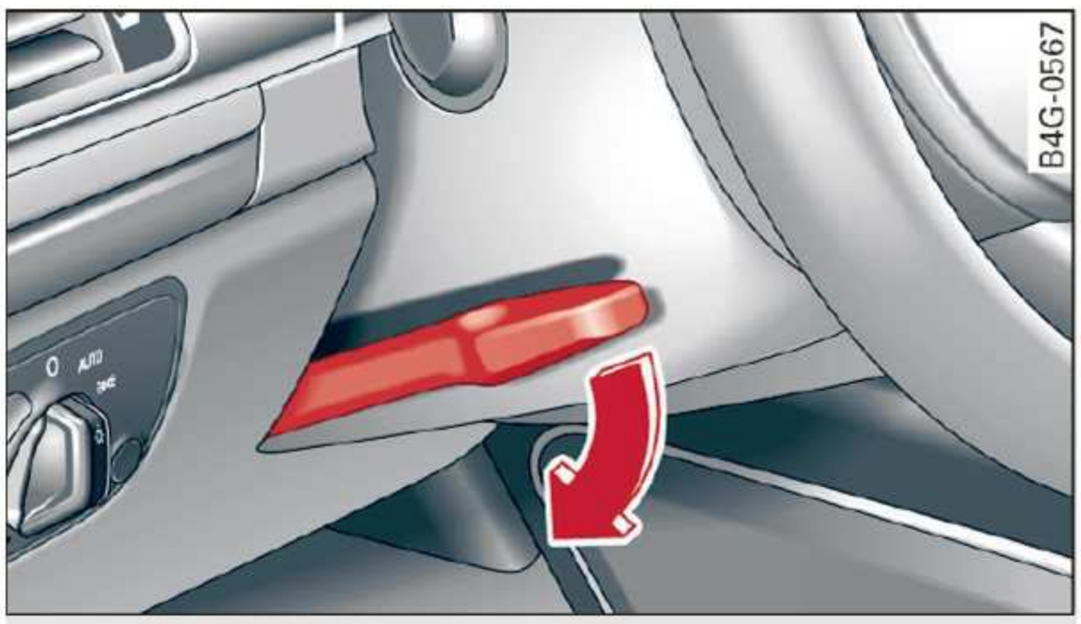


Fig. 86 Steering column: lever for adjusting the steering wheel position

- ▸ Pull the lever in the direction of the arrow ⇨ ⚠.
- ▸ Bring the steering wheel into the desired position.
- ▸ Push the lever against the steering column until it is secure.

WARNING

Incorrect use of the steering wheel adjustment and an incorrect seating position can cause serious injuries.

– Only adjust the steering column when the vehicle is stationary so that you do not lose control of the vehicle.
– Adjust the driver's seat or steering wheel so that there is at least a 10 in (25 cm) distance between your chest and the steering wheel. If you do not maintain this distance, the airbag system will not be able to provide its full protection.
– If your physical characteristics prevent you from sitting at least 10 in (25 cm) or more away from the steering wheel, see if an authorized Audi dealer or authorized Audi Service Facility can provide adapters that will help.
– If your face is level with the steering wheel, the airbag does not provide as much protection during a collision. Always make sure that the steering wheel is level with your chest.
– Always hold the steering wheel with your hands in the 9 o'clock and 3 o'clock positions to reduce the risk of injury if the airbag deploys.
– Never hold the steering wheel in the 12 o'clock position or with both hands on the rim or the center of the steering wheel. Holding the steering wheel incorrectly significantly increases the risk of injury to the hands, arms and head if the driver airbag deploys.

Shifting into gear

Description

Applies to: vehicles with manual transmission

In vehicles with a manual transmission, you shift into gears manually. The gearshift lever is labeled with the positions of the individual gears. Please note that the reverse gear can only be engaged when the gearshift lever is pushed downward.

Note

– Always press the clutch pedal all the way down when shifting.
– Release the clutch pedal completely after shifting. Do not rest your foot on the clutch pedal.
– Always select the gear that corresponds to the current vehicle speed and engine RPM.
– Do not hold the vehicle on inclines when the clutch is “grinding”.
– Bring the vehicle to a complete stop before shifting into reverse gear.

Starting and stopping the engine

Starting the engine

The START ENGINE STOP button switches the ignition on and starts the engine.



Fig. 87 Center console: START ENGINE STOP button

Requirement: the key must be in the vehicle.

Starting the engine

Applies to: vehicles with manual transmission

- ▸ Press the clutch pedal all the way down and move the shift lever to the neutral position.

Applies to: vehicles with automatic transmission

- ▸ Press the brake pedal.

- ▸ Press the START ENGINE STOP button ⇨ *fig. 87*. The engine will start.

Switching the ignition on or off

If you would like to switch the ignition on without starting the engine, follow these steps:

- ▸ Press the START ENGINE STOP button without pressing the clutch pedal (for manual transmissions) or the brake pedal (for automatic transmissions). Vehicles without the Start/Stop system*: the needle in the tachometer moves into the **READY** position.
- ▸ To switch the ignition off, press the button again. The needle in the tachometer moves into the **OFF** position.

Equipment that uses a lot of electricity is switched off temporarily when you start the engine.

If the engine does not start immediately, the starting procedure stops automatically after a short time. If this is the case, repeat the starting procedure after approximately 30 seconds.

Start/Stop system*

See the information in ⇨ *page 80, Start/Stop system*.

WARNING

To reduce the risk of asphyxiation, never allow the engine to run in confined spaces.

Note

Avoid high engine speed, full throttle, and heavy engine load if the engine has not reached operating temperature yet. You could damage the engine.

For the sake of the environment

Do not let the engine run while parked to warm up. Begin driving immediately. This reduces unnecessary emissions.

Tips

- Some noise after starting the engine is normal and is no cause for concern.
- If you leave the vehicle with the ignition switched on, the ignition will switch off after a certain amount of time. Make sure that electrical equipment such as the exterior lights are switched off.

Starting the engine

- ▸ Bring the vehicle to a full stop.
- ▸ Press the START ENGINE STOP button ⇨ *page 78, fig. 87*.

Steering lock[1)]

The steering locks when you turn the engine off using the START ENGINE STOP button and open the driver's door. The locked steering helps prevent vehicle theft. ▶

1) This function is not available in all countries.

Emergency off function*

If it is absolutely necessary, the engine can also be turned off while driving at speeds starting at 4 mph (7 km/h). To stop the engine, press the START ENGINE STOP button twice in a row or press and hold it one time.

WARNING

- Never turn off the engine before the vehicle has come to a complete stop. Switching it off before the vehicle has stopped may impair the function of the brake booster and power steering. You would then need to use more force to steer and brake the vehicle. The fact that you cannot steer and brake as usual may increase the risk of accidents and serious injuries.
- If you leave the vehicle, switch the ignition off and take the vehicle key with you. If you do not do this, the engine could be started and electrical equipment such as the power windows could be activated. This can lead to serious injuries.
- For safety reasons, always park the vehicle with the selector lever in the "P" position (automatic transmission) or with 1st gear engaged (manual transmission). Otherwise the vehicle could roll away unintentionally.

Note

If the engine has been under heavy load for an extended period of time, heat builds up in the engine compartment after the engine is switched off and there is a risk of damaging the engine. For this reason, let the engine run at idle for approximately two minutes before shutting it off.

Tips

For up to 10 minutes after stopping the engine, the radiator fan may turn on again automatically or it may continue to run, even if the ignition is switched off.

Messages

Remote control key: key not detected. Is the key still in the vehicle?

This indicator light turns on and this message appears if the vehicle key is removed from the vehicle when the engine is running. If the vehicle key is no longer in the vehicle, you cannot switch the ignition on or start the engine once you stop it. You also cannot lock the vehicle from the outside.

Remote control key and smartphone not detected. Are your key and smartphone still in the vehicle?

This indicator light turns on and this message appears if the vehicle key and smartphone are removed from the vehicle while the engine is running. If the vehicle key and smartphone are no longer in the vehicle, you cannot switch the ignition on or restart the engine once you stop the engine. You also cannot lock the vehicle from the outside.

Remote control key: hold back of key against the designated area. See owner's manual

If the indicator light turns on and this message appears, there is a malfunction ⇨ *page 79*.

Hold back of key on the designated area, or place your smartphone in the charging cradle

If the indicator light turns on and this message appears, there is a malfunction ⇨ *page 79*.

Starting the engine when there is a malfunction



Fig. 88 Center console/vehicle key: starting the engine if there is a malfunction

It may not be possible to start the engine under certain circumstances, for example, if the battery in the vehicle key is drained, if interference is affecting the key, or if there is a system malfunction.

▸ Hold the vehicle key vertically in the location indicated ⇨ *fig. 88*.

Applies to: vehicles with manual transmission

▸ Press the clutch pedal.

Applies to: vehicles with automatic transmission

▸ Press the brake pedal.

▸ Press the START ENGINE STOP button. The engine will start.

▸ Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Start/Stop system

Description

Applies to: vehicles with Start/Stop system

The Start/Stop system can help increase fuel economy and reduce CO_2 emissions.

In Start/Stop mode, the engine shuts off automatically when stopped, for example at a traffic light. The ignition and important assist systems such as power steering and the brake booster will remain available during the Stop phase. The engine will restart automatically when needed.

The Start/Stop system is automatically activated once the ignition is switched on.

Basic requirements

– The driver's door and hood must be closed.
– Applies to: automatic transmission: The selector lever must be engaged in the “P”, “N”, or “D” position.
– Applies to: manual transmission: The gearshift lever must be in the neutral position.
– The steering wheel must not be turned far in either direction.
– The vehicle must have driven faster than 2 mph (3 km/h) since the last time it stopped.
– A trailer must not be hitched to the vehicle.

Note

Always switch the Start/Stop system off when driving through water ⇨ *page 81*.

Tips

– Depending on the driving situation, the engine may already stop when **coasting** before the vehicle has come to a complete stop [1].
– Applies to: automatic transmission: If you select the “D” selector lever position after shifting into reverse, the vehicle must be driven faster than 6 mph (10 km/h) in order for the Start/Stop system to become active again. This makes it possible to maneuver without stopping the engine.

Stopping/starting the engine

Applies to: vehicles with Start/Stop system

Applies to: vehicles with manual transmission

▸ When the vehicle is stationary, shift to neutral and release the clutch pedal. The engine will switch off. The Ⓐ indicator light appears in the information line at the bottom of the instrument cluster display. The needle in the tachometer also moves into the **READY** position.

▸ The engine will restart if you press the clutch pedal. The indicator light turns off.

Applies to: vehicles with automatic transmission

▸ Press and hold the brake pedal until the vehicle has stopped. The Ⓐ indicator light appears in the instrument cluster once the engine stops automatically.

▸ The engine starts again when you remove your foot from the brake pedal. The indicator light turns off.

Tips

– Press the brake pedal during a Stop phase to keep the vehicle from rolling. ▶

1) In certain countries.

– The ignition will turn off if you press the START ENGINE STOP button during a Stop phase.
– Applies to: automatic transmission: You can control if the engine will stop or not by reducing or increasing the amount of force you use to press the brake pedal. For example, if you only lightly press on the brake pedal in stop-and-go traffic or when turning, the engine will not switch off when the vehicle is stationary. If you press the brake pedal harder, the engine will switch off.

Starting and stopping the engine automatically

Applies to: vehicles with Start/Stop system

The system checks if certain conditions are met before and during the Stop phase, and determines if the engine stops and how long it remains stopped. For example, if power usage is high, the engine will not be stopped. Along with other conditions, the following factors influence the automatic engine start or stop:

– Environmental conditions (slopes, inclines, elevation, temperature)
– Battery (charge status, temperature, power usage)
– Engine temperature
– Assist systems
– Driving behavior

Depending on the engine, the indicator light may appear if the engine is not stopped.

Switching the ignition off automatically

Applies to: vehicles with Start/Stop system

If you leave the vehicle during a Stop phase, the engine can be restarted within approximately 30 seconds if the doors are closed, the driver's safety belt is fastened, and the brake pedal is pressed.

If you leave the vehicle longer than 30 seconds, the ignition will switch off automatically to prevent the vehicle battery from draining. If this is the case, the message **Start/stop system: ignition will be switched off in 30s** will appear in the instrument cluster and, if the low beam headlights are switched on, the parking lights will switch on instead. The parking lights will switch off after approximately 30 minutes or when you lock the vehicle.

The ignition also switches off when you lock the vehicle from the outside during a Stop phase.

If the Start/Stop system has not turned off the engine or if you have switched the Start/Stop system off manually, the engine will continue to run and the ignition will not switch off automatically.

WARNING

To reduce the risk of asphyxiation, never allow the engine to run in confined spaces.

Tips

Applies to: vehicles with automatic transmission

If you leave the vehicle with the "D/S" or "R" selector lever position engaged, the parking brake is automatically set.

Manually switching the Start/Stop system off and on

Applies to: vehicles with Start/Stop system

The Ⓐ OFF button is located above the selector lever in the center console.

▸ Press Ⓐ OFF to switch on or off. The LED in the button turns on when the function is switched off.

Tips

If you switch the system off during a Stop phase, the engine will start again automatically.

Messages

Applies to: vehicles with Start/Stop system

Start/stop system: deactivated. Please start engine manually

This message appears when specific conditions are not met during a Stop phase. The Start/Stop system will not be able to restart the engine. The engine must be started with the START ENGINE STOP button. ▶

Start/stop system: malfunction! Function unavailable. Please contact Service

There is a malfunction in the Start/Stop system. Drive the vehicle to an authorized Audi dealer or authorized Service Facility as soon as possible to have the malfunction corrected.

Electromechanical parking brake

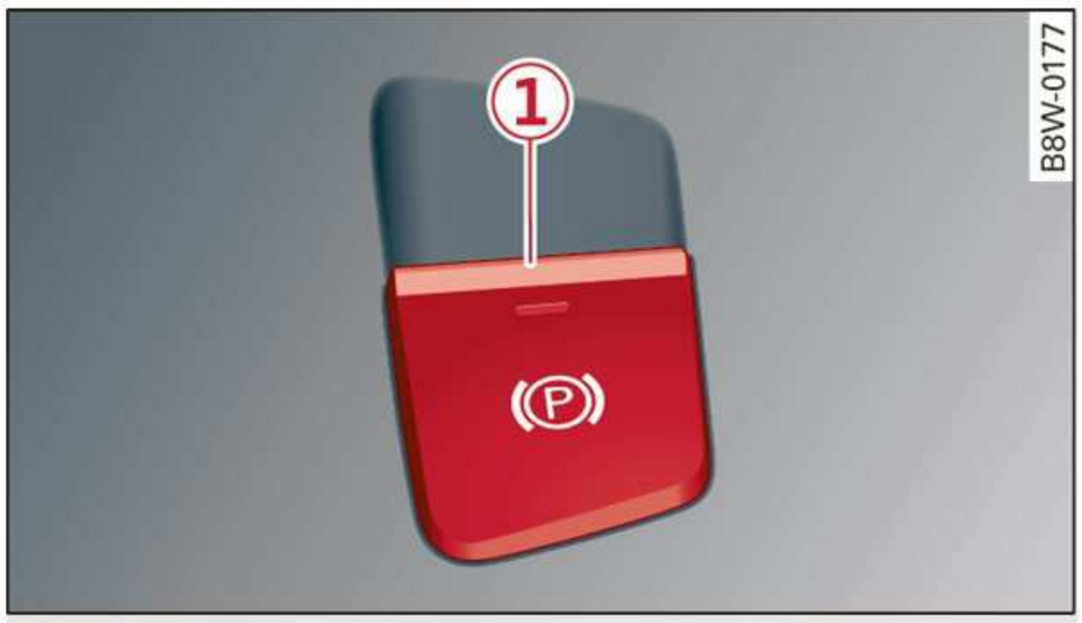


Fig. 89 Center console: parking brake

Your vehicle is equipped with an electromechanical parking brake (1) ⇨ *fig. 89*. The parking brake is designed to prevent the vehicle from rolling unintentionally and replaces the hand brake.

Setting/manually releasing the parking brake

- ▸ Pull the Ⓟ switch to set the parking brake. The LED in the switch turns on. The PARK / Ⓟ indicator light also turns on.
- ▸ To release the parking brake manually, press the brake or accelerator pedal while the ignition is switched on, and press the Ⓟ switch at the same time. The LED in the button and the indicator light will turn off.

Releasing the parking brake automatically

Requirement: the doors must be closed and the driver's safety belt must be fastened.

- ▸ To start driving and release the parking brake automatically, press the accelerator pedal as usual.

In addition to releasing the parking brake automatically, other convenience and safety functions are available when you start driving ⇨ *page 83, Starting to drive*.

Preventing the automatic parking brake release

The vehicle could begin rolling unintentionally when the parking brake is released if the vehicle is on a hill or towing a trailer.

- ▸ To prevent the parking brake from releasing automatically, pull and hold the Ⓟ switch and press the accelerator pedal. The parking brake remains set and prevents the vehicle from rolling backward.
- ▸ You can release the Ⓟ switch again once you are sure that you are giving enough driving force to the wheels by pressing the accelerator pedal.

Emergency braking function

You can use the emergency braking function in an emergency situation, or if the standard brakes are malfunctioning or the pedal is obstructed.

- ▸ Pull and hold the Ⓟ switch.
- ▸ As soon as you release the Ⓟ switch or accelerate, the braking stops.

Pulling and holding the Ⓟ switch while driving the vehicle activates the emergency braking function. The hydraulic brake system will brake all four wheels. The braking effect is similar to heavy braking ⇨ ⚠.

To reduce the risk of activating the emergency braking by mistake, a warning tone (buzzer) sounds when the Ⓟ switch is pulled. Emergency braking stops as soon as the Ⓟ switch is released or the accelerator pedal is pressed.

Parking

- ▸ Press the brake pedal to stop the vehicle.
- ▸ Pull the Ⓟ switch to set the parking brake.
- ▸ Applies to: automatic transmission: Select the "P" selector lever position.
- ▸ Turn the engine off ⇨ ⚠.
- ▸ Applies to: manual transmission: Engage 1st gear.
- ▸ Turn the steering wheel when parking on inclines so that the wheels will roll into the curb if the vehicle starts moving. ▶

WARNING

- Never accelerate or release the clutch pedal carelessly when a gear or a selector lever position (automatic transmission) is engaged while the vehicle is stationary and the engine is running. Pressing the accelerator pedal will cause the vehicle to move, and this could result in an accident.
- Emergency braking should only be used in an emergency, when the when the standard brake pedal is malfunctioning or obstructed. During emergency braking, your vehicle will brake similar to heavy braking. ESC and the associated components (ABS, ASR, EDL) cannot overcome the laws of physics. A full brake application while driving through curves or in poor road or weather conditions can cause the vehicle to slide or the rear of the vehicle to swerve, which increases the risk of an accident.
- If the power supply fails, you cannot set the parking brake once it is released. If this is the case, stop the vehicle on level ground and secure it by engaging 1st gear (manual transmission) or selecting the "P" selector lever position (automatic transmission). See an authorized Audi dealer or authorized Audi Service Facility for assistance.
- Always set the parking brake when leaving your vehicle, even if for a short period of time. If the parking brake is not set, the vehicle could roll away, increasing the risk of an accident.
- If you leave the vehicle, switch the ignition off and take the vehicle key with you. This applies particularly when children remain in the vehicle. Otherwise, children could start the engine, release the parking brake, or operate electrical equipment such as power windows, which increases the risk of an accident.
- No one, especially children, should remain in the vehicle when it is locked. Locked doors make it more difficult for emergency workers to enter the vehicle, which puts lives at risk.

Note

Do not leave your vehicle unattended while the engine is running, because this increases the risk of an accident.

Tips

Applies to: vehicles with automatic transmission

When stopping at a traffic signal or stopping in city traffic, you can set the parking brake manually. The vehicle does not have to be held with the brake pedal. The parking brake eliminates the tendency to creep when a selector lever position is engaged. As soon as you press the accelerator pedal, the parking brake releases automatically and the vehicle starts to move ⇨ *page 83*.

Tips

- Occasional noises when the parking brake is set and released are normal and are not a cause for concern.
- The parking brake goes through a self-test cycle at regular intervals when the vehicle is stopped. Any noises associated with this are normal.
- If there is a power failure, the parking brake will not set if it is released, and it will not release if it is set ⇨ ⚠. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Starting to drive

Various convenience and safety functions may be available when the vehicle begins driving, depending on vehicle equipment.

Starting on hills with the parking brake set

Requirement: the doors must be closed and the driver's safety belt must be fastened.

▸ To start driving comfortably when on a hill, set the parking brake and begin driving as usual. The braking force of the parking brake does not release automatically until the wheels build up enough driving force. ▶

Starting on hills with hill hold assist

Hill hold assist makes it easier to start on hills.

Requirement: the driver's door must be closed and the engine must be running.

► To activate hill hold assist, press and hold the brake pedal for several seconds. The vehicle must be facing uphill.

After releasing the brake pedal, the braking power is maintained briefly ⇨ ⚠ to prevent the vehicle from rolling back when starting. This allows you to begin driving more easily.

⚠ WARNING

– If you do not begin driving immediately or the engine stalls after releasing the brake pedal, your vehicle may begin to roll backward. Press the brake pedal or set the parking brake immediately.
– The intelligent technology of hill hold assist cannot overcome the limitations imposed by natural physical laws. The increased comfort offered by hill hold assist should not cause you to take safety risks.
– Hill hold assist cannot hold the vehicle in place on all hills (for example, if the ground is slippery or icy).
– To reduce the risk of an accident, always make sure the vehicle is situated safely while stationary.

Driving offroad

General information

Applies to: allroad

The Electronic Stabilization Control (ESC) functions are enhanced for driving offroad. Offroad mode can be activated when driving in situations where slippage or a differential lock function is necessary ⇨ *page 139*. The hill descent assist is also available, which automatically brakes the vehicle to maintain a constant speed ⇨ *page 140*. In addition, your Audi provides continuous all wheel drive.

However, your Audi is not an offroad vehicle. Only drive in terrain that is suitable for the vehicle and your driving ability. Never take any unnecessary risks!

After driving offroad

– After driving offroad, remove branches and other debris from the radiator grille, underbody, and wheels. Look especially for foreign objects (such as stones) that may be stuck in the tire tread.
– Clean the vehicle body and underbody and inspect the vehicle for possible damage.
– Clean the windows, headlights, tail lights and the license plate if they are dirty.
– Perform a brake test (especially after driving through water).

⚠ WARNING

– Be especially aware and attentive when driving under difficult conditions. Vehicle damage and injuries may occur when driving at excessively high speeds or with incorrect driving maneuvers.
– Always adjust your speed and driving style to the roads, terrain, traffic and weather conditions. Drive especially slowly if there is low visibility when offroad.
– Please note that the wheels can spin more and the vehicle can swerve when in offroad mode, especially when the road is slippery or has loose surface material.
– Driving stability is reduced when in offroad mode.

For the sake of the environment

Avoid harming the environment and show consideration for nature.

Tips

Only drive where it is permitted and always stay on the provided roads and paths.

Driver messages

Applies to: allroad

There is only one right way to drive in difficult conditions: slowly and with caution!

Observe the following when driving on unpaved roads:

- Only drive in terrain that is suitable for the vehicle and your driving ability. Never take any unnecessary risks!
- Drive slowly and carefully.
- Pay attention to the **ground clearance** of your vehicle.
- Activate the **offroad mode** as needed ⇨ *page 139*.
- Use the **hill descent assist** when driving down steep hills ⇨ *page 140*.

Difficult terrain

When driving in unfamiliar areas and offroad, drive slowly and keep on the watch for unexpected obstacles (such as potholes, rocks, tree stumps, etc.).

To prevent the vehicle from bottoming out and to reduce the risk of underbody damage, you should drive across uneven ground on only one side of the vehicle so that only two of your wheels cross the uneven area, instead of driving across the center of the uneven area with all four wheels.

Drive quickly through sandy or marshy off-road sections and do not stop, if at all possible.

Driving through water

Also read the information found in ⇨ *page 76*.

Automatic transmission

Introduction

Applies to: vehicles with automatic transmission

The automatic transmission is controlled electronically. The transmission shifts up or down automatically depending on which drive program is selected.

When a **moderate driving style** is used, the transmission selects the most economical driving mode. The transmission upshifts at a lower RPM and downshifts at a higher RPM to improve fuel efficiency.

The transmission switches to a sporty mode after a kick-down or when the driver uses a **sporty driving style** characterized by quick accelerator pedal movements, heavy acceleration, frequent changes in speed, and traveling at the maximum speed.

If desired, the driver can also select the gears *manually* **(tiptronic mode)** ⇨ *page 88*.

S tronic transmission

The S tronic is a dual-clutch transmission. Power is transferred using two clutches that work independently from one another. They replace the torque converter used in conventional automatic transmissions and allow the vehicle to accelerate without a noticeable interruption in traction.

tiptronic transmission

In the tiptronic transmission, power is transferred by a torque converter.

Selecting a selector lever position

Applies to: vehicles with automatic transmission

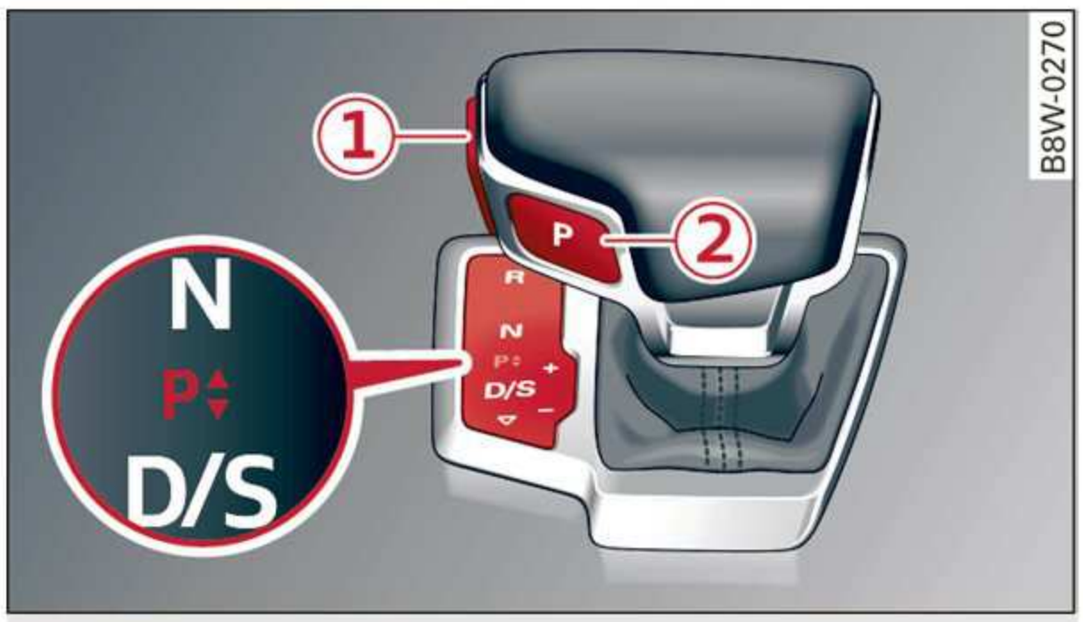


Fig. 90 Center console: selector lever

The current selector lever position is shown next to the selector lever ⇨ *fig. 90*. The current selector lever position is also shown in the instrument cluster display.

- You may need to release the selector lever lock depending on which selector lever position is selected and which one you would like to select.
- To do this, press the release button (1) on the selector lever ⇨ *fig. 90*. ▶

- To engage the nearest selector lever position, move the selector lever forward or back until you feel the first pressure point. The selector lever will return to its original position.
- To shift beyond the nearest selector lever position, move the selector lever past the pressure point into the desired position. The selector lever will return to its original position.

For example, you can skip over the "N" position if you would like to go directly from "D" into "R".

Selector lever lock

The selector lever lock reduces the risk of selecting a position unintentionally, which can cause the vehicle to roll. When engaging some selector lever positions, you must press the release button (1) on the selector lever and/or press the brake pedal ⇨ *fig. 90*.

You must press the brake pedal to engage a selector lever position when the engine is running and the vehicle is stationary.

You do not have to press the brake pedal if you shift from "D" to "R" within one second. This allows you to “rock” the vehicle to free it when it is stuck.

P - Park

This selector lever position prevents the vehicle from rolling. Only shift into park when the vehicle is stationary ⇨ ⚠. To select the "P" selector lever position, press the "P" button (2) on the selector lever ⇨ *fig. 90*. **P** appears next to the selector lever.

Applies to: vehicles with S tronic transmission: The parking lock can only be released when the ignition is switched on and the brake pedal is pressed. To release the parking lock, press the brake pedal, press the release button (1) on the selector lever, and select the desired position ⇨ *fig. 90*. The engine must also be started in order to engage the "D" or "R" selector lever position.

Applies to: vehicles with tiptronic transmission: The parking lock can only be released when the engine is running and the brake pedal is pressed. To release the parking lock, press the brake pedal, press the release button (1) on the selector lever, and select the desired position ⇨ *fig. 90*.

“P" engages automatically if you switch the engine off while the selector lever is in "D", "E", "S", "R", or manual mode.

If you switch the engine off when the "N" selector lever position is selected, the transmission remains in "N" for approximately 30 minutes and then "P" is engaged. The vehicle is not secured from rolling in the "N" selector lever position, so you need to set the parking brake Ⓟ ⇨ *page 82*.

You must use the parking lock emergency release before towing the vehicle ⇨ *page 91*.

R – Reverse

The reverse gear is engaged in this position. Only select reverse gear when the vehicle is stationary and the engine is running at idle speed ⇨ ⚠. To engage the "R" selector lever position, press the brake pedal, press the release button (1) on the selector lever, and select the "R" position ⇨ *fig. 90*.

A tone will sound when the reverse gear is engaged.

N - Neutral (idle)

The transmission is in idle in this position. To engage the "N" selector lever position, press the release button (1) on the selector lever and shift into the "N" position ⇨ *fig. 90*.

If you switch the engine off when the "N" selector lever position is selected, the transmission remains in "N" for approximately 30 minutes and then "P" is engaged.

You cannot select the "N" position when the ignition is switched off. When driving through an automatic car wash, first select the "N" position and then turn the engine off.

For safety reasons, the vehicle cannot be locked when the transmission is in the "N" position.

D/S - Driving forward

When the transmission is in the "D/S" position, it can be operated either in the normal "D" mode or in the "S" sport mode. Move the selector lever ▶

back to engage the "S" sport mode. You can only select the "S" selector lever position when the "D" or "E" position is selected. To select the "D" or "E" position again when "S" is engaged, move the selector lever back ⇨ ⚠. To shift from "N" to "D" when traveling at speeds below 1 mph (2 km/h), press the brake pedal and shift into the "D" position ⇨ ⚠.

In the **normal mode** "D", the transmission automatically selects the correct gear. It depends on engine load, vehicle speed and driving style.

Select the **sport mode** "S" for sporty driving. The vehicle makes full use of the engine's power. Shifting may become noticeable when accelerating.

The "S" selector lever position engages automatically when you select the **dynamic** mode in drive select*.

⚠ WARNING

Read and follow all WARNINGS.

– Before starting to drive, check if the desired selector lever position is displayed next to the selector lever.
– The vehicle can roll even if the ignition is switched off.
– Power is still transmitted to the wheels when the engine is running at idle. To prevent the vehicle from “creeping”, you must keep your foot on the brake in all selector lever positions (except "P" and "N") when the engine is running.
– Before opening the hood, select the "P" selector lever position and set the parking brake. This reduces the risk of an accident. Always read and follow the applicable warnings ⇨ *page 309, Working in the engine compartment*.

Tips

If you accidentally select "N" while driving, take your foot off the accelerator pedal and wait for the engine to slow down to idle before selecting "D" or "S".

Driving tips

Applies to: vehicles with automatic transmission

Starting the engine

▸ The "P" or "N" position must be selected.

Starting from a stop

▸ Press and hold the brake pedal.
▸ Start the engine ⇨ *page 78*.
▸ Press the locking button (1) on the selector lever and select the "D", "E", "S" or "R" position ⇨ *page 85*.
▸ Wait a moment until the transmission shifts. You will notice a slight movement when the gear engages.
▸ Release the brake pedal and press the accelerator pedal ⇨ ⚠.

Various convenience functions are available for starting on hills ⇨ *page 83*.

Stopping temporarily

▸ Press the brake pedal to stop the vehicle, for example at a traffic light. Do not press the accelerator pedal when doing this.
▸ To prevent the vehicle from rolling when you start driving, set the parking brake when stopping on steep hills ⇨ ⚠.
▸ The parking brake will release automatically and your vehicle will begin to move when the doors are closed, the driver's safety belt is fastened, and you accelerate as usual.

Stopping or parking

If the selector lever is not in the "P" position when you open the driver’s door, the vehicle could roll.

▸ Press and hold the brake pedal ⇨ ⚠.
▸ Set the parking brake.
▸ To select the "P" selector lever position, press the "P" button (2) on the selector lever ⇨ *page 85, fig. 90*.

Under certain conditions, such as driving in the mountains, it may be helpful to switch to manual mode temporarily to adapt to the driving conditions *manually* ⇨ *page 88*.

On hills, set the parking brake first and then shift into the "P" position ⇨ *page 82*. This prevents too ▶

much stress from being placed on the locking mechanism.

WARNING

- The vehicle can roll even when the engine is switched off.
- Unintended vehicle movement can lead to serious injuries.
- To reduce the risk of an accident, do not press the accelerator pedal when changing the selector lever position while the vehicle is stationary and the engine is running.
- To reduce the risk of an accident, never select the "R" or "P" positions while driving.
- Do not inadvertently press the accelerator pedal when the vehicle is stationary. Pressing the pedal increases risk of accident because the vehicle will move, even if parking brake is set.

Hill descent control

Applies to: vehicles with automatic transmission

The hill descent control system assists the driver when driving down hills.

Hill descent control activates when the transmission is in the "D" or "S" position and you press the brake pedal. The transmission automatically selects a gear that is suitable for the hill. Hill descent control tries to maintain the speed that was selected at the time of braking, within physical and technical limitations. If may still be necessary to adjust the speed with the brake pedal.

Hill descent control switches off once the hill levels out or if you press the accelerator pedal.

When operating the cruise control system* ⇨ *page 95*, hill descent control is also activated when the speed is set.

WARNING

Hill descent control may not be able to maintain a constant speed under all conditions. Always be ready to apply the brakes.

Shifting manually (tiptronic mode)

Applies to: vehicles with automatic transmission

The tiptronic mode allows the driver to shift the gears manually.



Fig. 91 Center console: shifting manually with the selector lever

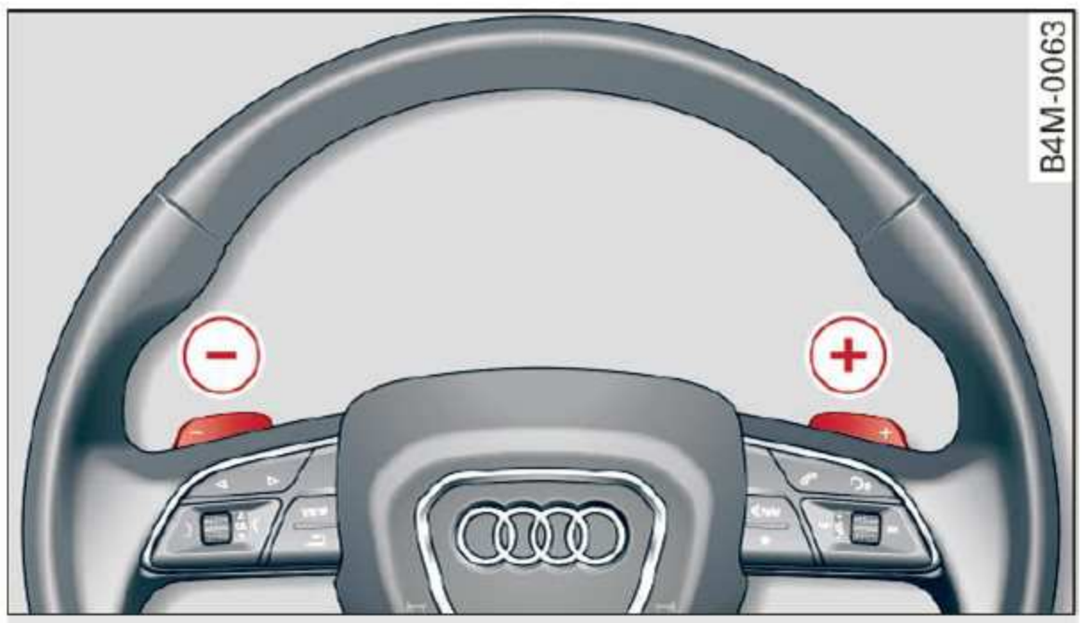


Fig. 92 Steering wheel: shift paddles*

Shifting with the selector lever

You can shift into tiptronic mode while the vehicle is stationary or while driving.

- ▸ To shift into tiptronic mode, push the selector lever from the "D/S" position to the right. As soon as the transmission switches over, the "M" transmission setting will appear in the instrument cluster display.
- ▸ To shift up a gear, tap the selector lever forward ⊕ ⇨ *fig. 91*.
- ▸ To shift down a gear, tap the selector lever backward ⊖.
- ▸ To switch tiptronic mode off, push the selector lever back into the "D/S" position.

Shifting with the shift paddles

Applies to: vehicles with shift paddles

You can operate the shift paddles in the "D/S" or "M" selector lever positions. ▶

- ▸ To shift up a gear, tap the shift paddle ⊕ ⇨ *fig. 92*.
- ▸ To shift down a gear, tap the ⊖ shift paddle.
- ▸ To shift into the lowest gear, hold the ⊖ shift paddle.
- ▸ If you do not press a shift button within a short time while in the "D/S" position, the transmission will return to automatic mode. To keep shifting using the shift paddles, move the selector lever to the right out of the "D/S" position.
- ▸ When you want to shift out of tiptronic mode, press and hold the ⊕ shift paddle for a longer period of time or move the selector lever back and release it.

The transmission automatically shifts up or down before critical engine speed is reached.

The transmission only allows manual shifting when the engine speed is within the permitted range.

Tips

– If you shift to the next lowest gear, the transmission will only shift if the engine will not be over-revved.
– With kick-down, the transmission shifts to a lower gear, depending on vehicle speed and engine speed.
– tiptronic does not work if the transmission is running in emergency mode.

Kick-down

Applies to: vehicles with automatic transmission

Kick-down enables maximum acceleration.

When you press the accelerator pedal down beyond the resistance point, the automatic transmission downshifts into a lower gear and the engine utilizes its full power, if the vehicle speed and engine RPM permit. It shifts up into the next higher gear once the maximum permitted engine RPM is reached.

WARNING

Please note that the wheels could spin on slick or slippery roads when kick-down is active.

Launch control program

Applies to: vehicles with S tronic transmission

The launch control program provides the best possible acceleration when starting from a stop.

Requirement: the engine must be at operating temperature and the steering wheel must not be turned.

- ▸ Deactivate the Start/Stop system* ⇨ *page 81*. The LED in the Ⓐ OFF button turns on.
- ▸ Applies to: sedan: when the engine is running, press the OFF button briefly ⇨ *page 139*. The OFF indicator light turns on and the message **Stabilization control (ESC): sport. Warning! Restricted stability** appears in the instrument cluster display.
- ▸ Applies to: allroad: when the engine is running, press the OFF button briefly ⇨ *page 139*. The OFF indicator light turns on and the message **Stabilization control (ESC): offroad. Warning! Reduced stability** appears in the instrument cluster display.
- ▸ Pull the selector lever back out of the "D/S" position briefly to select the "S" position or select the **Dynamic** driving mode in drive select* ⇨ *page 127*.
- ▸ Press the brake pedal firmly with your left foot and hold it all the way down for at least one second.
- ▸ At the same time, press the gas pedal all the way down with your right foot until the engine reaches and stays at a high RPM level.
- ▸ Remove your foot from the brake pedal within five seconds ⇨ ⚠.

WARNING

– Always adapt your driving to the traffic flow.
– Only use the Launch control program when road and traffic conditions allow it and other drivers will not be endangered or bothered by your driving and the vehicle's acceleration.
– Please note that the drive wheels can spin and the vehicle can break away when sport mode/offroad mode is switched on, especially when the road is slippery. ▶

– Once the vehicle has started moving, press the OFF button briefly to turn the sport mode/offroad mode off.

Tips

– After accelerating using the Launch Control, the temperature of some vehicle components may increase greatly. If that happens, the function will not be available for a few minutes to reduce the risk of damage. After a cool-down period, Launch Control will be available again.
– When accelerating using the launch control program, all vehicle parts are subject to heavy loads. This can lead to increased wear.

Messages

Applies to: vehicles with automatic transmission

Transmission: too hot. Please stop vehicle

Do not continue driving. Select the "P" selector lever position and contact an authorized Audi dealer or authorized Audi Service Facility for assistance.

Transmission: malfunction! Safely stop vehicle

Do not continue driving. Stop the vehicle as soon as possible in a safe location and secure it so it does not roll. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Selector lever: malfunction! You can continue driving. Please contact Service

There is a system malfunction in the transmission. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

P button: malfunction! Auto P when engine off. Please contact Service

There is a malfunction in the "P" button on the selector lever. The transmission automatically engages "P" when you switch off the engine. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Selector lever: malfunction! Gear change only possible using both paddle levers. Please contact Service

There is a system malfunction in the transmission. You can continue driving with restricted function. The selector lever is not working. Gears can only be selected by tapping both shift paddles at the same time when the vehicle is stationary ⇨ *page 88, fig. 92*. Pay attention to the selected transmission position in the instrument cluster display. The parking lock engages automatically when you turn off the engine. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Transmission: please press brake pedal and select gear again

Press the brake pedal and select the desired selector lever position again. You can then continue driving.

Transmission: too hot. Please adapt driving style

The transmission temperature has increased significantly. Drive very cautiously or take a break from driving until the temperature returns to the normal range and the indicator light turns off.

Transmission: malfunction! You can continue driving. See owner's manual

There is a system malfunction in the transmission. You may continue driving. Drive to an authorized Audi dealer or authorized Audi Service Facility soon to have the malfunction corrected.

Transmission: malfunction! You can continue driving in D until engine is off

There is a system malfunction in the transmission. The transmission is switching to emergency mode. If you turn the engine off, you will not be able to select any other selector lever positions after starting the engine again. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected. ▶

Transmission: malfunction! You can continue driving with limited function. Please contact Service

There is a system malfunction in the transmission. The transmission is switching to emergency mode. This mode only shifts into certain gears or may no longer shift at all. The engine may stall. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Transmission: malfunction! You can continue driving with limited function. No reverse gear

There is a system malfunction in the transmission. The transmission is switching to emergency mode. This mode only shifts into certain gears or may no longer shift at all. The engine may stall. You cannot engage the reverse gear. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Danger of rolling away! P not possible. Please apply parking brake

– The parking lock was released using the emergency release ⇨ *page 91*. Or
– The parking lock can no longer be engaged. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Move selector lever to automatic position

There is a malfunction in the tiptronic mode. End tiptronic mode by pushing the selector lever to the left into the "D/S" position.

Parking lock emergency release

Applies to: vehicles with automatic transmission

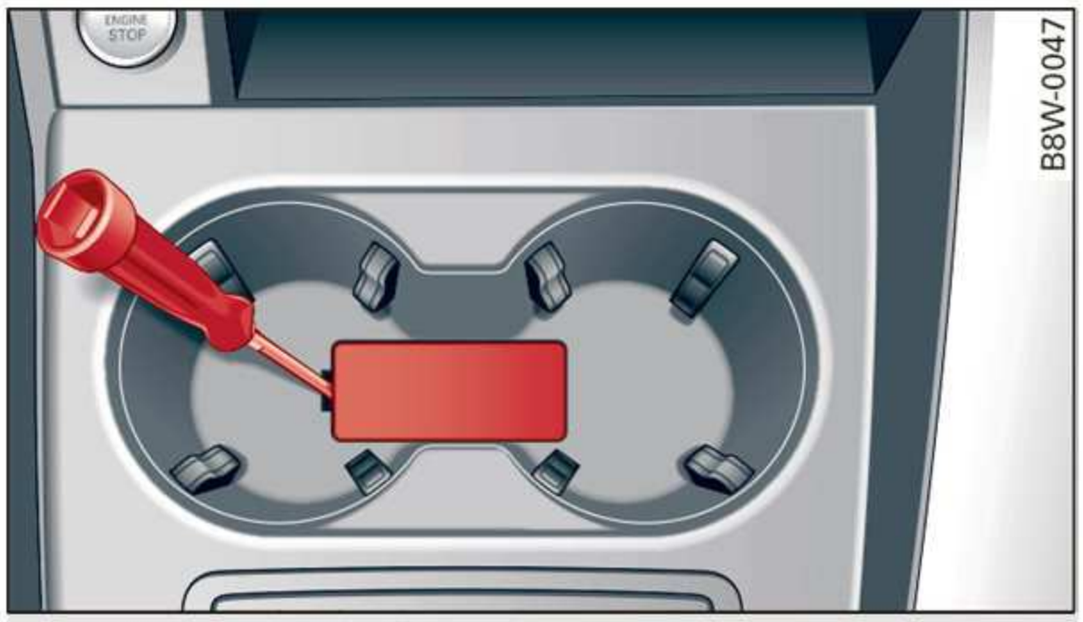


Fig. 93 Front cup holder: removing the cover

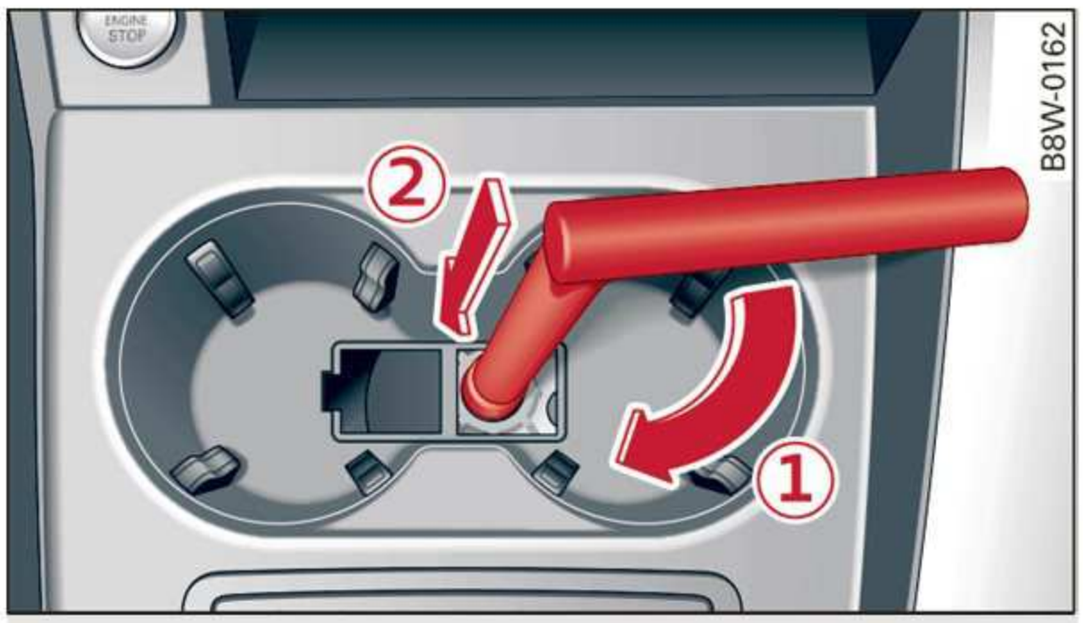


Fig. 94 Front cup holder: parking lock emergency release

The emergency release is located in the front cup holder under a cover. Read and follow the important instructions about towing ⇨ *page 364*.

Releasing the parking lock using the emergency release

- ► To prevent your vehicle from rolling away, set the parking brake Ⓟ ⇨ *page 82*.
- ► Remove the rubber mat.
- ► Pry the cover off the opening using the screwdriver from the vehicle tool kit ⇨ *fig. 93*.
- ► Insert the socket wrench from the vehicle tool kit into the opening ⇨ *fig. 94*.
- ► Turn the socket wrench clockwise ① until it stops and press it downward ② until it locks into place.
- ► Leave the socket wrench inserted.

Resetting the parking lock

- ► Press the brake pedal and start the engine.
- ► Keep the brake pedal pressed and engage the following selector lever positions one after the other: "N", "D" and back to "N".
- ► Turn the engine off again. ▶

- ▸ Grasp the socket wrench with both hands and carefully pull it upward to remove.
- ▸ Reinsert the cover and rubber mat.

If the parking lock is released with the emergency release, the indicator light turns on in the instrument cluster and “N” is engaged. The message **Danger of rolling away! P not possible. Please apply parking brake** also appears.

WARNING

– The parking lock must be released using the emergency release before towing the vehicle.
– The parking lock may only be released using the emergency release if the parking brake is set. If it is not working, secure the vehicle from rolling using the brake pedal or other suitable means, such as blocking a front and a rear wheel. An unsecured vehicle may roll away, which increases the risk of an accident.
– Only activate the emergency release while on a level surface or a slight slope.
– To reduce the risk of an accident, you must not drive when the emergency release is activated.

Note

Due to the risk of damage, carefully remove the socket wrench when you reset the parking lock.

Trailer towing

Driving with a trailer

General information

Your vehicle is primarily intended for transporting people and luggage. However, if you drive with a trailer, follow the technical requirements, the operation and driving tips, and the legal regulations.

Driving with a trailer affects the vehicle's fuel consumption, performance and wear. It also requires higher concentration from the driver.

WARNING

Do not transport any people in a trailer due to the risk of fatal injury.

Technical requirements

Certain requirements must be met when towing a trailer.

Trailer hitch

Only use a trailer hitch with a removable ball hitch mount and ball hitch. The trailer hitch must be permitted for the vehicle, the trailer and the permitted total weight of the trailer being pulled. Above all, it must be securely and safely attached to the vehicle trailer.

Never mount a trailer hitch on the bumper. The trailer hitch must be mounted in a way that does not impair the function of the bumper. Do not make any changes to the exhaust system and the brake system.

Check regularly if the trailer hitch is securely mounted. Always follow the instructions given by the trailer hitch manufacturer.

Trailer brakes

If the trailer has its own brake system, then follow the manufacturer specifications. However, the brake system on the trailer must never be connected to the vehicle brake system.

Engine cooling system

Driving with a trailer means a higher load on the engine and the cooling system. The cooling system must be designed for additional load and contain enough coolant ⇨ (!).

Note

Longer inclines cannot be driven without a suitable cooling system, especially if the outside temperatures are high. Otherwise, this increases the risk of engine damage.

Operating instructions

Several things must be noted when towing a trailer.

Towing capacity

Your vehicle can only be operated with class 1 or class 2 trailers.

Load distribution

Poor cargo load and distribution can negatively impact vehicle handling. Load the trailer based on the following criteria as much as possible:

- Store objects in the vehicle luggage compartment, if possible. The vehicle should always carry the heaviest possible load and the trailer should have the lightest possible load.
- Distribute the load in the trailer so that the heavy objects are as close to the axle as possible.
- Secure objects so that they do not slide.
- Utilize the maximum permitted tongue weight if possible.

Tires

Set the tire pressure on your vehicle for a “full load”; see the tire pressure sticker ⇨ *page 332*. If necessary, also adjust the tire pressure on the trailer according to the manufacturer's specifications.

The trailer and the vehicle should be equipped with winter tires when driving in winter temperatures. ▶

Outside mirrors

If you cannot see the traffic behind the trailer with the standard exterior mirrors, then you must attach additional exterior mirrors. Adjust them so you have a sufficient visibility behind you.

Exterior lighting

Follow the legal regulations regarding the lighting equipment on your trailer. Contact an authorized Audi dealer or authorized Audi Service Facility for more information.

Before you start driving, check all lighting equipment on the trailer while it is hitched to the vehicle.

The headlight range control automatically adjusts the light range of the headlights.

Safety chains

Make sure the safety chains are correctly applied when pulling a trailer. The chains should hang enough so that the trailer can drive around curves. However, they must not touch the ground.

Note

Attachments retrofitted on the vehicle may cause damage, especially on the trailer hitch ball head. In cases of damage, have the function checked by an authorized Audi dealer or authorized Audi Service Facility.

Tips

– Block the wheels with chocks when parking on inclines if the trailer is loaded.
– Having the vehicle inspected between the inspection intervals is recommended if you tow a trailer frequently.
– Avoid driving with a trailer during the vehicle break-in period.

Driving with a trailer

Driving with a trailer requires extra caution.

Speed

Adhere to the legal speed limits. Follow the legal regulations specific to the country.

As the speed increases, the driving stability of the trailer decreases. Therefore you should not exceed the maximum legal speed limit when there are unfavorable road, weather, and/or wind conditions. This especially applies when driving downhill.

Hill

When you start driving uphill or downhill, trailers may tilt or sway sooner than when driving on a level surface. If small swaying movements have already occurred, you can stabilize the trailer by firmly braking immediately. Never try to "straighten out" the trailer by accelerating.

Downshift before driving on hills to utilize the engine braking effect ⇨ ⚠.

Brakes

When using a trailer with overrun brakes, first brake gently then quickly. This reduces the risk of jerking while braking if the trailer wheels lock up.

Engine coolant temperature

Pay attention specifically to the coolant temperature display when there are high outside temperatures, and when driving on long inclines ⇨ *page 14*. Shift to a higher gear in a timely manner.

WARNING

Constant braking causes the brakes to overheat and can substantially reduce braking performance, increase braking distance, or cause complete failure of the brake system.

Assist systems

Speed warning system

Description

Applies to: vehicles with speed warning system

The speed warning system helps you to stay below a specified maximum speed that can be set, changed or deleted in the Infotainment system.

The speed warning system warns you if you are exceeding the maximum speed that you have set. A warning tone will sound as soon as your speed exceeds the stored value slightly. The MPH / Km/h indicator light and a message appear in the instrument cluster display at the same time. The MPH / Km/h indicator light and the message turn off if the speed falls back below the stored maximum speed.

Setting a threshold is recommended if you would like to be reminded when you reach a certain maximum speed. Situations where you may want to do so include driving in a country with a general speed limit or if there is a specified maximum speed for winter tires.

Setting the warning threshold

Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Driver assistance** > **Speed warning** > **Manual**.

Tips

Regardless of the speed warning system, you should always monitor your speed using the speedometer and make sure you are following the legal speed limit.

WARNING

- Always pay attention to the traffic around your vehicle when the cruise control system is in operation. As the driver, you are always responsible for controlling your vehicle speed and the distance between your vehicle and other vehicles.
- For safety reasons, cruise control should not be used in the city, in stop-and-go traffic, on winding roads, and when road conditions are poor (such as ice, fog, gravel, heavy rain, and conditions that could lead to hydroplaning), because this increases the risk of an accident.
- Switch the cruise control off temporarily when driving in turning lanes, highway exits, or in construction zones.
- To reduce the risk of an accident, you should only resume the stored speed if it is suitable for the current traffic conditions.

Note

Before driving downhill a long distance on a steep hill, decrease your speed and select a lower gear. This makes use of the engine braking effect and reduces the load placed on the brakes.

Tips

The brake lights turn on when the brakes are applied automatically.

Cruise control system

Description

Applies to: vehicles with cruise control system

The cruise control system assists the driver in maintaining a constant speed above approximately 15 mph (20 km/h). The system maintains the desired speed by braking and accelerating.

Switching the system on

Applies to: vehicles with cruise control system

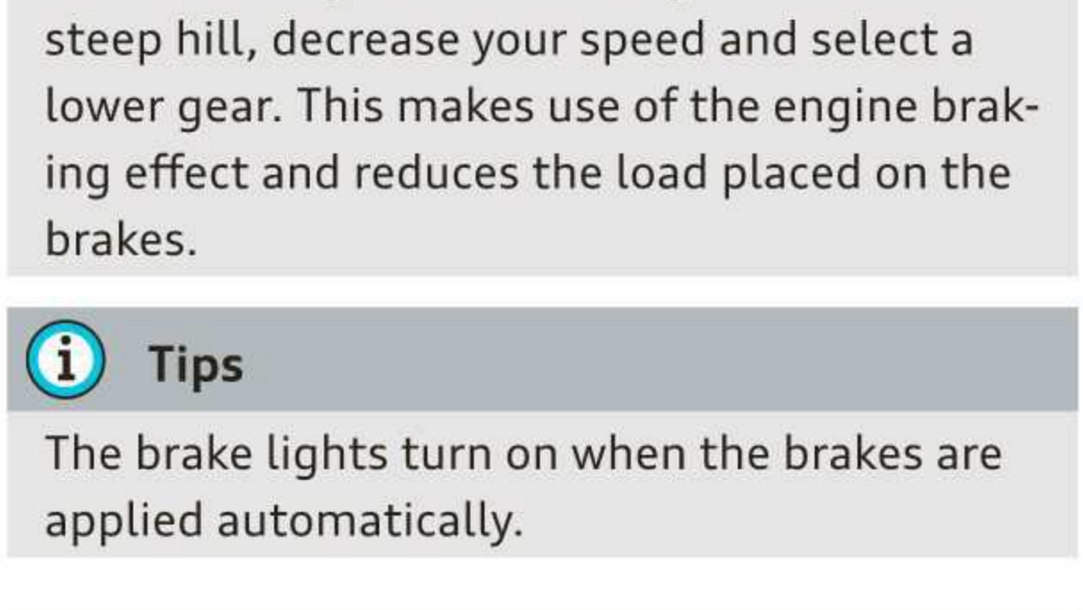


Fig. 95 Lever: switching on the cruise control system

Requirement: switch the ignition on. ▶

8W0012721BG

▸ To switch the system on, pull the lever toward you to position ①.

The CRUISE or indicator light and the corresponding message will appear in the instrument cluster.

WARNING

If the brakes are malfunctioning (for example, overheating) while the cruise control system is switched on, it may shut off automatically.

Preselecting or activating a cruise control speed

Applies to: vehicles with cruise control system

When the vehicle is stationary, you can preselect the cruise control speed or activate the speed while driving.

Requirement: the system must be switched on.

▸ To preselect a cruise control speed when the vehicle is stationary, tap the lever toward ⊕/⊖ ⇨ *page 95, fig. 95*.
▸ To activate the cruise control speed, pull the lever toward position ① while driving, or
▸ To set the current driving speed as the cruise control speed, press the button Ⓐ on the lever.

The active cruise control speed is indicated with the CRUISE or indicator light in the instrument cluster.

An additional indicator appears in the head-up display*.

Changing the cruise control speed

Applies to: vehicles with cruise control system

▸ To increase or decrease the cruise control speed in small increments, tap the lever up to the first level toward ⊕/⊖ ⇨ *page 95, fig. 95*.
▸ To increase or decrease the cruise control speed in larger increments, tap the lever up to the second level toward ⊕/⊖.
▸ To increase or decrease the cruise control speed continuously, tap and hold the lever at the first or second level toward ⊕/⊖.

Overriding or deactivating the cruise control speed

Applies to: vehicles with cruise control system

You can override or deactivate the cruise control system. When you deactivate the system, your cruise control speed will be stored and you can resume that speed.

Requirement: the system must be switched on and activated.

Overriding

▸ To temporarily override the cruise control speed, press the accelerator pedal.
▸ Once you release the accelerator pedal, the system will adjust back to the stored cruise control speed.

If you override the cruise control system for a long period of time, the cruise control system will be deactivated. The system indicator light will turn off and the cruise control speed will be stored.

Deactivating

▸ To deactivate the cruise control speed, press the lever toward ② (not locked into place) ⇨ *page 95, fig. 95*.
▸ Press the brake pedal.

WARNING

Resting your foot on the accelerator pedal could override the cruise control. This will prevent braking interventions by the system.

Switching the system off

Applies to: vehicles with cruise control system

When you switch the system off completely, the cruise control speed will be deleted.

Requirement: the system must be switched on.

▸ To switch the system off, press the lever toward ② (locked into place) ⇨ *page 95, fig. 95*, or
▸ Switch the ignition off.

Message

Applies to: vehicles with cruise control system

CRUISE / Speed control system: currently unavailable. See owner's manual

If the indicator light turns on and this message appears, the cruise control system has been deactivated. There is a temporary malfunction, for example the brakes are overheating. Switch the cruise control system on again later.

Camera-based traffic sign recognition

Description

Applies to: vehicles with camera-based traffic sign recognition

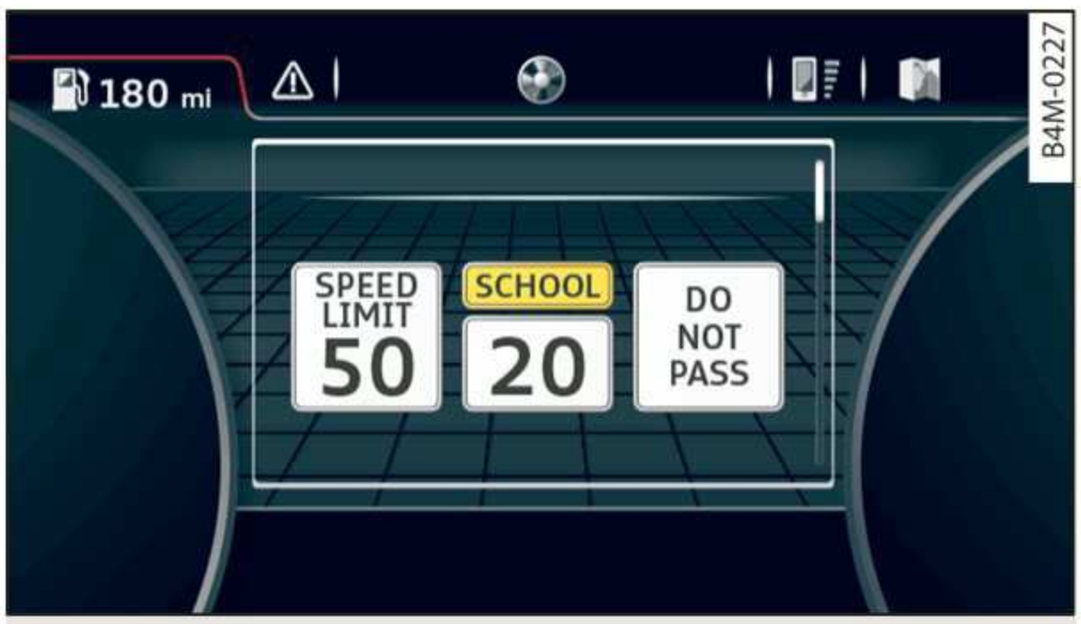


Fig. 96 Instrument cluster: traffic sign recognition

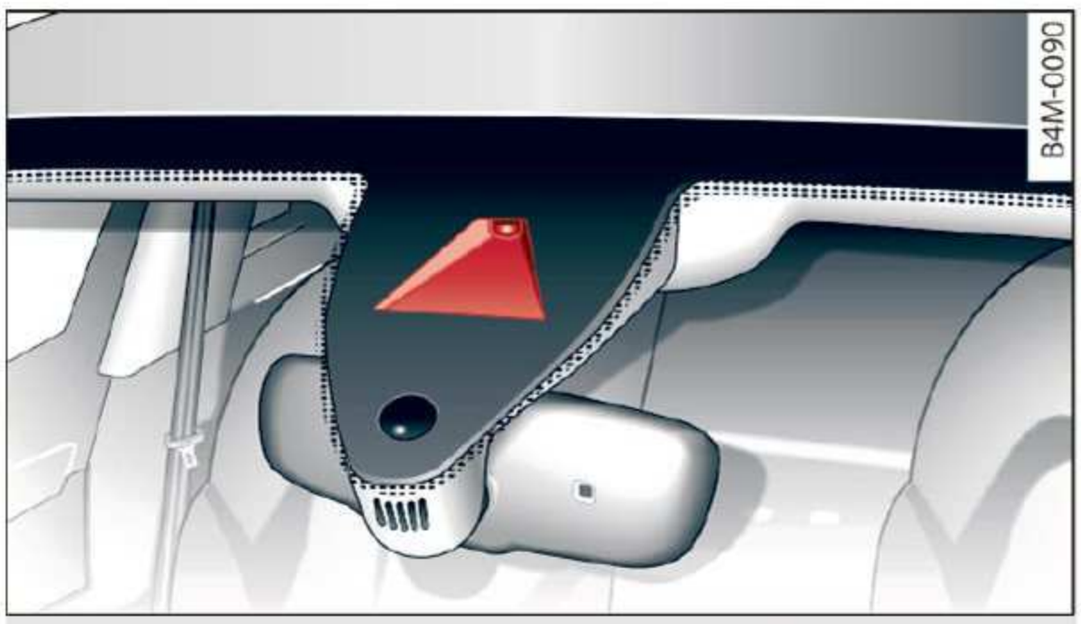


Fig. 97 Windshield: camera window for traffic sign recognition

Traffic sign recognition assists you when driving by displaying detected speed limits or signs prohibiting passing in the instrument cluster display ⇨ *fig. 96*. Within the limits of the system, the legal speed limits in school zones are detected and displayed.

General information

Traffic sign recognition can detect standard speed limit signs that are within the camera's visual field. With assistance from navigation data, detected speed limits are evaluated and shown in the display. The traffic sign for the current detected speed limit will blink in the display if you exceed the warning threshold set in the Infotainment system ⇨ *page 98*.

The traffic sign recognition is subject to certain system limitations and may be unavailable or only partially available in the following situations:

– When visibility is poor, such as in snow, rain, fog or heavy spray
– When there is glare, for example from oncoming traffic or the sun
– At high speeds
– If the camera's visual field ⇨ *fig. 97* is covered, for example by dirt or stickers. For information on cleaning, see ⇨ *page 342*.
– If the traffic signs are completely or partially covered, for example by trees, snow, dirt or other vehicles
– if speed traffic signs do not conform to the standards
– If traffic signs are damaged or bent
– If traffic signs are displayed on sign holders with electronic signs
– if the traffic signs or the configuration of the road have changed (navigation data is no longer up-to-date)

WARNING

Pay attention to traffic and the area around your vehicle when traffic sign recognition is turned on. The traffic signs installed on the road always take precedence over the display. The driver is always responsible for assessing the traffic situation.

– Under some circumstances, traffic sign recognition may not detect traffic signs correctly or detect them at all. As a result, the system may not display the correct speed limit or any speed limit.
– Traffic sign recognition does not adapt your vehicle's speed to match the speed limit!
– The display in the instrument cluster is based on the units of measurement used for speed in the country where the vehicle is being operated. As a result, the display **50** in ▶

the instrument cluster can mean either km/h or mph, depending on the country.

Operating

Applies to: vehicles with camera-based traffic sign recognition



Fig. 98 Instrument cluster: additional display

Accessing traffic sign recognition

▸ Select: the first tab > **Traffic signs**.

Setting a speed warning

You can set a warning threshold down to 10 mph (15 km/h). The traffic sign for the current detected speed limit will blink in the display if you exceed the set threshold.

▸ Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Driver assistance** > **Speed warning** > **Traffic sign based warning**.

Additional display

If a view other than the traffic sign recognition is selected in the instrument cluster display, the speed limit will be shown in another display ⇨ *fig. 98*. The current applicable speed limit will be shown there, if possible within the limits of the system.

Tips

– An additional indicator appears in the head-up display*.
– Your speed warning settings are stored automatically and assigned to the vehicle key in use.

Messages

Applies to: vehicles with camera-based traffic sign recognition

Traffic sign recognition: currently unavailable. Camera view limited due to surroundings

Function currently unavailable. Camera view restricted due to surroundings

This message appears if the camera's visual field is covered ⇨ *page 97, fig. 97*. The system will switch itself off.

Traffic sign recognition: currently limited. See owner's manual

This message appears if there is a malfunction in the navigation system, for example. The speed limit display is limited, which increases the risk of an incorrect display.

Traffic sign-based speed warning: currently unavailable. See owner's manual

There will be no warning when the set threshold is exceeded.

No traffic sign information available

There is no valid navigation data and no speed limits were detected. Or there is a recommended speed but there is not a speed limit (for example driving on and off the expressway).

Malfunction! See owner's manual

The system may not function correctly so it has been switched off. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Function not available in this country

The vehicle is in a country where the function is not available.

Lap timer

Introduction

Applies to: vehicles with lap timer

You can measure and analyze lap times with the lap timer in the display.

Opening the lap timer

- ▸ Open the first Vehicle tab (trip computer) using the ◁ ▷ button on the multifunction steering wheel.
- ▸ Select on the multifunction steering wheel: left control button > **Lap times**.

Operating the lap timer

- ▸ On the multifunction steering wheel, turn the left thumbwheel (7) ⇨ *page 15* until the desired menu item is displayed in the instrument cluster.
- ▸ Press the left thumbwheel to confirm the selection.

WARNING

Your focus should always be on driving your vehicle safely. As the driver, you have complete responsibility for safety in traffic. Only use the functions such as the lap timer in such a way that you always maintain complete control over your vehicle in all traffic situations.

Tips

You can retrieve information from the trip computer while the lap timer stopwatch is running.

Lap times and timing

Applies to: vehicles with lap timer

Requirement: the lap timer must be open ⇨ *page 99*.

Timing laps

- ▸ To start timing manually, select **Start lap 1** in the menu.
- ▸ To start timing automatically as soon as you begin to drive, select **Drive off to start lap 1** or **Start by driving off** in the menu.
- ▸ To measure the lap time, select **New lap** in the menu. This starts timing the next lap at the same time.

After completing a lap, the difference between the last lap and the previous best lap time will be indicated with a "–" or "+".

Pausing timing and displaying a split time

- ▸ To insert a pause ⏸, select **Pause** in the menu.
- ▸ To resume timing, select **Resume** in the menu.
- ▸ To display a split time, select **Split time** in the menu. The split time appears for approximately 10 seconds in the instrument cluster. The timing of the current lap continues.

Resetting timing

- ▸ Using the multifunction steering wheel, select **Reset times** in the menu.

Tips

– A maximum of 99 lap times can be measured.
– If timing is paused, you can continue it later even if you switch the ignition off.
– Saved lap times cannot be individually deleted from the total results.
– The saved lap timer values will remain after switching the ignition off.

Lap statistics

Applies to: vehicles with lap timer

Displaying lap statistics

You can display the number of laps driven, the fastest lap "+", the slowest lap "–", and the average time "Ø" in the instrument cluster.

- ▸ On the multifunction steering wheel, select the left control button > **Lap statistics** or **Statistics**.
- ▸ Turn the thumbwheel down or up to display the individual lap times.
- ▸ To return to the lap timing that was begun, press the left thumbwheel.

Resetting lap statistics

- ▸ On the multifunction steering wheel, select: the right control button > **Reset statistics**. ▶

Tips

The lap statistics list the lap times for the last 30 laps. The fastest and slowest lap time out of up to 99 measured laps are also displayed.

Predictive efficiency assist

Introduction

The predictive efficiency assist helps the driver to drive with anticipation and therefore helps to save fuel. The system accesses predictive trip data (including speed limits, hills, and the angle of curves) from the navigation system*. Information from the camera-based traffic sign recognition* is also applied to recognize traffic signs ⇨ *page 97*.

The messages displayed depend on the navigation data* being up-to-date and the correct identification by the traffic sign recognition*.

When adaptive cruise control* is switched off, the predictive efficiency assist only provides notifications without controlled interventions. See ⇨ *page 100, Predictive messages (efficiency assist)*.

When adaptive cruise control* is switched on, the system responds to upcoming situations automatically. See ⇨ *page 101, Predictive control (efficiency assist)*.

Predictive messages (efficiency assist)

Applies to: vehicles with predictive efficiency assist

Indicator in the instrument cluster display

Predictive messages appear in the instrument cluster display to show the driver the appropriate time to coast when a situation ahead requires you to drive at a lower speed.

The messages are only shown if the cruise control system* or adaptive cruise control* is switched off.

An additional indicator appears in the head-up display*.

Symbol	Meaning
	Remove your foot from the accelerator pedal to slow down, because there is a situation ahead that requires a lower speed.

If you see **Driver assistance** in the instrument cluster display, the following symbols will indicate which situation the system is currently reacting to.

Symbol	Meaning
MPH	Speed limit
km/h	Speed limit
	Intersection
	Traffic circle

If there are multiple situations, then a sequence of these situations will appear in the display.

WARNING

Pay attention to traffic and the area around your vehicle when the efficiency assist is switched on. The driver is always responsible for assessing the traffic situation.

Tips

- The wording of the message may vary depending on the driving mode set in drive select* ⇨ *page 126* and the current selector lever position (automatic transmission*). No messages are displayed when in the "S" selector lever position or in **Dynamic** mode.
- When a route is planned using the navigation system*, then system displays messages based on an assumed route. Without route guidance, the system displays messages based on an assumed route.
- There will not be a message for every situation ahead, for example if there is not enough distance remaining to react to the situation.
- No messages are displayed when at speeds under 20 mph (30 km/h).

Predictive control (efficiency assist)

Applies to: vehicles with Audi adaptive cruise control and predictive efficiency assist



Fig. 99 Instrument cluster: predictive control

Description

The predictive control [1)] uses the map information from the navigation system in order to react proactively when driving. Information from the camera-based traffic sign recognition* is also applied to recognize traffic signs ⇨ *page 97*. When coming up to areas with speed limits or changes in the course of the road (such as curves, intersections or traffic circles), the system brakes automatically and then accelerates back up to the set speed.

Overriding control

The driver can override the predictive control at any time by pressing the accelerator or brake pedal. If the system changes the vehicle speed to adapt to speed limits, you can change the speed using the lever ⇨ *page 106, fig. 106*.

Always switch off the predictive control in the following situations:

– When increased attention is needed from the driver
– In poor weather conditions such as snow or heavy rain
– When driving on roads in poor condition

Indicator in the instrument cluster display

When switching on the adaptive cruise control for the first time, a message will appear in the status line to indicate if predictive control is available.

The 50 mph symbol appears when the system is regulating the speed to match a speed limit. If this is the case, the system is regulating a speed of 50 mph (80 km/h). The speed is then taken over by the adaptive cruise control. The speed in the speedometer LED ring adjusts to the speed to be maintained ⇨ *page 105, fig. 105*. The ⇨ *fig. 99* symbol appears when there is an adaptation to the route ahead.

If you are in the **Driver assistance** display in the instrument cluster, then the following symbols will indicate which occurrence the system is currently responding to:

Symbol	Meaning
MPH	Speed limit
km/h	Speed limit
	Curve
	Intersection
	Traffic circle

WARNING

– Read the warnings on ⇨ ⚠ *in General information on page 103* and on ⇨ ⚠ *in Description on page 97*.
– Pay attention to traffic and the area around your vehicle when predictive control is switched on. The driver is always responsible for assessing the traffic situation.
– The system does not consider "right of way" rules and does not respond to traffic lights, so lack of driver attention in these situations can increase the risk of an accident.
– The system only considers traffic signs that give a speed limit.
– The permitted speed can be exceeded if the adaptation to a speed limit is incorrect. The driver is responsible for adhering to the permitted speed.
– The speed when driving through curves may be different from what you as a driver would ▶

1) This is not available in some countries.

do. Brake the vehicle yourself when needed to reduce the risk of an accident.

Tips

– If a speed limit is detected, the stored speed is also adjusted in the speedometer LED line when the adaptive cruise control is not active.
– The adaptation by the system depends on the driving mode set in drive select*.
– Switching off predictive control, for example when driving in low traffic zones, does not cause the adaptive cruise control to switch off.
– After switching on the ignition, the system initially adjusts to a speed of 80 mph (130 km/h) when driving onto highways without a speed limit. Then the system adjusts to the last speed stored by the driver.
– There is no adaptation to speed limits when driving through highway interchanges and when driving on or off the expressway.
– There is no predictive control at speed limits under 20 mph (30 km/h).
– If a speed limit is only detected by the camera and the actual speed is significantly higher, then the speed limit will blink in the display until you have reached the required speed ⇨ *page 98*.
– Incorrect values from the camera-based traffic sign recognition* or outdated navigation system map data can lead to incorrect or implausible control.
– When route guidance is switched on, the system adapts to the route provided by the navigation system. Driving without route guidance or leaving a route can result in implausible control.
– The system switches off when outside of a road system that is recorded in the navigation system map data.

Settings in the Infotainment system

Applies to: vehicles with predictive efficiency assist

Predictive messages*

▸ In the Infotainment system, select: MENU button > **Vehicle** > left control button > **Driver assistance** > **Efficiency assist**.

Predictive messages are shown when this function is switched on.

Predictive control*

▸ Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Driver assistance** > **Audi adaptive cruise control** > **Predictive control**.

Set speed limit - when this function is switched on, the system adjusts to the speed limits. This can also be done with at tolerance, if desired. In this scenario, you may fall below or exceed the set speed in favor of increased efficiency.

Adaptation to route ahead - when this function is switched on, the system adapts to the route ahead, such as reducing the speed when driving around curves.

Tips

No predictive messages are shown in vehicles without a navigation system.

Audi adaptive cruise control

Description

Applies to: vehicles with Audi adaptive cruise control



Fig. 100 Detection range

The adaptive cruise control system is a combination of speed and distance regulation. It assists the driver by both regulating the speed and maintaining a distance to the vehicle driving ahead, within the limits of the system. If the system detects a vehicle driving ahead, the adaptive cruise control can brake and accelerate your vehicle. This increases driving comfort during long trips on highways and in stop-and-go traffic (automatic transmission*).

What can adaptive cruise control do?

The adaptive cruise control system uses video, radar, ultrasound and navigation data. Vehicles driving ahead can be recognized up to 650 ft (200 m) away.

Predictive functions offer the driver additional comfort and contribute to the reduction in fuel consumption and CO_2 emissions ⇨ *page 101*.

On open roads with no traffic, it functions like a cruise control system. The stored speed is maintained. When approaching a vehicle driving ahead, the adaptive cruise control system automatically brakes to match that vehicle's speed and then maintains the set distance. As soon as the system does not detect a vehicle driving ahead, adaptive cruise control accelerates up to the stored speed.

Applies to: vehicles with automatic transmission

In stop-and-go traffic, adaptive cruise control can brake until the vehicle is stationary and then can also start driving again automatically under certain conditions ⇨ *page 107*.

In traffic jams or stop-and-go traffic, traffic jam assist can assist the driver ⇨ *page 109*.

Which functions can be controlled?

When you switch adaptive cruise control on, you can set the current speed as the “control speed” ⇨ *page 105, Switching on and off*.

When driving, you can stop cruise control ⇨ *page 108* or change the speed ⇨ *page 106* at any time.

You can also set the distance to the vehicle driving ahead and set the driving mode of the adaptive cruise control ⇨ *page 106*.

General information

Applies to: vehicles with Audi adaptive cruise control



Fig. 101 Front of the vehicle: sensors and video camera

The areas with the radar and ultrasonic sensors and the video camera ⇨ *fig. 101* must not be covered by stickers, deposits or any other objects, because this can interfere with the adaptive cruise control function. For information on cleaning, see ⇨ *page 342*. The same applies for any modifications made in the front area.

In some driving situations, the adaptive cruise control function is restricted:

– Vehicles can only be detected when they are within the sensor detection zones ⇨ *page 102, fig. 100*.
– The system has a limited ability to detect vehicles that are a short distance ahead, off to the side of your vehicle or moving into your lane.
– Objects that are difficult to detect such as motorcycles, vehicles with high ground clearance or an overhanging load are detected late or not detected at all.
– When driving through curves ⇨ *page 104*.
– When the vehicle is stationary ⇨ *page 104*.

WARNING

Always pay attention to the traffic around you when adaptive cruise control is switched on. As the driver, you are still responsible for your own speed and the distance to other vehicles. The adaptive cruise control is used to assist you. The driver must always take action to ▶

avoid a collision. The driver is always responsible for braking at the correct time.

– For safety reasons, do not use adaptive cruise control when the road surface is in poor condition and/or in bad weather conditions (such as ice, fog, gravel, heavy rain and hydroplaning). Using the system under these conditions increases the risk of an accident.
– Switch adaptive cruise control off temporarily when driving in turning lanes, on expressway exits (except if predictive control is switched on) or in construction zones. This prevents the vehicle from accelerating to the stored speed when in these situations.
– The adaptive cruise control system will not brake by itself if you put your foot on the accelerator pedal. Doing so can override the speed and distance regulation.
– When approaching stationary obstacles such as stopped traffic, adaptive cruise control will respond with limited function.
– Adaptive cruise control does not respond to people, animals, or crossing or oncoming objects.
– The function of the radar sensors can be affected by reflective objects such as guard rails, the entrance to a tunnel, heavy rain or ice.

Note

The sensors can be displaced by impacts or damage to the bumper, wheel housing and underbody. This can impair the adaptive cruise control. Have an authorized Audi dealer or authorized Audi Service Facility check their function.

Tips

For an explanation on conformity with the FCC regulations in the United States and the Industry Canada regulations, see ⇨ *page 370*.

In curves

Applies to: vehicles with Audi adaptive cruise control

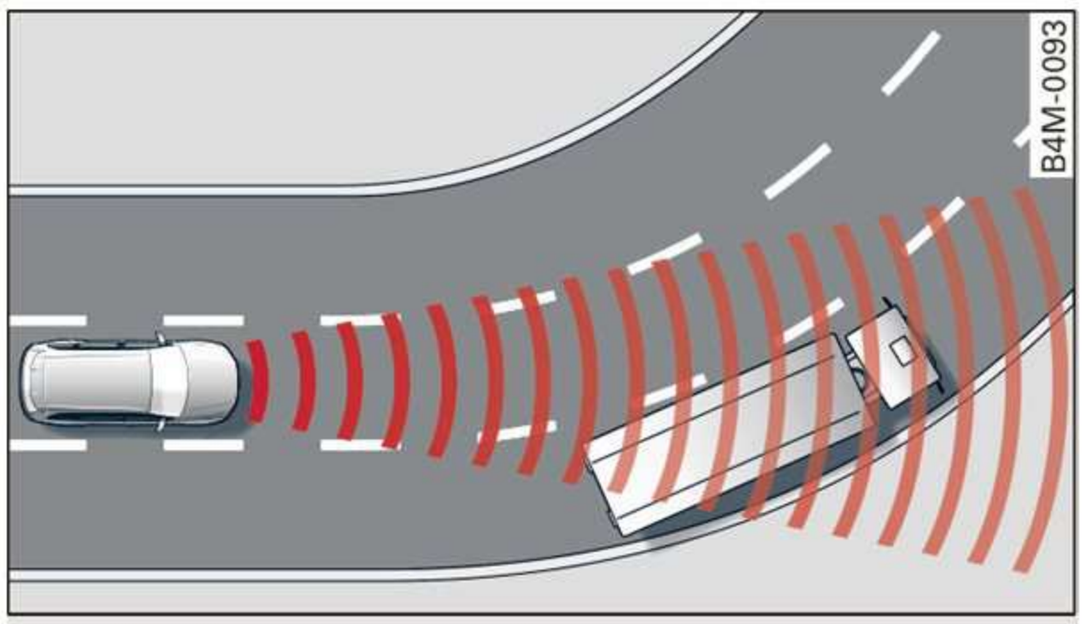


Fig. 102 Example: driving into a curve

When driving into a curve ⇨ *fig. 102* and out of a curve, the adaptive cruise control may react to a vehicle in the neighboring lane and apply the brakes. You can prevent that by pressing the accelerator pedal briefly.

Stationary vehicles

Applies to: vehicles with Audi adaptive cruise control

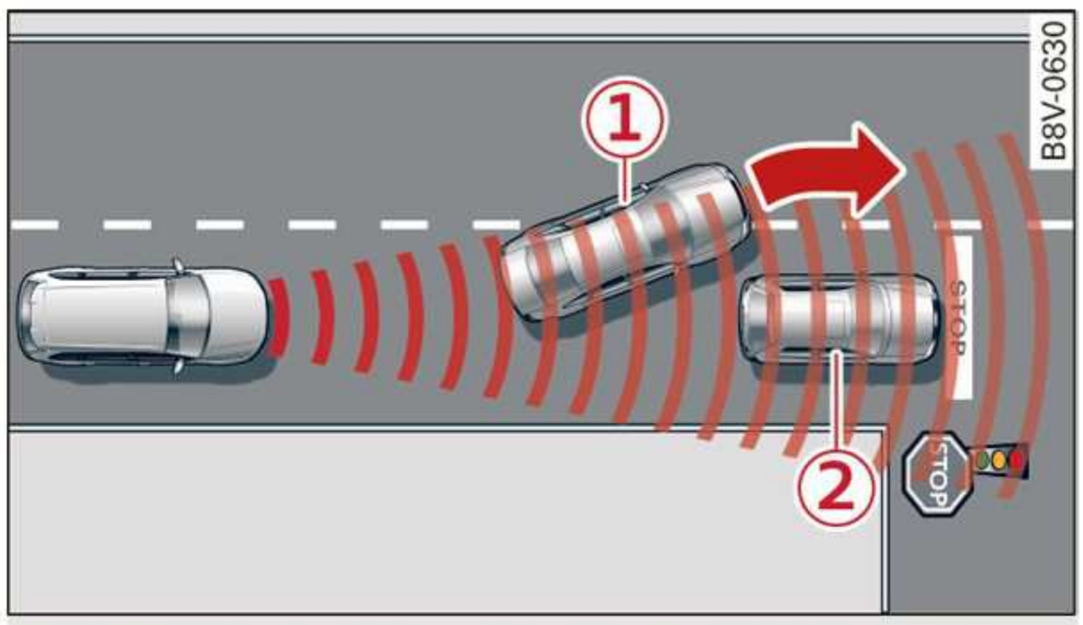


Fig. 103 Example: vehicle changing lanes and stationary vehicle

Within the limits of the system, adaptive cruise control can react to stationary vehicles ⇨ *fig. 103*, as long as you are driving slower than 30 mph (50 km/h) and the system classifies the possible passing maneuver as low. For example, if a vehicle that was already detected ① turns or changes lanes, the adaptive cruise control reacts to the stationary vehicle ahead of it ②.

Vehicles with manual transmission

Applies to: vehicles with Audi adaptive cruise control and manual transmission

The adaptive cruise control is available from 1st gear through 6th gear in the normal speed range. ▶

When the adaptive cruise control is turned on, you must press the clutch to shift gears (as usual). When shifting normally or when pressing the clutch, the adaptive cruise control remains turned on.

After you have engaged the gear, you do **not** need to press the gas pedal. The adaptive cruise control accelerates automatically if necessary.

If you press down on the clutch for too long or shift/couple improperly, the adaptive cruise control may turn off automatically.

Switching on and off

Applies to: vehicles with Audi adaptive cruise control



Fig. 104 Operating lever: switching on and off



Fig. 105 Instrument cluster: adaptive cruise control

You can set any speed between 20 mph and 95 mph (30 km/h and 150 km/h).

Indicator lights and messages in the instrument cluster display inform you about the current situation and setting.

An additional indicator appears in the head-up display*.

Switching adaptive cruise control on

► Pull the lever toward you into position ① ⇨ *fig. 104*.

Storing the speed and activating regulation

► To store the current speed, press the SET button ⇨ *fig. 104*. The stored speed is shown in the speedometer in the LED line Ⓐ and appears briefly in the status line Ⓓ ⇨ *fig. 105*.

► Automatic transmission: to activate control when stationary, the brake pedal must also be pressed.

Switching adaptive cruise control off

► Push the lever away from you into position ⓪ until it clicks into place. The message **ACC: off** appears.

Ⓑ Indicator lights

- Adaptive cruise control must be switched on. No vehicles are detected ahead. The stored speed is maintained.

- A vehicle driving ahead was detected. The adaptive cruise control system regulates the speed and distance to the vehicle driving ahead and accelerates/brakes automatically.

Applies to: automatic transmissions

- Adaptive cruise control must be switched on. A vehicle was detected ahead. Your vehicle is stationary and will not start driving automatically.

Applies to: automatic transmissions

- Adaptive cruise control must be switched on. No vehicles were detected ahead. Your vehicle is stationary and will not start driving automatically.

- The automatic braking is not enough to maintain a sufficient distance to a vehicle driving ahead. You must intervene ⇨ *page 109, Driver intervention request*.

Ⓒ Instrument cluster display

If the **Driver assistance** display is not shown in the instrument cluster display, you can open it ▶

using the multifunction steering wheel buttons ⇨ *page 15*.

Based on the graphic display, you can determine if the system is maintaining a distance to the vehicle driving ahead and what that distance is.

No vehicle - no vehicle was detected driving ahead.

Silver vehicle - a vehicle was detected driving ahead.

Red vehicle - request for driver intervention ⇨ *page 109*.

The five **distance bars** on the **gauge** Ⓒ represent the set distance (see ⇨ *page 106* for information on how to change the distance). If you fall below the selected distance, the distance bars become red from the bottom upward.

WARNING

Applies to: vehicles with automatic transmission: If you press the SET button when driving at speeds below 20 mph (30 km/h), the vehicle will accelerate automatically up to 20 mph (30 km/h), which is the minimum speed that can be set.

Tips

- If you switch the ignition or the adaptive cruise control system off, the set speed is erased for safety reasons.
- The Electronic Stabilization Control (ESC) and the Anti-Slip-Regulation (ASR) are automatically switched on when the adaptive cruise control is switched on.

Changing the speed

Applies to: vehicles with Audi adaptive cruise control



Fig. 106 Operating lever: changing the speed

- To increase or decrease the speed in smaller increments, tap the lever toward ⊕ or ⊖ ⇨ *fig. 106* to the first level.
- To increase or decrease the speed in larger increments, briefly tap the lever toward ⊕ or ⊖ to the second level.
- To increase or decrease the speed continuously, hold the lever toward ⊕/⊖ to the first or second level until the marking Ⓐ reaches the desired speed ⇨ *page 105, fig. 105*.

Preselecting a speed

You can also preselect the speed when adaptive cruise control is not active by moving the lever in the desired direction ⊕/⊖. Activate the previously selected speed by pulling the lever into position ② ⇨ *page 108, fig. 109*.

Setting the distance

Applies to: vehicles with Audi adaptive cruise control

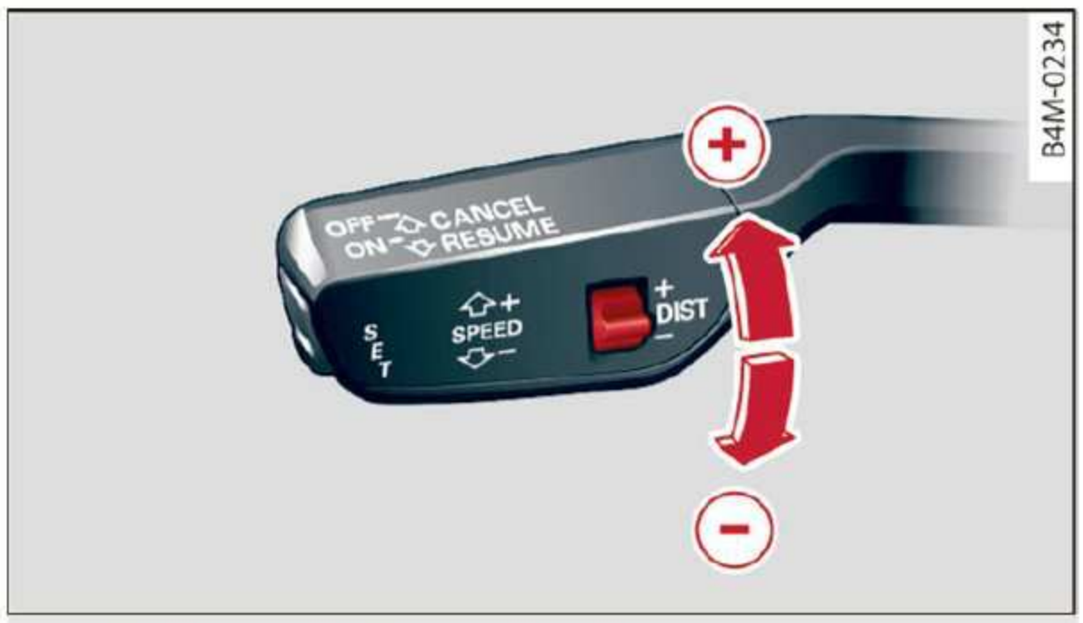


Fig. 107 Operating lever: setting the distance

- Tap the rocker switch to display the distance that is currently set.

► To increase or decrease the distance in increments, tap the switch again toward (+) or (-). The distance between the two vehicles will change in the instrument cluster display.

When approaching a vehicle driving ahead, the adaptive cruise control system brakes to match that vehicle's speed and then adjusts to the set distance. If the vehicle driving ahead accelerates, then the adaptive cruise control will also accelerate up to the speed that you have set.

The higher the speed, the greater the distance ⇨ ⚠. The **Distance 3** setting is recommended. That is equal to the general recommendation of "half the speed shown on the speedometer".

The distances provided are specified values. Depending on the driving situation and how the vehicle ahead is driving, the actual distance may be more or less than these target distances.

If you change the time gaps, the value you have just set appears briefly in the instrument cluster display, for example for **Distance 3**. This only occurs if the **Driver assistance** display is not currently shown in the display ⇨ *page 105, fig. 105*.

Distance 1: this setting corresponds to a distance of 92 ft (28 m) when traveling at 62 mph (100 km/h), or a time distance of 1 second.

Distance 2: this setting corresponds to a distance of 118 ft (36 m) when traveling at 62 mph (100 km/h), or a time distance of 1.3 seconds.

Distance 3: this setting corresponds to a distance of 164 ft (50 m) when traveling at 62 mph (100 km/h), or a time distance of 1.8 seconds.

Distance 4: this setting corresponds to a distance of 219 ft (67 m) when traveling at 62 mph (100 km/h), or a time distance of 2.4 seconds.

Distance 5: this setting corresponds to a distance of 328 ft (100 m) when traveling at 62 mph (100 km/h), or a time distance of 3.6 seconds.

WARNING

When setting the distance, the driver is responsible for adhering to any applicable legal regulations.

Tips

Depending on the selected driving program and distance, driving behavior when accelerating will vary from dynamic to comfortable ⇨ *page 108*.

Driving in stop-and-go traffic

Applies to: vehicles with Audi adaptive cruise control and automatic transmission



Fig. 108 Instrument cluster: safe start monitor

The adaptive cruise control system also assists you in stop-and-go traffic. If a vehicle driving ahead stops, your vehicle will brake and stay at a stop within the limits of the system.

Starting to drive with adaptive cruise control[1)]

As long as the message **ACC: automatic go** is displayed, your vehicle will begin driving when the vehicle driving ahead starts to move ⇨ ⚠.

If you are stopped for several seconds, your vehicle will no longer drive autonomously for safety reasons, and the message will turn off.

► To reactivate **ACC: automatic go** temporarily, pull the lever to position (2) ⇨ *page 108, fig. 109*.
► To resume manual control of the vehicle, tap the accelerator pedal. ▶

1) This is not available in some countries.

Safe start monitor

If an obstacle is detected when you start driving, you will be alerted to the danger by the indicator light and the image in the instrument cluster display ⇨ *fig. 108* ⇨ ⚠. An audio signal will also sound. Your vehicle will drive more slowly when starting. This may also occur in some situations when there is no apparent obstacle.

– Press the brake pedal to slow your vehicle down.

WARNING

If the message **ACC: automatic go**[1)] appears, your vehicle will start driving even if there is an obstacle between your vehicle and the vehicle driving ahead. This increases the risk of an accident.

Tips

– For safety reasons, your vehicle will only start to drive automatically if:
  – The driver's safety belt is fastened
  – All doors and the hood are closed
  – Your vehicle is not stopped for a long period of time

Interrupting cruise control

Applies to: vehicles with Audi adaptive cruise control



Fig. 109 Selector lever

Requirement: adaptive cruise control must be switched on.

Overriding cruise control

- ▸ To accelerate manually, pull the lever toward you into position ② and hold it there or press the accelerator pedal. The message **ACC: override** appears.
- ▸ To resume cruise control, release the lever or take your foot off the accelerator pedal.

Canceling cruise control while driving

- ▸ Move the lever into position ③. The message **ACC: standby** appears. Or
- ▸ Press the brake pedal.
- ▸ To resume the stored speed, move the lever toward you into position ②.

Canceling cruise control when stopped

Applies to: vehicles with automatic transmission

- ▸ Push the lever away from you into position ③. The message **ACC: standby** appears.
- ▸ To resume cruise control, press the brake pedal and pull the lever toward you into position ②.

WARNING

– It is dangerous to activate cruise control and resume the stored speed when the current road, traffic or weather conditions do not permit this. This increases the risk of an accident.
– Resting your foot on the accelerator pedal could override the cruise control. Braking interventions and corrective actions by the system may not occur.

Setting Audi adaptive cruise control

Applies to: vehicles with Audi adaptive cruise control

- ▸ Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Driver assistance** > **Audi adaptive cruise control**.

Storing the last distance[2)]

The last distance that was set will be stored after the ignition is switched off. If the distance is not ▶

1) This is not available in some countries.
2) This is not available in some countries and on some equipment versions.

stored, **Distance 3** is automatically set every time the ignition is switched on.

Driving program

Applies to: vehicles without Audi drive select

Depending on the selected driving program and distance, driving behavior when accelerating will vary from dynamic to comfortable.

Selecting the driving mode

Applies to: vehicles with Audi drive select

Depending on the selected Audi drive select mode and the distance that is set, the driving behavior will vary from dynamic to comfortable when accelerating ⇨ *page 127*.

Tips

Your settings are automatically stored and assigned to the vehicle key being used.

Driver intervention request

Applies to: vehicles with Audi adaptive cruise control



Fig. 110 Instrument cluster: request for driver intervention

The request for driver intervention instructs you to take over if the adaptive cruise control braking function is not able to maintain a sufficient distance to the vehicle driving ahead ⇨ *fig. 110*.

Traffic jam assist

Applies to: vehicles with traffic jam assist

Traffic jam assist supports the driver when driving in traffic jams or in heavy traffic.



Fig. 111 Turn signal lever: traffic jam assist button



Fig. 112 Instrument cluster: traffic jam assist

In a speed range under 40 mph (65 km/h), traffic jam assist can help to keep the vehicle within a lane calculated by the system. Within the limits of the system, the system controls the steering automatically when adaptive cruise control is switched on. Since traffic jam assist is only an assist system, the driver must always keep his or her hands on the steering wheel and be ready to steer. The driver can override the control at any time by actively steering.

The system is designed for driving on expressways and highways.

Switching traffic jam assist on and off

- Press the button to switch the system on and off ⇨ *fig. 111*.
- To turn the system off completely, select in the Infotainment system: MENU button > **Vehicle** > left control button > **Driver assistance** > **Traffic jam assist**.

If traffic jam assist was deactivated through the Infotainment system, you can continue operating the active lane assist using the ⇨ *fig. 111* button ⇨ *page 118*. The traffic jam assist functions are no longer available.

Requirements for using traffic jam assist:

– Traffic jam assist must be switched on in the Infotainment system.
– Adaptive cruise control must be switched on and active ⇨ *page 105*.

Always switch off traffic jam assist in the following situations:

– When increased attention is needed from the driver
– In poor weather conditions such as snow or heavy rain
– When driving on roads in poor condition
– In construction zones
– In city driving

Traffic jam assist availability:

If you are in the **Driver assistance** display in the instrument cluster, the indicator light and the message **Traffic jam assist available** appears if traffic congestion is detected. You can open the **Driver assistance** display using the multifunction steering wheel buttons ⇨ *page 15*. To activate traffic jam assist, you must press the ⇨ *fig. 111* button and switch on the adaptive cruise control ⇨ *page 105*.

Indicator lights

and - traffic jam assist is switched on. Vehicles driving ahead were detected. Your vehicle adapts while driving ⇨ *fig. 112*.

- Traffic jam assist switches off if the driver does not take over steering after multiple driver intervention requests. The system brakes the vehicle until it is stationary.

WARNING

Always keep your hands on the steering wheel so you can be ready to steer at any time. The driver is always responsible for staying in a lane and for assessing traffic situations. Read and follow the warnings on ⇨ ⚠ *in General information on page 103*. Never use traffic jam assist in the following situations or you will increase the risk of an accident:

– Driving offroad or on unpaved roads. Traffic jam assist is only designed for use on paved roads.
– In city driving or in construction zones
– On curving stretches of road.
– In narrow lanes
– In unclear traffic situations such as at intersections or toll stations

Tips

You are not necessarily guided to the center of your lane.

Distance display and distance warning

Applies to: vehicles with Audi adaptive cruise control

This function measures the time between the vehicle driving ahead and shows this in the instrument cluster display.



Fig. 113 Instrument cluster: distance indicator/warning

Description

At speeds above approximately 40 mph (65 km/h), this function measures the distance to the vehicle ahead as time.

► Switch the adaptive cruise control display on in the instrument cluster display ⇨ *page 15*.

The indicator light turns on if you fall below the set distance.

Setting the warning threshold

You can set, change or delete the warning threshold in the Infotainment system. ▶

► In the Infotainment system, select: MENU button > **Vehicle** > left control button > **Driver assistance** > **Distance warning**.

WARNING

– Read and follow the warnings on ⇨ ⚠ *in General information on page 103*.
– The driver is always responsible for adhering to the regulations applicable in the country where the vehicle is being operated.

Tips

You may fall below he warning threshold briefly when passing or when quickly approaching a slow vehicle. There is no warning in this scenario. A warning is given only if you fall below the warning threshold for an extended period of time.

Messages

Applies to: vehicles with Audi adaptive cruise control

ACC with traffic jam assist: unavailable. See owner's manual

The system cannot guarantee that it will detect vehicles correctly and it has switched off. The radar sensors have shifted or are faulty. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

ACC with traffic jam assist: currently unavailable. See owner's manual

This message appears if the adaptive cruise control cannot be activated, for example if the hood is open.

ACC w. traffic jam assist: currently unavailable. Sensor vision restricted due to surroundings. See owner's manual

This message appears if the radar sensor view is obstructed, for example by leaves, snow, heavy spray or dirt. Clean the sensors ⇨ *page 103, fig. 101*.

ACC with traffic jam assist: currently unavailable. Grade too steep

The road exceeds the maximum possible grade for safe operation. The systems cannot be switched on.

ACC with traffic jam assist: only available in D, S or M

Select the "D/S" or "M" selector lever position.

ACC: available from 1st gear up

Manual transmission: adaptive cruise control works in 1st gear and higher.

ACC: clutch pedal pressed

Manual transmission: pressing the clutch pedal longer interrupts the control.

ACC: note engine speed

Manual transmission: this message appears if the driver has not shifted up or down in time when the adaptive cruise control is braking or accelerating, causing the vehicle to exceed or to not reach the permitted engine speed. The adaptive cruise control switches off automatically and cannot be switched back on.

ACC with traffic jam assist: currently unavailable. Parking brake applied

The systems switch off if you set the parking brake. The systems are available again after you release the parking brake.

ACC with traffic jam assist: currently unavailable. Stabilization control (ESC) input

This message appears if the Electronic Stabilization Control (ESC) is taking action to stabilize the vehicle. The systems switch off in this scenario.

ACC with traffic jam assist: manual control!

This message appears if the vehicle rolls back when starting on a slight incline, even though the systems are active. Press the brake pedal to prevent the vehicle from rolling or starting to move.

ACC with traffic jam assist: currently unavailable. Downhill assist activated

You cannot activate the system when hill hold assist is active.

ACC with traffic jam assist: manual control! ►

8W0012721BG

This message appears if the driver does not take over steering after multiple driver intervention requests and the system switches off. The vehicle brakes until it is stationary.

Traffic jam assist: unavailable. See owner's manual

The system can no longer ensure that the vehicle will stay in the lane and switches off. Have your vehicle checked by an authorized Audi dealer or authorized Audi Service Facility if the malfunction is continuous.

Traffic jam assist: Please take over steering!

This message appears as soon as the system stops detecting steering activity when the system limits are reached. Always keep your hands on the steering wheel so you can be ready to steer at any time.

Traffic jam assist: currently unavailable. Please fasten seat belt

The system switches off when the driver's safety belt is unfastened.

ACC: efficiency assist not available in this country

The adaptation to speed limits and routes ahead is not available in this country.

ACC: predictive control currently unavailable. See owner's manual

The adaptation to speed limits and routes ahead switches off at speed limits under 20 mph (30 km/h).

The message can also appear if the adaptation to speed limits and routes ahead has a temporary failure. Have your vehicle checked by an authorized Audi dealer or authorized Audi Service Facility if the malfunction is continuous.

Distance warning: malfunction! Please contact Service

The system cannot guarantee that it will detect vehicles correctly and it has switched off. The radar sensors have shifted or are faulty. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Distance warning: currently unavailable. Sensor view restricted due to surroundings. See owner's manual

This message appears if the radar sensor view is obstructed, for example by leaves, snow, heavy spray or dirt. Clean the sensors ⇨ *page 103, fig. 101*.

Distance warning: currently unavailable. See owner's manual

This message appears if the system has a temporary failure. If this occurs multiple times, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

ACC: Please fasten seat belt

The system is not completely available if the driver's seat belt is unfastened.

Stationary object ahead

This message appears if you would like to switch the system on and there is a stationary object directly in front of your vehicle.

Door open

The system is not available when the door is open.

Audi pre sense

Introduction

Applies to: vehicles with Audi pre sense

Within the limits of the system, the pre sense functions can initiate measures in particularly dangerous situations to protect the vehicle passengers and other road users.

- Due to the interlinking of various vehicle systems, critical driving situations can be detected by **pre sense basic** and measures for preventative occupant protection are can be initiated.
- The **pre sense front** system uses the data from the adaptive cruise control* radar sensors and the camera to calculate the probability of a collision. Within the limits of the system, an impending collision with vehicles can be detected in both urban and rural speed ranges. In this case, the system warns the driver visually, ▶

acoustically and with a jerk on the brakes if necessary. If needed, it can initiate a partial or full deceleration to reduce the collision speed or to avoid the collision under certain circumstances. In conjunction with pre sense basic/rear, the front safety belts are also reversibly tensioned when needed. The pre sense front is also active when adaptive cruise control* is switched off.

– **Pre sense rear** contains pre sense basic functions. It uses the data from the side assist* radar sensors and calculates within the limits of the system the probability of a rear end collision with the vehicle behind you. Pre sense rear is also active when side assist* is switched off.
– Within the limits of the system, **pre sense city** uses the camera data and can detect an impending collision with vehicles and pedestrians. In this case, the system warns the driver visually, acoustically and with a jerk on the brakes if necessary. If needed, it can initiate a full deceleration to reduce the collision speed or to avoid the collision under certain circumstances. In conjunction with pre sense basic/rear, the front safety belts are also reversibly tensioned when needed.

WARNING

Read the general information in ⇨ ⚠ *in General information on page 103*, ⇨ ⚠ *in General information on page 122*.

Tips

– Certain pre sense functions switch off when driving in reverse.
– The pre sense functions may not be available if there is a malfunction in the ESC system or the airbag control module.
– Note that the reversible belt tensioner on the front passenger's side deactivates when the front passenger's airbag is deactivated.
– Switch the pre sense off when you are not using public streets or when loading the vehicle onto a vehicle carrier, train, ship, or other type of transportation. This can prevent an undesired intervention from the pre sense system.

Audi pre sense basic

Applies to: vehicles with Audi pre sense basic

The pre sense basic functions are activated at a speed of approximately 20 mph (30 km/h) or higher.

The following functions can be triggered under certain conditions within the limits of the system:

– Tensioning of the safety belts (for example, during heavy braking): the front safety belts have reversible belt tensioners. If a collision does not occur, the safety belts will loosen slightly and be ready to trigger again.
– Closing the windows and sunroof*
– Activation of the emergency flashers[1)]

The message **Audi pre sense** ⚠ ⇨ *page 113, fig. 114* will warn you about the danger.

Audi drive select*: the trigger times are adjusted depending on the mode selected.

Audi pre sense front

Applies to: vehicles with Audi pre sense front

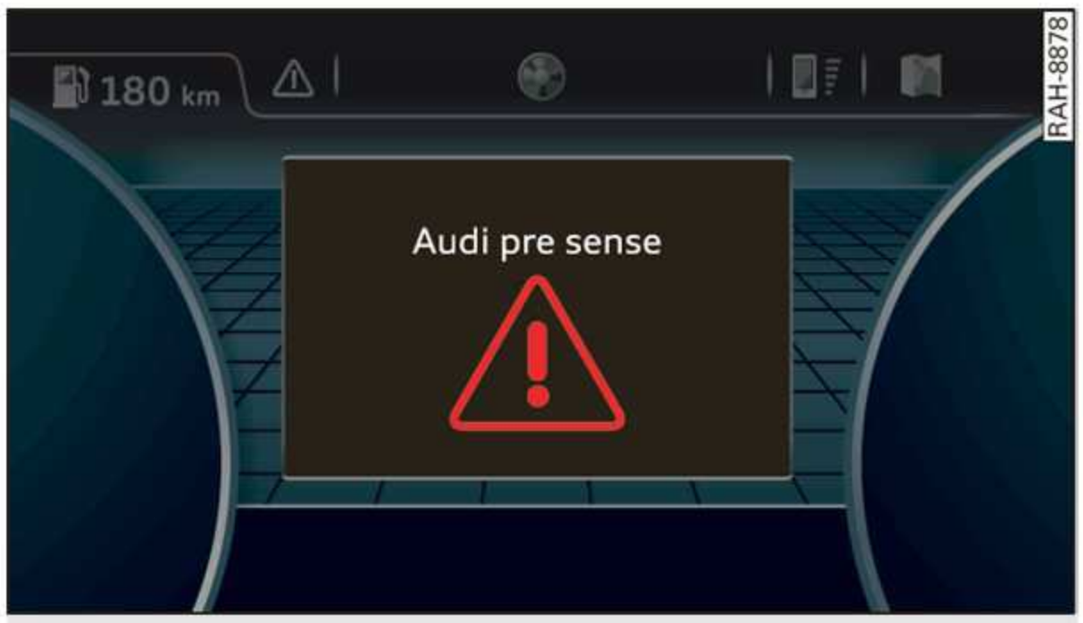


Fig. 114 Instrument cluster: approach warning

Description

Within the limits of the system, pre sense front can warn you of impending collisions and initiate the corresponding braking maneuvers or the supporting measures when avoiding a collision. ▶

1) This is not available in some countries.

If detected in time, the system can rank the dangerous situation as critical if a vehicle driving ahead brakes suddenly, if your own vehicle is approaching a significantly slower vehicle at high speed or when there is an oncoming vehicle during a turning maneuver.

If detection is not possible, then pre sense front does not react.

Warnings

The system recognizes various dangerous situations. The **early warning** occurs if:

– A vehicle driving ahead brakes suddenly
– Your own vehicle approaches a significantly slower vehicle or stationary vehicle in the direction of travel

When this warning occurs, it may only be possible to avoid a collision by swerving or braking strongly. The message **Audi pre sense** ⚠ ⇨ *fig. 114* and a warning tone will warn you about the danger.

If you do not react enough or not at all to a dangerous situation that was detected by the system, pre sense front provides assistance by applying the brakes.

If a collision is imminent, the system will first provide an **acute warning** by braking sharply. You will also warned by an indicator in the instrument cluster display ⇨ *fig. 114*. If you do not react to the acute warning, pre sense front can brake with increasing force within the limits of the system [1)]. This reduces the vehicle speed in the event of a collision. At low vehicle speeds, pre sense front can initiate a complete deceleration shortly before a collision with a vehicle driving ahead [1)]. If pre sense front determines that you are not braking strongly enough when a collision is imminent, it can increase the braking force.

The following functions trigger in conjunction with pre sense basic/rear at corresponding vehicle speeds:

– Reversible tensioning of the front safety belts
– Closing the windows and sunroof*
– Inflating the side bolsters* on the seat backrest

Audi drive select*: depending on the mode selected, the reversible belt tensioner, the closing of the windows and sunroof*, and the inflating of the side bolsters* on the seat backrest may not be active.

Evasive steering support

Evasive steering support helps you to steer the vehicle around an obstacle in a critical situation. If you avoid an obstacle after the acute warning, then the evasive steering support assists you by applying slight steering adjustment to correct your steering wheel angle as long as you are actively steering. Evasive steering support is available at speeds between approximately 20 mph (30 km/h) and 90 mph (150 km/h).

Turn assist

When starting to drive and up to speeds of maximum 6 mph (10 km/h), the turn assist uses a braking intervention to reduce the risk of your vehicle colliding with an oncoming vehicle when turning left or right (available in certain countries). The braking intervention causes your vehicle to stay in its lane.

WARNING

– Pre sense front cannot overcome the laws of physics. It is a system designed to assist and it cannot prevent a collision in every circumstance. The driver must always intervene. The driver is always responsible for braking at the correct time. Do not let the increased safety provided tempt you into taking risks. This could increase your risk of a collision.
– The system can deploy incorrectly due to system-specific limits.
– Please note that the sensors and the camera do not always detect all objects or lane markings. This increases the risk of an accident. ▶

1) This is not available in some countries.

– Pre sense front does not react to people, animals or objects that are crossing the vehicle's path or that are difficult to detect ⇨ ⚠ *in General information on page 103*.
– Reflective objects such as guard rails or the entrance to a tunnel, heavy rain and ice can affect the function of the radar sensors and the system's ability to detect a collision risk.

Note

The sensors can be displaced by impacts or damage to the bumper, wheel housing and underbody. Pre sense front can be impaired by this. Have an authorized Audi dealer or authorized Audi Service Facility check their function.

Tips

– You can cancel the braking with increasing force that is initiated by the system by braking yourself, by accelerating noticeably or by swerving.
– Keep in mind that pre sense front can brake unexpectedly. Always secure any cargo or objects that you are transporting to reduce the risk of damage or injury.
– Specific pre sense front functions switch off when the ESC is restricted or switched off ⇨ *page 139* or the hill hold assist* is switched on ⇨ *page 140*.

Audi pre sense rear

Applies to: vehicles with Audi side assist

If the risk of a collision with a vehicle ahead is detected, the following functions can be triggered:

– Reversible tensioning of the front safety belts at the corresponding speeds
– Closing the windows and sunroof*
– Inflating the side bolsters* on the seat backrest
– Activating the emergency flashers with increased frequency [1)]

The message **Audi pre sense** ⚠ ⇨ *page 113, fig. 114* will warn you about the danger.

Audi drive select*: the function is not active depending on the mode selected.

WARNING

– To reduce the risk of an accident, please note that the side assist* radar sensors do not always detect every object.
– Pre sense rear does not react to people, animals or objects that are crossing the vehicle's path or that are difficult to detect.
– Reflective objects such as guard rails, heavy rain and ice can impair the function of the radar sensors and the ability to detect a collision risk.

Note

The radar sensors can be displaced by impacts or damage to the bumper, wheel housing and underbody. Pre sense rear can be impaired by this. Have an authorized Audi dealer or authorized Audi Service Facility check their function.

Tips

The pre sense rear functions may also switch off if there is a malfunction in the side assist* system.

Audi pre sense city

Applies to: vehicles with Audi pre sense city

Description

Within the limits of the system, pre sense city can warn you of impending collisions with vehicles and pedestrians and initiate the applicable braking maneuver if needed. Pre sense city is active at speeds of approximately 6 mph (10 km/h) and higher.

A pedestrian warning can occur at speeds up to 50 mph (85 km/h), and vehicle warnings can occur at speeds up to 155 mph (250 km/h). A pre sense city braking maneuver is possible at speeds up to 50 mph (85 km/h). ▶

1) This is not available in some countries.

Warnings

The system recognizes various dangerous situations. The **early warning** occurs if:

– A vehicle driving ahead brakes suddenly
– Your own vehicle approaches a vehicle in front of you that is traveling at a significantly slower speed or that is stationary
– A pedestrian is standing in the lane or is moving into the lane

When this warning occurs, it may only be possible to avoid a collision by swerving or braking strongly. The message **Audi pre sense** ⚠ ⇨ *page 113, fig. 114* and a warning tone will warn you about the danger.

The brakes may also be applied as an **acute warning** when there is an impending collision. If you do not react to the acute warning, pre sense city can brake to the point of complete deceleration within the limits of the system. This reduces the vehicle speed in the event of a collision. The message **Audi pre sense** ⚠ also appears.

The following functions are triggered in conjunction with pre sense basic/rear:

– Reversible tensioning of the front safety belts
– Closing the windows and sunroof*
– Inflating the side bolsters* on the seat backrest

Audi drive select*: the function is not active depending on the mode selected.

WARNING

– Pre sense city cannot overcome the laws of physics. It is a system designed to assist and it cannot prevent a collision in every circumstance. The driver must always intervene. The driver is always responsible for braking at the correct time. Do not let the increased safety provided tempt you into taking risks. This could increase your risk of a collision.
– The system can deploy incorrectly due to system-specific limits.
– To reduce the risk of an accident, please note that the camera does not always detect every object.
– Pre sense city does not react to animals, crossing or oncoming vehicles, objects such as bars, railings or railcars, and objects that are difficult to detect ⇨ ⚠ *in General information on page 103*.

WARNING

Pre sense city may be restricted or unavailable in the following types of situations:
– In heavy fog, rain, spray, or snow
– When there are visual obstructions, such as glare, reflections or variations in light
– When it is dark
– If the camera window or the windshield is dirty, iced over, damaged or covered
– When driving on snow, ice or loose ground
– In curves
– If the ESC was restricted or switched off
– When the driver's seat belt is unfastened
– For several seconds after the ignition is switched on

Note

Impacts or damage to the camera mount on the windshield can displace the sensor. Pre sense city can be impaired by this. Have an authorized Audi dealer or authorized Audi Service Facility check their function.

Tips

– You can cancel the system braking intervention if you accelerate considerably or swerve away.
– Keep in mind that pre sense city can brake unexpectedly. Always secure any cargo or objects that you are transporting to reduce the risk of damage or injury.
– Specific pre sense city functions switch off when the ESC is limited or switched off ⇨ *page 139* or the hill descent assist* is switched on ⇨ *page 140*.
– When there is a malfunction in the camera, the pre sense city functions also switch off.

Settings in the Infotainment system

Applies to: vehicles with Audi pre sense

- Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Driver assistance** > **Audi pre sense**.

Turn Audi pre sense on/off - the pre sense functions can be turned on and off.

If the system is switched off, it switches on again automatically once the ignition is switched on again.

Prewarning - the early warning can be switched **off** or the pre sense city/front warning point can be set (**Early**/**Medium**/**Late**).

Set the warning time for the early warning to **Early** at first. If this causes undesired early warnings to appear, then set the warning time to **Medium**. The **Late** warning time should only be set in special circumstances.

Tips

Your settings are automatically stored and assigned to the vehicle key being used.

Messages

Applies to: vehicles with Audi pre sense

Audi pre sense: malfunction! Please contact Service

This message appears when the pre sense function is affected. For example, this could be caused by a faulty sensor. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Audi pre sense: currently limited. Sensor view limited due to surroundings. See owner's manual

This message appears if the radar sensor and camera view is obstructed, for example by leaves, snow, heavy spray or dirt. If necessary, clean the sensors and the area around the camera ⇨ *page 103, fig. 101* or ⇨ *page 122, fig. 122*.

Audi pre sense: currently limited

This message appears if the ESC is restricted or switched off, for example.

Audi pre sense: currently limited. See owner's manual

This message appears when there is a temporary failure in a subsystem, such as the ESC. If this message appears repeatedly, drive to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Audi pre sense: emergency braking system off

This message appears if the pre sense functions are switched off through the Infotainment system or if the system is not ready.

Audi active lane assist

Description

Applies to: vehicles with Audi active lane assist

Active lane assist (lane departure warning) detects lane marker lines within the limits of the system using a camera in the windshield. If you are approaching a detected lane marker line and it appears likely that you will leave the lane, the system will warn you with corrective steering. You can override this steering at any time. If you pass over a line, the steering wheel will vibrate lightly. In order for this warning vibration to occur, it must first be switched on in the Infotainment system. Active lane assist is ready for operation when the lane marker line is detected on at least one side of the vehicle.

The system is designed for driving on expressways and highways and therefore only activates at speeds above approximately 40 mph (65 km/h).

Applies to: vehicles with side assist: if you activate a turn signal when active lane assist is ready and it classifies a lane change as critical because of vehicles traveling alongside you or approaching you, there will be noticeable corrective steering shortly before you leave the lane. This will attempt to keep your vehicle in the lane.

Applies to: vehicles without side assist: When the system is ready, it will not warn you if you activate a turn signal before crossing the lane marker ▶

line. In this case, it assumes that you are changing lanes intentionally.

Applies to: vehicles with adaptive cruise control: There is no corrective steering or warnings if the system detects a distinct passing maneuver. If the conditions are met, traffic jam assist switches on at speeds under approximately 40 mph (65 km/h) ⇨ *page 109*.

WARNING

- The system warns the driver that the vehicle is leaving the lane using corrective steering. The driver is always responsible for keeping the vehicle within the lane.
- The system can help you keep the vehicle in the lane, but it does not drive by itself. Always keep your hands on the steering wheel.
- Corrective steering may not occur in certain situations, such as during heavy braking.
- There may be cases where the camera does not recognize all lane marker lines. Corrective steering can only take place on the side of the vehicle where lane marker lines are detected.
- Other road structures or objects could possibly be identified unintentionally as lane marker lines. As a result, corrective steering may be unexpected or may not occur.
- The camera view can be restricted, for example by vehicles driving ahead or by rain, snow, heavy spray or light shining into the camera. This can result in active lane assist not detecting the lane marker lines or detecting them incorrectly.
- In certain situations where visibility is low, the vehicle may switch from an “early” to “late” steering correction.
- Under certain conditions such as ruts in the road, an inclined roadway or crosswinds, the corrective steering alone may not be enough to keep the vehicle in the middle of the lane.
- For safety reasons, active lane assist must not be used when there are poor road and/or weather conditions such as slippery roads, fog, gravel, heavy rain, snow and the potential for hydroplaning. Using active lane assist under these conditions may increase the risk of a crash.

Switching on and off

Applies to: vehicles with Audi active lane assist



Fig. 115 Turn signal lever: button for active lane assist

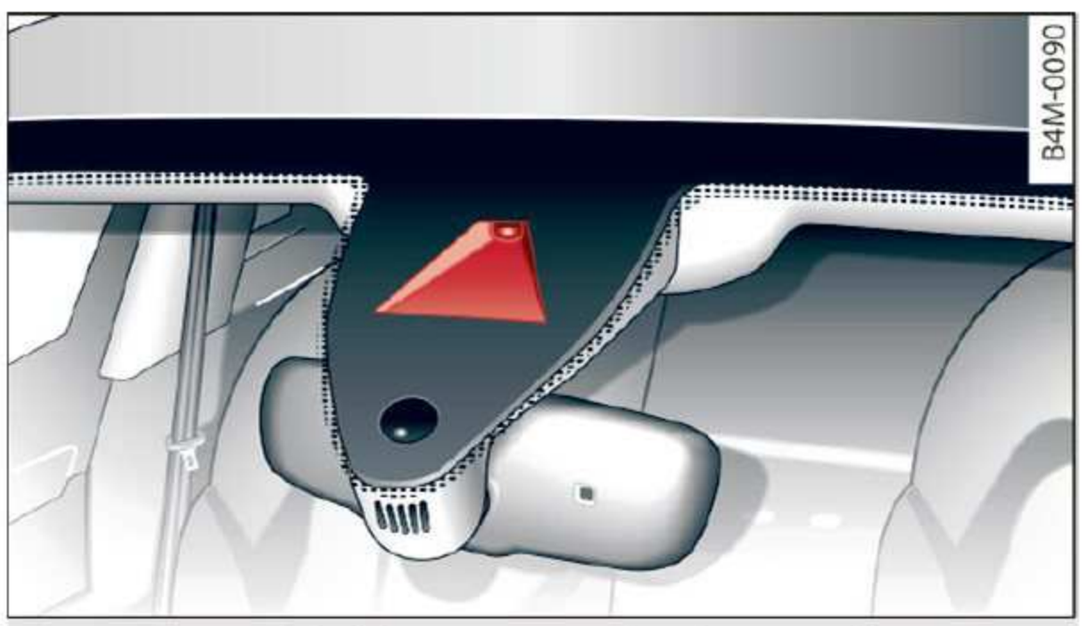


Fig. 116 Windshield: camera window for active lane assist

- Press the button to switch the system on and off ⇨ *fig. 115*. The indicator light in the instrument cluster turns on or off. ▶

Analog instrument cluster	Audi virtual cockpit/head-up display*	Meaning on the corresponding side
Green line(s) (left/right)	Green line(s) (left/right)	Active lane assist is activated and ready to provide warnings.
-	Red line (left/right)	Active lane assist will warn you before the vehicle leaves a lane. The steering wheel will also vibrate lightly.
Yellow line(s) (left/right)	Yellow line(s) (left/right)	Active lane assist is activated, but is not ready to provide warnings.

If the system is switched on but is not ready to provide warnings, one of the following could be the cause:

– There is no lane marker line
– The relevant lane marker lines are not detected (for example, markings in a construction zone or because they are obstructed by snow, dirt, water or lighting)
– The vehicle speed is below the activation speed of approximately 40 mph (65 km/h)
– The lane is too narrow or too wide
– The curve is too narrow
– The driver's hands are not on the steering wheel

Tips

– Make sure the camera window ⇨ *fig. 116* is not covered by stickers or other objects. For information on cleaning, see ⇨ *page 342*.
– If the system is ready for operation, it will remain ready each time it is switched on [1].

[1] In certain countries

Display in the instrument cluster

Applies to: vehicles with Audi active lane assist



Fig. 117 Instrument cluster (multi-color display): active lane assist is switched on and ready to provide warnings

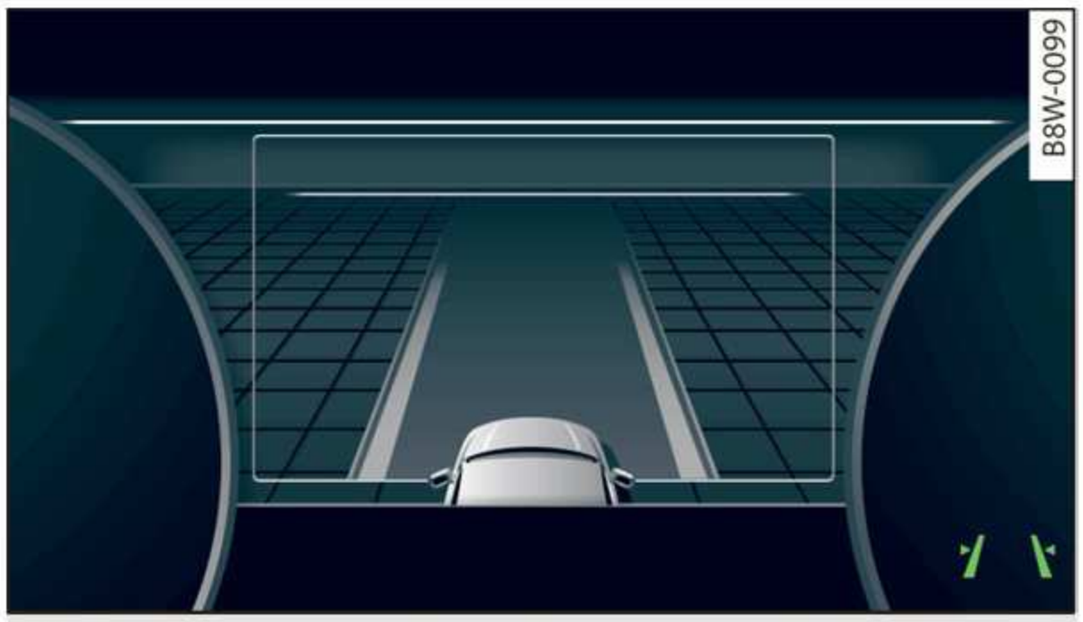


Fig. 118 Instrument cluster (monochrome display): active lane assist is switched on

You can open up the **Driver assistance** display for the active lane assist using the multifunction steering wheel buttons ⇨ *page 15*.

An additional indicator appears in the head-up display*.

Multi-Color Display

See ⇨ *fig. 117* ▶

Driver assistance display in the instrument cluster	Meaning on the corresponding side
Green line(s) (left or right)	Active lane assist is activated and ready to provide warnings.
Red line (left or right)	Active lane assist will warn you before the vehicle leaves a lane. The steering wheel will also vibrate lightly.
Gray line(s) (left or right)	Active lane assist is activated, but is not ready to provide warnings.

Monochrome display

See ⇨ *fig. 118*

Driver assistance display in the instrument cluster	Meaning on the corresponding side
Light gray line(s) (left or right)	Active lane assist is activated and ready to provide warnings.
Blinking line(s) (left or right)	Active lane assist will warn you before the vehicle leaves a lane. The steering wheel will also vibrate lightly.
Dark gray line(s) (left or right)	Active lane assist is activated, but is not ready to provide warnings.

Messages in the instrument cluster display

If the active lane assist switches off automatically, the indicator light in the display turns off and one of the following messages appears:

Audi active lane assist: malfunction! See owner's manual

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Audi active lane assist: currently unavailable. Camera view restricted due to surroundings. See owner's manual

This message appears if the camera is unable to detect the lines. This could happen if:

- The camera field of view ⇨ *page 118, fig. 116* is dirty or covered in ice. Clean this area on the windshield ⇨ *page 342*.
- The camera field of view is fogged over. Wait until the fog has cleared before switching the active lane assist on again.
- The system has been unable to detect the lanes for an extended period of time due to road conditions. Switch active lane assist back on when the lines are more visible.

Audi active lane assist: currently unavailable. See owner's manual

There is a temporary malfunction that may prevent the active lane assist from switching on. Try switching the active lane assist on again later.

Audi active lane assist: Please take over steering!

This message appears if you are not steering by yourself. Active lane assist is activated, but is not ready to provide warnings.

WARNING

Note that messages may be delayed or not displayed on vehicles with accessories mounted on the steering wheel, such as a steering wheel spinner knob. Always keep your hands on the steering wheel.

Adjusting the steering time and vibration warning

Applies to: vehicles with Audi active lane assist

You can adjust individual active lane assist settings in the Infotainment system.

▸ Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Driver assistance** > **Audi active lane assist**.

Steering time

Early: in this setting, the corrective steering happens continuously to help keep the vehicle in the center of the lane. ▶

Late: in this setting, the system provides corrective steering just before a wheel goes over a detected lane marker line.

Vibration warning

You can switch the additional vibration warning in the steering wheel on or off.

WARNING

With the vibration warning switched off, there will also be no visual warning in the instrument cluster display when crossing a lane marker line.

Tips

Certain settings are automatically stored and assigned to the vehicle key being used[1)].

Audi side assist

Description

Applies to: vehicles with Audi side assist

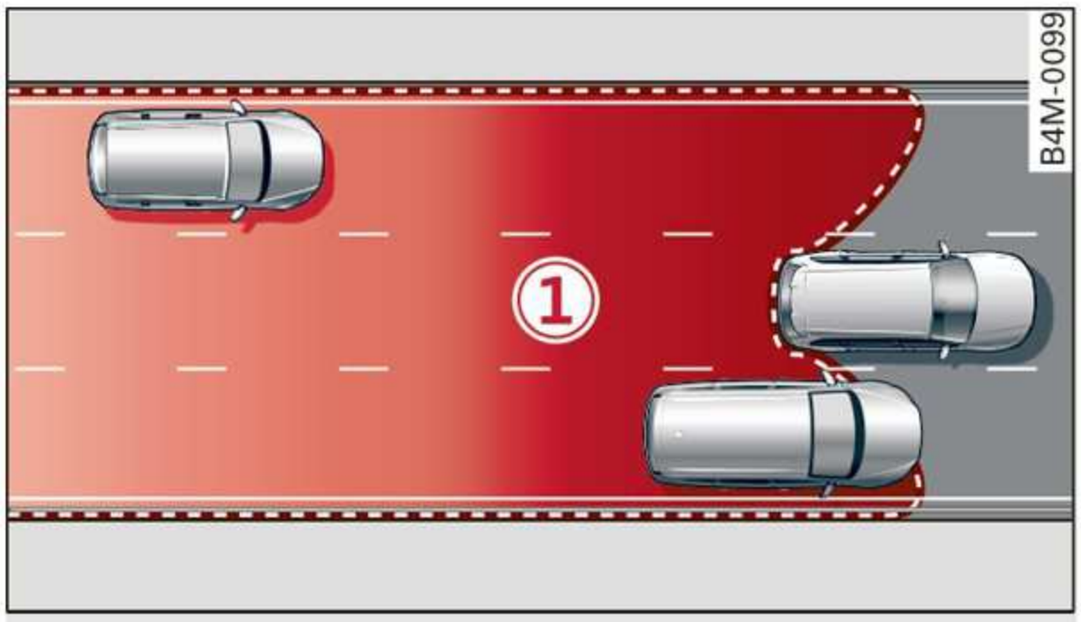


Fig. 119 Sensor detection range

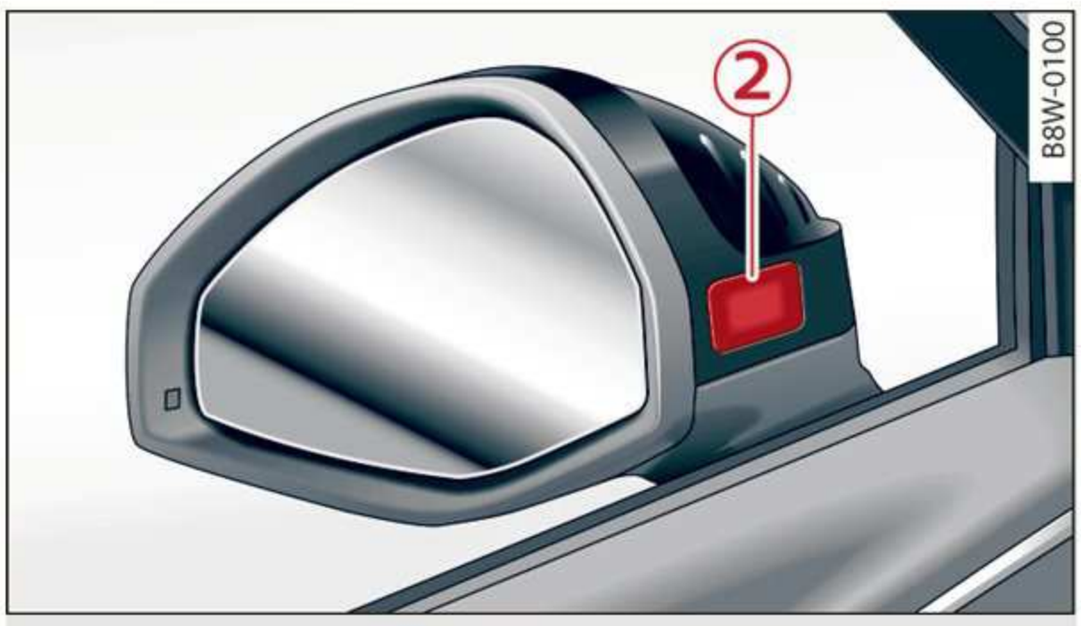


Fig. 120 Display on the exterior mirror

Side assist (lane change assist) helps you monitor your blind spot and traffic behind your vehicle.

Within the limits of the system, it warns you about vehicles that are coming closer or that are traveling with you within sensor range (1) ⇨ *fig. 119*. If a lane change is classified as critical, the display (2) in the exterior mirror turns on ⇨ *fig. 120*.

The display in the left exterior mirror provides assistance when making a lane change to the left, while the display in the right exterior mirror provides assistance when making a lane change to the right.

Information stage

As long as you do not activate the turn signal, side assist *informs* you about vehicles that are detected and classified as critical. The display in the mirror turns on, but is dim.

The display remains dim in the information stage so that your view toward the front is not disturbed.

Warning stage

If the display in a mirror blinks brightly when you activate a turn signal, side assist is *warning* you about detected vehicles that it has classified as critical. If this happens, check traffic by glancing in the exterior mirrors and over your shoulder ⇨ ⚠ *in General information on page 122*.

Applies to: vehicles with active lane assist: the display in the mirror can also blink if you have not activated a turn signal: if you are approaching a detected lane marker line and it appears you will be leaving the lane, side assist will warn you about detected vehicles that it has classified as critical.

Tips

You can adjust the brightness on of the display on the rearview mirror ⇨ *page 123*.

1) In certain countries

General information

Applies to: vehicles with Audi side assist

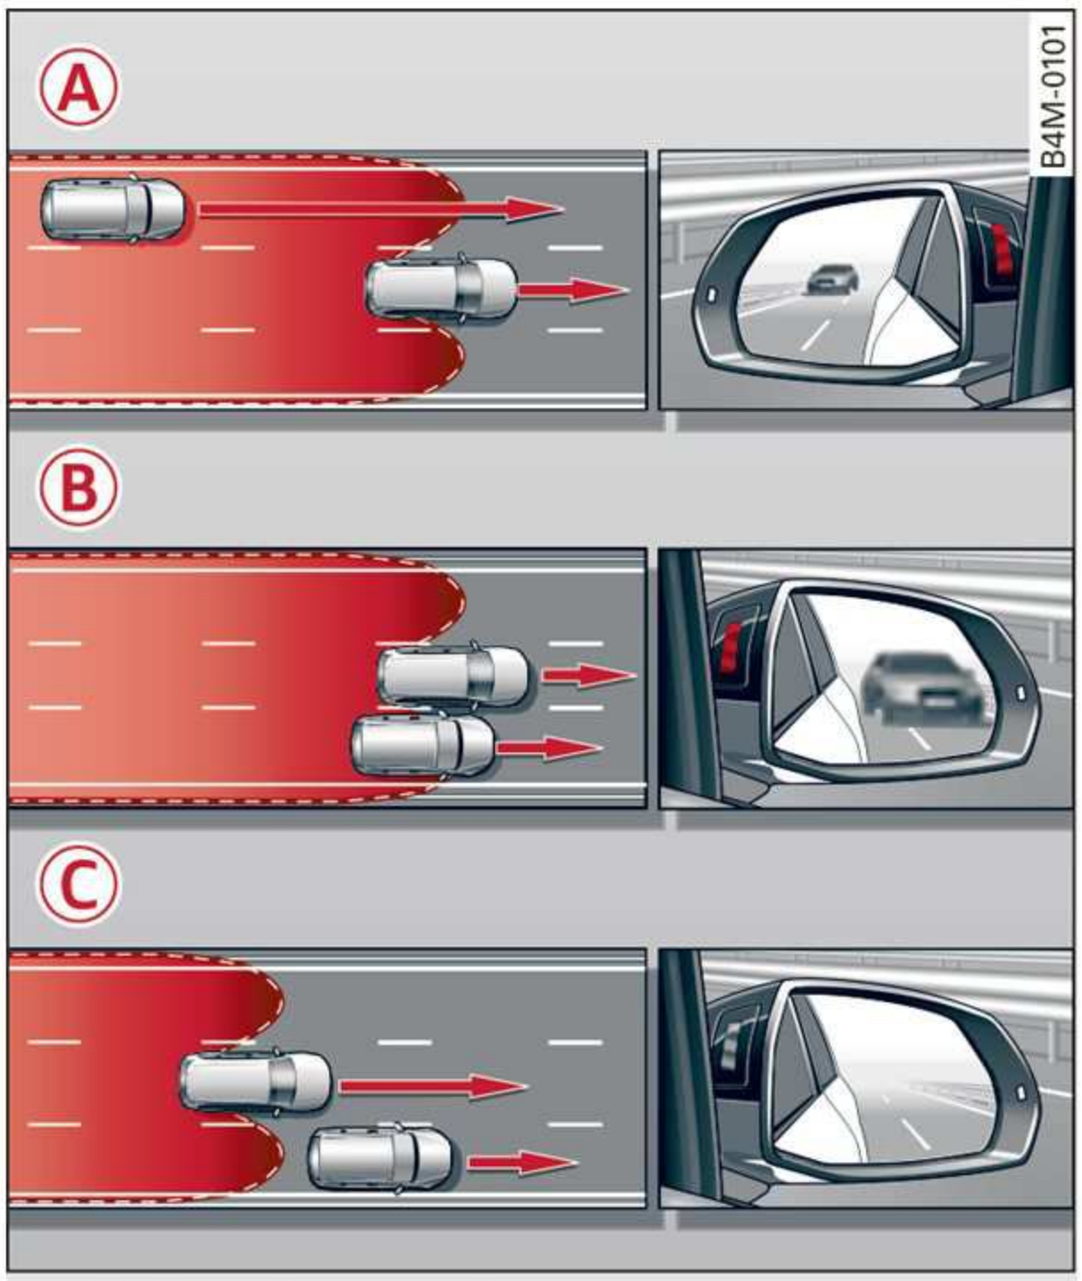


Fig. 121 Driving situations



Fig. 122 Rear of the vehicle: position of the sensors

Side assist functions at speeds above approximately 9 mph (15 km/h).

Ⓐ Vehicles that are approaching

In certain cases, a vehicle will be classified as critical for a lane change even if it is still somewhat far away. The faster a vehicle approaches, the sooner the display in the outside mirror will turn on.

Ⓑ Vehicles traveling with you

Vehicles traveling with you are indicated in the exterior mirror if they are classified as critical for a lane change. All vehicles detected by side assist are indicated by the time they enter your “blind spot”, at the latest.

Ⓒ Vehicles you are passing

If you slowly pass a vehicle that side assist has detected (the difference in speed between the vehicle and your vehicle is less than approximately 9 mph (15 km/h)), the display in the exterior mirror turns on as soon as the vehicle enters your blind spot.

The display will not turn on if you quickly pass a vehicle that side assist has detected (the difference in speed is greater than approximately 9 mph (15 km/h)).

Functional limitations

The radar sensors are designed to detect the left and right adjacent lanes when the road lanes are the normal width. In some situations, the display in the exterior mirror may turn on even though there is no vehicle located in the area that is critical for a lane change. For example:

- If the lanes are narrow or if you are driving on the edge of your lane. If this is the case, the system may have detected a vehicle in another lane that is *not* adjacent to your current lane.
- If you are driving through a curve. Side assist may react to a vehicle that is in the same lane or one lane over from the adjacent lane.
- If side assist reacts to other objects (such as roadside structures like guard rails).
- In poor weather conditions. The side assist functions are limited.

Do not cover the radar sensors ⇨ *fig. 122* with stickers, deposits, bicycle wheels or other objects, because this will impair the function. For information on cleaning, see ⇨ *page 342*.

WARNING

- Always pay attention to traffic and to the area around your vehicle. Side assist cannot replace a driver's attention. The driver alone is always responsible for lane changes and similar driving maneuvers.
- In some situations, the system may not function or its function may be limited. For example: ▶

– If vehicles are approaching or being left behind very quickly. The display may not turn on in time.
– In poor weather conditions such as heavy rain, snow or heavy mist.
– On very wide lanes, in tight curves, or if there is a rise in the road surface. Vehicles in the adjacent lane may not be detected because they are outside of the sensor range.

Note

The sensors can be displaced by impacts or damage to the bumper, wheel housing and underbody. This can impair the system. Have an authorized Audi dealer or authorized Audi Service Facility check their function.

Tips

– If the window glass in the driver's door or front passenger's door has been tinted, the display in the exterior mirror may be incorrect.
– For an explanation on conformity with the FCC regulations in the United States and the Industry Canada regulations, see ⇨ *page 370*.

Switching on and off

Applies to: vehicles with Audi side assist

The system can be switched on/off in the Infotainment system.

▸ Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Driver assistance** > **Audi side assist**. **Off** switches the system off.

If the system is activated, the displays in the exterior mirrors will turn on briefly when the ignition is switched on.

Tips

When you switch side assist on or off, the exit warning system activates or deactivates ⇨ *page 124*.

Setting the display brightness

Applies to: vehicles with Audi side assist

The display brightness can be adjusted in the Infotainment system.

▸ Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Driver assistance** > **Audi side assist**.

The display brightness adjusts automatically to the brightness of the surroundings, both in the information and in the warning stage. In very dark or very bright surroundings, the automatic adjustment will set the display to the minimum or maximum level. In such cases, you may notice no change when adjusting the brightness, or the change may only be noticeable once the surroundings change.

Adjust the brightness to a level where the display in the information stage will not disrupt your view ahead. If you change the brightness, the display in the exterior mirror will briefly show the brightness level in the information stage. The brightness of the warning stage is linked to the brightness in the information stage and is adjusted along with the information stage.

Tips

– The side assist functions are not active during the adjustment process.
– The exit warning indicators turn on during the adjustment process.
– Your settings are automatically stored and assigned to the vehicle key being used.

Exit warning

Applies to: vehicles with exit warning system

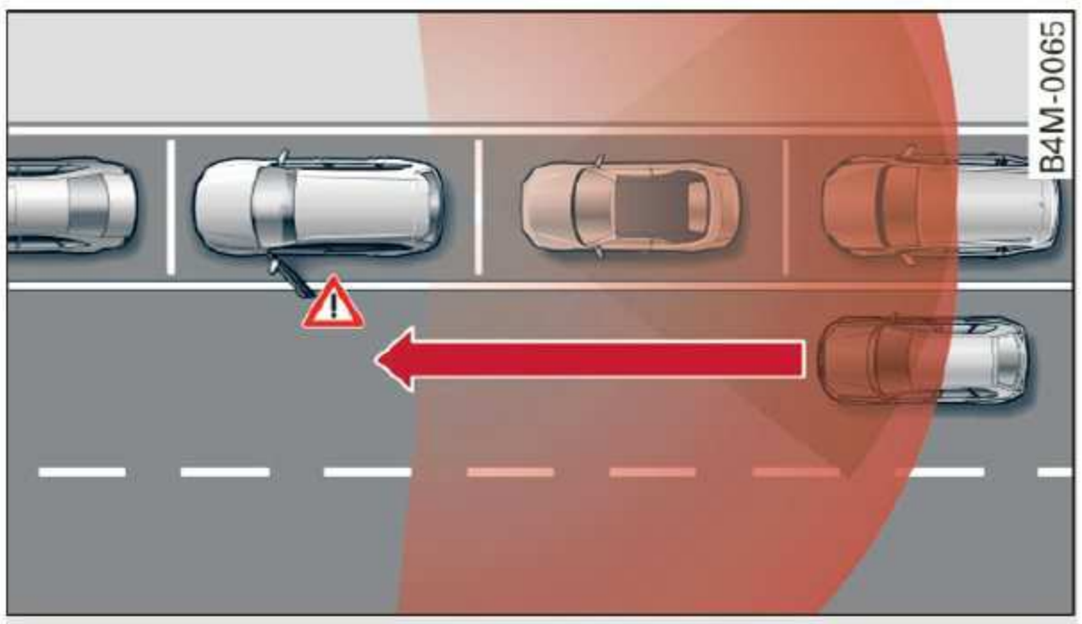


Fig. 123 Example display

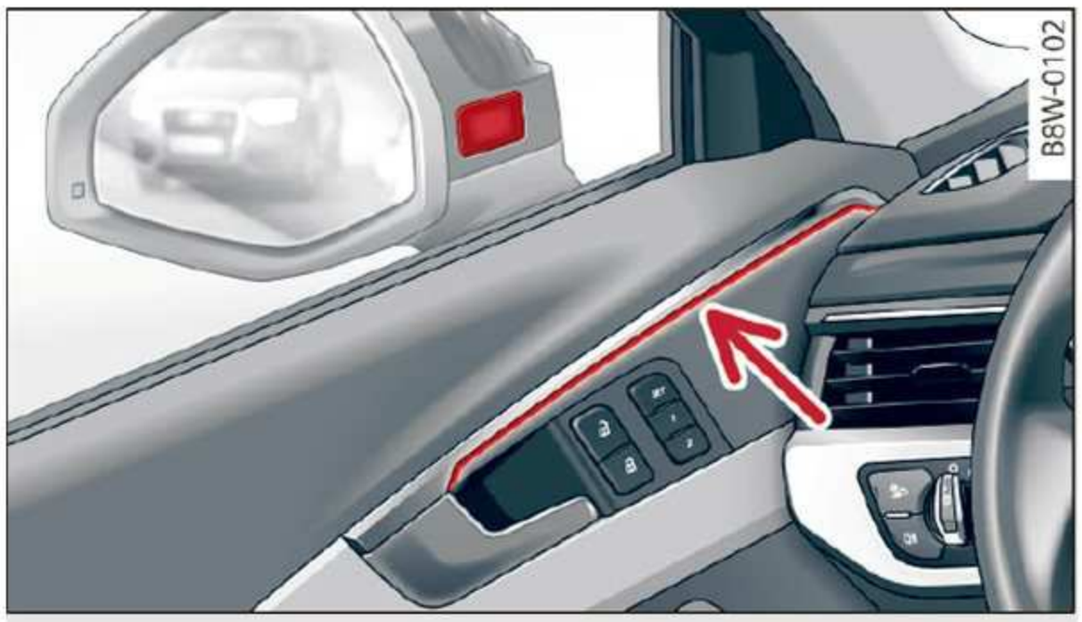


Fig. 124 Door: warning strip

When the vehicle is stationary, the exit warning system warns the passengers of a possible collision when opening the door. Within the limits of the system, the system monitors the areas behind and next to the vehicle using the radar sensors ⇨ *page 122, fig. 122*. Moving objects that are approaching from behind, such as cars, are detected ⇨ *fig. 123*.

When you open the door, the warning strip on the affected door blinks ⇨ *fig. 124* if another road user is detected and the situation is classified as critical. The display in the exterior mirror on the affected side flashes at the same time. If the door is already open and another road user is detected and the situation is classified as critical, then the corresponding displays turn on.

WARNING

– Always pay attention to traffic and to the area around your vehicle. The exit warning system does not replace the attention of the vehicle occupants. The vehicle occupants are always responsible for opening the doors and exiting the vehicle.

– The exit warning system can be available for up to approximately three minutes after unlocking the vehicle and opening the door as well as after switching off the ignition. Then the displays flash briefly and the system switches off.
– The exit warning system does not respond to people and cannot warn you about every type of approaching objects, such as cyclists. Always monitor the traffic as well as the vehicle's surroundings with direct eye contact.

WARNING

The exit warning system is subject to limitations and cannot warn you before every impending collision:

– If the vehicle is too wide for the parking space and covered by the neighboring vehicles.
– Approaching objects or people such as cyclists or skateboarders may not be detected under certain circumstances.
– The system does not react to stationary objects.
– The view of the radar sensors may be impaired by leaves, snow, heavy spray or dirt. Clean the area in front of the sensors ⇨ *page 122, fig. 122*.

Note

Also read the information in ⇨ *in General information on page 123*.

Tips

– The exit warning system is switched on and off through the side assist ⇨ *page 123*. The exit warning indicators turn on during the adjustment process.
– The display brightness for the exit warning system cannot be adjusted.

Rear cross-traffic assist

Applies to: vehicles with rear cross-traffic assist

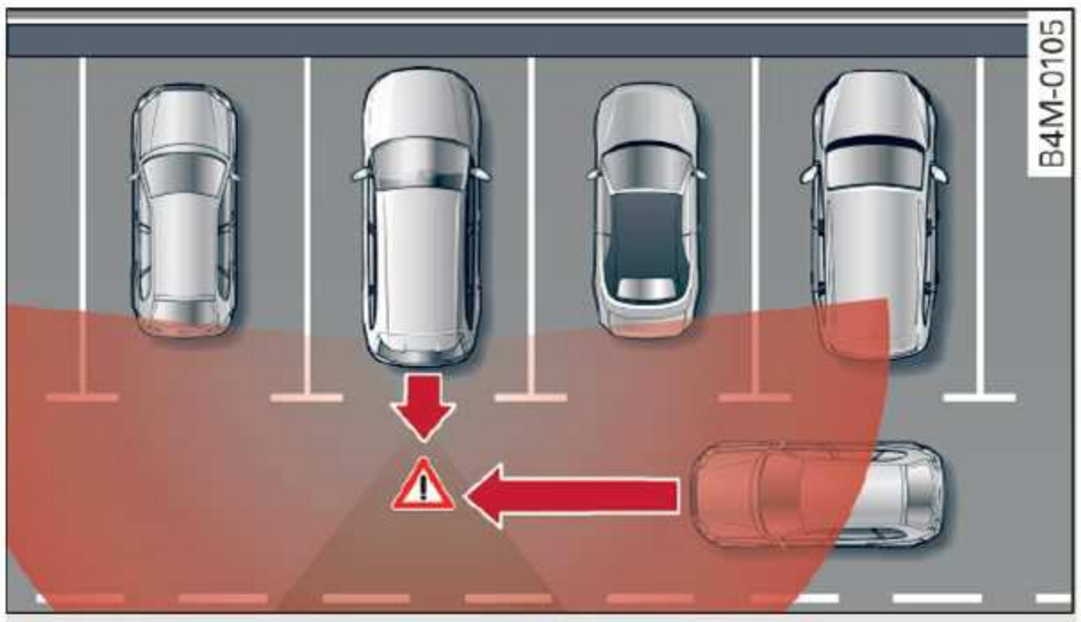


Fig. 125 Example display



Fig. 126 Infotainment system: rear cross-traffic assist display

Activating rear cross-traffic assist

The rear cross-traffic assist is activated automatically if you turn on the parking aid ⇨ *page 129* or shift into reverse gear.

The rear cross-traffic assist can warn of a potential collision with approaching cross-traffic when driving in reverse at speeds up to approximately 9 mph (15 km/h). Within its limits, the system monitors the areas behind and next to the vehicle using the radar sensors when leaving a parking space ⇨ *page 122, fig. 122*. Moving objects that are approaching, such as cars, are detected ⇨ *fig. 125*.

If the system detects critical cross traffic when backing out of a parking space, it will react as follows:

– **Visual indicator**: an indicator appears in the Infotainment system display with a red arrow symbol. The arrow points in the direction from which the object is approaching ⇨ *fig. 126*.
– **Audible warning signal**: a continuous tone may sound as an additional indicator when driving in reverse.
– **Automatic brake activation**: a brief activation of the brakes may also warn you of a potential collision with an approaching object.

The audible warning signal and the automatic brake activation occur only when driving in reverse.

WARNING

– The rear cross-traffic assist is an assist system and cannot prevent a collision by itself. The driver must always intervene. The driver is always responsible for braking at the correct time.
– Please note that the rear cross-traffic assist may activate the brakes unexpectedly. Secure any cargo that you are transporting to reduce the risk of damage or injury.
– Automatic braking cannot be triggered again within 20 seconds after an automatic brake activation.
– If there is an acoustic warning signal from the rear cross-traffic assist, then the parking system may not warn you of detected obstacles under certain circumstances.
– The view of the radar sensors may be impaired by leaves, snow, heavy spray or dirt. Clean the area in front of the sensors ⇨ *page 122, fig. 122*.

WARNING

– The rear cross-traffic assist will not provide alerts about people and cannot warn you about every type of approaching objects, such as cyclists. Always monitor the traffic as well as the vehicle's surroundings with direct eye contact.
– The rear cross-traffic assist will not provide alerts if your vehicle is parallel or diagonally parked or if your vehicle is pulled too far into the parking space so that it is hidden by adjacent vehicles.

Note

Also read the information in ⇨ *in General information on page 123*.

Tips

– You can cancel the automatic brake activation with increasing braking force if you apply the brakes yourself or accelerate considerably.
– In some situations, rear cross-traffic assist may warn you even if there is no cross traffic in a critical area, for example when backing into a parking space or maneuvering.
– The rear cross-traffic assist also switches off when you switch off the ESC.
– For an explanation on conformity with the FCC regulations in the United States and the Industry Canada regulations, see ⇨ *page 370*.

Messages

Applies to: vehicles with Audi side assist

A message appears in the instrument cluster display if the side assist switches off automatically.

Audi side assist: malfunction! Please contact Service

Audi side assist and exit warning: malfunction! Please contact Service

The system cannot guarantee that it will detect vehicles correctly and it has switched off. The sensors have been moved or are faulty. Have the system checked by an authorized Audi dealer or authorized Audi Service Facility soon.

Audi side assist: currently unavailable. Sensor vision restricted due to surroundings. See owner's manual

Audi side assist and exit warning: currently unavailable. Sensor vision restricted due to surroundings

The radar sensor vision is impaired. The area in front of the sensors must not be covered by bike racks, stickers, leaves, snow or any other objects. Clean the area covering the sensors, if necessary ⇨ *page 122, fig. 122*.

Audi side assist: currently unavailable. See owner's manual

Audi side assist and exit warning: currently unavailable. See owner's manual

Side assist cannot be switched on at this time because there is a malfunction (for example, the battery charge level may be too low).

Rear parking aid: obstacle detection restricted

The rear cross-traffic assist is not available. Either the ESC is switched off, or the radar sensors may be covered by a bike rack, stickers, leaves, snow or other objects. Switch the ESC on, or clean the area in front of the sensors if necessary ⇨ *page 122, fig. 122*. If this message continues to be displayed, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

Audi drive select

Introduction

Applies to: vehicles with Audi drive select

Drive select makes it possible to experience different types of vehicle characteristics in one vehicle. The driver can select **Offroad***, **Comfort**, **Auto** and **Dynamic** modes in the Infotainment system to switch between a sporty and a comfortable driving mode, for example. In the **Individual** mode, the settings can be adjusted to your personal preferences. This makes it possible to combine settings such as a sporty engine setting with light steering.

Description

Applies to: vehicles with Audi drive select

The following systems, among other things, are influenced by drive select:

Engine and automatic transmission*

Depending on the mode, the engine and automatic transmission* respond more quickly or in a more balanced manner to accelerator pedal movements. In the sporty **Dynamic** mode, the transmission shifts at higher speed ranges. ▶

Suspension control*

The suspension control* uses sensors to record information regarding steering movements, braking and acceleration operations by the driver, road surface, driving speed, and load. This makes it possible to adapt damping to the driving situation nearly in real time. With drive select, you can adjust the suspension control to sporty (**Dynamic**), comfortable (**Comfort**) or balanced (**Auto**).

Steering

The power steering adapts. Indirect steering that moves easily as in **Comfort** mode is especially suited to long drives on highways. The **Dynamic** mode provides sporty, direct steering.

The following applies to vehicles with dynamic steering*: the steering ratio changes based on vehicle speed in order to maintain optimum steering effort for the driver at all times. This sets the steering to be less sensitive at higher speeds in order to provide improved vehicle control. At reduced speeds, steering is more direct in order to keep the steering effort as minimal as possible when the driver is maneuvering the vehicle. At low and average speeds, dynamic steering* additionally provides more responsive steering performance.

Sport differential*

As a component of the all wheel drive system (quattro) ⇨ *page 143*, the sport differential distributes the driving power to the rear axle depending on the situation. The distribution of power varies depending on the selected mode from moderate (**Comfort**) to sporty (**Dynamic**). The goal is a high level of agility and ability to accelerate on curves. The vehicle is very responsive to steering.

Adaptive cruise control (ACC)*

The behavior when accelerating can be adjusted from comfortable to sporty, depending on the drive select mode. Adaptive cruise control also responds to the driving behavior of the vehicle ahead in a more conservative or sporty manner.

Engine sound*

The engine sound adapts to the current mode and can be subtle to sporty.

Tips

The "S" selector lever position automatically engages when the **Dynamic** mode is selected.

Selecting the driving mode

Applies to: vehicles with Audi drive select

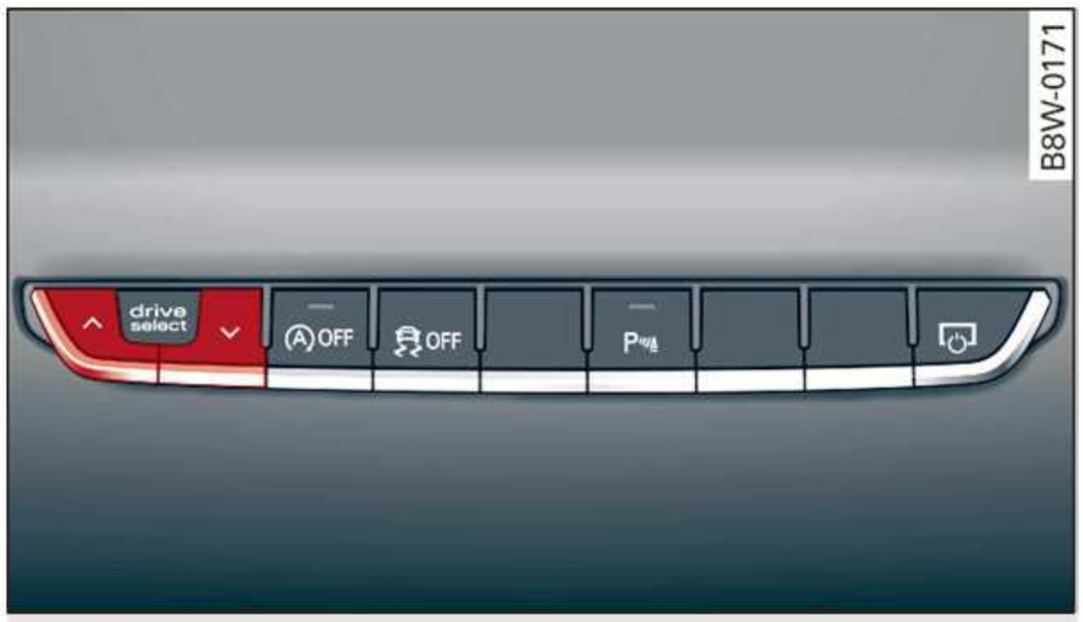


Fig. 127 Center console: controls for drive select

- ▸ Press the left or right arrow key ⇨ *fig. 127* until the desired mode appears in the instrument cluster/Infotainment system display. Or
- ▸ Select in the Infotainment system: MENU button > **Vehicle** > **Audi drive select**.
- ▸ Select and confirm the desired setting.

You can change the driving mode when the vehicle is stationary or while driving. If traffic permits, after changing modes, briefly remove your foot from the accelerator pedal so that the recently selected mode is also activated for the engine.

Offroad* - activates offroad functions to support driving on rough terrain. The engine, transmission and steering adjust and the Start/Stop system* switches off.

Comfort - provides a comfort-oriented vehicle setup and is suited for long drives on highways.

Auto - provides an overall comfortable yet dynamic driving feel and is suited for everyday use.

Dynamic - gives the driver a sporty driving feel and is suited to a sporty driving style.

Individual - ⇨ *page 128*.

Adjusting the Individual mode

Applies to: vehicles with Audi drive select

You can adjust the vehicle settings to your personal preferences.

- Select in the Infotainment system: MENU button > **Vehicle** > **Audi drive select**> **Individual** > right control button.

After you have closed the settings, you will automatically drive in the **Individual** mode.

The equipment in your vehicle will determine which settings you can adjust. The following table gives an overview of the characteristics.

Systems	comfort	Auto	dynamic
Engine/transmission	balanced	balanced	sporty
Steering	comfortable	balanced	sporty
Dynamic steering*	comfortable/indirect	balanced/direct	sporty/direct
Suspension control*	comfortable	balanced	sporty
Sport differential*	Off	balanced	sporty
Engine sound*	subtle	subtle/sporty[a)]	sporty
ACC*	comfortable	balanced	sporty

a) Subtle in the selector lever position "D" and sporty in "S".

Tips

Your settings are automatically saved in **Individual** mode.

Parking aid

General information

Applies to: vehicles with a rear parking system/parking system plus/rearview camera/peripheral cameras

Depending on your vehicle's equipment, various parking aids will help you when parking and maneuvering.

The **rear parking system** is an audible parking aid that warns you of obstacles *behind* the vehicle ⇨ *page 130*.

The **parking system plus** assists you while parking by audibly and visually warning you of objects detected in front of and behind the vehicle ⇨ *page 130*.

The **rearview camera** shows the area behind the vehicle in the Infotainment system display. The lines in the rearview camera image help you to park or maneuver ⇨ *page 132*.

The **peripheral cameras** give various views to help you when parking or maneuvering ⇨ *page 133*. The parking system plus functions are also available ⇨ *page 130*.

WARNING

- Always look for traffic and check the area around your vehicle by looking at it directly as well. The parking system cannot replace the driver's attention. The driver is always responsible when entering or exiting a parking space and during similar maneuvers.
- Please note that some surfaces, such as clothing, are not detected by the system.
- Sensors and cameras have blind spots in which people and objects cannot be detected. Be especially cautious of small children and animals.
- Always keep your eyes on the vehicle's surroundings, using the rearview mirror as well.
- The sensors can be displaced by impacts or damage to the radiator grille, bumper, wheel housing and the underbody. The parking system may be impaired as a result. Have an authorized Audi dealer or authorized Audi Service Facility check their function.

Note

- Some objects are not detected or displayed by the system under certain circumstances:
  - objects such as barrier chains, trailer draw bars, vertical poles or fences
  - objects above the sensors such as wall extensions
  - objects with certain surfaces or structures such as chain link fences or powder snow
- If you continue driving closer to a low object, it may disappear from the sensor range. Note that you will no longer be warned about this obstacle.
- Maintain enough distance from the curb to reduce the risk of damage to the rims.

Tips

- The system may provide a warning even though there are no obstacles in the coverage area in some situations, such as:
  - certain road surfaces or when there is tall grass
  - external ultrasonic sources such as from cleaning vehicles
  - in heavy rain, snow, or thick vehicle exhaust
- We recommend that you practice parking in a traffic-free location or parking lot to become familiar with the system. Practice parking in good light and weather conditions.
- You can change the volume of the signals and the display ⇨ *page 136*.
- What appears in the infotainment display is somewhat time-delayed.
- The sensors must be kept clean and free of snow and ice for the parking aid to operate.
- Applies to: vehicles with rear window wiper: The rearview camera will be cleaned with the rear window ⇨ *page 53*.

8W0012721BG

Rear parking system

Description

Applies to: vehicles with rear parking system

The rear parking system is an audible parking aid.

Description

There is a sensor in the rear bumper cover. If these detect an obstacle, audible signals warn you.

Make sure the sensors are not covered by stickers, deposits or any other obstructions as it may impair the function of the system. For information on cleaning, see ⇨ *page 342*.

The range at which the sensors begin to measure is approximately:

Rear	Side	3 ft (0.90 m)
	Center	5.2 ft (1.60 m)

The closer you get to the obstacle, the shorter the interval between the audible signals. A continuous tone sounds when the obstacle is less than approximately 1 foot (0.30 meters) away. Do not continue backing up ⇨ ⚠ *in General information on page 129*, ⇨ ⓘ *in General information on page 129*!

Switching on automatically

The system switches on automatically when reverse gear is engaged while the engine is running. A brief tone will sound.

Tips

If the distance to an obstacle remains constant, the volume of the distance warning gradually lowers after a few seconds until it is muted (this does not apply to the continuous tone). If the obstacle comes closer than it was before the sound was muted, the tone will sound again. If the obstacle becomes farther away than it was before the sound was muted, no tone will sound. Pay attention to the vehicle's surroundings when you start to drive.

Parking system plus

Description

Applies to: vehicles with parking system plus

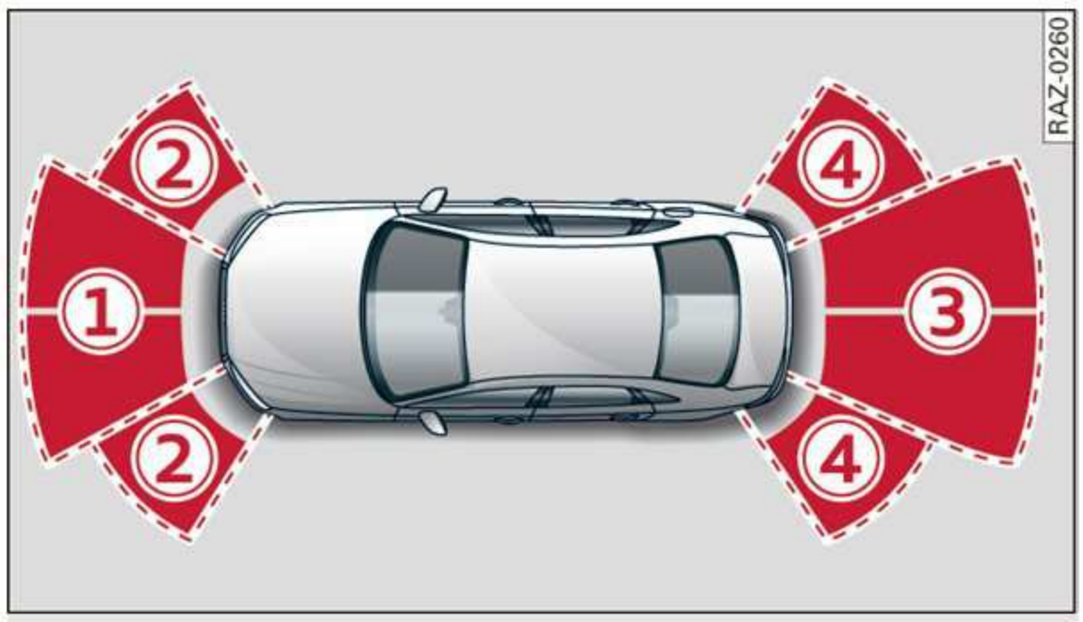


Fig. 128 Diagram: coverage area of the ultrasonic sensors



Fig. 129 Infotainment system: visual distance display

The parking system plus uses audio and visual warnings to help you avoid obstacles when parking.

Sensors are located in the front and rear bumpers. If these detect an obstacle, audible and visual signals warn you.

Make sure the sensors are not covered by stickers, deposits or any other obstructions as it may impair the function of the system. For information on cleaning, see ⇨ *page 342*.

The display field begins approximately at:

①	4 ft (1.20 m)
②	3 ft (0.90 m)
③	5.2 ft (1.60 m)
④	3 ft (0.90 m)

Audio signals

The closer you get to the obstacle, the shorter the interval between the audible signals. A continuous tone sounds when the obstacle is less than approximately 1 foot (0.30 meters) away. Do not continue driving forward or in reverse ▶

⇨ ⚠ *in General information on page 129*, ⇨ ⓘ *in General information on page 129*!

Visual warnings

The visual warnings in the Infotainment system display help you to detect the critical vehicle area and to estimate the distance to an obstacle ⇨ *fig. 129*.

Red segments show identified obstacles that are in your vehicle's path. The red lines mark the expected direction of travel according to the steering angle. A white segment indicates an identified obstacle that is outside of the vehicle's path. As your vehicle comes closer to the obstacle, the segments move closer to the vehicle. The collision area has been reached when the next to last segment is displayed. Obstacles in the collision area, including those outside of the vehicle's path, are shown in red. Do not continue driving forward or in reverse ⇨ ⚠ *in General information on page 129*, ⇨ ⓘ *in General information on page 129*!

Tips

If the distance to an obstacle remains constant, the volume of the distance warning gradually lowers after a few seconds until it is muted (this does not apply to the continuous tone). If the obstacle comes closer than it was before the sound was muted, the tone will sound again. If the obstacle becomes farther away than it was before the sound was muted, no tone will sound. Pay attention to the vehicle's surroundings when you start to drive.

Switching on and off

Applies to: vehicles with parking system plus

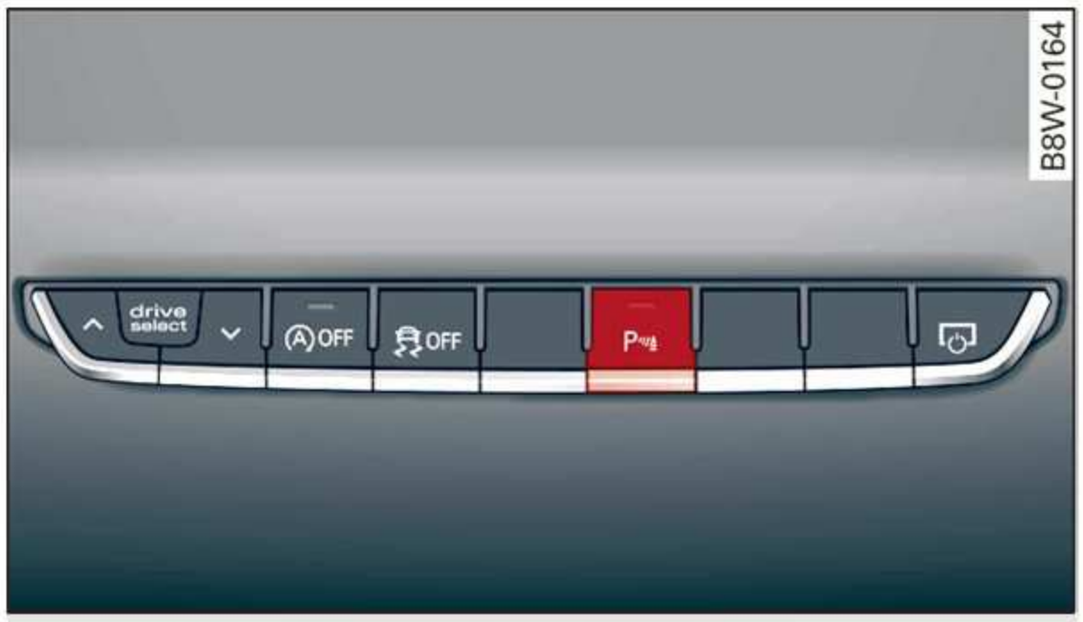


Fig. 130 Center console: parking aid button

Switching on and off

Requirement: the vehicle speed must be under approximately 6 mph (10 km/h).

- Press the P button in the center console. A short confirmation tone sounds and the LED in the button turns on.

Switching on automatically

The system switches on automatically when reverse gear is engaged while the engine is running. A brief tone will sound.

If **Activate automatically** is switched on in the Infotainment system and if the vehicle approaches an obstacle at speeds under approximately 6 mph (10 km/h), the parking aid will switch on automatically. Audible signals will sound once the obstacle is within the sensor detection area.

Switching off automatically

The distance indicator for the parking system plus switches off automatically when driving forward faster than 6 mph (10 km/h).

Tips

If you press the P button to switch the parking aid off, it can only be reactivated automatically when one of the following conditions is met:

– The vehicle speed exceeds 6 mph (10 km/h)
– The ignition is switched off and back on again
– The parking brake is set and then released ▶

– Automatic transmission: the "P" selector lever position is engaged and released again

Rearview camera

Introduction

Applies to: vehicles with rearview camera

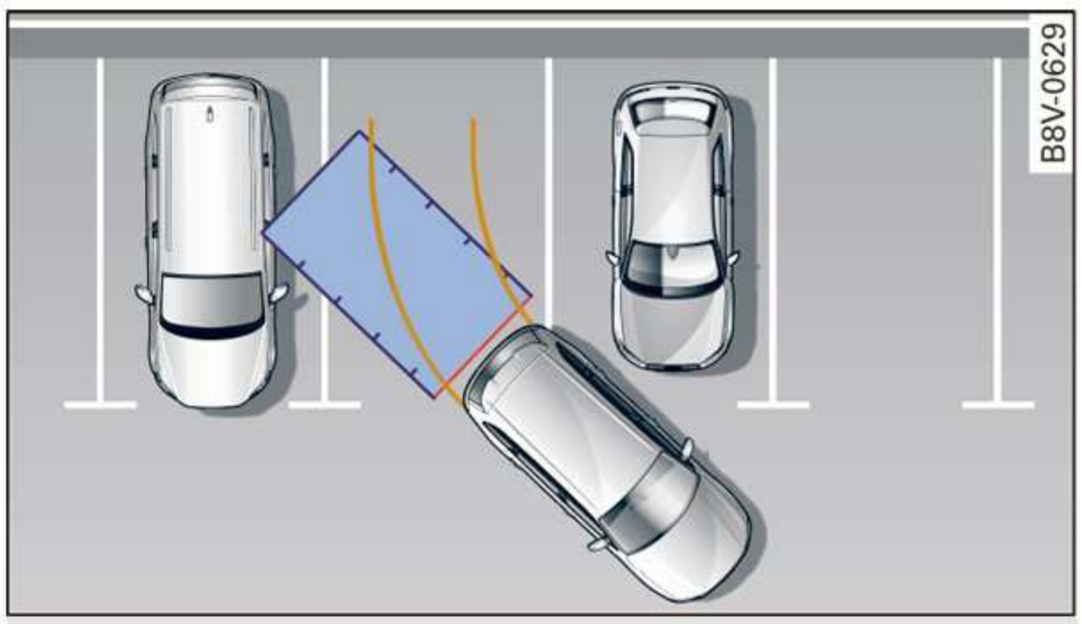


Fig. 131 Diagram: lines to aid in parking

The rearview camera helps you to park or maneuver using the orientation lines.

General information

Applies to: vehicles with rearview camera

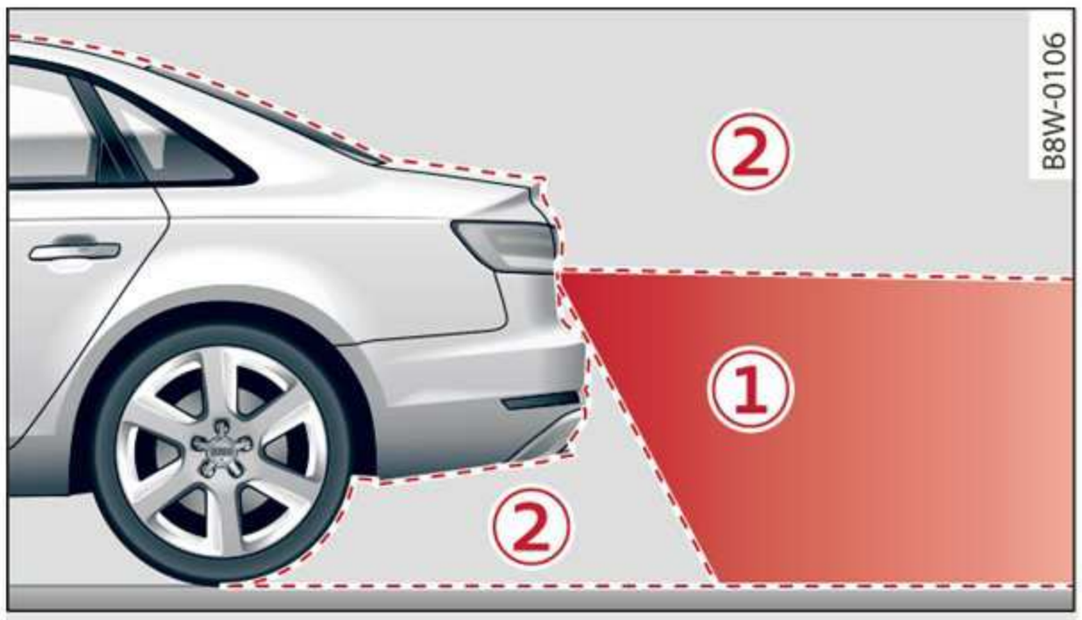


Fig. 132 Area covered ① and area not covered ② by the rearview camera.



Fig. 133 Luggage compartment lid: location of the rearview camera

The rearview camera is located above the rear license plate bracket. Make sure that the lens for the rearview camera ⇨ *fig. 133* is not covered by deposits or any other obstructions because this can impair the function of the rearview camera. For information on cleaning, see ⇨ *page 342*.

The rearview camera coverage area includes ① ⇨ *fig. 132*. Only this area is shown in the Infotainment display. Objects that are in area ②, which is not covered, are not displayed.

WARNING

– Always read and follow the applicable warnings ⇨ ⚠ *in General information on page 129*.
– If the position and the installation angle of the rearview camera was changed, for example after a collision, do not continue to use the system for safety reasons. Have it checked by an authorized Audi dealer or authorized Audi Service Facility.
– Only use the rearview camera to assist you if it shows a good, clear picture. For example, the image may be affected by the sun shining into the lens, dirt on the lens, or if there is a malfunction.
– Use the rearview camera only if the luggage compartment lid is completely closed. Make sure any objects you may have mounted on the luggage compartment lid do not block the rearview camera.
– The camera lens enlarges and distorts the field of vision. The object appears both altered and inaccurate on the screen.
– In certain situations, people or objects in the display appear closer or farther away:
  – For objects that do not touch the ground, such as the bumper of a parked vehicle, a trailer hitch or the rear of a truck. Do not use the orientation lines in this case.
  – If driven from a level surface onto an incline, or a downward slope.
  – If driven toward protruding objects.
  – If the vehicle is carrying too much load in the rear.

Note

- Always read and follow the applicable warnings ⇨ *in General information on page 129*.
- The orange-colored orientation lines in the Infotainment display show the vehicle path based on the steering wheel angle. The front of the vehicle swings out more than the rear of the vehicle. Maintain plenty of distance so that an exterior mirror or a corner of the vehicle does not collide with any obstacles.

Switching on and off

Applies to: vehicles with rearview camera

Switching on and off

Requirement: the vehicle speed must be under approximately 6 mph (10 km/h).

- Press the P button in the center console ⇨ *page 131, fig. 130*. A short confirmation tone sounds and the LED in the button turns on.

Switching on automatically

The system switches on automatically when reverse gear is engaged while the engine is running. A brief tone will sound.

Switching off automatically

The system switches off automatically when driving forward faster than 6 mph (10 km/h).

Perpendicular parking

Applies to: vehicles with rearview camera

This view may be used when parking in a garage or in a parking space.

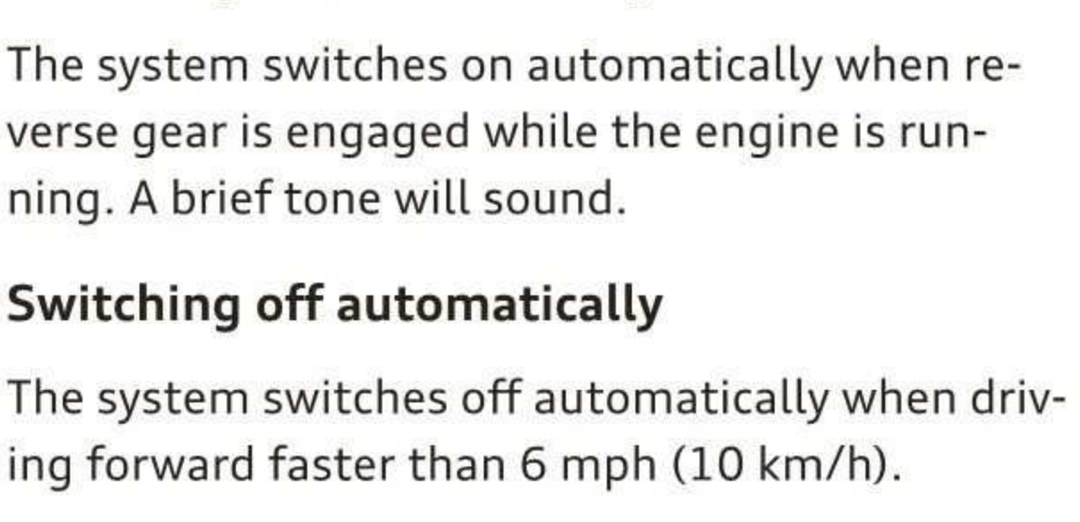


Fig. 134 Infotainment system: aiming at a parking space

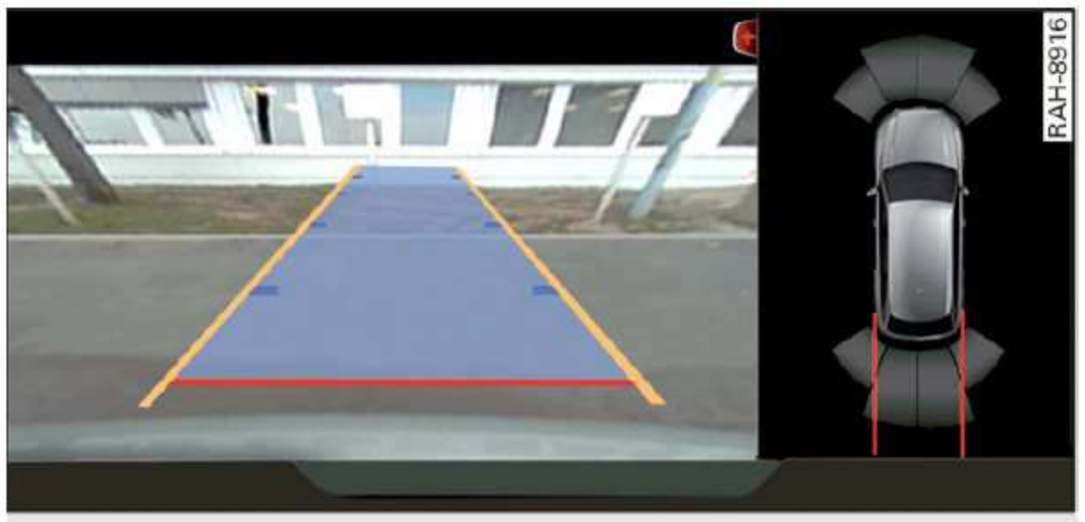


Fig. 135 Infotainment system: aligning the vehicle

- Turn the Infotainment system on and shift into reverse gear.
- The orange orientation lines ① show the vehicle's direction of travel. Turn the steering wheel until the orange orientation lines align with the parking space ⇨ *fig. 134*. Use the markings ② to help you estimate the distance to an obstacle. Each marking represents approximately 3 ft (1 m). The blue area represents an extension of the vehicle's outline by approximately 16 ft (5 meters) to the rear.
- While driving in reverse gear, adjust the steering wheel angle to fit the parking space using the orange orientation lines for assistance ⇨ ⚠ *in General information on page 132*, ⇨ ! *in General information on page 133*. Area ③ represents the rear bumper. At the very latest, stop the vehicle when the red orientation line ④ borders an object.

Peripheral cameras

Introduction

Applies to: vehicles with peripheral cameras

With this equipment, the parking system plus* ⇨ *page 130* is supplemented with various peripheral cameras. The four cameras give you the following views: area around the vehicle, front corner view and rear corner view, view in front of the vehicle and behind the vehicle.

General information

Applies to: vehicles with peripheral cameras

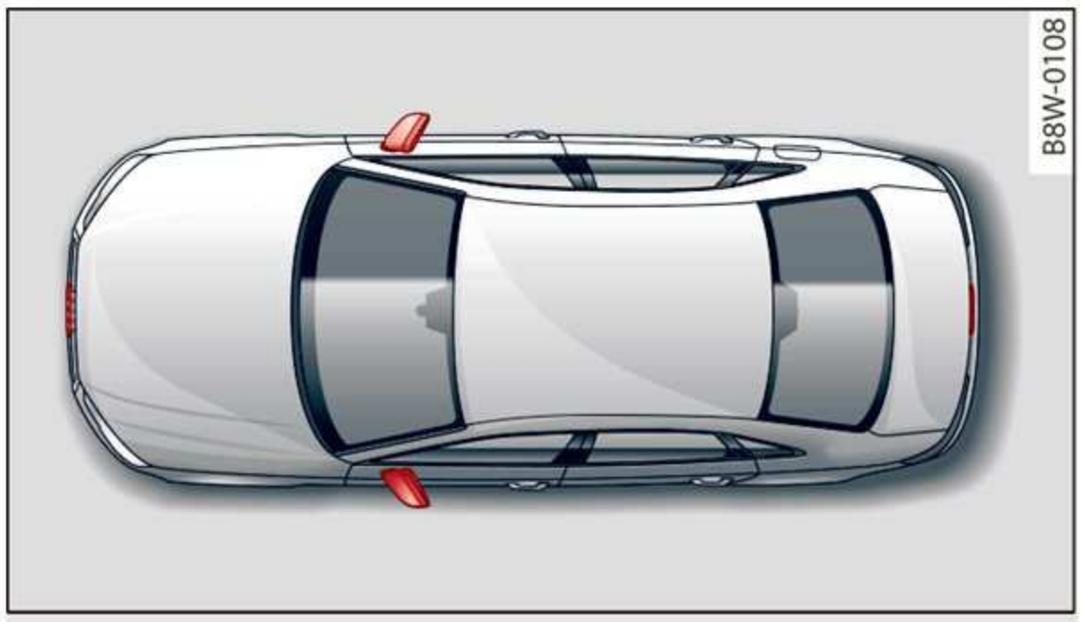


Fig. 136 Location of peripheral cameras

The four peripheral cameras are located in the radiator grille, in the luggage compartment lid and on both exterior mirrors ⇨ *fig. 136*. Make sure that the lenses are not covered by deposits or any other obstructions as this may impair the system. For information on cleaning, see ⇨ *page 342*.

Black corners are shown in the vehicle silhouette when in **Surroundings** mode. Objects in these areas are outside of the camera's field of view and are not detected.

WARNING

- Always read and follow the applicable warnings ⇨ ⚠ *in General information on page 129*.
- If the position or the installation angle of a camera was changed, for example after a collision, do not continue to use the system for safety reasons. Have it checked by an authorized Audi dealer or authorized Audi Service Facility.
- Keep in mind that the image in the display is incorrect if the exterior mirror housing has been moved out of place.
- Only use the images provided by the camera on the rear of the vehicle when the luggage compartment lid is completely closed. Make sure any objects you may have mounted on the luggage compartment lid do not block the rearview camera.
- The area around the vehicle is shown using the camera images. The vehicle image is shown by the system. Objects and obstacles above the camera are not displayed.
- Camera lenses enlarge and distort the field of vision. The objects appear both altered and inaccurate on the screen.

Note

- Always read and follow the applicable warnings ⇨ ⓘ *in General information on page 129*.
- The Infotainment display shows the direction in which the rear of the vehicle is traveling based on the steering wheel angle. The front of the vehicle swings out more than the rear of the vehicle. Maintain plenty of distance so that an exterior mirror or a corner of the vehicle does not collide with any obstacles.

Tips

If the /// symbol appears in the display and the respective display area is grayed out, then the power exterior mirrors were folded in or the driver's door/front passenger's door/luggage compartment lid was opened.

Switching on and off

Applies to: vehicles with peripheral cameras



Fig. 137 Infotainment system: select the mode

Switching on and off

Requirement: the vehicle speed must be under approximately 6 mph (10 km/h).

▸ Press the P button in the center console ⇨ *page 131, fig. 130*. A short confirmation tone sounds and the LED in the button turns on. ▶

Switching on automatically

The system switches on automatically when reverse gear is engaged while the engine is running. A brief tone will sound.

Switching off automatically

The system switches off automatically when driving forward faster than 6 mph (10 km/h).

Selecting the mode

- Turn the control knob to the symbol for the desired mode Ⓐ through Ⓔ ⇨ *fig. 137* and press the control knob.

You may select from the following modes:

Ⓐ - Corner view (front) ⇨ *page 135*

Ⓑ - Front ⇨ *page 135*

Ⓒ - Top view ⇨ *page 135*

Ⓓ - Rear ⇨ *page 136*

Ⓔ - Corner view (rear) ⇨ *page 135*

Corner view (front)/corner view (rear)

Applies to: vehicles with peripheral cameras



Fig. 138 Infotainment system: Corner view (front)



Fig. 139 Infotainment system: Corner view (rear)

This view can assist you for example, when you are exiting from an area with poor visibility. The area at the front and rear sides of the vehicles is displayed.

- To show the side view toward the front, select the symbol Ⓐ ⇨ *fig. 138* with the control knob and press the control knob.
- To show the side view toward the rear, select the symbol Ⓔ ⇨ *fig. 139* with the control knob and press the control knob.

Front

Applies to: vehicles with peripheral cameras



Fig. 140 Infotainment system: front mode

For example, this view assists you in using the full maneuvering range in front of the vehicle. The area in front of the vehicle is displayed. The vehicle surroundings are shown in the right area of the display. You can switch between the optical display and camera image ⇨ *page 136*.

- Select the symbol Ⓑ with the control knob. The orange orientation lines mark the expected path of the vehicle. Stop the vehicle when the red orientation line* borders an object ⇨ ⚠ *in General information on page 134*.

Surroundings

Applies to: vehicles with peripheral cameras



Fig. 141 Infotainment system: Surroundings mode

This view is ideal for maneuvering. The area around the vehicle is shown using the camera images. The vehicle image is shown by the system. ▶

▸ Select the symbol Ⓒ with the control knob and press the control knob.

Rear

Applies to: vehicles with peripheral cameras



Fig. 142 Infotainment system: rear mode

For example, this view assists you in using the full maneuvering range behind the vehicle. The area behind the vehicle is displayed. The vehicle surroundings are shown in the right area of the display. You can switch between the optical display and camera image ⇨ *page 136*.

▸ Select the symbol Ⓓ with the control knob.

Perpendicular parking

Applies to: vehicles with peripheral cameras

This view may be used when parking in a garage or in a parking space.



Fig. 143 Infotainment system: aiming at a parking space

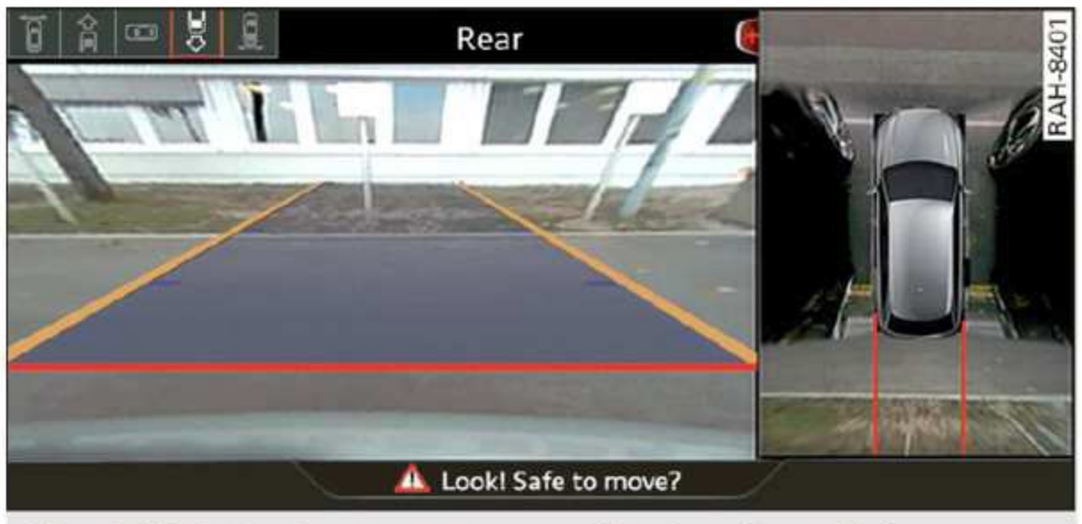


Fig. 144 Infotainment system: aligning the vehicle

▸ Turn the Infotainment system on and shift into reverse gear.

▸ The orange orientation lines ① show the vehicle's direction of travel. Turn the steering wheel until the orange orientation lines align with the parking space ⇨ *fig. 143*. Use the markings ② to help you estimate the distance to an obstacle. Each marking represents approximately 3 ft (1 m). The blue area represents an extension of the vehicle's outline by approximately 16 ft (5 meters) to the rear.

▸ While driving in reverse gear, adjust the steering wheel angle to fit the parking space using the orange orientation lines for assistance ⇨ ⚠ *in General information on page 134*, ⇨ Ⓘ *in General information on page 134*. Area ③ represents the rear bumper. You should stop reversing at the latest when the red orientation line ④ borders an object ⇨ ⚠ *in General information on page 132*.

Adjusting the parking aid

Applies to: vehicles with a rear parking system/parking system plus/rearview camera/peripheral cameras

The functions are adjusted in the Infotainment system.

▸ Select in the Infotainment system: MENU button > **Vehicle** > left control button > **Driver assistance** > **Parking aid**. Or

▸ When the parking aid is active, select in the Infotainment system: right control button*.

End system* - stop the parking aid

Activate automatically* - switch automatic activation on/off

Front volume* - volume for the front area

Rear volume - volume for the rear area

Entertainment fader - the volume of the audio/video source is lowered when the parking system is turned on.

View* - switch between an optical display (**Graphic**) and camera image (**Camera**) on the side of the display.

Automatic front/rear camera changing* - the view behind the vehicle (**Rear** mode) is displayed ▶

automatically when you shift into reverse gear. The view in front of the vehicle (**Front** mode) is displayed automatically when you shift into the forward gears. When first activating in a forward gear with the P button, the front side view is displayed (**Corner view (front)** mode).

If you do not set the ✓, the view behind the vehicle (**Rear** mode) is always displayed and it does not switch to the **Front** mode when a forward gear is selected.

Tips

- Several menus can be accessed with the right control button only when the parking aid is active.
- Certain settings are automatically stored and assigned to the vehicle key being used.
- The new level is demonstrated briefly* when the volume is adjusted.

Error messages

Applies to: vehicles with a rear parking system/parking system plus/rearview camera/peripheral cameras

P Rear parking aid: malfunction! Obstacles cannot be detected

P Front parking aid: malfunction! Obstacles cannot be detected

P Parking aid: malfunction! Obstacles cannot be detected

When one of these messages appears, there is a system malfunction. The LED in the P button also blinks when switching it on. The relevant message only appears again when you manually activate the parking aid with the button.

P Rear parking aid: obstacle detection restricted

The rear cross-traffic assist* ⇨ *page 125, Rear cross-traffic assist* is not available. Either the ESC is switched off, or the radar sensors may be covered by a bike rack, stickers, leaves, snow or other objects. Switch the ESC on, or clean the area in front of the sensors if necessary ⇨ *page 122, fig. 122*. If this message continues to be displayed, drive immediately to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction repaired.

Parking system plus*

If a sensor or speaker is faulty, the P symbol will appear in front of/behind the vehicle in the Infotainment system display. If a rear sensor is faulty, only obstacles that are in areas Ⓐ and Ⓑ are shown ⇨ *page 130, fig. 128*. If a front sensor is faulty, only obstacles that are in areas Ⓒ and Ⓓ are shown.

Peripheral cameras*

There is a system malfunction if the symbol appears and the corresponding area of the display is shown in black. The camera is not working in this area.

Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Intelligent Technology

Electronic Stabilization Control (ESC)

Description

Electronic Stabilization Control (ESC) supports driver safety. It reduces the risk of slipping and improves driving stability. ESC detects critical situations, such as if the vehicle is oversteering or understeering, or if the wheels are spinning. The brakes are applied or the engine torque is reduced in order to stabilize the vehicle. When the ESC engages, the  indicator light flashes in the instrument cluster.

The following systems are integrated in the ESC:

Anti-lock braking system (ABS)

ABS prevents the wheels from locking when braking. The vehicle can still be steered even during hard braking. Apply steady pressure to the brake pedal. Do not pump the pedal. A pulsing in the brake pedal indicates that the system is acting to stabilize the vehicle.

Brake assist system

The brake assist system can decrease braking distance. It increases braking power when the driver presses the brake pedal quickly in emergency situations. You must press and hold the brake pedal until the dangerous situation is over. In vehicles with adaptive cruise control*, the brake assist system is more sensitive if the distance detected to the vehicle driving ahead is too small.

Anti-Slip Regulation (ASR)

ASR reduces engine power when the drive wheels begin spinning and adapts the force to the road conditions. This makes it easier to start, accelerate and drive up hills.

Electronic Differential Lock (EDL)

The EDL applies the brakes to wheels that are slipping and transfers the drive power to the other wheels. This function is not available at higher speeds.

In extreme cases, EDL automatically switches off to keep the brake on the braked wheel from overheating. The vehicle is still functioning correctly. EDL will switch on again automatically when conditions have returned to normal.

Power steering

The ESC can also support vehicle stability through steering.

Selective wheel torque control

Selective wheel torque control is used when driving on curves. Braking is targeted toward the wheels on the inside of the curve as needed. This allows more precise driving in curves.

Automatic post-collision braking system

The “automatic post-collision braking system” can help to reduce the risk of sliding and of additional collisions after an accident. If the airbag control module detects a collision, the vehicle is braked by the ESC.

The vehicle does not brake automatically if one of the following occurs:

– The driver presses the accelerator pedal
– The ESC, the brake system, or the vehicle electrical system is not functioning

WARNING

– The ESC and its integrated systems cannot overcome the limits imposed by natural physical laws. This is especially important on slippery or wet roads. If the systems begin acting to stabilize your vehicle, you should immediately alter your speed to match the road and traffic conditions. Do not let the increased safety provided tempt you into taking risks. This could increase your risk of a collision.
– Please note the risk of a collision increases when driving fast, especially through curves and on slippery or wet roads, and when driving too close to objects ahead. The ESC and its integrated systems cannot always prevent collisions - there is still a risk of accidents!

– Press the accelerator pedal carefully when accelerating on smooth, slippery surfaces such as ice and snow. The drive wheels can spin even when these control systems are installed and this can affect driving stability and increase the risk of a collision.

Tips

– The ABS and ASR only function correctly when all four wheels have a similar wear condition. Different tire sizes can lead to a reduction in engine power.
– You may hear noises when the systems described are working.

Switching on/off

ESC turns on automatically when you start the engine.

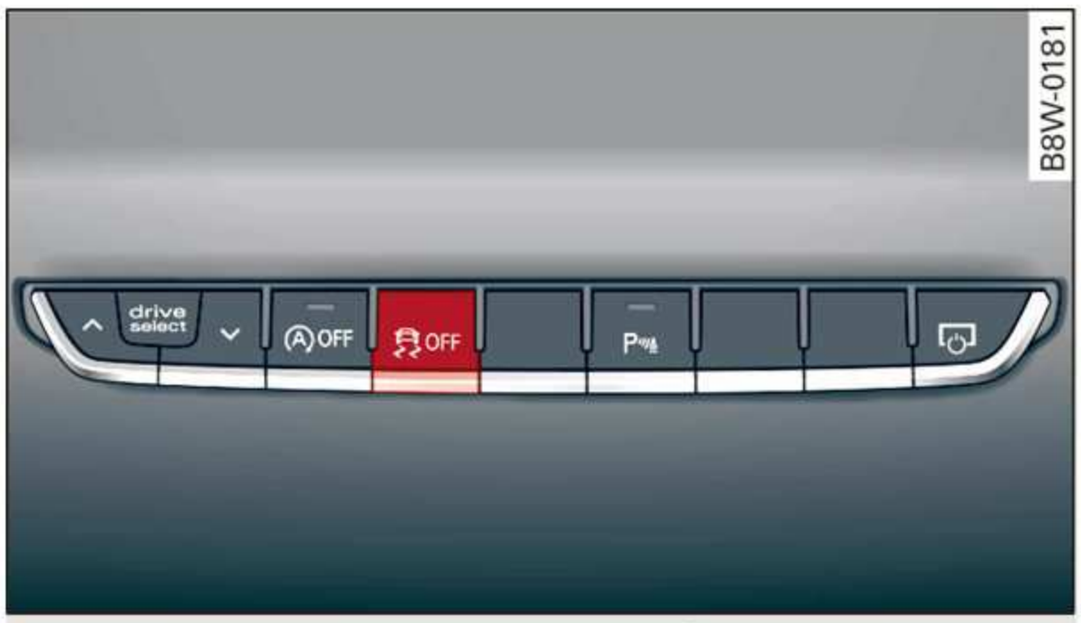


Fig. 145 Center console with button OFF

The ESC is designed to function in levels. Depending on the level that is selected, the stabilization function of the ESC will be limited or switched off. The amount of stabilization control will differ depending on the level.

The following situations are exceptions where it may be useful to switch on sport mode (sedan) or offroad mode (allroad) to allow the wheels to spin:

– Rocking the vehicle to free it when it is stuck
– Driving in deep snow or on loose ground
– Driving with snow chains
– Applies to: allroad: driving on rough terrain when much of the car's weight is lifted off the wheels (axle articulation)
– Applies to: allroad: driving downhill while braking on loose ground

For your safety, switch the sport mode/offroad mode off in advance.

ESC levels

Applies to: sedan

	Sport mode on	ESC/ASR off	Sport mode off or ESC/ASR on
Behavior	The ESC and ASR stabilization functions are limited ⇨ ⚠.	The stabilization function is not available ⇨ ⚠. ESC and ASR are switched off.	The full stabilization function of the ESC and ASR is available again.
Operating	Press the OFF button briefly.	Press and hold the OFF button longer than 3 seconds.	Press the OFF button again.
Indicator lights	OFF turns on.	OFF and ESC OFF turn on.	OFF turns off or OFF and ESC OFF turn off.
Messages	**Stabilization control (ESC): sport. Warning! Restricted stability**	**Stabilization control (ESC): off. Warning! Restricted stability**	**Stabilization control (ESC): on**

Applies to: allroad

	Offroad mode on	ESC/ASR off	Offroad mode off or ESC/ASR on
Behavior	The ESC and ASR stabilization functions are limited ⇨ ⚠.	The stabilization function is not available ⇨ ⚠. ESC and ASR are switched off.	The full stabilization function of the ESC and ASR is available again.
Operating	Press the OFF button briefly.	Press and hold the OFF button longer than three seconds.	Press the OFF button again.
Indicator lights	OFF turns on.	OFF and **ESC OFF** turn on.	OFF turns off or OFF and **ESC OFF** turn off.
Messages	**Stabilization control (ESC): offroad. Warning! Reduced stability**	**Stabilization control (ESC): off. Warning! Restricted stability**	**Stabilization control (ESC): on**

WARNING

You should only switch sport mode/offroad mode on or switch ESC/ASR off if your driving abilities and road conditions permit.

– The stabilization function is limited when sport mode/offroad mode is switched on. The driving wheels could spin and the vehicle could swerve, especially on slick or slippery road surfaces.
– There is no vehicle stabilization when ESC/ASR are switched off.

Hill descent assist

Applies to: allroad

Hill descent assist makes it possible to drive down a hill at a constant speed.

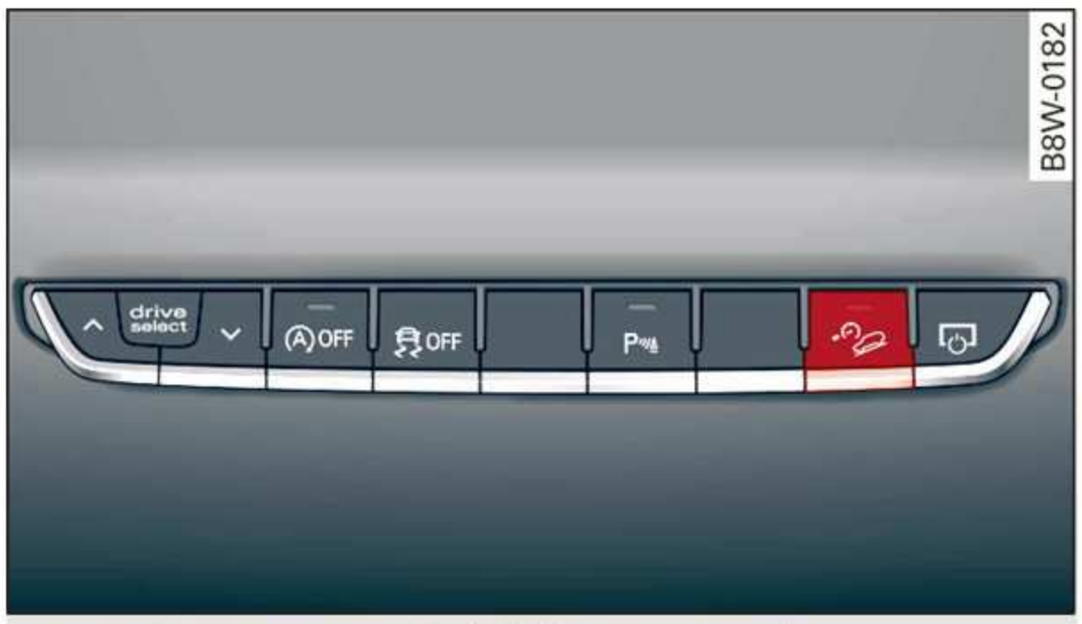


Fig. 146 Center console: hill descent assist button

- To switch hill descent assist on, press the button. The LED in the button will turn on.
- Press the button again to switch it off. The LED in the button turns off.

Hill descent assist brakes all four wheels automatically in order to limit speed when driving either forward or reverse on hills with a grade from approximately 6 to 60%. The wheels will not lock up because the ABS remains activated. In vehicles with a manual transmission, the hill hold assist adjusts to the specified speed so that the engine is not braked below its idle speed.

When hill descent assist is on, the speed your vehicle was traveling when it entered the hill is maintained. It is only possible to switch on the assist when driving slower than 37 mph (60 km/h). The assist begins shortly after you start driving and continues up to approximately 19 mph (30 km/h). In vehicles with a manual transmission, regulation below approximately 6 mph (9 km/h) is only possible if the clutch pedal is pressed or if the gearshift is in the neutral position. If the clutch pedal is released when a gear is engaged below approximately 6 mph (9 km/h), the regulated speed will increase. The driver can increase or decrease the vehicle speed within these limits by pressing the accelerator or brake pedal.

However, there must be enough traction. Hill descent assist **cannot** function as expected, if for example the hill is icy or if the surface is loose ⇨ ⚠.

Active regulation of a speed up to approximately 19 mph (30 km/h) is signaled in the instrument cluster by an indicator light . The indicator light turns on in the ready mode. ▶

The system does not work at speeds between approximately 19 and 37 mph (30 and 60 km/h). The system is then in ready-mode. This is indicated by the LED in the button turning on. The system automatically switched off when you drive faster than 37 mph (60 km/h). The LED will also turn off in this scenario.

Hill descent assist is automatically activated under the following conditions:

– the LED in the button turns on
– the vehicle speed is lower than 19 mph (30 km/h)
– the hill angle is at least approximately 6%

WARNING

– Be ready to apply the brakes at all times when using the hill hold assist.
– Always adjust the speed to the visibility, weather, road, and traffic conditions. The system cannot replace the driver's attention.
– The system cannot maintain a constant vehicle speed in all situations, for example when on smooth or slippery ground. This can increase the risk of an accident.

Brakes

New brake pads

New brake pads do not achieve their full braking effect during the first 250 mi (400 km). They must be “broken in” first. However, you can compensate for the slightly reduced braking force by pressing firmly on the brake pedal. Avoid heavy braking during the break-in period.

Brake pad wear depends largely on the way the vehicle is driven and on operating conditions. Brake pad wear increases when driving frequently in the city or short distances or when using a very sporty driving style.

Operating noise

Noises may occur when braking depending on the speed, braking force, and outside conditions such as temperature and humidity.

Wet conditions or road salt

In certain situations, for example after driving through water, in heavy rain, or after washing your car, the braking effect may be reduced due to moisture or ice on the brake rotors and brake pads. The brakes must be “dried” first with a few careful brake applications.

When driving at higher speeds while the windshield wipers are switched on, the brake pads are briefly pressed against the brake rotors. This action, which is not felt by the driver, happens at regular intervals and ensures a better reaction time for the brakes in wet weather.

The braking effect can also be reduced if you are driving on salted roads and you do not apply the brakes for long periods of time. The layer of salt on the brake rotors and pads must be worn off first when the brakes are applied.

Corrosion

Leaving the vehicle parked for long periods of time, low mileage on the vehicle, and avoiding heavy braking can contribute to corrosion on the brake rotors and to dirty brake pads.

If you usually avoid heavy braking or if there is corrosion present, occasional heavy braking at high speeds is recommended to clean the brake rotors and pads ⇨ ⚠.

Brake system malfunction

If you notice that the brake pedal *suddenly* goes down farther toward the floor when you press it, then a brake circuit in the dual-circuit brake system may have malfunctioned. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the problem corrected. On the way there, drive with reduced speed and keep in mind that you will need a longer distance to stop and you will need to press the brake pedal harder.

Low brake fluid level

When the brake fluid level is low, malfunctions in the brake system may occur. The brake fluid level is electronically monitored. ▶

Brake booster

The brake booster amplifies the pressure you apply to the brake pedal.

WARNING

- Only apply the brakes for the purpose of cleaning the brake system when road and traffic conditions permit. You must not endanger other road users and increase the risk of an accident.
- Due to the risk of injury, only have an authorized Audi dealer or authorized Audi Service Facility work on the brake system. Incorrect repairs could impair the function.
- Never let the vehicle roll while the engine is stopped because this increases the risk of an accident.

Note

- Never let the brakes "rub" by pressing the pedal lightly when braking is not actually necessary. This causes the brakes to overheat and increases braking distance and causes wear.
- Before driving downhill a long distance on a steep hill, decrease your speed and select a lower gear. This makes use of the engine braking effect and reduces the load placed on the brakes. If you need to brake additionally, brake in intervals and not continuously.

Tips

- If the brake booster is not working, you must press the brake pedal with much more force than normal.
- If you retrofit your vehicle with a front spoiler, wheel covers or similar items, make sure that the air flow to the front wheels is not obstructed. Otherwise the brake system can overheat.

Electromechanical steering, Dynamic steering

The electromechanical steering supports the driver's steering movements.

Power steering adapts *electronically* based on the vehicle speed.

Indicator lights and messages

Steering: malfunction! Please stop vehicle

If this indicator light turns on and stays on and this message appears, the power steering may have failed.

Stop the vehicle in a safe location as soon as possible. Do **not** continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Steering: malfunction! You can continue driving

If the indicator light turns on and this message appears, the steering wheel may be more difficult to move or more sensitive than usual. The steering wheel may also be turned to the side when driving straight.

Drive slowly to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

Dynamic steering: correcting steering wheel position

If the indicator light turns on and this message appears, the dynamic steering* is reinitializing. The steering wheel will be easy to move after starting the engine. Reinitialization might be necessary if the steering wheel was moved while the engine was switched off. The display turns off if the initialization was successful.

Tips

- If the or indicator light only stays on for a short time, you may continue driving.
- The dynamic steering stability systems ⇨ *page 138* are not available in the event of a system malfunction.

– For additional information on dynamic steering, see ⇨ *page 126*.

All wheel drive (quattro)

Description

Applies to: vehicles with all wheel drive

The all-wheel drive system distributes the driving power variably to the front and rear axle to improve the driving characteristics. It works together with selective wheel torque control, which can activate when driving through curves ⇨ *page 138*.

Applies to: vehicles with quattro ultra: If the driving situation does not require all wheel drive, then the rear section of the drivetrain will decouple to save fuel. The system constantly determines and anticipates if all wheel drive is needed. This allows the rear drivetrain to recouple shortly before it is needed.

The all wheel drive concept is designed for high engine power. Your vehicle is exceptionally powerful and has excellent driving characteristics both under normal driving conditions and on snow and ice. Always read and follow safety precautions ⇨ ⚠.

⚠ WARNING

– Even in vehicles with all wheel drive, you should adapt your driving style to the current road and traffic conditions to reduce the risk of an accident.
– The braking ability of your vehicle is limited to the traction of the wheels. In this way, it is not different from a two wheel drive vehicle. Do not drive too fast because this increases the risk of an accident.
– Note that on wet streets, the front wheels can “hydroplane” if driving at speeds that are too high. Unlike front wheel drive vehicles, the engine RPM does not increase suddenly when the vehicle begins hydroplaning. Adapt your speed to the road conditions to reduce the risk of an accident.

Sport differential

Applies to: vehicles with sport differential

The sport differential distributes the drive power to the rear axle based on the situation. The goal is a high level of agility and ability to accelerate on curves. The vehicle is very responsive to steering. The settings depend on the selected Audi drive select* mode.

Energy management

Your vehicle is equipped with an intelligent energy management system for distributing electricity. This significantly improves the starting ability and increases the vehicle battery life.

Tips

– If you drive short distances frequently, the vehicle battery may not charge enough while driving. As a result, convenience functions for electrical equipment may be temporarily unavailable.
– The vehicle battery will gradually drain if the vehicle is not driven for long periods of time, or if electrical equipment is used when the engine is not running. To ensure that the vehicle can still be started, the electrical equipment will be limited or switched off.

Notice about data recorded by the Event Data Recorder and vehicle control modules

Event Data Recorder

This vehicle is equipped with an Event Data Recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an airbag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as: ▶

– How various systems in your vehicle were operating;
– Whether or not the driver and passenger safety belts were buckled/fastened;
– How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
– How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

Some state laws restrict the retrieval or downloading of data stored by EDRs installed in a vehicle for the express purpose of retrieving data after an accident or crash event without the owner's consent.

Audi will not access the EDR and/or similar data or give it to others -

– unless the vehicle owner (or lessee if the vehicle has been leased) agrees; or
– upon the official request by the police; or
– upon the order of a court of law or a government agency; or
– for the defense of a lawsuit through the judicial discovery process.
– Audi may also use the data for research about vehicle operation and safety performance or provide the data to a third party for research purposes without identifying the specific vehicle or information about the identity of its owner or lessee and only after the recorded vehicle data has been accessed.

Vehicle control modules

Your vehicle is also equipped with a number of electronic control modules for various vehicle systems, such as engine management, emission control, airbags, and safety belts.

These electronic control modules record data during normal vehicle operation that may be needed by trained technicians for diagnostic and repair purposes. The recording capability of these modules is limited to data (no sound is recorded). Only a small amount of data is actually recorded over a very limited period of time, or stored when a system fault is detected by a control module. Some of the data stored may relate to vehicle speed, direction, or braking, as well as restraint system use and performance in the event of a crash. Stored data can also only be read and downloaded with special equipment that is directly connected to the vehicle.

Tips

Your vehicle may be equipped with Audi connect. Your use of certain Audi connect features requires wireless services that are provided by a third party wireless telecommunications provider. For details regarding how information obtained through Audi connect is collected, processed, transmitted, used, and shared, please see your contract with the wireless telecommunications provider.

Multi Media Interface

Traffic safety information

Audi recommends performing certain Infotainment system functions, such as entering a destination, only when the vehicle is stationary. Always be prepared to stop operating the Infotainment system in the interest of your safety and the safety of other road users.

WARNING

Only use the Infotainment system when traffic conditions permit and always in a way that allows you to maintain complete control over your vehicle.

Tips

Certain functions are not available while driving.

Introduction

The Multi Media Interface, or MMI for short, combines various systems for communication, navigation and entertainment in your Audi. You can operate the MMI using the MMI control panel, the multifunction steering wheel or the voice recognition system*.*

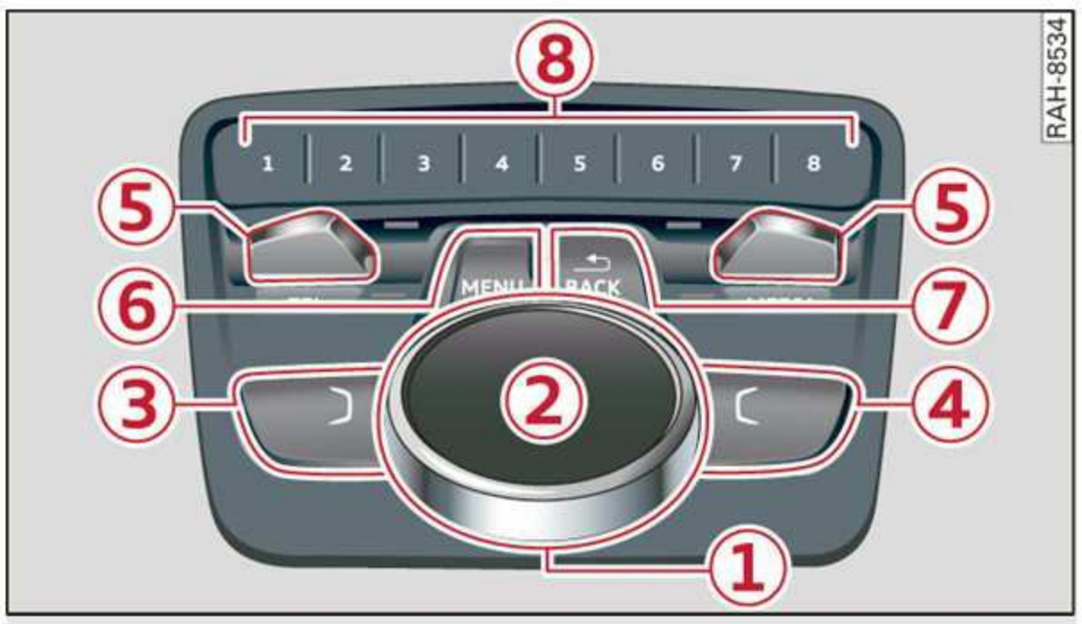


Fig. 147
-Applies to: vehicles with automatic transmission:- MMI control panel - integrated shortcut keys

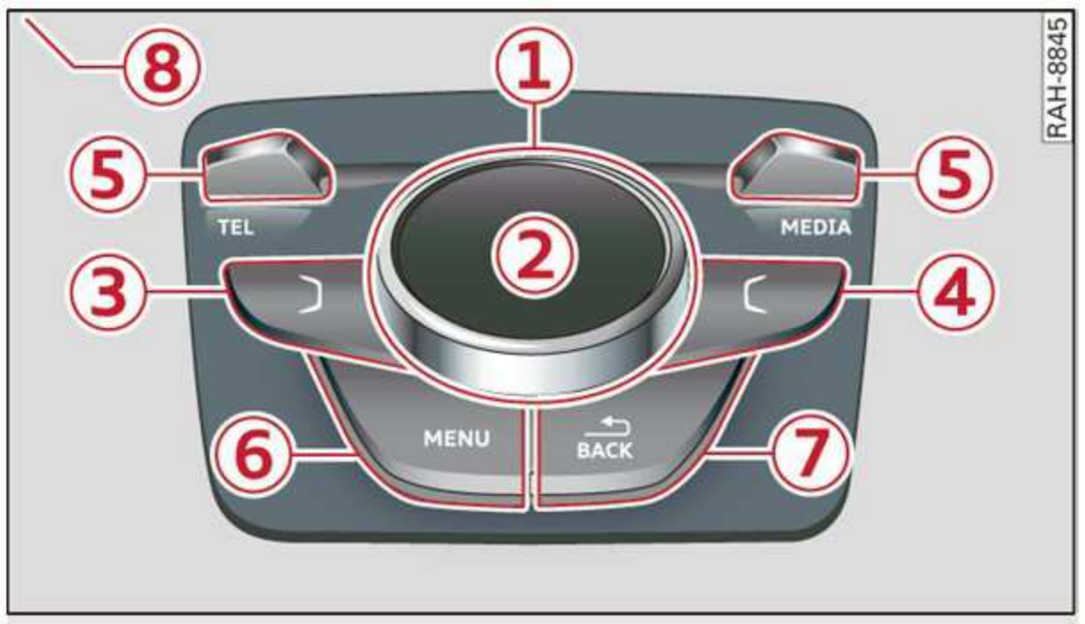


Fig. 148 -Applies to: vehicles with manual transmission:- MMI control panel - separate shortcut keys on the center console

MMI control panel overview

① Control knob , if needed with joystick function* 147, 150
② MMI touch control pad* 148
③ Left control button 147
④ Right control button 147
⑤ Buttons for opening menus directly . 147
⑥ MENU button 147
⑦ BACK button 147
⑧ Shortcut keys 152

Tips

The shortcut keys ⑧ ⇨ *fig. 148* for the MMI control panel (manual transmission) are on the center console.

MMI On/Off knob with joystick function

Operating



Fig. 149 MMI On/Off knob with joystick function

Switching the MMI on/off: the MMI can be switched on/off manually.

– **Switching on manually**: press the On/Off knob ① briefly ⇨ *fig. 149*. **Or**: press the MENU button ⑥ ⇨ *page 145, fig. 147* or ⇨ *page 145, fig. 148*, or one of the buttons to open the menus directly ⑤.

– **Switching off manually**: press and hold the On/Off knob ① ⇨ *fig. 149* until the MMI switches off. If the MMI has been switched off manually, it does *not* switch on again automatically the next time the ignition is switched on.

Additional functions:

– **Adjusting the volume**: turn the On/Off knob ① ⇨ *fig. 149*.

– **Muting**: press the On/Off knob ① ⇨ *fig. 149* briefly.

– **Selecting the previous/next function (for example, a radio station/track)**: press the On/Off knob ① ⇨ *fig. 149* briefly toward the left ⏮ or right ⏭.

– **Fast forwarding/rewinding (for example songs)**: press and hold the On/Off knob ① ⇨ *fig. 149* toward the left ⏮ or right ⏭.

WARNING

Adjust the volume of the audio system so that signals from outside the vehicle, such as police and fire sirens, can be heard easily at all times.

Tips

The MMI switches off automatically if the engine is not running and the vehicle battery is low.

using the On/Off knob with the MMI joystick function ⇨ *page 145*.

Tips

There may be delays when switching on the display.

Information on display images

The display version depends on vehicle equipment.



Fig. 150 Display version A



Fig. 151 Display version B

Additional content (such as album cover and map material) is shown on display version B, if applicable ① ⇨ *fig. 151*. Because the other content shown on the displays is nearly identical between the two versions, this manual will primarily describe display version A.

Infotainment system display

Switching on/off

▸ Press the ⏻ button to switch the Infotainment system on and off.

When the MMI is switched on and the display is switched off, you can operate certain functions

MMI operation

Selecting and confirming a function



Fig. 152 Operating the control knob

Selecting and confirming a function in a menu/list

- **Selecting a function**: turn the control knob (1) ⇨ *fig. 152* to the desired function (such as selecting a frequency).
- **Confirming a selection**: press the control knob (2) ⇨ *fig. 152*.

Returning to functions at higher levels

- Press the BACK button (7) ⇨ *page 145, fig. 147* or ⇨ *page 145, fig. 148*.

Opening the main menu/menu



Fig. 153 Diagram: main menu

Opening the main menu

- Press the MENU button (6) ⇨ *page 145, fig. 147* or ⇨ *page 145, fig. 148*. The MMI menus (such as **Radio**) are displayed ⇨ *fig. 153*. Then you can select and confirm a function using the control knob.

Opening a menu directly

- Press the applicable button to directly open the menu (5) ⇨ *page 145, fig. 147* or ⇨ *page 145, fig. 148* in the direction of the desired menu (such as RADIO). Then you can select and confirm a function using the control knob.

Opening the selection menu/options menu with the control buttons

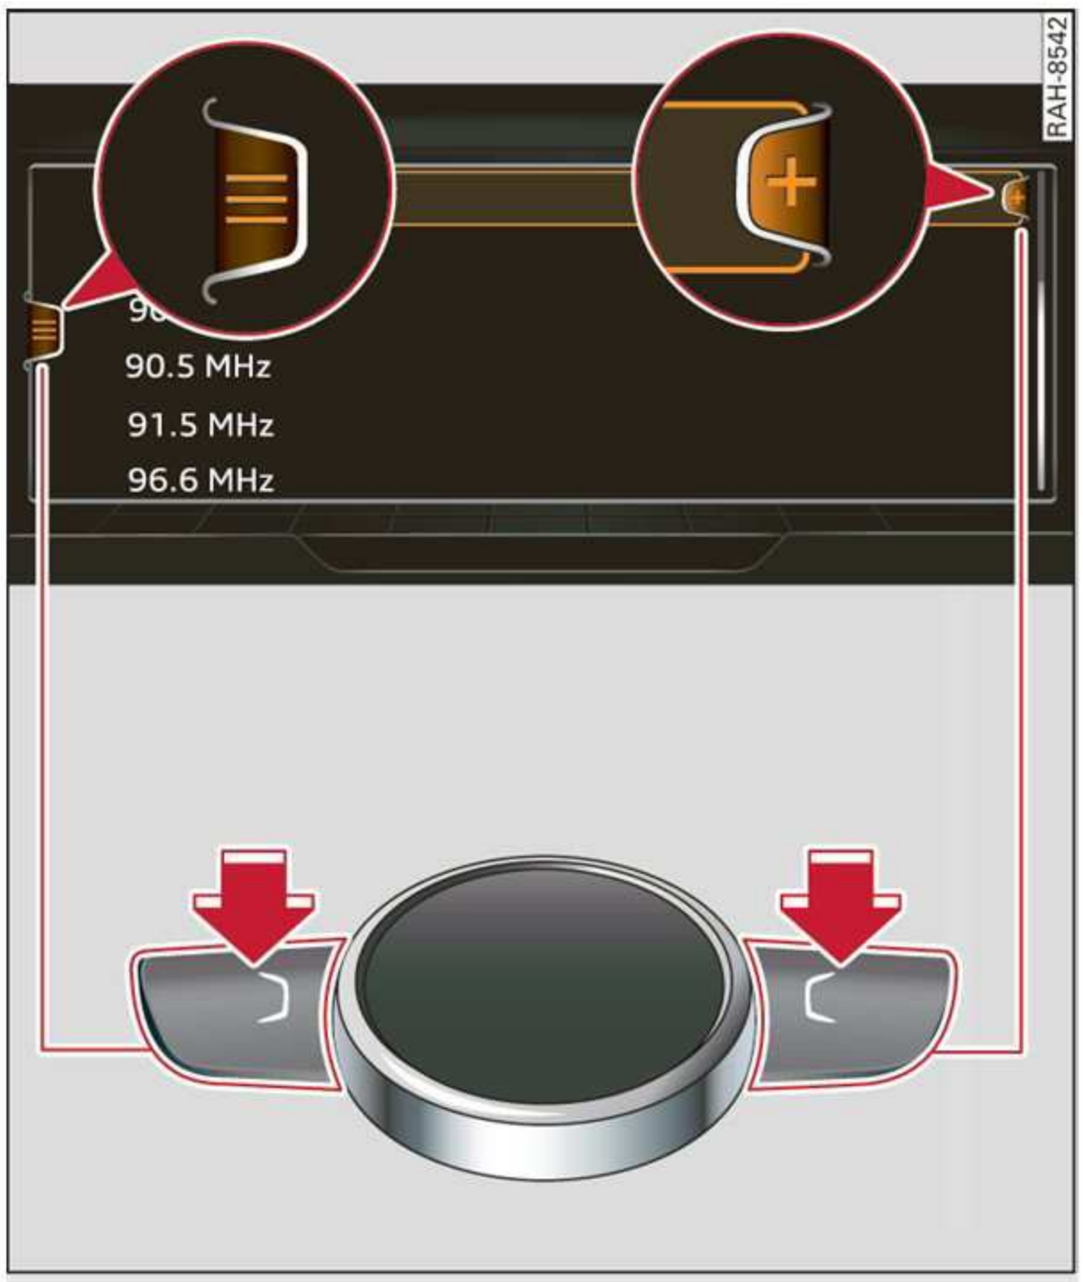


Fig. 154 Control buttons on the MMI control panel

Selection menu: through the selection menu, you can open additional functions within a menu item (such as **Radio**).

Requirement: the selection menu symbol must be displayed in the Infotainment system display ⇨ *fig. 154*.

Opening and closing the selection menu: press the left control button ⇨ *fig. 154*. Then you can select and confirm a function using the control knob. ▶

Options menu: using the options menu, you can select and confirm context-dependent functions as well as settings within a menu item (such as **Radio**).

Requirement: the options menu symbol ⊞ must be displayed in the Infotainment system display ⇨ *fig. 154*.

Opening and closing the options menu: press the right control button ⇨ *fig. 154*. Then you can select and confirm a function using the control knob.

Information about menu paths

This guide shows you at a glance the paths for opening a desired menu and its settings and functions.

Example of a path

▸ Select: RADIO button > left control button > **FM**.

Following the path

▸ Press the RADIO button.
▸ Press the left control button.
▸ Turn the control knob to the **FM** menu item to select it.
▸ Press the control knob to confirm the selected **FM** menu item.
▸ The selected and confirmed function is executed. In this example, the **FM** frequency band is set.

MMI touch

MMI touch control pad

Applies to: vehicles with MMI touch

You can enter data using handwriting recognition on the MMI touch control pad.



Fig. 155 Example: entering a navigation destination using the MMI touch

The MMI touch control pad is on the surface with the control knob ⇨ *fig. 155*.

Entering numbers, letters, and symbols

Applies to: vehicles with MMI touch

The MMI touch allows you to enter data on the MMI touch control pad using handwriting recognition.



Fig. 156 Display when MMI touch is active

Requirement: it must be possible to enter text or numbers and the symbol ① ⇨ *fig. 156* must appear in the Infotainment system display.

– **Initial entry**: write an individual upper case or lower case letter or number/symbol on the MMI touch control pad using your finger. A symbol that is recognized clearly by the system is displayed in the Infotainment system display ① ⇨ *page 148, fig. 155*, confirmed with an audible signal if necessary, and transferred to the input field.
– **Entering spaces**: move your finger across the MMI touch control pad from left to right.
– **Deleting characters**: move your finger across the MMI touch control pad from right to left.
– **Selecting the input suggestion**: press the control knob.
– **Switching directly to the results list**: turn the control knob to the right.
– **Opening the speller**: select the right control button > **Open speller**. Text or numbers are entered using the speller ⇨ *page 152*.
– **MMI touch volume**: press the right control button. See ⇨ *page 245*.

Moving the crosshairs

Applies to: vehicles with MMI touch

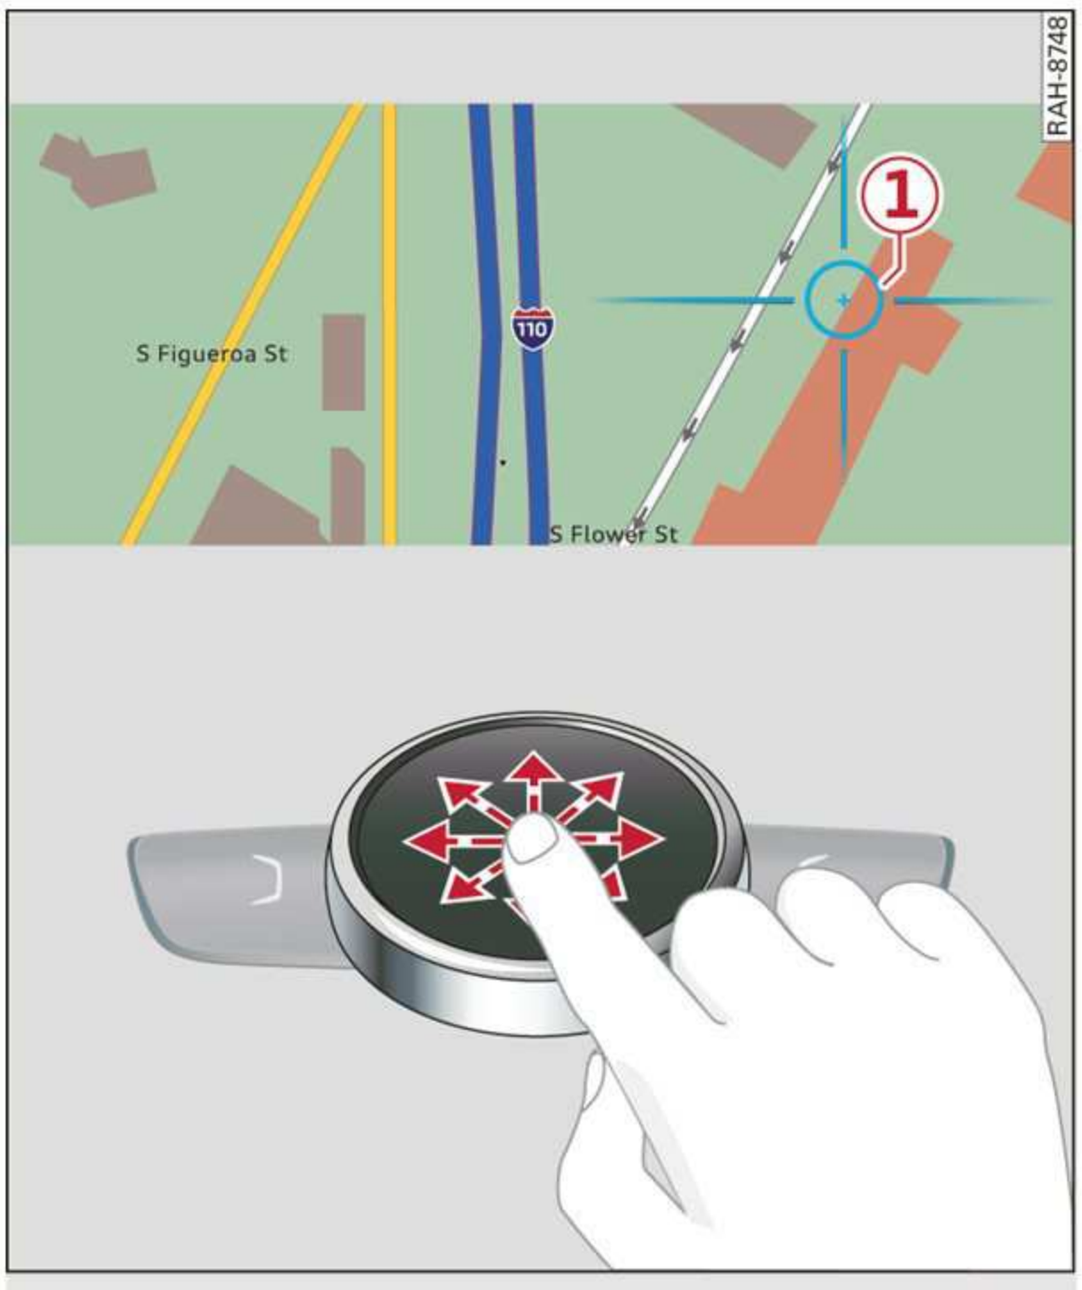


Fig. 157 Moving the crosshairs

Requirement: a map must be displayed ⇨ *page 207*.

– **Showing/hiding the crosshairs**: press the control knob to show the crosshairs ① ⇨ *fig. 157*. To hide the crosshairs again, press the BACK button ⑦ ⇨ *page 145, fig. 147* or ⇨ *page 145, fig. 148*.
– **Moving the crosshairs on a map**: move the crosshairs shown in the desired direction using your finger on the MMI touch control pad ⇨ *fig. 157*.

Moving the map

Applies to: vehicles with MMI touch

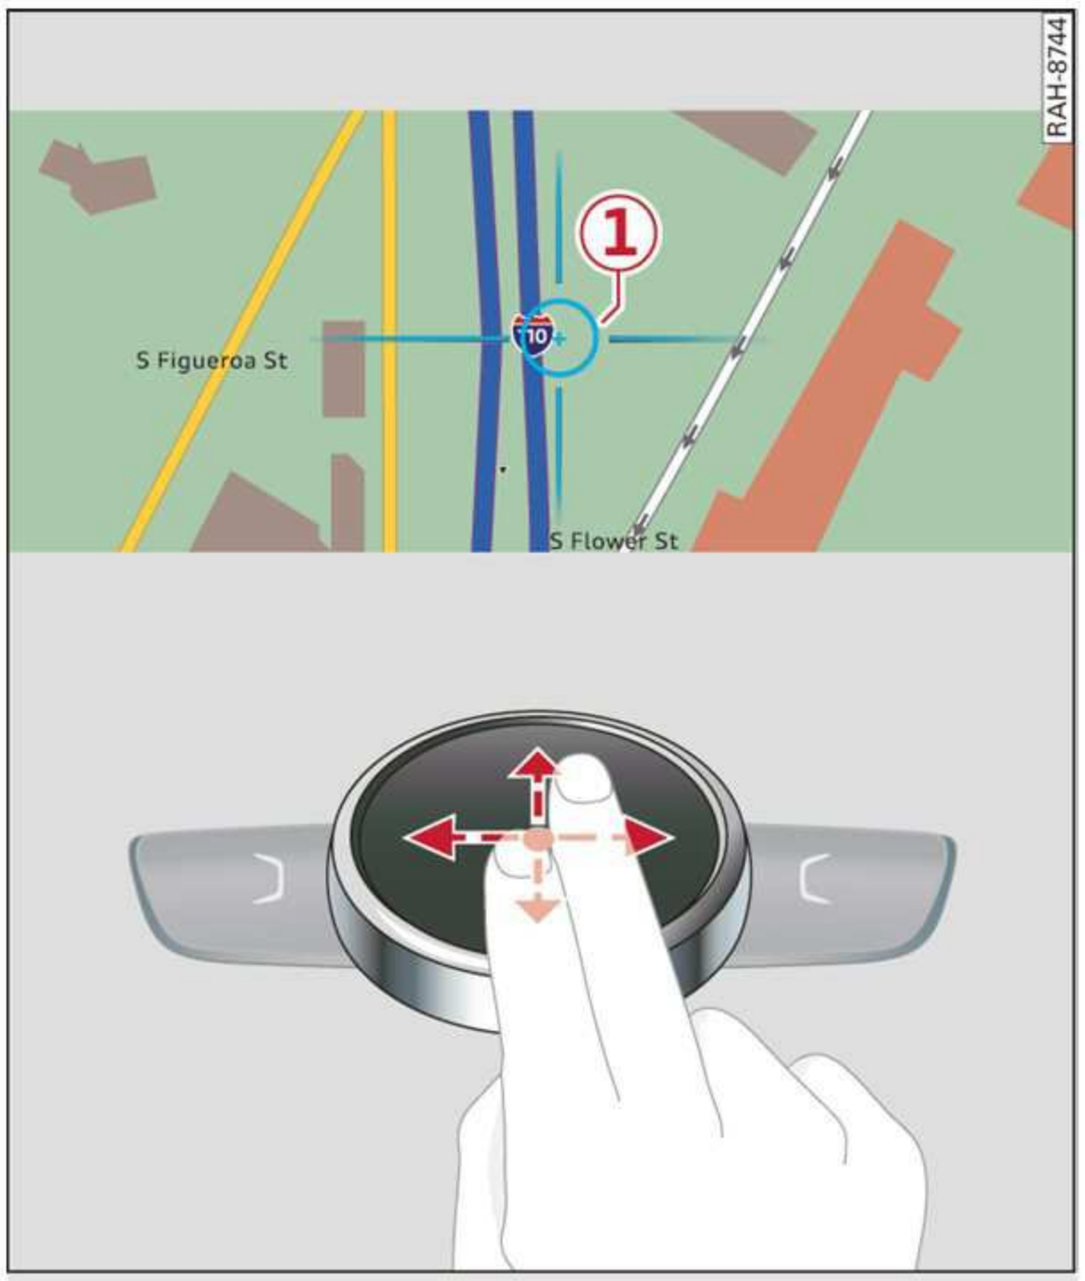


Fig. 158 Moving the map

Requirement: a map must be displayed ⇨ *page 207*.

– **Showing/hiding the crosshairs**: press the control knob to show the crosshairs ① ⇨ *fig. 158*. To hide the crosshairs again, press the BACK button ⑦ ⇨ *page 145, fig. 147* or ⇨ *page 145, fig. 148*.

– **Moving the standard map/satellite map**[1)]: move the crosshairs shown in the desired direction using two fingers on the MMI touch control pad ⇨ *fig. 158*.
– **Moving the map quickly**: when the crosshairs are visible, pull two fingers across the MMI touch control pad quickly in the desired direction. The map will come to a stop after several seconds.

Zooming in/out on the map

Applies to: vehicles with MMI touch

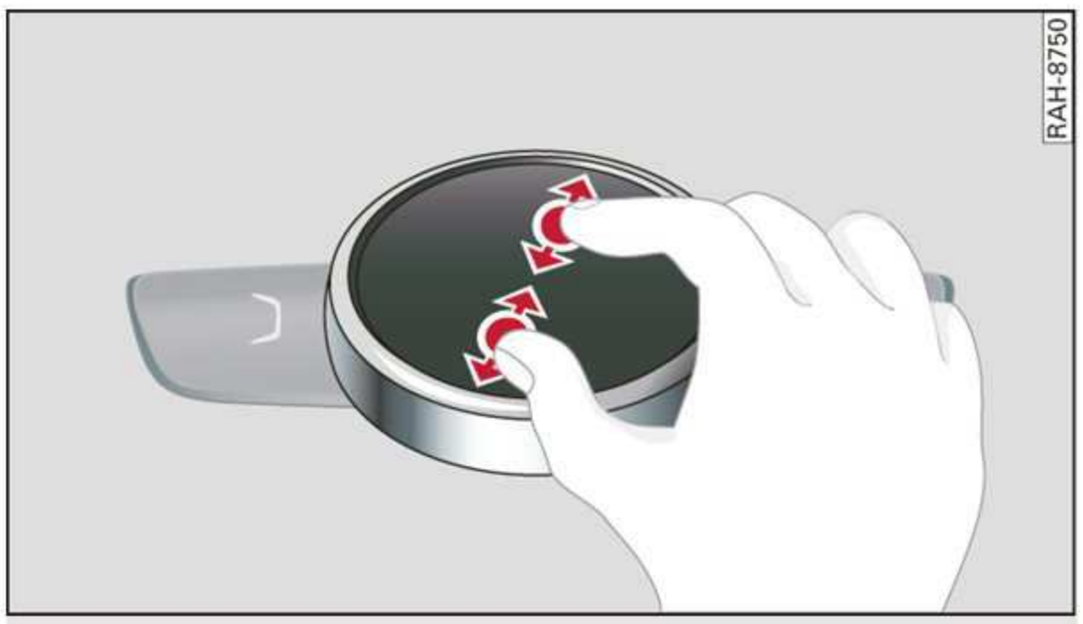


Fig. 159 Zooming in and out on the map

Requirement: a map must be displayed ⇨ *page 207*.

– **Zooming in/out on the map**: press the control knob to show the crosshairs. Touch the MMI touch control pad with two fingers and pull your fingers apart or together ⇨ *fig. 159*.

Press the BACK button ⑦ to hide the crosshairs ⇨ *page 145, fig. 147*.

Adjusting the sound focus

Applies to: vehicles with MMI touch

Requirement: the **Balance/fader** function must be selected ⇨ *page 244*.

– **Moving the crosshairs for sound focus**: move your finger in the desired direction on the MMI touch control pad.
– **Storing the crosshairs location**: press the control knob twice. **Or**: press the BACK button ⑦ ⇨ *page 145, fig. 147*.

Using the DVD main menu

Applies to: vehicles with MMI touch

Requirement: a DVD must be playing ⇨ *page 229*. The DVD main menu is shown.

– **Selecting a menu item**: move your finger up/down or left/right on the MMI touch control pad.
– **Confirming a selection**: press the control knob.

Tips

The volume of the voice guidance prompts for the MMI touch* can be adjusted separately ⇨ *page 245*.

Control knob with joystick function

Operation

Applies to: vehicles with joystick function

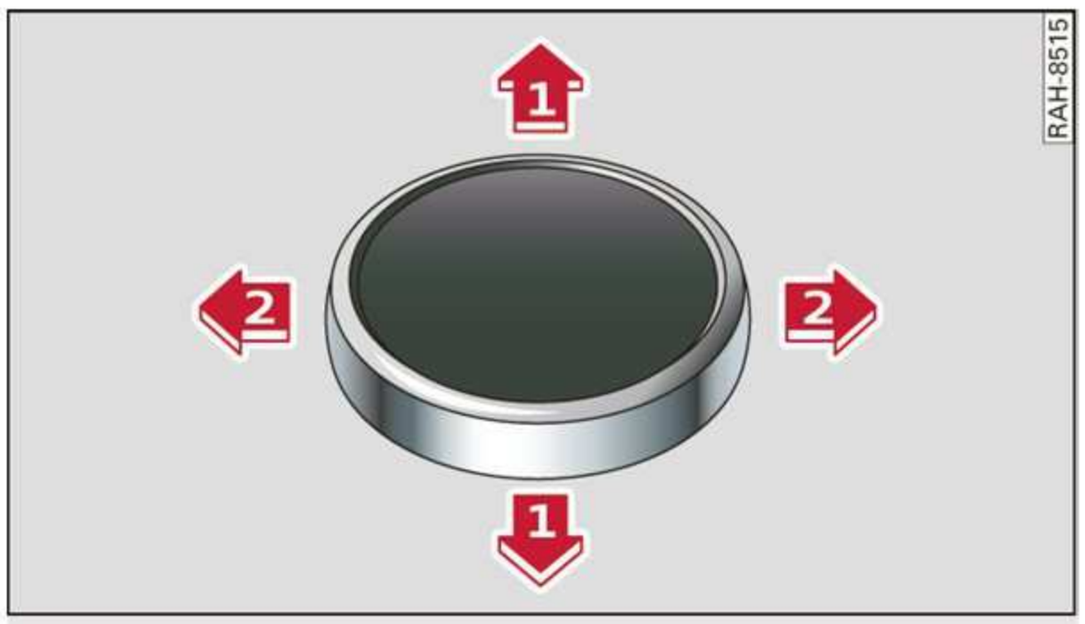


Fig. 160 Operating concept for the control knob with joystick function

You can push the control knob up or down ① ⇨ *fig. 160* or to the right or left ②.

Opening the entertainment sliding menu

Applies to: vehicles with MMI touch

Opening the entertainment sliding menu: push the control knob down to open the entertainment sliding menu ③ ⇨ *page 155, fig. 164*. Then you can select and confirm a function.

Closing the entertainment sliding menu: push the control knob up to close the entertainment ▶

1) AUDI AG provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.

sliding menu. **Or**: Press the BACK button (7) ⇨ *page 145, fig. 147* or ⇨ *page 145, fig. 148*.

Additional functions

Applies to: vehicles with joystick function

Displaying the input field/switching to speller input

Push the control knob up ⇨ *page 150, fig. 160* to reach the beginning of a list in the central area or the input field. If the input field is already open, switch directly to the speller in the input field by pushing the control knob up again ⇨ *page 152, Letter/number speller*.

On the map

Requirement: a map must be displayed ⇨ *page 207*.

- **Displaying the input field**: push the control knob up.
- **Displaying route guidance**: when route guidance is active, you can also display the route guidance by pushing the control knob up ⇨ *page 202, fig. 185*.
- **Zooming in/out on the map (zoom)**: turn the control knob to the right/left to zoom in/out on the map.

Applies to: vehicles without MMI touch with joystick function

- **Showing/hiding the crosshairs**: press the control knob. The crosshairs are shown on the map. Press the BACK button to hide the crosshairs.
- **Moving the crosshairs**: when the crosshairs are visible, turn the control knob in the direction the crosshairs should move. Press the control knob and hold it until the crosshairs are in the desired point on the map.
- **Additional options on the map**: see ⇨ *page 209*

Adjusting the sound focus

Applies to: vehicles without MMI touch with joystick function

Requirement: the balance/fader function must be selected ⇨ *page 244*.

- **Moving the sound focus using the crosshairs**: the crosshairs can be moved horizontally. Turn the control knob to the left or to the right. Press the control knob to move the crosshairs vertically. Turn the control knob to the left or to the right. Press the control knob again to save the setting.

Using the DVD main menu

Requirement: a DVD must be playing ⇨ *page 229*. The DVD main menu is shown.

- **Selecting a menu item**: move the control knob with joystick function up or down or to the left or right.
- **Confirming a selection**: press the control knob.

Opening the selection/options menu with the control knob

Applies to: vehicles with joystick function

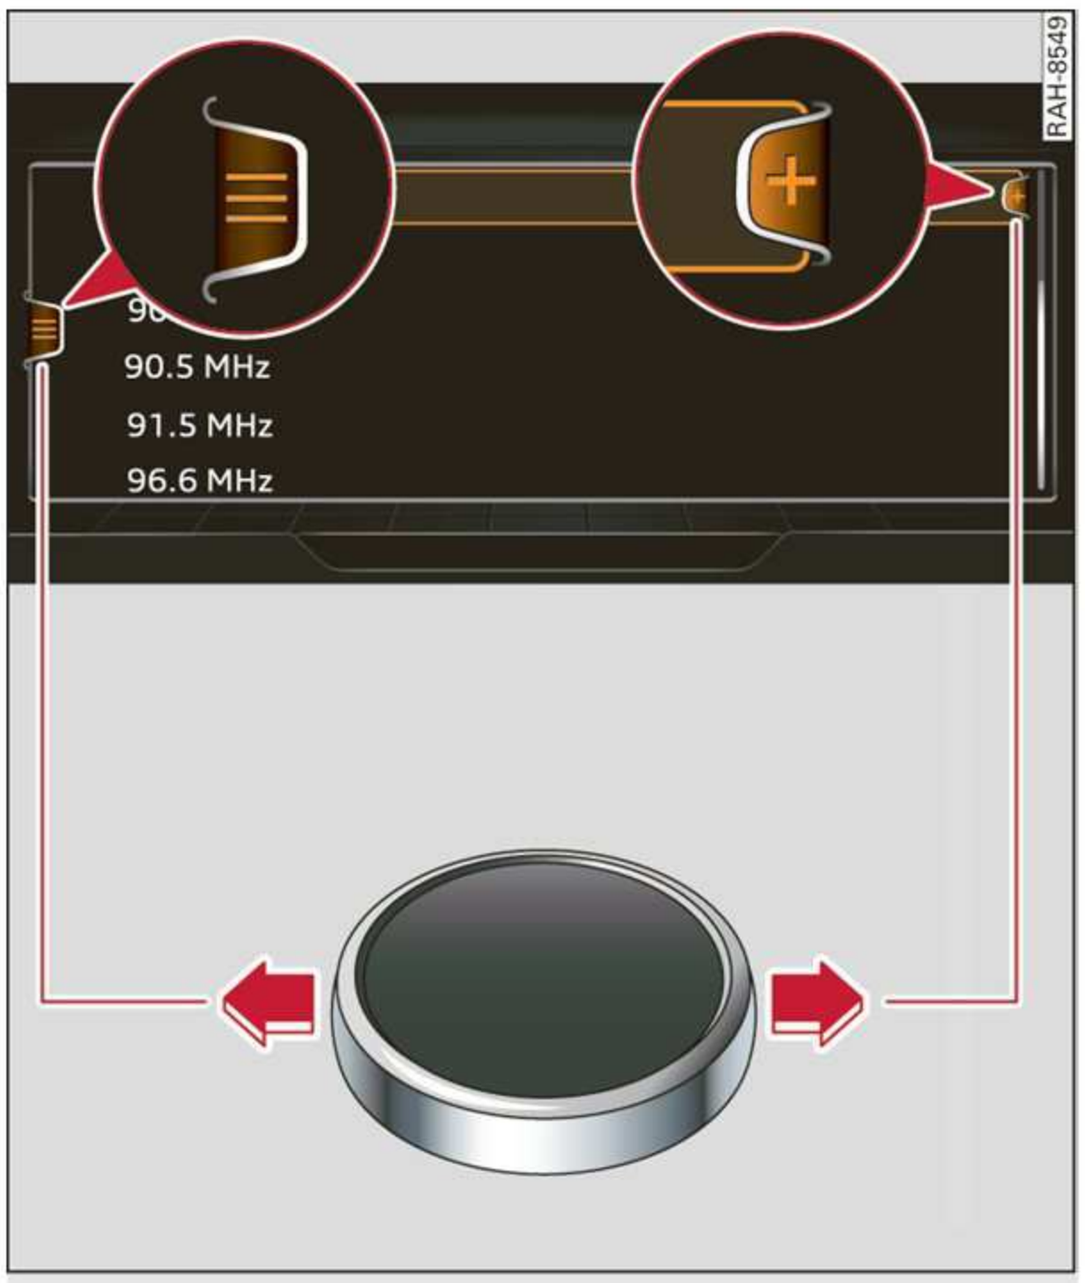


Fig. 161 Opening the selection/options menu with the control knob

Requirement: the selection menu symbol must be displayed in the Infotainment system display ⇨ *fig. 161*.

Opening and closing the selection menu: push the control knob to the left ⇨ *fig. 161* to open the selection menu. Then you can select and confirm a function using the control knob.

Press the BACK button (7) ⇨ *page 145, fig. 147* or ⇨ *page 145, fig. 148* to return to the function one level up. ▶

Requirement: the options menu symbol [+] must be displayed in the Infotainment system display ⇨ *fig. 161*.

Opening and closing the options menu: push the control knob to the right ⇨ *fig. 161* to open the options menu. Then you can select and confirm a function using the control knob.

Press the BACK button ⑦ ⇨ *page 145, fig. 147* or ⇨ *page 145, fig. 148* to return to the function one level up.

Shortcut keys

Frequently used radio stations can be stored on the shortcut keys.

Applies to: vehicles with automatic transmission

The shortcut keys are located on the MMI control panel ⑧ ⇨ *page 145, fig. 147*.

Applies to: vehicles with manual transmission

The shortcut keys are located on the center console ⑧ ⇨ *page 145, fig. 148*.

Storing radio stations: turn the control knob to the desired radio station in a list (for example, a radio station in the FM station list). Press and hold the desired shortcut key for several seconds. The active radio station will be stored on the shortcut key.

Accessing a radio station: press the shortcut key.

Displaying a radio station: swipe your finger over the shortcut keys.

Deleting a stored radio station: reset the **Shortcut keys** to the factory default setting ⇨ *page 241*.

Tips

It is not possible to enter numbers using the shortcut keys. Use the number speller ⇨ *page 152* or MMI touch* ⇨ *page 148* to enter numbers.

Letter/number speller

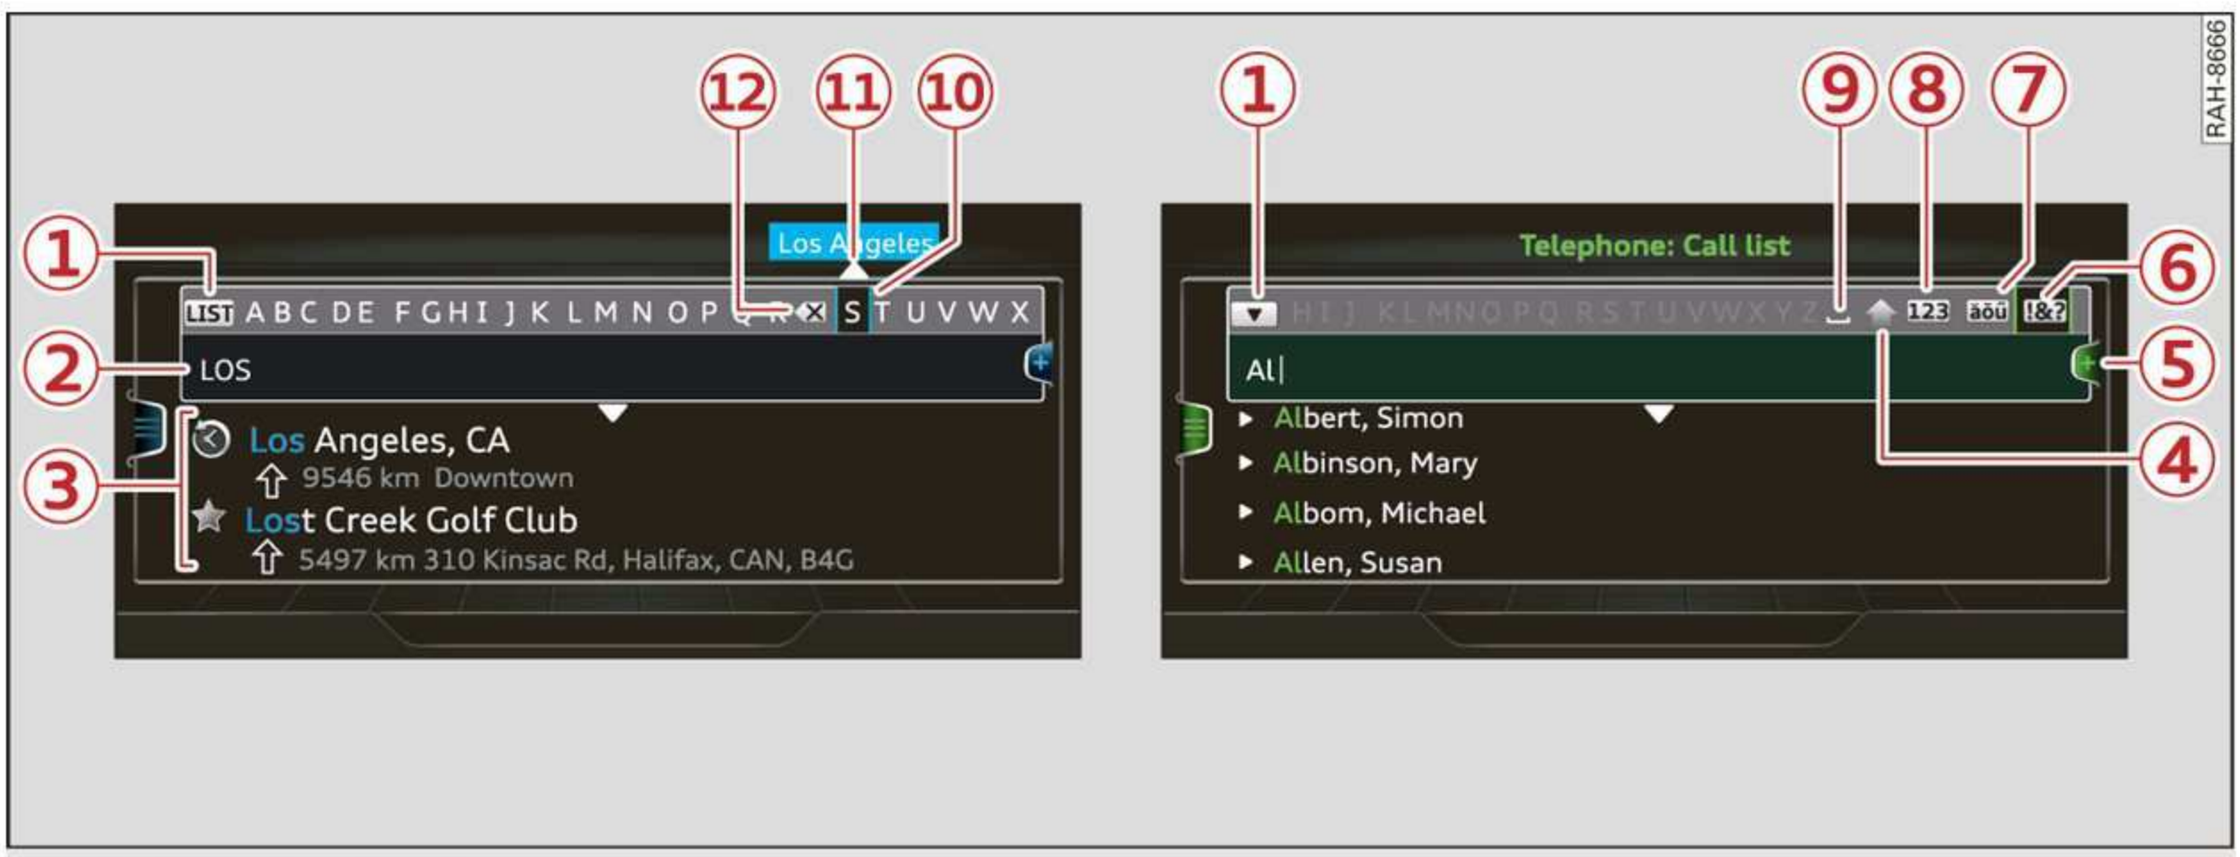


Fig. 162 Diagram: letter/number speller

You can enter letters, numbers and symbols in the MMI using the letter/number speller. This option is available when the input field ② is active ⇨ *fig. 162*.

– **Opening and closing the letter/number speller**: move the control knob up/down when the input field is active. **Or**: select the right control button > **Open speller/Close speller**.
– **Entering characters**: turn the control knob with the character selection ⑩ ⇨ *fig. 162* to the desired symbol. Press the control knob to confirm the character. Your input is displayed in the input field ②. When you have entered all of the ▶

characters, select and confirm the LIST button ① ⇨ *fig. 162*. **Or**: push the control knob down.

– **Entering accented characters (such as â, ç, ñ, ö)***: turn the control knob with the character selection ⑩ ⇨ *fig. 162* to a character. To open the selected accented characters, press and hold the control knob. Turn the control knob with the character selection ⑩ ⇨ *fig. 162* to an accented character. Press the control knob to insert the accented character. To close the accented characters without selecting a character, press and hold the control knob again. **Or**: select and confirm ăōű ⑦ ⇨ *fig. 162*. Select and confirm an accented character.

– **Deleting characters**: select and confirm ⌫ ⑫ ⇨ *fig. 162*. To delete all characters in the input field, press and hold the control knob on ⌫ until all characters in the input field are deleted.

– **Entering special characters**: select and confirm !&? ⑥ ⇨ *fig. 162* or 123 ⑧. Select and confirm the desired special character (for example, a hyphen or period) with the number speller.

– **Input assistance**: in some cases such as in navigation*, there is a word suggestion* ⑪ ⇨ *fig. 162* based on available entries while you are entering data. You can select this suggestion by pushing the control knob upward.

– **Results list**: in some cases, such as in the directory, the system switches automatically to the results list based on available entries ③ ⇨ *fig. 162*. Select and confirm a suggestion from the list.

  Requirement: the input field ② ⇨ *fig. 162* must be active.

– **Switching between speller and MMI touch***: the handwriting recognition for the MMI touch control pad* is activated automatically. Simply start writing.

Overview of symbols in the speller

The symbols in the letter/number speller are explained in the following table:

	Symbol/Description	Description
①	LIST or ▾	Switches to the results list.
②	Input field	Displays the current input.
③	Results list	Displays a list with suggestions based on the letters already entered.
④	⬆	Switches from lower case to upper case letters or from upper case to lower case letters.
⑤	⊂+	Opens additional speller options, for example **Close speller** and **Clear input field**.
⑥	!&?	Character sets and special characters
⑦	ăōű	Displays accented characters (such as â, ç, ñ, ö).
⑧	123/ABC	Switches from letter to number input or from number to letter input.
⑨	⎵	Adds a space in the input field.
⑩	Character selection	Highlights the selected character.
⑪	▲	Inserts the suggested word* when you push the control knob up.
⑫	⌫	Deletes the character to the left of the cursor.

Tips

Accented characters are not available for every letter.

Free text search

Applies to: vehicles with free text search

Using the free text search, you can select the order that the search terms are entered in the input field.



Fig. 163 Example: free text search on telephone

Free text search is available in the **Vehicle***, **Radio***, **Media***, **Telephone***, **Navigation*** and **Audi connect*** menus.

Opening free text search

- ▸ Select: MENU button > *desired menu item* (such as **Telephone**).
- ▸ Keep turning the control knob to the left until the **free text search** input field ① ⇨ *fig. 163* appears. **Or**: push the control knob up to open the input field ①.

The handwriting recognition for the MMI touch control pad* is automatically activated. Simply start writing.

Free text search for an entry

- ▸ Enter one or more search terms in any order into the input field. The individual search terms must be separated by spaces when entering.

An input suggestion to complete the entry* ③ ⇨ *fig. 163* is shown depending on the input. Additional entries that contain the entered search terms are listed In the results list ② ⇨ *fig. 163*.

If the desired term is still not displayed, enter additional letters until it is displayed.

It is often enough just to enter the first letters of the search term in order for it to display in the results list. For example, in the **Telephone*** menu, write the initials of the contact being searched, separated by a space.

Selecting the input suggestion to complete the entry

Requirement: an input suggestion to complete the entry* ③ ⇨ *fig. 163* must be displayed.

- ▸ **MMI touch input***: press the control knob.
- ▸ **Speller input**: push the control knob up.

Selecting an entry from the results list

Requirement: at least one entry must be displayed in the results list ② ⇨ *fig. 163*.

- ▸ **MMI touch input***: turn the control knob to the right. Select and confirm an entry from the list.
- ▸ **Speller input**: select and confirm LIST ① ⇨ *page 152, fig. 162*. **Or**: push the control knob down. Select and confirm an entry from the list.

Menus and Symbols

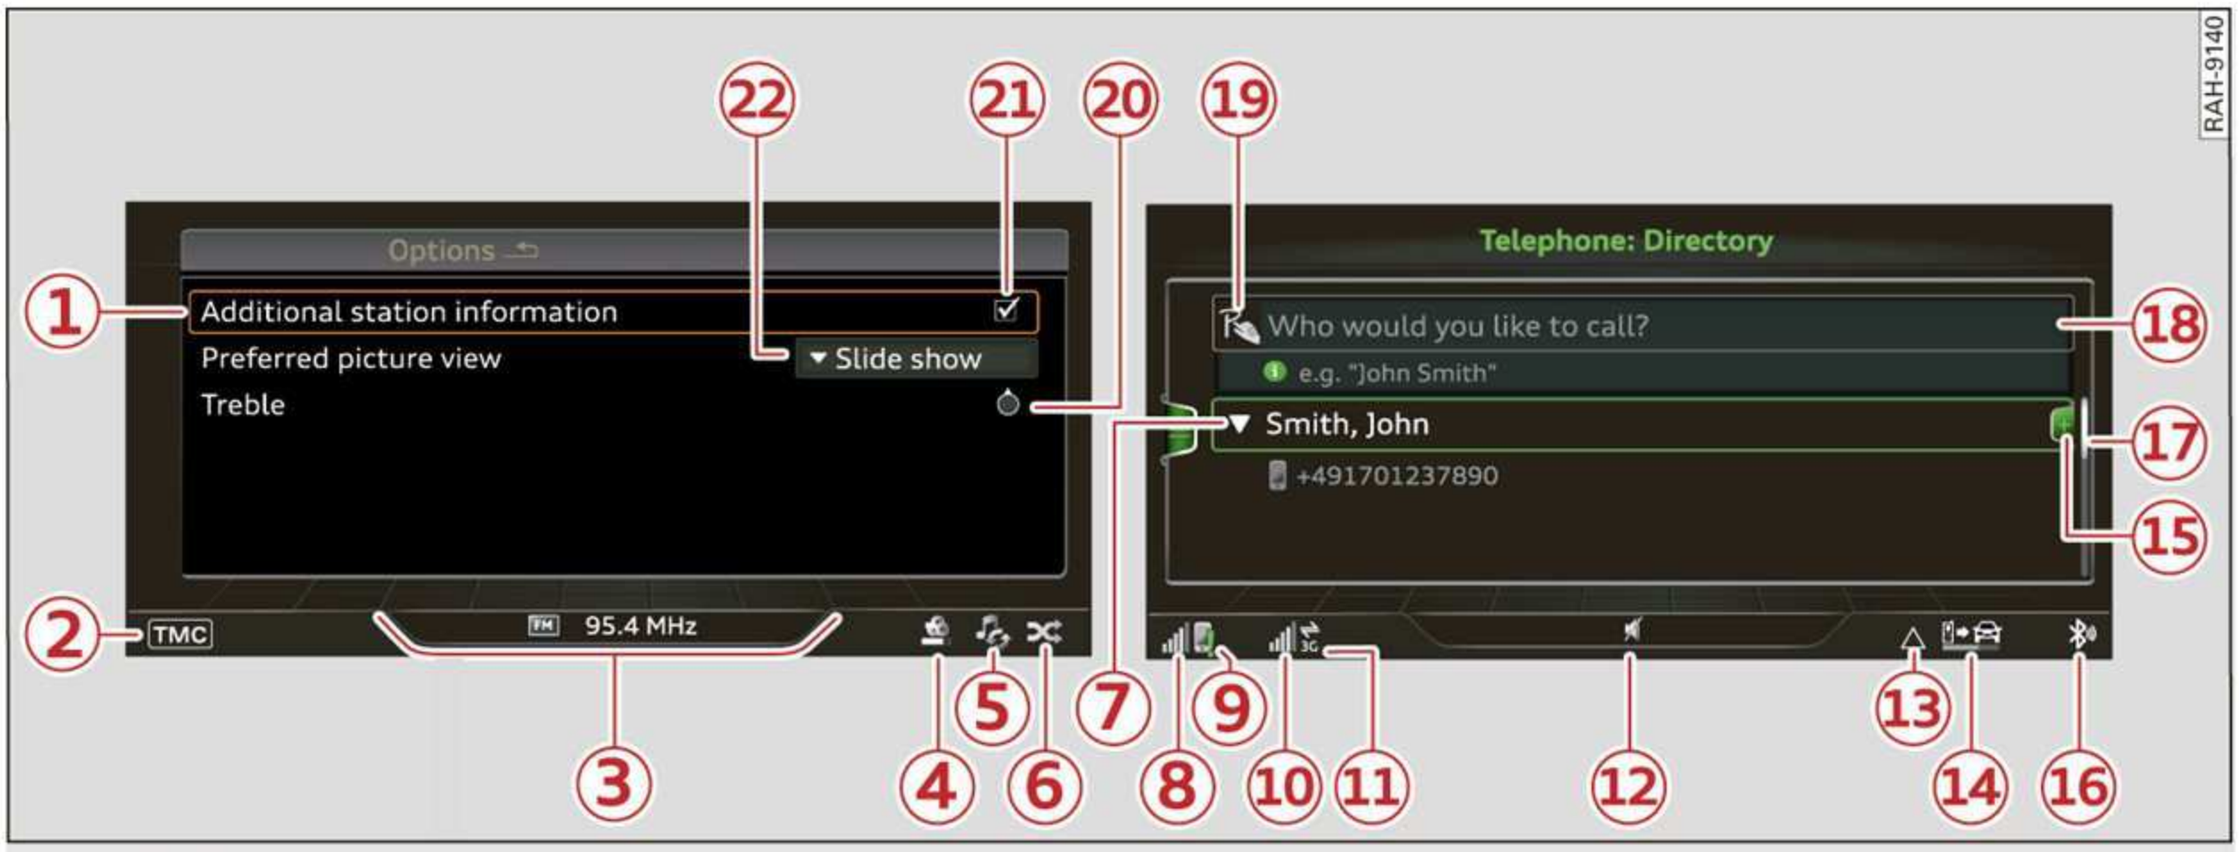


Fig. 164 Diagram: menus and symbols

	Symbol/Description	Description
①	Selected text	Selected function
②	TMC	TMC/online traffic information reception ⇨ *page 212*
③	Entertainment sliding menu	Displays information about the media source that is currently selected or a situation (such as an incoming call). Depending on vehicle equipment, operation might also be possible using the open entertainment sliding menu (such as selecting a radio station or accepting a call) ⇨ *page 150*.
④	Jukebox* importing process	Copy audio/video files to the Jukebox ⇨ *page 222*
⑤	Repeat track	The track currently playing is repeated. ⇨ *page 233*
⑥	Shuffle	All files on the playlist are played in random order ⇨ *page 233*, **Shuffle**
⑦	Arrow	Access information by pressing the control knob when the selected text is active
⑧	Telephone signal strength bars	Telephone signal strength
⑨	Exclamation point on the telephone	Indicates missed calls
⑩	Data connection signal strength bars*	Signal strength for the active data connection, or **PIN**: enter the PIN (SIM) **PUK**: enter the PUK
⑪	2G/3G/LTE*	Network coverage for the active data connection ⇨ *page 192* **2G**: GSM network **3G**: UMTS network **LTE***: LTE network
⑫	Mute	The audio source is muted ⇨ *page 245*
⑬	Roaming	Outside the mobile network for the connected cell phone or the inserted SIM card

	Symbol/Description	Description
⑭	Importing process	Import/update the contacts in the directory or the call lists
⑮	Options menu*	Select and confirm context-dependent functions as well as settings within a menu item
⑯	Bluetooth*	Bluetooth device connected ⇨ *page 223* or ⇨ *page 171*
⑰	Scroll bars	Indicates a long list. Move within lists by turning the control knob.
⑱	Input field	Information that can be changed using the letter/number speller ⇨ *page 152* or the MMI touch* ⇨ *page 148*.
⑲	MMI touch*	Possible to operate using the MMI touch control pad*
⑳	Knob	Setting for the selected function by turning the control knob
㉑	Check boxes	You can switch certain functions on ☑ or off ☐ by pressing the control knob.
㉒	Selection list	Settings for the selected function that are accessed by pressing the control knob

Multifunction steering wheel

Introduction

Applies to: vehicles with multifunction steering wheel

In the driver information system display, you can control numerous Infotainment functions using the multifunction steering wheel plus* ⇨ *page 15* or the multifunction steering wheel* ⇨ *page 18*.

You can control additional Infotainment functions using the MMI control panel ⇨ *page 145* in the Infotainment system display.

WARNING

Direct your full attention to driving. As the driver, you have complete responsibility for safety in traffic. Only use the functions in such a way that you always maintain complete control over your vehicle in all traffic situations.

Radio

Applies to: vehicles with multifunction steering wheel and radio

Applies to: vehicles with multifunction steering wheel

- Press the MODE button on the multifunction steering wheel repeatedly until the Radio/ Media tab is displayed.

Applies to: vehicles with multifunction steering wheel plus

- Press the ◁ ▷ button on the multifunction steering wheel repeatedly until the Radio/ Media tab is displayed.
- Press the left control button ⇨ *page 16*.

Depending on vehicle equipment, the following functions may be available in the driver information system.

– **Selecting the frequency band**: select and confirm a frequency band.
– **Selecting a station from the station list**: select and confirm a radio station.
– **Selecting a station from the presets list**: select and confirm **Presets** and then a radio station.
– **Opening a media source**: select and confirm **To media**.

Additional settings

– Select: right control button > *desired entry*.

See ⇨ *page 218*.

Tips

Pay attention to the Infotainment system display if necessary. Depending on the selected function, it may be necessary to use the MMI control panel.

Media

Applies to: vehicles with multifunction steering wheel and media

Requirement: a media drive must contain audio/ video files ⇨ *page 221*.

Applies to: vehicles with multifunction steering wheel

- Press the MODE button on the multifunction steering wheel repeatedly until the Radio/ Media tab is displayed.

Applies to: vehicles with multifunction steering wheel plus

- Press the ◁ ▷ button on the multifunction steering wheel repeatedly until the Radio/ Media tab is displayed.
- Press the left control button ⇨ *page 16*.

Depending on vehicle equipment, the following functions may be available in the driver information system.

– **Selecting a media source**: select and confirm a source such as the SD card.
– **Switching to the radio**: select and confirm **Switch to radio**.
– **Playing an audio/video file**: select and confirm a file.
– **Pausing/resuming playback**: press the right thumbwheel ③ ⇨ *page 17, fig. 11*. To resume playback, press the right thumbwheel again.
– **Opening additional track information**: select: right control button > **Show "Now Playing" screen**.

For additional information, see ⇨ *page 232*. ▶

Tips

– Always follow the information found in ⇨ *page 220*.
– Please note that within a media source in the driver information system, only playlists that were selected through the MMI control panel can be played ⇨ *page 230*.
– Pay attention to the Infotainment system display if necessary. Depending on the selected function, it may be necessary to use the MMI control panel.

Telephone

Applies to: vehicles with multifunction steering wheel and telephone



Fig. 165 Example: telephone functions in the driver information system

Requirement: a mobile device must be connected to the MMI ⇨ *page 171*.

Applies to: vehicles with multifunction steering wheel

▸ Press the MODE button on the multifunction steering wheel repeatedly until the Telephone tab is displayed.

Applies to: vehicles with multifunction steering wheel plus

▸ Press the ◁ ▷ button repeatedly until the Telephone tab is displayed.
▸ Press the left control button ⇨ *page 16*.

Depending on vehicle equipment, the following functions may be available in the driver information system.

– **Accessing a contact**: select and confirm **Call list** / **Favorites** / **Directory**. Select and confirm a contact.

Directory contacts*: the driver information system only displays directory contacts that have a phone number stored. If several phone numbers are stored with a contact, the list of stored numbers is displayed first when the entry is selected.

Recent calls*: the recent calls list contains all incoming, outgoing and missed calls.

Caller information*: the *name*, *phone number* or **Unknown** appears in the driver information system display depending on whether the caller has been stored in the directory and if the phone number has been transmitted.

Functions during an incoming call

– **Accepting a call**: press the left thumbwheel when there is an incoming call.
– **Declining a call**: select and confirm **Decline** when there is an incoming call.
– **Ending a phone call**: select and confirm **End call**.

Functions during a phone call:

– **Making an additional call***: select and confirm **Hold call**. Press the left control button > **Directory** or **Call list** > *the desired entry*.
– **Answering a call while in a call and while there is another call on hold***: select and confirm **Answer**. The active call is replaced with the incoming call.

Additional functions include:

Mute*: if you select and confirm this function, the other person on the phone cannot hear you. You will still be able to hear the other person.

Holding/resuming a call*: you can place the existing call on hold and resume it again.

Swap call*: you can alternate between two phone calls at the same time. One of the calls will be on hold. Selecting **End call** will end the active phone call. A call that was placed on hold stays on hold and can be taken off hold with **Resume held call**.

Conference call*: a call on hold and up to five active parties (depending on the cell phone service provider) can be added to a conference call. To make an additional call, put all participants in the current conference call on hold using **Hold** ▶

conference*. By pressing the left control button, you can make additional calls from the directory or the call list. **Resume conference*** takes all participants off hold.

Tips

– The phone functions can only be controlled with the multifunction steering wheel if the phone equipment was installed *at the factory*.
– The telephone functions depend on the cell phone and whether they are supported by your cell phone service provider or not.
– The **Call waiting*** function must be activated in your cell phone and in the MMI in order to be alerted when there is an incoming call during an active call. The call options depend on the cell phone and service provider. You can obtain more information from your cell phone service provider.

Navigation

Operation in the driver information system

Applies to: vehicles with multifunction steering wheel and navigation system

Requirement: a destination must be entered ⇨ *page 198* and the route guidance must be started.

▸ Press the ◁ ▷ button on the multifunction steering wheel repeatedly until the Navigation tab is displayed.
▸ Press the left control button ⇨ *page 16*.

Depending on vehicle equipment, the following functions may be available in the driver information system.

– **Displaying navigation during active route guidance**: select and confirm **Map*** / **Street view*** or **Arrow view***.
– **Showing the map when route guidance is not active***: select and confirm **Map***.
– **Accessing last destinations**: select and confirm **Last destinations** > *the desired destination*.
– **Accessing favorites***: select and confirm **Favorites** > *the desired destination*.
– **Starting route guidance to the stored home address**: select and confirm **Cancel route guidance** if necessary and then **Home address**.

If you have not started any route guidance, a compass (analog instrument cluster) or the arrow view (monochrome instrument cluster) is displayed depending on the equipment. The map is displayed in the Audi virtual cockpit*.

Canceling active route guidance

– Select: right control button > **Cancel route guidance**

Additional settings

– Select: right control button > *desired entry*.

Depending on the function selected, the following additional settings may be possible:

– Map display ⇨ *page 209*.
– Map colors ⇨ *page 209*.
– Map orientation ⇨ *page 209*.
– Automatic zoom ⇨ *page 210*.

Navigation view with route guidance started

Applies to: vehicles with navigation system and Audi virtual cockpit



Fig. 166 Standard map when route guidance is active (Audi virtual cockpit)

Requirement: a destination must be entered ⇨ *page 198*, route guidance must be started and the navigation tab must be displayed.

Depending on the vehicle equipment and the selected view ⇨ *page 17*, the following information will be displayed in the driver information system:

① Map content (such as points of interest)

② Current vehicle position ▶

③ A bar graph appears when there is an upcoming turn. The fewer the bars that are shown, the shorter the distance is until the turn. If there is not an upcoming turn, the distance to the destination/stopover and the calculated arrival time is displayed in the right speedometer.

④ Name of the street where you are currently driving

Map view with route guidance started

Applies to: vehicles with navigation system and map view

Depending on the vehicle equipment, you can also have the active route guidance display in the map view in the driver information system.*



Fig. 167 Diagram: map when route guidance has started (analog instrument cluster)

Requirement: a destination must be entered ⇨ *page 198*, route guidance must be started and the navigation tab must be displayed.

Depending on vehicle equipment, the following information may be shown in the driver information system.

① Distance to the destination or stopover

② Distance to the next maneuver

③ Display of the road that is currently being traveled or the road that you will turn onto during the next maneuver

④ Map content such as points of interest or traffic information

Zooming in/out on the map (Zoom): when a map is displayed, turn the left thumbwheel down/up to zoom in/out on the map.

Street view with route guidance started

Applies to: vehicles with navigation system and street view

Depending on the vehicle equipment, the active route guidance will be displayed in the street view in the driver information system.*

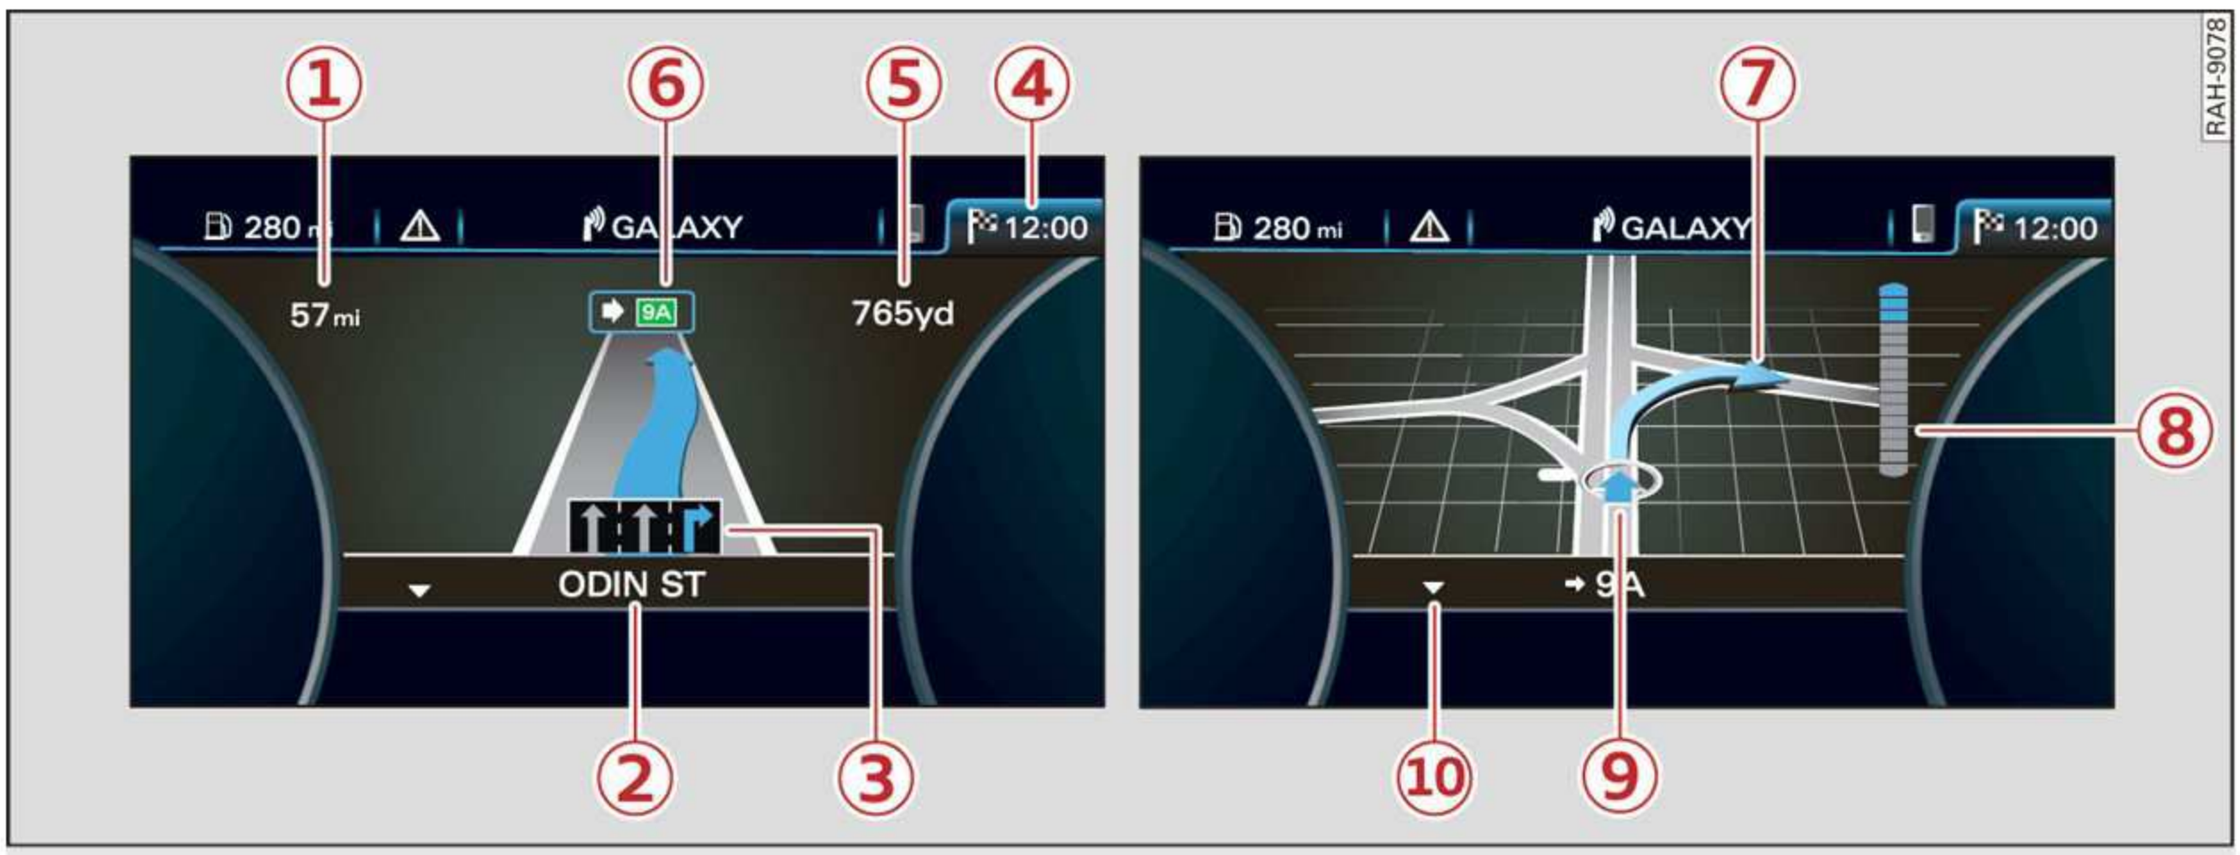


Fig. 168 Example: display of a turn in the street view (analog instrument cluster)

Requirement: a destination must be entered ⇨ *page 198*, route guidance must be started and the navigation tab must be displayed.

Depending on vehicle equipment, the following information may be shown in the driver information system ⇨ *fig. 168*:

① Distance to the destination or stopover
② Displaying an expressway, highway or main road as preparation for an upcoming change in direction
③ Lane recommendation
④ Calculated arrival time
⑤ Distance to the next maneuver
⑥ Display of the expressway, highway or main road onto which you will be turning
⑦ Direction arrow for the upcoming maneuver
⑧ A bar graph appears when a direction arrow is displayed. The fewer the bars that are shown, the shorter the distance is until the turn.
⑨ Current vehicle position
⑩ Additional information (on-board computer)

The following functions are also available when route guidance is active:

– **Adjusting the voice guidance volume**: turn the right thumbwheel up or down while a voice guidance message is playing.

WARNING

The route calculated by the navigation system is a recommendation for reaching your destination. Obey traffic lights, stopping restrictions, one-way streets, lane change restrictions, etc.

Tips

– Also see the chapter ⇨ *page 8, Cockpit overview*.
– An exclamation point "**!**" in front of the street name indicates that the information about this street or this section of the route is not complete in the navigation data contained in the MMI. Obey traffic laws in one-way streets and pedestrian zones.

Arrow view with route guidance started

Applies to: vehicles with navigation system and arrow view

Depending on the vehicle equipment, the active route guidance will be displayed in the arrow view in the driver information system.*

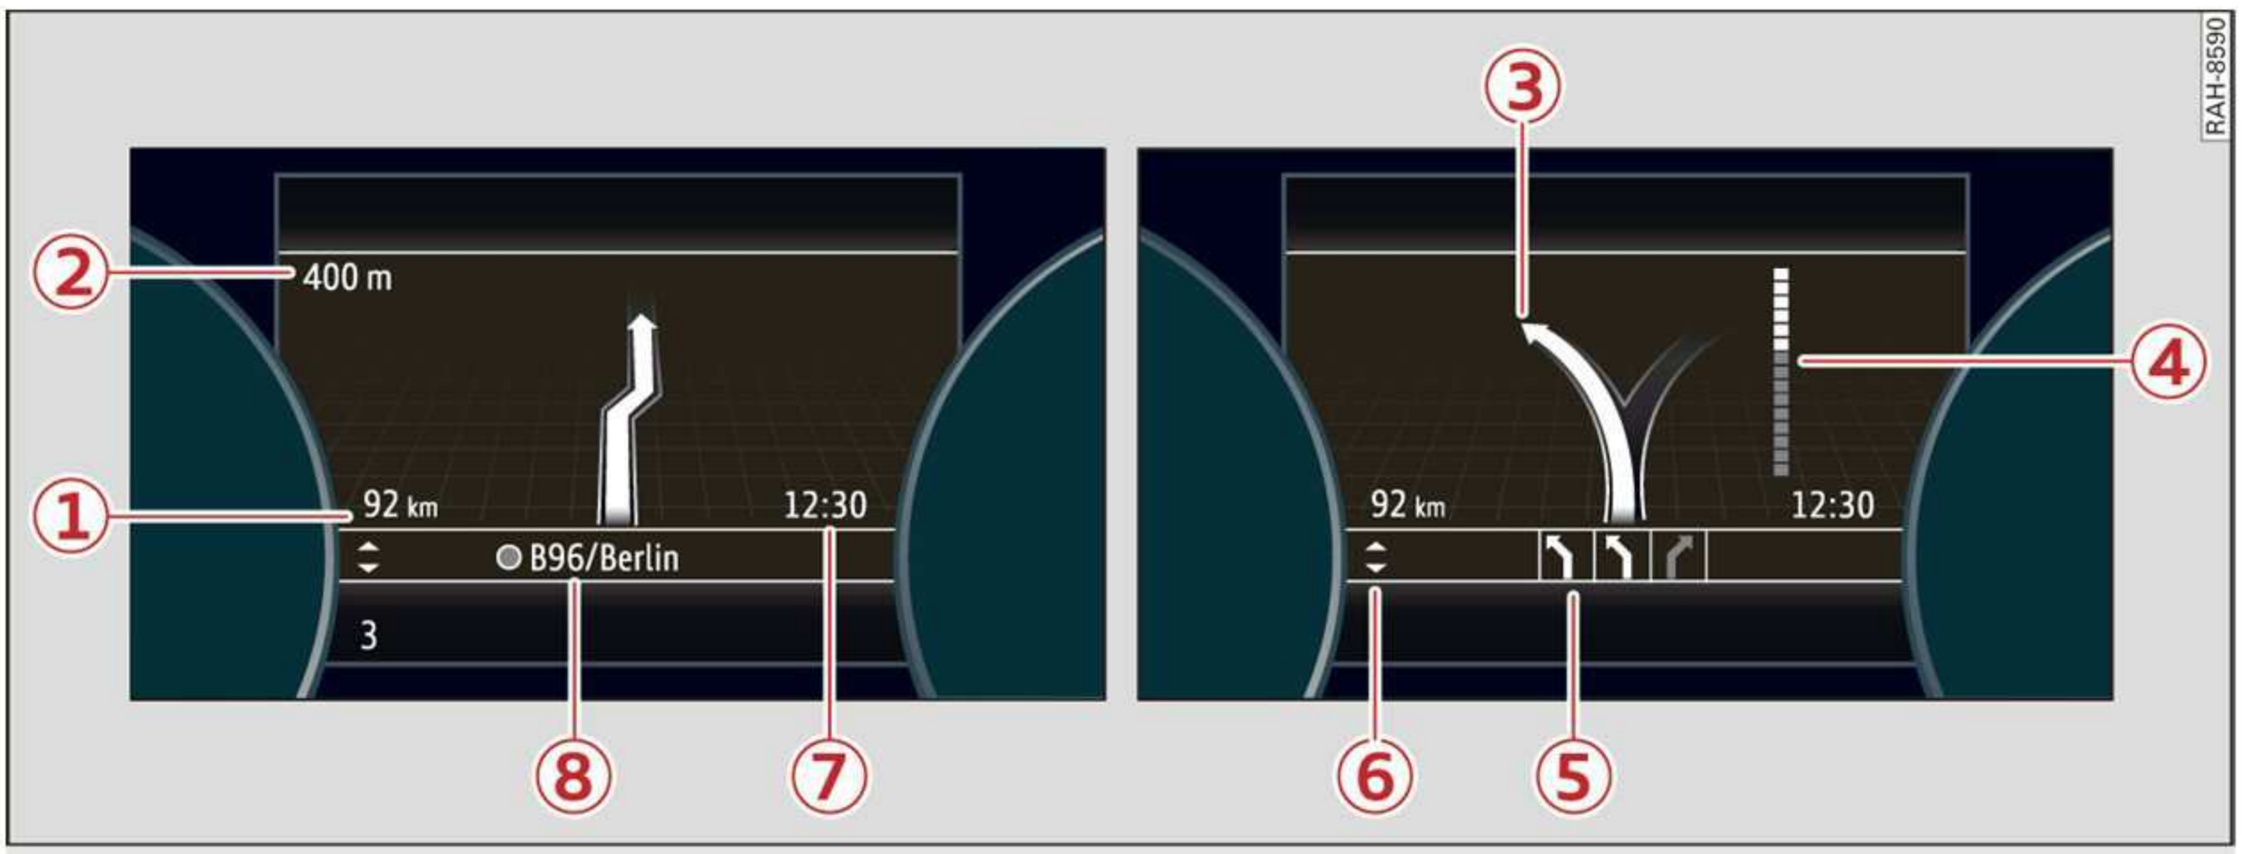


Fig. 169 Example: arrow view (monochrome instrument cluster)

Requirement: a destination must be entered ⇨ *page 198*, route guidance must be started and the navigation tab must be displayed.

Depending on vehicle equipment, the following information may be shown in the driver information system ⇨ *fig. 169*:

① Distance to the destination or stopover ▶

② Distance to the next maneuver
③ Direction arrow for the upcoming maneuver
④ A bar graph appears when a direction arrow is displayed. The fewer the bars that are shown, the shorter the distance is until the turn.
⑤ Lane recommendation
⑥ Additional information (on-board computer)
⑦ Calculated arrival time
⑧ Display of the street currently being driven on If a point is displayed before the street, it is indicating the street you will be on with the next maneuver.

The following functions are also available when route guidance is active:

– **Adjusting the voice guidance volume**: turn the right thumbwheel up or down while a voice guidance message is playing.

WARNING

The route calculated by the navigation system is a recommendation for reaching your destination. Obey traffic lights, stopping restrictions, one-way streets, lane change restrictions, etc.

Tips

– Also see the chapter ⇨ *page 8, Cockpit overview*.
– An exclamation point "**!**" in front of the street name indicates that the information about this street or this section of the route is not complete in the navigation data contained in the MMI. Obey traffic laws in one-way streets and pedestrian zones.

GLOBAL COMMANDS

RAH-9091

- Telephone
- Audi connect
- Navigation
- Directory
- Radio
- Media
- Sound
- Help
- Help Speech dialog system
- Help Telephone
- Help Audi connect
- Help Navigation
- Help Map
- Help Radio
- Help Media
- Favorites
- Call (XY)
- Enter number
- Redial
- Read new text message
- Navigate to (XY)
- Enter address/destination
- Online destinations
- Cancel route guidance
- Map
- Line (XY)
- Next page / previous page
- Cancel
- No, I meant (XY)
- Correction

TELEPHONE

- Enter number
  - Delete number / correction
- Directory
- Call (XY)
  - business / private / land line / mobile
- Call list
- Redial
- Call mailbox
- Telephone favorites

NAVIGATION

- Navigate to (XY)
- Start / cancel route guidance
- Directory
- Last destinations
- Navigation favorites
- Drive home
- Enter address
- Enter country / town / street / state
- Exclude route / Exclude route for (XY) km / m
- Block route for (XY) miles / Block the next section
- Route list
- Calculate alternative routes
- Online destinations
- Special destination

MAP

- Map
- Day map / Night map
- 2D driving position map / 2D north position map / 3D map / Destination map / Overview map

AUDI CONNECT

- Audi connect
- Travel information / Parking information
- Fuel prices
- Weather
- Flight information
- City events
- Online news
- Twitter

RADIO

- Radio presets
- FM
- FM / AM / SIRIUS XM
- Station (XY) / Frequency (XY)
- Traffic announcement on / off

MEDIA

- Jukebox
- CD / DVD
- SD card 1 / SD card 2
- Audi music interface / iPod / USB / Bluetooth / Wi-Fi / Medium (XY)
- Media favorites / Artists / Albums / Genres / Tracks / Playlists / Videos
- Folder up
- Random playback on / off

Fig. 170 Command overview

Voice recognition system

Operating

Applies to: vehicles with voice recognition system

You can operate many Infotainment functions conveniently by speaking.

Requirement: the ignition and the MMI must be switched on ⇨ *page 145*. A system language supported by the voice recognition system must be set. There must be no phone calls in progress and the parking aid must not be active.

- **Switching on**: press the button ② ⇨ *page 17, fig. 11* or ⇨ *page 18, fig. 13* briefly on the multifunction steering wheel and say the desired command after the **Beep**.
- **Switching off**: press and hold the button. **Or**: press the button.
- **Pausing**: say the command **Pause**. To resume, press the button.
- **Correcting**: say the command **Correction**. **Or**: simply say a new command during an announcement ⇨ *page 241*.

Input assistance

The system guides you through the input with visual and audio feedback.

– **Visual input assistance**: after switching on voice recognition, a display with a selection of possible commands appears. This command display can be switched on or off. Select: MENU button > **Settings** > left control button > **MMI settings** > **Speech dialog system**.
– **Audio input assistance**: to have the possible commands read, turn the voice recognition system on and say **Help**.

For the system to understand you:

Speak clearly and distinctly at a normal volume. Speak louder when driving faster.

Emphasize the words in the commands evenly and do not leave long pauses.

Close the doors, the windows, and the sunroof* to reduce background noise. Make sure that passengers are not speaking when you are giving a voice command.

Do not direct the vents toward the hands-free microphone, which is in the roof headliner near the front interior lights.

Only use the system from the driver's seat because the hands-free microphone is directed toward that seat.

Additional settings

See ⇨ *page 241,* **Speech dialog system**.

WARNING

– Direct your full attention to driving. As the driver, you have complete responsibility for safety in traffic. Only use the functions in such a way that you always maintain complete control over your vehicle in all traffic situations.
– Do not use the voice recognition system in emergencies because your voice may change in stressful situations. The system may take longer to dial the number or may not be able to dial it at all. Dial the emergency number manually.

Tips

– The dialog pauses when there is an incoming phone call and will continue if you ignore the call. The dialog ends if you answer the call.
– You can select an item in the list using either the voice recognition system or the control knob.

Command overview information

Applies to: vehicles with voice recognition system

The following overviews describe the commands that can be used to operate the MMI using the voice recognition system.

Alternative commands are separated using a "**/**", for example say: **Telephone** / (or) **Navigation** / (or) **Radio**.

Sequences of commands used to perform an action are identified with a "**>**", for example say: **Enter address** > (then) **Enter country/state**. ▶

The majority shown are main commands. This system also recognizes synonyms in certain cases. For a **Business address**, you can also say **business**, **work**, **office** or **at the office**.

Commands

Global commands

Applies to: vehicles with voice recognition system

You can always use the global commands, regardless of the menu selected.

Function	Say:
Opening a menu	**Telephone** / **Directory** / **Navigation** / **Radio** / **Media** / **Audi connect*** / **Car** / **Tone**
Having the possible commands read aloud	**Help** / **Help speech dialog system** / **Help Telephone** / **Help Navigation** / **Help Map** / **Help Radio** / **Help Media** / **Help Audi connect***
Telephone functions	**Call (XY)**, for example, **Call "John Smith"** / **Enter number** / **Redial** / **Directory** / **Read out new text message** / **Read out new e-mail**
Navigation functions*	**Drive me to (XY)** or **Navigate to (XY)**, for example **Navigate to John Smith** / **Enter address** / **Cancel route guidance** / **Map** / **Online destinations*** / **Online destination (XY)***
Accessing favorites	**Favorites** > *follow the system prompts*
Selecting an entry from a list	**Line (XY)**
Scrolling through a list	**Next page** / **Previous page**
Correcting the command given	**Correction**
Switching the voice recognition system off	**Cancel**

Telephone

Applies to: vehicles with voice recognition system and telephone

Requirement: a cell phone must be connected to the MMI ⇨ *page 172* and the **Telephone** menu must be open ⇨ *table on page 165*.

Depending on the vehicle equipment and the selected menu item, you can say the following commands:

Function	Say:
Call contact from directory	**Call (XY)**, for example **Call "John Smith"**
Selecting a specific contact number	**Call (XY) business** / **private** / **landline** / **cell phone**, for example, **Call "John Smith" private**
Selecting a phone number with an address card open	**Call** / **Call work** / **Call private** / **Call landline** / **Call cell phone work**
Calling a contact from your favorites list	**Telephone favorites** > *after being prompted, say the desired contact* > **Dial**
Displaying the call list	**Call list**

Function	Say:
Calling the last number dialed	**Redial**
Dialing a phone number	**Enter number** > *when prompted, say the telephone number in groups of individual numbers*, for example. **888 555 1212** > **Dial**
Correcting the phone number that was entered	**Correction** / **Delete number**
Showing contact information	**Directory** > *say the desired contact when prompted*, for example **John Smith**
Listening to messages	**Call voicemail**
Entering the PIN (SIM)	**Enter PIN** > *when prompted, say the PIN in individual numbers* > **Save**
Correcting the PIN entry	**Correction** / **Delete PIN**
Correcting data input	**No I meant (XY)**
Closing the full-screen command list	**Close**

Tips

– Contacts in the directory can selected using the full name (“first name last name” and “last name, first name”) as well as with only the first or last name. This applies to cell phones that transmit names separated into first and last names.

– Please note that commands can only be given for the primary phone* ⇨ *page 172*.

– For more information on supported mobile devices, visit www.audiusa.com/bluetooth or contact an authorized Audi dealer or authorized Audi Service Facility.

Audi connect Infotainment

Applies to: vehicles with voice recognition system and Audi connect Infotainment

Requirement: the requirements for Audi connect Infotainment must be met ⇨ *page 186*.

Function	Say:
Accessing Audi connect Infotainment services	**Audi connect** > *follow the system prompts*
Audi connect Infotainment services	**Weather** / **Online news** / **Fuel prices** / **Parking information** / **Travel information** / **Twitter** / **Traffic information**
Search areas for Audi connect Infotainment services	**Near destination** / **Nearby** / **In a new city**
Correcting data input	**No I meant (XY)**

Tips

Always read the chapter ⇨ *page 186, Audi connect*.

Messages (Audi connect Infotainment)

Applies to: vehicles with voice recognition system and Audi connect Infotainment

Requirement: a cell phone with an active MAP (Message Access Profile) must be connected to the MMI ⇨ *page 178*.

Function	Say:
Text editing commands	**Read out** / **Add** / **Delete** / **Record everything again** / **Replace with (XY)** / **Add recipient** / **Send**
Reading out a new message	**Read out new text message** / **Read out new e-mail**
Reading a message	**Read out text message** / **Read out e-mail**
Replying to the open text message	**Reply**
Forwarding the open text message	**Forward** > **Add recipient** / **Insert template** / **Send**
Correcting data input	**No I meant (XY)**

Tips

- For more information on supported mobile devices, visit www.audiusa.com/bluetooth or contact an authorized Audi dealer or authorized Audi Service Facility.
- Always read the chapter ⇨ *page 186, Audi connect*.

Navigation

Applies to: vehicles with voice recognition system and navigation system

Requirement: the **Navigation** menu must be open ⇨ *table on page 165*.

Depending on the vehicle equipment and the selected menu item, you can say the following commands to enter a destination:

Function	Say:
Opening the list of previous navigation destinations	**Last destinations**
Accessing favorites	**Navigation favorites**
Selecting the home address	**Home address** or **Drive home**
Entering an address with guidance from the system	**Enter address** > *follow the system prompts*
Individual commands for entering a destination	**Enter country/state** / **Enter city** / **Enter ZIP code** / **Enter street** / **Enter house number**
Making a correction while entering a destination	**Correction**
Navigating to a contact	**Drive me to (XY)** or **Navigate to contact**, for example **Drive me to "John Smith"**
Navigating to a specific address for a contact	**Navigate to contact (XY) business** / **private**, for example “Navigate to John Smith private”
Navigating to favorites	**Navigation favorites** > **Line (XY)** / *Line contents* > *Start route guidance when prompted*
Starting route guidance with an address card open	**Navigate** / **Navigate to private address** / **Navigate to business address**

Function	Say:
Entering a new destination/stopover when route guidance is active	**Enter address** > *enter the desired address when prompted* > *confirm the new destination/stopover if prompted*
Starting route guidance after entering a destination	**Start route guidance**
Canceling current route guidance	**Cancel route guidance**
Calculating alternative routes	**Calculate alternative routes**
Entering a point of interest by selecting a search area with guidance from the system	**Point of interest** > **Change search area** > *category or subcategory when prompted*, for example “restaurant”
Destination input categories	**Audi Service** / **Train station** / **Airport** / **Hotel** / **Hospital** / **Parking** / **Rest area** / **Restaurant** / **Gas station** *etc.*
Search areas for entering points of interest	**Nearby** / **Along the route** / **Near destination** / **Near stopover** / **In a new city** / **In a new state/country**
Entering an online destination*	**Online destination (XY)**, for example “**Online destination "Lakeview Hotel"**”
Correcting data input	**No I meant (XY)**
Closing the full-screen command list	**Close**

Requirement: you must be in the **Navigation** or **Map** menu. Depending on the vehicle equipment and the selected menu item, you can say the following commands for additional settings in navigation:

Function	Say:
General map options	**Map** / **Day map** / **Night map** / **Automatically change map color**
Map type	**2D heading-up map** / **2D north-up map** / **3D map** / **Destination map** / **Overview map** / **Standard map*** / **Satellite map***[a)]
Showing the route list	**Route list**
Showing the remaining distance/ time when route guidance is active	**Destination information**
Speed limit prompt	**How fast can I drive here**
Setting voice guidance for active route guidance	**Voice guidance on** / **Voice guidance off** / **Voice guidance shortened** / **Voice guidance complete** / **Voice guidance traffic**
Blocking a certain section on the route	**Block route for (XY) meters/kilometers/yards/miles** / **Block next route** / **Avoid next section of route**

a) AUDI AG provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.

Tips

– Destinations may have to be spelled when entered, depending on which region you are in and which menu language you have selected.
– Always read the chapter ⇨ *page 186, Audi connect*.

Radio

Applies to: vehicles with voice recognition system

Requirement: the **Radio** must already be open.

Depending on the vehicle equipment and the selected frequency band, you can say the following commands:

Function	Say:
Selecting the frequency band	**FM*** / **SiriusXM*** / **FM** / **AM**
Selecting a station from the station list	**Channel (XY)** / **Frequency (XY)**
Selecting a station from favorites/ presets	**Radio presets** > **Line (XY)**
Setting the frequency	**Frequency (XY)** / **Frequency (XY) HD 1**
Correcting data input	**No I meant (XY)**
Closing the full-screen command list	**Close**

Media

Applies to: vehicles with voice recognition system

Requirement: you must be in the **Media** menu.

Depending on the vehicle equipment and the active media, you can say the following commands:

Function	Say:
Selecting a source directly	**Jukebox*** / **CD** / **DVD** / **SD card 1** / **SD card 2** / **Audi music interface*** / **iPhone*** / **USB*** / **Bluetooth*** / **Wi-Fi*** / **Medium (XY)**, for example “John's player”
Selecting audio/video* files in the Jukebox*	**Media favorites** / **Artists** / **Albums** / **Genres** / **Tracks** / **Playlists** / **Videos**
Selecting audio files on an iPod (source: Audi music interface*)	**Artists** / **Albums** / **Genres** / **Tracks** / **Playlists** / **Composers** / **Podcasts** / **Audio books**
Navigating within a folder structure/list	**Folder up** / **Line (XY)**
Selecting shuffle	**Shuffle on** / **Shuffle off**
Correcting data input	**No I meant (XY)**
Closing the full-screen command list	**Close**

Note

Always follow the information found in ⇨ ⓘ *in Wi-Fi settings on page 193*.

External voice operation

Applies to: vehicles with voice recognition system and external voice operation

Requirement:

The ignition and the MMI must be switched on.

No phone call is in progress. ▶

8W0012721BG

The parking aid as well as the Audi voice recognition system must not be active.

A mobile device must be connected to the MMI with the **Handsfree** profile ⇨ *page 171*.

The mobile device being connected must have voice control that can be controlled externally.

- **Switching on**: press and *hold* the button on the multifunction steering wheel* and say the desired command after the external speech dialog begins.
- **Continuing/resuming the dialog**: the system remains ready to use for a short time after ending the dialog. You can start a new external dialog during this time. Press the button if needed, and say a new command. **Or**: select and confirm **Resume** on the MMI control panel.
- **Switching off**: press and hold the button. **Or**: select and confirm **Cancel** on the MMI control panel.

Tips

– There are no voice guidance* prompts when a dialog is active.
– This function depends on the cell phone used. You can obtain more information from your mobile device service provider or from your mobile device user guide.
– AUDI AG simply provides access to control your mobile device with voice operation and does not assume any responsibility for the content and commands within the external voice control.

Telephone

Introduction

Applies to: vehicles with telephone

To make phone calls in your vehicle using the MMI, connect your cell phone to the MMI via Bluetooth.

Handsfree

After you have connected your mobile device to the MMI via Bluetooth, you can use the handsfree system and operate telephone functions through your MMI. You can make calls using the antenna on your mobile device.

With the Audi phone box*, calls are made using the exterior antenna on the vehicle. Using the external antenna helps when there is a low signal and also provides better reception quality ⇨ *page 174*.

WARNING

- Medical experts warn that mobile devices can interfere with the function of pacemakers. Always maintain a minimum distance of about 8 inches (20 cm) between the cell phone antenna and the pacemaker.
  - Do not carry the mobile device in a pocket directly over the pacemaker when the phone is switched on.
  - Switch the mobile device off immediately if you suspect it may be interfering with the pacemaker.
- Do not use the voice recognition system* ⇨ *page 164* in emergencies because your voice may change in stressful situations. The system may take longer to dial the number or may not be able to dial it at all. Dial the emergency number manually.
- Switch your mobile device off in areas where there is a risk of an explosion. These locations are not always clearly marked. This may include gas stations, fuel and chemical storage facilities or transport vehicles, or locations where fuel vapors (such as propane or gasoline vapor in vehicles or buildings), chemicals or large quantities of dust particles (such as flour, sawdust or metal) may be present in the air. This also applies to all other locations where you would normally turn your vehicle engine off.
- The demands of traffic require your full attention. Always read the chapter ⇨ *page 145, Traffic safety information*.

Note

Always follow the information found in ⇨ ! *in Wi-Fi settings on page 193*.

Tips

- The Bluetooth connection range is limited to inside the vehicle. It can also be affected by local conditions and interference with other devices.
- To learn which Bluetooth connections and which of the functions in your mobile device are supported, check with your mobile device service provider or the database for mobile devices at www.audiusa.com/bluetooth.

Setup

Connecting a cell phone using Bluetooth

Applies to: vehicles with telephone

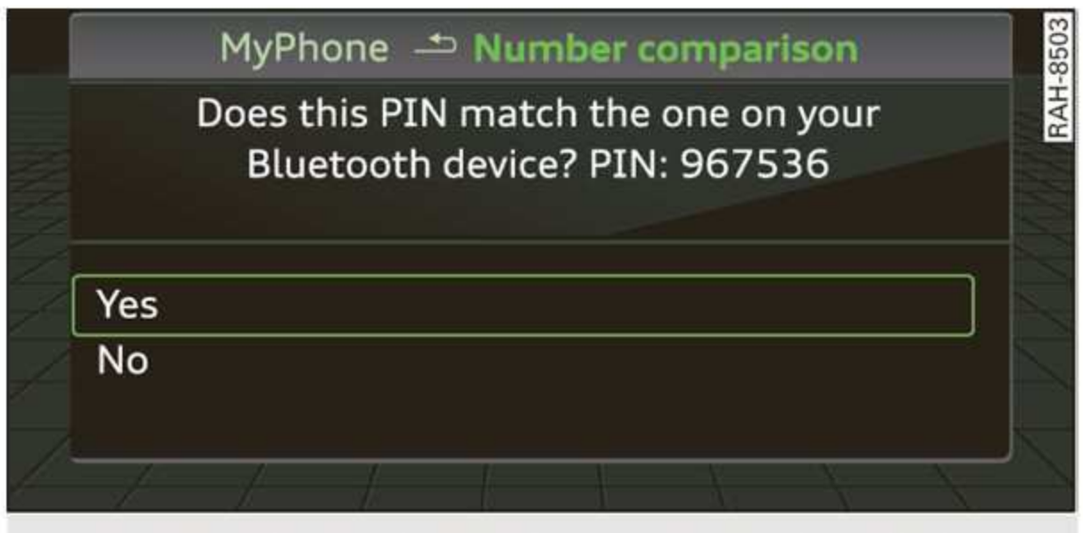


Fig. 171 Displaying the PIN for entering in the cell phone

Requirement

The vehicle must be stationary and the ignition must be switched on.

The Bluetooth settings must be open on your mobile device during the connection setup.

The Bluetooth function and visibility of the MMI ⇨ *page 243* and mobile device must be switched on. ▶

8W0012721BG

The mobile device that will be connected must not be connected to any other Bluetooth device.

The MMI must not be connected to a mobile device.

Connecting a mobile device

- ▸ Select: MENU button > **Telephone** > **Connect mobile device** > **Find new devices** > **Next**. The available Bluetooth devices are shown in the Infotainment system display. **Or** select: MENU button > **Settings** > left control button > **MMI settings** > **Connection manager** ⇨ *page 241*.
- ▸ Select and confirm the desired cell phone from the list of displayed Bluetooth devices.
- ▸ The MMI generates a PIN for the connection setup ⇨ *fig. 171*.
- ▸ Select and confirm **Yes**.
- ▸ Enter the PIN for connecting on your cell phone. **Or**: when the PIN is displayed on your cell phone, confirm the PIN on your cell phone and in the MMI. The time allowed for entering the PIN is limited to approximately 30 seconds.
- ▸ Pay attention to any additional system prompts displayed on your cell phone, for example if the system should connect automatically in the future. Depending on the cell phone, you may have to confirm downloading the directory separately.

After connecting successfully

After connecting successfully, information about the connected profiles will appear. You can also change the profiles later. Select: MENU button > **Settings** > left control button > **MMI settings** > **Connection manager** ⇨ *page 241*.

In addition, the cell phone contacts are automatically loaded in the MMI directory. This process can take several minutes, depending on the number of contacts.

You can also make your connected cell phone the default phone by selecting **Set as default telephone** in the **Connection manager** ⇨ *page 243*.

Note

Always follow the information found in ⇨ ! *in Wi-Fi settings on page 193*.

Tips

- – Making phone calls through the MMI is only possible using the **Handsfree** Bluetooth profile.
- – You can apply additional settings to connected mobile devices using the **Connection manager** ⇨ *page 241*.
- – You can also search for the MMI on your mobile device using the Bluetooth device search.
- – You only have to pair your device one time. Bluetooth devices that are already paired automatically connect to the MMI when the Bluetooth function is switched on, when they are within range, and when the ignition is switched on. The last connected mobile device is given first priority.
- – Authorizing the MMI connection on your mobile device will make it possible to connect automatically.
- – Pay attention to any system prompts displayed on your cell phone, for example if the system should connect automatically in the future. Depending on the cell phone, you may also need to download the directory and confirm access to your text messages separately.
- – When leaving the vehicle, the Bluetooth connection to the mobile device will automatically disconnect. Depending on your mobile device, phone calls in progress may be automatically redirected from the MMI to your mobile device so that you can continue the call on your phone.
- – You can obtain more information from your mobile device service provider or from your mobile device user guide. For information on using the telephone, visit www.audiusa.com/bluetooth or contact an authorized Audi dealer or authorized Audi Service Facility.
- – Applies to: vehicles without secondary phone: Several cell phones can be paired to the MMI, but only one cell phone can be actively connected to the MMI. ▶

– Applies to: vehicles without secondary phone: If a Bluetooth device is already connected to the MMI, it will be disconnected when another device connects to the MMI.

Operating two mobile devices through the MMI

You can connect two cell phones to the MMI, for example your business cell phone as the primary phone and your private cell phone as the secondary phone. You can be reached in your vehicle through both cell phones.

The first connected cell phone is displayed as the primary phone in the MMI. The second cell phone is connected as the secondary phone.

The directory from the connected primary phone will always be displayed. If you would like to use the directory from the secondary phone, you must switch the primary and secondary phone ⇨ *page 173*.

Connecting a cell phone as the primary phone

Connect your cell phone to the MMI via Bluetooth. The first connected cell phone is displayed as the **Primary phone** in the MMI.

See ⇨ *page 171, Connecting a cell phone using Bluetooth*.

Connecting a cell phone as the secondary phone

Requirement: a cell phone must be connected to the MMI as the primary phone.

Select: MENU button > **Telephone** > right control button > **Connect secondary telephone**.

See ⇨ *page 171, Connecting a cell phone using Bluetooth*.

Example: you have connected your business cell phone to the MMI as the primary phone and your private cell phone as the secondary phone. To be able to call contacts from your private cell phone directory, you must switch the primary and secondary phone, since the directory from the primary phone is always displayed.

Switching the primary and secondary phone

Requirement: a primary phone and a secondary phone must be connected.

Switch primary and second. phone: select: MENU button > **Telephone** > right control button > **Switch primary and second. phone**.

Tips

– Please note that only the directory from the primary phone is always displayed.
– You can see if a cell phone is connected as the primary phone or secondary phone in the **Connection manager** ⇨ *page 241*. **Or**: the device name of the connected primary phone is shown in the **Telephone** menu (such as myPhone).
– If the primary phone does not connect automatically to the MMI when the ignition is switched on, for example because it is out of the vehicle range or the Bluetooth function is switched off, then a previously paired secondary phone is automatically connected as the primary phone.
– You can send and receive messages on your primary phone as well as on your secondary phone ⇨ *page 175, fig. 173*. You do not need to switch your primary phone and secondary phone for this.
– You can also make your connected cell phone the default phone by selecting **Set as default telephone** in the **Connection manager** ⇨ *page 243*.

8W0012721BG

Using the Audi phone box

Applies to: vehicles with Audi phone box

You can charge your mobile device battery using the Audi phone box. You can make calls through the exterior antenna on the vehicle. Using the external antenna* helps when there is a low signal and also provides better reception quality.*



Fig. 172 Storage compartment under the center armrest: diagram: Audi phone box with connections

Requirement: a cell phone must be connected through Bluetooth ⇨ *page 171*.

The options below are available:

- **Connecting to the external vehicle antenna***: lay the cell phone on the center of the cell phone symbol in the Audi phone box with the display facing up ⇨ *fig. 172*. Make sure there are no objects between the Audi phone box and the mobile device.
- **Charging a cell phone wirelessly**: place a Qi-capable [1] cell phone centered on the ⏀ symbol in the Audi phone box with the display facing up ⇨ *fig. 172*. The cell phone will charge.
- **Charging a mobile device using the USB adapter**: connect your mobile device to the Audi music interface using a USB adapter cable (1) ⇨ *fig. 172*.

You can charge your mobile device using specific USB adapters ⇨ *page 226, fig. 205*.

WARNING

- Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers, which increases the risk of an accident. Store objects securely while driving.
- The mobile device may become hot during wireless charging. Pay attention to the temperature of your mobile device and be careful when removing it from the Audi phone box.
- An alternating magnetic field is used for wireless charging. Maintain a minimum distance of approximately 2.4 in (6 cm) to the Audi phone box charging plate. The thresholds for prolonged exposure at this distance comply with ICNIRP1998. Therefore, interactions such as irritation of sensory organs, malfunctions of active implants (such as pacemakers, infusion pumps, or neurostimulators) or effects on passive implants (such as prosthetic limbs) is highly unlikely. If you have an implant, consult a medical specialist if you have any questions.

Note

Applicable to U.S.A.

Operation of the Audi phone box is subject to the following requirements of the Federal Communications Commission:

- This is a CONSUMER device.
- BEFORE USE, you MUST REGISTER THIS DEVICE with your wireless provider and have your provider´s consent. Most wireless providers consent to the use of signal boosters. Some providers may not consent to the use of this device on their network. If you are unsure, contact your service provider.
- You MUST operate this device with approved antennas and cables as specified by the manufacturer. Antennas MUST be installed at least 20 cm (8 inches) from any person.
- You MUST cease operating this device immediately if requested by the FCC or a licensed wireless service provider.
- WARNING: E911 location information may not be provided or may be inaccurate for calls served by using this device. ▶

[1] The Qi standard makes it possible to charge your mobile device wirelessly.

Note

Applicable to Canada

In Canada, operation of a Zone Enhancer, such as an Audi Phone Box, is subject to the following requirements of the Innovation, Science and Economic Development Canada (ISED):

- This is a CONSUMER device.
- BEFORE USE, you **MUST** meet all requirements set out in **CPC-2-1-05**.
- You MUST operate this device with approved antennas and cables as specified by the manufacturer. Antennas MUST NOT be installed within 20 cm of any person.
- You MUST cease operating this device immediately if requested by ISED or a licensed wireless service provider.
- **WARNING**: E911 location information may not be provided or may be inaccurate for calls served by using this device.

Tips

- The Audi phone box is not available in all countries. For additional information, contact an authorized Audi dealership.
- Placing the mobile device in a bag or protective sleeve inside the Audi phone box can interfere with the connection to the external antenna*.
- Metallic objects in the Audi phone box block the wireless charging of your mobile device and calls made using the exterior antenna*.
- The charging time and temperature will vary depending on the mobile device being used.
- Your mobile device can only be charged in the Audi phone box when the ignition is switched on.
- To reduce the risk of malfunctions, make sure the mobile device is positioned correctly in the Audi phone box.
- The maximum charging output is 5 watts.
- Strong transmission quality cannot be guaranteed if more than one mobile device is in the box.*
- Only one mobile device at a time can be charged wirelessly in the Audi phone box.
- Audi recommends using Audi Genuine Accessories. Audi has verified their reliability, safety, and suitability.
- You can purchase a USB adapter from an authorized Audi dealer or authorized Audi Service Facility, or at specialty stores.

Using the telephone

Opening the telephone

Applies to: vehicles with telephone

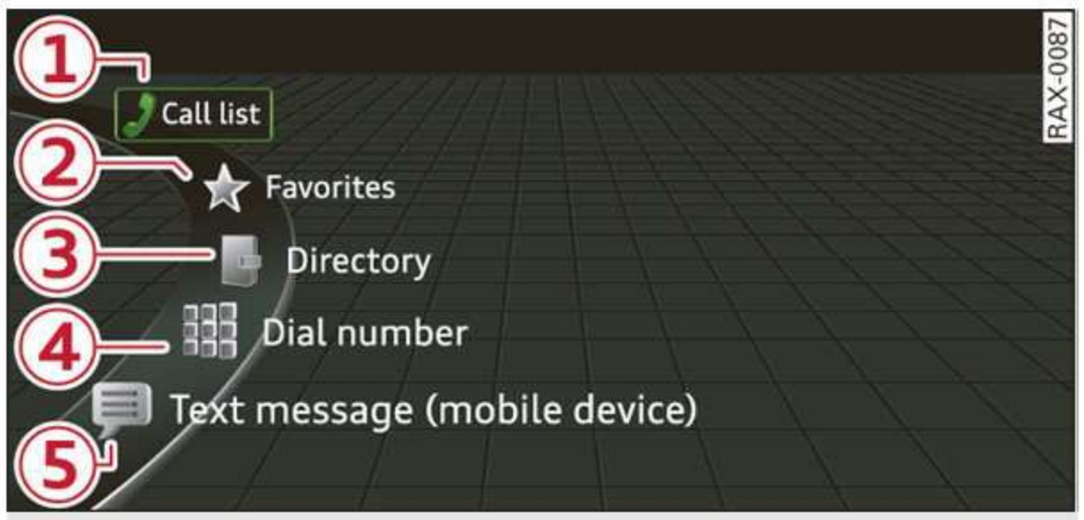


Fig. 173 Example: telephone functions in selection menu

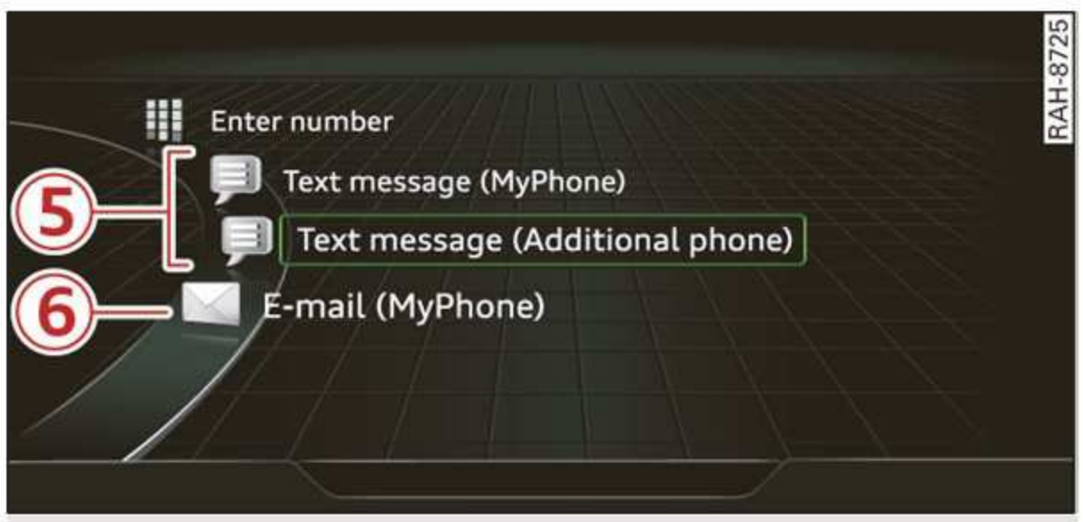


Fig. 174 Example: additional telephone functions in selection menu

Requirement: a mobile device must be connected to the MMI ⇨ *page 171*.

▸ Select: MENU button > **Telephone** > left control button.

The following phone functions are available ⇨ *fig. 173*/⇨ *fig. 174*:

① Call list 176
② Favorites 178
③ Directory 181
④ Select number 176
⑤ Text message (MyPhone)*/Text message (secondary phone)* 178
⑥ E-mail (myPhone)*/E-mail (secondary phone)* . . . . . 180 ▶

The device name for your cell phone is displayed in the **Telephone** menu, for example text message (myPhone) ⇨ *fig. 174*.

Dialing a phone number

Applies to: vehicles with telephone



Fig. 175 Number speller



Fig. 176 Dialing a phone number from the call list

▸ Select: MENU button > **Telephone** > left control button.

Call list

Requirement: the call list must contain a phone number.

Turn the control knob to display the call list.

Select and confirm the desired telephone number from the recent calls list.

Call list symbols ⇨ *fig. 176*:

① Missed calls
② Dialed numbers
③ Received calls

Select: *a contact from the list* > right control button.

– **Call**: call the selected contact.
– **Connect secondary telephone*/Switch primary and second. phone***: see ⇨ *page 173*.
– **Edit phone no. before call**: edit a phone number before dialing it. Select and confirm **OK** to edit. **Or**: press the left control button to return without editing.
– **Send text message**: write a text message to the selected contact.
– **Delete call list**: select and confirm if you would like to **Delete this entry** or **Delete all entries**.
– **Store as favorite**: store the selected contact as a favorite.
– **Show contact details**: see ⇨ *page 182*.
– **Connection manager**: see ⇨ *page 241*.
– **Bluetooth settings**: see ⇨ *page 243*.
– **Online settings**: see ⇨ *page 243*.
– **Wi-Fi settings**: see ⇨ *page 193, Wi-Fi settings*.
– **Telephone settings**: see ⇨ *page 183*.

Favorites

Requirement: a phone number or contact must be stored as a favorite ⇨ *page 178*.

Select and confirm a favorite in the favorites list.

Directory

Requirement: you must have at least one contact stored in your cell phone.

Select and confirm a phone number from the directory ⇨ *page 181*.

Enter number

– **Entering a phone number as a sequence of numbers**: enter the number using the number speller ⇨ *fig. 175*.
– **Entering the phone number as a sequence of letters**: select and confirm ABC above the number speller. Enter a sequence of letters using the letter speller, for example *AUDISERVICE*.
– **Dialing a phone number**: select and confirm 📞. **Or**: push the control knob down. Select and confirm **OK**.
– **Deleting individual characters**: select and confirm ⌫.
– **Deleting all characters entered at once**: turn the control knob with the character selection to ⌫ and press and hold the control knob. **Or**: select the right control button > **Clear input field**.

Accepting or ending a call

Applies to: vehicles with telephone

– **Accepting a call**: select and confirm **Answer**.
– **Declining a call**: select and confirm **Decline**.
– **Muting the active call**: select and confirm **Mute**.
– **Ending a phone call/cancel dialing**: select and confirm **End call**.

Caller information: the *name*, *phone number* or **Unknown** appears in the Infotainment system display depending on if the caller has been stored in the directory and if the phone number has been transmitted. A picture may also be displayed, depending on whether you have assigned a picture to a contact in your directory and if it was transferred to your MMI. You can find out if your mobile device supports this function from your mobile device network provider, your mobile device owner's manual, or at www.audiusa.com/bluetooth.

Tips

– The radio or media playback is muted during a phone call.
– Missed calls are displayed with a symbol in the status line of the Infotainment system display ⑨ ⇨ *page 155, fig. 164*.

During a phone call

Applies to: vehicles with telephone

Requirement: there must be a call in progress.

▸ **End call**: you can end a phone call.
▸ **Send tone sequence**: you can enter tone sequences (**DTMF**) directly using the number speller and send to the other person on the call.
▸ **Other call options**: press the right control button.

The following options may be possible during a call depending on the mobile device being used and the type of connection:

– Answering an additional call: if there is an incoming call while another call is active, you can select **Answer** to put the existing call on hold and answer the incoming call. If you select **Decline**, the incoming call will be declined.
– Accepting an incoming call when there is an active call and a call on hold: select **Replace**. The active call is replaced with the incoming call.
– Muting the incoming call: select and confirm **Mute telephone**.
– **Additional call**: select: **Find contact** > **Call list**/**Directory**/**Favorites** > *an entry from the list*.

Mute: if you select and confirm this function, the other person on the phone cannot hear you. You will still be able to hear the other person. To turn the microphone back on, select and confirm **Unmute**.

Hold call/**Resume held call**: you can place the existing call on hold and resume it again. To resume the call, select and confirm the call you would like to resume.

Transfer call to mobile device*: select and confirm **Transfer call to mobile device** to transfer the existing call from the MMI to your cell phone.

Switch to hands-free mode*: Requirement: you must have a phone call in progress on your cell phone. Select and confirm **Switch to hands-free mode** to transfer the call from your cell phone back to the MMI.

Swap call: alternate between two phone calls while one of the calls is on hold. Selecting **End call** will end the active phone call. A phone call on hold can be resumed using the right control button > **Resume**.

Connection manager: see ⇨ *page 241*.

Telephone settings: see ⇨ *page 183*.

Tips

– To be notified of an incoming call during a phone call, the *call waiting* function in your mobile device must be switched on when using the **Handsfree** profile.
– You can obtain more information from your mobile device service provider or from your mobile device user guide.
– When leaving the vehicle, the Bluetooth connection to the mobile device will automatically disconnect. Depending on your ▶

8W0012721BG

mobile device, phone calls in progress may be automatically redirected from the MMI to your mobile device so that you can continue the call on your phone.
– The display of an incoming phone call in the Infotainment system display may still be visible for a few seconds after a call is answered or ignored depending on the cell phone in use.

Making an emergency call

Applies to: vehicles with telephone

▸ Select: MENU button > **Telephone** > left control button > **Dial number** > Enter emergency call number (for example, 911) > **OK**.

WARNING

– Because your phone works with radio signals, a connection cannot be guaranteed under all circumstances. Do not rely on only your phone when it comes to essential communication (such as a medical emergency).
– Always follow the instructions given by the emergency personnel during an emergency call and only end the call when they instruct you to do so.

Tips

Emergency numbers are not the same everywhere. Find out which emergency number is used in your current location.

Favorites

Applies to: vehicles with telephone

Up to 50 contacts, in addition to the voicemail number, can be stored in any order in the favorites list.

▸ Select: MENU button > **Telephone** > left control button.

Storing an existing phone number as a favorite:

– Select and confirm **Call list/Directory**.
– Select a contact or phone number from the list.
– Select: right control button > **Store as favorite**.
– Enter a name for the favorite or select a suggestion.
– Select and confirm **Save**.

Renaming stored favorites

– Select: **Favorites** > *a favorite from the list*.
– Select the right control button > **Rename favorite**.

Moving stored favorites

– Select: **Favorites** > *a favorite from the list*.
– Select the right control button > **Move favorite**.
– Select and confirm the location of the selected favorite.

Deleting a stored favorite

– Select: **Favorites** > *a favorite from the list*.
– Select: right control button > **Delete favorite** > **Delete this entry** or **Delete all entries**.

Messages

Text messages

Applies to: cell phones with Bluetooth Message Access Profile (MAP)

Depending on the mobile device being used and the mobile network contract, you may be able to receive and send text messages using the MMI.

Requirement

A cell phone must be connected to the MMI via Bluetooth MAP (Message Access Profile) ⇨ *page 171*.

▸ Select: MENU button > **Telephone** > left control button > **text message (myPhone)/text message (secondary phone)***.

Write new text message

Select and confirm **Write new text message**.

– **Using a template**: select and confirm the desired template from the list.
– **Writing your own text***: select and confirm **Do not use template**. Enter text using the MMI touch control pad* or the letter speller.
– Enter one or more recipients.
– Select and confirm **Send**. ▶

Inbox

Displays all received text messages.

Sent

Displays all sent text messages.

Outbox

Displays all text messages to be sent.

Drafts

Displays all text messages that have not yet been sent and stored text messages.

Deleted

Displays all deleted text messages.

Tips

- Please note that you may have to activate the receiving and sending of text messages depending on the SIM card being used in your cell phone (for example, when using a multi-SIM). You can obtain more information from your mobile device service provider or from your mobile device user guide.
- For more information on supported mobile devices, visit www.audiusa.com/bluetooth or contact an authorized Audi dealer or authorized Audi Service Facility.
- You need a mobile device with Message Access Profile that also supports the sending function to be able to send text messages through the MMI.

Message options

Applies to: cell phones with Bluetooth Message Access Profile (MAP)

► Select: TEL button > left control button > **text message (myPhone)/text message (secondary phone)*** > **Inbox/Sent/Outbox** > right control button.

The following options may be available depending on the selected menu.

Storing a text message as a template

Ten text message templates are stored in the MMI. You can save up to 10 additional templates of your own.

– Create a text message.
– Select and confirm **Store as template**.

Resume last text message

The last edited text message can be resumed.

Reply*

A reply can be sent for the selected message in the **Inbox**.

Forward

The selected text message can be forwarded to a different recipient.

Send again*

The selected text message can be resent.

Delete this text message*

The selected text message can be deleted.

Read out[1)]

You can have the MMI read an open text message.

Text messaging settings*

To display when a new text message is received, enable the **Text message notifications**. New text messages are indicated with an envelope ✉ in the Infotainment system display status line.

Connection manager

See ⇨ *page 241*.

Bluetooth settings*

See ⇨ *page 243*.

Online settings*

See ⇨ *page 243*.

Wi-Fi settings

See ⇨ *page 193*.

1) Not available in all languages.

Telephone settings

See ⇨ *page 183*.

Tips

Messages that are deleted in the MMI are also deleted in the mobile device automatically.

E-mail*

Applies to: cell phones with Bluetooth Message Access Profile (MAP)

Depending on the type of mobile device being used, you may be able to receive and send e-mails through the MMI.

Requirement: a cell phone must be connected to the MMI via Bluetooth MAP (Message Access Profile) ⇨ *page 171*. You can find out if your mobile device supports this function by checking your mobile device owner's manual.

► Select: MENU button > **Telephone** > left control button > **e-mail (myPhone)/e-mail (secondary phone)***.

Write new e-mail

Select and confirm **Write new e-mail**.

– **Using a template**: select and confirm the *desired template from the list*.
– **Writing your own text***: select and confirm **Do not use template**. Enter text using the MMI touch control pad* or the letter speller.
– Enter one or more recipients.
– Select and confirm **Send**.

Inbox

All received e-mails are displayed.

Sent

All sent e-mails are displayed.

Outbox

All e-mails that will be sent are displayed.

Drafts

All saved e-mails that have not been sent yet are displayed.

Note

Always follow the information found in ⇨ ! *in Wi-Fi settings on page 193*.

Tips

– For more information on supported mobile devices, visit www.audiusa.com/bluetooth or contact an authorized Audi dealer or authorized Audi Service Facility.
– To ensure that your sent e-mails are received, connect your cell phone to the Wi-Fi hotspot* in the vehicle so that the e-mail app on your cell phone continues to have Internet access. If you are still not receiving e-mails even though you have a successful connection, then contact your e-mail service provider or your cell phone service provider.

Message options

Applies to: cell phones with Bluetooth Message Access Profile (MAP)

► Select: MENU button > **Telephone** > left control button > **e-mail (myPhone)/e-mail (secondary phone)*** > **Inbox/Sent/Outbox** > right control button.

The following options may be available depending on the selected menu.

Store as template

Ten e-mail templates are stored in the MMI. You can save up to 10 additional templates of your own.

– Create an e-mail.
– Select and confirm **Store as template**.

Resume last edited e-mail

The last e-mail in progress can be resumed.

Reply*

A reply can be sent for the selected e-mail in the **Inbox**.

Reply to all*

A reply can be sent for the selected e-mail in the **Inbox** and it will be sent to all of the entered recipients. ▶

Forward

The selected e-mail can be forwarded to a different recipient.

Delete this message*

The selected e-mail can be deleted.

Read out[1)]

You can have the MMI read an open e-mail.

E-mail settings*

To display when a new e-mail is received, activate the **E-mail notifications**. New e-mails are indicated with an envelope ✉ in the Infotainment system display status line.

Connection manager

See ⇨ *page 241*.

Bluetooth settings*

See ⇨ *page 243*.

Online settings*

See ⇨ *page 243*.

Wi-Fi settings

See ⇨ *page 193*.

Telephone settings

See ⇨ *page 183*.

Tips

- Messages that are deleted in the MMI are also automatically deleted in the connected cell phone.
- You cannot read any messages while driving.

Listening to voicemail

Applies to: vehicles with telephone

- Select: MENU button > **Telephone** > left control button. Select and confirm **Call list/Directory/Favorites** > **Voicemail**.

- **Entering the voicemail number**: enter the desired number. Select and confirm **OK**.
- **Dialing the voicemail number**: select and confirm **Voicemail**.

Tips

- This service must be set up and activated in advance by the cell phone service provider. You can obtain more information from your cell phone service provider.
- The voicemail number depends on the cell phone service provider.

Directory

Opening the directory

Applies to: vehicles with telephone

After connecting the cell phone, the contacts in it are automatically imported into the MMI.



Fig. 177 Directory

Requirement: you must have at least one contact stored in your cell phone.

- Select: MENU button > **Telephone** > left control button > **Directory**.

- **Calling a contact**: select and confirm a contact from the directory. The phone numbers for the selected contact are displayed. To make the call, select and confirm a phone number.
- **Free text search for a contact**: see ⇨ *page 154*.

Contacts are displayed in alphabetical order and can be sorted by first or last name ⇨ *page 184*, **Sort order**.

The directory can be opened through the **Telephone** menu as well as through the **Navigation*** menu. ▶

1) Not available in all languages.

Tips

– Additional information on free text searches can be found under ⇨ *page 154*.
– Check for a possible request to synchronize on your cell phone. Requests to synchronize the directory must be confirmed so that your cell phone contacts can be loaded into the MMI.
– The contact display in the MMI depends on the mobile device being used. For more information on supported mobile devices, visit www.audiusa.com/bluetooth or contact an authorized Audi dealer or authorized Audi Service Facility.
– Please note that only the directory from the primary phone* is always displayed.
– The contacts from the mobile device may not be transferred in alphabetical order. If there are too many entries, contacts with different first letters may be missing in the MMI.
– The contacts in the local MMI memory are always visible and can be accessed by other users.

Free text search for a contact

Applies to: vehicles with telephone

- Select: MENU button > **Telephone** > left control button > **Directory**.
- To limit the search, enter the initials of the contact being searched with each initial separated by a space in the input field. Enter additional letters if necessary.
- Select and confirm a contact from the directory. The phone numbers for the selected contact are displayed.
- To make the call, select and confirm a phone number.

Tips

– You can scroll through long lists quickly by turning the control knob quickly. The scrolling speed depends on the number of list entries.
– Additional information on free text searches can be found under ⇨ *page 154*.

Showing contact details*

Applies to: vehicles with telephone

You can show contact details depending on the vehicle equipment.



Fig. 178 Diagram: showing contact details

- Select: MENU button > **Telephone** > left control button.
- Select and confirm **Directory** > *a contact from the directory*.
- Select: right control button > **Show contact details**.

– **Calling**: select and confirm the desired telephone number.
– **Navigating**: to start navigation, select and confirm the desired address. Select and confirm **Start route guidance**.

Press the right control button to open additional options for the contact details.

Add destination

To start navigation, select and confirm the desired address. Select and confirm **Start route guidance**.

Store as favorite

See ⇨ *page 178, Favorites*.

Send text message*

You can send a text message ⇨ *page 178* to the selected contact.

Delete contact

The selected contact can be deleted.

Tips

– Contacts edited in the MMI directory cannot be automatically updated in the connected ▶

cell phone. Audi recommends editing cell phone contacts directly in the cell phone.
– Only the contacts in the local MMI memory can be edited or deleted.

Importing and exporting contacts

Applies to: vehicles with telephone

Contacts in vCard format (.vcf) can be imported into the directory or exported.

Requirement: an SD card must be inserted in one of the SD card readers* ⇨ *page 221* or a USB storage device must be connected to the Audi music interface* ⇨ *page 226* or the requirements for Audi connect Infotainment services* must be met ⇨ *page 186*.

► Select: MENU button > **Telephone** > left control button > **Directory**.
► Select: right control button > **Contact settings**.

– **Importing contacts from a storage device**: select and confirm **Import contacts** > **SD card 1/SD card 2** or **USB device 1/USB device 2** > *desired contacts* > **Start import**.
– **Exporting contacts to a storage device**: select and confirm **Export contacts** > **SD card 1/SD card 2** or **USB device 1/USB device 2** > *desired contacts* > **Start export**.
– **Selecting all contacts at once to import/export**: select and confirm **Import contacts/Export contacts** > **SD card 1/SD card 2** or **USB device 1/USB device 2** > **All** > **Start import/Start export**.

Tips

– Always read the chapter ⇨ *page 186, Audi connect*.
– For additional information on the myAudi account, visit www.audiusa.com/myaudi.
– The imported contacts are stored in the local memory of the directory.
– A maximum of 1,000 contacts can be imported. You can check the directory memory capacity at any time ⇨ *page 184*.
– Never save important data on memory cards or USB storage devices. Audi is not responsible for damaged or lost files and media.
– Contacts that were downloaded from a mobile device cannot be exported.
– There should be no other files or folders on the storage medium containing the contacts to be imported.

Additional settings

Telephone settings

Applies to: vehicles with telephone

► Select: MENU button > **Telephone** > right control button > **Telephone settings**.

Call options*

Call forwarding: you can switch the forwarding of incoming calls to your voicemail or to another phone number on and off. You can check if the function is activated or deactivated with **Check status**.

Call waiting: you are alerted to an incoming call during a phone call when the function is switched on ☑. You can check if the function is activated or deactivated with **Check status**.

Send own telephone number: sending your phone number with an outgoing call can be activated and deactivated. With the **Network-dependent** setting, the setting listed in the contract with the cell phone service provider is used. The settings only apply to the **Telephone** menu in the MMI. Please note that the settings on your mobile device will apply after disconnecting the Bluetooth connection. You can check if the function is activated or deactivated with **Check status**.

Ringtone and volume settings[1)]

Using the **Mute telephone** function, you can switch the ringtone playback through the MMI speaker on and off. You can play the ringtones using the **Ringtone** function. Select and confirm an entry from the list. For the **Ringtone volume/Message volume** settings, see ⇨ *page 245*. The ▶

1) Depends on the connected cell phone.

Microphone input level can be adjusted during a phone call using the control knob.

Tips

– Several mobile devices can be paired with the MMI, but only two* mobile devices can be actively connected.
– To delete all paired Bluetooth devices, the **Bluetooth** function can be reset to the factory default settings ⇨ *page 241*.

Additional options

► Select: MENU button > **Telephone** > right control button.

Connection manager

See ⇨ *page 241*.

Bluetooth settings*

See ⇨ *page 243*.

Online settings*

See ⇨ *page 243*.

Wi-Fi settings*

See ⇨ *page 193, Wi-Fi settings*.

Directory settings

Applies to: vehicles with telephone

► Select: MENU button > **Telephone** > left control button > **Directory** > right control button > **Contact settings**.

Memory capacity

Shows the **Memory capacity** for the directory.

You can manage up to 17,000 contacts with the directory. You can load up to 4,000 contacts from your cell phone into each directory. You can also import up to 1,000 contacts from a storage device.

Sort order

You can sort the contacts in your directory alphabetically according to **Last name** or **First name**.

Import contacts/Export contacts

See ⇨ *page 183*.

Download directory

To update the contacts in the MMI, you can manually download your mobile device contacts. Depending on the mobile device, you may need to disconnect and reconnect the Bluetooth connection to update the contacts.

Hide contacts without phone number

When this function is switched on, grayed-out contacts that have no phone numbers stored for them will be hidden in the directory.

Troubleshooting

Applies to: vehicles with telephone

Problem	Solution
Pairing the cell phone to the MMI failed.	Check if the requirements for connecting a mobile device are met ⇨ *page 171*. **Or:** check if you accidentally declined the pairing setup PIN on your cell phone. If necessary, repeat the pairing process ⇨ *page 171*.
After pairing, **not all contacts or no contacts** have been loaded into the MMI.	Avoid using special characters in names. Avoid using contact groups on your cell phone.

Problem	Solution
Certain **telephone functions** are grayed out or not available.	The telephone functions depend on the mobile device service provider and the mobile device you are using. You can obtain more information from your cell phone service provider, in your cell phone user guide or in the database for mobile devices at www.audiusa.com/bluetooth.
Some **telephone functions** may be switched off or not available, even though the mobile device is supported.	On corporate phones, some Bluetooth settings may not be compatible or the cell phone Bluetooth function may be deactivated. You can obtain more information from your system administrator.

Audi connect

Introduction

Depending on the country and the vehicle equipment, the following functions may be available:

– Audi connect Infotainment
– Audi connect vehicle control

Tips

– AUDI AG provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.
– You can also find more information on Audi connect online at www.audiusa.com.

Audi connect Infotainment

Description

Applies to: vehicles with Audi connect Infotainment

With Audi connect Infotainment services, online information is transmitted directly to the vehicle.

An Internet connection is required to use Audi connect Infotainment. Depending on the country and the vehicle equipment, the following options may be available:

WARNING

To reduce the risk of an accident, only use Audi connect Infotainment services when road and traffic conditions permit. Always read and follow the notes in ⇨ *page 145, Traffic safety information*.

Tips

– The data connection for Audi connect Infotainment services is pre-configured at the factory. You can change the data connection settings at any time if you need to change the configuration ⇨ *page 192*.
– Use of the LTE* mobile network standard is not available in every country. Contact an authorized Audi dealer or authorized Audi Service Facility or your cell phone service provider for additional information.
– Audi connect Infotainment services are only available within the cell phone network coverage from your cell phone service provider.
– Availability, scope, providers, screen display, and costs of services may vary depending on the country, model, model year, end device and rates.

Embedded SIM card

Applies to: vehicles with Audi connect Infotainment and an embedded SIM card

The data connection for Audi connect Infotainment services is made through an embedded SIM card (eSIM card) that is installed in the vehicle. You can use the Audi connect Infotainment services immediately.

Note

– The connection costs for Audi connect Infotainment services are included in the price of Audi connect Infotainment. Please note that charges may apply when using certain services. For example, this applies to Internet radio/podcasts or for services that use the Wi-Fi hotspot, such as online media sources. Depending on the country, data plans may need to be purchased for these services ⇨ *page 194*. For additional information, see www.audiusa.com/myaudi.
– In certain situations, the Wi-Fi hotspot data connection may be established as a replacement for the SIM card on your Wi-Fi device. This feature depends on the configuration of your Wi-Fi device and operating system. This could result in fees depending on your cell phone service provider, especially if you are using this feature while abroad. A flat rate data plan is strongly recommended. For more information, contact your cell phone service provider or refer to the owner's manual for your Wi-Fi device.

Audi connect Infotainment services

Configuration

Applies to: vehicles with Audi connect Infotainment

Requirement: your vehicle must be connected to the Internet ⇨ *page 186*.

Some Audi connect Infotainment services must be configured through your personal myAudi account before using them for the first time.

- ▸ Register at www.audiusa.com/myaudi.
- ▸ Add your vehicle to your myAudi account.
- ▸ Select: MENU button > **Audi connect** > right control button > **Log in**.
- ▸ Log in to myAudi in the vehicle using your e-mail address and password.

Tips

- – For some Audi connect Infotainment services, you may also have to enter your myAudi access information when accessing services in the MMI.
- – Some Audi connect Infotainment services must be activated at www.audiusa.com/myaudi.
- – Regardless of the key user and additional users, you can only connect one myAudi account to your vehicle.
- – To make logging in easier in the vehicle, you will receive an 8-digit myAudi PIN as an alternative to your myAudi password after you have created a myAudi account.
- – For detailed information on configuration, visit www.audiusa.com/myaudi.

Accessing Audi connect Infotainment

Applies to: vehicles with Audi connect Infotainment

- ▸ Select: the MENU button > **Audi connect**.

A list of all of the available Audi connect Infotainment services is shown on the Infotainment system display.

You can also filter the Audi connect Infotainment services by category:

- ▸ Select: MENU button > **Audi connect** > left control button > for example, **Navigation** for the Audi connect Infotainment services in the Navigation menu.

Basic functions

Applies to: vehicles with Audi connect Infotainment

- ▸ Select: MENU button > **Audi connect** > *desired Audi connect Infotainment service* > right control button.

Depending on the equipment and the Audi connect Infotainment service selected, the following basic functions may be available:

Save as preview

You can also see a preview of the selected Audi connect Infotainment services on the Audi connect Infotainment home page.

Show on map

You can show selected contents on the map and use them for route guidance.

Log in

See ⇨ *page 187*.

Read out[1)]

You can allow the MMI to read out the selected contents.

Call

If a phone number was assigned to an entry, you can call the number, for example to reserve tickets.

Refresh

The contents for the selected Audi connect Infotainment service are refreshed.

Start route guidance

If a location was saved with an entry, you can use it as the navigation destination. Route guidance starts immediately. ▶

1) Not available in all languages.

Change search area

The set search area can be changed at any time. Additional information on search areas can be found under ⇨ *page 201*.

Closing Audi connect Infotainment services

Regardless of the function selected, you can close an Audi connect Infotainment service at any time and return to the home screen.

Services

Applies to: vehicles with Audi connect Infotainment

Depending on the country and the vehicle equipment, the following services may be available:

Weather

Information on current weather conditions as well as weather forecasts for the selected search area.

- ▸ Select and confirm **Weather**.

News

- ▸ Select: **Online news** > *desired newsfeed* > *a headline*.

If you logged in to myAudi in your vehicle ⇨ *page 187*, personalized newsfeeds can be displayed.

Twitter

Requirement: you must have connected your vehicle with myAudi ⇨ *page 187*. You must have connected your myAudi account with Twitter.

You can only connect one Twitter account with your myAudi account. Not all settings can be adjusted in the MMI. Some can only be adjusted through the Twitter website.

- ▸ Select: **Twitter** > left control button > *desired function* (for example, **Trends**).

Travel (travel guide)

Requirement: the myAudi app must be installed and open on your mobile device. Your mobile device must be connected to the vehicle Wi-Fi hotspot ⇨ *page 193*.

- ▸ Select: MENU button > **Audi connect** > left control button > **Information** *category* > **Travel**.

After opening the travel guide, travel tips in your area will be displayed including current ratings as well as the corresponding category.

- ▸ To switch categories (for example, bars nearby), select: left control button > *select a category*.

Traffic light information

See ⇨ *page 189*.

WARNING

- It is only safe to use tablets, laptops, mobile devices and other similar devices when the vehicle is stationary because, like all loose objects, they could be thrown around the inside of the vehicle in a crash and cause serious injuries. Store these types of devices securely while driving.
- Do not use any wireless devices on the front seats within range of the airbags while driving. Also read the warnings in the chapter ⇨ *page 265, Front airbags*.

Note

Read the information about Audi connect, and be sure to note the connectivity costs section ⇨ *in Wi-Fi settings on page 193*.

Traffic light information

Applies to: vehicles with traffic light information

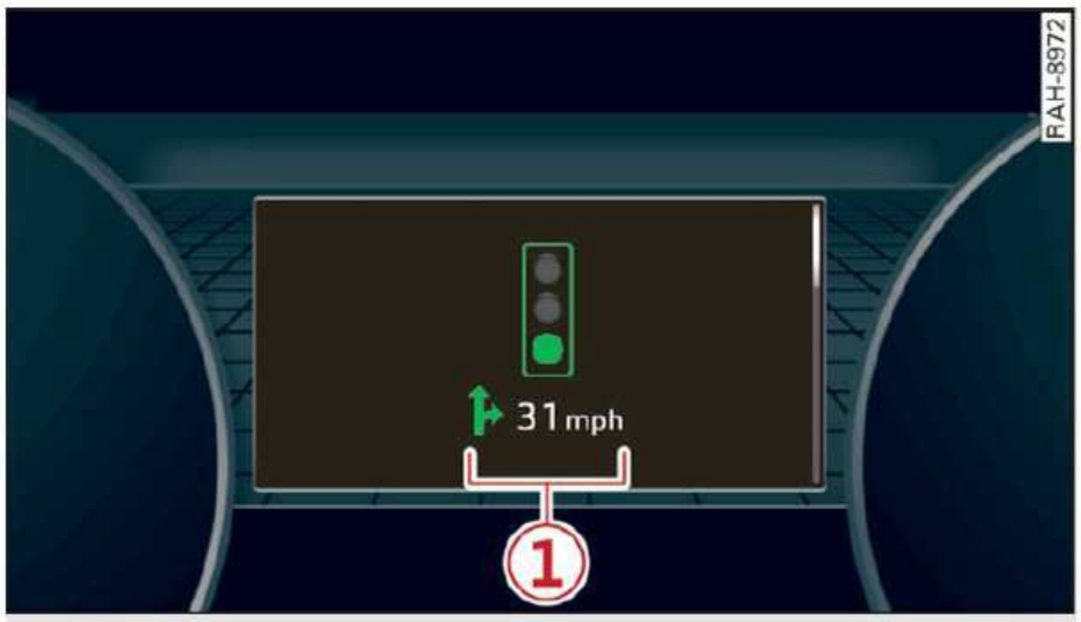


Fig. 179 Example: display of a speed recommendation

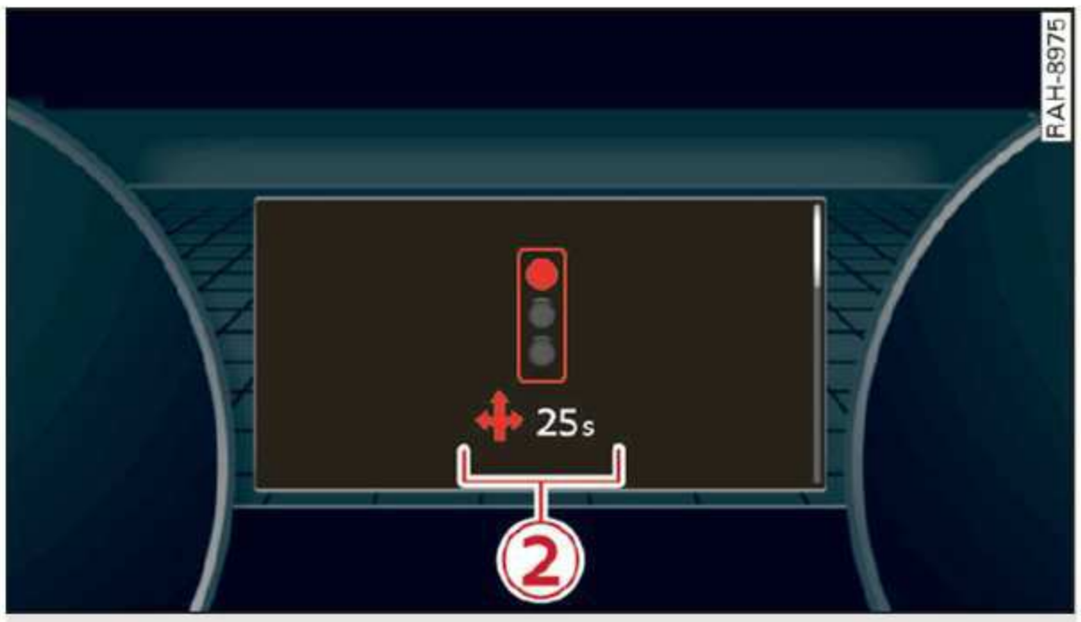


Fig. 180 Example: display of an estimated wait time

The traffic light information [1)] gives you a speed recommendation, at which to drive through the next green traffic light ① ⇨ *fig. 179* or informs you of the wait time at the next red light ②. The traffic light information can be displayed in the driver information system, in the status line of the Audi virtual cockpit* or in the head-up display*.

General information

The traffic light information is subject to certain system limitations and may be unavailable or only partially available in the following situations:

– If the permitted speed limit is exceeded
– If driving below a certain speed limit
– If the next traffic light is less than 100 feet (30 m) away
– If the estimated wait time at a red light is less than four seconds
– If there is no traffic light data available
– If the data connection has been interrupted
– If the camera-based traffic sign recognition* is malfunctioning
– If there are warnings from the camera-based traffic sign recognition*

Switching traffic light information on and off

– Select: MENU button > **Audi connect** > **Traffic light information**.

WARNING

– When traffic light information is shown, also always pay attention to the traffic situation, the distance to other vehicles and the area around the vehicle. The driver is always responsible for assessing the traffic situation.
– Always adapt your speed to the current weather, road and traffic conditions. The displayed information must never cause you to ignore legal traffic regulations and pose a safety risk.
– Regardless of the traffic light information, you should always monitor your speed using the speedometer and make sure you are adhering to the legal speed limit.
– The traffic light information does not adjust your vehicle's speed to the speed recommendation shown in the display.

Tips

– Traffic light information is not yet available in all cities and is not nationwide.
– Always read the instructions in the chapter ⇨ *page 186*.

Additional options

Applies to: vehicles with Audi connect Infotainment

► Select: MENU button > **Audi connect** > right control button.

Depending on the equipment and the country, the following options may be available in the overview of Audi connect Infotainment services. ▶

1) Service in preparation at the time of printing. Can add later or is only available in certain regions.

About Audi connect

Here you will find legal information regarding Audi connect Infotainment usage.

Log in

See ⇨ *page 187*.

Connection manager

See ⇨ *page 241*.

License subscription

The validity and expiration date of your licenses are displayed.

Refresh

The content of the selected Audi connect Infotainment service or the entire Audi connect Infotainment list is updated.

Data privacy

Requirement: the ignition must be switched on.

Location, vehicle, and personal data are transmitted when using Audi connect services.

Allowing sending of data

– Select and confirm **Activate data connection**. The data module for the use of all Audi connect services will be active.

Restricting sending of data

– Select and confirm **Activate privacy**. The data connection is limited or deactivated depending on the equipment. The majority of Audi connect services will not be available.

The following interfaces are not affected by this setting: Bluetooth, Bluetooth Low Energy (BLE), Wi-Fi connection, Audi smartphone interface (ASI), Near Field Communication (NFC), charging communication (e-tron), Electronic Toll Collect (ETC), if equipped.

Note

You are responsible for all precautions taken for data protection, anti-virus protection, and protection against loss of data on mobile devices that are used to access the Internet through the Wi-Fi hotspot.

Tips

– If the transmission of data is limited, data will still be transmitted to verify subscriptions.
– If the transmission of data is limited, it will have the following effects on the exchange of data for Audi connect services and emergency calls, if equipped:
  – The emergency call function will remain available without restrictions and will continue to transmit data.
  – If an online roadside assistance call is initiated, no data will be transmitted, but a call will be made.
  – If the Geofencing Alert, Speed Alert, and/or Valet Alert services have been activated by the key user, then they will remain available without restrictions and continue to transmit data.

Audi connect vehicle control services

Description

Applies to: vehicles with Audi connect vehicle control

With Audi connect vehicle control services [1], you can utilize various services using the myAudi app or online at www.audiusa.com/myaudi.

Tips

– Accessing specific data or controlling functions remotely depends on the charge level of the vehicle battery. Therefore, these functions only have limited availability after switching off the ignition.
– An eSIM card establishes the Internet connection for Audi connect vehicle control services. The costs for this are included in the price of Audi connect vehicle control services. The cell phone network, for example, must be available to use these services.

1) Depends on the country and equipment. These services are available for a limited time.

Setup

Applies to: vehicles with Audi connect vehicle control

For some Audi connect vehicle control services, the vehicle owner must be set up as the key user.

Set key user

Requirement: a key user must not be set yet. The ignition must be switched on.

- ▸ To set a key user for the vehicle, you will need a myAudi account. Register at www.audiusa.com/myaudi.
- ▸ Link your vehicle to the account at www.audiusa.com/myaudi and then verify your myAudi account immediately in order to use the Audi connect vehicle control services.
- ▸ You can also verify your myAudi account later. Log in at www.audiusa.com/myaudi with your access information and verify your myAudi account in user management using the verification process that is given.
- ▸ Select: MENU button > **Audi connect** > if necessary, **Display available functions** > right control button > **Audi connect user management** > **Key user** > **Set key user**.
- ▸ Enter your myAudi user name and the 10-digit vehicle code ⇨ *page 29*. The key user is set. You have the rights to use the Audi connect vehicle control services ⇨ *page 191* as well as the ability to manage other vehicle functions and any other users.

Resetting the primary user

If you remove the key user, all other users and their authorizations will be deleted. It will no longer be possible to use the Audi connect vehicle control services.

Requirement: a key user must be set. The ignition must be switched on.

Select: MENU button > **Audi connect** > right control button > **Audi connect user management** > **Key user** > **Reset key user**.

Using the myAudi app

- ▸ Install the myAudi app on your mobile device and log in with your access information.

Tips

- – If you sell your vehicle, reset the key user and restore all settings to the factory default settings ⇨ *page 241*.
- – It may also be necessary to enter your 4-digit myAudi PIN when accessing some Audi connect vehicle control services.
- – Store the vehicle code in a secure place. It may be necessary to re-enter the vehicle code.
- – Pay attention to upper- and lower-case letters when entering the vehicle code.
- – If you do not have the 10-digit vehicle code, contact an authorized Audi dealer or authorized Audi Service Facility.

Additional options

Applies to: vehicles with Audi connect vehicle control

License subscription

The validity and expiration date of your subscriptions are displayed. When this function is activated, you will be notified before your subscription expires.

Select: MENU button > **Audi connect** > **Display available functions** > right control button > **License subscription**.

Warning levels

Requirement: the primary user must have set one or more warning levels. Secondary users can only see if a warning level is active or not.

Select: MENU button > **Audi connect** > right control button > **Alerts**.

Services

Applies to: vehicles with Audi connect vehicle control

Depending on the country and the vehicle equipment, the following services may be available:

Remote locking and unlocking

Requirement: the vehicle must be parked and the ignition must be switched off.

This service allows you to unlock or lock your vehicle. ▸

Vehicle status report

This service transfers driver information system data to a server. Depending on the vehicle equipment, certain data may be accessed, such as the remaining range or mileage. The values may differ from the values displayed in the vehicle.

Car Finder

This service transmits the parking location to a server when the ignition is switched off. The vehicle location, your location, or the route to your vehicle can be displayed. The new parking location cannot be determined with this service if the vehicle is moved after shutting the vehicle off and without switching the ignition on and off again, for example if the vehicle is towed or stolen.

– **Deactivating and activating Car Finder**: select: MENU > **Audi connect** > **Car finder**.

Online Audi service request

Requirement: the service must be activated online at www.audiusa.com/myaudi and an authorized Audi dealer or authorized Audi service facility must be selected.

This service transmits service-relevant data to your selected authorized Audi dealer or authorized Audi service facility. They will contact you before your next service appointment.

Stolen Vehicle Locator

This service assists you in locating your vehicle if it is stolen.

– Contact the police. You receive a Case ID.
– Call the service hotline and give your Case ID.

The service hotline will forward the established data to the police. You receive the Audi Service hotline number when you purchase your vehicle.

Geofencing Alert

Requirement: a key user must be set in the vehicle ⇨ *page 191*.

This service allows you to set permitted and forbidden zones for your vehicle as well as set time limits for these zones. If your vehicle leaves a permitted zone or enters a forbidden zone, you will be notified with a push notification and/or an e-mail.

Speed Alert

Requirement: a key user must be set in the vehicle ⇨ *page 191*.

You can set up to two speed limits for your vehicle using this service. If your vehicle exceeds a set speed limit, you will be notified with a push notification and/or e-mail.

Valet Alert

Requirement: a key user must be set in the vehicle ⇨ *page 191*.

If you give your vehicle to a parking service, you can set a zone and a speed limit using the myAudi app. If the vehicle leaves the zone or exceeds the speed limit, you will be notified with a push notification and/or e-mail.

WARNING

Do not ignore messages and warning or indicator lights that turn on in the vehicle because of the information in the vehicle status report. This could lead to break downs in on the road, accidents and serious injuries.

Tips

For some services, you can select if you would like to be notified with a push notification and/or an e-mail.

Settings

Cell phone network

▸ Select: MENU button > **Audi connect** > right control button > **Connection manager**.
▸ Select: right control button > **Online settings** > **Data connection settings**.

Depending on the country, vehicle equipment, and connection type, the following functions may be available:

Data connection settings

Using the **Data connection settings** menu, you can set when the system should connect to the ▶

Internet. The Internet connection disconnects automatically once the requested Audi connect Infotainment service no longer requires any data.

– **Connection setup**: you can select when a data connection should be established.
– **Audi connect (MMI)**: when this function is switched on, a data connection is automatically established in order to use Audi connect Infotainment services.
– **Wi-Fi devices**: when this function is switched on, you can allow or deny Internet connections.

Note

Always follow the information found in ⇨ *in Wi-Fi settings on page 193*.

Tips

For more information on roaming charges, contact your cell phone service provider.

Wi-Fi settings

Applies to: vehicles with Wi-Fi hotspot

You can use the MMI as a Wi-Fi hotspot to connect up to eight Wi-Fi devices to the Internet.

Requirement: the ignition must be switched on.

► Select: MENU button > **Telephone** > right control button > **Wi-Fi settings**.

Depending on the country and the vehicle equipment, the following functions may be available:

Wi-Fi

When this function is switched on, the MMI Wi-Fi hotspot is active and visible to other devices (for example, laptops and cell phones). You can connect your Wi-Fi device to the MMI and use the Internet connection if necessary. If you switch off the Wi-Fi in the MMI, the Wi-Fi hotspot will be deactivated. Therefore, any other devices accessing the Wi-Fi hotspot will no longer be connected to the Wi-Fi.

Network key

The Wi-Fi connection between your vehicle and your Wi-Fi device is encrypted. To establish a connection, you must enter the following values when setting up your wireless device. You can change them if necessary.

– **Access point (SSID)**: name of the Wi-Fi network.
– **Password**: a random password was set at the factory in the MMI. The password can be changed. The encryption method requires a password to be at least eight characters long. Choose a secure password.
– **Visible to others**: your Wi-Fi network visibility can be switched on or off.

WARNING

– It is only safe to use tablets, laptops, mobile devices and other similar devices when the vehicle is stationary because, like all loose objects, they could be thrown around the inside of the vehicle in a crash and cause serious injuries. Store these types of devices securely while driving.
– To reduce the risk of an accident, use the Audi connect Infotainment services with a Wi-Fi hotspot only in the rear seat when the vehicle is in motion, or only when the vehicle is stationary.
– Do not use any wireless devices on the front seats within range of the airbags while driving. Also read the warnings in the chapter ⇨ *page 265, Front airbags*.
– As the driver, do not allow usage of the Wi-Fi hotspot to distract you from driving, as this could increase the risk of an accident.

Note

– In certain situations, the Wi-Fi hotspot data connection may be established as a replacement for the SIM card on your Wi-Fi device. This feature depends on the configuration of your Wi-Fi device and operating system. This could result in fees depending on your cell phone service provider, especially if you are using this feature while abroad. A flat rate data plan is strongly recommended. For more information, contact your cell phone service provider or refer to the owner's manual for your Wi-Fi device. ▶

– Applies to: embedded SIM card usage: The connection costs for Audi connect Infotainment services are included in the price of Audi connect Infotainment. Please note that charges may apply when using certain services. For example, this applies to Internet radio/podcasts or for services that use the Wi-Fi hotspot, such as online media sources. Depending on the country, data plans may need to be purchased for these services ⇨ *page 194*. For additional information, see www.audiusa.com/myaudi.
– You are responsible for all precautions taken for data protection, anti-virus protection, and protection against loss of data on mobile devices that are used to access the Internet through the Wi-Fi hotspot.

Tips

In vehicles without Audi connect Infotainment, the use of the Wi-Fi hotspot is only possible for the Wi-Fi audio player*. A data connection to the Internet cannot be established.

Data plans[1)]

Applies to: vehicles with data plans

Requirement: you must have created a myAudi account at www.audiusa.com/myaudi. Your vehicle must be registered in your myAudi account.

You can purchase data plans at www.audiusa.com/myaudi.

WARNING

– As the driver, do not allow usage of the Wi-Fi hotspot to distract you from driving, as this could increase the risk of an accident.
– It is only safe to use tablets, laptops, mobile devices, and other similar devices when the vehicle is stationary because, like all loose objects, they could be thrown around the inside of the vehicle in a crash and cause serious injuries. Store these types of devices securely while driving.
– Do not use any wireless devices on the front seats within range of the airbags while driving. Also read the warnings in the chapter ⇨ *page 265, Front airbags*.

Note

Read the information about Audi connect, and be sure to note the connectivity costs section ⇨ *in Wi-Fi settings on page 193*.

Tips

– Please note that any vehicle passenger can delete the SIM owner.
– The associated vehicle is not automatically deleted from the customer portal for the cell phone service provider when you delete the SIM owner in the vehicle. If selling your vehicle, you should delete the vehicle from the customer portal for the cell phone service provider to avoid being charged for additional purchases.

Data Privacy

Applies to: vehicles with Audi connect Infotainment

AUDI AG collects, uses, stores and shares your personal information, such as contact data, vehicle data, usage data, driving data and precise geolocation, in order to provide you with the products and services you have purchased or requested, and for a number of other purposes, for example, to track quality issues, to performance and safety, to meet our internal compliance or legal requirements and to market to customers and potential customers. For a more complete list of the data we collect, how we use it and with whom we share it, please visit your Audi national/sales region website at www.audi.com.

The collection, use and sharing may vary depending on your model and model year, your subscription status, or the service offering. For example, collection, use and sharing may vary between Audi connect services, if you have designated a key user, or if you are driving a model equipped with persistent data logging. Please review the ▶

1) Not available in every market.

complete Privacy Statement to understand our data handling practices with respect to a particular service.

You can find additional information about our data privacy practices in your MMI.

► Select: MENU button > **Audi connect** > right control button > **About Audi connect**.

Information about our privacy practices in conjunction with the mobile Audi connect application can be found in the Application's Privacy Statement.

For additional information about the privacy practices relating to Audi connect, myAudi, or other websites, applications or online services as well as your obligations with respect to using these services, and for additional information regarding Audi connect terms and conditions, please visit your Audi national/sales region website at www.audi.com.

Troubleshooting

Applies to: vehicles with Audi connect Infotainment

Problem	Solution
Audi connect Infotainment services: individual Audi connect Infotainment services are grayed out or not available.	Some Audi connect Infotainment services must be activated or configured through your personal myAudi account before using them for the first time. You can find detailed information online at www.audiusa.com/myaudi.
Wi-Fi hotspot: it is not possible to connect through Wi-Fi.	Check if Wi-Fi is activated in the MMI ⇨ *page 193*. Delete all existing Wi-Fi connections on your mobile device and restart it.

8W0012721BG

Emergency call

Introduction

Applies to: vehicles with emergency call function

Depending on the country and the vehicle equipment, the following functions may be available.

With **emergency call**, you can call for help in dangerous situations as quickly as possible. Use this function when emergency help is needed ⇨ *page 196*.

With **online roadside assistance**, you can request assistance if there is a breakdown or a minor accident ⇨ *page 197*.

Tips

– The services are provided through a SIM card installed in the vehicle. The cost of the call and data connections is included in the price of the services. Services are provided assuming that the cell phone network required for the installed SIM card is functioning and available for use. The available services set by Audi AG are only available within the cell phone network coverage area for the cell phone service provider selected by Audi AG.
– You can find what data will be transferred at www.audiusa.com.
– These services cannot be deactivated using the settings in the Infotainment system.

Emergency call

Description

Applies to: vehicles with emergency call function

An emergency call is a combination of data transmission and a phone call. The data transmission from your vehicle forwards important information, such as the vehicle and position data, to the emergency call center.

Tips

The availability of the services offered depends on the country and may change in the future.

Making an emergency call

Applies to: vehicles with emergency call function

The emergency call can be made two different ways.

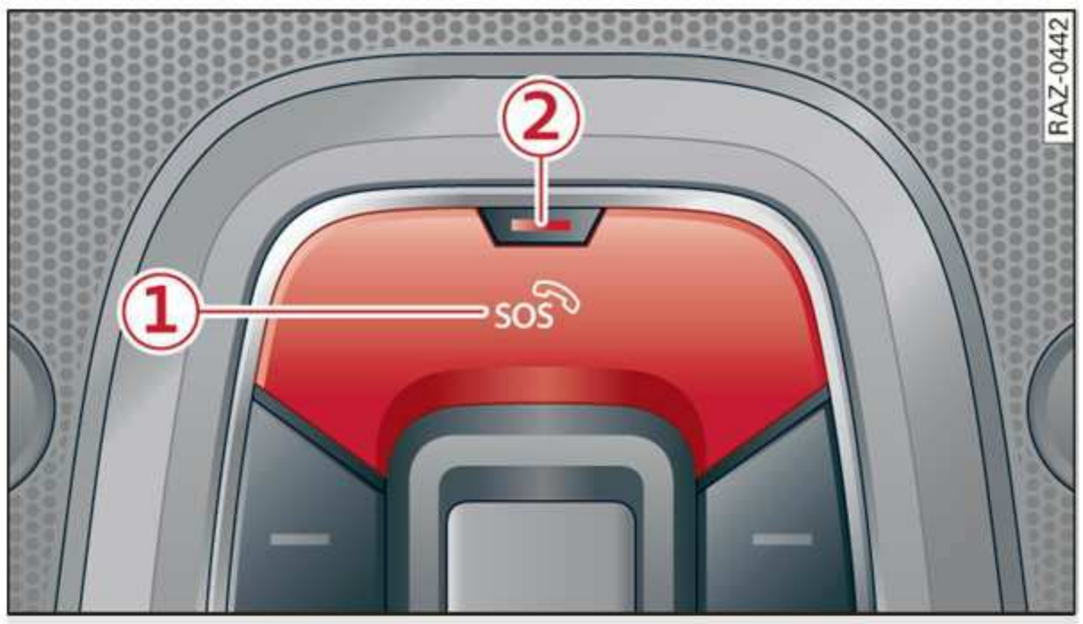


Fig. 181 Front headliner: cover for the emergency call button

Requirement: the LED ② must be green.

Manual emergency call

Requirement: the ignition must be switched on.

- ▸ Tap the cover ① to open it.
- ▸ Press and hold the emergency call button until the LED ② blinks green. The emergency call will be made.
- ▸ If the emergency call button is pressed by mistake, then press it again immediately and hold it until the LED stays green. The emergency call will be canceled.

Automatic emergency call

The vehicle electrical system initiates an automatic emergency call under certain circumstances, for example if an airbag deploys. The LED in the emergency call button ② blinks green. The emergency call will be made. It cannot be canceled.

The LED indicates the status of the system as follows:

– **Green** – the emergency call function is available.
– **Red** – there is a malfunction in the emergency call function. Contact an authorized Audi dealer or authorized Audi Service Facility. An emergency call cannot be made.
– **Off** – the emergency call function is not available, perhaps because no network is available. ▶

Tips

If the emergency call is canceled due to a poor connection, then the system automatically tries to connect again.

Messages

Applies to: vehicles with emergency call function

Emergency call function: malfunction! Restricted functionality. Please contact Service

If this indicator light turns on and this message appears, the emergency call function is restricted. For example, you cannot call the emergency call center, but data may still be transmitted under certain circumstances. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Emergency call function: malfunction! Function unavailable. Please contact Service

If this indicator light turns on and this message appears, you cannot make an emergency call. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Online roadside assistance

Description

Applies to: vehicles with online roadside assistance

An online roadside assistance call [1)] is a combination of data transmission and a phone call. The data transmission from your vehicle forwards important information to the Audi service center, such as the vehicle and position data.

Calling online roadside assistance

Applies to: vehicles with online roadside assistance

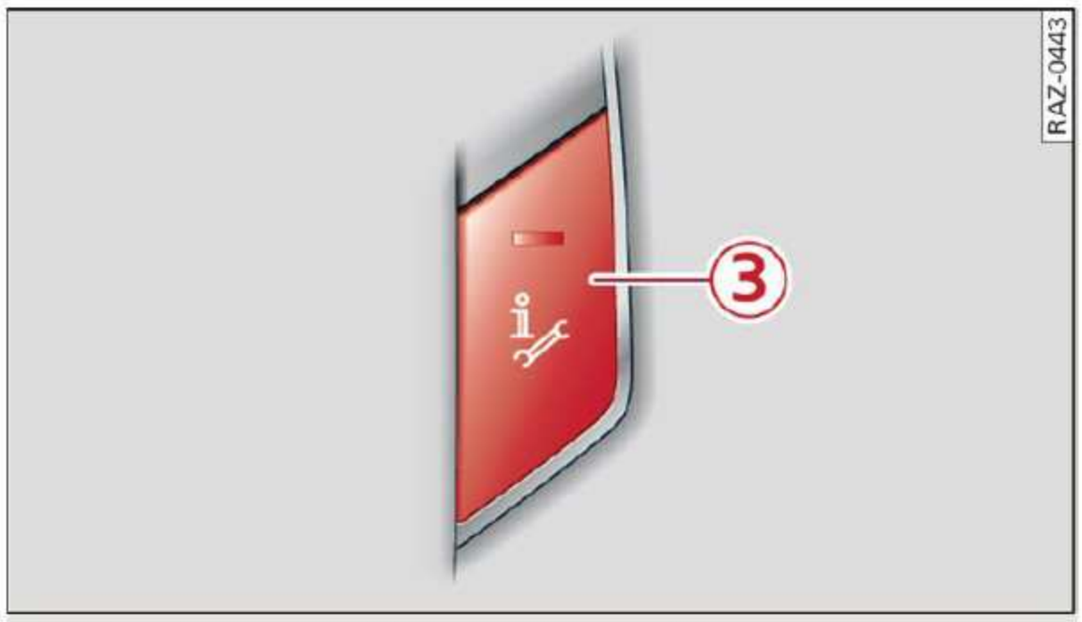


Fig. 182 Front headliner: online roadside assistance button

Calling online roadside assistance

- Press the button (3). The LED in the button turns red. The online roadside assistance call will be made.
- If you press the button (3) by mistake, then press it again. Or
- Select and confirm **Cancel** or **End call** in the Infotainment system.

Audi incident assistance

A minor accident may be detected by the vehicle electrical system. You have the option of selecting between **Call online roadside assistance** or **Make emergency call**.

- Select one of the options and confirm it by pressing the control knob.

Tips

If the roadside assistance call is canceled due to a poor connection, then the call must be made again.

1) The availability of the services offered depends on the country and may change in the future.

Navigation

Opening navigation

Applies to: vehicles with navigation system

The navigation system directs you to your destination, around traffic incidents, and on alternative routes, if desired.



Fig. 183 Diagram: Enter destination menu

▸ Press the NAV/MAP button.

The **Enter destination** menu is displayed after opening navigation. The following information can be displayed in the Infotainment system display:

① Input field for free text search 198
② Home address 200
③ Last destinations 199
④ Stored favorites 200

As soon as you select an entry from the list (depending on the vehicle equipment), the corresponding destination displays as a map preview* ⑤ ⇨ *fig. 183*.

If you have connected a mobile device to the MMI, your directory contacts will also be listed if they have navigation data assigned to them.

The **Favorites** ④ ⇨ *fig. 183* menu item as well as the directory contacts are only shown in the **Enter destination** menu if you have entered one or more characters using the input field.

Switching between destination entry and the map:

– Press the NAV/MAP button repeatedly until the map is displayed. **Or**: select the left control button > **Switch to map**.

WARNING

– The demands of traffic require your full attention. Always read the chapter ⇨ *page 145, Traffic safety information*.
– Obey all traffic laws when driving.
– The route calculated by the navigation system is a recommendation for reaching your destination. Obey traffic lights, stopping restrictions, one-way streets, lane change restrictions, etc.
– Adjust the volume of the audio system so that signals from outside the vehicle, such as police and fire sirens, can be heard easily at all times.

Note

If the driving directions conflict with traffic laws, obey the traffic laws.

Tips

– Snow and obstructions on the GPS antenna or interference caused by trees and large buildings can impair satellite reception and affect the system's ability to determine the vehicle position. Several deactivated or malfunctioning satellites can also interrupt GPS reception and affect the system's ability to determine the vehicle position.
– Because street names sometimes change, the names stored in the MMI may in rare cases differ from the actual street name.

Entering a destination

Free text search for destinations

Applies to: vehicles with navigation system

With the free text search, you can enter the navigation destination data all at once in any order using the MMI touch control pad or the letter/number speller (for example, 20 Main St., Los Angeles). Likewise, you can search for points of interest, contacts, previous destinations or favorites to navigate to the desired address.*

Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*. ▶

► Push the control knob up. The input field is displayed ① ⇨ *page 198, fig. 183*.

– Enter one or more search terms into the input field.
– If available, confirm the input suggestion* to complete the entry or a word suggestion*. See ⇨ *page 152, Letter/number speller*.
– Turn the control knob to the right to change the results list.
– Select and confirm a destination from the results list.

The route displays as an overview in the map. Route guidance is already active.

Narrowing the search area

All countries/states are selected at the factory for the free text search.

– Select: the right control button > **Country/state selection** in the input field ① ⇨ *page 198, fig. 183*.
– Select the country or state (●) that should be searched for in the free text search in order to narrow the number of results and increase the search speed. The selected entry in the country/state selection is stored. **Or**: select **All countries/states**.

Tips

– The MMI input suggestions depend on the last navigated destinations.
– Up to 50 entries can be stored in the last destinations list.
– Additional information on free text searches can be found under ⇨ *page 154*.

Loading previous destinations

Applies to: vehicles with navigation system

Your last destinations are automatically stored and can be loaded directly as a destination.

Requirement: a destination was already navigated to.

► Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.

Your last destination is listed directly in the **Enter destination** menu under the home address and identified with the symbol ③ ⇨ *page 198, fig. 183*.

– Select and confirm one of the last destinations from the list.

Deleting previous destinations

– Select one of the last destinations from the list.
– Select: right control button > **Delete destination** > **Delete this last destination** or **Delete all last destinations**.

The selected destination or all last destinations is/are deleted and no longer displayed in the **Enter destination** menu.

Entering an address

Applies to: vehicles with navigation system

As an alternative to free text search, you can also enter an address in stages.

► Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.
► Select: left control button > **Enter address**.

– **Entering a destination using a country/state**: select and confirm **Country/state**. Select and confirm a country or state directly from the list. **Or**: search for a country or state using the input field.
– **Entering a destination using the City or ZIP code**: select and confirm **City/ZIP code**. Enter a city or a ZIP code. **Or**: select and confirm a city from the list.
– Select and confirm additional details about the destination such as **Street**, **House number** or **Downtown**.
– **Destination entry using a street intersection***: Requirement: you must enter a street. Select and confirm **Intersection**. Select and confirm a street directly from the list. **Or**: search for a street using the input field.
– Select and confirm **Start route guidance**.

Selecting a destination on the map

Applies to: vehicles with navigation system and MMI touch

A point on the map can be used as the destination.

– **Adjusting the scale**: turn the control knob to the left or right.
– **Activating the crosshairs**: press the control knob. The crosshairs are shown on the map.
– **Moving the crosshairs**: move the crosshairs to the destination using the MMI touch control pad* ⇨ *page 149*.
– **Setting as destination**: press the control knob when the crosshairs are shown. Select and confirm **Start route guidance**.
– **Hiding the crosshairs**: press the BACK button.

Additional information about the location of the crosshairs: when you select map content using the crosshairs, a display of available information appears (such as street name, address or points of interest) ⑫ ⇨ *page 207, fig. 191*.

Setting a home address/favorite as the destination

Applies to: vehicles with navigation system

You can quickly and easily start route guidance to your home address using the home address function. Favorites allow easier access to frequently used destinations.

► Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.

Setting a home address as the destination

Requirement: a home address must be stored ⇨ *page 205*.

Your **Home address** is shown directly in the **Enter destination** menu ② ⇨ *page 198, fig. 183*.

– Select: **Home address**.

Setting a favorite as the destination

Requirement: a favorite must be stored as a destination ⇨ *page 206*.

– Enter at least the first three letters of the desired favorite in the free text search input field.

The favorites found are shown in the Infotainment system display ④ ⇨ *page 198, fig. 183*.
– Select and confirm the desired entry.

Tips

– Additional settings for the home address can be found under ⇨ *page 205*.
– Additional settings for the favorites can be found under ⇨ *page 206*.

Transferring a destination from the directory

Applies to: vehicles with navigation system

You can navigate directly to destinations in the directory.



Fig. 184 Possible directory/contacts

Requirement: an address with navigation data or a navigation destination must already be assigned to a contact ⇨ *page 206*.

► Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.
► Select: left control button > **Directory** > *a contact*.

The directory/contacts are shown in alphabetical order and are marked with symbols to indicate the storage location:

① Business address
② Private address
③ Business destination
④ Private destination

– Select and confirm an address or a destination. When you have selected a destination, the route guidance can be started directly.
– Check the address input again when selecting an address. ▶

– Then select and confirm **Start route guidance**.

Additional directory functions in the navigation system can be found under ⇨ *page 206*.

Tips

– Addresses that have been imported from your mobile device into the MMI can also be used as a destination.
– If a contact is grayed out in the directory, this contact has neither a destination nor an address assigned to it.

Point of interest search

Applies to: vehicles with navigation system

▸ Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.
▸ Select: left control button > **POIs**.

– **Changing the search area**: select and confirm **Search area** > *a search area from the list*.

The following search categories are available:

Nearby: points of interest can be selected from different categories. The points of interest are listed starting from the immediate vicinity of the vehicle up to a radius of approximately 124 miles (200 km).

Along the route: points of interest along the route can only be selected during active route guidance. The points of interest are located directly along or in the immediate vicinity of the calculated route. The points of interest can likewise be selected from various categories. For example, you can search for a hotel or parking lot at the destination.

Near destination/Near stopover: points of interest near a destination or a stopover can only be selected during active route guidance. The points of interest can likewise be selected from various categories. For example, you can search for a hotel or parking lot at the destination.

In a new city: select a country/state or search in a new city. Enter the name of the desired city. Points of interest can be selected from various categories. This function allows you to search for points of interest in any city regardless of the active route guidance or the vehicle position.

– **Searching for a point of interest name in the selected search area**: select **Find entry** > **Enter point of interest**. Enter the name of the point of interest.
– **Searching for a point of interest in a specific category**: select **Select category**. Select and confirm a category such as **Restaurants**.

Tips

– Distances to points of interest are displayed as a straight-line distance from your current location. The actual distance from your current location to the point of interest is updated automatically. The list of points of interest that were found is not resorted when this happens.
– There may be entries in the list that cannot be displayed completely due to their length. Select the corresponding entry from the list. Select: right control button > Show destination details. Detailed information for the selected entry in the list is then displayed.

Online point of interest search (online search)

Applies to: vehicles with a navigation system and Audi connect Infotainment

You can search for points of interest on the Internet.

Requirement: the requirements for Audi connect Infotainment must be met ⇨ *page 186*.

▸ Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.
▸ Select: left control button > **Online search**. The search area last set is displayed in the input field.

– **Changing the search area**: select: right control button > **Select search area**.
– **Searching for online destinations in the selected search area**: enter a new city/state if necessary. Enter the search term, such as hotel. Press the control knob. Select and confirm an online destination from the list. ▶

– **Searching for online destinations in a specific category**: select and confirm **Select category**. Select and confirm a category such as **Restaurants**.

Find which search areas are available under ⇨ *page 201, Point of interest search*.

You can search for online destinations using the voice recognition system ⇨ *table on page 167*.

Tips

Always read the chapter ⇨ *page 186, Audi connect*.

Accessing destinations from myAudi account

Applies to: vehicles with a navigation system and Audi connect Infotainment

Import individual destinations from your myAudi account into the MMI.

Requirement:

The requirements for Audi connect Infotainment must be met ⇨ *page 186*.

You must have a registered myAudi account at www.audiusa.com/myaudi. You must have a vehicle assigned to your myAudi account and you must have stored one or more destinations.

- ▸ Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.
- ▸ Select: left control button > **myAudi contacts**.
- ▸ If necessary, enter your myAudi user data or your myAudi PIN ⇨ *page 187*. The contacts stored in myAudi are displayed.

– Select and confirm a contact.
– Select and confirm a private or business destination.
– Select and confirm **Start route guidance**.

Tips

– You only need to enter the myAudi user data one time.
– You can receive your myAudi PIN if you have set up a myAudi account.
– For additional information, visit www.audiusa.com.

Entering a destination using geo coordinates

Applies to: vehicles with navigation system

- ▸ Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.
- ▸ Select: left control button > **Geographical coordinates**.

– Select **Latitude/Longitude**.
– Press the control knob to set the individual values.
– Turn the control knob to the left/right to change the selected value.
– Select and confirm **Start route guidance**.

Adding a stopover

Applies to: vehicles with navigation system

You can enter an additional destination when route guidance is active.



Fig. 185 Example: active route guidance with stopover

Requirement: route guidance must already be active.

- ▸ Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.

Entering a destination as a stopover

– Enter a destination in the input line ⇨ *page 198*.
– Select and confirm a destination from the results list.
– Select and confirm **Add as stopover**. ▶

Deleting a stopover

– Push the control knob up. Free text search and active route guidance are displayed. **Or**: Turn the control knob to the left until the active route guidance is shown.
– Select and confirm **Delete stopover** ② ⇨ *fig. 185*.
– The stopover is deleted.

Cancel route guidance

Applies to: vehicles with navigation system

Requirement: route guidance must be active.

► Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.
► Turn the control knob to the left until the active route guidance is shown ⇨ *page 202, fig. 185*.
► Select and confirm **Delete destination** ① ⇨ *page 202, fig. 185*. The destination is deleted. **Or**: select the right control button > **Cancel route guidance**.

Additional options when entering a destination

Applies to: vehicles with navigation system

► Press the right control button.

Depending on the selected function, the following options may be available when entering a destination:

Cancel route guidance: Requirement: route guidance must be active. Route guidance is canceled. For additional information, see ⇨ *page 203*.

Country information: you can display the applicable urban and rural speed limits for any country/state. If this function is activated, the information will be automatically shown to you in the route information ⑦ ⇨ *page 207, fig. 190* when the speed limit is exceeded ⇨ *page 210*.

Country/state selection: see ⇨ *page 199, Narrowing the search area*.

Route criteria: see ⇨ *page 207, Route criteria*.

Show location on map: Requirement: you must have selected a destination from the results list. The destination entered is displayed on the map.

Parking at this location*: Requirement: you must have selected a destination from the results list. All parking options near the selected location are displayed in the Infotainment system.

Delete: the selected entry is deleted. You can delete individual entries or all entries (for example, favorites or last destinations).

Audi connect at this location*: Requirement: you must have selected a destination from the results list. Allows you to search for items in the vicinity of the selected location, such as **Travel information**.

Online traffic data*: the online traffic information ⇨ *page 213* can be switched on or off.

Add destination to contact: see ⇨ *page 206*.

Store as favorite: see ⇨ *page 206*.

Voice guidance: see ⇨ *page 207*.

Navigation settings: see ⇨ *page 206*.

Tips

Information on online traffic data* can also be found online at www.audiusa.com.

Personal route assistance

Applies to: vehicles with navigation system and personal route assistance

Your MMI can learn the routes that you drive frequently (such as your daily commute to work and back) and suggest route guidance based on the current vehicle position.



Fig. 186 Example: display of personal routes in the "Enter destination" menu

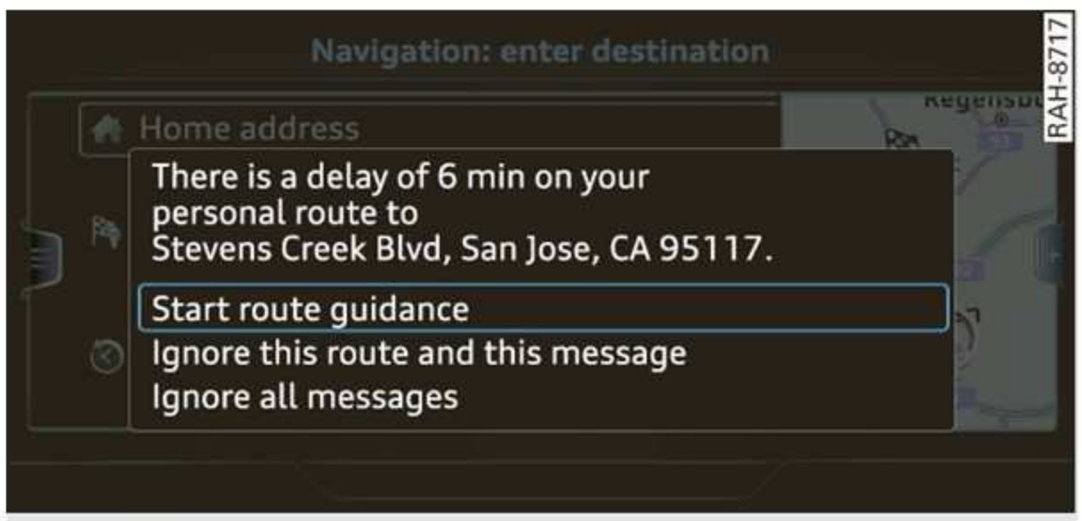


Fig. 187 Information on personal route

- ▸ Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.
- ▸ Select: right control button > **Navigation settings** > **Personal route assistance**.

When the function is switched on ☑, the MMI records the frequently-driven routes regardless of whether a destination was entered and reached or not.

As long as route guidance is not active, your personal routes are listed in the **Enter destination** menu under the home address and indicated with the symbol ① ⇨ *fig. 186*. When personal route assistance is switched on, this symbol is displayed in the Navigation menu and in the Infotainment system display status line at the same time.

The distance to the destination and the calculated arrival time are also displayed for your personal routes. Without starting route guidance, your MMI monitors the traffic conditions for your personal routes and shows possible traffic incidents for the possible routes to be driven in the Infotainment system display ② ⇨ *fig. 186*.

A message will be displayed if there is a large traffic incident (more than 12 minute delay) regardless of which menu is selected ⇨ *fig. 187*. Select and confirm one of the following options:

- **Start route guidance**: the MMI starts the route guidance for the personal route displayed and searches for a faster route if available.
- **Ignore this route and this message**: the displayed destination with all applicable personal routes is no longer factored into the current trip. No more messages are shown for the displayed destination. The displayed destination with all applicable personal routes will be factored into the trip again only after stopping the vehicle and switching the ignition on again.
- **Ignore all messages**: all personal routes are no longer factored into the current trip. No more messages are displayed. Messages for personal routes when there is increased traffic will appear again after the vehicle is stopped and the ignition is switched on again.

As soon as you switch off personal route assistance, the symbol in the status line turns off and your trips are no longer recorded. Trips that were already stored remain stored.

Deleting personal routes:

- Select the desired personal route in the **Enter destination** menu ⇨ *fig. 186*.
- Select: right control button > **Delete destination**.

Deleting all personal routes:

- Select: MENU button > **Settings** > left control button > **MMI settings** > **Factory settings**.
- Select: **Navigation and online memory** > **Restore factory settings** ⇨ *page 241*. ▶

Tips

- Personal routes are learned based on the vehicle position. The route is prioritized according to how frequently you drive to a destination.
- A maximum of three personal routes are displayed in the **Enter destination** menu. Based on the current vehicle position, the traffic situation for the route that is most likely to be driven out of the three routes will always be monitored.
- Please note that personal routes that have already been stored will remain stored after the ignition is switched off and they must be deleted manually.

Alternative routes

Applies to: vehicles with navigation system



Fig. 188 Diagram: display of alternative routes in the overview map

Requirement: a destination must be entered and the route guidance must be started.

- ▸ Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.
- ▸ Select: right control button > **Navigation settings** > **Show alternative routes**.

Three routes are displayed in the overview map after you enter a destination.

Up to three route suggestions and their properties are displayed on the overview map when the function is switched on ☑ ⇨ *fig. 188*.

If available, the following information will appear on the route suggestions:

- Route type (fast ①, fast alternative ②, economic route ③)
- Distance to the destination and the calculated arrival time
- Traffic congestion along the route including time delays

The route that was calculated according to the route criteria you selected is shown on the overview map . The special properties of the route are also displayed ④ ⇨ *fig. 188* and given as a spoken message.

Using the control knob, you can select the possible routing for the alternative routes and show them on map Select and confirm the desired route that you would like to use for route guidance.

Additional settings

Home address

Applies to: vehicles with navigation system

- ▸ Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.

Storing a home address

- Select and confirm **Home address** ② ⇨ *page 198, fig. 183*. After opening the home address for the first time, you will be asked to create a home address.
- Select and confirm **Create now**.
- Enter a destination or select a destination from the list.

Editing the home address

- Select the **Home address** ② ⇨ *page 198, fig. 183*.
- Select: right control button > **Edit home address**.
- Select and confirm a new destination as the home address.

The selected destination is stored as the new home address.

Favorites

Applies to: vehicles with navigation system

► Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.

– **Storing a destination as a favorite**: search for the desired destination using the input field. **Or**: select a destination from the list. Select: right control button > **Store as favorite**.
– **Renaming a favorite**: select the left control button > **Favorites** > *a favorite from the list* > right control button > **Rename favorite**.
– **Move favorite**: select *a favorite from the list* > right control button > **Move favorite**. Select and confirm the location of the selected favorite.
– **Deleting a favorite**: select *a favorite from the list* > right control button > **Delete favorite** > **Delete this favorite** or **Delete all favorites**.

Directory contacts

Applies to: vehicles with navigation system

Two addresses (private/business) can be assigned as destinations for each contact in the directory.

► Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.

Storing a destination as a contact in the directory

Requirement: a mobile device must be connected to the MMI ⇨ *page 171*.

– Select: *a destination* > right control button > **Add destination to contact**.
– Enter the first letters of the desired contact in the free text search input field ⇨ *page 198, fig. 183* and then select a contact from the list.
– Select and confirm **Add business destination** or **Add private destination**.

Navigation settings

Applies to: vehicles with navigation system

► Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.
► Select: right control button > **Navigation settings**.

Depending on the selected function, the following settings can be selected:

Show alternative routes

Up to three suggested routes are shown on the map when this function is switched on ☑ ⇨ *page 205*.

Low fuel warning

A message is displayed if the fuel gauge goes below the reserve marking when this function is switched on ☑. Confirming this message displays a list of gas stations in the area. When a gas station is selected, route guidance from the current vehicle position is calculated.

Trailer mode*

Trailer mode is switched off at the factory.

When the function is switched on ☑, the maximum permitted speed for vehicles with trailers is incorporated into the route guidance and the calculated arrival time is adjusted accordingly. Trailer mode is displayed using symbols in the side menu on the map.

Personal route assistance*

Personal route assistance is switched off at the factory.

Your trips are recorded and destinations are suggested by the MMI when this function is switched on ☑ ⇨ *page 204*.

The personal route assistance is indicated by the symbol in the status line of the Infotainment system display.

Notification when nearby*

The notification when nearby is switched off at the factory. ▶

The MMI notifies you when you are approaching selected points of interest when this function is switched on ☑. You can also have a **Notification tone**.

Presentation mode

The **Presentation mode** helps you to effectively plan a trip and follow the planned route without moving the vehicle. You can use **Select starting point** when you would like to calculate a route starting from a location other than the vehicle position, for example. Start **Presentation mode** to simulate route guidance.

Route criteria

Applies to: vehicles with navigation system

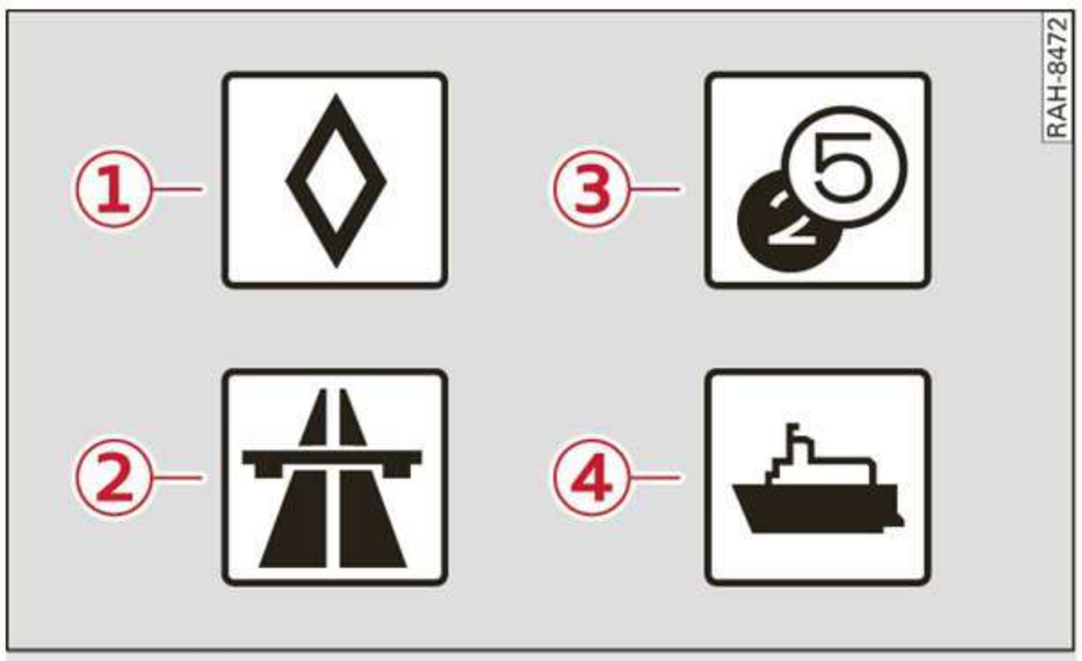


Fig. 189 Possible route criteria

- ▸ Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.
- ▸ Select: right control button > **Route criteria**.

① **HOV/carpool lanes** [1]: with the **Avoid** function, HOV lanes are excluded when calculating routes. With **Allow**, the MMI will route you through HOV lanes and show them.

②**Highways** / ③**Toll roads**/ ④**Ferries**: if the navigation system should not include highways, toll roads or ferries - if possible - when calculating routes, you can select the **Avoid** function.

Voice guidance

Applies to: vehicles with navigation system

- ▸ Press the NAV/MAP button repeatedly until the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.
- ▸ Select: right control button > **Voice guidance**.

Voice guidance: voice guidance can be **Complete** or **Shortened**. With the **Traffic** function, voice guidance prompts are only given when there are traffic incidents on your route. When **Off** is selected, no voice guidance is given.

Voice guidance during phone call: voice guidance during a phone call can be switched on or off.

Entertainment fader: see ⇨ *page 245*.

Voice guidance volume: you can adjust the volume during voice guidance using the On/Off knob ⇨ *page 145* You can also find additional information under ⇨ *page 245*.

Map

Map operation

Applies to: vehicles with navigation system



Fig. 190 Example: 3D map with the crosshairs switched off



Fig. 191 Example: standard map with the crosshairs switched on

[1] High occupancy vehicle

► Press the NAV/MAP button repeatedly until the map is displayed ⇨ *fig. 190*.

Zooming in/out on the map

– Turn the control knob to the left or to the right. Alternatively, you can also zoom in/out on the map using the MMI touch control pad* ⇨ *page 150*, if the crosshairs are switched on. **Or**: turn the left thumbwheel on the multifunction steering wheel* ⇨ *page 16*.

Turning the crosshairs on/off

– **Switching the crosshairs on**: press the control knob in the map view ⇨ *fig. 190*.
– **Switching the crosshairs off**: press the BACK button.

When the crosshairs are switched off ⇨ *fig. 190*:

① Direction. For additional information, see ⇨ *page 209*.

② The distance to the destination includes the calculated arrival time.

③ When the **trailer mode** function is switched on ☑, the corresponding symbol is displayed next to the arrival time.

④ Scale: turn the control knob to the left or right to decrease or increase the scale. When the **Automatic zoom** function is switched on ☑, an "A" for "Automatic" is displayed in the magnifying glass.

⑤ Altitude

⑥ Vehicle location

⑦ Route information: various information will be displayed during active route guidance (for example, the upcoming maneuver including calculated distance and street names). The display also provides traffic information or points of interest on the current route.

⑧ Road currently being driven on

When the crosshairs are switched on ⇨ *fig. 191*:

⑨ The crosshairs: move the crosshairs in the desired direction and set a point on the map using the MMI touch control pad* or the control knob. When the crosshairs are turned off, the road being currently driven on is shown.

⑩ Speed limit display[1)]: display of the maximum permitted speed on the expressways and highways.

⑪ Entertainment sliding menu*: see ⇨ *page 150*.

⑫ Additional information on the crosshairs position: if you move the crosshairs to a location on the map, available information for the current position is displayed. Tap briefly on the MMI touch control pad. **Or**: press the control knob. In the destination details, you can start route guidance to the displayed location. Select and confirm **Start route guidance**.

⑬ Map contents (points of interest, favorites). When there are multiple points of interest in the immediate vicinity, the symbols are shown stacked on the map.

⑭ Better route: if a better route is available for the current route guidance, it will be indicated on the map including the time that would be saved. More information can be found under ⇨ *page 213*.

Map functions

Applies to: vehicles with navigation system

► Press the NAV/MAP button repeatedly until the map is displayed ⇨ *page 207, fig. 190*.
► Press the left control button.

The following map functions can be selected:

Switch to destination input

The free text search in the **Enter destination** menu is displayed ⇨ *page 198, fig. 183*.

Traffic messages

Current traffic information is displayed in the Infotainment system display. You can also find additional information under ⇨ *page 212*. ▶

1) Only applies to vehicles without camera-based speed limit display.

Route list

The route list can only be displayed when route guidance is active and contains information regarding the route, the names of the streets and the length of the route sections. When traveling on highways, possible parking lots and rest areas are shown, which you can select as a stopover.

POIs along the route

Requirement: route guidance must be active.

Searching for points of interest along your current route For additional information, see ⇨ *page 201*.

Additional options on the map

Applies to: vehicles with navigation system

- ▸ Press the NAV/MAP button repeatedly until the map is displayed ⇨ *page 207, fig. 190*.
- ▸ Press the right control button.

Depending on the function selected, the following options can also be selected under the **Map** menu:

Cancel route guidance: see ⇨ *page 203*.

Map settings: see ⇨ *page 209*.

Route criteria: see ⇨ *page 207*.

Voice guidance: see ⇨ *page 207*.

Navigation settings: see ⇨ *page 206*.

Show alternative routes: see ⇨ *page 205*.

Parking along the route*: parking options near the vehicle are displayed.

Save current position: you can save your current vehicle position as a favorite ⇨ *page 206* or save it as a contact in the directory ⇨ *page 206*.

Audi connect at this location*: allows you to search for **Travel information** at the entered location (events, weather at the destination, etc.).

Online traffic data*: you can switch the online traffic data on or off (☑).

Country information: see ⇨ *page 203*.

Avoid route*: when route guidance is active, the calculated route will avoid the area you have specified (maximum: 12 mi (20 km)), if possible. The navigation system calculates an alternative route. The route to be avoided that you have entered applies only to the current route and must be set again, if needed. The areas you have selected to avoid will appear with red and white shading on the map.

Move route*: move your finger over the MMI touch control pad* or use the control knob to adjust the route on the overview map.

Map settings

Applies to: vehicles with navigation system

- ▸ Press the NAV/MAP button repeatedly until the map is displayed.
- ▸ Select: right control button > **Map settings**.

Depending on the selected function, the following settings can be selected:

Map colors

Day/Night: the map is displayed with a light/dark background.

Automatic: the map display adapts to the lighting conditions (for example, changing from **Day** to **Night** when driving through a tunnel).

Map display

Standard: see ⇨ *page 207, fig. 191*.

Satellite map[1)]: see ⇨ *page 210, fig. 192*.

Map orientation

Destination map: the map indicates the destination and is oriented to the north.

2D heading-up map/2D north-up map: the current vehicle position is displayed. The map is oriented in the direction of travel or to the north.

3D heading-up map*: the current vehicle position is shown on a three-dimensional map and is ▶

1) AUDI AG provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.

aligned to the direction of travel. At a scale of 62 mi (100 km) and larger, the map orientation is to the north.

Overview map: the entire route from the vehicle position to the destination or the next stopover is displayed on the map. The map scale depends on the length of the route and adapts automatically. The map is oriented to the north.

Route information

The display of route information, such as the current street being driven on or points of interest along the current route ⇨ *page 207, fig. 190*, can be switched on/off or can be minimized on the display of upcoming maneuvers.

Automatic zoom

On: the map scale is adapted automatically depending on the type of road being traveled (expressway, highway, other roads) so that you always have an optimal overview of the road ahead. The scale will also be automatically adapted when there are upcoming maneuvers to provide a better detailed view.

Intersection: when route guidance is active, the map temporarily zooms in to a detailed scale when there are upcoming maneuvers so that you can see the street or turn better.

Off: the map scale you have chosen is maintained.

MMI map contents

You can switch the display of additional information on the map in the Infotainment system display on or off.

The weather forecast is displayed on a 3 mi (5 km) scale on the map.

Instrument cluster map contents

You can also set which map content displays in the instrument cluster ⇨ *page 160*.

Satellite map

Applies to: vehicles with a navigation system and Audi connect Infotainment

You can display the navigation map with satellite images.

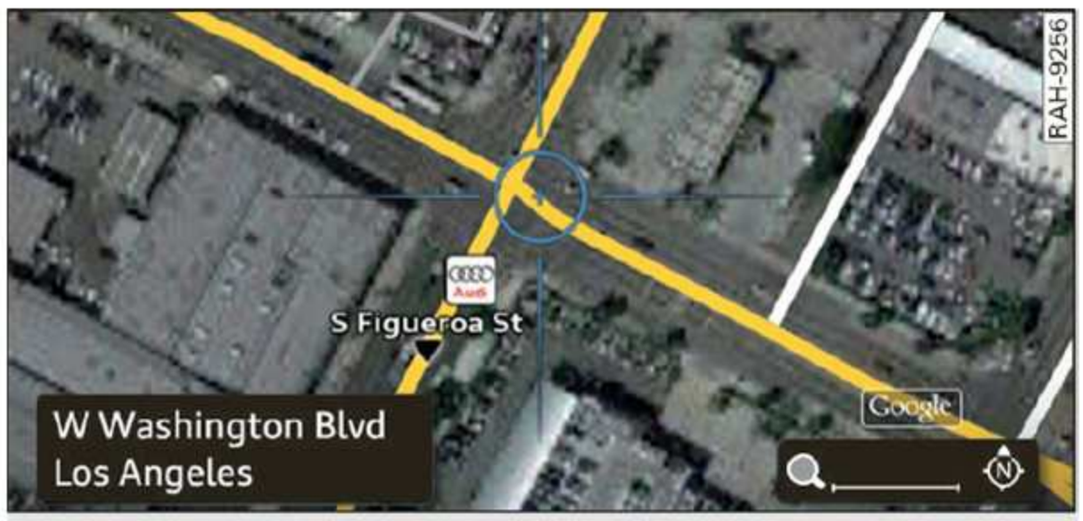


Fig. 192 Example: satellite map

Requirement: the requirements for Audi connect services must be met ⇨ *page 186*.

- Press the NAV/MAP button repeatedly until the map is displayed.
- Select: right control button > **Map settings** > **Map display** > **Satellite map**[1)].

The map display is based on data received from the Internet in the form of satellite images, which are then combined with the roadways from the **Standard** map view. There are two gigabytes of memory space in the MMI memory that can be used to temporarily store the map or navigation data that was received. This is roughly the amount required for the map/navigation data for a 2,485 mile (4,000 km) route. As long as the satellite images loaded for route guidance are stored, you can use them without having an active data connection.

Tips

– The stored satellite map data[1)] can be deleted under **Factory settings** > **Navigation and online memory** ⇨ *page 241*.
– The satellite map[1)] is updated regularly whenever the function is opened. The process may take several seconds.
– When the satellite map display is switched on [1)] with the 3D position map type, the ▶

[1)] AUDI AG provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.

MMI display automatically switches to the 2D map type when driving through tunnels.
– Also read the information in the chapter ⇨ *page 186, Audi connect*.
– For additional information, visit www.audiusa.com.

Map update

Introduction

Applies to: vehicles with navigation system

There are multiple options available for updating your map material:

– Map updates through the **online map update*** ⇨ *page 211*.
– Import map updates from the **SD card*** to your MMI. You can find additional information online at www.audiusa.com/myaudi.
– Map update at an authorized Audi dealer or authorized Audi Service Facility. This can result in additional costs.

Online map update

Applies to: vehicles with a navigation system and Audi connect Infotainment

Using the online map update, you can update the map material in your navigation system directly from your vehicle.



Fig. 193 Example: display of a new online map update



Fig. 194 Example: selection of a country package

Requirement: the requirements for Audi connect Infotainment services must be met ⇨ *page 186*.

You must have a myAudi account and have assigned your vehicle to it.

Using your vehicle position, the MMI identifies regions which you are frequently in. Based on this, the MMI suggests update packages for these regions, if they are available.

▸ Select and confirm (1) **Start download** ⇨ *fig. 193* if the message for a new map update appears in the Infotainment system display. **Or**:
▸ Select MENU button > **Settings** > left control button > **System maintenance** > **System update** > **Online update**.

A selection with the available update packages appears in the Infotainment system display ⇨ *fig. 194*.

Selecting the online map update

– Select an update package from the list (☑) (2) ⇨ *fig. 194*.
– Confirm your selection with the BACK button and go back to the selection.
– The number and amount of data for the selected update package are now displayed in the Infotainment system.

Starting the download

– Select and confirm **Start download**.
– Confirm the security prompt by selecting **Start download** again.

The update packages begin to download and the status of the download progress is shown in the Infotainment system display.

Installation of online map updates

The downloaded map material installs after you stop your vehicle. The new update packages install only after you switch off the ignition. After restarting the MMI, the Infotainment system display indicates if the updates installed successfully.

– Confirm the successful update with **OK**.

The new map material can now be used for navigation. ▶

Tips

– Always read the chapter ⇨ *page 186*.
– The amount of available online map updates in the vehicle is limited. To update more regions, use the map update via SD card at www.audiusa.com/myaudi.
– Always read the chapter ⇨ *page 186, Audi connect*.

Traffic information

Introduction

Applies to: vehicles with navigation system



Fig. 195 Example: traffic information overview

▸ Press the NAV/MAP button repeatedly until the map is displayed ⇨ *page 207, fig. 190*.
▸ Select: left control button > **Traffic messages**.

Depending on vehicle equipment, the following information may be shown in the traffic information overview ⇨ *fig. 195*:

① A message ① ⇨ *fig. 195* will appear if the MMI calculates a better route for the current route guidance. More information can be found under ⇨ *page 213*.

② When route guidance is active, traffic incidents along your route are displayed in the upper section of the list and are sorted by distance.

③ The traffic messages are sorted by street name. If there are multiple traffic messages for the same street, an arrow is displayed in front of the street name (▶). Select and confirm the corresponding line to display *all* of the traffic information.

④ The current selected traffic message is also shown as a map preview* in the Infotainment system display.

⑤ The status line in the Infotainment display also always indicates the reception of traffic information (TMC or ONLINE).

Showing traffic messages on the map: select: *one traffic message* > right control button > **Show on map**.

Displaying the next traffic message on the map: press the control knob.

Traffic information display on the map or map preview*

Color-coded markings along the route indicate the traffic flow:

Green: traffic is flowing freely.

Yellow: stop-and-go traffic.

Red: congestion.

Shaded markings indicate the length of the area with congestion.

Colored warning symbols: an impending traffic incident directly ahead on your route.

All traffic incidents will display in color when route guidance is inactive.

Grayed out warning symbols: traffic incidents that are not on your route.

Warning symbols with ⮌: avoided traffic incidents.

The display of colored markings, warning symbols, etc. can be set in the **Map content** menu ⇨ *page 210*.

Tips

Particularly critical traffic information, such as warnings about wrong-way drivers, is automatically displayed. To hide the traffic information, press the BACK button or the control knob.

Traffic information (TMC)

Applies to: vehicles with navigation system

Receiving traffic information through TMC is switched on at the factory. ▶

▸ Press the NAV/MAP button repeatedly until the map is displayed.
▸ Select: left control button > **Traffic messages**.

An overview of all the traffic messages is displayed in the Infotainment system.

– **Opening a detailed view of traffic information**: select and confirm the traffic information from the list.

Tips

– TMC traffic reports are not available in Canada. For more information, please contact Sirius Canada.
– Critical traffic information, such as warnings about wrong-way drivers, is automatically displayed. To hide the traffic information, press the BACK button or the control knob.

Better route

Applies to: vehicles with navigation system and better route

By receiving traffic information through TMC, your MMI calculates a better route if available and the possible time saved compared to the current route. You can decide which route you would like to use.

▸ Press the NAV/MAP button repeatedly until the map is displayed.

Requirement: route guidance must be active.

If your MMI has calculated a better route than the current route guidance, the message **A better route is available.** appears for several seconds along with the time that may be saved. A better route is indicated in the map view by the symbol  ⇨ *page 207, fig. 191*.

A message will also appear in the traffic information overview (1) ⇨ *page 212, fig. 195*.

Accept better route

– Press the right control button.
– Select and confirm the better route. **Or**: select and confirm **Details** to display details about the optimized route. You can zoom in or out on the map using the MMI touch control pad. Requirement: there must be more than one optimized route calculated. Press the control knob to switch to the next route in the detailed view. **Closing the detailed view**: press the BACK button.
– After you have selected a better route, the route will be recalculated.

Online traffic information

Applies to: vehicles with a navigation system and Audi connect Infotainment

The MMI can receive real-time online traffic information about congestion, accidents, road construction, and other incidents.

Requirement: the requirements for Audi connect Infotainment must be met ⇨ *page 186*.

▸ **Switching online traffic information on and off**: select NAV/MAP button > right control button > **Online traffic data** *on* (☑) or *off* (☐).
▸ Press the NAV/MAP button repeatedly until the map is displayed.
▸ Select: left control button > **Traffic messages**.

The online traffic information will also be displayed on the satellite map [1] ⇨ *page 210* or on the standard map ⇨ *page 207, fig. 190*.

If ONLINE **traffic information** cannot be received, then traffic information will automatically be received through TMC ⇨ *page 212*.

Tips

– Online traffic information is not available in Canada.
– Always read the chapter ⇨ *page 186, Audi connect*.
– Having the **Online traffic data** function switched on provides the most accurate reports of traffic situations as well as traffic forecasting. Your vehicle transmits and ▶

[1] AUDI AG provides access to services from third party providers. Permanent availability cannot be guaranteed, because that depends on the third party provider.

processes its anonymous, encrypted position information at regular intervals to the traffic data provider. If you do not want to use this, you can switch off the **online traffic information** function at any time.

– The **online traffic information** network is currently not available in all countries, and the coverage is not nationwide. For additional information, visit www.audiusa.com.

Troubleshooting

Applies to: vehicles with navigation system

Problem	Solution
Free text search: the desired destination cannot be found.	The destination might not be entered in the navigation database. **Or**: check the spelling of the term that was searched. Check if the desired country/state was selected for the free text search using the **Country/state selection** ⇨ *page 199* or the option **All countries/states**.

Radio

Opening the radio

The radio supports the FM, AM and SiriusXM (satellite radio) bands. Using the HD Radio receiver also allows you to receive radio stations on the FM and AM bands in digital format.*



Fig. 196 FM station list (HD Radio technology FM)



Fig. 197 SiriusXM station list

▸ Press the RADIO button.

After opening the radio, the last opened station list is displayed.

Selecting a station: select and confirm a station from the station list. FM/AM stations that can be received by digital radio are marked with the HD Radio technology symbol HD ⑤ ⇨ *fig. 196*. If reception quality declines, the radio automatically switches to the analog FM/AM station depending on availability. Digital HD Radio stations* may contain multiple additional stations*. The available additional stations* are listed under the radio station. If you lose reception, the additional stations* are muted since they can no longer be received.

Setting the frequency band: press the RADIO button repeatedly until the desired frequency band is set.

The following information is displayed in the station list ⇨ *fig. 196*/⇨ *fig. 197*:

① Presets

The station is stored as a preset. The symbol shows the stored location in the presets list (for example, 21).

② Radio text (shortened display)

If available, program information about the set station is displayed in all of the station lists.

③ Frequency

④ Station name

⑤ Station with **HD Radio technology** available HD

⑥ Channel number

If there is a loss of radio signal (SiriusXM*), the following system information is displayed in the station list:

NoSignal: the tuner is currently not receiving a satellite signal ⑦.

The system information turns off when the radio stations are received again.

Tips

– Contact the SiriusXM* provider if you would like to receive satellite programming.
– Buildings, tunnels, bridges, open areas, other vehicles or objects on the vehicle roof can affect reception.
– Satellite radio is not available in Alaska and Hawaii.

8W0012721BG

Radio functions

Free text search

Applies to: vehicles with free text search

Using the free text search, you can select the order that the search terms are entered in the input field. Search in all frequency bands for a station name or program type, such as **News**.



Fig. 198 Input field and results list for free text search

– **Opening the free text search**: when in a station list, keep turning the control knob to the left until the **free text search** input field is displayed.
– **Using the free text search**: see ⇨ *page 154, Free text search*.

You can also search for frequencies.

Stations from the presets ③ are displayed in the results list ① ⇨ *fig. 198*. The symbol ② indicates which station list you switched to based on the station selection.

Additional options

▸ Select: RADIO button > right control button.

The following options are available depending on the frequency band:

– **Sound settings**: see ⇨ *page 244*.
– **Store as favorite**: see ⇨ *page 218, Presets*.
– **Manage SiriusXM alerts**: see ⇨ *page 217, SiriusXM alerts*.
– **Receive alerts for artist/Receive alerts for track**: see ⇨ *page 217, SiriusXM alerts*.
– **Manual tuning**: the frequency bars are displayed. Select and confirm the desired frequency.
– **Seek**: the radio tunes to the previous or next receivable station.
– **Scan**: all stations are played for several seconds each.
– **Radio settings**: see ⇨ *page 218*.

Radio text

▸ Select: RADIO button > left control button > a frequency band (such as **FM**) > a station.
▸ Select: right control button > **Radio text**.

Information that accompanies the program (such as artist, composer, track) is displayed.

Browsing through radio text entries: turn the control knob to the left or right.

Requirement: a radio text entry must be displayed and the station must be broadcasting a phone number, a navigation destination or a text message number as Radio Text Plus information.

If a location, a phone number or a text message number is included with a radio text entry, the radio text will be shown with a colored border. You have the following options:

Call*/Start route guidance*/Write text message*:

– Select a radio text entry with Radio Text Plus information and press the control knob.
– Select and confirm **Call*/Start route guidance*/Write text message***. **Or**: press the BACK button to cancel.

Tips

The availability of radio text and Radio Text Plus depends on the radio station.

SiriusXM alerts

Applies to: vehicles with SiriusXM

You can display an overview of your favorite artists or tracks that are currently being played on a SiriusXM channel.



Fig. 199 SiriusXM alert notification

▸ Select: RADIO button > left control button > **SiriusXM**.

After you have stored a SiriusXM alert for your favorite tracks or artists, you can display an overview of your favorite tracks or artists currently being received in the **SiriusXM alerts** menu and play them immediately. You can also receive a *SiriusXM alert notification* (1) for these tracks or artists in the entertainment sliding menu ⇨ *fig. 199*.

Storing a SiriusXM alert

Requirement: your favorite track or artist must be playing on a SiriusXM channel.

– Select: right control button > **Receive alerts for track** or **Receive alerts for artist**.

Switching SiriusXM alert notifications on and off

– Select: right control button > **SiriusXM alert notifications**.

When the function is switched on ☑, a *SiriusXM alert notification* is displayed for several seconds in the entertainment sliding menu for the **Radio** and **Navigation** menus. (1) ⇨ *fig. 199* displayed.

Playing tracks/artists from Sirius XM alerts

Requirement: a SiriusXM alert must be stored for a track/artist and it must be currently playing on a SiriusXM channel.

– Select: left control button > **SiriusXM alerts** > *an entry from the list*. The selected track/artist is played.

Playing tracks/artists from the entertainment sliding menu

Requirement: the **SiriusXM alert notifications** function must be switched on. You must be in the **Radio** and **Navigation** menu. A *SiriusXM alert notification* is displayed in the entertainment sliding menu (1) ⇨ *fig. 199*.

– Push the control knob down.
– Select and confirm the desired track/artist.

Managing SiriusXM alerts

– Select: right control button > **Manage SiriusXM alerts**.
– **Switching SiriusXM alerts on/off**: when the function is switched on ☑, you are notified when this track or artist is being played on a SiriusXM channel.
– **Deleting Sirius XM alerts**: select *an entry from the list* > right control button > **Delete from alerts** > **Delete this entry** or **Delete all entries**.

View: additional station information



Fig. 200 Radio view: additional station information

Requirement: you must be tuned to a radio station. The **"Now Playing" screen** option must be switched on ⇨ *page 219*.

Symbols in the "Now Playing" screen ⇨ *fig. 200*:

(1) **Radio text availability** ▶

Radio text is available for the selected station. See ⇨ *page 216*.

② FM HD Radio technology

The station is received through FM HD Radio technology.

③ Screen view

Display **Cover art** or **Station logo**. See ⇨ *page 219*, **Preferred picture view***.

Displaying the station list:

Turn the control knob. **Or**: press the BACK button.

Radio menu

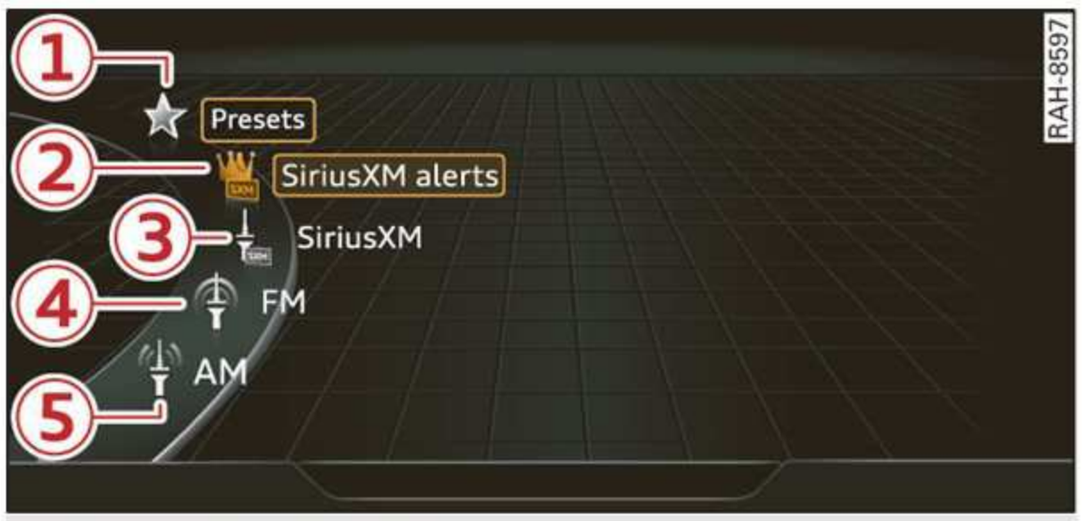


Fig. 201 Example: Radio menu

▸ Select: RADIO button > left control button.

Setting the frequency band: select and confirm the desired frequency band in the radio menu ⇨ *fig. 201*. **Or**: press the RADIO button repeatedly until the desired frequency band is set. Displays the station list.

① Presets

The presets list is displayed ⇨ *page 218, Presets*.

② SiriusXM alerts

Applies to: vehicles with SiriusXM alerts

After you have stored a SiriusXM alert for your favorite tracks or artists ⇨ *page 217*, an overview of your favorite tracks or artists currently being received on SiriusXM is displayed.

③ SiriusXM

Applies to: vehicles with SiriusXM alerts

The **SiriusXM*** channel list is displayed.

Additional frequency bands

Depending on the vehicle equipment, you may also be able to select additional frequency bands ④/⑤ ⇨ *fig. 201* in the selection menu.

Presets

You can store your favorite stations from every frequency band in the presets list.

▸ Select: the RADIO button > left control button > **Presets**.

Requirement: the presets list must be displayed.

– **Storing presets**: select and confirm *a free preset space*. Follow the system instructions.
– Select and confirm *a station from the list* if necessary.

Requirement: a station list must be displayed.

– **Storing presets**: select: *an entry from the list* > right control button > **Store as preset**. **Or**: press and hold the control knob for several seconds.

The shortcut keys are automatically assigned to the presets 1 to 8. You can select the stations directly using the preset buttons ⇨ *page 152*.

– **Displaying the presets list**: select: RADIO button > **Presets**.

Requirement: the presets list must be displayed.

– **Listening to presets**: select and confirm *a preset from the list*.
– **Move preset**: select *a preset from the list* > right control button > **Move preset**. **Or**: press and hold the control knob for several seconds. Select and confirm the location of the selected favorite.
– **Deleting presets**: select *a preset from the list* > right control button > **Delete preset** > **Delete this preset** or **Delete all presets**.

Additional settings

Radio settings

▸ Select: RADIO button > right control button > **Radio settings**. ▶

The following settings can be selected, depending on the band that is selected:

Station names (FM)

Variable: scrolling text transmitted by the FM stations is shown in the Infotainment system display.

Fixed: scrolling text transmitted by the FM stations is not shown in the Infotainment system display. Only the current section of the scrolling text is displayed.

FM/AM HD Radio*

You can switch HD Radio reception on or off.

Channel sorting (SiriusXM*)

You can set the channel sorting for SiriusXM station lists* by:

- **Channel number**: the channels are sorted in ascending order according to their channel number.
- **Channel name**: the channels are listed in alphabetical order.
- **First category, then channel number**: the channels are sorted by their category and then by their channel numbers.
- **First category, then channel name**: the channels are sorted by their category and then by their channel names.

Category filter (SiriusXM*)

The stations shown in the station list can be filtered by your personal preferences and by program type. The program categories that you can select depend on what is offered by your provider. Select the **All categories** option to deactivate all filter options and display all available stations in the satellite station list.

“Now Playing" screen

When the function is switched on ☑ and the stations or presets list is open, the display will switch to the **"Now Playing" screen** view after approximately five seconds ⇨ *page 217*. Depending on availability, information about the set station (such as station name, artist and station logo) may be displayed in this view.

Preferred picture view*

You can set your preferred screen view for the **"Now Playing" screen** ⇨ *page 217*.

- **Station logo**: the station logo is displayed, depending on availability.
- **Cover art**: the album cover is displayed if available.

Gracenote online database*

Requirement: the MMI must be connected to the Internet. The **Cover art** option must be selected ⇨ *page 219*, **Preferred picture view***.

When the function is switched on ☑, the album cover or genre cover for the song that is playing is loaded from the Gracenote online database, depending on availability.

Subscription status (SiriusXM)*

This option is available when your subscription is about to expire or has already expired. The expiration date for your license is displayed.

Call to SiriusXM*: the contact information for your satellite radio provider is displayed. To call your satellite radio provider using the MMI, press **Call to SiriusXM***.

Troubleshooting

Problem	Solution
A station with poor reception is no longer displayed in the station list once you switch to a different station.	Store the station as a preset in advance. Access the presets using the presets list ⇨ *page 218*.

Media

Introduction

There are various media drives and connections available in the MMI. For example, you can play audio/video* files from the Jukebox* or connect your mobile device to the Audi music interface* and operate it through the MMI.

Notes

General

Media and format restrictions: the MMI (including the SD card reader and the USB storage device connection*) was tested with a variety of products and media available in the market. However, there may be cases where individual devices or media and audio/video* files may not be recognized, may play only with restrictions or may not play at all.

Digital Rights Management: please note that the audio/video* files are subject to copyright protection.

The media drives do not play files that are protected by DRM and that are identified with the symbol 🔒.

Data security: never store important data on SD cards, the Jukebox*, CDs/DVDs or mobile devices. Audi AG is not responsible for damaged or lost files and media.

Loading times: the more files/folders/playlists that are on a storage medium, the longer it will take to load the audio/video* files. Audi recommends using storage media that only contain audio/video files*. To decrease the time it takes to load audio/video files*, create subfolders (for example, for the artist or album). The loading time will also increase when importing files.

Additional information: when playing, audio files are automatically displayed with any additional information that is stored (such as the artist, track and album cover). If this information is not available on the storage medium, the MMI will check the Gracenote metadata database. However, in some cases, the additional information may not be displayed.

Restricted functionality: reset the **Media settings** to the factory default settings if functionality is restricted ⇨ *page 241*.

If functionality is restricted, reset the **Jukebox*** to the factory default settings ⇨ *page 241*.

For information about the properties of supported media and file formats, see ⇨ *page 235*.

Note

Always follow the information found in ⇨ *in Wi-Fi settings on page 193*.

CD/DVD operation

CD/DVD and format restrictions: the functionality of individual storage media may be limited due to the variety of blank CDs/DVDs available and the various capacities. Audio CDs or video DVDs with copy protection, CDs/DVDs that do not conform to the standard, and multisession CDs may have limited playback or may not play at all. Audi recommends finalizing the recording process when creating multisession CDs. Multisession DVDs are not supported.

Using CDs/DVDs, the CD drive or the DVD drive: to ensure correct, high-quality playback and to prevent damage to the drive or disc reading errors, always store CDs/DVDs in a protective sleeve and do not expose them to direct sunlight. Do *not* use:

– Damaged, dirty or scratched CDs/DVDs
– Single CDs/DVDs with 3 in (8 cm) diameter
– CD/DVDs that are not round
– CDs/DVDs with labels
– Protective rings
– Cleaning CDs

Thermal protection switch: CD/DVD playback may be temporarily unavailable if outside temperatures are extremely hot or cold. A thermal protection switch is installed to protect the CD/DVD and the laser.

Laser devices: laser devices are divided into safety classes 1 to 4 in accordance with DIN IEC 76 ▶

(CO) 6/VDE 0837. The optical readers that are installed conform to safety class 1. Lasers in this class are very weak and well-shielded, so there is no danger if used correctly.

Media drives

SD card reader

The SD card reader is located in the glove compartment.

– **Inserting the SD card**: the angled corner of the SD card must face toward the right front. Slide the SD card into the card reader slot until the SD card clicks into place.
– **Automatic playback**: playback will start automatically if the inserted SD card contains supported audio/video files* ⇨ *page 235*.
– **Removing the SD card**: press briefly on the SD card.

The SD card reader is accessed and operated through the MMI ③ ⇨ *page 229, fig. 206*.

Note

Only use one-piece SD cards. If adapter cards (SD cards with more than one piece) are used, the card could fall out of the adapter when driving because of vibrations. Individual pieces could then become stuck in the drive and impair the functionality.

Tips

The SIM card reader then does not function.

DVD drive

Applies to: vehicles with a DVD drive

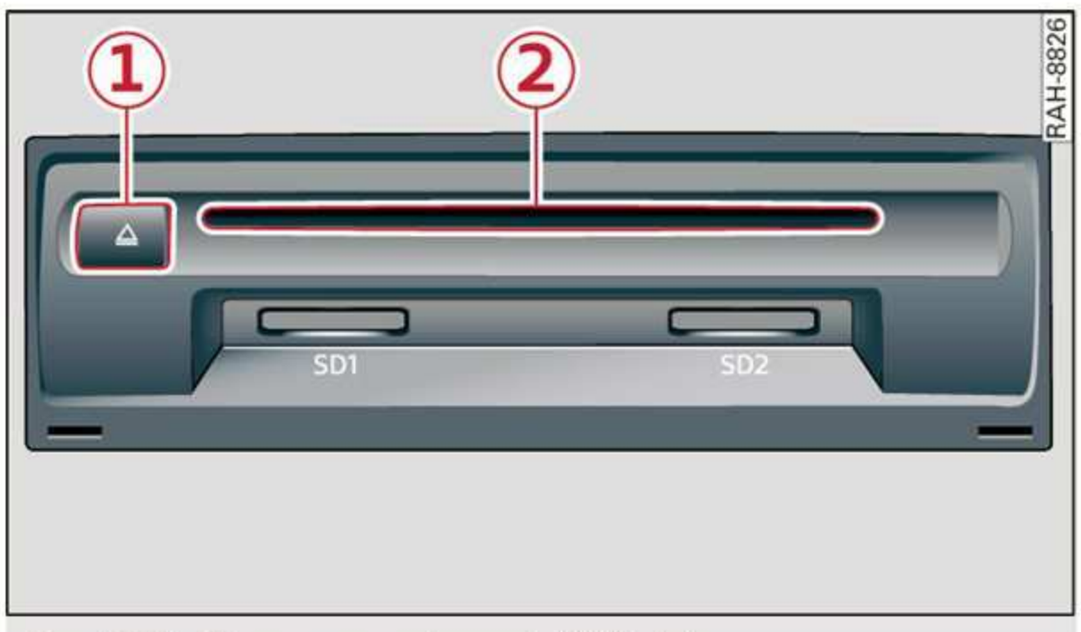


Fig. 202 Glove compartment: DVD drive

– **Loading a CD/DVD**: the CD/DVD is pulled in automatically. Slide the CD/DVD straight into the DVD slot ② with the label facing up ⇨ *fig. 202*.
– **Automatic playback**: playback will start automatically if the inserted CD/DVD contains supported audio/video* files ⇨ *page 235*.
– **Ejecting a CD/DVD**: press the button ① ⇨ *fig. 202*.

The CD/DVD is pulled in again automatically if it is not removed from the DVD slot within approximately ten seconds after ejecting it.

The DVD drive is accessed and operated through the MMI ② ⇨ *page 229, fig. 206*.

Note

– Never force a CD/DVD into the drive. The CD/DVD is pulled in automatically.
– Do not insert CDs/DVDs with labels into the drive. Labels can come loose from the CD/DVD and damage the drive.

Tips

– CDs/DVDs that contain audio files with a high data rate may not play.
– The SIM card reader then does not function.

CD drive

Applies to: vehicles with a CD drive

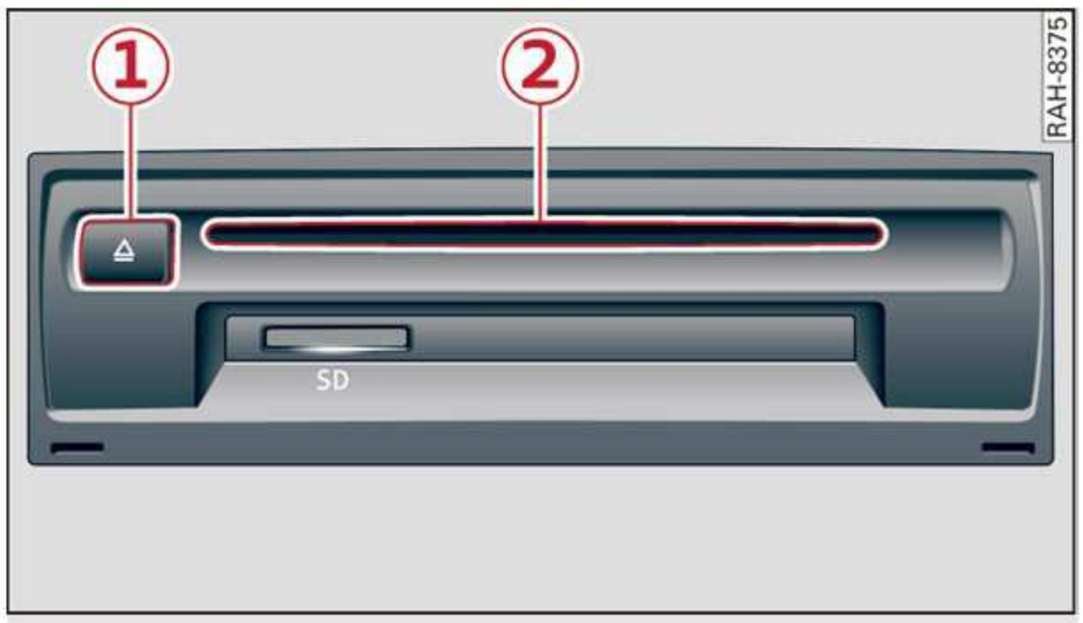


Fig. 203 Glove compartment: CD drive

– **Loading a CD**: the CD is pulled in automatically. Slide the CD straight into the CD slot ② ⇨ *fig. 203* with the label facing up.
– **Automatic playback**: playback will start automatically if the inserted CD contains supported audio files ⇨ *page 236, CD drive*.
– **Ejecting a CD**: press the button ① ⇨ *fig. 203*. ▶

The CD is pulled in again automatically if it is not removed from the slot within ten seconds of ejecting it.

The CD drive is accessed and operated through the MMI ⇨ *page 229*.

Note

– Never force a CD into the drive. The CD is pulled in automatically.
– Do not insert CDs with labels into the drive. Labels can come loose from the CD and damage the drive.

Tips

CD playback cannot be guaranteed with audio files that have a high data rate.

Jukebox

Applies to: vehicles with Jukebox

After you have filled the Jukebox with music and/or videos, for example from your SD card, you can play these files directly from the Jukebox. The Jukebox memory capacity is approximately 10 GB.

► Press the MEDIA button. Press the left control button until the sources overview ⇨ *page 229* is displayed. Select and confirm **Jukebox**.

Adding files to the Jukebox

– Press the MEDIA button. Press the left control button until the sources overview ⇨ *page 229* is displayed. Select one of the following sources to copy to the Jukebox: SD card*, CD-ROM*, DVD-ROM*, USB storage device*.

Requirement: the media center (for example, tracks, albums) must be open.

– **Selecting an entry**: select an entry from the media center. Select: right control button > **Copy to jukebox** > **This entry** or **Entire list**.

Requirement: the playlist must be open. See ⇨ *page 232*.

– **Selecting a track**: select the track that is currently playing. Select: right control button > **Copy to jukebox** > **This track** or **Entire album** or **This artist**.

Requirement: a video file must be playing.

– Select: right control button > **Copy to jukebox**.

The copying process begins. The status of the copying process is shown in the MMI.

– **Hiding the importing process**: select and confirm **Continue copying in background**. The importing process is hidden.
– **Canceling the importing process**: select and confirm **Cancel copying**. **Or**: remove the source that is being imported. Files already copied remain.

Requirement: the copying process must be active in the background.

– **Showing the copying process**: select: right control button > **Copying in progress**.

When importing, the audio files are automatically sorted into the media center categories based on the stored additional information ⇨ *page 230*. The copied video files are stored in the media center under the **Videos** category.

Playing the Jukebox

Requirement: the Jukebox must contain audio/video files ⇨ *page 222, Adding files to the Jukebox*.

The Jukebox is accessed and operated through the MMI (1) ⇨ *page 229, fig. 206*.

Displaying Jukebox memory capacity

Select: right control button > **Jukebox memory capacity**. Information about the Jukebox memory capacity and the number of stored tracks is displayed.

Deleting tracks from the Jukebox[1)]

Requirement: the Jukebox must contain audio/video files.

– **Deleting an entry**: select an entry from the Jukebox media center. Select: right control button > **Delete from jukebox** > **This entry** or **Entire list**. ▶

1) Not in the **Playback** view.

– The status of the deleting process is shown in the MMI. Jukebox playback stops during the deleting process and starts again automatically once the deletion is complete.

Note

Do not import audio/video files when the engine is turned off because this will drain the vehicle battery.

Tips

– Tracks from audio CDs cannot be imported to the Jukebox for legal reasons.
– Files that have already been imported are automatically recognized and cannot be copied to the Jukebox again.
– It is not possible to play audio/video* files in the CD/DVD* drive while importing them.
– The Jukebox does not provide an export function due to legal reasons.
– Files or tracks without additional stored information are listed as **Unknown**. Audi recommends adding additional information (such as ID3 tags) to audio files.
– Reset the **Jukebox** to the factory default settings when selling your vehicle ⇨ *page 241*.

Bluetooth audio player

Applies to: vehicles with Bluetooth audio player

With the Bluetooth audio player, you can play music wirelessly from your Bluetooth-capable device (such as a cell phone) through the MMI.

Requirement: the vehicle must be stationary and the ignition must be switched on. The Bluetooth settings will open on your mobile device during the connection setup. The Bluetooth function and visibility of the MMI ⇨ *page 243* and mobile device must be switched on. The **Bluetooth audio player** ⇨ *page 243* must be switched on in the MMI.

– **Connecting** a **Bluetooth player**: press the MEDIA button. Press the left control button until the sources overview is displayed. Select and confirm **Bluetooth audio player** (6) ⇨ *page 229, fig. 207*.
– If necessary, select and confirm: **Not connected** > **Connect Bluetooth audio player**. The Bluetooth device search starts. Follow the instructions in the MMI.
– Select and confirm the desired Bluetooth device from the list. The MMI generates a PIN for the connection.
– Select and confirm **Yes**.
– Enter the PIN for connecting on your Bluetooth device. **Or**: if the PIN is already displayed on your Bluetooth device, confirm it in the Bluetooth device and in the MMI. The time allowed for entering the PIN is limited to approximately 30 seconds.

The media is started and operated through the mobile device or the MMI, depending on the device being used.

Tips

– Check for any connection requests on your Bluetooth device.
– Multiple Bluetooth audio players can be connected to the MMI, but only one mobile device can be active.
– Bluetooth protocols AVRCP (1.0/1.3/1.4) and A2DP are supported.
– Note the volume setting on your Bluetooth device. Audi recommends setting your mobile device to the maximum volume when using it as a Bluetooth audio player.
– The supported media functions (such as shuffle) depend on the Bluetooth device being used.
– For more information on supported devices, visit www.audiusa.com/bluetooth or contact an authorized Audi dealer or authorized Audi Service Facility.

8W0012721BG

Wi-Fi audio player

Applies to: vehicles with Wi-Fi audio player

Using the Wi-Fi audio player media source on the MMI, you can connect and operate your Wi-Fi-capable media player (such as a smartphone) to wirelessly play music from your media player library. The media player is connected through the vehicle's Wi-Fi hotspot. A UPnP Server app or an integrated UPnP/DLNA server on your media player is required to access your media player library.

Requirement: the Wi-Fi function on your media player must be switched on. The **myAudi** app or a UPnP server app must be installed on your media player. **Or**: you must be using a media player with an integrated UPnP/DLNA server.

– **Connecting a media player**: press the MEDIA button. Press the left control button until the sources overview ⇨ *page 229* is displayed. Select and confirm **Wi-Fi audio player** (7) ⇨ *page 229, fig. 207*.
– If necessary, select and confirm **Wi-Fi turned off** > **Turn on Wi-Fi** to activate Wi-Fi in the MMI. Select **Wi-Fi settings**, if necessary. Select the same settings on the wireless media player that are used for the Wi-Fi hotspot.
– **Starting** the **Wi-Fi audio player**: start the **myAudi** app or a UPnP server app, or set media permissions on your media player.

Operating the media player: the media player is operated through the MMI.

– Press the left control button repeatedly until the **Folders** menu item appears. Select and confirm **Folders**.
– **Playing music from the media player**: select and confirm **Media center**.

Web radio: see ⇨ *page 225*.

WARNING

– As the driver, do not allow usage of the Wi-Fi hotspot to distract you from driving, as this could increase the risk of an accident.
– It is only safe to use tablets, laptops, mobile devices and other similar devices when the vehicle is stationary because, like all loose objects, they could be thrown around the inside of the vehicle in a crash and cause serious injuries. Store these types of devices securely while driving.
– Do not use any wireless devices on the front seats within range of the airbags while driving. Also read and follow the warnings in ⇨ *page 265, Front airbags*.

Note

Always follow the information found in ⇨ *in Wi-Fi settings on page 193*.

Tips

– Always read the chapter ⇨ *page 186, Audi connect*.
– Please note that a Wi-Fi connection does not automatically make it possible to use the Internet. For additional information, see ⇨ *page 186*.
– To avoid interruptions during playback, deactivate the power saving function on the media player or connect it to a charger.
– The loading times for the audio data depend on the media player used and the number of files that it contains.
– A maximum of 2,000 entries per directory are displayed in the MMI.
– Songs downloaded for offline use using music streaming services are stored on your mobile device (such as a smartphone) and may be DRM protected. The Wi-Fi audio player will not play DRM protected files.
– Contact an authorized Audi dealer or authorized Audi Service Facility for additional information on the Wi-Fi audio player.

Online media and Internet radio

Applies to: vehicles with Audi connect

You can playback and operate various online media services and Internet radio using the MMI.

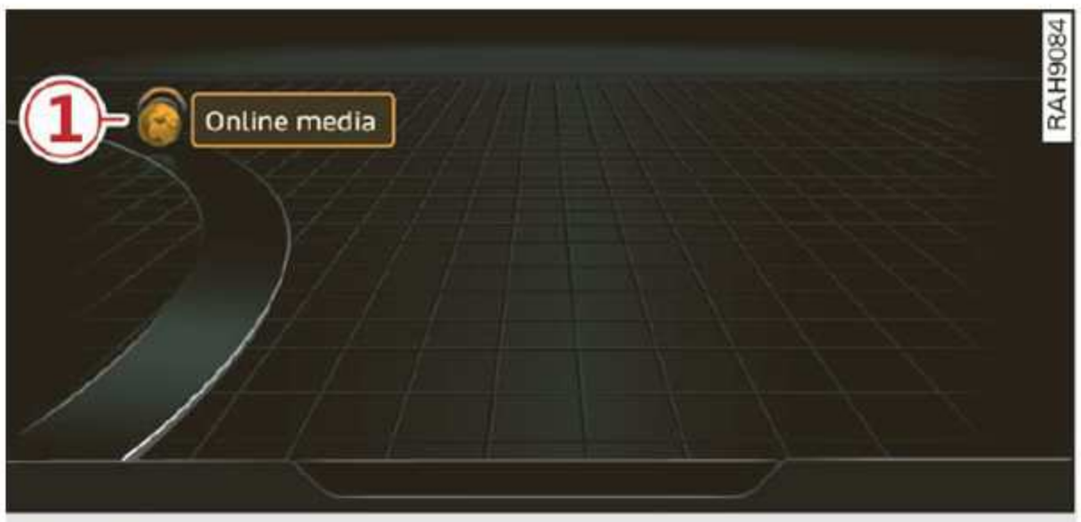


Fig. 204 Online media

► Press the MEDIA button. Press the left control button until the sources overview ⇨ *fig. 204* is displayed.

Applies to: online media and Internet radio usage

Requirement:

– the **myAudi** app must be installed and open on your mobile device.
– You must be logged in to your myAudi account in the **myAudi** app and you must have selected your vehicle.
– The Wi-Fi function on the mobile device and on the MMI must be switched on.
– If necessary, check in the connection manager ⇨ *page 241* if the mobile device you connected is selected under the **MMI connect app** (☑).
– The MMI must be connected to the network.
– The symbol for the **Online media** source ① ⇨ *fig. 204* is shown in the MMI.

Applies to: online media usage

Additional requirement:

– A supported online media service must be available in the country where the vehicle is being operated.
– You must have an account with a supported online media service.
– Depending on the online media service, you may need to install and open an app on your mobile device.

Starting Online media

– Press the MEDIA button. Press the left control button until the sources overview ⇨ *page 229* is displayed.
– Select and confirm an online media service.

Starting Internet radio

– Press the MEDIA button. Press the left control button until the sources overview ⇨ *page 229* is displayed.
– Select and confirm **Internet radio**. The Internet radio browser or the last station that was playing is shown.
– **Selecting the station**: if necessary, select and confirm a category in the Internet radio **Browser** > *a station*.

Online media and Internet radio: additional options

– Press the right control button.

The following options may be available, depending on the information shown (such as the station/track that is currently playing):

– **Sound settings**: see ⇨ *page 244*.
– **Wi-Fi settings**: see ⇨ *page 193, Wi-Fi settings*.
– **Connection manager**: see ⇨ *page 241*.
– Additional options may be available, depending on the active online media service or Internet radio.

⚠ WARNING

– It is only safe to use tablets, laptops, mobile devices and other similar devices when the vehicle is stationary because, like all loose objects, they could be thrown around the inside of the vehicle in a crash and cause serious injuries. Store these types of devices securely while driving.
– Do not use any wireless devices on the front seats within range of the airbags while driving. Also read and follow the warnings in ⇨ *page 265, Front airbags*.

! Note

– Always follow the information found in ⇨ ! *in Wi-Fi settings on page 193*.
– There generally are additional costs when using an online media service account, especially when it is used internationally. ▶

Tips

- Depending on the Internet connection and network traffic, the connection may disconnected when online media sources are playing.
- **Online media** and **Internet radio** usage depends on the service availability of the third party provider.
- Audi AG simply makes the access to online media services possible through the MMI and does not take any responsibility for the contents of the online media services.
- Always read the chapter ⇨ *page 186, Audi connect*.
- Depending on the mobile device being used, there may be interruptions during media playback and when using the **myAudi** app. To prevent interruptions when using a mobile device, do not lock the screen on your mobile device and keep the **myAudi** app in the foreground.
- Contact an authorized Audi dealer or authorized Audi Service Facility for additional information about online media.

Multimedia connections

USB adapter for Audi music interface or USB charging port

Depending on the vehicle equipment, you can connect your mobile devices (such as a smartphone or MP3 player) to the Audi music interface or a USB charging port using a special USB adapter.

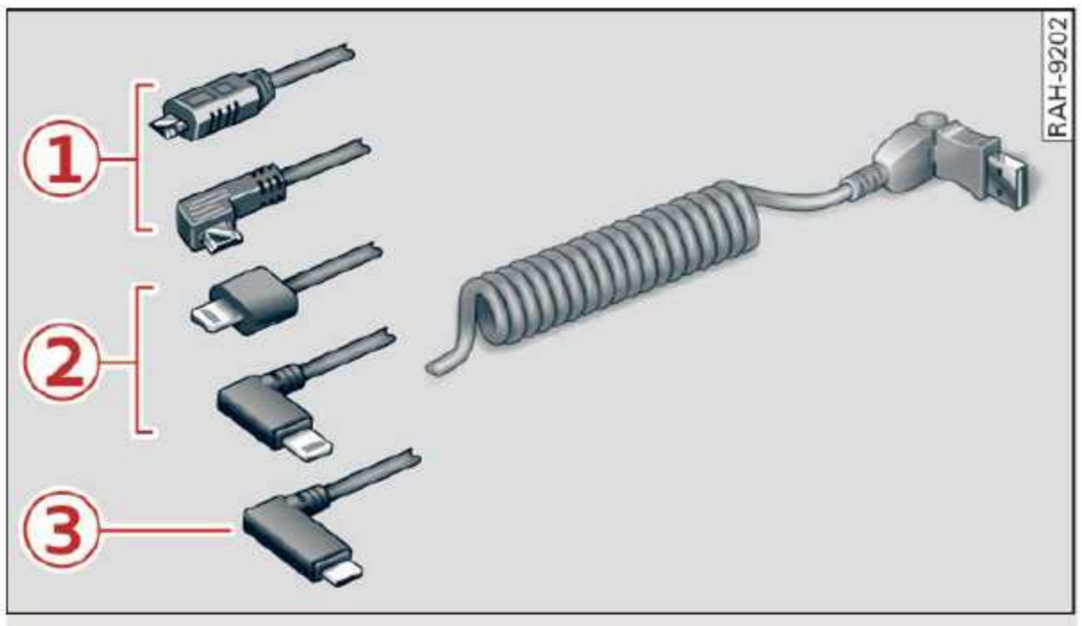


Fig. 205 Audi Genuine Accessories: USB adapter

You can purchase the USB adapter ⇨ *fig. 205* from an authorized Audi dealer or at specialty stores:

① USB adapter for devices with a micro USB connection

② USB adapter for devices with an Apple Lightning connection

③ USB adapter for devices with USB type C connection

Depending on the vehicle equipment, you may be able to connect your mobile devices through the Audi music interface to the MMI using the USB adapters and charge the battery at the same time.

Applies to: vehicles with Audi music interface

– **Audi music interface**: see ⇨ *page 226*.

Applies to: vehicles with USB charging ports in the rear

– **USB charging ports in the rear**: refer to ⇨ *page 228*.

Note

Handle the USB adapter carefully. Do not allow it to be pinched.

Tips

- The USB adapter on the Audi music interface will support iPod touch or iPhone devices from the 5th generation or newer with the lightning connector.
- Mobile devices with an Apple Dock connector can only be charged using a USB adapter designed for devices with an Apple Dock connector. Data cannot be transmitted.

Audi music interface

Connect your mobile devices to the Audi music interface in order to operate them through the MMI and charge the battery.

The Audi music interface USB ports are located in the storage compartment under the center armrest and at the front* of the center console. They are labeled with the ⇠ symbol. ▶

The Audi music interface AUX input is located in the storage compartment under the center armrest and is labeled with AUX.

USB Input

– **Connecting or charging a mobile device using the USB adapter:** connect the matching USB adapter to the Audi music interface USB port and then connect it to the mobile device, such as an iPhone. The battery will charge automatically.
– **Disconnecting a mobile device from the Audi music interface:**: remove the USB adapter from the Audi music interface USB port.

The media are started and operated through the mobile device or the MMI, depending on the device being used ⇨ *page 229*.

Connecting multiple mobile devices: if a mobile device (such as a smartphone) is connected at the respective USB port on the Audi music interface, then all devices can be used as a playback source.

AUX Input

– **Connecting a mobile device to the AUX input**: connect the AUX cable to the AUX input on the Audi music interface and then to the mobile device (such as an MP3 player or smartphone).
– **Disconnecting a mobile device from the AUX input**: remove the AUX cable from the AUX input on the Audi music interface.
– **Operation**: select and confirm the **External audio player** source (5) ⇨ *page 229, fig. 206*. Media is started and operated on the mobile device.

WARNING

Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Never operate mobile devices while driving, because this increases the risk of an accident.

Note

– Use a USB extension cable to connect devices that have an integrated USB connector (such as a USB stick) to prevent damage to your USB device and the Audi music interface.
– Extremely high or low temperatures that can occur inside vehicles can damage mobile devices and/or impair their performance. Never leave mobile devices in the vehicle in extremely high or low temperatures.

Tips

– Always follow the information found in ⇨ *page 62*.
– When you switch the ignition off, the USB ports are still supplied with power until the energy management intervenes.
– Do not use an additional adapter or USB extension cable to connect mobile devices to the Audi music interface that already have a cable or that must be connected with a USB adapter (⇨ *page 226*). Using an additional adapter or US extension cable may impair functionality.
– You can purchase the AUX connector cable from an authorized Audi dealer or at specialty stores.
– Audi recommends setting the volume of a mobile device connected to the AUX input to approximately 70% of the maximum volume.
– Functionality is not guaranteed for mobile devices that do not conform to the USB 2.0 specification.
– USB hubs are not supported.
– Some versions of the iPod such as the iPod shuffle cannot be connected to the USB adapter for devices with Apple Dock connector. Connect these devices using a AUX connector cable.
– Changed content on a mobile device [1] that is connected to the Audi music interface may not be displayed in the media center. In this case, reset the **Media settings** back to **Factory settings** ⇨ *page 241*.
– Video playback through the Audi music interface is only supported if the connected ▶

[1] Applies only to MTP devices. Does not apply to Apple devices and USB mass storage devices.

device is recognized as a USB storage device (for example a USB stick). Apple devices and MTP devices (such as smartphones) are not recognized as USB storage devices.
– iPod or iPhone malfunctions also affect the operation of the MMI. Reset your iPod or iPhone if this happens.
– Audi recommends updating the iPod or iPhone software to the latest version. For important information on operating your iPod or iPhone, refer to the user guide for the device.
– The USB adapter on the Audi music interface will support iPod touch or iPhone devices from the 5th generation or newer with the lightning connector.
– For more information about the Audi music interface and supported devices, check the Audi database for mobile devices at www.audiusa.com/mp3 or contact an authorized Audi dealer or authorized Audi Service Facility.

USB charging ports in the rear

Applies to: vehicles with USB charging ports in the rear

You can charge the battery on your mobile device through a USB charging port.

Two USB charging ports are located at the back of the center console.

– **USB adapter**: refer to ⇨ *page 226, USB adapter for Audi music interface or USB charging port*.
– **Charging a mobile device using the USB adapter**: connect your mobile device to a USB charging port using a suitable USB adapter.
– **Disconnecting a mobile device from the charging port**: remove the USB adapter from the USB charging port.
– **Disconnecting mobile devices with an Apple Dock connector**: remove the Apple Dock connector from the Apple device with the release tabs pressed in.

WARNING

Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Never operate your mobile devices while driving, because this increases the risk of an accident.

Note

Extremely high or low temperatures that can occur inside vehicles can damage mobile devices and/or impair their performance. Never leave mobile devices in the vehicle in extremely high or low temperatures.

Tips

– In preparation at the time of printing.
– Always follow the information found in ⇨ *page 62*.
– When you switch the ignition off, the USB ports are still supplied with power until the energy management intervenes.
– Do not use any additional USB extension cables or adapters to connect mobile devices to the USB charging port that have already been connected by a USB adapter. Using an additional adapter or US extension cable may impair functionality.
– USB hubs are not supported.
– Refer to the manufacturer's operating manual for important information regarding the operation of your mobile device.
– Correct function of all mobile devices cannot be guaranteed.
– The vehicle battery drains when mobile devices are turned on but the engine is off.

Rear Seat Entertainment preparation

Applies to: vehicles with Rear Seat Entertainment preparation

The Rear Seat Entertainment preparation includes cables and a mount for Audi Entertainment mobile in the driver's and front passenger's seat backrests.

The suitable **Audi Entertainment mobile** Rear Seat Entertainment package is available through Audi Genuine Accessories.

Using Audi Genuine Accessories is recommended. Audi has verified their reliability, safety, and suitability. ▶

We cannot evaluate or endorse other products in this way, even if the product is approved by a certified testing agency or government agency .

Note

Only use devices that are approved for the Rear Seat Entertainment preparation. Unapproved equipment can cause damage to the vehicle electrical system.

Tips

- Contact an authorized Audi dealer or authorized Audi Service Facility for additional information on **Audi Entertainment mobile**.
- Always read the chapter ⇨ *page 367*.
- The **Rear Seat Entertainment** preparation is not intended to charge external electronic devices.

Playing media

Accessing media

You can start and operate various media through the MMI control panel.



Fig. 206 Diagram: possible sources in the Media menu



Fig. 207 Diagram: possible sources in the Media menu

Requirement: a media source must contain audio/video* files ⇨ *page 221*.

- ▸ Press the MEDIA button. Press the left control button until the sources overview is displayed.
- ▸ Select and confirm the desired source. **Or**: press the MEDIA button repeatedly until the desired source is selected.

Depending on the vehicle equipment, the following sources may be displayed in the **Media** menu:

① **Jukebox*** 222
② **DVD/CD drive*** 221, 221
③ **SD card reader** 221
④ **Audi music interface*** 226
such as an iPhone, USB stick
⑤ **External audio player** 226
such as an MP3 player connected to the AUX input
⑥ **Bluetooth audio player*** 223
⑦ **Wi-Fi audio player*** 224
⑧ **Online media*** and **Internet radio*** . 225

- **Playing audio/video files**: select a source in the **Media** menu > *Category* (such as artists > *album* > *track*).
- **Moving one level up in the folder structure**: press the BACK button. **Or**: select and confirm **Folder up**.
- **Selecting the previous or next track/chapter*** [1]: press the On/Off knob on the MMI control panel briefly to the left ⏮ or right ⏭.
- **Fast-forwarding and rewinding audio/video* files**: press and hold the On/Off knob on the MMI control panel to the left ⏮ or right ⏭ for a longer time.
- **Pausing or resuming playback**: press the On/Off knob on the MMI control panel briefly.

Tips

- You can scroll through long lists quickly by turning the control knob quickly. The scrolling speed depends on the number of list entries. ▶

1) Depending on the DVD, this may not be possible during playback.

– For safety reasons, the video image is only displayed when the vehicle is stationary. Only the sound from the video plays while driving.

Media center

Various categories for selecting audio/video files are available in the media center.*

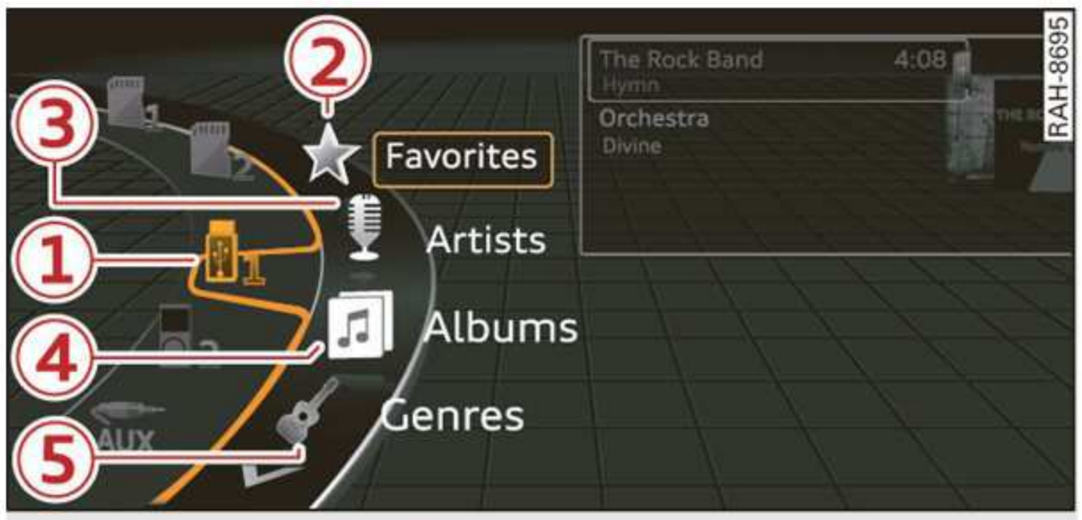


Fig. 208 Example: USB stick categories

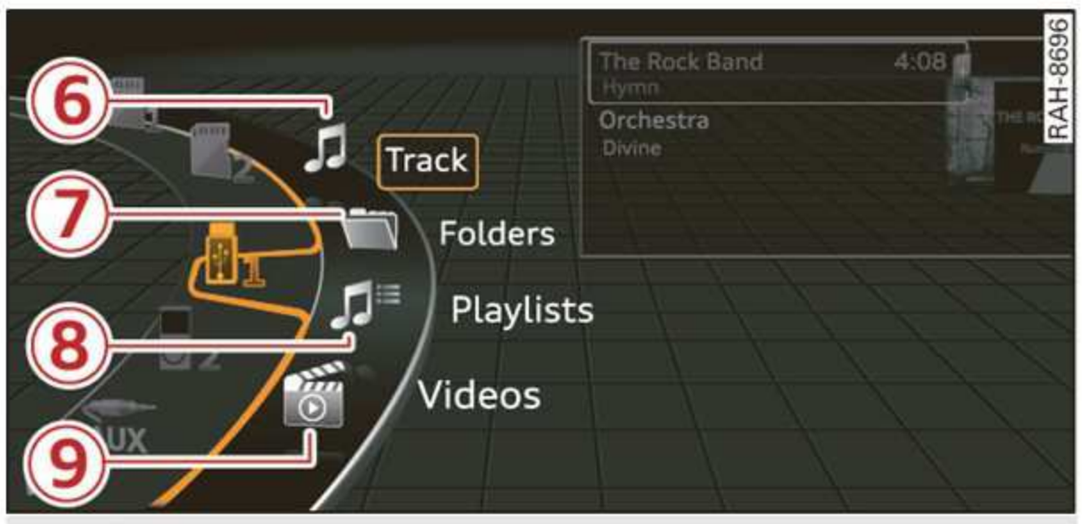


Fig. 209 Example: USB stick categories

► Press the MEDIA button. Press the left control button until the sources overview is displayed. Select and confirm the desired source.

① Active source

The active source is highlighted. The active source symbol ① may change depending on the connected device, the online media service*, or Internet radio*. The device name may be displayed (for example: myPhone). As an example, a USB stick is shown ⇨ *fig. 208* connected to the Audi music interface*.

Depending on the active source, you can select audio/video files* from the following categories and add them to the playlist:

② Favorites

The **Favorites** category appears if at least one entry is stored in the favorites list. See ⇨ *page 232, Favorites*.

③ Artists

All available artists are displayed. Select and confirm an artist, an album and then a track.

④ Albums

All available albums are displayed. Select and confirm an album and then a track.

⑤ Genres

All available genres are displayed. Select and confirm a genre (such as **Pop**), an artist, an album and then a song.

⑥ Tracks

All available tracks are displayed. Select and confirm a track.

⑦ Folders

The folder structure or track/chapter list is displayed. Select a folder, if necessary. Select and confirm a track.

⑧ Playlists

All available playlists from the source and the smart playlists are displayed. Select and confirm a playlist and then a track.

Smart playlists:

– **Last played tracks**: the last tracks played in the selected source are displayed.
– **Most played**: the most played tracks in the selected source are displayed.
– **5 stars** to **1 star**: tracks from the selected source are displayed according to their rating.
– **Unrated**: all files from the selected source without rating information (for example, in the ID3 tag) are displayed.

⑨ Videos*

All available video files are displayed. Select and confirm a video file.

Note

Applies to: vehicles with Audi connect Infotainment and use of the radio category with iPod/iPhone

Always follow the information found in ⇨ ! *in Wi-Fi settings on page 193*. ►

Tips

– Only the categories supported by the medium are available. For example, CD/DVD-ROM tracks cannot be selected with categories such as **Artists**, **Albums** or **Genres**. With an iPod/iPhone (source: Audi music interface ⇨ *page 226*), the **Podcasts**, **Audio books** and **Composers** categories are also available.
– For safety reasons, the video image is only displayed when the vehicle is stationary. Only the sound from the video plays while driving.
– When synchronizing a portable device with "Cloud“ services, playlists may display incorrectly in the MMI. Use the media center in the device.
– With an iPod/iPhone (media source: Audi music interface ⇨ *page 226*), the **Podcasts**, **Audio books** and **Composers** categories are also available.

Tips

Applies to: iPod/iPhone on Audi music interface

– An Internet connection is required to use the additional **Radio** category, an online media service. Also see the chapter ⇨ *page 193, Wi-Fi settings*. Also read the information on the Audi music interface and the supported devices ⇨ *page 226*.
– Depending on the Internet connection and network traffic, the connection may disconnected when online media sources are playing.
– The use of online media services depends on the service availability of the third party provider.
– Audi AG simply makes the access to online media services possible through the MMI and does not take any responsibility for the contents of the online media services.

Free text search

Applies to: vehicles with free text search

You can search in the active source by tracks and video files, for example*



Fig. 210 Input field and results list for free text search

You can open the **free text search** depending on the selected source.

Requirement: the playlist ⇨ *page 232* or media center ⇨ *page 230* must be displayed.

Opening free text search

▸ Keep turning the control knob to the left until the **free text search** input field ① ⇨ *fig. 210* appears. **Or**: push the control knob up.

Using the free text search: see ⇨ *page 154, Free text search*.

Entries that contain the entered search term are listed in the results list ⑤ ⇨ *fig. 210*. You can search for artists ② ⇨ *fig. 210*, albums ③ or tracks ④ as well as genres and videos.

Tips

– Only files in the active source will be searched.
– If you open free text search in the **Folders** category ⑦ ⇨ *page 230, fig. 209* or the **Composers**, **Podcasts** and **Audio books** categories, it will only search through the files in that folder.

Playlist



Fig. 211 Example: playlist

The track, artist, album and album cover, if applicable, will appear in the playlist ⇨ *fig. 211*.

Options menu

See ⇨ *page 232, Additional settings*.

Favorites

Up to 50 entries for every media source can be stored in any order in the favorites list.

Requirement: the playlist or media center must be open.

– Select the desired entry from the playlist or media center.
– Select: right control button > **Store as favorite**.
Or: press and hold the control knob for several seconds.

When you store a track as a favorite, the associated album will appear in the favorites list as an entry.

Requirement: at least one entry must be stored in the favorites list.

Displaying the favorites list: press the MEDIA button. Press the left control button until the sources overview ⇨ *page 229* is displayed. Select the source that contains the *categories* ⇨ *page 230* (for example, SD card). Select the **Favorites** *category*.

Requirement: the presets list must be displayed.

– **Listening to a favorite**: select and confirm *a favorite from the list*.
– **Move favorite**: select *a favorite from the list* > right control button > **Move favorite**. Select and confirm the location of the selected favorite.
– **Deleting a favorite**: select *a favorite from the list* > right control button > **Delete favorite** > **Delete this favorite** or **Delete all favorites**.

Additional settings

Options menu

Context-specific functions and settings are available depending on the selected source.

▸ Press the right control button.

Sound settings

See ⇨ *page 244*.

Input level

Requirement: a mobile device must be connected to the AUX connection cable or to a USB adapter ⇨ *page 226, Multimedia connections*.

The volume of the mobile device is adapted to the MMI. Audi recommends adjusting the volume on the mobile device to 70% of the maximum volume output.

Bluetooth settings

See ⇨ *page 243*.

Wi-Fi settings*

See ⇨ *page 193, Wi-Fi settings*.

Connection manager

See ⇨ *page 241*.

Show "Now Playing" screen

With the function switched on ☑ and a playlist open, various information about the current track (such as artist, album and album cover*) as well as the playing time and the remaining playing time are displayed.

Jukebox memory capacity*

Information on the Jukebox memory capacity and the number of stored tracks in the Jukebox is displayed. ▶

Rewind/Fast forward

Turn the control knob to the left or to the right. **Or**: move your finger across the MMI touch control pad* from left to right.

Shuffle[1)]

With the function switched on ☑, all files in the playlist are played and shown in random order.

Repeat track[1)]

When the function is switched on ☑, the current track repeats.

Repeat*

Requirement: an iPod/iPhone* must be selected as the media source in the Audi music interface ⇨ *page 229, Accessing media*.

– **Track**: the current track will be repeated.
– **Folder**: the tracks in the current folder are played continuously in a loop.
– **Off**: the function is switched off.

Back to 'Playback'

The options menu is closed. The track currently playing appears in the playlist.

Play similar music*

The track currently playing is quickly analyzed for features such as artist, genres, mood, and beat, and a smart playlist with similar tracks will be shown.

Play more...

A smart playlist is shown based on the track currently playing. You can select between a playlist with more tracks **by this artist**, **from this album** or **of this genre**.

Copy to jukebox*

See ⇨ *page 222, Adding files to the Jukebox*.

Set as ringtone*[2)]

Requirement: a mobile device must be connected to the MMI. The track currently playing must be in the Jukebox* ⇨ *page 222*.

The selected track will be used as the ringtone for incoming calls.

Gracenote online database*

Requirement: the MMI must be connected to the Internet.

Depending on availability, various information will load about the track currently playing when this function is switched on ☑.

Favorites

See ⇨ *page 232*.

Additional options

Requirement: the vehicle must be stationary and a video file* or a DVD* must be playing.

Parental control*

Playback of video DVDs can be restricted using parental control.

Enter the password for parental control. Password set at the factory: **1234**. You have the following options:

– **Protection level**: select and confirm the protection level (for example, Level 5). Eight different protection levels can be set for parental control. If you set the parental control level at Level 5, all DVDs from levels 1-5 can be played. Video DVDs with a higher level will not play. Select **Unrestricted** to remove all of the restrictions.
– **Change password**: edit the current password.

Switch to full screen

The video image is displayed. Turn the control knob to display the playlist. **Or**: press the BACK button. ▶

1) The function automatically switches off when the source is changed.
2) This function is not available for all cell phones.

Replay video[1)]

When this function is switched on ☑, the current video will replay.

Show DVD menu

The DVD main menu opens in the Infotainment system display.

– **Selecting a menu item**: select and confirm a menu item. **Or**: move your finger on the MMI touch control pad* and press the control knob.

Audio track[2)]

You can manually set the audio track (language and audio format). The language and audio format options depend on the video DVD.

Subtitles[2)]

You can manually select subtitles for playback. The languages available depend on the DVD.

Aspect

Audi recommends the **Automatic** setting for the picture format. You can set the picture format depending on the active file or source (for example video file*, DVD*).

Aspect ratio	Description
Automatic	The MMI detects the picture format of the source and displays the image in the optimum ratio. Black bars may appear on the sides of the display, depending on the source format and the Infotainment system display that is installed.
Zoom	The image is enlarged to fill the entire Infotainment system display. Switch the function off if the image is distorted.
Cinema-scope	Use this setting for films in cinema format 21:9. Black bars are shown in the upper and lower edges of the Infotainment system display.
Original	The image is displayed in the ratio of the source format. Select this option if the image is distorted or a section of the image is cut off when **Auto** is selected.
4:3	The image is set to the 4:3 picture format. Black bars are shown on the sides of the Infotainment system display.
16:9	The image is set to the 16:9 picture format. Black bars are shown in the upper and lower edges of the Infotainment system display.

Tips

– Not all video DVDs have parental control.
– The protection levels for the **Parental control** are based on the US standards from the Motion Picture Association of America (MPAA). Note that the age levels for video DVDs in European countries may differ.
– Password entry for **Parental control** will be locked for approximately one minute if you enter the incorrect password three times in a row. The password can only be reset by an authorized Audi dealer.

1) The function automatically switches off when the source is changed.
2) Depending on the DVD, this may not be possible during playback.

Supported media and file formats

Overview

The Jukebox, SD card reader and the USB storage device* connection support the following audio/video file properties:*

	Audio files				Video files*		
Supported media	**SD/SDHC/SDXC/MMC memory cards**: with a capacity of up to 128 GB **DVD drive**: audio CDs (up to 80 min) with CD text (artist, album, song)*, CD-ROMs with a capacity of up to 700 MB; DVD±R/RW; DVD video; DVD audio with audio tracks that are compatible with a DVD video player; **Audi music interface**: mobile devices (such as an iPod ⇨ *page 226*, MTP player, USB storage device in "USB Device Subclass 1 and 6" that conforms to USB 2.0: USB sticks, USB MP3 players (Plug-and-Play-capable), external USB flash drives and hard drives						
File system	**Memory cards**: exFAT, FAT, FAT32, NTFS **USB storage device**: FAT, FAT32, NTFS **USB storage device partitions (primary/logical*)**: 2 per USB-connection **CD/DVD file system:** ISO9660, Joliet, UDF						
Metadata	**Album cover**: GIF, JPG, PNG with max. 800x800 px. The album cover from the medium or from Gracenote* is displayed, depending on availability.						
Format	MPEG 1/2 Layer 3	Windows Media Audio 9 and 10	MPEG 2/4	FLAC	MPEG 1/2	MPEG4 AVC (H.264)	Windows Media Video 9
File extension	.mp3	.wma	.m4a; .m4b; .aac	.flac	.mpg; .mpeg	.mp4; .m4v; .mov; .avi	.wmv; .asf
Playlists	.M3U; .PLS; .WPL; .M3U8; .ASX						
Characteristics	up to maximum 320 kbit/s and 48 kHz sampling frequencies			48 kHz sampling frequency	up to maximum 2,000 kbit/s and 720x576 px. at maximum 25 fps		
Number of files	**DVD drive***: maximum 1,000 files per medium **Jukebox***: approximately 10 GB memory capacity; maximum 3,000 files can be imported **USB storage device and memory cards**: maximum 10,000 files per medium; maximum 1,000 files per playlist/directory						

Tips

– The media drives do not support the Windows Media Audio 9 Voice format.
– For compressing MP3 files, Audi recommends a bit rate of at least 160 kbit/s. The display showing the remaining play time may differ for audio files with variable bit rate.
– Special characters (such as those in ID3 tag information) may display differently or may ▶

8W0012721BG

not always display, depending on the system language.
– The manufacturer of the storage device can provide information about its “USB Device Subclass”.

– Some MTP player functions are not supported, such as rating music tracks and video playback.

CD drive

Applies to: vehicles with a CD drive

The following audio file properties are supported by the CD drive:

	Audio files			
Supported media	Audio CDs (up to 80 min) with CD text (artist, album, track)*, CD-ROMs with a capacity of up to 700 MB			
File system	**CD file system**: ISO9660, Joliet, UDF			
Metadata	**Album cover**: GIF, JPG, PNG with max. 800x800 px. The album cover from the medium may be displayed, depending on availability.			
Format	MPEG 1/2 Layer 3	Windows Media Audio 9 and 10	MPEG 2/4	FLAC
File extension	.mp3	.wma	.m4a; .m4b; .aac	.flac
Playlists	.M3U; .PLS; .WPL; .M3U8; .ASX			
Characteristics	up to maximum 320 kbit/s and 48 kHz sampling frequencies			48 kHz sampling frequency
Number of files	Maximum 1,000 files per medium			

Tips

– For compressing MP3 files, Audi recommends a bit rate of at least 160 kbit/s. The display showing the remaining play time may differ for audio files with variable bit rate.

– Special characters (such as those in ID3 tag information) may display differently or may not always display, depending on the system language.

Troubleshooting

Problem	Solution
Audi music interface/Bluetooth audio player*: mobile device is not supported.	Read the instructions in the chapter ⇨ *page 226, Multimedia connections/*⇨ *page 223, Bluetooth audio player*. You can learn about supported mobile devices in the Audi database for mobile devices at www.audiusa.com/bluetooth.
Audi music interface: the volume is too high/too low when starting playback through the AUX input.	Adjust the volume of the mobile device to approximately 70% of the maximum output ⇨ *page 232,* **Input level**.

Problem	Solution
Audi music interface: the mobile device is not recognized as a source.	For many cell phones or mobile devices, playback is not possible when the battery level is too low (less than 5% of its capacity). The mobile device will only be recognized as a source in the MMI after connecting if the battery charge is sufficient.
Audi music interface: malfunctions during audio playback through an iPod/iPhone.	The **Bluetooth audio player** function is switched on. Switch this function off ⇨ *page 243* when you are not using the **Bluetooth audio player**.
Audi music interface: contents that are changed on a mobile device connected to the Audi music interface [a)] are not displayed in the media center.	Reset the **Media settings** to the factory default settings ⇨ *page 241*.
AUX input: there is static when connecting and disconnecting the AUX connection cable.	When connecting and disconnecting, the **External audio player** source is already selected. Before connecting or disconnecting the mobile device, either mute the device (see ⇨ *page 245*) or switch to a different audio source (for example ⇨ *page 215, Opening the radio*).
Bluetooth audio player*/**Wi-Fi audio player***: audio playback interference.	Only *one* interface should be actively used at a time to ensure problem-free playback.
Jukebox*: tracks on the imported playlist are grayed out.	When importing playlists, all of the files themselves must be imported.
Jukebox*: imported tracks cannot be played or found.	If you cannot find imported tracks in the media center, they may not be supported. Only copy supported files ⇨ *page 235* to the Jukebox.
Online media*: connection failed between the MMI and the **myAudi** app.	To establish a connection to the MMI, the MMI connection switch must be switched on in the **myAudi** app status screen.
Bluetooth audio player*: interference with track display and audio playback.	Playback interference can occur when using the **Bluetooth audio player** if a music player app from a third party provider is open. Audi recommends using the integrated media player on your Bluetooth device (such as a smartphone).
Wi-Fi hotspot*: your Wi-Fi device is disconnected from the Wi-Fi hotspot.	Make sure the network optimization functions are switched off in the Wi-Fi settings or in the network settings for your Wi-Fi device. For additional information refer to the user guide for your Wi-Fi device.
Audi music interface: audio playback through the connected mobile device is not possible.	Make sure the USB mode *MTP* is selected in the settings on your mobile device.

a) Applies only to MTP devices. Does not apply to Apple devices and USB mass storage devices.

Audi smartphone interface

Setup

Applies to: vehicles with Audi smartphone interface

You can connect your smartphone to the MMI using the Audi smartphone interface. Certain content on your smartphone is adapted to the Infotainment system display while driving and can be operated through the MMI control panel.

Requirement

The vehicle must be stationary and the ignition must be switched on.

An iPhone generation 5 or newer with Lightning connector and iOS 7.1.2 operating system or higher is required. **Or**:

A smartphone with the Android Auto app and Android 5.0 Lollipop operating system or higher is required.

- ▸ Connect your smartphone to the Audi music interface ⇨ *page 226* using the applicable USB adapter ⇨ *page 226, fig. 205*.
- ▸ Select and confirm **Activate Apple CarPlay** or **Activate Android Auto now**.
- ▸ Follow the system instructions.
- ▸ Pay attention to any additional system prompts on your smartphone, if applicable.

If you chose not to use Apple CarPlay or Android Auto when connecting your smartphone for the first time, you can start the Audi smartphone interface later on using the **Connection manager**.

- ▸ Select: MENU button > **Audi smartphone interface** > **Change to connection manager**.
- ▸ Connect your smartphone to the Audi music interface using the appropriate USB adapter ⇨ *page 226, fig. 205*.
- ▸ Select and confirm **Audi smartphone interface** in the **Connection manager** ⇨ *page 241*. You can select your smartphone in the list of devices that are already paired ⇨ *page 243*.
- ▸ Follow the system instructions.

WARNING

Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Never operate mobile devices while driving, because this increases the risk of an accident.

Note

Always follow the information found in ⇨ ! *in Wi-Fi settings on page 193*.

Tips

– The functions that can be used depend on the following factors, among others:
  – The brand of your smartphone
  – The version of the operating system in your smartphone
  – The software version of the app used
  – The USB adapter cable and correct connection
  – Your cell phone service provider
  – The customized settings on your smartphone
– One of the factors above or a combination of any of them could cause your smartphone to be incompatible with the Audi smartphone interface. Compatibility cannot be guaranteed for all types of smartphones. For more information and assistance, refer to the user guide and the manufacturer of your smartphone.
– If the connected smartphone has voice control, you can operate your smartphone using the external voice recognition system ⇨ *page 169*.
– The menu language shown in the MMI is based on the settings in your smartphone.
– The time displayed in the MMI is based on the settings in your smartphone.
– Some MMI functions are not available when Apple CarPlay or Android Auto is active.
– You cannot connect any mobile devices via Bluetooth when an Apple CarPlay connection is active.

Operating

Applies to: vehicles with Audi smartphone interface

Opening a menu

Apple CarPlay: you can go back to the Apple CarPlay main menu regardless of the selected menu item by pressing and holding the BACK button.

Android Auto: to go back to the Android Auto menu bar, push the control knob down.

Opening a menu item

Select and confirm a menu item using the MMI control panel.

Troubleshooting

Applies to: vehicles with Audi smartphone interface

Problem	Solution
Audi smartphone interface cannot be opened.	Check the battery charge level on your smartphone. Check the USB cable and use a different one if necessary. Check if Android Auto or Apple CarPlay is available in the country where the vehicle is being operated.
	Android Auto: check if the Android Auto app is installed on your smartphone.
Connecting the smartphone to the MMI failed.	Make sure that you are using the correct USB adapter and check if the USB adapter is connected correctly to your smartphone and the Audi music interface ⇨ *page 226*.
	Apple CarPlay: check if Apple CarPlay is activated on your smartphone.
	Android Auto: check in the Android Auto app if Android Auto permits new vehicles.
The smartphone is not automatically detected.	Make sure that you are using the correct USB adapter and check if the USB adapter is connected correctly to your smartphone and the Audi music interface ⇨ *page 226*. Check if the requirements needed to connect a smartphone have been met.

System settings

Setting the date and time

You can set the clock time manually or using the GPS.*

- Select: MENU button > **Settings** > left control button > **MMI settings** > **Date & time**.
- **Or**: select: MENU button > **Vehicle** > left control button > **Vehicle settings** > **Date & time**.

Automatic setting

When this function is switched on ☑, the time and date are automatically set.

Time

Requirement: the **Automatic setting** must be switched off.

Press the control knob. You can set the **Time** manually by turning and pressing the control knob.

Date

Requirement: the **Automatic setting** must be switched off.

Press the control knob. You can set the **Date** manually by turning and pressing the control knob.

Time zone

When selecting the appropriate time zone, a sampling of countries in this zone will be listed.

Automatic time zone*

When this function is switched on ☑, the time will automatically adjust to the corresponding time zone.

Automatic daylight saving time*

When this function is switched on ☑, the time will automatically switch to daylight saving time.

Time format

If you select **24h**, the clock will display, for example, **13:00**. If you select **AM/PM**, the clock will display, for example, **1:00 PM**.

Date format

If you select **DD.MM.YYYY**, the date display will show, for example, **31.08.2018**. If you select **MM/DD/YYYY**, the date display will show, for example, **08/31/2018**. If you select **YYYY-MM-DD**, the date display will show, for example, **2018-08-31**.

MMI settings

- Select: MENU button > **Settings** > left control button > **MMI settings**.

Language

You can change the display language as well as the language for the voice guidance* and voice recognition system*.

The number of languages available depends on the market.

Measurement units

The following measurement units can be set depending on availability: **Speed**, **Distance**, **Temperature**, **Fuel consumption**, **Volume**, **Pressure**.

Mobile device reminder signal

Applies to: vehicles with Audi phone box

Requirement: your cell phone must be Qi-capable [1)] or connected to the Audi music interface ① with a USB adapter cable ⇨ *page 174, fig. 172*.

When the device reminder signal is switched on, you will be notified that your mobile device is still in the Audi phone box* when you leave the vehicle. You can select between **Spoken cue**, **Signal tone** and **Off**.

Mobile device reminder signal volume: you can adjust the reminder signal volume by turning the control knob. ▶

1) The Qi standard makes it possible to charge your mobile device wirelessly.

Switch off pop-up: when the function is switched on ☑, the messages in the Infotainment system display regarding the charging status of your cell phone in the Audi phone box* are hidden. The reminder not to forget your cell phone when leaving the vehicle is also switched off.

Tool tips

When this function is switched on ☑, your MMI shows you tips for input. The frequency of how often it displays decreases with time.

Speech dialog system

Applies to: vehicles with voice recognition system

Depending on vehicle equipment, the following functions may be available:

Command display: when this function is switched on ☑, the MMI will show you the possible commands for voice input in the respective menu.

Short dialog: when this function is switched on ☑, a shorter form of the prompts is used.

Command during voice output*: this function is switched on at the factory. When this function is switched on ☑, you can say new commands during announcements. You do not need to wait for the signal tone (beep) during an announcement. When the function is switched off ☐, you need to wait for the signal tone (beep) to say a new command.

Volume: you can adjust the volume of the prompts by turning the control knob.

Individual speech training (only when the vehicle is stationary): you can adapt the voice recognition system to your voice or pronunciation in order to improve the system's ability to recognize your speech. Individual speech training is comprised of 20 speech entries that consist of commands and sequences of numbers. You can delete the programmed voice training with the **Reset individual speech training** function.

Display brightness

You can adjust the brightness of the Infotainment system display by turning the control knob.

Factory settings

Depending on the vehicle equipment, the following functions can be reset to factory settings:

- **Sound settings**
- **Radio**
- **Media settings**
- **Jukebox***
- **Directory**
- **Telephone**
- **Bluetooth and Wi-Fi***
- **Navigation settings***
- **Navigation and online memory***
- **Voice recognition system***
- **Shortcut keys**
- **Message settings***
- **Apps***
- **Tool tips**
- **Audi connect***
- **Audi smartphone interface***

You can select the desired functions individually or all at once with the option **Select all entries**. Select and confirm **Restore factory settings**.

Tips

Make sure that not only the settings were deleted but also the stored data, if necessary.

Connection manager

Introduction

The connection manager provides an overview of your connected devices and their network status.

▸ Select: MENU button > **Settings** > left control button > **MMI settings** > **Connection manager**.
▸ Select and confirm a menu item.

If a mobile device was already connected and you select and confirm the corresponding menu item, the device name and connection status are displayed under the menu item.

You can individually **Connect** (☑) or **Disconnect** (☐) a paired device. ▶

Requirement:

– The vehicle must be stationary and the ignition must be switched on.
– The Bluetooth settings will open on your mobile device during the connection setup.
– The Bluetooth function and visibility of the MMI ⇨ *page 243* and mobile device must be switched on.
– The mobile device to be connected must not be connected to any other Bluetooth device.

Primary phone

Applies to: vehicles with telephone

– **Connect new device**: search for and connect a cell phone.
– **List of devices already paired**: select your cell phone from the list of all the devices that are already paired.

Secondary phone

Applies to: vehicles with telephone

– **Connect new device**: search for and connect a cell phone.
– **List of devices already paired**: select your cell phone from the list of all the devices that are already paired.

Data connection

Applies to: vehicles with Audi connect Infotainment

– The data connection is made using the embedded SIM card [1] ⇨ *page 186*. You do not need to adjust any additional settings.

Note

Always follow the information found in ⇨ ⓘ *in Wi-Fi settings on page 193*.

myAudi app

Applies to: vehicles with Audi connect Infotainment

Requirement: the **myAudi** app must be installed and open on your mobile device.

– **Connect new device**: search for and connect a mobile device (such as a smartphone).
– **List of devices already paired**: select your mobile device from the list of all the devices that are already paired.

Audio player

Applies to: vehicles with Bluetooth or Wi-Fi audio player

Bluetooth player*

Requirement: the Bluetooth function and visibility must be switched on in the MMI ⇨ *page 243* and on the Bluetooth audio player.

– **Connect new device**: press the control knob. Select **Bluetooth audio player**. Search for and connect a mobile device.
– **List of devices already paired**: select a Bluetooth device from the list of all the devices that are already paired.

Wi-Fi audio player*

Requirement: the Wi-Fi hotspot* on the MMI ⇨ *page 193* and on your Wi-Fi audio player must be switched on.

– **Connect new device**: press the control knob. Search for and connect a Wi-Fi capable device.
– **Disconnect Wi-Fi audio player**: deactivate the Wi-Fi on your Wi-Fi capable device. The device will be automatically removed from the list.

Note

Always follow the information found in ⇨ ⓘ *in Wi-Fi settings on page 193*.

Directory

Applies to: vehicles with telephone

Display contacts from a cell phone (or an additional cell phone).

Requirement: no cell phones can be connected to the MMI using the **Handsfree** profile.

– **Connect new device**: search for and connect a new cell phone. ▶

[1] SIM card installed in the vehicle at the factory.

– **List of devices already paired**: select your cell phone from the list of all the cell phones that are already paired.

Audi smartphone interface

Applies to: vehicles with Audi smartphone interface

– Connect your cell phone to the Audi music interface ⇨ *page 226* using a USB adapter ⇨ *page 226, fig. 205*.
– Select your cell phone from the list of cell phones that have already been connected.

Additional options

Depending on the selected function, you can use the right control button to access the available additional options in the connection manager.

Delete Bluetooth device*

The selected cell phone/mobile device is disconnected from the MMI and is removed from the list of all devices that are already paired.

Show Bluetooth profiles*

You can **Connect** or **Disconnect** the **Handsfree**, **Messages***, **Directory/contacts**, and **Bluetooth audio player** profiles separately.

Bluetooth settings*

– **Bluetooth**: select and confirm a setting for the Bluetooth connection visibility. Select **Visible** for the MMI to be visible to other devices. Select **Invisible** for the MMI to not be visible to other devices. However, it is still possible to establish a Bluetooth connection with paired devices when the visibility is switched off. Select **Off** to turn visibility off. Then a Bluetooth connection is not possible.
– **Bluetooth audio player**: when this function is switched on ☑, the Bluetooth audio player is available as a source in the **Media** menu.
– **Bluetooth name**: the MMI Bluetooth name (for example "AUDI MMI") is displayed and can be changed.

Online settings*

– **Data usage counter**: the amount of data packets that are sent and received through the MMI is displayed. You can reset the data usage information to zero using the **Reset data counter** option.
– **Network status**: the mobile network provider for data service as well as the network status are displayed.

Wi-Fi settings*

See ⇨ *page 193, Wi-Fi settings*.

Storing as a default telephone

Applies to: vehicles with telephone

Requirement: a mobile device must be connected to the MMI ⇨ *page 171*.

When the mobile device is in range and the Bluetooth function on the mobile device and in the MMI is switched on, this mobile device will be given priority over the other Bluetooth devices and will be connected directly to the MMI. The connected mobile device is displayed first in the device list.

Network settings*

– **Login**: you can chose an **Automatic** login to your cell phone service provider's network, or you can choose a **Manual** login from the list of available networks.
– **Network selection**: available networks in the present location can be selected under network selection. This function is only available for the **Manual** login setting.

Apple CarPlay sound settings/Android Auto sound settings

Applies to: vehicles with Audi smartphone interface

See ⇨ *page 244*.

About Apple CarPlay/About Android Auto

Applies to: vehicles with Audi smartphone interface

Here you will find legal information regarding the use of Apple CarPlay or Android Auto and information about device-specific data exchange.

Delete Apple CarPlay device/Delete Android Auto device

Applies to: vehicles with Audi smartphone interface

Requirement: your cell phone must not be connected to the Audi music interface with a USB adapter. ▶

Select: **Audi smartphone** > a device from the list > right control button.

To remove your mobile device from the list, select and confirm **Delete Apple CarPlay device** or **Delete Android Auto device**.

System update

▸ Select: MENU button > **Settings** > left control button > **System maintenance**.

– **System update**: insert the storage device with the update data into the appropriate drive ⇨ *page 221*. Select and confirm the drive > **Start update**. The length of the process depends on the size of the update.
– **Reset driver installation**: the selected media driver package is reset to the settings at the time of delivery.
– **Version information**: information on the MMI software version and the navigation database* software version is displayed. The **Software information** function also provides information on the software contained in the MMI and the licensing agreement.

Sound settings

The sound distribution and volume of the MMI can be adjusted individually. The settings depend on the vehicle equipment.

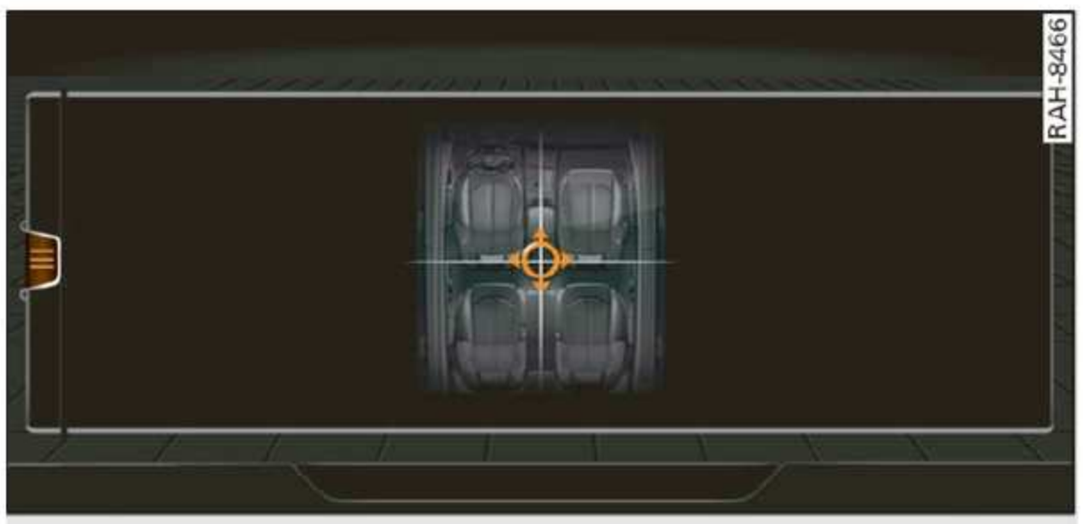


Fig. 212 Adjusting the balance/fader

▸ Select: MENU button > **Sound** > left control button > **Entertainment**.

Treble/Bass

You can adjust the **Treble** and **Bass** settings by turning the control knob. The changed settings only apply for the audio source that is active at the time. This allows you to adjust the sound settings for each audio source separately.

Balance/fader (Sound focus)

– **Adjusting the sound distribution to the left or right**: press the control knob. Turn the control knob to the left or right to the desired position.
– **Adjusting the sound distribution to the front or rear**: press the control knob again. Turn the control knob to the left or right to the desired position.
– **Adjusting the sound distribution using the MMI touch***: move your finger on the MMI touch control panel in the desired direction.

Sound effects

Select and confirm a **Focus** setting:

– **All**: all speakers in the vehicle are active (symmetrical sound distribution).
– **Front**: only the speakers in the front of the vehicle are active.
– **Rear***: only the speakers in the rear of the vehicle are active.

Select and confirm a **3D effect*** setting (surround sound):

– **Off**: the 3D effect is switched off.
– **Low**: the 3D effect is optimized, for example for audio books.
– **Medium**: the 3D effect is optimized for all sources.
– **High**: the 3D effect is at the maximum.

Subwoofer*

Turn the control knob to adjust the subwoofer.

Speed dependent volume control

Turn the control knob to adjust the playback volume to the noise inside the vehicle.

Volume settings

Adjusting the volume

The volume of an audio source or a system message (for example, from the voice recognition system) can be adjusted directly while the sound is playing using the On/Off knob.*

– **Increasing or decreasing the volume**: turn the On/Off knob ① ⇨ *page 145, fig. 149* to the right or left.
– **Muting or pausing**: press the On/Off knob briefly. **Or**: turn the On/Off knob to the left until the symbol ⑫ ⇨ *page 155* appears. An active audio/video source is stopped.
– **Unmuting or resuming**: press the On/Off knob briefly. **Or**: turn the On/Off knob to the right.

WARNING

To reduce the risk of an accident, adjust the volume of the audio system so that audible signals from outside the vehicle, such as police and fire sirens, can be heard easily at all times.

Tips

Volume that is too high or too low is automatically adjusted to a set level when the MMI is switched on.

Adjusting the system volume

▸ Select: MENU button > **Sound** > left control button.

Telephone

Applies to: vehicles with telephone

Mute telephone: messages and ringtones are set to mute.

Ringtone: see ⇨ *page 183,* **Ringtone and volume settings**.

Ringtone volume: you can adjust the volume of the selected ringtone by turning the control knob.

Message volume: you can adjust the volume of the notification for an incoming text message by turning the control knob.

Microphone input level: you can adjust the call volume during a phone call by turning the control knob.

Navigation

Applies to: vehicles with navigation system

Voice guidance: see ⇨ *page 207*.

Voice guidance during phone call: see ⇨ *page 207*.

Voice guidance volume: you can adjust the voice guidance volume by turning the control knob. **Or**: you can adjust the voice guidance volume during active route guidance by turning the On/Off knob.

Entertainment fader: the volume of audio playback can be temporarily lowered when the parking system or voice guidance is active.

Voice recognition system

Applies to: vehicles with voice recognition system

Command display: see ⇨ *page 241*.

Short dialog: see ⇨ *page 241*.

Speech dialog system volume: see ⇨ *page 241*.

Individual speech training: see ⇨ *page 241*.

Parking aid*

You can adjust the volume of the signal tone by turning the control knob.

– **Adjusting** the **Front volume**: select and confirm **High**, **Medium** or **Low**.
– **Adjusting** the **Rear volume**: select and confirm **High**, **Medium** or **Low**.

MMI touch*

Turn the control knob to adjust the volume of the spoken prompts from the MMI touch*.

8W0012721BG

Restarting the MMI

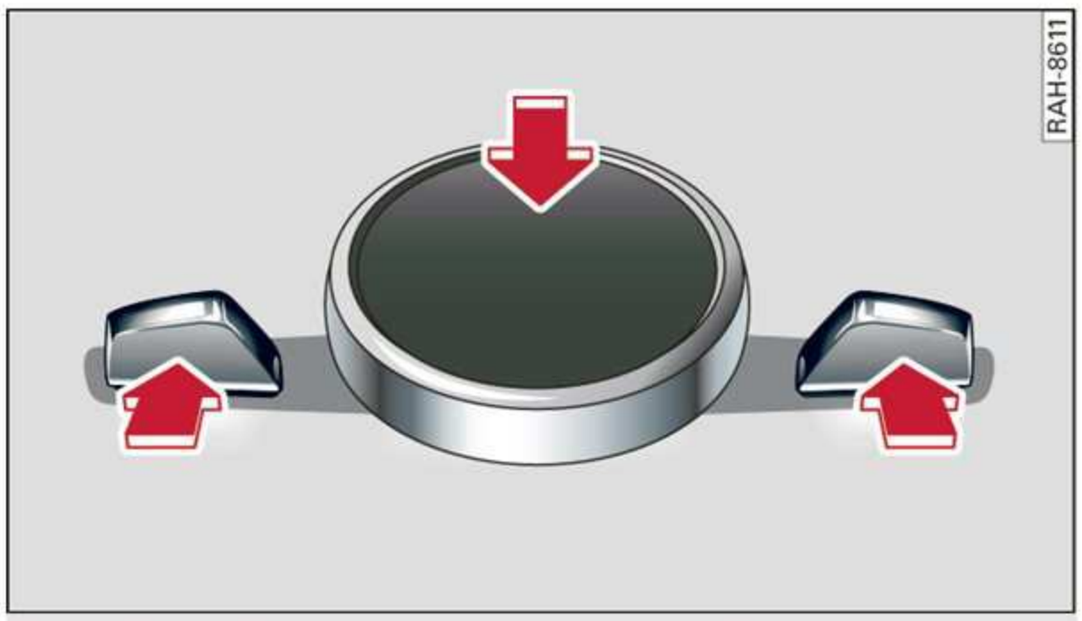


Fig. 213 Button combination to restart the system

► Briefly press the control knob and both buttons *at the same time* to immediately open the menu upward ⇨ *fig. 213*.

Software license information

Information on MMI software and licensing agreements

– Select: MENU button > **Settings** > left control button > **System maintenance** > **Version information**.
– **Or**: online at www.audiusa.com/softwareinfo.

Information on head-up display software and licensing agreements

– Requirement: the vehicle must be stationary.
– Press and hold the head-up display button for more than five seconds after switching on the ignition.
– Press the control knob to close the information.
Or: start driving.

Information on instrument cluster software and licensing agreements

Press the reset button O.O [1] twice within five seconds of switching the ignition on.

[1] Not available in all vehicles.

Driving safety

Basics

Safe driving habits

Please remember - safety first!

The individual safety features of your vehicle can work together as a system to help protect you and your passengers in a wide range of accidents. These features cannot work as a system if they are not always correctly adjusted and correctly used.

This chapter contains important information, tips, instructions and warnings that you need to read and observe for your own safety, the safety of your passengers and others. We have summarized here what you need to know about safety belts, airbags, child restraints as well as child safety. Your safety is for us *priority number 1*. Always observe the information and warnings in this section - for your own safety as well as that of your passengers.

The information in this section applies to all model versions of your vehicle. Some of the features described in this sections may be standard equipment on some models, or may be optional equipment on others. If you are not sure, ask your authorized Audi dealer.

WARNING

- Always make sure that you follow the instructions and heed the WARNINGS in this manual. It is in your interest and in the interest of your passengers.
- Always keep all of the Owner's Literature manuals in your Audi when you lend or sell your vehicle so that this important information will always be available to the driver and passengers.
- Always keep the Owner's Literature handy so that you can find it easily if you have questions.

Important things to do before driving

Safety is everybody's job! Vehicle and occupant safety always depends on the informed and careful driver.

For your safety and the safety of your passengers, **before driving always:**

- Make sure that all lights and signals are operating correctly.
- Make sure that the tire pressure is correct.
- Make sure that all windows are clean and afford good visibility to the outside.
- Secure all luggage and other items carefully ⇨ *page 64*.
- Make sure that nothing can interfere with the pedals.
- Adjust front seat, head restraint and mirrors correctly for your height.
- Applies to: adjustable head restraints: Instruct passengers to adjust the head restraints according to their height.
- Make sure to use the right child restraint correctly to protect children ⇨ *page 285, Child safety*.
- Sit properly in your seat and make sure that your passengers do the same ⇨ *page 58, Front seats*.
- Fasten your safety belt and wear it properly. Also instruct your passengers to fasten their safety belts properly ⇨ *page 253*.

What impairs driving safety?

Safe driving is directly related to the condition of the vehicle, the driver as well as the driver's ability to concentrate on the road without being distracted.

The driver is responsible for the safety of the vehicle and all of its occupants. If your ability to drive is impaired, safety risks for everybody in the vehicle increase and you also become a hazard to everyone else on the road ⇨ ⚠. Therefore:

- Do not let yourself be distracted by passengers or by using a cellular telephone.
- NEVER drive when your driving ability is impaired (by medications, alcohol, drugs, etc.). ▶

- ▸ Observe all traffic laws, rules of the road and speed limits and plain common sense.
- ▸ ALWAYS adjust your speed to road, traffic and weather conditions.
- ▸ Take frequent breaks on long trips. Do not drive for more than two hours at a stretch.
- ▸ Do NOT drive when you are tired, under pressure or when you are stressed.

WARNING

Impaired driving safety increases the risk of serious personal injury and death whenever a vehicle is being used.

Correct passenger seating positions

Proper seating position for the driver

The proper driver seating position is important for safe, relaxed driving.

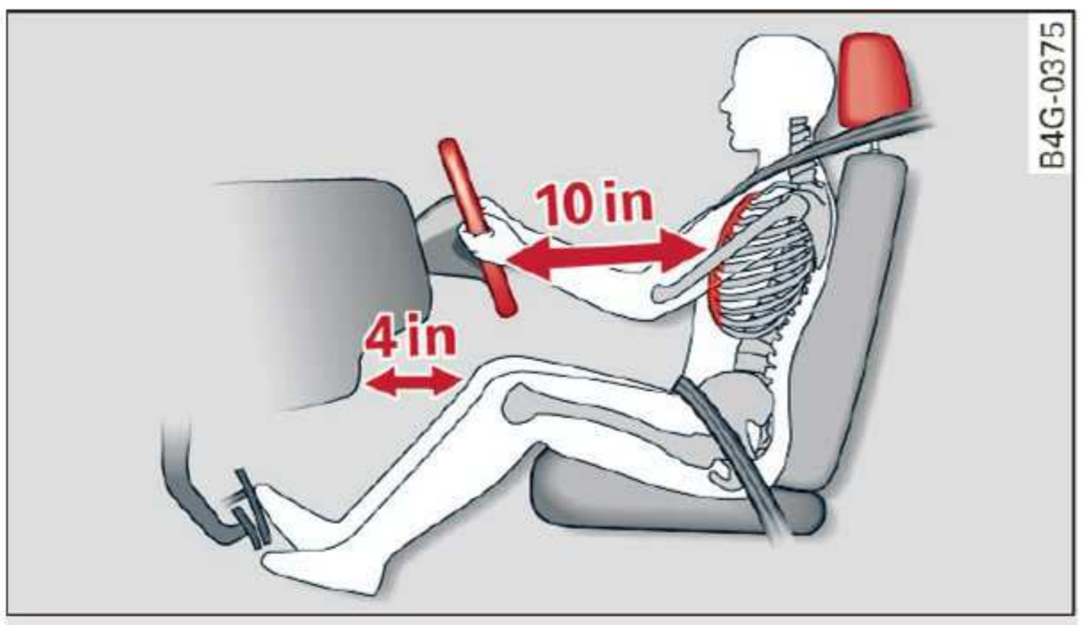


Fig. 214 Correct seating position

For your own safety and to reduce the risk of injury in the event of an accident, we recommend that you adjust the driver's seat to the following position:

- ▸ Adjust the driver's seat so that you can easily push the pedals all the way to the floor while keeping your knee(s) slightly bent ⇨ ⚠.
- ▸ Adjust the angle of the seatback so that it is in an upright position so that your back comes in full contact with it when you drive.
- ▸ Adjust the steering wheel so that there is a distance of at least 10 inches (25 cm) between the steering wheel and your breast bone ⇨ *fig. 214*. If not possible, see your authorized Audi dealer about adaptive equipment.
- ▸ Adjust the steering wheel so that the steering wheel and airbag cover points at your chest and not at your face.
- ▸ Grasp the top of the steering wheel with your elbow(s) slightly bent.
- ▸ Applies to: adjustable head restraints: Adjust the head restraint so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible.
- ▸ Fasten and wear safety belts correctly ⇨ *page 256*.
- ▸ Always keep both feet in the footwell so that you are in control of the vehicle at all times.

For detailed information on how to adjust the driver's seat, see ⇨ *page 58*.

WARNING

Drivers who are unbelted, out of position or too close to the airbag can be seriously injured by an airbag as it unfolds. To help reduce the risk of serious personal injury:

- – Always adjust the driver's seat and the steering wheel so that there are at least 10 inches (25 cm) between your breastbone and the steering wheel.
- – Always adjust the driver's seat and the steering wheel so that there are at least 4 inches (10 cm) between the knees and the lower part of the instrument panel.
- – Always hold the steering wheel on the outside of the steering wheel rim with your hands at the 9 o'clock and 3 o'clock positions to help reduce the risk of personal injury if the driver's airbag inflates.
- – Never hold the steering wheel at the 12 o'clock position or with your hands at other positions inside the steering wheel rim or on the steering wheel hub. Holding the steering wheel the wrong way can cause serious injuries to the hands, arms and head if the driver's airbag deploys.
- – Pointing the steering wheel toward your face decreases the ability of the supplemental driver's airbag to protect you in a collision. ▸

– Always sit in an upright position and never lean against or place any part of your body too close to the area where the airbags are located.
– Before driving, always adjust the front seats and head restraints properly and make sure that all passengers are properly restrained.
– Never adjust the seats while the vehicle is moving. Your seat may move unexpectedly and you could lose control of the vehicle.
– Never drive with the backrest reclined or tilted far back! The farther the backrests are tilted back, the greater the risk of injury due to incorrect positioning of the safety belt and improper seating position.
– Children must always ride in child safety seats ⇨ *page 285*. Special precautions apply when installing a child safety seat on the front passenger seat ⇨ *page 261*.

Proper seating position for the front passenger

The proper front passenger seating position is important for safe, relaxed driving.

For your own safety and to reduce the risk of injury in the event of an accident, we recommend that you adjust the seat for the front passenger to the following position:

- ▸ Adjust the angle of the seatback so that it is in an upright position and your back comes in full contact with it whenever the vehicle is moving.
- ▸ Applies to: adjustable head restraints: Adjust the head restraint so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible ⇨ *page 59*.
- ▸ Keep both feet flat on the floor in front of the front passenger seat.
- ▸ Fasten and wear safety belts correctly ⇨ *page 256*.

For detailed information on how to adjust the front passenger's seat, see ⇨ *page 58*.

WARNING

Front seat passengers who are unbelted, out of position or too close to the airbag can be seriously injured or killed by the airbag as it unfolds. To help reduce the risk of serious personal injury:

– Passengers must always sit in an upright position and never lean against or place any part of their body too close to the area where the airbags are located.
– Passengers who are unbelted, out of position or too close to the airbag can be seriously injured by an airbag as it unfolds with great force in the blink of an eye.
– Always make sure that there are at least 10 inches (25 cm) between the front passenger's breastbone and the instrument panel.
– Always make sure that there are at least 4 inches (10 cm) between the front passenger's knees and the lower part of the instrument panel.
– Each passenger must always sit on a seat of their own and properly fasten and wear the safety belt belonging to that seat.
– Before driving, always adjust the front passenger seat and head restraint properly.
– Always keep your feet on the floor in front of the seat. Never rest them on the seat, instrument panel, out of the window, etc. The airbag system and safety belt will not be able to protect you properly and can even increase the risk of injury in a crash.
– Never drive with the backrest reclined or tilted far back! The farther the backrests are tilted back, the greater the risk of injury due to incorrect positioning of the safety belt and improper seating position.
– Children must always ride in child safety seats ⇨ *page 285*. Special precautions apply when installing a child safety seat on the front passenger seat ⇨ *page 261*.

8W0012721BG

Proper seating positions for passengers in rear seats

Rear seat passengers must sit upright with both feet on the floor consistent with their physical size and be properly restrained whenever the vehicle is in use.

To reduce the risk of injury caused by an incorrect seating position in the event of a sudden braking maneuver or an accident, your passengers on the rear bench seat must always observe the following:

- ► Applies to: adjustable head restraints: If there are passengers on the outer rear seats, adjust the head restraints so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible. If there is a passenger in the center rear seat, slide the head restraint upward ⇨ *page 60*.
- ► Make sure that the seatback is securely latched in the upright position ⇨ *page 66*.
- ► Keep both feet flat in the footwell in front of the rear seat.
- ► Fasten and wear safety belts properly ⇨ *page 256*.
- ► Make sure that children are always properly restrained in a child restraint that is appropriate for their size and age ⇨ *page 285*.

WARNING

Passengers who are improperly seated on the rear seat can be seriously injured in a crash.

– Each passenger must always sit on a seat of their own and properly fasten and wear the safety belt belonging to that seat.
– Safety belts only offer maximum protection when the seatback is securely latched in the upright position and the safety belts are properly positioned on the body. By not sitting upright, a rear seat passenger increases the risk of personal injury from improperly positioned safety belts!
– Always adjust the head restraint properly so that it can give maximum protection.

Proper adjustment of head restraints

Correctly adjusted head restraints are an important part of your vehicle's occupant restraint system and can help to reduce the risk of injuries in accident situations.

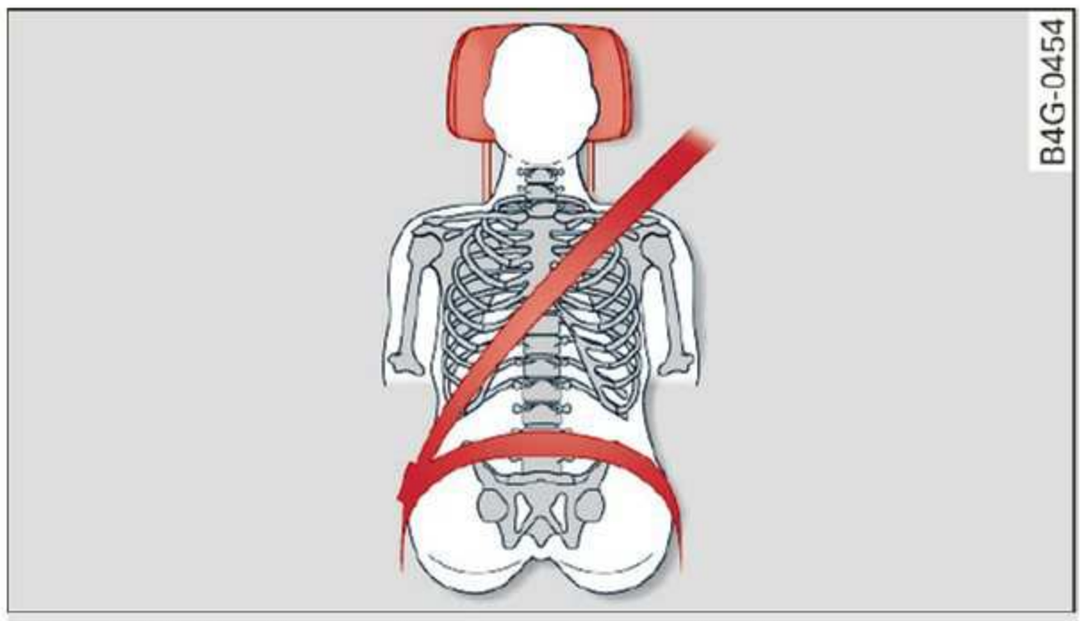


Fig. 215 Head restraint: viewed from the front

The head restraints must be correctly adjusted to achieve the best protection.

- ► Applies to: adjustable head restraints: Adjust the head restraints so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible. Position* the head restraint as close as possible to the back of your head.
- ► If there is a passenger in the center rear seat, slide the head restraint upward.

Adjusting head restraints ⇨ *page 59*.

WARNING

All seats are equipped with head restraints. Driving without head restraints or with head restraints that are not properly adjusted increases the risk of serious or fatal neck injury dramatically. To help reduce the risk of injury:

– Always drive with the head restraints in place and properly adjusted.
– Every person in the vehicle must have a properly adjusted head restraint.
– Always make sure each person in the vehicle properly adjusts their head restraint. Adjust the head restraints so the upper edge is as even as possible with the top of your head. If that is not possible, try to adjust the head restraint so that it is as close to this position as possible.

– Never attempt to adjust head restraint while driving. If you have driven off and must adjust the driver headrest for any reason, first stop the vehicle safely before attempting to adjust the head restraint.
– Children must always be properly restrained in a child restraint that is appropriate for their age and size ⇨ *page 285*.

Examples of improper seating positions

The occupant restraint system can only reduce the risk of injury if vehicle occupants are properly seated.

Improper seating positions can cause serious injury or death. Safety belts can only work when they are properly positioned on the body. Improper seating positions reduce the effectiveness of safety belts and will even increase the risk of injury and death by moving the safety belt to critical areas of the body. Improper seating positions also increase the risk of serious injury and death when an airbag deploys and strikes an occupant who is not in the proper seating position. A driver is responsible for the safety of all vehicle occupants and especially for children. Therefore:

► Never allow anyone to assume an incorrect seating position when the vehicle is being used ⇨ ⚠.

The following bulletins list only some sample positions that will increase the risk of serious injury and death. Our hope is that these examples will make you more aware of seating positions that are dangerous.

Therefore, whenever the vehicle is moving:

– never stand up in the vehicle
– never stand on the seats
– never kneel on the seats
– never ride with the seatback reclined
– never lie down on the seats
– never lean up against the instrument panel
– never sit on the edge of the seat
– never sit sideways
– never lean out the window
– never put your feet out the window
– never put your feet on the instrument panel
– never rest your feet on the seat cushion or back of the seat
– never ride in the footwell
– never ride in the cargo area

⚠ WARNING

Improper seating positions increase the risk of serious personal injury and death whenever a vehicle is being used.
– Always make sure that all vehicle occupants stay in a proper seating position and are properly restrained whenever the vehicle is being used.

Driver's and front passenger's footwell

Important safety instructions

⚠ WARNING

Always make sure that the knee airbag can inflate without interference. Objects between yourself and the airbag can increase the risk of injury in an accident by interfering with the way the airbag deploys or by being pushed into you as the airbag deploys.
– No persons (children) or animals should ride in the footwell in front of the passenger seat. If the airbag deploys, this can result in serious or fatal injuries.
– No objects of any kind should be carried in the footwell area in front of the driver's or passenger's seat. Bulky objects (shopping bags, for example) can hamper or prevent proper deployment of the airbag. Small objects can be thrown through the vehicle if the airbag deploys and injure you or your passengers.

8W0012721BG

Pedal area

Pedals

The pedals must always be free to move and must never be interfered with by a floor mat or any other object.

Make sure that all pedals move freely without interference and that nothing prevents them from returning to their original positions.

Only use floor mats that leave the pedal area free and can be secured with floor mat fasteners.

If a brake circuit fails, increased brake pedal travel is required to bring the vehicle to a full stop.

WARNING

Pedals that cannot move freely can cause loss of vehicle control and increase the risk of serious injury.

- Never place any objects in the driver's footwell. An object could get into the pedal area and interfere with pedal function. In case of sudden braking or an accident, you would not be able to brake or accelerate!
- Always make sure that nothing can fall or move into the driver's footwell.

Floor mats on the driver side

Always use floor mats that can be securely attached to the floor mat fasteners and do not interfere with the free movement of the pedals.

▸ Make sure that the floor mats are properly secured and cannot move and interfere with the pedals ⇨ ⚠.

Use only floor mats that leave the pedal area unobstructed and that are firmly secured so that they cannot slip out of position. You can obtain suitable floor mats from your authorized Audi dealer.

Floor mat fasteners are installed in your Audi.

Floor mats used in your vehicle must be attached to these fasteners. Properly securing the floor mats will prevent them from sliding into positions that could interfere with the pedals or impair safe operation of your vehicle in other ways.

WARNING

Pedals that cannot move freely can result in a loss of vehicle control and increase the risk of serious personal injury.

- Always make sure that floor mats are properly secured.
- Never place or install floor mats or other floor coverings in the vehicle that cannot be properly secured in place to prevent them from slipping and interfering with the pedals or the ability to control the vehicle.
- Never place or install floor mats or other floor coverings on top of already installed floor mats. Additional floor mats and other coverings will reduce the size of the pedal area and interfere with the pedals.
- Always properly reinstall and secure floor mats that have been taken out for cleaning.
- Always make sure that objects cannot fall into the driver footwell while the vehicle is moving. Objects can become trapped under the brake pedal and accelerator pedal causing a loss of vehicle control.

Safety belts

General information

Always wear safety belts!

Wearing safety belts correctly saves lives!

This chapter explains why safety belts are necessary, how they work and how to adjust and wear them correctly.

► Read all the information that follows and heed all of the instructions and WARNINGS.

WARNING

Not wearing safety belts or wearing them improperly increases the risk of serious personal injury and death.

– Safety belts are the single most effective means available to reduce the risk of serious injury and death in automobile accidents. For your protection and that of your passengers, always correctly wear safety belts when the vehicle is moving.
– Pregnant women, injured, or physically impaired persons must also use safety belts. Like all vehicle occupants, they are more likely to be seriously injured if they do not wear safety belts. The best way to protect a fetus is to protect the mother – throughout the entire pregnancy.
– Be sure everyone riding in the vehicle is properly restrained with a separate safety belt or child restraint.

Number of seats

Your Audi has a total of five seating positions: two in the front and three in the rear. Each seating position has a safety belt.

WARNING

Not wearing safety belts or wearing them improperly increases the risk of serious personal injury and death.

– Never strap more than one person, including small children, into any belt. It is especially dangerous to place a safety belt over a child sitting on your lap.
– Never let more people ride in the vehicle than there are safety belts available.

Safety belt warning light

Your vehicle has a warning system for the driver and front seat passenger to remind you about the importance of buckling-up.



Fig. 216 Safety belt warning light in the instrument cluster – enlarged

Before driving off, always:

► Fasten your safety belt and make sure you are wearing it properly.
► Make sure that your passengers also buckle up and properly wear their safety belts.
► Protect children with a child restraint system appropriate for the size and age.

The warning light in the instrument cluster lights up when the ignition is switched on as a reminder to fasten the safety belts. In addition, you will hear a warning tone for a certain period of time.

Fasten your safety belt and make sure that your passengers also properly put on their safety belts.

WARNING

– Safety belts are the single most effective means available to reduce the risk of serious injury and death in automobile accidents. For your protection and that of your passengers, always correctly wear safety belts when the vehicle is moving.
– Failure to pay attention to the warning light that comes on could lead to personal injury.

Why use safety belts?

Frontal collisions and the law of physics

Frontal crashes create very strong forces for people riding in vehicles.

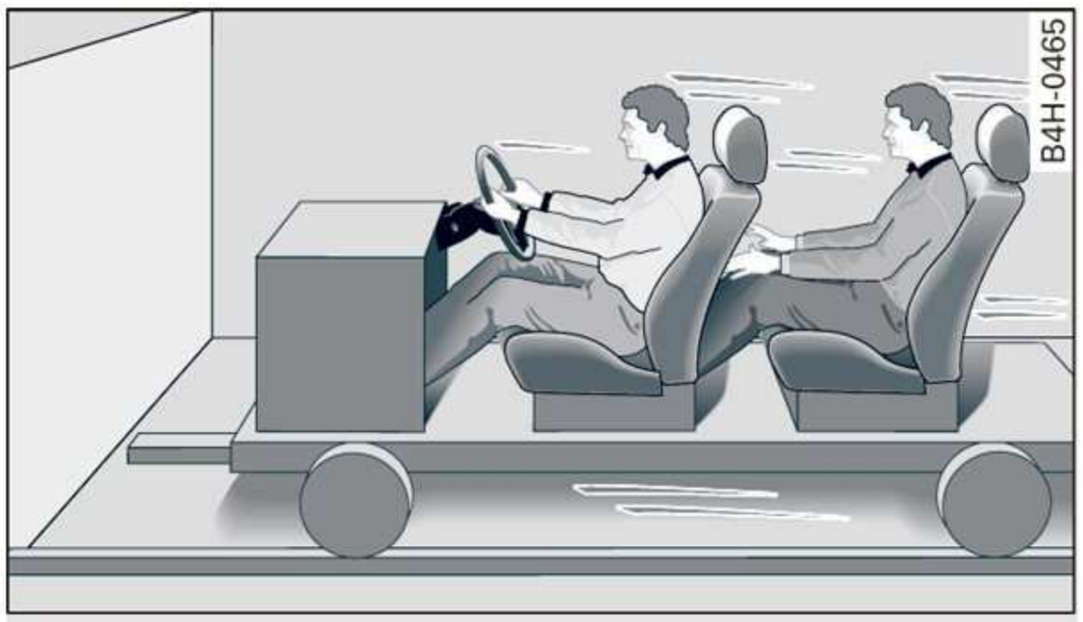


Fig. 217 Unbelted occupants in a vehicle heading for a wall

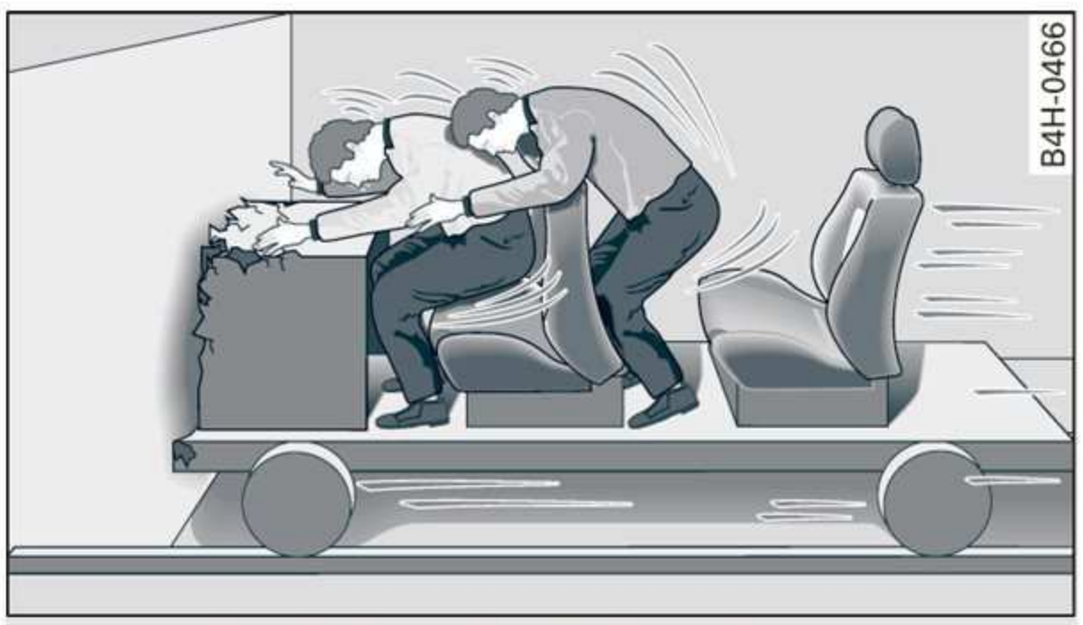


Fig. 218 The vehicle crashes into the wall

The physical principles are simple. Both the vehicle and the passengers possess energy which varies with vehicle speed and body weight. Engineers call this energy “kinetic energy.”

The higher the speed of the vehicle and the greater the vehicle's weight, the more energy that has to be “absorbed” in the crash.

Vehicle speed is the most significant factor. If the speed doubles from 15 to 30 mph (25 to 50 km/h), the energy increases 4 times!

Because the passengers of this vehicle are not using safety belts ⇨ *fig. 217*, they will keep moving at the same speed the vehicle was moving just before the crash, until something stops them – here, the wall ⇨ *fig. 218*.

The same principles apply to people sitting in a vehicle that is involved in a frontal collision. Even at city speeds of 20 to 30 mph (30 to 50 km/h), the forces acting on the body can reach one ton (2,000 lbs. or 1,000 kg) or more. At greater speeds, these forces are even higher.

People who do not use safety belts are also not attached to their vehicle. In a frontal collision they will also keep moving forward at the speed their vehicle was travelling just before the crash. Of course, the laws of physics don't just apply to frontal collisions, they determine what happens in all kinds of accidents and collisions.

What happens to occupants not wearing safety belts?

In crashes unbelted occupants cannot stop themselves from flying forward and being injured or killed. Always wear your safety belts!



Fig. 219 A driver not wearing a safety belt is violently thrown forward



Fig. 220 A rear passenger not wearing a safety belt will fly forward and strike the driver

Unbelted occupants are not able to resist the tremendous forces of impact by holding tight or bracing themselves. Without the benefit of safety restraint systems, the unrestrained occupant will slam violently into the steering wheel, instrument panel, windshield, or whatever else is in the way ⇨ *fig. 219*. This impact with the vehicle interior has all the energy they had just before the crash. ▶

Never rely on airbags alone for protection. Even when they deploy, airbags provide only additional protection. Airbags are not supposed to deploy in all kinds of accidents. Although your Audi is equipped with airbags, all vehicle occupants, including the driver, must wear safety belts correctly in order to minimize the risk of severe injury or death in a crash.

Remember too, that airbags will deploy only once and that your safety belts are always there to offer protection in those accidents in which airbags are not supposed to deploy or when they have already deployed. Unbelted occupants can also be thrown out of the vehicle where even more severe or fatal injuries can occur.

It is also important for the rear passengers to wear safety belts correctly. Unbelted passengers in the rear seats endanger not only themselves but also the driver and other passengers ⇨ *fig. 220*. In a frontal collision they will be thrown forward violently, where they can hit and injure the driver and/or front seat passenger.

Safety belts protect

People think it's possible to use the hands to brace the body in a minor collision. It's simply not true!



Fig. 221 Driver is correctly restrained in a sudden braking maneuver

Safety belts used properly can make a big difference. Safety belts help to keep passengers in their seats, gradually reduce energy levels applied to the body in an accident, and help prevent the uncontrolled movement that can cause serious injuries. In addition, safety belts reduce the danger of being thrown out of the vehicle.

Safety belts attach passengers to the car and give them the benefit of being slowed down more gently or “softly” through the “give” in the safety belts, crush zones and other safety features engineered into today's vehicles. By “absorbing” the kinetic energy over a longer period of time, the safety belts make the forces on the body more “tolerable” and less likely to cause injury.

Although these examples are based on a frontal collision, safety belts can also substantially reduce the risk of injury in other kinds of crashes. So, whether you're on a long trip or just going to the corner store, always buckle up and make sure others do, too. Accident statistics show that vehicle occupants properly wearing safety belts have a lower risk of being injured and a much better chance of surviving an accident. Properly using safety belts also greatly increases the ability of the supplemental airbags to do their job in a collision. For this reason, wearing a safety belt is legally required in most countries including much of the United States and Canada.

Although your Audi is equipped with airbags, you still have to wear the safety belts provided. Front airbags, for example, are activated only in some frontal collisions. The front airbags are not activated in all frontal collisions, in side and rear collisions, in rollovers or in cases where there is not enough deceleration through impact to the front of the vehicle. The same goes for the other airbag systems in your Audi. So, always wear your safety belt and make sure everybody in your vehicle is properly restrained!

Important safety instructions about safety belts

Safety belts must always be correctly positioned across the strongest bones of your body.

- Always wear safety belts as illustrated and described in this chapter.
- Make sure that your safety belts are always ready for use and are not damaged.

WARNING

Not wearing safety belts or wearing them improperly increases the risk of serious personal ▶

8W0012721BG

injury and death. Safety belts can work only when used correctly.

– Always fasten your safety belts correctly before driving off and make sure all passengers are correctly restrained.
– For maximum protection, safety belts must always be positioned properly on the body.
– Never strap more than one person, including small children, into any belt.
– Never place a safety belt over a child sitting on your lap.
– Always keep feet in the footwell in front of the seat while the vehicle is being driven.
– Never let any person ride with their feet on the instrument panel or sticking out the window or on the seat.
– Never remove a safety belt while the vehicle is moving. Doing so will increase your risk of being injured or killed.
– Never wear belts twisted.
– Never wear belts over rigid or breakable objects in or on your clothing, such as eye glasses, pens, keys, etc., as these may cause injury.
– Never allow safety belts to become damaged by being caught in door or seat hardware.
– Do not wear the shoulder part of the belt under your arm or otherwise out of position.
– Several layers of heavy clothing may interfere with correct positioning of belts and reduce the overall effectiveness of the system.
– Always keep belt buckles free of anything that may prevent the buckle from latching securely.
– Never use comfort clips or devices that create slack in the shoulder belt. However, special clips may be required for the proper use of some child restraint systems.
– Torn or frayed safety belts can tear, and damaged belt hardware can break in an accident. Inspect belts regularly. If webbing, bindings, buckles, or retractors are damaged, have belts replaced by an authorized Audi dealer or qualified workshop.
– Safety belts that have been worn and loaded in an accident must be replaced with the correct replacement safety belt by an authorized Audi dealer. Replacement may be necessary even if damage cannot be clearly seen. Anchorages that were loaded must also be inspected.
– Never remove, modify, disassemble, or try to repair the safety belts yourself.
– Always keep the belts clean. Dirty belts may not work properly and can impair the function of the inertia reel ⇨ *table Interior cleaning on page 344*.

Safety belts

Fastening safety belts

Safety first – everybody buckle up!

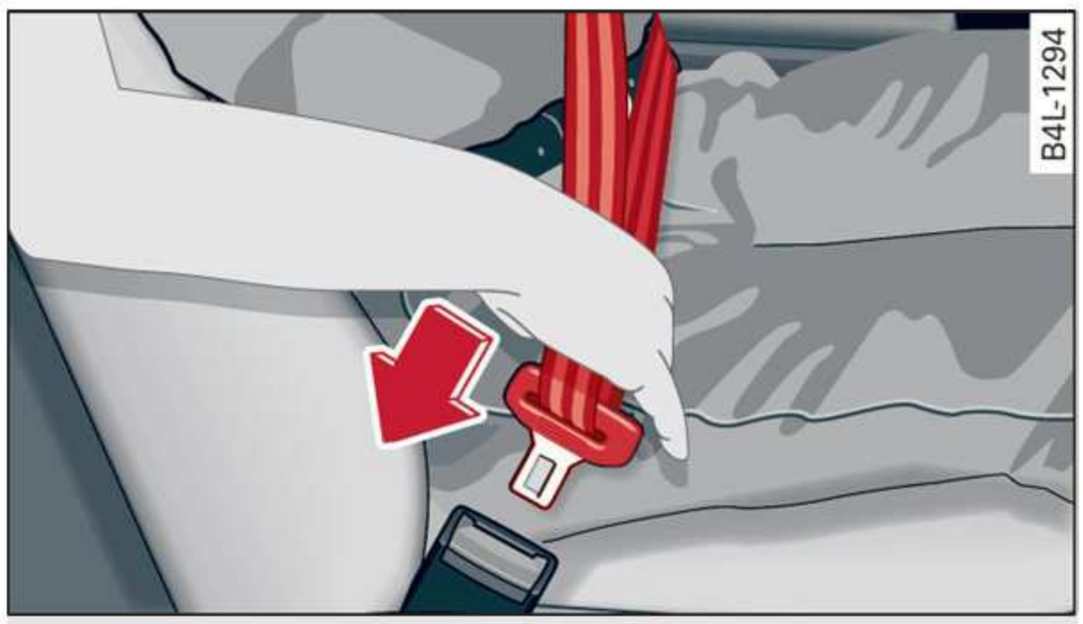


Fig. 222 Belt buckle and tongue on the driver's seat

To provide maximum protection, safety belts must always be positioned correctly on the wearer's body.

- ▸ Adjust the front seat and head restraint properly ⇨ *page 58, Front seats*.
- ▸ Make sure the seatback of the rear seat bench is in an upright position and securely latched in place before using the belt ⇨ ⚠.
- ▸ Pull the safety belt evenly across the chest and pelvis ⇨ *fig. 222*, ⇨ ⚠.
- ▸ Insert the tongue into the correct buckle of your seat until you hear it latch securely.
- ▸ Pull on the belt to make sure that it is securely latched in the buckle.

Automatic safety belt retractors

Every safety belt is equipped with an automatic belt retractor on the shoulder belt. This feature locks the belt when the belt is pulled out fast, during hard braking and in an accident. The belt ▶

may also lock when you drive up or down a steep hill or through a sharp curve. During normal driving the belt lets you move freely.

Safety belt pretensioners

Safety belts with pretensioners help to tighten the safety belt and remove slack when the pretensioners are activated ⇨ *page 259*. The function of the pretensioner is monitored by a warning light ⇨ *page 23*.

Convertible locking retractor

Every safety belt except the one on the driver seat is equipped with a convertible locking retractor that **must** be used when the safety belt is used to attach a child safety seat. Be sure to read the important information about this feature ⇨ *page 296*.

WARNING

Improperly positioned safety belts can cause serious injury in an accident ⇨ *page 257, Safety belt position*.

- Safety belts offer optimum protection only when the seatback is upright and belts are properly positioned on the body.
- Always make sure that the rear seat backrest to which the center rear safety belt is attached is securely latched whenever the rear center safety belt is being used. If the backrest is not securely latched, the passenger will move forward with the backrest during sudden braking, in a sudden maneuver and especially in a crash.
- Never attach the safety belt to the buckle for another seat. Attaching the belt to the wrong buckle will reduce safety belt effectiveness and can cause serious personal injury.
- A passenger who is not properly restrained can be seriously injured by the safety belt itself when it moves from the stronger parts of the body into critical areas like the abdomen.
- Always lock the convertible locking retractor when you are securing a child safety seat in the vehicle ⇨ *page 298*.

Safety belt position

Correct belt position is the key to getting maximum protection from safety belts.

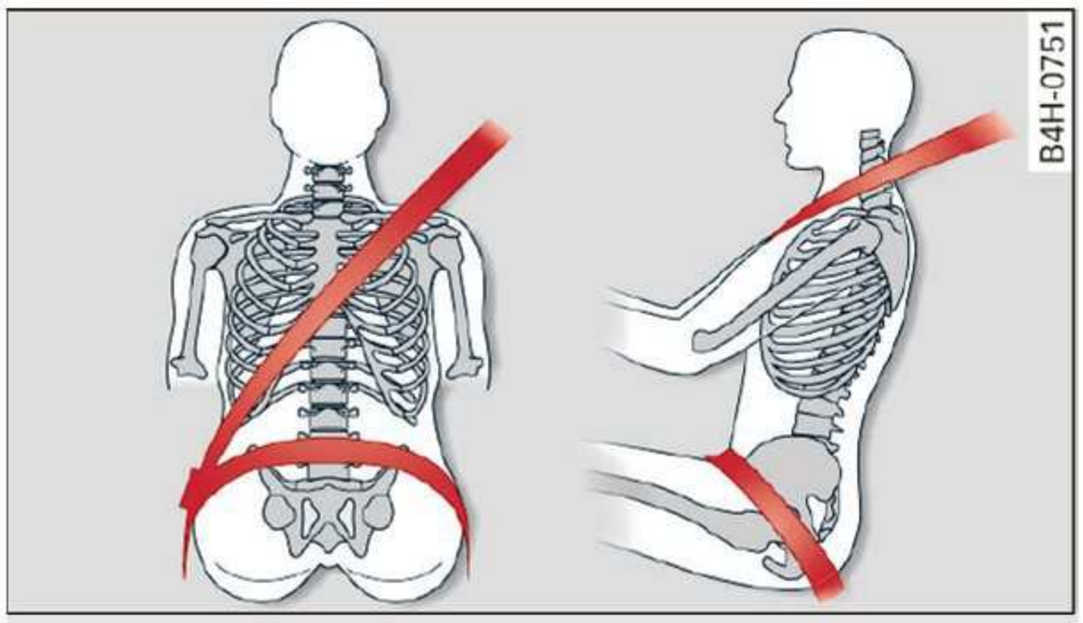


Fig. 223 Safety belt position

Standard features on your vehicle help you adjust the position of the safety belt to match your body size.

– belt height adjustment for the front seats,
– height-adjustable front seats.

WARNING

Improperly positioned safety belts can cause serious personal injury in an accident.

- The shoulder belt should lie as close to the center of the collar bone as possible and should fit well on the body. Hold the belt above the latch tongue and pull it evenly across the chest so that it sits as low as possible on the pelvis and there is no pressure on the abdomen. The belt should always fit snugly ⇨ *fig. 223*. Pull on the belt to tighten if necessary.
- The lap belt portion of the safety belt must be positioned as low as possible across pelvis and never over the abdomen. Make sure the belt lies flat and snug ⇨ *fig. 223*. Pull on the belt to tighten if necessary.
- A loose-fitting safety belt can cause serious injuries by shifting its position on your body from the strong bones to more vulnerable, soft tissue and cause serious injury.
- Always read and heed all WARNINGS and other important information ⇨ *page 255*.

Pregnant women must also be correctly restrained

The best way to protect the fetus is to make sure that expectant mothers always wear safety belts correctly – throughout the pregnancy.



Fig. 224 Safety belt position during pregnancy

To provide maximum protection, safety belts must always be positioned correctly on the wearer's body ⇨ *page 257*.

- ► Adjust the front seat and head restraint correctly ⇨ *page 58, Front seats*.
- ► Make sure the seatback of the rear seat bench is in an upright position and securely latched in place before using the belt.
- ► Pull the safety belt evenly across the chest so that it sits as low as possible on the pelvis and there is no pressure on the abdomen ⇨ *fig. 224*, ⇨ ⚠.
- ► Insert the tongue into the correct buckle of your seat until you hear it latch securely.
- ► Pull on the belt to make sure that it is securely latched in the buckle.

⚠ WARNING

Improperly positioned safety belts can cause serious personal injury in an accident.

– Expectant mothers must always wear the lap portion of the safety belt as low as possible across the pelvis and below the rounding of the abdomen.

– Always read and heed all WARNINGS and other important information ⇨ ⚠ *in Fastening safety belts on page 257*.

Unfastening safety belts

Unbuckle the safety belt with the red release button only after the vehicle has stopped.

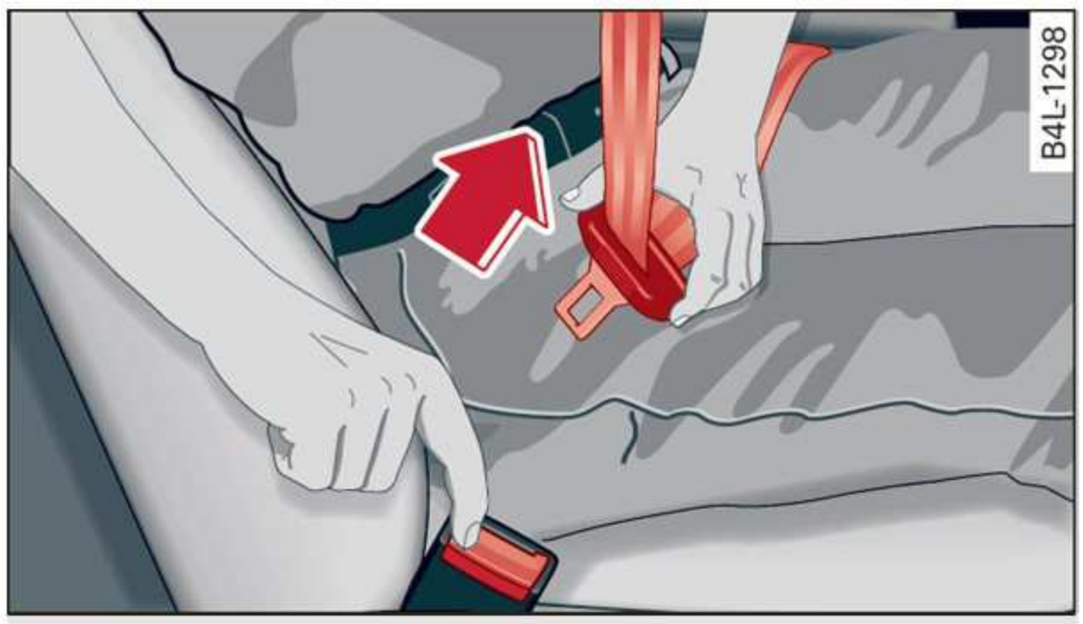


Fig. 225 Releasing the tongue from the buckle

- ► Push the red release button on the buckle ⇨ *fig. 225*. The belt tongue will spring out of the buckle ⇨ ⚠.
- ► Let the belt wind up on the retractor as you guide the belt tongue to its stowed position.

⚠ WARNING

Never unfasten safety belt while the vehicle is moving. Doing so will increase your risk of being injured or killed.

Adjusting safety belt height

With the aid of the safety belt height adjustment, the three point safety belt strap routing can be fitted to the shoulder area, according to body size.

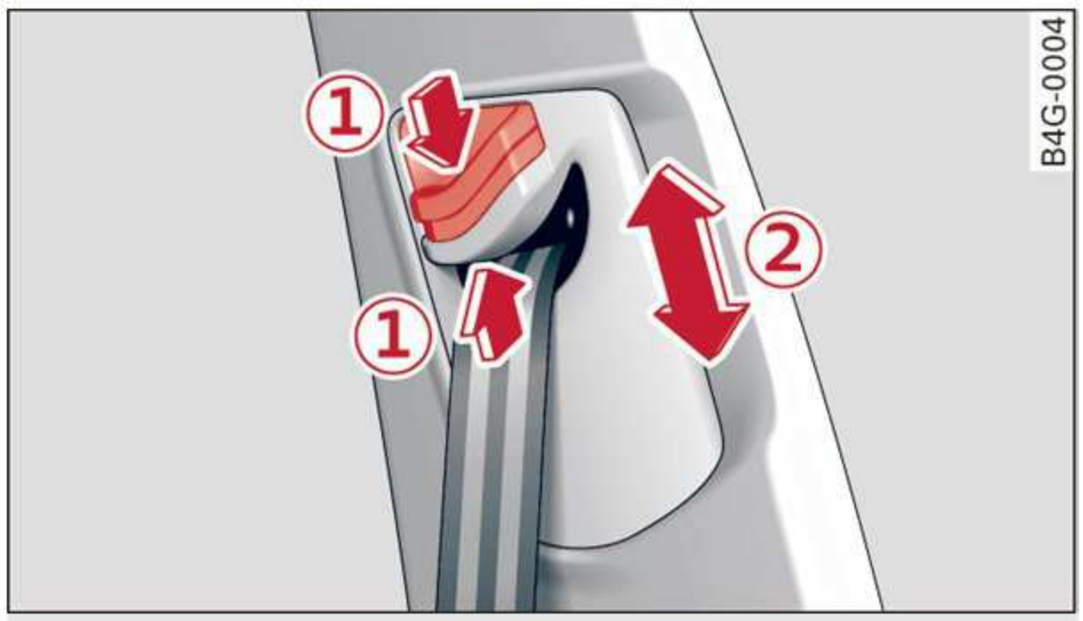


Fig. 226 Safety belt height adjustment – loop-around fittings

The shoulder belt should lie as close to the center of the collar bone as possible and should fit well on the body ⇨ ⚠ *in Safety belt position on page 257*.

- ▸ *Push* the loop-around fittings **up** ⇨ *fig. 226* ②, or
- ▸ *squeeze* together the ① button, and *push* the loop-around fittings **down** ②.
- ▸ Pull the belt to make sure that the upper attachment is properly engaged.

WARNING

Always read and heed all WARNINGS and other important information ⇨ *page 255*.

Tips

With the front seats, the height adjustment of the seat can also be used to adjust the position of the safety belts.

Improperly worn safety belts

Incorrectly positioned safety belts can cause severe injuries.

Wearing safety belts improperly can cause serious injury or death. Safety belts can only work when they are correctly positioned on the body. Improper seating positions reduce the effectiveness of safety belts and will even increase the risk of injury and death by moving the safety belt to critical areas of the body. Improper seating positions also increase the risk of serious injury and death when an airbag deploys and strikes an occupant who is not in the correct seating position. A driver is responsible for the safety of all vehicle occupants and especially for children. Therefore:

- ▸ Never permit anyone to assume an incorrect sitting position in the vehicle while traveling ⇨ ⚠.

WARNING

Improperly worn safety belts increase the risk of serious personal injury and death whenever a vehicle is being used.

– Always make sure that all vehicle occupants are correctly restrained and stay in a correct seating position whenever the vehicle is being used.
– Always read and heed all WARNINGS and other important information ⇨ *page 255*.

Belt tensioners

How safety belt pretensioners work

Reversible safety belt pretensioners

The following functions are available when safety belts with reversible safety belt tensioners are fastened:

– In certain driving situations, the safety belts may tighten with a reversible tensioning function ⇨ *page 112*.
– The safety belts may also tighten with this reversible tensioning function in minor collisions.

Pyrotechnic safety belt pretensioners

Seat belts with pyrotechnic safety belt pretensioners are tensioned automatically in severe collisions, depending on the circumstances. This helps to reduce the forward motion of the occupants.

WARNING

– It is possible for the pretensioners to deploy incorrectly.
– Any work on the tensioner system or removal and installation of system components for other repairs must be performed by a qualified workshop.
– The pyrotechnic system can only provide protection for one collision. If the pyrotechnic pretensioners deploy, the pretensioning system must be replaced.

Tips

– A fine dust is released when the pyrotechnic safety belt pretensioners deploy. This is normal and is not caused by a fire in the vehicle.
– The relevant safety requirements must be observed when the vehicle or components of the system are scrapped. A qualified dealership is familiar with these regulations and will be pleased to pass on the information to you.

Service and disposal of safety belt pretensioner

The safety belt pretensioners are parts of the safety belts on your Audi. Installing, removing, servicing or repairing of belt pretensioners can damage the safety belt system and prevent it from working correctly in a collision.

There are some important things you have to know to make sure that the effectiveness of the system will not be impaired and that discarded components do not cause injury or pollute the environment.

WARNING

Improper care, servicing and repair procedures can increase the risk of personal injury and death by preventing a safety belt pretensioner from activating when needed or activating it unexpectedly:

- The pyrotechnic safety belt pretensioners can only be activated once. If pyrotechnic safety belt pretensioners have been activated, the system must be replaced.
- Never repair, adjust, or change any parts of the safety belt system.
- Safety belt systems including safety belt pretensioners cannot be repaired. Special procedures are required for removal, installation and disposal of this system.
- For any work on the safety belt system, we strongly recommend that you see your authorized Audi dealer or qualified technician who has an Audi approved repair manual, training and special equipment necessary.

Airbag system

Important information

Importance of wearing safety belts and sitting properly

Airbags are only supplemental restraints. For airbags to do their job, occupants must always properly wear their safety belts and be in a proper seating position.

For your safety and the safety of your passengers, before driving off, always:

- Adjust the driver's seat and steering wheel properly ⇨ *page 248*,
- Adjust the front passenger's seat properly ⇨ *page 249*,
- Wear safety belts properly ⇨ *page 255*,
- Always properly use the proper child restraint to protect children ⇨ *page 285*.

In a collision, airbags must inflate within the blink of an eye and with considerable force. The supplemental airbags can cause injuries if the driver or the front seat passenger is not seated properly. Therefore in order to help the airbag to do its job, it is important, both as a driver and as a passenger to sit properly at all times.

By keeping room between your body and the steering wheel and the front of the passenger compartment, the airbag can inflate fully and completely and provide supplemental protection in certain frontal collisions ⇨ *page 248, Correct passenger seating positions*. For details on the operation of the seat adjustment controls ⇨ *page 58*.

It's especially important that children are properly restrained ⇨ *page 285*.

There is a lot that the driver and the passengers can and must do to help the individual safety features installed in your Audi work together as a system.

Proper seating position is important so that the front airbag on the driver side can do its job. If you have a physical impairment or condition that prevents you from sitting properly on the driver seat with the safety belt properly fastened and reaching the pedals, or if you have concerns with regard to the function or operation of the Advanced Airbag System, please contact your authorized Audi dealer or qualified workshop, or call Audi Customer Relations at 1-800-822-2834 for possible modifications to your vehicle.

When the airbag system deploys, a gas generator will fill the airbags, break open the padded covers, and inflate between the steering wheel and the driver and between the instrument panel and the front passenger. The airbags will deflate immediately after deployment so that the front occupants can see through the windshield again without interruption.

All of this takes place in the blink of an eye, so fast that many people don't even realize that the airbags have deployed. The airbags also inflate with a great deal of force and nothing should be in their way when they deploy. Front airbags in combination with properly worn safety belts slow down and limit the occupant's forward movement. Together they help to prevent the driver and front seat passenger from hitting parts of the inside of the vehicle while reducing the forces acting on the occupant during the crash. In this way they help to reduce the risk of injury to the head and upper body in the crash. Airbags do not protect the arms or the lower parts of the body.

Both front airbags will not inflate in all frontal collisions. The triggering of the airbag system depends on the vehicle deceleration rate caused by the collision and registered by the electronic control unit. If this rate is below the reference value programmed into the control unit, the airbags will not be triggered, even though the car may be badly damaged as a result of the collision. Vehicle damage, repair costs or even the lack of vehicle damage is not necessarily an indication of whether an airbag should inflate or not.

Since the circumstances will vary considerably between one collision and another, it is not possible to define a range of vehicle speeds that will cover every possible kind and angle of impact that will always trigger the airbags. Important factors include, for example, the nature (hard or soft) of the object which the car hits, the angle of impact, vehicle speed, etc. The front airbags will ▶

8W0012721BG

also not inflate in side or rear collisions, or in rollovers.

Always remember: Airbags will deploy only once, and only in certain kinds of collisions. Your safety belts are always there to offer protection in those situations in which airbags are not supposed to deploy, or when they have already deployed; for example, when your vehicle strikes or is struck by another vehicle after the first collision.

This is just one of the reasons why an airbag is a supplementary restraint and is not a substitute for a safety belt. The airbag system works most effectively when used with the safety belts. Therefore, always properly wear your safety belts ⇨ *page 253*.

WARNING

Sitting too close to the steering wheel or instrument panel will decrease the effectiveness of the airbags and will increase the risk of personal injury in a collision.

- Never sit closer than 10 inches (25 cm) to the steering wheel or instrument panel.
- If you cannot sit more than 10 inches (25 cm) from the steering wheel, investigate whether adaptive equipment may be available to help you reach the pedals and increase your seating distance from the steering wheel.
- All vehicle occupants and especially children must be restrained properly whenever riding in a vehicle. An unrestrained or improperly restrained child could be injured by striking the interior or by being ejected from the vehicle during a sudden maneuver or impact. An unrestrained or improperly restrained child is also at greater risk of injury or death through contact with an inflating airbag.
- If you are unrestrained, leaning forward, sitting sideways or out of position in any way, your risk of injury is much higher.
- You will also receive serious injuries and could even be killed if you are up against the airbag or too close to it when it inflates - even with an Advanced Airbag.
- To reduce the risk of injury when an airbag inflates, always wear safety belts properly ⇨ *page 256, Safety belts*.
- Always make certain that children age 12 or younger always ride in the rear seat. If children are not properly restrained, they may be severely injured or killed when an airbag inflates.
- Never let children ride unrestrained or improperly restrained in the vehicle. Adjust the front seats properly.
- Never ride with the backrest reclined.
- Always sit as far as possible from the steering wheel or the instrument panel ⇨ *page 248*.
- Always sit upright with your back against the backrest of your seat.
- Never place your feet on the instrument panel or on the seat. Always keep both feet on the floor in front of the seat to help prevent serious injuries to the legs and hips if the airbag inflates.
- Never recline the front passenger's seat to transport objects. Items can also move into the area of the side airbag or the front airbag during braking or in a sudden maneuver. Objects near the airbags can become projectiles and cause injury when an airbag inflates.

WARNING

Airbags that have deployed in a crash must be replaced.

- Use only original equipment airbags approved by Audi and installed by a trained technician who has the necessary tools and diagnostic equipment to properly replace any airbag in your vehicle and assure system effectiveness in a crash.
- Never permit salvaged or recycled airbags to be installed in your vehicle.

Child restraints on the front seat – some important things to know

► Be sure to read the important information and heed the WARNINGS for important details ▶

about children and Advanced Airbags ⇨ *page 285*.

Even though your vehicle is equipped with an Advanced Airbag System, make certain that all children, especially those 12 years and younger, always ride in the back seat properly restrained for their age and size. The airbag on the passenger side makes the front seat a potentially dangerous place for a child to ride. The front seat is not the safest place for a child in a forward-facing child safety seat. It can be a very dangerous place for an infant or a child in a rearward-facing seat.

The Advanced Airbag System in your vehicle has been certified to comply with the requirements of United States Federal Motor Vehicle Safety Standard (FMVSS) 208, as well as Canada Motor Vehicle Safety Standard (CMVSS) 208 as applicable at the time your vehicle was manufactured. According to requirements, the front Advanced Airbag System on the passenger side has been certified for “suppression” for infants of about 12 month old and younger and for “low risk deployment” for children aged 3 to 6 years old (as defined in the standard).

The **PASSENGER AIR BAG OFF** light in the headliner tells you when the front Advanced Airbag on the passenger side has been turned off by the electronic control unit.

Each time you turn on the ignition, the **PASSENGER AIR BAG OFF ON** light will come on for a few seconds and:

– **PASSENGER AIR BAG OFF** will come on if the front passenger seat is not occupied
– **PASSENGER AIR BAG OFF** will come on if the electrical capacitance measured by the capacitive passenger detection system for the front passenger seat equals the combined capacitance of an infant up to about one year of age and one of the rearward-facing or forward-facing child restraints listed in Federal Motor Vehicle Safety Standard (FMVSS) 208 with which the Advanced Airbag System in your vehicle was certified. For a listing of the child restraints that were used to certify your vehicle's compliance with the Safety Standard ⇨ *page 287*.
– **PASSENGER AIR BAG OFF** will come on if there is a small child or child restraint on the front passenger seat
– **PASSENGER AIR BAG ON** will come on if the front passenger seat is occupied by an adult as registered by the capacitive passenger detection system ⇨ *page 273, Monitoring the Advanced Airbag System*.

The **PASSENGER AIR BAG OFF** light comes on when electrical capacitance registered on the front passenger seat is equal to or less than the combined capacitance of a typical 1 year-old infant and one of the rearward-facing or forward-facing child restraints listed in Federal Motor Vehicle Safety Standard (FMVSS) 208 with which the Advanced Airbag System in your vehicle was certified.

If the total electrical capacitance registered on the front passenger seat is more than that of a typical 1 year-old child but less than the weight of a small adult, the front airbag on the passenger side can deploy (the **PASSENGER AIR BAG OFF** light does not come on).

If the **PASSENGER AIR BAG OFF** light does not come on, the front airbag on the passenger side has not been turned off by the electronic control unit and can deploy if the control unit senses an impact that meets the conditions stored in its memory.

For example, the airbag may deploy if:

– a small child that is heavier than a typical 1 year-old child is on the front passenger seat (regardless of whether the child is in one of the child safety seats listed ⇨ *page 287*), or
– a child who has outgrown child restraints is on the front passenger seat.

If the front passenger airbag is turned off, the **PASSENGER AIR BAG OFF** light comes on in the headliner and stays on.

If the front passenger airbag deploys, the Federal Standard requires the airbag to meet the “low risk” deployment criteria to reduce the risk of injury through interaction with the airbag. “Low risk” deployment occurs in those crashes that take place at lower decelerations as defined in ▶

the electronic control unit ⇨ *page 273, PASSENGER AIR BAG OFF ON light*.

Always remember, a child safety seat or infant carrier installed on the front seat may be struck and knocked out of position by the rapidly inflating passenger's airbag in a frontal collision. The airbag could greatly reduce the effectiveness of the child restraint and even seriously injure the child during inflation.

For this reason, and because the back seat is the safest place for children - when properly restrained according to their age and size - we strongly recommend that children always sit in the back seat ⇨ *page 285, Child safety*.

WARNING

A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates - even with an Advanced Airbag System.

- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, door or roof.
- Always install rear-facing child safety seats on the rear seat.
- If you must install a rearward facing child safety seat on the front passenger seat because of exceptional circumstances and the **PASSENGER AIR BAG OFF** light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your authorized Audi dealer.
- Forward-facing child safety seats installed on the front passenger's seat may interfere with the deployment of the airbag and cause serious personal injury to the child.

WARNING

If, in exceptional circumstances, you must install a forward-facing child restraint on the front passenger's seat:

- Always make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
- Never put the forward-facing child restraint up against or very near the instrument panel.
- Always move the front passenger seat to the highest position in the up and down adjustment range and move it back to the rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible, before installing the forward-facing child restraint.
- Always make sure that the safety belt upper anchorage is behind the child restraint and not next to or in front of the child restraint so that the safety belt will be properly positioned.
- Make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on all the time whenever the ignition is switched on.

WARNING

To reduce the risk of serious injury, make sure that the **PASSENGER AIR BAG OFF** light will be displayed whenever a child restraint is installed on the front passenger seat and the ignition is switched on.

- If the **PASSENGER AIR BAG OFF** light does not stay on, perform the checks described ⇨ *page 273, Monitoring the Advanced Airbag System*.
- Take the child restraint off the front passenger seat and install it properly at one of the rear seat positions if the **PASSENGER AIR BAG OFF** light does not stay on.
- Have the airbag system inspected by your authorized Audi dealer immediately.
- Always carefully follow instructions from child restraint manufacturers when installing child restraints.

WARNING

If, in exceptional circumstances, you must install a forward or rearward-facing child restraint on the front passenger's seat: ▶

- Improper installation of child restraints can reduce their effectiveness or even prevent them from providing any protection.
- An improperly installed child restraint can interfere with the airbag as it deploys and seriously injure or even kill the child – even with an Advanced Airbag System.
- Always carefully follow the manufacturer's instructions provided with the child safety seat or carrier.
- Always make sure that there is nothing on the front passenger seat that will cause the capacitive passenger detection system in the seat to signal to the Airbag System that the seat is occupied by a person when it is not, or to signal that it is occupied by someone who is heavier than the person actually sitting on the seat. The presence of additional objects could cause the passenger front airbag to be turned on when it should be off, or could cause the airbag to work in a way that is different from the way it would have worked without the object on the seat.

Front airbags

Description of front airbags

The airbag system can provide supplemental protection to properly restrained front seat occupants.



Fig. 227 Location of driver airbag: in steering wheel

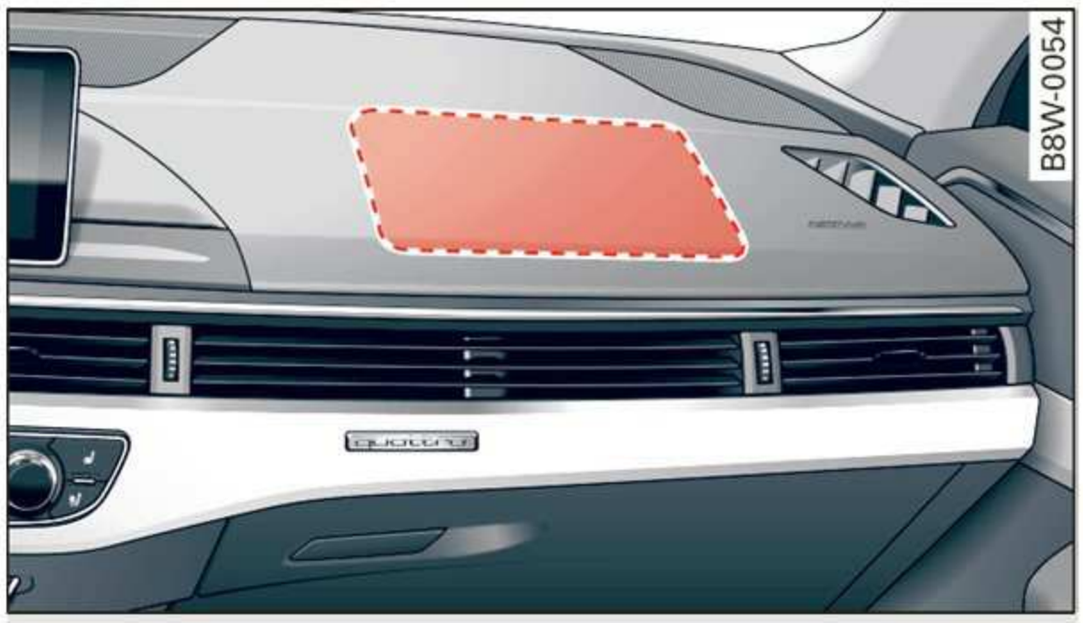


Fig. 228 Location of front passenger's airbag: in the instrument panel

Your vehicle is equipped with an “Advanced Airbag System” in compliance with United States Federal Motor Vehicle Safety Standard (FMVSS) 208, as well as Canada Motor Vehicle Safety Standard (CMVSS) 208 as applicable at the time your vehicle was manufactured.

The airbag for the driver is in the steering wheel hub ⇨ *fig. 227* and the airbag for the front passenger is in the instrument panel ⇨ *fig. 228*. The general location of the airbags is marked “AIRBAG”.

There is a lot you need to know about the airbags in your vehicle. We urge you to read the detailed information about airbags, safety belts and child safety in this and the other chapters that make up the owner's literature. Please be sure to heed the WARNINGS - they are extremely important for your safety and the safety of your passengers, especially infants and small children.

WARNING

Never rely on airbags alone for protection.

- Even when they deploy, airbags provide only supplemental protection.
- Airbag work most effectively when used with properly worn safety belts.
- Therefore, always wear your safety belts and make sure that everybody in your vehicle is properly restrained.
- Always hold the steering wheel with both hands on the outside of the steering wheel rim at the 9:00 o'clock and 3:00 o'clock positions to help reduce the risk of personal injury if the driver's airbag inflates.

– Never hold the steering wheel at the 12 o'clock position or with your hands anywhere inside the steering wheel or on the steering wheel hub. Holding the steering wheel the wrong way increases the risk of severe injury to the arms, hands, and head if the driver airbag deploys.

WARNING

Objects between you and the airbag will increase the risk of injury in a crash by interfering with the way the airbag unfolds and/or by being pushed into you as the airbag inflates.

– Always make sure nothing is in the front airbag deployment zone that could be struck by the airbag when it inflates.
– Objects in the zone of a deploying airbag can become projectiles when the airbag deploys and cause serious personal injury.
– Never hold things in your hands or on your lap when the vehicle is in use.
– Never place accessories or other objects (such as cup holders, telephone brackets, note pads, navigation systems, or things that are large, heavy, or bulky) on the doors; never attach them to the doors or the windshield; never place them over or near or attach them to the area marked „AIRBAG“ on the steering wheel, instrument panel or the seat backrests; never place them between these areas and you or any other person in the vehicle.
– Never attach objects to the windshield above the passenger front airbag, such as accessory GPS navigation units or music players. Such objects could cause serious injury in a collision, especially when the airbags inflate.
– Never recline the front passenger seat to transport objects. Items can also move into the deployment area of the side airbags or the front airbag during breaking or in a sudden maneuver. Objects near the airbags can fly dangerously through the passenger compartment and cause injury, particularly when the seat is reclined and the airbags inflate.

WARNING

A person on the front passenger seat, especially infants and small children, will receive serious injuries and can even be killed by being too close to the airbag when it inflates.

– Although the Advanced Airbag System in your vehicle is designed to turn off the front passenger airbag if an infant or a small child is on the front passenger seat, nobody can absolutely guarantee that deployment under these special conditions is impossible in all conceivable situations that may happen during the useful life of your vehicle.
– The Advanced Airbag System can deploy in accordance with the „low risk“ option for 3- and 6-year-old children under the U.S. Federal Standard if a child with electrical capacitance greater than the combined capacitance of a typical one-year old infant restrained in one of the forward facing or rearward-facing child seats with which your vehicle was certified is on the front passenger seat and the other conditions for airbag deployment are met.
– Accident statistics have shown that children are generally safer in the rear seat area than in the front seating position.
– For their own safety, all children, especially 12 years and younger, should always ride in the back properly restrained for their age and size.

Advanced front airbag system

Your vehicle is equipped with a front Advanced Airbag System in compliance with United States Federal Motor Vehicle Safety Standard (FMVSS) 208, as well as Canada Motor Vehicle Safety Standard (CMVSS) 208 as applicable at the time your vehicle was manufactured.

The front Advanced Airbag System supplements the safety belts to provide additional protection for the driver's and front passenger's heads and upper bodies in frontal crashes. The airbags inflate only in frontal impacts when the vehicle deceleration is high enough. ▶

The front Advanced Airbag System for the front seat occupants is not a substitute for your safety belts. Rather, it is part of the overall occupant restraint system in your vehicle. Always remember that the airbag system can only help to protect you, if you are sitting upright, wearing your safety belt and wearing it properly. This is why you and your passengers must always be properly restrained, not just because the law requires you to be.

The Advanced Airbag System in your vehicle has been certified to meet the “low risk” requirements for 3 and 6 year-old children on the passenger side and very small adults on the driver side. The low risk deployment criteria are intended to help reduce the risk of injury through interaction with the front airbag that can occur, for example, by being too close to the steering wheel and instrument panel when the airbag inflates.

In addition, the system has been certified to comply with the “suppression” requirements of the Safety Standard, to turn off the front airbag for infants 12 months old and younger who are restrained on the front passenger seat in child restraints that are listed in the Standard ⇨ *page 287, Child restraints and Advanced Airbags*.

“Suppression” requires the front airbag on the passenger side to be turned off if:

– a child up to about one year of age is restrained on the front passenger seat in one of the rear-facing or forward-facing infant restraints listed in Federal Motor Vehicle Safety Standard 208 with which the Advanced Airbag System in your vehicle was certified. For a listing of the child restraints that were used to certify your vehicle's compliance with the US Safety Standard ⇨ *page 287*,
– When a person is detected on the front passenger seat that has an electrical capacitance that is more than the total electrical capacitance of a child that is about 1 year old restrained in one of the rear-facing or forward-facing infant restraints (listed in Federal Motor Vehicle Safety Standard 208 with which the Advanced Airbag System in your vehicle was certified), the front airbag on the passenger side may or may not deploy.

The **PASSENGER AIR BAG OFF** light comes on when the electronic control unit detects a total electrical capacitance on the front passenger seat that requires the front airbag to be turned off. If the **PASSENGER AIR BAG OFF** light does not come on, the front airbag on the passenger side has not been turned off by the control unit and can deploy if the control unit senses an impact that meets the conditions stored in its memory.

If the total electrical capacitance registered on the front passenger seat is more than that of a typical 1 year-old, but less than the weight of a small adult, the front airbag on the passenger side may deploy (the **PASSENGER AIR BAG OFF** light does not come on).

For example, the airbag may deploy if:

– a small child that is heavier than a typical 1 year-old child is on the front passenger seat (regardless of whether the child is in one of the child safety seats listed ⇨ *page 287*),
– a child who has outgrown child restraints is on the front passenger seat.

If the front passenger airbag is turned off, the **PASSENGER AIR BAG OFF** light in the headliner will come on and stay on.

If the front passenger airbag deploys, the Federal Standard requires the airbag to meet the “low risk” deployment criteria to help reduce the risk of injury through interaction with the airbag. “Low risk” deployment occurs in those crashes that take place at lower decelerations as defined in the electronic control unit. ⇨ *page 273*

Always remember: Even though your vehicle is equipped with Advanced Airbags, the safest place for children is properly restrained on the back seat. Please be sure to read the important information in the sections that follow and be sure to heed all of the WARNINGS.

WARNING

To reduce the risk of injury when an airbag inflates, always wear safety belts properly. ▶

8W0012721BG

– If you are unrestrained, leaning forward, sitting sideways or out of position in any way, your risk of injury is much higher.
– You will also receive serious injuries and could even be killed if you are up against the airbag or too close to it when it inflates - even with an Advanced Airbag ⇨ *page 261*.

WARNING

A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates - even with an Advanced Airbag System.

– Although the Advanced Airbag System in your vehicle is designed to turn off the front airbag when a rearward-facing child restraint has been installed on the front passenger seat, nobody can absolutely guarantee that deployment is impossible in all conceivable situations that may happen during the useful life of your vehicle.
– The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, door, or roof.
– Always install rearward-facing child restraints on the rear seat.
– If you must install a rearward facing child safety seat on the front passenger seat because of exceptional circumstances and the **PASSENGER AIR BAG OFF** light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your authorized Audi dealer.

WARNING

If, in exceptional circumstances, you must install a forward-facing child restraint on the front passenger's seat:

– Always make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
– Never put the forward-facing child restraint up against or very near the instrument panel.
– Always move the front passenger seat to the highest position in the up and down adjustment range and move it back to the rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible, before installing the forward-facing child restraint.
– Always make sure that the safety belt upper anchorage is behind the child restraint and not next to or in front of the child restraint so that the safety belt will be properly positioned.
– Always make sure that there is nothing on the front passenger seat that will cause the capacitive passenger detection system in the seat to signal to the Airbag System that the seat is occupied by a person when it is not, or to signal that it is occupied by someone who is heavier than the person actually sitting on the seat. The presence of additional objects could cause the passenger front airbag to be turned on when it should be off, or could cause the airbag to work in a way that is different from the way it would have worked without the object on the seat.
– Make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on all the time whenever the ignition is switched on.

Advanced Airbag System components

The front passenger seat in your vehicle has a lot of very important parts of the Advanced Airbag System in it. These parts include the capacitive passenger detection system, wiring, brackets, and more. The control unit monitors the system on the front passenger seat when the ignition is switched on and turns the airbag indicator light on when a malfunction in the one of the system components is detected ⇨ *page 273*. Because the front passenger seat contains important parts of the Advanced Airbag System, you must take care to prevent it from being damaged. Damage to ▶

the seat may prevent the Advanced Airbag System for the front passenger seat from doing its job in a crash.

The front Advanced Airbag System consists of the following:

– Crash sensors in the front of the vehicle that measure vehicle acceleration/deceleration to provide information to the Advanced Airbag System about the severity of the crash.
– An electronic control unit, with integrated crash sensors for front and side impacts. The control unit "decides" whether to fire the front airbags based on the information received from the crash sensors. The control unit also "decides" whether the safety belt pretensioners should be activated.
– An Advanced Airbag with gas generator and control valve for the driver inside the steering wheel hub.
– An Advanced Airbag with gas generator and control valve inside the instrument panel for the front passenger.
– A capacitive passenger detection system underneath the front passenger seat cover. This system measures the electrical capacitance of the person in the seat. The information registered is sent continuously to the electronic control unit to regulate deployment of the front Advanced Airbag on the passenger side.
– An airbag monitoring system and indicator light in the instrument cluster.
– A sensor in each front seat registers the distance between the respective seat and the steering wheel or instrument panel. The information registered is sent continuously to the electronic control unit to regulate deployment of the front Advanced Airbags.
– The **PASSENGER AIR BAG OFF ON** light comes on in the headliner ⇨ *page 273, fig. 230* and tells you the status of the Advanced Airbag on the passenger side.
– A sensor in the safety belt latch for the driver and for the front seat passenger that senses whether that safety belt is latched or not and transmits this information to the electronic control unit.

WARNING

Damage to the front passenger seat can prevent the front airbag from working properly.
– Improper repair or disassembly of the front passenger and driver seat will prevent the Advanced Airbag System from functioning properly.
– Repairs to the front passenger seat must be performed by qualified and properly trained workshop personnel.
– Never remove the front passenger or driver seat from the vehicle.
– Never remove the upholstery from the front passenger seat.
– Never disassemble or remove parts from the seat or disconnect wires from it.
– Never carry sharp objects in your pockets or put them on the seat. The capacitive passenger detection mat in the front passenger seat will not function properly if it is punctured.
– Never carry things on your lap or carry objects on the front passenger seat. Such objects can influence the capacitance registered by the capacitive passenger detection system, so that incorrect information is provided to the airbag control unit.
– Never store items under the front passenger seat. Parts of the Advanced Airbag System under the passenger seat could be damaged, preventing them and the airbag system from working properly.
– Never place seat covers or replacement upholstery that have not been specifically approved by Audi on the front seats.
– Seat covers can prevent the Advanced Airbag System from recognizing child restraints or occupants on the front passenger seat and prevent the side airbag in the seat backrest from deploying properly.
– If a seat heater has been retrofitted or otherwise added to the front passenger seat, never install any child restraint system on this seat.
– Never use cushions, pillows, blankets, or similar items on the front passenger seat. The additional layers prevent the capacitive ▶

passenger detection system from accurately measuring the capacitance of the child safety seat and/or the person on the seat and thus keep the Advanced Airbag System from working properly.

– Never place or use any electrical device (such as a laptop, CD player, electronic games device, power inverter or seat heater for child seats) on the front passenger seat if the device is connected to the 12-volt socket or the cigarette lighter socket. Such devices can influence the capacitance registered by the capacitive passenger detection system, so that incorrect information is provided to the airbag control unit.
– If you must use a child restraint on the front passenger seat and the child restraint manufacturer's instructions require the use of a towel, foam cushion or something else to properly position the child restraint, make certain that the **PASSENGER AIR BAG OFF** light comes on and stays on whenever the child restraint is installed on the front passenger seat.
– If the **PASSENGER AIR BAG OFF** light does not come on and stay on, immediately install child restraint in a rear seating position and have the airbag system inspected by your Audi dealer.

WARNING

If the front passenger seat gets wet, dry it immediately.

– If liquid soaks into the front passenger seat, this can keep the airbag system from working properly and may, for instance, deactivate the passenger frontal airbag. If this happens, the **PASSENGER AIR BAG OFF** light will come on and stay on together with the airbag indicator light in the instrument cluster.
– If liquid is pooled on the seat, but has not soaked in, this may also keep the airbag system from working properly and cause the passenger frontal airbag to be enabled (turned on), even though there is a properly installed child restraint system on the seat. Wet towels or other wet things on the seat cushion can have the same effect. If the front passenger frontal airbag is turned on, the **PASSENGER AIR BAG OFF** light will turn off.

How the Advanced Airbag System components work together

The front Advanced Airbag System and the side airbags supplement the protection offered by the front three-point safety belts and the adjustable head restraints to help reduce the risk of injury in a wide range of accident and crash situations. Be sure to read the important information about safety and heed the WARNINGS in this chapter.

Deployment of the Advanced Airbag System and the activation of the safety belt pretensioners depend on the deceleration measured by the crash sensors and registered by the electronic control unit. Crash severity depends on speed and deceleration as well as the mass and stiffness of the vehicle or object involved in the crash.

On the passenger side, regardless of safety belt use, the front passenger frontal airbag will be turned off if the electrical capacitance measured by the capacitive passenger detection system on the front passenger seat is less than the amount programmed in the electronic control unit. The front passenger frontal airbag will also be turned off if the capacitance measured by the system for the front passenger seat equals that of an infant of about one year of age in one of the child seats that was used to certify the Advanced Airbag System under Federal Motor Vehicle Safety Standard 208. The **PASSENGER AIR BAG OFF** light comes on and stays on to tell you when the front Advanced Airbag System on the passenger side has been turned off ⇨ *page 273*.

WARNING

To reduce the risk of injury when an airbag inflates, always wear safety belts properly.

– If you are unrestrained, leaning forward, sitting sideways or out of position in any way, your risk of injury is much higher.
– You will also receive serious injuries and could even be killed if you are up against the ▶

airbag or too close to it when it inflates - even with an Advanced Airbag ⇨ *page 261*.

More important things to know about front airbags



Fig. 229 Inflated front airbags

Safety belts are important to help keep front seat occupants in the proper seated position so that airbags can unfold properly and provide supplemental protection in a frontal collision.

The front airbags are designed to provide additional protection for the chest and face of the driver and the front seat passenger when:

– safety belts are worn properly
– the seats have been positioned so that the occupant is properly seated as far as possible from the airbag
– and the head restraints have been properly adjusted

Because airbags inflate in the blink of an eye with great force, things you have on your lap or have placed on the seat could become dangerous projectiles, and be pushed into you if the airbag inflates.

When an airbag deploys, fine dust is released. This is normal and is not caused by a fire in the vehicle. This dust is made up mostly of a powder used to lubricate the airbags as they deploy. It could irritate skin.

It is important to remember that while the supplemental airbag system is designed to reduce the likelihood of serious injuries, other injuries, for example swelling, bruising and minor abrasions, can also happen when airbags inflate. Airbags do not protect the arms or the lower parts of the body. Front airbags supplement the three-point safety belts only in some frontal collisions in which the vehicle deceleration is high enough to deploy the airbags.

Front airbags will not deploy:

– if the ignition is switched off when a crash occurs
– in side collisions
– in rear-end collisions
– in rollovers
– when the crash deceleration measured by the airbag system is less than the minimum threshold needed for airbag deployment as registered by the electronic control unit

The front passenger airbag also will not deploy:

– when the front passenger seat is not occupied,
– when the electrical capacitance measured by the capacitive passenger detection system for the front passenger seat indicates that the passenger side frontal airbag must be switched off by the electronic control unit (the **PASSENGER AIR BAG OFF** light ⇨ *page 273* comes on and stays on).

WARNING

Sitting in the wrong position can increase the risk of serious injury in crashes.

– To reduce the risk of injury when the airbags inflate, the driver and passengers must always sit in an upright position, must not lean against or place any part of their body too close to the area where the airbags are located.
– Occupants who are unbelted, out of position or too close to the airbag can be seriously injured by an airbag as it unfolds with great force in the blink of an eye ⇨ *page 262*.

WARNING

A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates - even with an Advanced Airbag System.

– The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, door or roof.
– Always install rear-facing child safety seats on the rear seat.
– If you must install a rearward-facing child safety seat on the front passenger seat because of exceptional circumstances and the **PASSENGER AIR BAG OFF** light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your authorized Audi dealer.

WARNING

Objects between you and the airbag will increase the risk of injury in a crash by interfering with the way the airbag unfolds or by being pushed into you as the airbag inflates.
– Never hold things in your hands or on your lap when the vehicle is in use.
– Never transport items on or in the area of the front passenger seat. Objects could move into the area of the front airbags during braking or other sudden maneuvers and become dangerous projectiles that can cause serious personal injury if the airbags inflate.
– Never place or attach accessories or other objects (such as cupholders, telephone brackets, large, heavy or bulky objects) on the doors, over or near the area marked “AIRBAG” on the steering wheel, instrument panel, seat backrests or between those areas and yourself. These objects could cause injury in a crash, especially when the airbags inflate.
– Never recline the front passenger's seat to transport objects. Items can also move into the area of the side airbag or the front airbag during braking or in a sudden maneuver. Objects near the airbags can become projectiles and cause injury, particularly when the seat is reclined.
– Never place or transport objects on the front passenger seat. Objects on the front passenger seat could cause the capacitive sensor in the seat to signal to airbag system that the seat is occupied by a person when it in fact is not, or that the person on the seat is heavier than he or she actually is. The change in electric capacitance because of such objects can cause the passenger front airbag to be turned on when it should be off, or can cause the airbag to work in a way that is different from the way it would have worked without objects on the seat.
– Always make sure that there is nothing on the front passenger seat that will cause the capacitive passenger detection system in the seat to signal to the Airbag System that the seat is occupied by a person when it is not, or to signal that it is occupied by someone who is heavier than the person actually sitting on the seat. The presence of an object could cause the passenger front airbag to be turned on when it should be off, or could cause the airbag to work in a way that is different from the way it would have worked without the object on the seat.

WARNING

The fine dust created when airbags deploy can cause breathing problems for people with a history of asthma or other breathing conditions.
– To reduce the risk of breathing problems, those with asthma or other respiratory conditions should get fresh air right away by getting out of the vehicle or opening windows or doors.
– If you are in a collision in which airbags deploy, wash your hands and face with mild soap and water before eating.
– Be careful not to get the dust into your eyes, or into any cuts or scratches.
– If the residue should get into your eyes, flush them with water.

Monitoring the Advanced Airbag System

Airbag monitoring indicator light

Two separate indicators monitor the function of the Advanced Airbag System: the light *and the* **PASSENGER AIR BAG OFF ON** *light.*

The Advanced Airbag System as well as the side airbags and side curtain airbags with ejection mitigation features (including the electronic control unit, sensors and system wiring) are all monitored continuously to make sure that they are functioning properly whenever the ignition is on. Every time you turn on the ignition, the airbag system indicator light will come on for a few seconds (function check).

The system must be inspected when the indicator light :

– does not come on when the ignition is switched on
– does not go out a few seconds after you have switched on the ignition, or
– comes on while driving

If an airbag system malfunction is detected, the indicator light will come on to serve as a constant reminder to have the system inspected immediately.

If a malfunction occurs that turns the front airbag on the passenger side off, the **PASSENGER AIR BAG OFF** light will come on and stay on whenever the ignition is on.

WARNING

An airbag system that is not functioning properly cannot provide supplemental protection in a frontal crash.

– If the airbag indicator light ⇨ *page 23* comes when the vehicle is being used, have the system inspected immediately by your authorized Audi dealer. It is possible that the airbag will inflate when it is not supposed to, or will not inflate when it should.

PASSENGER AIR BAG OFF ON light



Fig. 230 Section from the headliner: PASSENGER AIR BAG OFF ON light

The **PASSENGER AIR BAG OFF ON** light is located in the headliner ⇨ *fig. 230*.

The **PASSENGER AIR BAG OFF** light will come on and stay on to tell you when the front Advanced Airbag on the passenger side has been turned off by the electronic control unit. If the bulb for the **PASSENGER AIR BAG OFF ON** light burns out, the airbag indicator light will come on to signal a malfunction in the Advanced Airbag System. Although the burned-out bulb will not change the way the front passenger's frontal airbag works, it will no longer be possible to use the **PASSENGER AIR BAG OFF ON** light to make sure that the airbag on/off status is correct for the occupant on the front passenger seat. Have the airbag system inspected immediately by your authorized Audi dealer.

The PASSENGER AIR BAG OFF ON light will blink for about 5 seconds when:

– the capacitive passenger detection system, which switches the front seat passenger's frontal Advanced Airbag on and off, detects a change in the status of the front passenger seat.

As soon as the **PASSENGER AIR BAG OFF ON** light stops blinking, always make sure that the airbag status (on or off) as shown by the light is proper for the age, size and electrical capacitance of the person occupying the front passenger seat. Always make sure that the safety belt for the front passenger seat is properly fastened.

The PASSENGER AIR BAG OFF / PASSENGER AIR BAG ON light will show the status of the ▶

front seat passenger's frontal Advanced Airbag. The PASSENGER AIR BAG OFF light:

– will come on if the front passenger seat is not occupied;
– will come on if the electrical capacitance measured by the capacitive passenger detection system for the front passenger seat equals the combined capacitance of an infant up to about one year of age and one of the rearward-facing or forward-facing child restraints listed in Federal Motor Vehicle Safety Standard 208 with which the Advanced Airbag System in your vehicle was certified; For a listing of the child restraints that were used to certify your vehicle's compliance with the U.S. Safety Standard ⇨ *page 287*.
– will go out if the front passenger seat is occupied by an adult as registered by the capacitive passenger detection system.
– The **PASSENGER AIR BAG OFF** light must come on and stay on if the ignition is on and...
– a car bed has been installed on the front passenger seat, or
– a rearward-facing child restraint has been installed on the front passenger seat, or
– a forward-facing child restraint has been installed on the front passenger seat,
– and if the electrical capacitance registered on the front passenger seat is equal to or less than the combined capacitance of a typical 1 year-old infant and one of the rearward-facing or forward-facing child restraints listed in Federal Motor Vehicle Safety Standard 208 with which the Advanced Airbag System in your vehicle was certified.

If the front passenger seat is not occupied, the front airbag will not deploy, and the **PASSENGER AIR BAG OFF** light will stay on.

Never install a rearward-facing child restraint on the front passenger seat, the safest place for a child in any kind of child restraint is at one of the seating positions on the rear seat ⇨ *page 262, Child restraints on the front seat – some important things to know* and ⇨ *page 285, Child safety*.

If the PASSENGER AIR BAG OFF light comes on ...

If the **PASSENGER AIR BAG OFF** light comes on when one of the conditions listed above is met, be sure to check the light regularly to make certain that the **PASSENGER AIR BAG OFF** light stays on continuously whenever the ignition is on. If the **PASSENGER AIR BAG OFF** light does not appear on and does not stay on all the time, stop as soon as it is safe to do so and

– reactivate the system by turning the ignition off for more than 4 seconds and then turning it on again;
– remove and reinstall the child restraint. Make sure that the child restraint is properly installed and that the safety belt for the front passenger seat has been correctly routed through the child restraint as described in the child restraint manufacturer's instructions;
– make sure that the convertible locking retractor on the safety belt for the front passenger seat has been activated and that the safety belt has been pulled tight.
– make sure that no electrical device (such as a laptop, CD player, electronic games device, power inverter or seat heater for child seats) is placed or used on the front passenger seat if the device is connected to the 12-volt socket or the cigarette lighter socket;
– make sure that no seat heater has been retrofitted or otherwise added to the front passenger seat;
– make sure that nothing can interfere with the safety belt buckles and that they are not obstructed;
– make sure that there are no wet objects (such as a wet towel) and no water or other liquids on the front passenger seat cushion.

If the PASSENGER AIR BAG OFF light still does not come on ...

If the **PASSENGER AIR BAG OFF** light still does not come on and does not stay on continuously (when the ignition is switched on),

– take the child restraint off the front passenger seat and install it properly at one of the rear ▶

seat positions. Have the airbag system inspected by your Audi dealer immediately.
– move the child to a rear seat position and make sure that the child is properly restrained in a child restraint that is appropriate for its size and age.

The PASSENGER AIR BAG OFF light should NOT come on ...

The **PASSENGER AIR BAG OFF** light should NOT come on when the ignition is on and an adult is sitting in a proper seating position on the front passenger seat. If the **PASSENGER AIR BAG OFF** light comes on and stays on while driving, under these circumstances, make sure that:

– the adult on the front passenger seat is properly seated on the center of the seat cushion with his or her back up against the backrest and the backrest is not reclined,
– the adult is not taking weight off the seat by holding on to the passenger assist handle above the front passenger door or supporting their weight on the armrest,
– the safety belt is being properly worn and that there is not a lot of slack in the safety belt webbing,
– there are no aftermarket seat covers or cushions or other things (such as blankets) on the front passenger seat that might cause the capacitive passenger detection system to miscalculate electrical capacitance.

Important safety instructions on monitoring the Advanced Airbag System

WARNING

– If the status of the Advanced Airbag System has changed while the vehicle is moving, the **PASSENGER AIR BAG OFF ON** light blinks for about 5 seconds to catch the driver's attention. If this happens, always stop as soon as it is safe to do so and check the steps described above.
– If the **PASSENGER AIR BAG OFF** light does not go off when an adult who is not very small is sitting on the front passenger seat after taking the steps described above, make sure the adult is properly seated and restrained at one of the rear seating positions. Have the airbag system inspected by your authorized Audi dealer before transporting anyone on the front passenger seat.

WARNING

An airbag system that is not functioning properly cannot provide supplemental protection in a frontal crash.
– If the airbag indicator light ⇨ *page 23* comes when the vehicle is being used, have the system inspected immediately by your authorized Audi dealer. It is possible that the airbag will inflate when it is not supposed to, or will not inflate when it should.

WARNING

If the front airbag inflates, a child without a child restraint, or in a rearward-facing child safety seat, or in a forward-facing child restraint that has not been properly installed will be seriously injured and can be killed.
– Even though your vehicle is equipped with an Advanced Airbag System, make certain that all children, especially 12 years and younger, always ride on the back seat properly restrained for their age and size.
– Always install forward or rear-facing child safety seats on the rear seat – even with an Advanced Airbag System.
– If you must install a rearward-facing child safety seat on the front passenger seat because of exceptional circumstances and the **PASSENGER AIR BAG OFF** light does not appear and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your authorized Audi dealer.
– If, in exceptional circumstances, you must install a forward-facing child restraint on the front passenger seat, always move the seat into its rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible. The backrest must be adjusted to an upright position. Make sure that the **PASSENGER AIR BAG** ▶

OFF light comes on and stays on all the time whenever the ignition is switched on.

WARNING

– If the **PASSENGER AIR BAG OFF** light does not go out when an adult is sitting on the front passenger seat after taking the steps described above, make sure the adult is properly seated and restrained at one of the rear seating positions.
– Have the airbag system inspected by your authorized Audi dealer before transporting anyone on the front passenger seat.

Tips

If the capacitive passenger detection system determines that the front passenger seat is empty, the frontal airbag on the passenger side will be turned off, and the **PASSENGER AIR BAG OFF** light will stay on.

Repair, care and disposal of the airbags

Parts of the airbag system are installed at many different places on your Audi. Installing, removing, servicing or repairing a part in an area of the vehicle can damage a part of an airbag system and prevent that system from working properly in a collision.

There are some important things you have to know to make sure that the effectiveness of the system will not be impaired and that discarded components do not cause injury or pollute the environment.

WARNING

Improper care, servicing and repair procedures can increase the risk of personal injury and death by preventing an airbag from deploying when needed or deploying an airbag unexpectedly:

– Never cover, obstruct, or change the steering wheel horn pad or airbag cover or the instrument panel or modify them in any way.
– Never attach any objects such as cupholders or telephone mountings to the surfaces covering the airbag units.
– For cleaning the horn pad or instrument panel, use only a soft, dry cloth or one moistened with plain water. Solvents or cleaners could damage the airbag cover or change the stiffness or strength of the material so that the airbag cannot deploy and protect properly.
– Never repair, adjust, or change any parts of the airbag system.
– All work on the steering wheel, instrument panel, front seats or electrical system (including the installation of audio equipment, cellular telephones and CB radios, etc.) must be performed by a qualified technician who has the training and special equipment necessary.
– For any work on the airbag system, we strongly recommend that you see your authorized Audi dealer or qualified workshop.
– Never modify the front bumper or parts of the vehicle body.
– Always make sure that the side airbag can inflate without interference:
  – Never install seat covers or replacement upholstery over the front seatbacks that have not been specifically approved by Audi.
  – Never use additional seat cushions that cover the areas where the side airbags inflate.
  – Damage to the original seat covers or to the seam in the area of the side airbag module must always be repaired immediately by an authorized Audi dealer.
– The airbag system can deploy only once. After an airbag has been deployed, it must be replaced with new replacement parts designed and approved especially for your Audi model version. Replacement of complete airbag systems or airbag components must be performed by qualified workshops only. Make sure that any airbag service action is entered in your Audi Warranty & Maintenance booklet under *AIRBAG REPLACEMENT RECORD*.
– For safety reasons in severe accidents, the alternator and starter are separated from ▶

the vehicle battery with a pyrotechnic circuit interrupter.

– Work on the pyrotechnic circuit interrupter must only be performed by a qualified technicians who have the experience, information and special tools necessary to perform the work safely.
– If the vehicle or the circuit interrupter is scrapped, all applicable safety precautions must be followed.

Other things that can affect Advanced Airbag performance

Changing the vehicle's suspension system can change the way that the Advanced Airbag System performs in a crash. For example, using tire-rim combinations not approved by Audi, lowering the vehicle, changing the stiffness of the suspension, including the springs, suspension struts, shock absorbers etc. can change the forces that are measured by the airbag sensors and sent to the electronic control unit. Some suspension changes can, for example, increase the force levels measured by the sensors and make the airbag system deploy in crashes in which it would not deploy if the changes had not been made. Other kinds of changes may reduce the force levels measured by the sensors and prevent the airbag from deploying when it should.

WARNING

Changing the vehicle's suspension including use of unapproved tire-rim combinations can change Advanced Airbag performance and increase the risk of serious personal injury in a crash.

– Never install suspension components that do not have the same performance characteristics as the components originally installed on your vehicle.
– Never use tire-rim combinations that have not been approved by Audi.

Knee airbags

Description of knee airbags

The knee airbag system can provide supplemental protection to properly restrained front seat occupants.



Fig. 231 Driver's knee airbag

The driver knee airbag is in the instrument panel underneath the steering wheel ⇨ *fig. 231*, the airbag for the passenger is at about the same height in the instrument panel underneath the glove compartment.

The knee airbag offers additional protection to the driver's and passenger's knees and upper and lower thigh areas and supplements the protection provided by the safety belts.

If the front airbags deploy, the knee airbags also deploy in frontal collisions when the deployment threshold stored in the control unit is met ⇨ *page 271, More important things to know about front airbags*.

In addition to their normal safety function, safety belts help keep the driver or front passenger in position in a frontal collision so that the airbags can provide supplemental protection.

The airbag system is not a substitute for your safety belt. Rather, it is part of the overall occupant restraint system in your vehicle. Always remember that the airbag system can only help to protect you if you are wearing your safety belt and wearing it properly. This is why you should always wear your safety belt, not just because the law requires you to do so ⇨ *page 253, General information*. ▶

Remember too, airbags will deploy only once and only in certain kinds of accidents - your safety belts are always there to offer protection in those accidents in which airbags are not supposed to deploy or when they have already deployed, for example when your vehicle strikes or is struck by another after the first collision.

This is just one of the reasons why an airbag is not a substitute for the safety belt. The airbag system works most effectively when used with the safety belts. Therefore, always wear your safety belts correctly.

It is important to remember that while the supplemental knee airbag system is designed to reduce the likelihood of serious injuries, other injuries, for example, swelling, bruising and minor abrasions and friction burns can also occur when an airbag inflates.

The knee airbag system basically consists of:

– The electronic control module
– Two inflatable airbags (airbag and gas generator), one for the driver and one for the front passenger
– The airbag indicator light in the instrument panel

The knee airbag system will not deploy:

– when the ignition is switched off
– in frontal collisions when the deceleration measured by the control unit is too low
– in side collisions
– in rear-end collisions
– in rollovers
– in the event of a system malfunction (warning/ indicator light is on) ⇨ *page 23*.

WARNING

– Safety belts and the airbag system can only provide protection when occupants are in the proper seating position ⇨ *page 271*.
– If the airbag indicator light ⇨ *page 23* comes when the vehicle is being used, have the system inspected immediately by your authorized Audi dealer. It is possible that the airbag will inflate when it is not supposed to, or will not inflate when it should.

How knee airbags work

The risk of injury to the leg area can be reduced by fully inflated knee airbags.

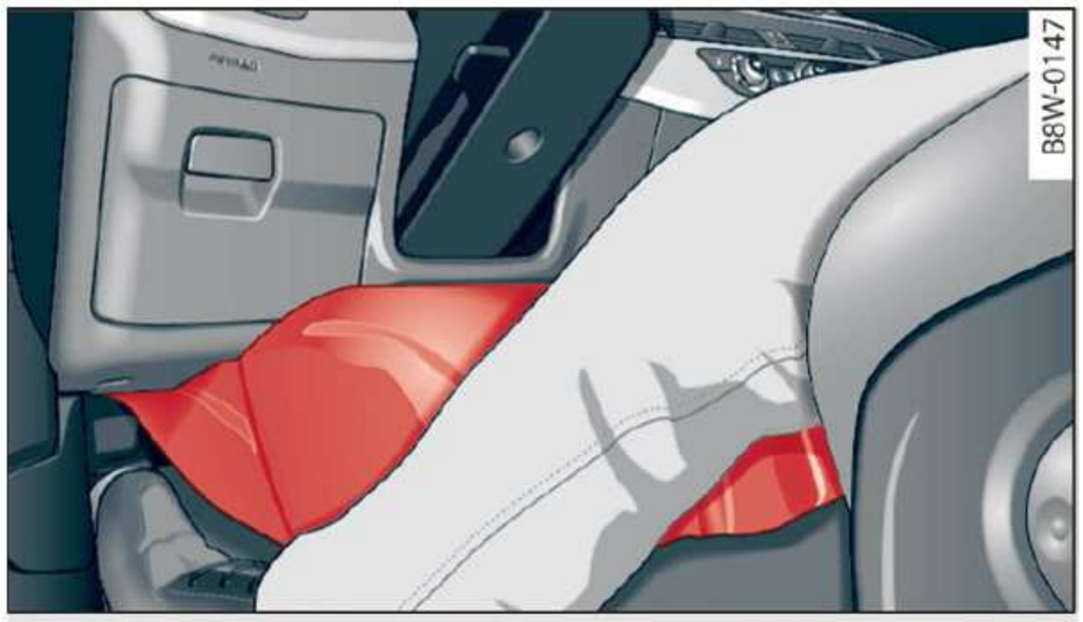


Fig. 232 Inflated airbags protecting in a frontal collision

The knee airbag system has been designed so that the airbags for the driver and front passenger deploy in certain but not all frontal collisions.

If the front airbags deploy, the knee airbags also deploy in frontal collisions when the deployment threshold stored in the control unit is met.

When the system deploys, the airbags fill with a propellant gas, and inflate between the lower part of the instrument panel and the driver and the lower part of the instrument panel and the front passenger ⇨ *page 271, fig. 229*.

Although they are not a soft pillow, they can “cushion” the impact and in this way they can help to reduce the risk of injury to the lower extremities.

All of this takes place in the blink of an eye, so fast that many people don't even realize that the airbags have deployed. The airbags also inflate with a great deal of force and it is important for occupant safety that nothing should be in their way when they deploy.

Fully inflated airbags in combination with properly worn safety belts slow down and limit the occupant's forward movement and help to reduce the risk of injury.

Important safety instructions on the knee airbag system

Airbags are only supplemental restraints. Always wear safety belts correctly and ride in a proper seating position.

There is a lot that you and your passengers must know and do to help the safety belts and airbags to provide supplemental protection.

WARNING

An inflating knee airbag can cause serious injury. Wearing safety belts incorrectly and improper seating positions increase the risk of serious personal injury and death whenever a vehicle is being used.

- The knee airbag system cannot protect you properly if you are seated too close to any of the airbag locations. When adjusting their seat positions, it is important that both the driver and the front passenger keep their upper bodies and knees at the following minimum safe distances:
  - at least 10 inches (25 cm) between the chest and the steering wheel/instrument panel.
  - at least 4 inches (10 cm) between the knees and the lower part of the instrument panel.
- The risk of personal injury increases if you lean forward or to the side, or if the seat is improperly positioned and you are not wearing your safety belt. The risk increases even more should the airbag deploy.
- Always make sure that the knee airbag can inflate without interference. Objects between you and the airbag can increase the risk of injury in an accident by interfering with the way the airbag deploys or by being pushed into you as the airbag deploys.
- Never let anybody, especially children or animals ride in the footwell in front of the passenger seat. If the airbag deploys, this can result in serious or fatal injuries.
- Never carry objects of any kind in the footwell area in front of the driver's or passenger's seat. Bulky objects (shopping bags, for example) can interfere with or prevent proper deployment of the airbag. Small objects can be thrown through the vehicle if the airbag deploys and injure you or your passengers.
- Make sure there are no cracks, deep scratches or other damage in the area of the instrument panel where the knee airbags are located.
- If children are incorrectly seated, their risk of injury increases in a collision ⇨ *page 285, Child safety*.

Side airbags

Description of side airbags

The airbag system can provide supplemental protection to properly restrained occupants.

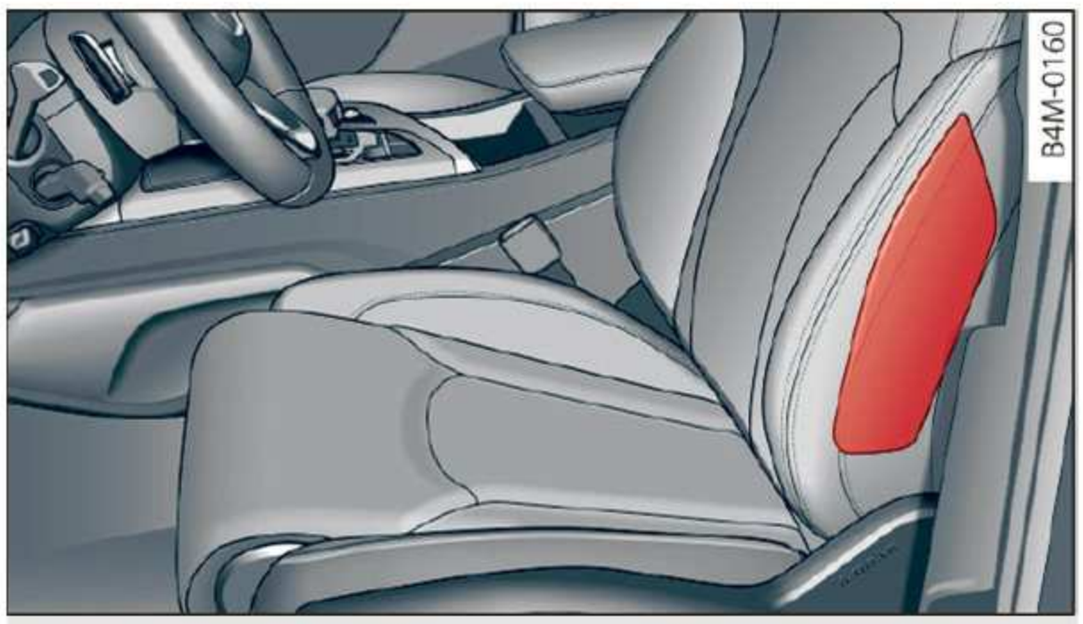


Fig. 233 Side airbag location in the driver's seat

The side airbags are located in the sides of the front seat backrests ⇨ *fig. 233* and the rear backrest* facing the doors.

The side airbags installed for the front seating positions have been designed and certified to help reduce the risk of injury that can be caused by airbags when they inflate, particularly when the occupant sitting next to it is not seated properly. The side airbag for the front passenger seat can be used with properly installed child restraints. Please be sure to read the important information and warnings whenever using a child restraint in a vehicle: Safety belts ⇨ *page 253*, Airbag system ⇨ *page 261*, Child safety ⇨ *page 285*.

The side airbag system basically consists of:

- the electronic control module and external side impact sensors ▶

– the two side airbags located in the sides of the front backrests
– two rear side airbags*
– the airbag warning light in the instrument cluster.

The airbag system is monitored electronically to make certain that it is functioning properly at all times. Each time you turn on the ignition, the airbag system indicator light will come on for a few seconds (self diagnostics).

The side airbag system supplements the safety belts and can help to reduce the risk of injury to the driver's, front and rear* passenger's upper torso on the side of the vehicle that is struck in a side collision. The airbag deploys only in side impacts and only when the vehicle acceleration registered by the control unit is high enough. If this rate is below the reference value programmed into the control unit, the side airbags will not be triggered, even though the car may be badly damaged as a result of the collision. It is not possible to define an airbag triggering range that will cover every possible angle of impact, since the circumstances will vary considerably between one collision and another. Important factors include, for example, the nature (hard or soft) of the impacting object, the angle of impact, vehicle speed, etc. ⇨ *page 281, Important safety instructions on the side airbag system*.

Aside from their normal safety function, safety belts work to help keep the driver or front passenger in position in the event of a side collision so that the side airbags can provide protection.

The airbag system is *not* a substitute for your safety belt. Rather, it is part of the overall occupant restraint system in your vehicle. Always remember that the side airbag system can only help to protect you if you are wearing your safety belt and wearing it properly. This is another reason why you should always wear your safety belts, not just because the law requires you to do so ⇨ *page 253, General information*.

It is important to remember that while the supplemental side airbag system is designed to reduce the likelihood of serious injuries, other injuries, for example, swelling, bruising, friction burns and minor abrasions can also be associated with deployed side airbags. Remember too, side airbags will deploy only once and only in certain kinds of accidents - your safety belts are always there to offer protection.

Vehicle damage, repair costs or even the lack of vehicle damage are not necessarily an indication of over-sensitive or failed airbag activation. In some collisions, both front and side airbags may inflate. Remember too, that airbags will deploy only once and only in certain kinds of collisions – your safety belts are always there to offer protection in those accidents in which airbags are not supposed to deploy or when they have already deployed.

The side airbag system will not deploy:

– when the ignition is turned off
– in side collisions when the acceleration measured by the sensor is too low
– in front-end collisions
– in rear-end collisions
– in rollovers.

In some types of accidents the front airbags, side curtain airbags and side airbags may be triggered together.

WARNING

– Safety belts and the airbag system will only provide protection when occupants are in the proper seating position ⇨ *page 281*.
– If the airbag indicator light ⇨ *page 23* comes when the vehicle is being used, have the system inspected immediately by your authorized Audi dealer. It is possible that the airbag will inflate when it is not supposed to, or will not inflate when it should.

How supplemental side airbags work

Side airbags deploy instantly and can help reduce the risk of upper torso injuries for occupants who are properly restrained.

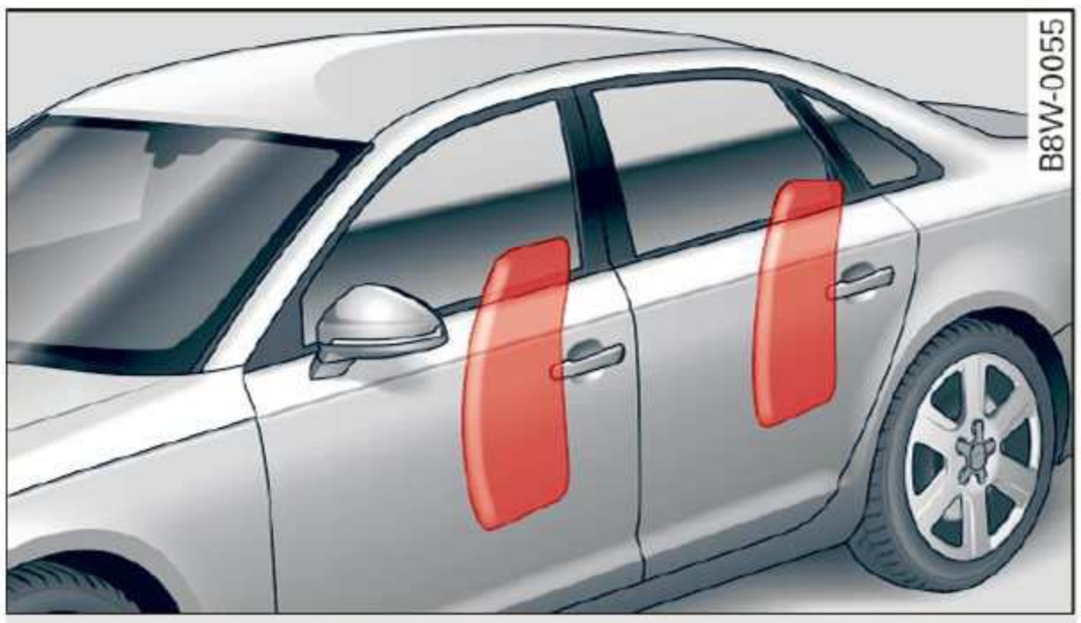


Fig. 234 Inflated side airbags on left side of vehicle, rear side airbag optional equipment

When the system is triggered, the airbag is filled with propellant gas and breaks through a seam in the seat surface area. It expands between the side trim panel and the passenger. In order to help provide this additional protection, the side airbag must inflate within a fraction of a second at very high speed and with great force. The supplemental side airbag could injure you if your seating position is not proper or upright or if items are located in the area where the supplemental side airbag expands. This applies especially to children ⇨ *page 285, Child safety*. Supplemental side airbags inflate between the occupant and the door panel on the side of the vehicle that is struck in certain side collision ⇨ *fig. 234*.

Although they are not a soft pillow, they can "cushion" the impact and in this way they can help to reduce the risk of injury to the upper part of the body.

A fine dust may develop when the airbag deploys. This is normal and does not mean there is a fire in the vehicle.

Important safety instructions on the side airbag system

Airbags are only supplemental restraints. Always properly wear safety belts and ride in a proper seating position.

There is a lot that you and your passengers must know and act accordingly to help the safety belts and airbags do their job to provide supplemental protection.

WARNING

An inflating side airbag can cause serious or fatal injury. Improperly wearing safety belts and improper seating positions increase the risk of serious personal injury and death whenever a vehicle is being used.

- In order to reduce the risk of injury when the supplemental side airbag inflates:
  - Always sit in an upright position and never lean against the area where the supplemental side airbag is located.
  - Never let a child or anyone else rest their head against the side trim panel in the area where the supplemental side airbag inflates.
  - Always make sure that safety belts are worn correctly,
  - Do not let anyone sitting in the front seat put their hand or any other parts of their body out of the window.
- Always make sure that the side airbag can inflate without interference.
  - Never install seat covers or replacement upholstery over the front seatbacks that have not been specifically approved by Audi.
  - Never use additional seat cushions that cover the areas where the side airbags deploy.
  - Damage to the original seat covers or to the seam in the area of the side airbag module must always be repaired immediately by an authorized Audi dealer.
- Objects between you and the airbag can increase the risk of injury in an accident by interfering with the way the airbag unfolds or ▶

by being pushed into you as the airbag inflates.

– Never place or attach accessories or other objects (such as cupholders, telephone brackets, or even large, bulky objects) on the doors, over or near the area marked “AIRBAG” on the seat backrests.
– Such objects and accessories can become dangerous projectiles and cause injury when the supplemental side airbag deploys.
– Never carry any objects or pets in the deployment space between them and the airbags or allow children or other passengers to travel in this position.
– Always use the built-in coat hooks* only for lightweight clothing. Never leave any heavy or sharp-edged objects in the pockets that may interfere with side airbag deployment and can cause personal injury in an accident.
– Always prevent the side airbags from being damaged by heavy objects knocking against or hitting the sides of the seatbacks.
– The airbag system can only be triggered once. If the airbag has been triggered, the system must be replaced by an authorized Audi dealership.
– Damage (cracks, deep scratches etc.) to the original seat covers or to the seam in the area of the side airbag module must always be repaired immediately by an authorized Audi dealer.
– If children are seated improperly, their risk of injury increases in the case of an accident ⇨ *page 285, Child safety*.
– Never attempt to modify any components of the airbag system in any way.
– In a side collision, side airbags will not function properly if sensors cannot correctly measure increasing air pressure inside the doors when air escapes through larger, unclosed openings in the door panel.
  – Never drive with interior door trim panels removed.
  – Never drive when parts have been removed from the inside door panel and the openings they leave have not been properly closed.
  – Never drive when loudspeakers in the doors have been removed unless the speaker holes have been properly closed.
  – Always make certain that openings are covered or filled if additional speakers or other equipment is installed in the inside door panels.
  – Always have work on the doors done by an authorized Audi dealer or qualified workshop.

Side curtain airbags

Description of side curtain airbags

The side curtain airbags can provide supplemental protection to properly restrained occupants.

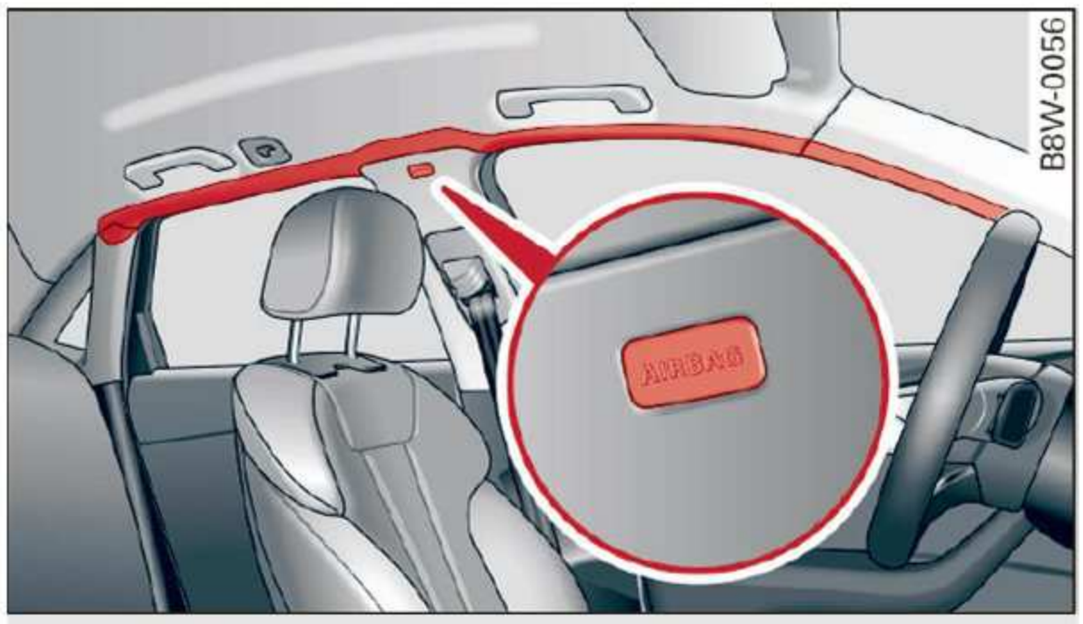


Fig. 235 Side curtain airbags, driver's side: location

The side curtain airbags are located on both sides of the interior above the front and rear side windows ⇨ *fig. 235*.

The side curtain airbags contain features that provide ejection mitigation to help prevent vehicle occupants or parts of their bodies from being completely or partially ejected from the vehicle interior in certain side impacts and vehicle rollovers.

The side curtain airbag system supplements the safety belts and can help to reduce the risk of injury for occupants' heads and upper torso in a side collision. The side curtain airbag inflates in side impacts and only when the vehicle acceleration registered by the control unit is high enough. If this rate is below the reference value programmed into the control unit, the side curtain airbag ▶

will not be triggered, even though the car may be badly damaged as a result of the collision. It is not possible to define an airbag triggering range that will cover every possible angle of impact, since the circumstances will vary considerably between one collision and another. Important factors include, for example, the nature (hard or soft) of the impacting object, the angle of impact, vehicle speed, etc. ⇨ *page 283, How side curtain airbags work*.

Aside from their normal safety function, safety belts work to help keep the driver or front passenger in position in the event of a collision so that the side curtain airbags can provide protection.

The airbag system is not a substitute for your safety belt. Rather, it is part of the overall occupant restraint system in your vehicle. Always remember that the airbag system can only help to protect you if you are wearing your safety belt and wearing it properly. This is another reason why you should always wear your safety belts, not just because the law requires you to do so ⇨ *page 253, General information*.

It is important to remember that while the side curtain airbag system is designed to help reduce the likelihood of serious injuries, other injuries, for example, swelling, bruising, friction burns and minor abrasions can also be associated with these airbags upon deployment. Remember too, these airbags will deploy only once and only in certain kinds of accidents - your safety belts are always there to offer protection.

The side curtain airbag system basically consists of:

– The electronic control module and external side impact sensors
– The side curtain airbags above the windows of the outer seating positions with ejection mitigation features
– The airbag indicator light in the instrument panel

The airbag system is monitored electronically to make certain it is functioning properly at all times. Each time you turn on the ignition, the airbag system indicator light will come on for a few seconds (self diagnostics).

The side curtain airbag is not activated:

– if the ignition is turned off
– in side collisions when the acceleration measured by the sensor is too low
– in rear-end collisions.

WARNING

– Safety belts and the airbag system will only provide protection when occupants are in the proper seating position ⇨ *page 58, Front seats*.
– If the airbag indicator light ⇨ *page 23* comes when the vehicle is being used, have the system inspected immediately by your authorized Audi dealer. It is possible that the airbag will inflate when it is not supposed to, or will not inflate when it should.

How side curtain airbags work

Side curtain airbags can work together with side airbags to help reduce the risk of head and upper torso injuries for occupants who are properly restrained.

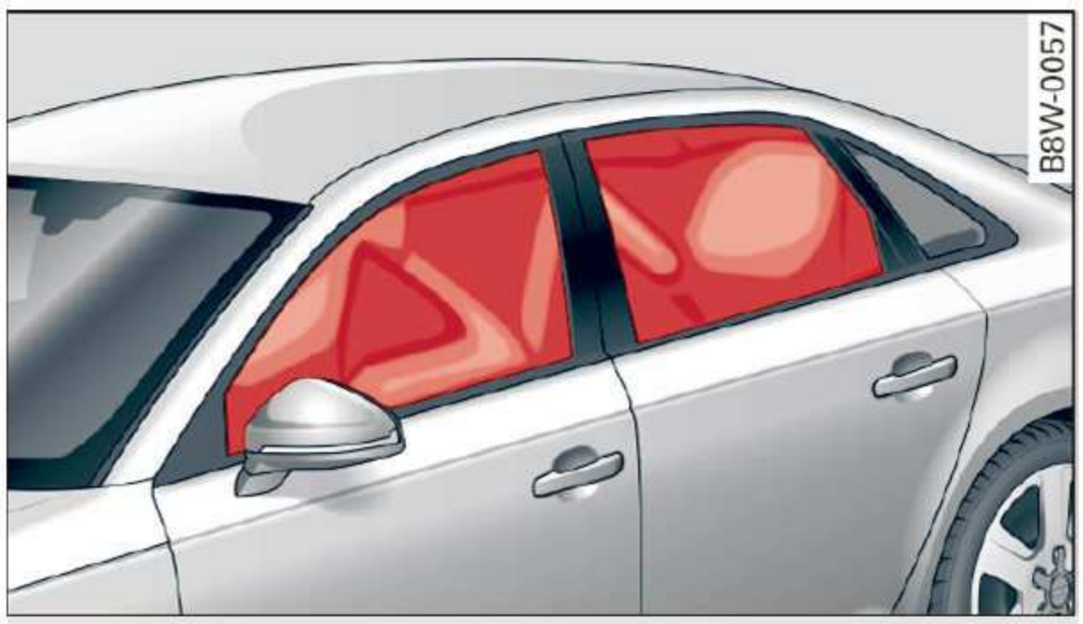


Fig. 236 Illustration of principle: Inflated side curtain airbags on the left side

The side curtain airbags inflate between the occupant and the windows in a side collision ⇨ *fig. 236*.

When the system is triggered, the side curtain airbag is filled with propellant gas and breaks through a seam above the front and rear side windows identified by the AIRBAG label. In order to help provide this additional protection, the ▶

8W0012721BG

side curtain airbag must inflate within the blink of an eye at very high speed and with great force. The side curtain airbag could injure you if your seating position is not proper or upright or if items are located in the area where the supplemental side curtain airbag inflates. This applies especially to children ⇨ *page 285*.

Although they are not a soft pillow, side curtain airbags can "cushion" the impact and in this way they can help to reduce the risk of injury to the head and the upper part of the body.

A fine dust may develop when the airbag deploys. This is quite normal and does not mean there is a fire in the vehicle.

Important safety instructions on the side curtain airbag system

Airbags are only supplemental restraints. Always properly wear safety belts and ride in a proper seating position.

There is a lot that you and your passengers must know and do to help the safety belts and airbags do their job to provide supplemental protection.

WARNING

Improperly wearing safety belts and improper seating positions increase the risk of serious personal injury and death whenever a vehicle is being used.

- Never let occupants place any parts of their bodies in the area from which the side curtain airbag inflate.
- Always make sure that the side curtain airbags can inflate without interference.
- Use the built-in coat hooks only for lightweight clothing. Never leave any heavy or sharp-edged objects in the pockets that may interfere with airbag deployment and can cause personal injury in a collision.
- Never use hangers to hang clothes on the hooks.
- Only use factory-installed sun shades or, if shades installed after the vehicle leaves the factory, use only genuine Audi sun shades.
- Never swing the sun visors over to the side windows if things such as pens, garage door openers, hands-free speakers, etc. are attached to the sun visors. They could come loose and cause serious injury if the side curtain airbag inflates.
- A deploying airbag inflates in a fraction of a second and with great force.
- Never attach objects to the cover or in the deployment zone of a side curtain airbag.
- The airbag deployment zones must be kept clear at all times. Make sure there are no objects, pets, or other persons in the space between any vehicle occupant and any airbag at any time.
- Do not attach any accessories to the doors.

WARNING

- The airbag system can deploy only once. If the airbag has been triggered, the system must be replaced by an authorized Audi dealer or qualified workshop.
- Always have work involving the side curtain airbag system, removal and installation of the airbag components, or other repairs performed by a qualified dealership. Otherwise the airbag system may not work correctly.
- Never attempt to modify any components of the airbag system in any way.

Child safety

Important information

Introduction

The rear seat is generally the safest place in a collision.

The physical principles of what happens when your vehicle is in a crash apply also to children ⇨ *page 254, What happens to occupants not wearing safety belts?*. But unlike adults and teenagers, their muscles and bones are not fully developed. In many respects children are at greater risk of serious injury in crashes than adults.

Because children's bodies are not fully developed, they require restraint systems especially designed for their size, weight, and body structure. Many countries and all states of the United States and provinces of Canada have laws requiring the use of approved child restraint systems for infants and small children.

In a frontal crash at a speed of 20 – 35 mph (30 – 56 km/h) the forces acting on a 13-pound (6 kg) infant will be more than 20 times the weight of the child. This means the weight of the child would suddenly be more than 260 pounds (120 kg). Under these conditions, only an appropriate child restraint properly used can reduce the risk of serious injury. Child restraints, like adult safety belts, must be used properly to be effective. Used improperly, they can increase the risk of serious injury in an accident.

All children, especially those 12 years and younger must always ride in the back seat properly restrained for their age and size. If you must install a child restraint on the front passenger seat in exceptional circumstances, be sure to read and heed the important information and warnings ⇨ *page 262*. Infants and other children who are properly restrained in an appropriate child restraint that is for their size and age can benefit from the protection that supplemental side airbags provide in some kinds of crashes.

For more information please see information provided by the:

– National Highway Traffic Safety Administration (NHTSA), currently at : http://www.safercar.gov (for the USA)
– Transport Canada Information Centre, currently at: http://www.tc.gc.ca (for Canada)

Consult the child safety seat manufacturer's instructions in order to be sure the seat is right for your child's size ⇨ *page 289, Important safety instructions for using child safety seats*. Please be sure to read and heed all of the important information and WARNINGS about child safety, Advanced Airbags, and the installation of child restraints in this chapter.

There is a lot you need to know about the Advanced Airbags in your vehicle and how they work when infants and children in child restraints are on the front passenger seat. Because of the large amount of important information, we cannot repeat it all here. We urge you to read the detailed information in this owner's manual about airbags and the Advanced Airbag System in your vehicle and the very important information about transporting children on the front passenger seat. Please be sure to heed the WARNINGS – they are extremely important for your safety and the safety of your passengers, especially infants and small children.

WARNING

– Accident statistics have shown that children are generally safer in the rear seat area than in the front seating position. Always restrain any child age 12 and under in the rear.
– All vehicle occupants and especially children must be restrained properly whenever riding in a vehicle. An unrestrained or improperly restrained child could be injured by striking the interior or by being ejected from the vehicle during a sudden maneuver or impact. An unrestrained or improperly restrained child is also at greater risk of injury or death through contact with an inflating airbag.
– A suitable child restraint properly installed and used at one of the rear seating positions provides the highest degree of protection for infants and small children in most accident situations. ▶

8W0012721BG

WARNING

Children on the front seat of any car even with Advanced Airbags can be seriously injured or even killed when an airbag inflates. A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates.

- The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, or door.
- Always install rear-facing child safety seats on the rear seat.
- If you must install a rearward facing child safety seat on the front passenger seat in exceptional circumstances and the **PASSENGER AIR BAG OFF** light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected immediately by your Audi dealer.

WARNING

- Forward-facing child seats installed on the front passenger seat may interfere with the deployment of the airbag and cause serious personal injury to the child.
- If exceptional circumstances require the use of a forward-facing child restraint on the front passenger's seat, the child's safety and well-being require the following special precautions to be taken:
  - Always make sure that the forward-facing seat has been designed and certified by its manufacturer for use on a front passenger seat with a front and side airbag.
  - Always carefully follow the manufacturer's instructions provided with the child seat or infant carrier.
  - Never install a child restraint without a properly attached top tether strap if the child restraint manufacturer's instructions require the top tether strap to be used.
  - Never put the forward-facing child restraint up against or very near the instrument panel.
  - Always set the safety belt upper anchorage to the adjustment position that permits proper installation in accordance with the child restraint manufacturer's instructions.
  - Always move the front passenger seat to the highest position in the up and down adjustment range and move it back to the rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible, before installing the forward-facing child restraint.
  - Always make sure that the safety belt upper anchorage is behind the child restraint and not next to or in front of the child restraint so that the safety belt will be properly positioned.
  - Always make sure that nothing prevents the front passenger's seat from being moved to the rearmost position in its fore and aft adjustment range.
  - Never place objects on the seat (such as a laptop, CD player, electronic games device, power inverter or seat heater for child seats). These may influence the electrical capacitance measured by the capacitive passenger detection system and can also fly around in an accident and cause serious personal injury.
  - Never place or use any electrical device (such as a laptop, CD player, electronic games device, power inverter or seat heater for child seats) on the front passenger seat if the device is connected to the 12-volt socket or the cigarette lighter socket.
  - If a seat heater has been retrofitted or otherwise added to the front passenger seat, never install any child restraint system on this seat.
  - Make sure that there are no wet objects (such as a wet towel) and no water or other liquids on the front passenger seat cushion.
  - Always make sure that the **PASSENGER AIR BAG OFF** light comes on and stays ▶

on all the time whenever the ignition is switched on.
– If the **PASSENGER AIR BAG OFF** light does not come on and stay on, immediately install the forward-facing child seat in a rear seating position and have the airbag system inspected by your authorized Audi dealer.
– Always buckle the child seat firmly in place even if a child is not sitting in it. A loose child seat can fly around during a sudden stop or in a collision.
– Always read and heed all WARNINGS whenever using a child restraint in a vehicle ⇨ *page 253, Safety belts*, ⇨ *page 261, Airbag system* and ⇨ *page 285, Important information*.

Tips

Always replace child restraints that were installed in a vehicle during a crash. Damage to a child restraint that is not visible could cause it to fail in another collision situation.

Advanced front airbag system and children

Your vehicle is equipped with an “Advanced Airbag System” in compliance with United States Federal Motor Vehicle Safety Standard (FMVSS) 208, as well as Canada Motor Vehicle Safety Standard (CMVSS) 208 as applicable at the time your vehicle was manufactured.

The Advanced Airbag system in your vehicle has been certified to meet the “low-risk” requirements for 3- and 6-year old children on the passenger side and small adults on the driver side. The low risk deployment criteria are intended to reduce the risk of injury through interaction with the airbag that can occur, for example, by being too close to the steering wheel and instrument panel when the airbag inflates. In addition, the system has been certified to comply with the “suppression” requirements of the Safety Standard, to turn off the front airbag for infants up to 12 months who are restrained on the front passenger seat in child restraints that are listed in the Standard.

Even though your vehicle is equipped with an Advanced Airbag system, all children, especially those 12 years and younger, should always ride in the back seat properly restrained for their age and size. The airbag on the passenger side makes the front seat a potentially dangerous place for a child to ride. The front seat is not the safest place for a child in a forward-facing child safety seat. It can be a very dangerous place for an infant or a larger child in a rearward-facing seat.

The vehicle's Advanced Airbag System has a capacitive passenger detection system in the front passenger seat cushion that can detect the presence of a baby or a child in a child restraint system on this seat.

The capacitive passenger detection system registers the changes that result in an electrical field when a child, a child restraint, and a baby blanket are on the front passenger seat. The change in the measured capacitance due to the presence of a child, a child restraint, and a baby blanket on the front passenger seat is related to the child restraint system resting on the seat. The measured capacitance of a child restraint system varies depending on the type of system and specific make and model.

The electrical capacitance of the various types, makes, and models of child restraints specified by the U.S. National Highway Traffic Safety Administration (NHTSA) in the relevant safety standard are stored in the Advanced Airbag System control unit together with the capacitances typical of infants and a 1-year old child. When a child restraint is used on the front passenger seat with a typical 1 year-old infant, the Advanced Airbag System compares the capacitance measured by the capacitive passenger detection system with the data stored in the electronic control unit.

Child restraints and Advanced Airbags

Regardless of the child restraint that you use, make sure that it has been certified to meet Safety Standards and has been certified by its manufacturer for use with an airbag. Always be sure that the child restraint is properly installed at ▶

one of the rear seating positions. If in exceptional circumstances you must use it on the front passenger seat, carefully read all of the information on child safety and Advanced Airbags and heed all of the applicable WARNINGS. Make certain that the child and child restraint are correctly recognized by the capacitive passenger detection system in the front passenger seat, that the front passenger airbag is turned off, and that the airbag status is always correctly signaled by the **PASSENGER AIR BAG OFF** light.

Many types and models of child restraints have been available over the years, new models are introduced regularly incorporating new and improved designs and older models are taken out of production. Child restraints are not standardized. Child restraints of the same type typically have different weights and sizes and different "footprints", the size and shape of the bottom of the child restraint that sits on the seat, when they are installed on a vehicle seat. These differences make it virtually impossible to certify compliance with the requirements for advanced airbags with each and every child restraint that has ever been sold in the past or will be sold over the course of the useful life of your vehicle.

For this reason, the United States National Highway Traffic Safety Administration has published a list of specific type, makes and models of child restraints that must be used to certify compliance of the Advanced Airbag System in your vehicle with the suppression requirements of Federal Motor Vehicle Safety Standard 208. These child restraints are:

Subpart A – Car bed child restraints

Model	Manufactured on or after
Angel Guard Angel Ride AA2403FOF	September 25, 2007

Subpart B – Rear-facing child restraints

Model	Manufactured on or after
Century SmartFit 4543	December 1, 1999
Cosco Arriva 22-013PAW and base 22-999WH0	September 25, 2007
Evenflo Discovery Adjust Right 212	December 1, 1999
Evenflo First Choice 204	December 1, 1999
Graco Infant 8457	December 1, 1999
Graco Snugride	September 25, 2007
Peg Perego Primo Viaggio SIP IMUN00US	September 25, 2007

Subpart C – Forward-facing and convertible child restraints

Model	Manufactured on or after
Britax Roundabout E9L02xx	September 25, 2007
Cosco Touriva 02519	December 1, 1999
Cosco Summit Deluxe High Back Booster 22-262	September 25, 2007
Cosco High Back Booster 22-209	September 25, 2007
Evenflo Tribute V 379xxxx	September 25, 2007
Evenflo Medallion 254	December 1, 1999
Evenflo Generations 352xxxx	September 25, 2007
Graco ComfortSport	September 25, 2007
Graco Toddler Safety Seat Step 2	September 25, 2007
Graco Platinum Cargo	September 25, 2007

WARNING

To reduce the risk of serious injury, make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on whenever a child restraint is installed on the front passenger seat and the ignition is switched on.

– Take the child restraint off the front passenger seat and install it properly at one of the rear seat positions if the **PASSENGER AIR BAG OFF** light does not stay on.
– Have the airbag system inspected by your authorized Audi dealer immediately.

Tips

The child seats listed in categories A to C have been statically tested by Audi only for the Advanced Airbag function.

Important safety instructions for using child safety seats

Correct use of child safety seats substantially reduces the risk of injury in an accident!

As the driver, you are responsible for the safety of everybody in the vehicle, especially children:

- Always use the right child safety seat for each child and always use it properly ⇨ *page 291*.
- Always carefully follow the child safety seat manufacturer's instructions on how to route the safety belt properly through the child safety seat.
- When using the vehicle safety belt to install a child safety seat, you must first activate the convertible locking retractor on the safety belt to prevent the child safety seat from moving ⇨ *page 296*.
- Push the child safety seat down with your full weight to get the safety belt really tight so that the seat cannot move forward or sideways more than one inch (2.5 cm).
- Secure unused safety belts on the rear seat ⇨ *page 291*.

Always remember: Even though your vehicle is equipped with an Advanced Airbag system, all children, especially those 12 years and younger, should always ride in the back seat properly restrained for their age and size.

WARNING

Not using a child safety seat, using the wrong child safety seat or improperly installing a child restraint increases the risk of serious personal injury and death.

– All vehicle occupants and especially children must be restrained properly whenever riding in a vehicle. An unrestrained or improperly restrained child could be injured by striking the interior or by being ejected from the vehicle during a sudden maneuver or impact. An unrestrained or improperly restrained child is also at greater risk of injury or death through contact with an inflating airbag.
– Commercially available child safety seats are required to comply with U.S. Federal Motor Vehicle Safety Standard (FMVSS) 213 (in Canada CMVSS 213).
  – When buying a child restraint, select one that fits your child and the vehicle.
  – Only use child restraint systems that fully contact the flat portion of the seat cushion. The child restraint must not tip or lean to either side. Audi does not recommend using child safety seats that rest on legs or tube-like frames. They do not provide adequate contact with the seat.
  – Always heed all legal requirements pertaining to the installation and use of child safety seats and carefully follow the instructions provided by the manufacturer of the seat you are using.
– Never allow children under 57 inches (1.45 meters) to wear a normal safety belt. They must always be restrained by a proper child restraint system. Otherwise, they could sustain injuries to the abdomen and neck areas during sudden braking maneuvers or accidents.
– Never let more than one child occupy a child safety seat.
– Never let babies or older children ride in a vehicle while sitting on the lap of another passenger.
  – Holding a child in your arms is never a substitute for a child restraint system.
  – The strongest person could not hold the child with the forces that exist in an accident. The child will strike the interior of the vehicle and can also be struck by the passenger.

- The child and the passenger can also injure each other in an accident.

– Never install rear-facing child safety seats or infant carriers on the front passenger seat. A child will be seriously injured and can be killed when the passenger airbag inflates – even with an Advanced Airbag System.
– The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, door or roof.
– Always install rear-facing child safety seats or infant carriers on the rear seat.
– Before you carry a child in a rear-facing child safety seat on the rear seat, remove the Rear Seat Entertainment (RSE)* and its holder* from the backrest of the front seat.
– Make sure there is enough space in front of the child in the child seat. If necessary, adjust the angle and position of the seat in front of the child seat.
– Forward-facing child safety seats installed on the front passenger's seat can interfere with the airbag when it inflates and cause serious injury to the child. Always install forward-facing child safety seats on the rear seat.
– If exceptional circumstances require the use of a forward-facing child restraint on the front passenger's seat, the child's safety and well-being require that the following special precautions be taken:
  – Make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
  – Always carefully follow the manufacturer's instructions provided with the child safety seat or carrier.
  – Always move the front passenger seat to the highest position in the up and down adjustment range and move it back to the rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible, before installing the forward-facing child restraint.
  – Always make sure that the safety belt upper anchorage is behind the child restraint and not next to or in front of the child restraint so that the safety belt will be properly positioned.
  – Always make sure that nothing prevents the front passenger's seat from being moved to the rearmost position in its fore and aft adjustment range.
  – Always make sure that the backrest is in the upright position.
  – Never place or use any electrical device (such as a laptop, CD player, electronic games device, power inverter or seat heater for child seats) on the front passenger seat if the device is connected to the 12-volt socket or the cigarette lighter socket.
  – If a seat heater has been retrofitted or otherwise added to the front passenger seat, never install any child restraint system on this seat.
  – Make sure that there are no wet objects (such as a wet towel) and no water or other liquids on the front passenger seat cushion.
  – Never place objects on the seat (such as a laptop, CD player, electronic games device, power inverter or seat heater for child seats). These may influence the electrical capacitance measured by the capacitive passenger detection system and can also fly around in an accident and cause serious personal injury.
  – Always buckle the child safety seat firmly in place even if a child is not sitting in it. A loose child safety seat can fly around during a sudden stop or in a collision.
  – Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇨ *page 253, Safety belts*, ⇨ *page 261, Airbag system* and ⇨ *page 285, Child safety*.

WARNING

To reduce the risk of serious injury, make sure that the **PASSENGER AIR BAG OFF** light ▶

comes on and stays on whenever a child restraint is installed on the front passenger seat and the ignition is switched on.

– Take the child restraint off the front passenger seat and install it properly at one of the rear seat positions if the **PASSENGER AIR BAG OFF** light does not stay on.
– Have the airbag system inspected by your authorized Audi dealer immediately.

Secure unused safety belts on the rear seat

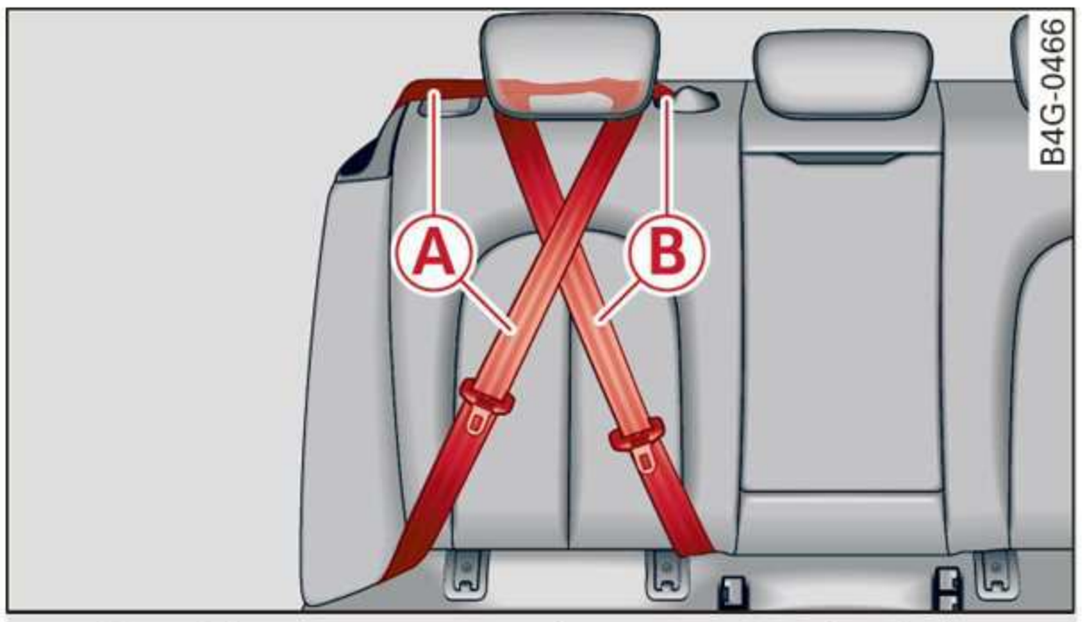


Fig. 237 Schematic overview: keep unused safety belts away from children in child safety seats. Ⓐ - outer rear safety belt, Ⓑ - center rear safety belt

If a child safety seat is used on the rear bench, especially with LATCH universal lower anchorages, the unused safety belts **must** be secured so that the child in the child restraint cannot reach them ⇨ ⚠.

– Guide the safety belt webbings Ⓐ and Ⓑ behind the head restraint of the seat where the child restraint is installed ⇨ *fig. 237*. When doing so, do not engage the convertible locking retractor! You should not hear a “clicking” sound when winding up the safety belt.
– Let the belt retractor wind up the safety belt webbing.

WARNING

A child in a child safety seat installed with the LATCH lower anchorages or with the standard safety belt or a child in a booster seat on the rear seat could play with unused rear seat safety belts and become entangled. This could cause the child serious personal injury and even death.

– Always secure unused rear seat safety belts out of reach of children in child seats such as by properly routing them around the head restraint of the seat where the child restraint is installed.
– Never activate the convertible locking retractor when routing the safety belts around the head restraints.
– Never let anyone sit at the center rear seating position if the center rear safety belt has been routed around a rear head restraint.

Child safety seats

Infant seats

Babies and infants up to about one year old and 20 lbs. or 9 kg need special rearward-facing child restraints that support the back, neck and head in a crash.



Fig. 238 Schematic overview: rearward-facing infant seat, properly installed on the rear seat

▸ When using the vehicle safety belt to install a child safety seat, you must first activate the convertible locking retractor on the safety belt to prevent the child safety seat from moving ⇨ *page 296* or install the seat using the LATCH attachments.
▸ Push the child safety seat down with your full weight to get the safety belt really tight so that the seat cannot move forward or sideways more than one inch (2.5 cm).
▸ Secure unused safety belts on the rear seat ⇨ *page 291*.

Infants up to about one year (20 lbs. or 9 kg) are best protected in special infant carriers and child safety seats designed for their age group. Many experts believe that infants and small children ▶

should ride only in special restraints in which the child faces the back of the vehicle. These infant seats support the baby's back, neck and head in a crash ⇨ *fig. 238*.

The airbag on the passenger side makes the front seat a potentially dangerous place for a child to ride. The front seat is not the safest place for a child in a forward-facing child seat. It is a very dangerous place for an infant or a larger child in a rearward-facing seat.

WARNING

Not using a child safety seat, using the wrong child safety seat or improperly installing a child restraint increases the risk of serious personal injury and death in a crash.

- Never install rear-facing child safety seats or infant carriers on the front passenger seat – even with an Advanced Airbag System. A child will be seriously injured and can be killed when the inflating airbag hits the child safety seat or infant carrier with great force and smashes the child safety seat and child against the backrest, center armrest, door or roof ⇨ *page 262, Child restraints on the front seat – some important things to know*.
- Always install rear-facing child safety seats or infant carriers on the rear seat.
- Never install a rear-facing child restraint in the forward-facing direction. Such restraints are designed for the special needs of infants and very small children and cannot protect them properly if the seat is forward-facing.
- If you must install a rearward facing child safety seat on the front passenger seat because of exceptional circumstances and the **PASSENGER AIR BAG OFF** light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your Audi dealer.
- Never place or use any electrical device (such as a laptop, CD player, electronic games device, power inverter or seat heater for child seats) on the front passenger seat if the device is connected to the 12-volt socket or the cigarette lighter socket.
- If a seat heater has been retrofitted or otherwise added to the front passenger seat, never install any child restraint system on this seat.
- Make sure that there are no wet objects (such as a wet towel) and no water or other liquids on the front passenger seat cushion.
- Never place objects on the seat (such as a laptop, CD player, electronic games device, power inverter or seat heater for child seats). These may influence the electrical capacitance measured by the capacitive passenger detection system and can also fly around in an accident and cause serious personal injury.
- Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇨ *page 253, Safety belts*, ⇨ *page 261, Airbag system* and ⇨ *page 285, Important information*.

Convertible child safety seats

Properly used convertible child safety seats can help protect toddlers and children over age one who weigh between 20 and 40 lbs. (9 and 18 kg) in a crash.

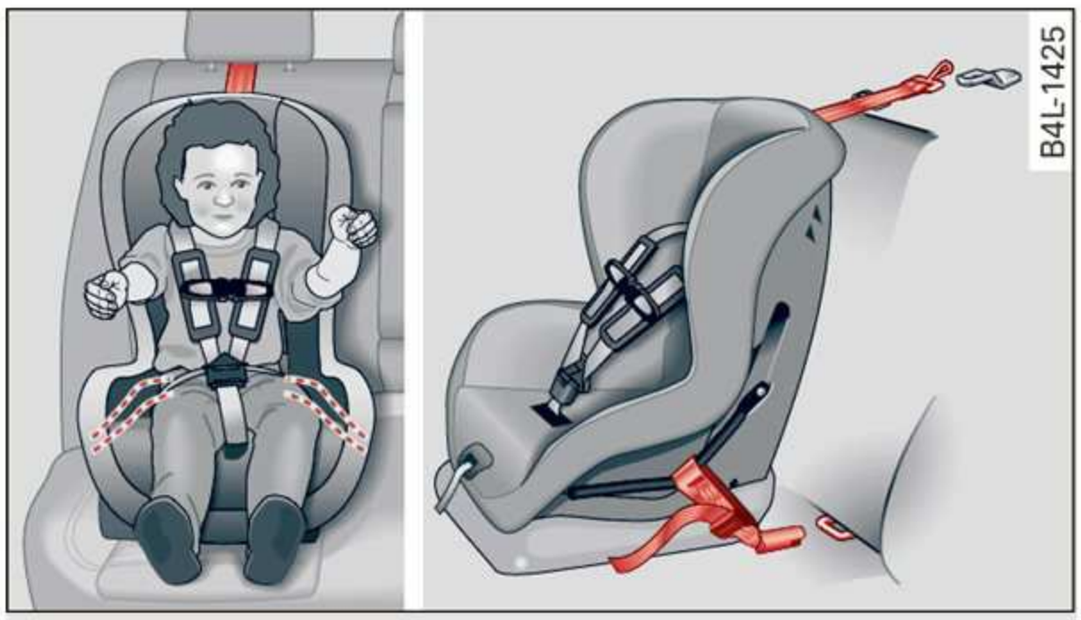


Fig. 239 Schematic overview: installation of the attachments applicable to a LATCH seat

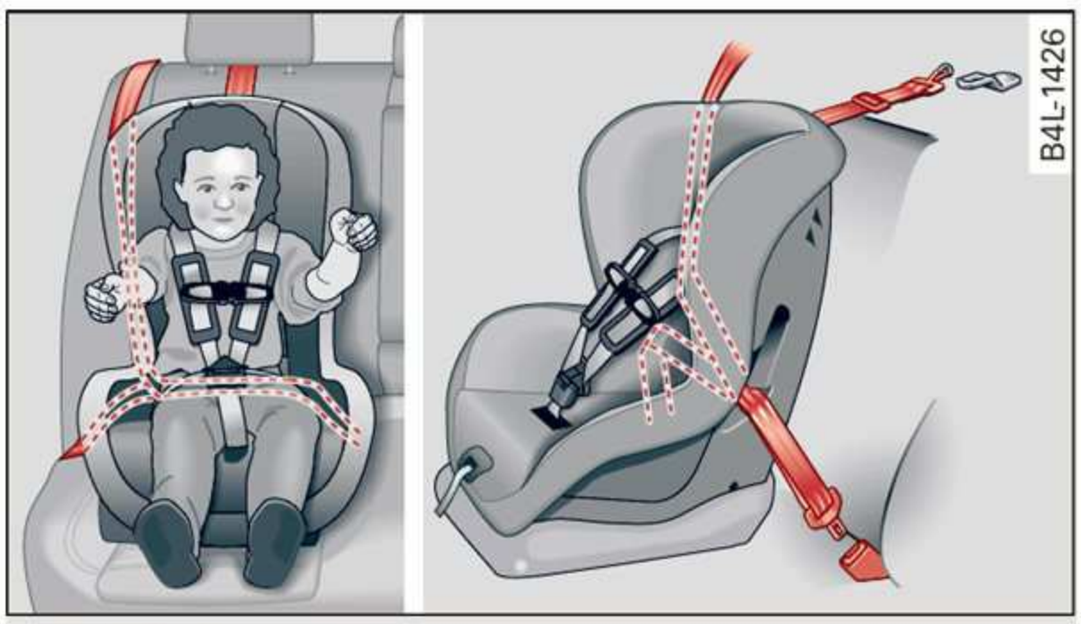


Fig. 240 Schematic overview: installation of the seat using the vehicle's safety belt system

- ► When using the vehicle safety belt to install a child safety seat, you must first activate the convertible locking retractor on the safety belt to prevent the child safety seat from moving ⇨ *page 296* or install the seat using the LATCH attachments.
- ► Push the child safety seat down with your full weight to get the safety belt really tight so that the seat cannot move forward or sideways more than one inch (2.5 cm) ⇨ *page 296*.
- ► If the child safety seat is equipped with a tether strap, attach it to the tether anchors ⇨ *page 302*.
- ► Secure unused safety belts on the rear seat ⇨ *page 291*.

A toddler or child is usually too large for an infant restraint if it is more than one year old and weighs more than 20 lbs. (9 kg).

Toddlers and children who are older than one year up to about 4 years old and weigh more than 20 lbs. (9 kg) up to 40 lbs. (18 kg) must always be properly restrained in a child safety seat certified for their size and weight ⇨ *fig. 239* and ⇨ *fig. 240*.

The airbag on the passenger side makes the front seat a potentially dangerous place for a child to ride. The front seat is not the safest place for a child in a forward-facing child safety seat. It is a very dangerous place for an infant or a larger child in a rearward-facing seat.

WARNING

Not using a child safety seat, using the wrong child safety seat or improperly installing a child restraint increases the risk of serious personal injury and death in a collision or other emergency situation.

- – Children on the front seat of any car, even with Advanced Airbags, can be seriously injured or even killed when an airbag inflates. A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates – even with an Advanced Airbag System.
- – The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, door or roof.
- – Always install rear-facing child safety seats on the rear seat.
- – If you must install a rearward facing child safety seat on the front passenger seat because of exceptional circumstances and the **PASSENGER AIR BAG OFF** light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your Audi dealer.
- – The rear side of the child safety seat should be positioned as close as possible to the backrest on the vehicle seat. Adjust or remove the rear seat head restraint if it is difficult to install the child seat with the head restraint in place ⇨ *page 60*. Install the ▶

head restraint again immediately once the child seat is removed. Driving without head restraints or with head restraints that are not properly adjusted increases the risk of serious or fatal neck injury dramatically.
– Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇨ *page 253, Safety belts*, ⇨ *page 261, Airbag system* and ⇨ *page 285, Important information*.

WARNING

If exceptional circumstances require the use of a forward-facing child restraint on the front passenger's seat, the child's safety and well-being require that the following special precautions be taken:
– Make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
– Always follow the manufacturer's instructions provided with the child safety seat or infant carrier.
– Always move the front passenger seat to the highest position in the up and down adjustment range and move it back to the rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible, before installing the forward-facing child restraint.
– Always make sure that the safety belt upper anchorage is behind the child restraint and not next to or in front of the child restraint so that the safety belt will be properly positioned.
– Always make sure that nothing prevents the front passenger's seat from being moved to the rearmost position in its fore and aft adjustment range.
– Always make sure the backrest is in an upright position.
– Never place or use any electrical device (such as a laptop, CD player, electronic games device, power inverter or seat heater for child seats) on the front passenger seat if the device is connected to the 12-volt socket or the cigarette lighter socket.
– If a seat heater has been retrofitted or otherwise added to the front passenger seat, never install any child restraint system on this seat.
– Make sure that there are no wet objects (such as a wet towel) and no water or other liquids on the front passenger seat cushion.
– Never place objects on the seat (such as a laptop, CD player, electronic games device, power inverter or seat heater for child seats). These may influence the electrical capacitance measured by the capacitive passenger detection system and can also fly around in an accident and cause serious personal injury.
– Make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on all the time whenever the ignition is switched on.
– If the **PASSENGER AIR BAG OFF** light does not come on and stay on, immediately install the forward-facing child seat at a seating position on the rear seat and have the airbag system inspected by your authorized Audi dealer.
– Take the child restraint off the front passenger seat and install it properly at one of the rear seat positions if the **PASSENGER AIR BAG OFF** light does not stay on whenever the ignition is switched on.

Booster seats and safety belts

Properly used booster seats can help protect children weighing between about 40 lbs. and 80 lbs. (18 kg and 36 kg) who are less than 4 ft. 9 in. (57 inches/1.45 meters) tall.



Fig. 241 Rear seat: child properly restrained in a booster seat

The vehicle's safety belts alone will not fit most children until they are at least 4 ft. 9 in. (57 inches/1.45 meters) tall and weigh about 80 lbs. (36 kg). Booster seats raise these children up so that the safety belt will pass properly over the stronger parts of their bodies and the safety belt can help protect them in a crash.

- Do not use the convertible locking retractor when using the vehicle's safety belt to restrain a child on a booster seat.
- The shoulder belt must lie as close to the center of the child’s collar bone as possible and must lie flat and snug on the upper body. It must never lie across the throat or neck. The lap belt must lie across the pelvis and never across the stomach or abdomen. Make sure the belt lies flat and snug. Pull on the belt to tighten if necessary.
- If you must transport an older child in a booster seat on the front passenger seat, you can use the safety belt height adjustment to help adjust the shoulder portion properly.
- Secure unused safety belts on the rear seat ⇨ *page 291*.

Children up to at least 8 years old (over 40 lbs. or 18 kg) are best protected in child safety seats designed for their age and weight. Experts say that the skeletal structure, particularly the pelvis, of these children is not fully developed, and they must not use the vehicle safety belts without a suitable child restraint.

It is usually best to put these children in appropriate booster seats. Be sure the booster seat meets all applicable safety standards.

Booster seats raise the seating position of the child and reposition both the lap and shoulder parts of the safety belt so that they pass across the child's body in the right places. The routing of the belt over the child's body is very important for the child's protection, whether or not a booster seat is used. Children age 12 and under must always ride in the rear seat.

Children who are at least 4 ft. 9 in. (57 inches/1.45 meters) tall can generally use the vehicle's three point lap and shoulder belts. Never use the lap belt portion of the vehicle's safety belt alone to restrain any child, regardless of how big the child is. Always remember that children do not have the pronounced pelvic structure required for the proper function of lap belt portion of the vehicle's three point lap and shoulder belts. The child's safety absolutely requires that a lap belt portion of the safety belt be fastened snugly and as low as possible around the pelvis. Never let the lap belt portion of the safety belt pass over the child's stomach or abdomen.

In a crash, airbags must inflate within a blink of an eye and with considerable force. In order to do its job, the airbag needs room to inflate so that it will be there to protect the occupant as the occupant moves forward into the airbag.

A vehicle occupant who is out of position and too close to the airbag gets in the way of an inflating airbag. When an occupant is too close, he or she will be struck violently and will receive serious or possibly even fatal injury.

In order for the airbag to offer protection, it is important that all vehicle occupants, especially any children, who must be in the front seat because of exceptional circumstances, be properly restrained and as far away from the airbag as possible. By keeping room between the child's body and the front of the passenger compartment, the airbag can inflate completely and provide supplemental protection in certain frontal collisions.

WARNING

Not using a booster seat, using the booster seat improperly, incorrectly installing a booster seat or using the vehicle safety belt improperly increases the risk of serious personal injury and death in a collision or other emergency situation. To help reduce the risk of serious personal injury and/or death:

– The shoulder belt must lie as close to the center of the child’s collar bone as possible and must lie flat and snug on the upper body. It must never lie across the throat or neck. The lap belt must lie across the pelvis and never across the stomach or abdomen. Make sure the belt lies flat and snug. Pull on the belt to tighten if necessary. ▶

8W0012721BG

– Failure to properly route safety belts over a child's body will cause severe injuries in an accident or other emergency situation ⇨ *page 253*.
– The rear side of the child safety seat should be positioned as close as possible to the backrest on the vehicle seat. Adjust or remove the rear seat head restraint if it is difficult to install the child seat with the head restraint in place ⇨ *page 60*. Install the head restraint again immediately once the child seat is removed. Driving without head restraints or with head restraints that are not properly adjusted increases the risk of serious or fatal neck injury dramatically.
– Never let a child put the shoulder belt under the arm or behind the back, because it could cause severe injuries in a crash.
– Children on the front seat of any car, even with Advanced Airbags, can be seriously injured or even killed when an airbag inflates.
– Never let a child stand or kneel on any seat, for example the front seat.
– Never let a child ride in the cargo area of your vehicle.
– Always remember that a child leaning forward, sitting sideways or out of position in any way during an accident can be struck by a deploying airbag. This will result in serious personal injury or death.
– If you must install a booster seat on the front passenger seat because of exceptional circumstances the **PASSENGER AIR BAG OFF** light must come on and stay on, whenever the ignition is switched on.
– If the **PASSENGER AIR BAG OFF** light does not come on and stay on, perform the checks described ⇨ *page 273, Monitoring the Advanced Airbag System*.
– Take the child restraint off the front passenger seat and install it properly at one of the rear seat positions if the **PASSENGER AIR BAG OFF** light does not stay on whenever the ignition is switched on.
– Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇨ *page 253, Safety belts*, ⇨ *page 261, Airbag system* and ⇨ *page 285, Important information*.

Securing child safety seats

Securing a child safety seat using a safety belt

Safety belts for the rear seats and the front passenger can be locked with the convertible locking retractor to properly secure child safety seats.

The safety belts for the rear seats and for the front passenger's seat have a convertible locking retractor for child safety seats. The safety belt must be locked so that belt webbing cannot unreel. The retractor can be activated to lock the safety belt and prevent the safety belt webbing from loosening up during normal driving. A child safety seat can only be properly installed when the safety belt is locked so that the child and child safety seat will stay in place.

Always remember: Even though your vehicle is equipped with an Advanced Airbag system, all children, especially those 12 years and younger, should always ride in the back seat properly restrained for their age and size.

WARNING

Improperly installed child safety seats increase the risk of serious personal injury and death in a collision.

– Always make sure that the safety belt retractor is locked when installing a child safety seat. An unlocked safety belt retractor cannot hold the child safety seat in place during normal driving or in a crash.
– Always buckle the child safety seat firmly in place even if a child is not sitting in it. A loose child safety seat can fly around during a sudden stop or in a collision.
– Always make sure that the rear seat backrest to which the center rear safety belt* is attached is securely latched whenever the rear center safety belt is being used to secure a child restraint. ▶

– If the backrest is not securely latched, the child and the child restraint will be thrown forward together with the backrest and will strike parts of the vehicle interior. The child can be seriously injured or killed.
– Never install rear-facing child safety seats or infant carriers on the front passenger seat. A child will be seriously injured and can be killed when the passenger airbag inflates.
– The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, door or roof.
– Always install rear-facing child safety seats or infant carriers on the rear seat.
– Forward-facing child safety seats or infant carriers installed on the front passenger's seat may interfere with the deployment of the airbag and cause serious injury to the child.
– It is safer to install a forward-facing child safety seat on the rear seat.
– Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇨ *page 285*. Special precautions apply when installing a child safety seat on the front passenger seat ⇨ *page 262, Child restraints on the front seat – some important things to know*.

WARNING

Always take special precautions if you must install a forward or rearward-facing child restraint on the front passenger's seat in exceptional situations:
– Whenever a forward or rearward-facing child restraint is installed on the front passenger seat, the **PASSENGER AIR BAG OFF** light must come on and stay on whenever the ignition is switched on.
– If the **PASSENGER AIR BAG OFF** light does not come on and stay on, perform the checks described ⇨ *page 273, Monitoring the Advanced Airbag System*.
– Take the child restraint off the front passenger seat and install it properly at one of the rear seat positions if the **PASSENGER AIR BAG OFF** light does not stay on whenever the ignition is switched on.
– Improper installation of child restraints can reduce their effectiveness or even prevent them from providing any protection.
– An improperly installed child restraint can interfere with the airbag as it deploys and seriously injure or even kill the child.
– Always carefully follow the manufacturer's instructions provided with the child safety seat or carrier.
– After checking to make sure that the child restraint is properly installed, make certain that the child restraint is correctly recognized by the capacitive passenger detection system in the front passenger seat and that the **PASSENGER AIR BAG OFF** light signals the correct front passenger frontal airbag status.

WARNING

Forward-facing child restraints:
– Always make sure the forward-facing seat has been designed and certified by its manufacturer for use on a front seat with a passenger front and side airbag.
– Never put the forward-facing child restraint up, against or very near the instrument panel.
– Always move the front passenger seat to the highest position in the up and down adjustment range and move it back to the rearmost position in the seat's fore and aft adjustment range, as far away from the airbag as possible, before installing the forward-facing child restraint.
– Always make sure that the safety belt upper anchorage is behind the child restraint and not next to or in front of the child restraint so that the safety belt will be properly positioned.
– Make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on all the time whenever the ignition is switched on. ▶

WARNING

Rearward-facing child restraints:

– A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates – even with an Advanced Airbag System.
– The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, door or roof.
– Always be especially careful if you must install a rearward facing child safety seat on the front passenger seat in exceptional circumstances.
– Make sure that the **PASSENGER AIR BAG OFF** light comes on and stays on all the time whenever the ignition is switched on.
– If the **PASSENGER AIR BAG OFF** light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your Audi dealer.

Activating the convertible locking retractor

Use the convertible locking retractor to secure a child restraint.

Always heed the child safety seat manufacturer's instructions when installing a child restraint in your vehicle. To activate the convertible locking retractor:

- ▸ Place the child restraint on a seat, preferably on the rear seat.
- ▸ Slowly pull the belt **all the way out**.
- ▸ Route it around or through the child restraint belt path ⇨ ⚠.
- ▸ Push the child safety seat down with your full weight to get the safety belt really tight.
- ▸ Insert the belt tongue into the buckle for that seating position.
- ▸ Guide the safety belt back into the retractor until the belt lies flat and snug on the child safety seat.
- ▸ You should hear a “clicking” noise as the belt winds back into the inertia reel. Test the convertible locking retractor by pulling on the belt. You should no longer be able to pull the belt out of the retractor. The convertible locking retractor is now activated.
- ▸ Make sure that the red release button is facing away from the child restraint so that it can be unbuckled quickly.
- ▸ Pull on the belt to make sure the safety belt is properly tight and fastened so that the seat cannot move forward or sideways more than one inch (2.5 cm).

WARNING

Using the wrong child restraint or an improperly installed child restraint can cause serious personal injury or death in a crash.

– Always make sure that the safety belt retractor is locked when installing a child safety seat. An unlocked safety belt retractor cannot hold the child safety seat in place during normal driving or in a crash.
– Always buckle the child safety seat firmly in place even if a child is not sitting in it. A loose child safety seat can fly around during a sudden stop or in a crash.
– Always make sure the seat backrest to which the child restraint is installed is in an upright position and securely latched into place and cannot fold forward. Otherwise, the seatback with the child safety seat attached to it could fly forward in the event of an accident or other emergency situation.
– Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇨ *page 285*. Special precautions apply when installing a child safety seat on the front passenger seat ⇨ *page 262, Child restraints on the front seat – some important things to know*.

Deactivating the convertible locking retractor

The convertible locking retractor for child restraints will be deactivated automatically when the belt is wound all the way back into the retractor.

- ▸ Press the red button on the safety belt buckle. The belt tongue will pop out of the buckle.
- ▸ Guide the safety belt all the way back into its stowed position.

Always let the safety belt retract completely into its stowed position. The safety belt can now be used as an ordinary safety belt without the convertible locking retractor for child restraints.

If the convertible locking retractor should be activated inadvertently, the safety belt must be unfastened and guided completely back into its stowed position to deactivate this feature. If the convertible locking retractor is not deactivated, the safety belt will gradually become tighter and uncomfortable to wear.

WARNING

Improperly installed child safety seats increase the risk of serious personal injury and death in a collision.

– Never unfasten the safety belt to deactivate the convertible locking retractor for child restraints while the vehicle is moving. You would not be restrained and could be seriously injured in an accident.
– Always read and heed all WARNINGS whenever using a child restrained in a vehicle is being used ⇨ *page 285*. Special precautions apply when installing a child safety seat on the front passenger seat ⇨ *page 262, Child restraints on the front seat – some important things to know*.

LATCH system (lower anchorages and tethers for children)

Child Restraint System anchors and how are they related to child safety

To provide a simpler and more practicable way to attach the child restraint on the vehicle seat, Federal regulations require special lower anchorages in vehicles and devices on new child restraints to attach to the vehicle anchorages.

In the United States, the combination of the tether anchorages and the lower anchorages is now generally called the LATCH system for "**L**ower **A**nchorages and **T**ethers for **Ch**ildren". In Canada, the terms "top tether" with "lower universal anchorages" (or "lower universal anchorage bars") are used to describe the system.

In other countries the term "ISOFIX" is used to describe the lower anchorages.

Forward-facing child restraints manufactured after September 1, 1999, are required by U.S. federal regulations to comply with new child head movement performance requirements. These new performance requirements make a tether necessary on most new child seats.

Installing a child restraint that requires a top tether without one can seriously impair the performance of the child restraint and its ability to protect the child in a collision. Installing a child restraint that requires a top tether without the top tether may be a violation of state law.

Child restraint manufacturers offer LATCH lower anchorages on their child seats with hook-on or push-on connectors attached to adjustable straps.

In addition to the LATCH lower anchorages, these child restraint systems usually require the use of tether straps to help keep the child restraint firmly in place.

WARNING

Improper installation of child restraints will increase the risk of injury and death in a crash. ▶

- Always follow the instructions provided by the manufacturer of the child restraint you intend to install in your vehicle.
- Never install a child restraint without a properly attached top tether strap if the child restraint manufacturer's instructions require the top tether strap to be used.
- Improper use of child restraint LATCH lower anchorage points can lead to injury in a collision. The LATCH lower anchorage points are designed to withstand only those loads imposed by correctly fitted child restraints.
- Never mount two child restraint systems on one LATCH lower anchorage point.
- Never secure or attach any luggage or other item to the LATCH lower anchorages.

Location

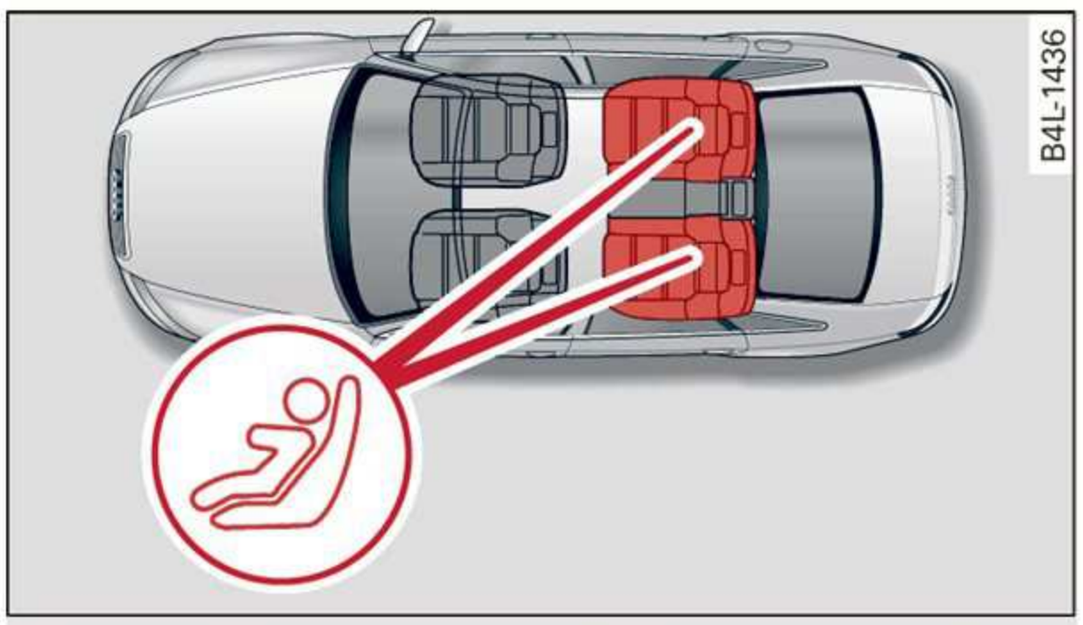


Fig. 242 Schematic overview: LATCH anchorage point locations (example)

The illustration shows the seating locations in your vehicle which are equipped with the lower anchorages system.

Description

The lower anchorage positions are marked for quick locating.



Fig. 243 Rear seats: locator buttons for lower anchorages

Lower anchorages

The lower anchorage attachment points are located between the rear seatback and rear seat cushion ⇨ *fig. 243*.

Lower anchorages secure the child restraint in the seat without using the vehicle's safety belts. Anchorages provide a secure and easy-to-use attachment and minimize the possibility of improper child restraint installation.

All child restraints manufactured after September 1, 2002, must have lower anchorage attachments for the *LATCH* system.

Remember that the lower anchorage points are only intended for installation and attachment of child restraints specifically certified for use with *LATCH* lower anchorages. Child restraints that are not equipped with the lower anchorage attachments can still be installed in compliance with the child restraint manufacturer's instructions on using vehicle safety belts.

WARNING

Improper use of LATCH lower anchorages can cause serious personal injury in an accident.

- Always carefully follow the child restraints manufacturer's instructions for proper installation of the child restraint and proper use of the lower anchorages or safety belts in your vehicle.
- Never secure or attach any luggage or other items to the *LATCH* lower anchorages. ▶

– Always read and heed the important information about child restraints in this chapter and WARNINGS ⇨ *page 285, Child safety*.

Installing a child restraint with LATCH lower anchorages

Whenever you install a child restraint always follow the child restraint manufacturer's instructions.

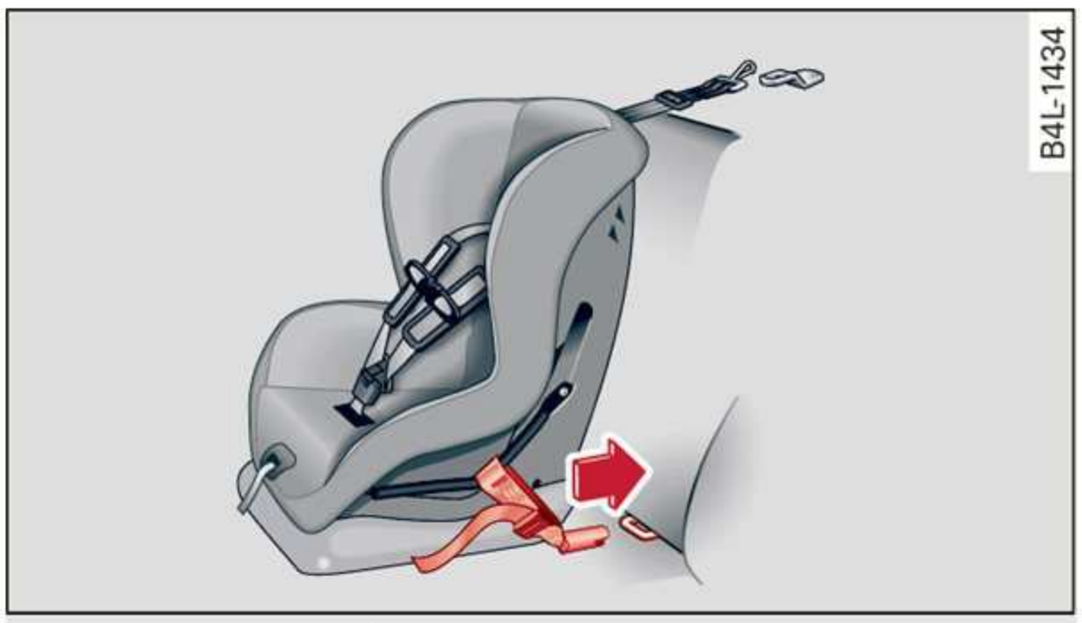


Fig. 244 Lower anchorages: proper mounting

Mounting

- ► Make sure the seatback of the rear seat bench is in the upright position and securely latched in place.
- ► Remove the covers to access the lower anchorage brackets.
- ► Attach both hook-on connectors with the spring catch release on the child safety seat onto the LATCH lower anchorage so that the connectors lock into place ⇨ *fig. 244*.
- ► Pull on the connector attachments to make sure they are properly attached to the LATCH lower anchorage.
- ► Pull straps tight following the child restraint manufacturer's instructions.

Releasing

- ► Loosen the tension on the straps following the child restraint manufacturer's instructions.
- ► Depress the spring catches to release the anchorage hooks from the lower anchorages.

Remember: Use tether straps to help keep the child restraint firmly in place.

WARNING

Improper use of the LATCH system can increase the risk of serious personal injury and death in an accident.


– These anchors were developed only for child safety seats using the “LATCH” system.
– Never attach other child safety seats, belts or other objects to these anchors.
– Always make sure that you hear a click when latching the seat in place. If you do not hear a click the seat is not secure and could fly forward and hit the interior of the vehicle, or be ejected from the vehicle.

WARNING

Improper installation of child restraints will increase the risk of injury in an accident.

– Always follow the child restraint system manufacturer's instructions for proper installation of the child restraint system and proper use of tether straps as well as the lower anchorages or safety belts in your vehicle.
– Always read and heed the important information and WARNINGS about child safety and the installation of child restraint systems ⇨ *page 285, Child safety*.

Tether anchors and tether straps

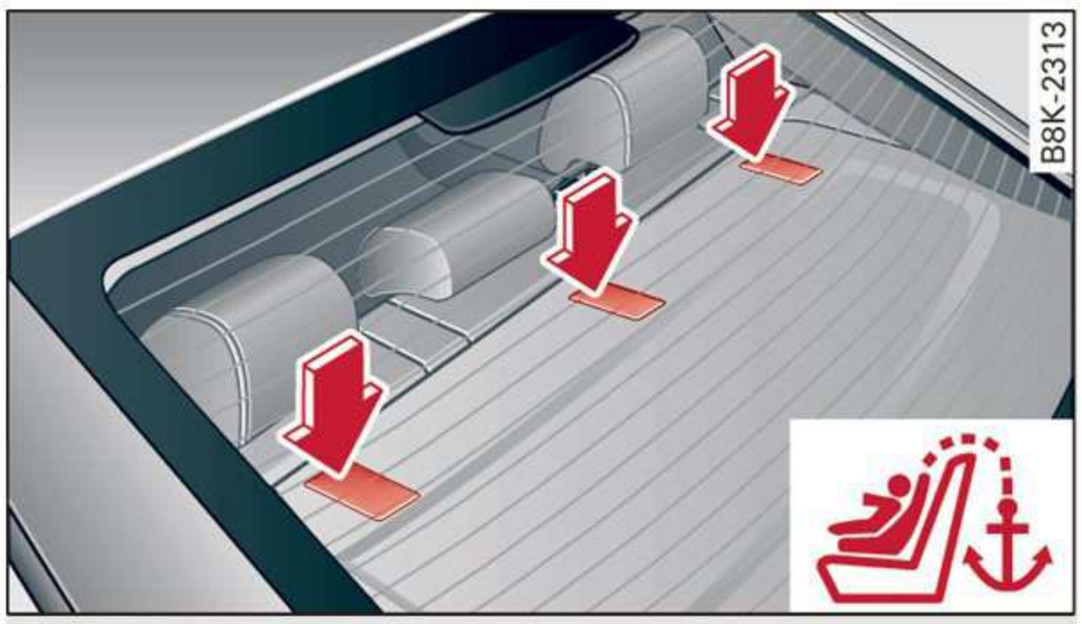

Applies to: Sedan

Fig. 245 Tether anchors: recess flaps behind the rear seatbacks



Applies to: allroad

Fig. 246 Tether anchors: attachment hook locations behind the rear seatbacks

Applies to: Sedan: The tether anchors for the rear seating positions are located in recesses in the rear window shelf.

Applies to: allroad: The tether anchors for the rear seating positions are located on the backside of the rear seatbacks.

A tether is a straight or V-shaped strap that attaches the top part of a child restraint to special anchorage points in the vehicle.

The purpose of the tether is to reduce the forward movement of the child restraint in a crash, in order to help reduce the risk of head injury that could be caused by striking the vehicle interior.


Forward facing child restraints manufactured after September 1, 1999, are required by U.S. federal regulations to comply with new child head movement performance requirements. These new performance requirements make a tether necessary on most new child safety seats.

WARNING

Improper installation of child restraints will increase the risk of injury and death in a crash.

- Always follow the instructions provided by the manufacturer of the child restraint you intend to install in your Audi.
- Improper use of child restraint anchors (including tether anchors) can lead to injury in a collision. The anchors are designed to withstand only those loads imposed by correctly fitted child restraints.
- Never mount two child restraint systems on one LATCH lower anchor point.
- Never attach two child restraint systems to one tether strap or tether anchorage.
- Never attach a tether strap to a tie-down hook in the luggage compartment.
- Never use child restraint tether anchorages to secure safety belts or other kinds of occupant restraints.
- Never secure or attach any luggage or other items to the LATCH lower anchorages or to the tether anchors.

Installing the upper tether strap on the anchorage

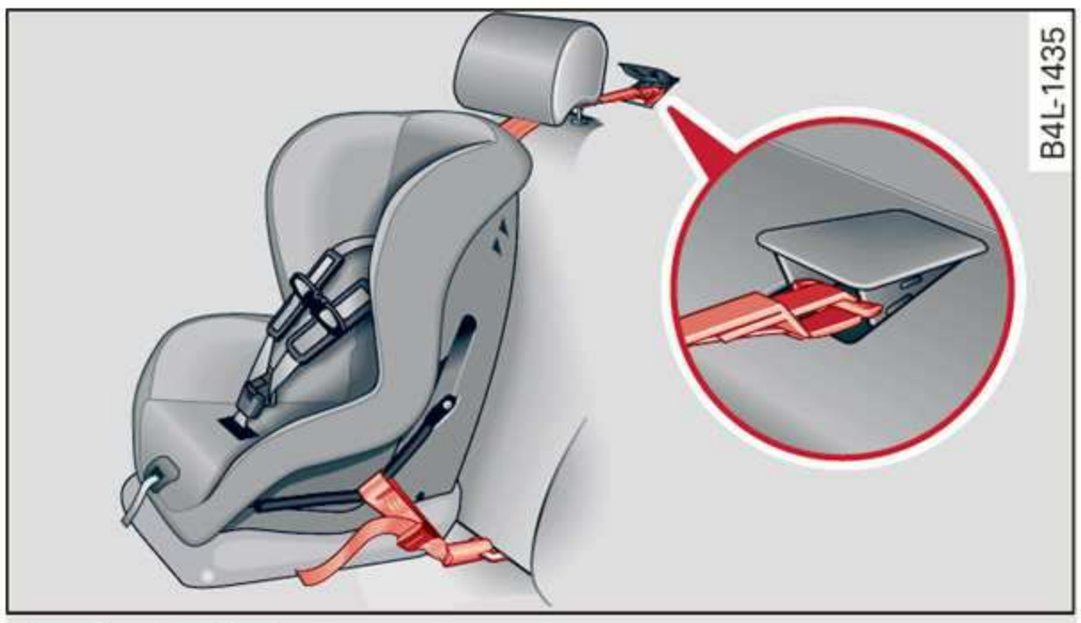

Applies to: Sedan
Fig. 247 Tether strap: proper routing and mounting



Applies to: allroad
Fig. 248 Tether strap: proper routing and mounting

Installing the tether strap

- ▸ Release or deploy the tether strap on the child restraint according to the child restraint manufacturer's instructions.
- ▸ Guide the upper tether strap **under** the rear head restraint (raise the head restraint if necessary). For child restraints with V-tether straps, always make sure that the head restraint guide rods do not interfere with any part of the top tether strap.
- ▸ Applies to: Sedan: Tilt the recess flap up to expose the anchor bracket.
- ▸ Applies to: Sedan: Attach the tether strap anchorage hook into the opening of the tether anchorage.
- ▸ Applies to: allroad: Guide the upper tether strap into the rear cargo area and slide the tether strap hook over the anchor bracket.
- ▸ Pull on the tether strap hook so that the spring catch of the hook engages.
- ▸ Tighten the tether strap firmly following the child restraint manufacturer's instructions.

Releasing the tether strap

- ▸ Loosen the tension following the child restraint manufacturer's instructions.
- ▸ Depress the spring catch on the hook and release it from the anchorage.

Note

If you leave the child restraint with the tether strap firmly installed for several days, this could leave a mark on the upholstery on the seat cushion and backrest in the area where the tether strap was installed. The upholstery would also be permanently stretched around the tether strap. This applies especially to leather seats.

Using tether straps on rearward-facing child restraints

Currently, few rear-facing child restraint systems come with a tether. Please read and heed the child restraint system manufacturer's instructions carefully to determine how to properly install the tether.

WARNING

A child in a rearward-facing child safety seat installed on the front passenger seat will be seriously injured and can be killed if the front airbag inflates – even with an Advanced Airbag System.

– The inflating airbag will hit the child safety seat or infant carrier with great force and will smash the child safety seat and child against the backrest, center armrest, or door.
– If you must install a rearward facing child safety seat on the front passenger seat because of exceptional circumstances and the **PASSENGER AIR BAG OFF** light does not come on and stay on, immediately install the rear-facing child safety seat in a rear seating position and have the airbag system inspected by your Audi dealer.

Additional information

Sources of information about child restraints and their use

There are a number of sources of additional information about child restraint selection, installation and use:

NHTSA advises that the best child safety seat is the one that fits your child and fits in your vehicle, and that you will use correctly and consistently.

Try before you buy!

U.S. National Highway Traffic Safety Administration
Tel.: 1-888-327-4236 (TTY: 1-800-424-9153)
http://www.nhtsa.gov
http://www.safercar.gov

National SAFE KIDS Campaign
Tel.: (202) 662-0600
http://www.safekids.org

Safety BeltSafe U.S.A.
Tel.: (800) 745-SAFE (English)
Tel.: (800) 747-SANO (Spanish)
http://www.carseat.org

Transport Canada Information Centre
Tel.: 1-800-333-0371 or call 1-613-998-8616 if you are in the Ottawa area
http://www.tc.gc.ca/eng/roadsafety/menu.htm

Audi Customer Experience Center
Tel.: (800) 822-2834

Checking and Filling

Fuel

Types of gasoline

The correct gasoline grade is stated on the inside of the fuel filler door.

The vehicle is equipped with a catalytic converter and must only be driven with **unleaded gasoline**.

Audi recommends using TOP TIER Detergent Gasoline. For additional information on TOP TIER Detergent Gasoline, visit www.toptiergas.com.

The individual gasoline grades are differentiated by **octane ratings**. This value is given with (R +M)/2 equating to AKI or in RON.

The headings below match the sticker in the fuel filler door.

UNLEADED FUEL ONLY MIN. (R+M)/2 87 Regular / MIN. RON 91 Regular

Use regular gasoline with minimum 87 AKI / 91 RON ⇨ (!).

The maximum engine power is only reached if premium gasoline 91 AKI / 95 RON is used.

UNLEADED FUEL ONLY PREMIUM MIN. (R +M)/2 91 / SUPER MIN. RON 95

Using premium gasoline with minimum 91 AKI / 95 RON is recommended.

If premium gasoline is not available, you can also use regular gasoline 87 AKI / 91 RON. However this does reduce the engine power slightly.

Note

– Filling the tank just one time with leaded fuel or other metallic additives will cause permanent deterioration to the catalytic converter function.
– When gasoline with an octane rating that is too low is used, high speeds or heavy engine load can lead to engine damage.

Tips

The vehicle may be filled with fuel that has a higher octane rating than what is required by the engine.

Gasoline mixture

Gasoline with alcohol or MTBE (Methyl-Tert-Butyl-Ether)

You can use unleaded gasoline mixed with alcohol or MTBE (generally labeled as oxygenated compounds) as long as the fuel meets the following conditions:

Gasoline with methanol content (methyl alcohol or methanol)

– Anti-Knock Index is at least 87 AKI
– No more than 3% methanol
– More than 2% solvent

Gasoline with ethanol content (ethyl alcohol or ethanol)

– Anti-Knock Index is at least 87 AKI
– No more than 15% ethanol

Gasoline with MTBE content

– Anti-Knock Index is at least 87 AKI
– No more than 15% MTBE

Gasoline adapted to the season

Many gasoline fuels are adapted to the seasons. When the season changes, we recommend refueling at high-traffic gas stations. It is more likely that the gasoline will be suitable for the season there.

Note

– Gasoline with methanol content that does not meet the specified conditions may cause corrosion damage and damage to plastic or rubber components in the fuel system.
– Do not use gasoline that does not meet the specifications.
– If you are unable to find out if a specific gasoline mixture meets the specifications, ask the gas station operator or their fuel supplier.

– Do not use any gasoline mixture whose composition cannot be identified.
– Audi does not assume any responsibility for damage to the fuel system or for performance problems caused by using gasoline mixtures different from those specified. This type of damage also does not fall under the New Vehicle Limited Warranty or under the emissions control system warranty.
– If you notice a higher fuel consumption or poor handling or performance problems due to such gasoline mixtures, we recommend fueling with unblended gasoline.

Gasoline additives

An important issue for many automobile manufacturers is combustion residue in the engine that results from the use of certain fuels.

Although types of gasoline differ depending on the manufacturer, there are similarities. Certain substances in the gasoline may cause deposits in the engine. Additives in the gasoline that should keep the engine and fuel system clean do not all function equally.

Audi recommends using TOP TIER Detergent Gasoline. For additional information on TOP TIER Detergent Gasoline, visit www.toptiergas.com.

If you use incorrect fuels over a long period of time, the maximum engine performance may be impaired by combustion residue.

Note

Damage or malfunctions caused by the use of incorrect types of gasoline are not covered by the New Vehicle Limited Warranty.

Refueling

Fueling procedure



Fig. 249 Right rear side of the vehicle: opening the fuel filler door



Fig. 250 Fuel filler door with attached fuel cap

The fuel filler door is unlocked or locked by the central locking system.

- ▸ Press on the left side of the fuel filler door to open it ⇨ *fig. 249*.
- ▸ Unscrew the tank cap counterclockwise.
- ▸ Place the cap from above on the open fuel filler door ⇨ *fig. 250*.
- ▸ Insert the fuel pump nozzle all the way into the fuel filler neck.
- ▸ Begin fueling. Once the fuel pump nozzle turns off the first time, the fuel tank is full. Do not continue fueling, or else the expansion space in the tank will be filled with fuel.
- ▸ After the fuel pump has switched off, wait five seconds before removing the nozzle to allow the rest of the fuel to finish dripping into the fuel tank.
- ▸ Turn the fuel cap clockwise until it clicks into place.
- ▸ Close the fuel filler door and then press on the left side until it latches. ▶

The correct fuel type for your vehicle can be found on a label located on the inside of the fuel filler door. For additional information on fuel, see ⇨ *page 305*.

For the tank capacity in your vehicle, refer to the Technical Data ⇨ *page 373*.

To reduce the risk of fuel leaking out or vapors escaping, make sure that the fuel tank is closed correctly. Otherwise the [1)] indicator light will turn on.

If the central locking system malfunctions, there is a fuel filler door emergency release ⇨ *page 308*.

WARNING

Improper fueling procedures and improper handling of fuel can lead to explosions, fires, severe burns, and other injuries.

- Do not smoke. Keep away from open flames.
- The ignition must be switched off when refueling.
- Mobile devices, radio devices, and other radio equipment should always be switched off when refueling. Electromagnetic rays could cause sparks and start a fire.
- If you do not insert the fuel pump nozzle all the way into the filler tube, then fuel can leak out. Spilled fuel can ignite and start a fire.
- Never get into the vehicle when refueling. If there is an exceptional situation where you must enter the vehicle, close the door and touch a metal surface before touching the fuel pump nozzle again. This will reduce the risk of electrostatic discharge that can cause flying sparks. Sparks can start a fire when refueling.

WARNING

Transporting fuel containers inside the vehicle is not recommended. Fuel could leak out of the container and ignite, especially during an accident. This can cause explosions, fires, and injuries.

- If you must transport fuel in a fuel container, note the following:
  - Always place the fuel container on the ground before filling. Never fill the fuel container with fuel while it is inside or on the vehicle. Electrostatic discharge can occur while refueling and the fuel vapors could ignite.
  - When using fuel containers made of metal, the fuel pump nozzle must always remain in contact with the container to reduce the risk of static charge.
  - Insert the fuel pump nozzle as far as possible into the filler opening while refueling.
  - Follow the applicable legal regulations in the country where you are driving when using, storing and transporting fuel containers.
  - Make sure that the fuel container meets the industry standards, for example ANSI or ASTM F852-86.

Note

- Remove fuel that has overflowed onto any vehicle components immediately to reduce the risk of damage to the vehicle.
- Never drive until the fuel tank is completely empty. The irregular supply of fuel that results from that can cause engine misfires. Uncombusted fuel may enter the exhaust system and increase the risk of damage to the catalytic converter.

For the sake of the environment

Do not overfill the fuel tank, or fuel could leak out when the vehicle is warming up.

Tips

The fuel filler door on your vehicle does not lock if you lock the vehicle from the inside using the central locking switch.

1) Depending on the engine

Fuel filler door emergency release

If the central locking system malfunctions, the fuel filler door can be unlocked manually.



Fig. 251 Right side trim panel in the luggage compartment: opening the trim panel

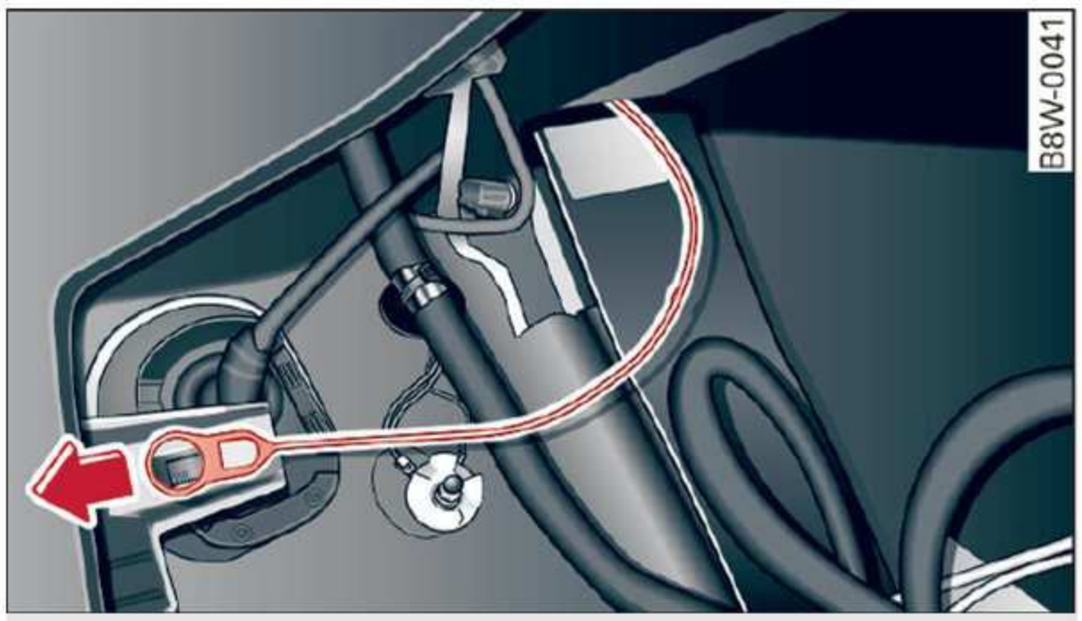


Fig. 252 Luggage compartment: fuel filler door emergency release

The emergency opening mechanism is located behind the right side trim panel in the luggage compartment.

- ▸ Open the cover in the side panel ⇨ *fig. 251*.
- ▸ To unlock the fuel filler door, loosen the loop from the retainer and then pull on the loop carefully ⇨ *fig. 252* ⇨ (!).
- ▸ Press on the left side of the fuel filler door to open it ⇨ *page 306, fig. 249*.

(!) Note

Only pull on the loop until you feel resistance. You will not hear it release. If you continue to pull, you could damage the emergency release mechanism.

Catalytic converter

The vehicle may only be driven with unleaded gasoline, or the catalytic converter will be destroyed.

Never drive until the tank is completely empty. The irregular supply of fuel that results from that can cause engine misfires. Uncombusted fuel could enter the exhaust system, which could cause overheating and damage to the catalytic converter.

⚠ WARNING

The temperature of the exhaust system is high, both when driving and after stopping the engine.

- Never touch the exhaust tail pipes once they have become hot. This could result in burns.
- Do not park your vehicle over flammable materials such as grass or leaves because the high temperature of the emissions system could start a fire.
- Do not apply underbody protectant in the exhaust system area, because this increases the risk of fire.

On Board Diagnostic System (OBD)

The On Board Diagnostic System monitors the engine and transmission components that influence emissions.




Fig. 253 Footwell on left side of the vehicle: connection port for the On Board Diagnostic System (OBD)

On Board Diagnostic System

Engine data can be read out at the On Board Diagnostic System connection port using a special testing device ⇨ *fig. 253*.

Indicator light

If the  indicator light blinks or turns on, there is a malfunction that is causing poor emissions quality and that could damage the catalytic converter. Drive slowly to an authorized Audi dealer or authorized Audi Service Facility to have the malfunction corrected.

The indicator light can also turn on if the fuel filler cap is not closed correctly ⇨ *page 306*[1)].

WARNING

Incorrect use of the connection port for the On Board Diagnostic System can cause malfunctions, which can then result in accidents and serious injuries.

– Only allow an authorized Audi dealer or authorized Audi Service Facility to read out the engine data.

Engine compartment

Working in the engine compartment

Special care is required if you are working in the engine compartment

For work in the engine compartment, such as checking and filling fluids, there is a risk of injury, scalding, accidents, and burns. For this reason, follow all the warnings and general safety precautions provided in the following information. The engine compartment is a dangerous area. ⇨ ⚠.

WARNING

– Turn the engine off.
– Switch the ignition off.
– Set the parking brake.
– On vehicles with a manual transmission, move the gearshift lever to neutral, and on vehicles with an automatic transmission, select the “P” (Park) position.
– Allow the engine to cool.
– Keep children away from the engine compartment.
– Never spill fluids on a hot engine. These fluids (such as the anti-freezing agent contained in the coolant) can ignite.
– Avoid short circuits in the electrical system.
– Never reach into the radiator fan. The fan is temperature-controlled and can turn on suddenly, even when the ignition is switched off.
– Never open the hood when there is steam or coolant escaping from the engine compartment, because there is a risk that you could be burned. Wait until no steam or coolant is escaping.
– Never open the cap on the coolant expansion tank when the engine is warm. The cooling system is under pressure.
– To protect your face, hands, and arms from hot steam or coolant, cover the cap with a thick cloth when opening.
– Do not remove the engine cover under any circumstances. This increases the risk of burns.
– Due to the risk of electric shock, never touch the ignition cable or other components in the electronic high-voltage ignition system when the engine is running or is starting.
– If a gear is engaged while the vehicle is stationary and the engine is running, do not press the accelerator pedal inadvertently. Pressing the accelerator pedal will cause the vehicle to move, and this could result in an accident.
– If inspections or repairs must be performed while the engine is running, moving components (such as the ribbed belt, generator, and radiator fan) pose an additional risk.
– First set the parking brake, and then move the gearshift lever to neutral on vehicles with a manual transmission or select the ▶

1) Depending on the engine

"P" (Park) position on vehicles with an automatic transmission.

– Always make sure that no parts of the body, jewelry, ties, loose clothing, and long hair can be caught in moving engine components. Before any work, always remove any jewelry and ties, tie back long hair, and make sure all clothing fits close to the body to to reduce the risk of anything becoming caught in engine components.
– Pay attention to the following warnings when work on the fuel system is required:
  – Do not smoke.
  – Never work near open flames.
  – Always have a working fire extinguisher nearby.
– All work on the battery or electrical system in your vehicle can result in injuries, chemical burns, accidents, or burns. Because of this, all work must be performed **only** by an authorized Audi dealer or authorized Audi Service Facility.
– Limit your exposure to exhaust and chemicals to as short a time as possible.

WARNING

California Proposition 65 Warning:

– Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects and reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
– Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harms. Wash hands after handling.

Note

When filling fluids, be sure not to add any fluids to the wrong reservoirs. Otherwise severe malfunctions and engine damage will occur.

For the sake of the environment

You should regularly check the ground under your vehicle in order to detect leaks quickly. If there are visible spots from oil or other fluids, bring your vehicle to an authorized Audi dealer or authorized Audi Service Facility to be checked.

Opening and closing the hood

The hood is released from inside the vehicle.



Fig. 254 Driver footwell: release lever

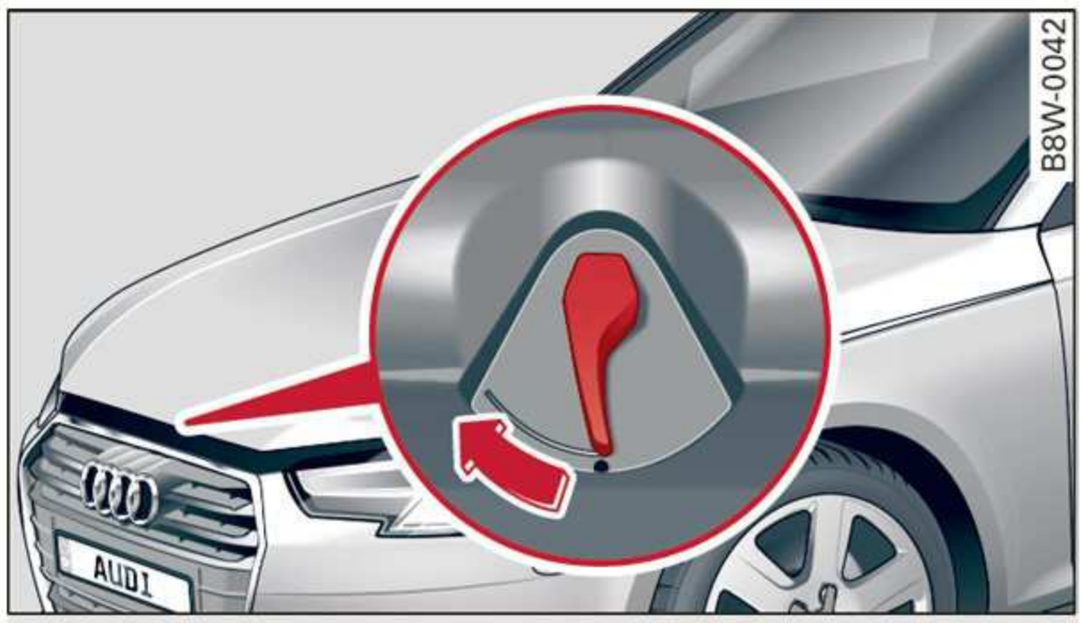


Fig. 255 Unlocked hood: lever

Make sure the wiper arms are not raised up from the windshield. Otherwise the paint could be damaged.

Opening the hood

► With the driver's door open, pull the lever below the instrument panel in the direction of the arrow ⇨ *fig. 254*.
► Raise the hood slightly ⇨ ⚠.

- ▸ Press the lever ⇨ *fig. 255* in the direction of the arrow. This releases the hooks.
- ▸ Open the hood.

Closing the hood

- ▸ Push the hood down until you override the force of the struts.
- ▸ Let the hood fall lightly into the latch. *Do not press it in.* ⇨ ⚠.

⚠ WARNING

– Never open the hood when there is steam or coolant escaping from the engine compartment, because there is a risk that you could be burned. Wait until no steam or coolant is escaping.

– For safety reasons, the hood must always be closed securely while driving. Because of this, always check the hood after closing it to make sure it is latched correctly. The hood is latched if the front corners cannot be lifted.

– If you notice that the hood is not latched while you are driving, stop immediately and close it, because driving when the hood is not latched increases the risk of an accident.

– If the hood is not latched completely, it could fly up while you are driving and obstruct your vision.

Engine compartment overview

The most important check points.

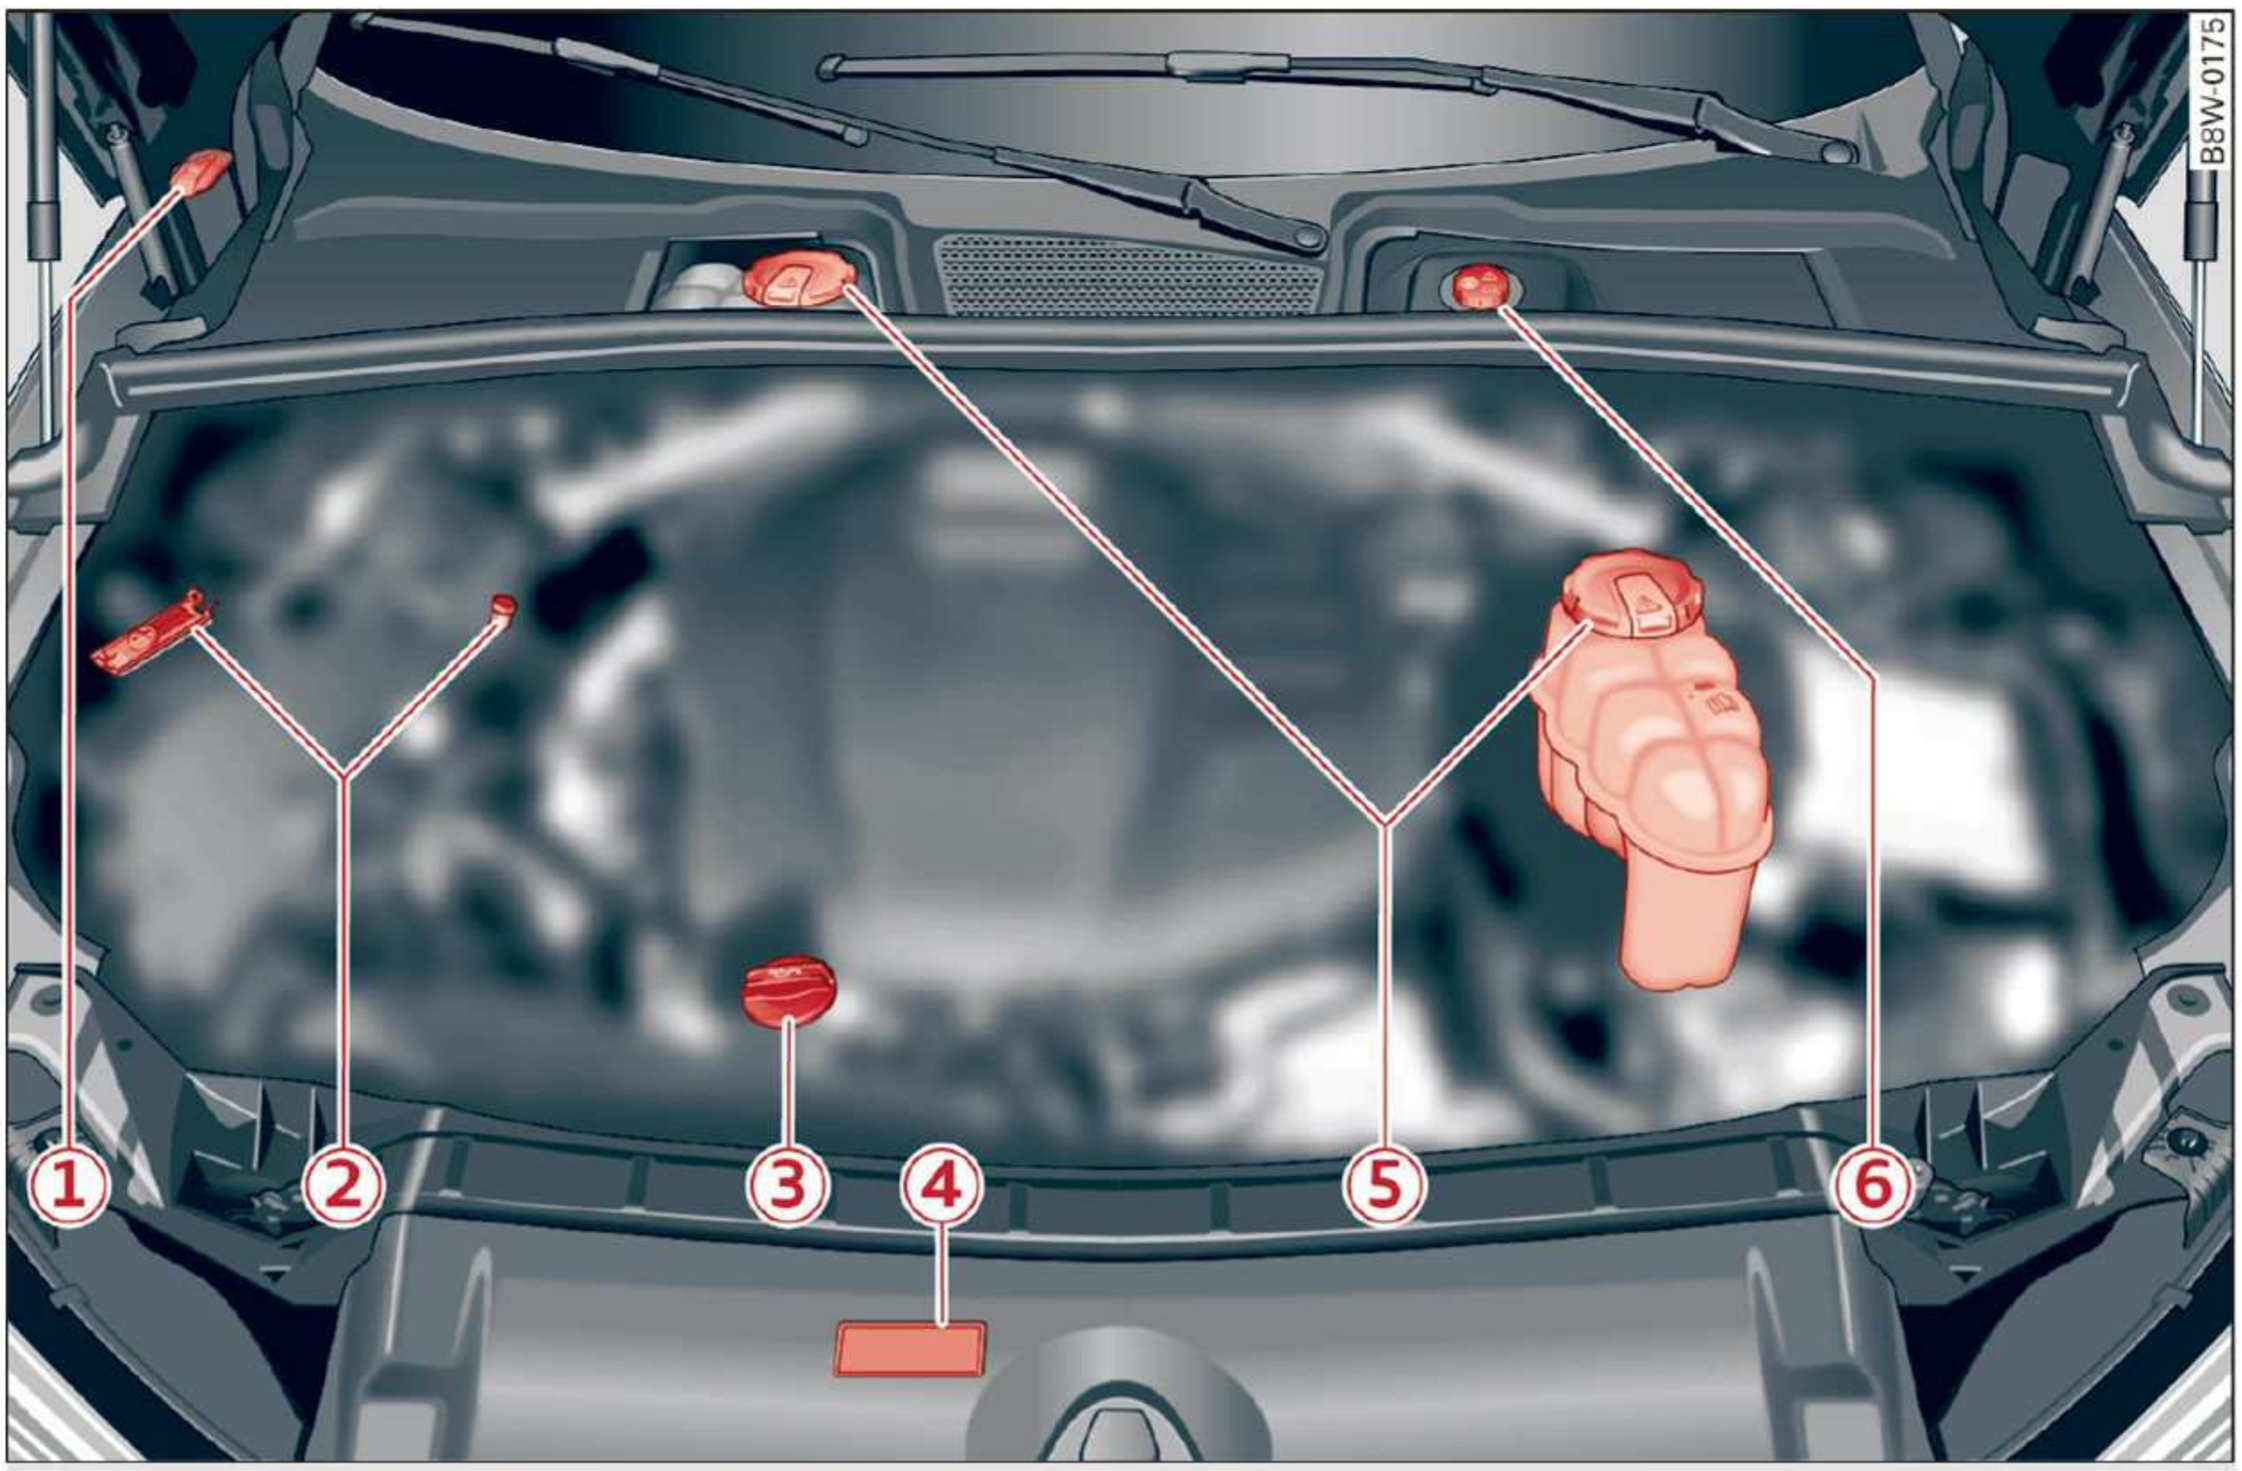


Fig. 256 Typical location of the reservoir and the engine oil filler opening

Follow the safety precautions ⇨ *page 309*.

① Washer fluid reservoir (🚿) ⇨ *page 320*

② Jump start points: (+) under a cover, (-) with hex head screw ⇨ *page 319* ⇨ *page 362*

③ Engine oil filler opening (🛢) ⇨ *page 313* ▶

④ Engine oil label* with VW standard ⇨ *page 312*

⑤ Coolant expansion tank (🌡) ⇨ *page 316*

⑥ Brake fluid reservoir ((◯)) ⇨ *page 317*

The coolant expansion tank and the engine oil filling opening may be located in different places within the engine compartment, depending on the engine version.

Engine oil

If the engine oil level is too low

If you need to add engine oil, use an oil that is listed on the sticker. The sticker is located at the front of the engine compartment ⇨ *page 311, fig. 256*.

If the recommended engine oil is not available, **in an emergency** you may add a maximum of 1 quart (1 liter) of ACEA C3 or API SN engine oil **one time** until the next oil change.

For more information on the correct engine oil for your vehicle, contact an authorized Audi dealer or authorized Audi Service Facility. Have the oil changed by an authorized Audi dealer or authorized Service Facility.

Audi recommends
Castrol EDGE Professional
Audi recommends using the LongLife high-performance engine oil from Audi Genuine Parts.

Messages

Engine oil pressure

Turn off engine. Oil pressure too low

Stop driving and switch the engine off. Check the engine oil level ⇨ *page 313*.

– If the engine oil level is too low, add engine oil ⇨ *page 314*. Only continue driving once the indicator light turns off.
– If the engine oil level is correct and the indicator light still turns on, turn the engine off and do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Engine oil level

Applies to: vehicles with oil level warning

Please add oil immediately.

Stop the engine and do not continue driving. Check the engine oil level ⇨ *page 313* and add engine oil immediately ⇨ *page 314*.

Please add max. x qt (x l) oil. You can continue driving

Add the amount of oil shown immediately ⇨ *page 314*.

Reducing the oil level

Please reduce oil level.

There is too much oil in the engine and there is a risk of damaging the catalytic converter or engine. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have engine oil extracted if necessary. Avoid high engine speeds, full acceleration, and heavy engine loads.

Engine oil sensor

Oil level sensor: oil change necessary. Please contact Service

Fuel has entered the engine oil. This will cause the engine oil level to rise slowly and the engine oil quality to decrease. Do not extract engine oil to reduce the level, because this will increase the risk of engine damage. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have engine oil extracted.

Oil level system: malfunction! Please contact Service

The sensor that checks the engine oil level has malfunctioned. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

Oil pressure sensor: malfunction! Please contact Service

The sensor that checks the engine oil pressure has malfunctioned. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected. ▶

Engine warm-up request

Please drive to warm up engine

Fuel has entered the engine oil, either due to low outside temperatures or frequent short drives. Drive until the engine is warm so that the fuel in the engine oil will evaporate. Avoid high engine speeds, full accelerating, and heavy engine loads when doing this.

Tips

The oil pressure warning is not an oil level indicator. Always check the oil level regularly.

Checking the engine oil level

The engine oil level can be checked in the Infotainment system

Observe the safety precautions ⇨ ⚠ *in Working in the engine compartment on page 309*.

- ► Park the vehicle on a level surface.
- ► Shut the engine off when it is warm.
- ► Switch only the ignition back on.
- ► Wait approximately two minutes.
- ► Select in the Infotainment system: the MENU button > **Vehicle** > left control button > **Service & checks** > **Oil level**.
- ► Read the oil level in the display. Add engine oil if the bar in the oil level indicator is just below "min" ⇨ *page 314*.

Note

If the engine oil level is too low or too high, there is a risk of engine damage.

Tips

The oil level indicator in the display is only an informational display. If the oil level is too low, a minimum oil warning appears in the instrument cluster. Add oil and close the hood. The current oil level is displayed in the Infotainment system the next time the ignition is switched on.

Tips

The engine oil consumption may be up to 0.5 quart/600 miles (0.5 liter/1,000 km), depending on driving style and operating conditions. Consumption may be higher during the first 3,000 miles (5,000 km). The engine oil level must be checked regularly. It is best to check each time you refuel your vehicle and before long drives.

– Because of the lubrication and cooling of the engine, combustion engines consume oil. The oil consumption varies depending on the engine and may change during the service life of the engine. Engines generally consume more oil at the beginning during the break-in period. Then oil consumption stabilizes after the break-in period.
– Under normal conditions, oil consumption depends on the quality and viscosity of the oil, the engine RPM, the climate conditions, and the road conditions. The dilution of oil from condensation or fuel residue as well as the age of the oil also play a role. Because engine wear increases with mileage, oil consumption will increase again over time until it may be necessary to replace worn components.
– Because all these variables play a role, it is not possible to define an oil consumption standard. Therefore, the oil level must be checked regularly.
– If you believe that your engine has increased its oil consumption, contact an authorized Audi dealer or authorized Audi Service Facility to determine the cause. Please note that an exact oil consumption measurement must be done with the necessary care and accuracy and may take time. An authorized Audi dealer or authorized Audi Service Facility is trained in accurately measuring the oil consumption.
– You can find information on engine oil and engine oil capacities for the USA at www.audiusa.com/help/maintenance, or for Canada at www.audi.ca/ca/web/en/customer-area/care-and-maintenance/audi-service-schedules.html, or call 800-822-2834.

Adding engine oil

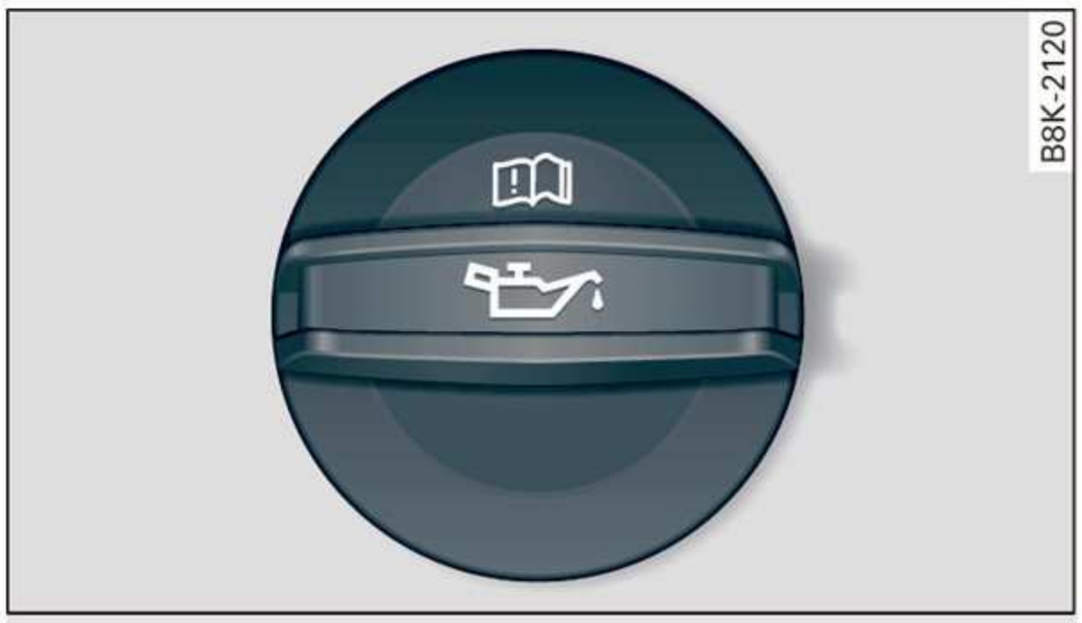


Fig. 257 Engine compartment: engine oil filler opening cover

Observe the safety precautions ⇨ ⚠ *in Working in the engine compartment on page 309*.

- ▸ Turn the engine off.
- ▸ Open the hood ⇨ *page 310*.
- ▸ Unscrew the cap for the engine oil filler opening ⇨ *fig. 257*.
- ▸ Carefully add 0.5 quart (0.5 liter) of the correct oil ⇨ *page 312*.
- ▸ Close the engine oil filler opening cap.
- ▸ Close the hood ⇨ *page 310*.
- ▸ Restart the ignition after two minutes and read the current oil level in the Infotainment system ⇨ *page 313, Checking the engine oil level*.
- ▸ Add more oil if necessary.

⚠ WARNING

- When adding oil, do not let oil drip onto hot engine components. This increases the risk of a fire.
- You must seal the cap on the oil filler opening correctly so that oil does not leak out onto the hot engine and exhaust system when the engine is running, because this is a fire hazard.
- Always clean skin thoroughly if it comes into contact with engine oil.
- Engine oil is poisonous and must be kept out of reach of children.
- Store the engine oil securely in the original container.

Note

- The New Vehicle Limited Warranty does not cover damage or malfunctions if the recommended intended use of the vehicle and maintenance measures listed in the Audi Owner's Manual and the Warranty & Maintenance Booklet were not followed.
- Only use high-grade engine oil that explicitly meets the Audi oil quality standard for your vehicle. Using another oil may cause severe vehicle damage.
- Do not mix any additional lubricants into the engine oil. Damage caused by such additives is not covered by the warranty.

For the sake of the environment

- Oil should never enter the sewer system or come into contact with the ground.
- Follow the legal regulations in the country where you are located when disposing of empty oil containers.

Changing engine oil

We recommend having the oil changed at an authorized Audi dealer or authorized Audi Service Facility.

Follow the safety precautions ⇨ *page 309, Working in the engine compartment*.

The engine oil must be changed at the intervals specified in the Warranty & Maintenance Booklet. This is very important because the lubrication function of the oil gradually declines during regular vehicle operation.

The engine oil should be changed more frequently under certain circumstances. Have the oil changed more frequently if you often drive short distances, your vehicle is predominantly in stop-and-go traffic situations, is in very dusty environments, or is operated for long periods of time in temperatures below zero.

Cleansing additives in the oil make fresh oil appear darker after the engine has run briefly. This is normal and no reason to change the engine oil more frequently than recommended.

Because correctly disposing of engine oil is difficult and special tools and technical knowledge are needed for an oil change, having your engine ▸

oil changed by an authorized Audi dealer or authorized Audi Service Facility is recommended.

If you change the engine oil yourself, please note the following important information:

WARNING

If you change the engine oil on the vehicle yourself, the following precautions must be followed:

– Wear protective eyewear.
– Due to the risk of scalding, allow the engine to cool down sufficiently.
– Maintain enough distance when you are removing the oil drain plug. While doing this, keep your forearm parallel to the ground to reduce the risk of hot oil dripping down your arm.
– Drain the oil into a container designed for this purpose that is large enough to hold the full amount of oil in your engine.
– Engine oil is poisonous. Always store out of reach of children.
– Prolonged contact of used engine oil with the skin may cause skin damage. Always wash oil off immediately with soap and water to protect your skin.

Note

Do not mix any additives with the engine oil. Additives may cause engine damage that is not covered by your New Vehicle Limited Warranty.

For the sake of the environment

– Before changing the engine oil, make sure you can dispose of the used engine oil correctly.
– Engine oil must always be disposed of correctly. Do not dump it in the yard, in the forest, or in open water, river channels, or sewers.
– Have your used engine oil recycled by bringing it to a used oil collection site or contact a gas station.

Cooling system

Coolant

The engine cooling system is filled with a mixture of purified water and coolant additive at the factory. This coolant must not be not changed.

The coolant level is monitored through the indicator light ⇨ *page 22*. However, occasionally checking the coolant level manually is recommended.

If you must add coolant, use a mixture of water and coolant additive. Mixing the coolant additive with distilled water is recommended.

Coolant additive

The coolant additive is made of anti-freezing and corrosion protection agents. Only use the following coolant additives. These additives may be mixed with each other.

Coolant additive	Specification
G12++	TL 774 G
G13	TL 774 J

The amount of coolant additive that needs to be mixed with water depends on the climate where the vehicle will be operated. If the coolant additive percentage is too low, the coolant can freeze and damage the engine.

	Coolant additive	Freeze protection
Warm regions	min. 40% max. 45%	min. -13 °F (-25 °C)
Cold regions	min. 50% max. 55%	max. -40 °F (-40 °C)

Note

– Before the start of winter, have an authorized Audi dealer or authorized Audi Service Facility check if the coolant additive in your vehicle matches the percentage appropriate for the climate. This is especially important when driving in colder climates.
– If the appropriate coolant additive is not available in an emergency, do not add any other additive. You could damage the ▶

engine. If this happens, only use water and restore the correct mixture ratio with the specified coolant additive as soon as possible.
– Only refill with new coolant.
– Radiator sealant must not be mixed with the coolant.

Adding coolant

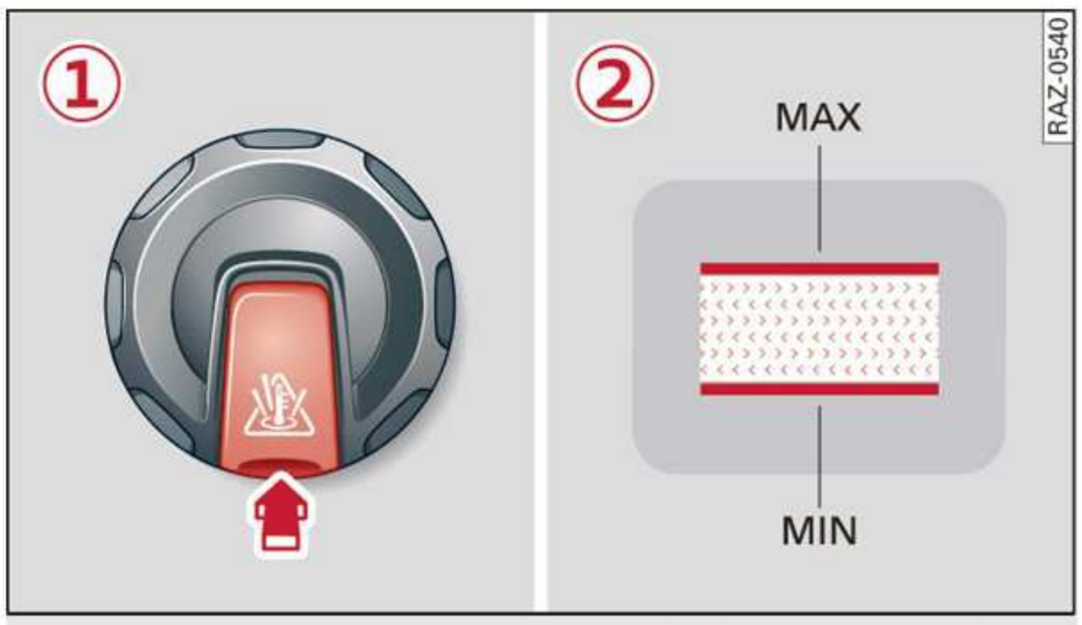


Fig. 258 Engine compartment - coolant expansion tank (diagram): ① cover with release button; ② markings

Observe the safety precautions ⇨ *page 309, Working in the engine compartment*.

Checking the engine coolant level

► Park the vehicle on a level surface.
► Switch the ignition off.
► Read the coolant level on the coolant expansion tank ⇨ *page 311, fig. 256*. The coolant level must be between the markings ② ⇨ *fig. 258* when the engine is cold. When the engine is warm it can be slightly above the upper marking.

Adding coolant

► Allow the engine to cool.
► Place a large, thick towel on the coolant expansion tank cover.
► Push the release button ① ⇨ *fig. 258* on the cap and carefully turn it to the left until you feel resistance ⇨ ⚠.
► Push the release button again and remove the cap completely.
► Make sure that the fluid level remains stable. Add more coolant if necessary.
► Turn the cap to the right to tighten it until you feel resistance a second time.

Coolant loss usually indicates that there is a leak. Immediately drive your vehicle to an authorized Audi dealer or authorized Audi Service Facility and have the cooling system inspected. If the cooling system is not leaking, coolant loss can result from the coolant boiling due overheating and then being forced out of the cooling system.

⚠ WARNING

– The engine compartment in any vehicle can be a dangerous area. Stop the engine and allow it to cool before working in the engine compartment. Always follow the information found in ⇨ *page 309, Working in the engine compartment*.
– Never open the hood if you can see or hear steam or coolant escaping from the engine compartment. This increases the risk of burns. The cooling system is under pressure. When you no longer see or hear steam or coolant escaping, you may open the engine compartment with caution.
– When working in the engine compartment, remember that the radiator fan can switch on even if the ignition is switched off, which increases the risk of injury.
– Coolant additive and coolant can be dangerous to your health. For this reason, store the coolant in the original container and away from children. There is a risk of poisoning.

! Note

Do not add coolant if the expansion tank is empty. There may be air in the cooling system, which increases the risk of engine damage. If this is the case, do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Brake fluid



Fig. 259 Engine compartment: cap on brake fluid reservoir

Observe the safety precautions ⇨ ⚠ *in Working in the engine compartment on page 309*.

Checking the brake fluid level

▸ Read the brake fluid level on the brake fluid reservoir ⇨ *page 311, fig. 256*. The brake fluid level must be between the MIN and MAX markings ⇨ ⚠.

The brake fluid level is monitored automatically.

Changing the brake fluid

Brake fluid should be changed at regular intervals. Have the brake fluid changed by an authorized Audi dealer or authorized Audi Service Facility. The authorized Audi dealer or authorized Audi Service Facility will inform you of the replacement intervals.

⚠ WARNING

– If the brake fluid level is below the MIN marking, it can impair the braking effect and driving safety, which increase the risk of an accident. Do not continue driving. See an authorized Audi dealer or authorized Audi Service Facility for assistance.
– If the brake fluid is old, bubbles may form in the brake system during heavy braking. This could impair braking performance and driving safety, which increases the risk of an accident.
– The brake fluid in your vehicle must meet the standard VW 501 14 and is available at an authorized Audi dealer or authorized Audi Service Facility. If this brake fluid is not available, another high-grade brake fluid of equivalent quality may be used, and it must meet the U.S. Federal Motor Vehicle Standard (FMVSS) 116 DOT 4, Class 6.

Note

– If the brake fluid level is above the MAX marking, brake fluid may leak out over the edge of the reservoir and result in damage to the vehicle.
– Do not allow any brake fluid to come into contact with the vehicle paint, because it will corrode the paint.

Electrical system

If the 🔋 or 🔋 indicator light turns on, there is a malfunction in the generator, the battery, or the vehicle electrical system.

🔋 Electrical system: malfunction! Safely stop vehicle

Do not continue driving and switch the engine off ⇨ ⚠. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

🔋 Electrical system: malfunction! Restart not possible. Please contact Service

It will not be possible to restart the engine once you turn it off. Vehicle functions/driving stability may be limited. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately.

🔋 Electrical system: malfunction! Please contact Service

Switch off all electrical equipment that is not needed. Vehicle functions/driving stability may be limited. Drive to an authorized Audi dealer or authorized Audi Service Facility immediately.

🔋 Electrical system: low battery charge. Battery will be charged while driving

The starting ability may be impaired.

If this message turns off after a little while, the vehicle battery has charged enough while driving. ▶

If this message does not turn off, drive immediately to an authorized Audi dealer or authorized Audi Service Facility.

WARNING

When there is an electrical system malfunction, vehicle functions may not work and driving stability may be limited, which increases the risk of an accident. Stop driving and switch the engine off. See an authorized Audi dealer or authorized Audi Service Facility for assistance.

Battery

Battery general information

Because of the complex power supply, all work on batteries such as disconnecting, replacing, etc., should **only** be performed by an authorized Audi dealer or authorized Audi Service Facility ⇨ ⚠.

Multiple batteries with different technologies may be installed in your vehicle:

- Vehicle battery (for example, for starting the engine, basic power supply) ⇨ *page 319, Lead battery* or ⇨ *page 319, Other battery types*
- Auxiliary battery (for example, for recuperation or optional equipment) ⇨ *page 319, Other battery types*

Not running the vehicle for long periods of time

The battery will gradually drain if the vehicle does not run for long periods of time. To ensure that the vehicle can still be started, the electrical equipment will be reduced or switched off ⇨ *page 143*. Some convenience functions, such as interior lighting or power seat adjustment, may not be available under certain circumstances. These convenience functions will be available again once you switch the ignition on and start the engine.

Even when electrical equipment is switched off, the equipment can still drain the battery if the vehicle is not driven for long periods of time. Deep draining results in a chemical reaction that destroys the inside of the battery. The battery must be charged every month to prevent this ⇨ *page 319*. Contact an authorized Audi dealer or authorized Audi Service Facility for more information.

Winter operation

Cold weather places higher demands on the battery. This results in reduced starting ability. Have the battery checked by an authorized Audi dealer or authorized Audi Service Facility before cold weather begins.

WARNING

- All work on the battery or electrical system in your vehicle can result in injuries, chemical burns, accidents, or burns. Because of this, all work must be performed **only** by an authorized Audi dealer or authorized Audi Service Facility.
- Never connect the charging cable or jump start cable directly to your vehicle battery. Only use the connections in the engine compartment ⇨ *page 319*.

WARNING

California Proposition 65 Warning:

- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive problems. Wash hands after handling.

Note

- If the vehicle will be parked for long periods of time, protect the battery against the cold so that it will not be destroyed by “freezing” ⇨ *page 319, Charging the battery*.
- There are electrical components under the cargo floor behind a trim panel that warm up during operation. To reduce the risk of the components overheating, do not store objects such as blankets under the cargo floor. If the components overheat, they will switch off temporarily. This will be indicated by a message that will be displayed in the instrument cluster until the temperature returns to normal.

Lead battery

Explanation of warnings:

	Always wear eye protection.
	Battery acid is highly corrosive. Always wear protective gloves and eye protection.
	Fire, sparks, open flame, and smoking are forbidden.
	A highly explosive mixture of gases can form when charging batteries.
	Always keep children away from battery acid and the battery.
/	Always follow the instructions in the operating manual.

For the sake of the environment

Do not dispose of lead batteries in household trash. They contain harmful substances, such as sulfuric acid and lead, and also recyclable raw materials. Contact an authorized Audi dealer or authorized Audi Service Facility for more information.

Other battery types

Explanation of warnings:

	Fire, sparks, open flame, and smoking are forbidden.
	Always keep children away from battery acid and the battery.
/	Always follow the instructions in the operating manual.

WARNING

All work on the batteries must **only** be performed by an authorized Audi dealer or authorized Audi Service Facility.

– Gases that escape from these different battery types can be poisonous or flammable.
– The contents of these battery types can be corrosive. If any battery contents come into contact with the skin, flush the affected area for at least 15 minutes with clean water. Then wash the affected area with soap. Have the affected area examined by a medical professional.

Note

Components must not be connected to the battery terminals and wires on these battery types because this increases the risk of damage, for example due to overvoltage.

For the sake of the environment

Do not dispose of these types of batteries in household trash. They contain harmful substances and recyclable raw materials. Contact an authorized Audi dealer or authorized Audi Service Facility for more information.

Charging the battery



Fig. 260 Engine compartment: connectors for a charger or jump start cables

Note the safety precautions ⇨ *page 309, Working in the engine compartment*, ⇨ ⚠ *in Battery general information on page 318* and ⇨ ⚠.

Requirement: only use chargers with a **maximum charging current of 14.8 volts**. The battery cables remain connected.

- ▸ Switch off the ignition and all electrical equipment.
- ▸ Open the hood ⇨ *page 310*.
- ▸ Open the red cover on the positive terminal ⇨ *fig. 260*.
- ▸ Clamp the charger terminal clamps to the jump start pins according to the instructions. (pin under the cover = “positive”, pin with hexagonal head = “negative”).
- ▸ Insert the power cable for the charging device into the socket and switch the device on. ▶

- ▸ At the end of the charging process, switch the charger off and pull the power cable out of the socket.
- ▸ Remove the charging device terminal clamps.
- ▸ Close the red cover on the positive terminal.
- ▸ Close the hood ⇨ *page 310*.

WARNING

– Never connect the charging cable directly to your vehicle battery. Only use the connections in the engine compartment ⇨ *page 319*.
– A highly explosive mixture of gases can form when charging batteries. Only charge the battery in well-ventilated areas.
– A drained battery can freeze at temperatures around 32 ºF (0 ºC). Do not charge or use a frozen or thawed battery. If ice forms, the battery housing can crack and battery electrolyte can leak out, which increases the risk of an explosion and chemical burns. Contact an authorized Audi dealer or authorized Audi Service Facility for more information.
– Do not connect or disconnect the charging cable while charging because this increases the risk of an explosion.

Tips

Read all of the manufacturer's instructions for the charger before charging the battery.

Windshield washer system



Fig. 261 Engine compartment: washer fluid reservoir cap

The windshield washer fluid reservoir contains the cleaning solution for the windshield and the headlight washer system* ⇨ *page 311, fig. 256*. The reservoir capacity can be found in ⇨ *page 373*.

To reduce the risk of lime scale deposits on the spray nozzles, use clean water with low amounts of calcium. Always add window cleaner to the water. When the outside temperatures are cold, an anti-freezing agent should be added to the water so that it does not freeze.

Note

– The concentration of anti-freezing agent must be adjusted to the vehicle operating conditions and the climate. A concentration that is too high can lead to vehicle damage.
– Never add radiator anti-freeze or other additives to the washer fluid.
– Do not use a glass cleaner that contains paint solvents, because this could damage the paint.

Service interval display

The service interval display detects when your vehicle is due for service.

Checking service intervals

You can check the remaining distance or time until the next oil change or next inspection in the Infotainment system.

- ▸ Select in the Infotainment system: the MENU button > **Vehicle** > left control button > **Service & checks** > **Service intervals**.

Resetting the indicator

An authorized Audi dealer or authorized Audi Service Facility will reset the service interval display after performing service.

If you have changed the oil yourself, you must reset the oil change interval.

- ▸ Select in the Infotainment system: the MENU button > **Vehicle** > left control button > **Service & checks** > **Service intervals** > **Reset oil change interval**.

If an oil change or inspection is due, you can access it in the Infotainment system. The display works in two stages:

– **Service reminder**: after a certain distance is driven, a message appears in the instrument cluster display every time the ignition is switched on. The remaining distance and time is displayed briefly.
– **Service due**: if your vehicle has reached a service interval, a message appears briefly after switching the ignition on.

Note

– Only reset the oil change indicator if the oil was changed.
– Following the service intervals is critical to maintaining the service life and value of your vehicle, especially the engine. Even if the mileage on the vehicle is low, do not exceed the time for the next service.

Wheels

Wheels and Tires

General information

►Check your tires regularly for damage, such as punctures, cuts, cracks, and bulges. Remove foreign objects from the tire tread.

►If driving over curbs or similar obstacles, drive slowly and approach the curb at an angle.

►Have faulty tires or rims replaced immediately.

►Protect your tires from oil, grease, and fuel.

►Mark tires before removing them so that the same running direction can be maintained if they are reinstalled.

►Lay tires flat when storing and store them in a cool, dry location with as little exposure to light as possible.

WARNING

–Never drive faster than the maximum permitted speed for your tires. This could cause the tires to heat up too much. This increases the risk of an accident because it can cause the tire to burst.

–Always adapt your driving to the road and traffic conditions. Drive carefully and reduce your speed on icy or slippery roads. Even winter tires can lose traction on black ice.

Note

–Please note that summer and winter tires are designed for the conditions that are typical in those seasons. Audi recommends using winter tires during the winter months. Low temperatures significantly decrease the elasticity of summer tires, which affects traction and braking ability. If summer tires are used in very cold temperatures, cracks can form on the tread bars, resulting in permanent tire damage that can cause loud driving noise and unbalanced tires.

–Burnished, polished or chromed rims must not be used in winter driving conditions. The surface of the rims does not have sufficient corrosion protection for this and could be permanently damaged by road salt or similar substances.

Tire designations

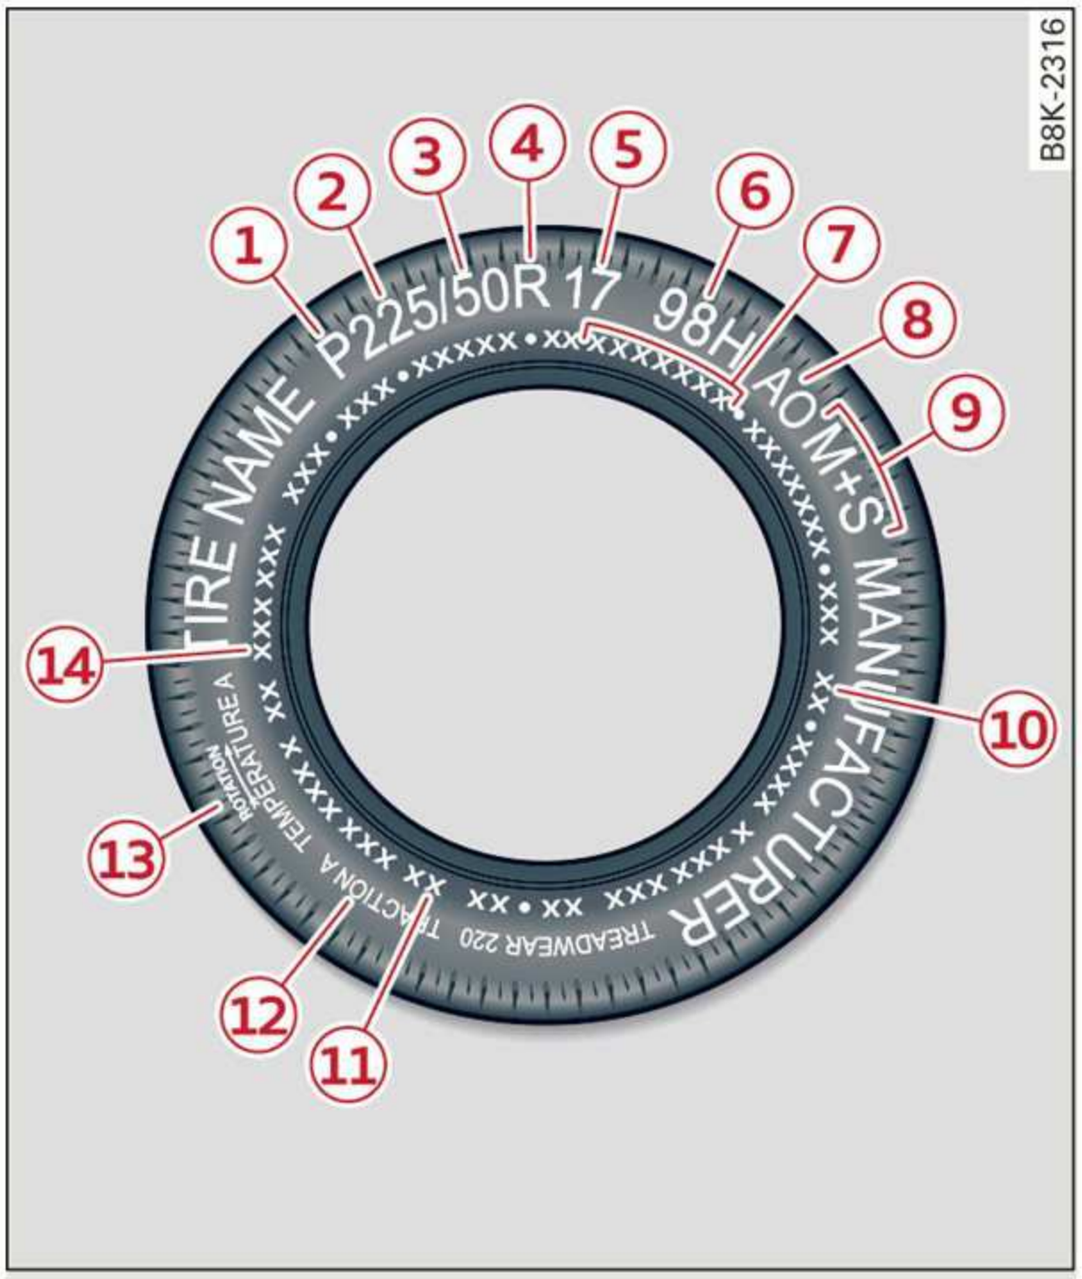


Fig. 262 Tire designations on the sidewall

① Tires for passenger vehicles (if applicable)

"P" indicates a tire for a passenger vehicle. "T" indicates a tire designated for temporary use.

② Nominal width

Nominal width of the tire between the sidewalls in millimeters. In general: the larger the number, the wider the tire.

③ Aspect ratio

Height/width ratio expressed as a percentage.

④ Tire construction

“R" indicates a radial tire.

⑤ Rim diameter

Size of the rim diameter in inches.

⑥ Load index and speed rating

The load index indicates the tire's load-carrying capacity.

The speed rating indicates the maximum permitted speed. Also see ⇨ ⚠ *in General information on page 322*.

“EXTRA LOAD”, “xl” or “RF” indicates that the tire is reinforced or is an Extra Load tire.

Speed rating	Maximum permitted speed
P	up to 93 mph (150 km/h)
Q	up to 99 mph (160 km/h)
R	up to 106 mph (170 km/h)
S	up to 110 mph (180 km/h)
T	up to 118 mph (190 km/h)
U	up to 124 mph (200 km/h)
H	up to 130 mph (210 km/h)
V	up to 149 mph (240 km/h)[a)]
Z	above 149 mph (240 km/h)[a)]
W	up to 168 mph (270 km/h)[a)]
Y	up to 186 mph (300 km/h)[a)]

a) For tires above 149 mph (240 km/h), tire manufacturers sometimes use the code “ZR”. ▶

⑦ US DOT number (TIN) and manufacture date

The manufacture date is listed on the tire sidewall (it may only appear on the inner side of the tire):

DOT ... 2218 ...

means, for example, that the tire was produced in the 22nd week of the year 2018.

⑧ Audi Original Tires

Audi Original equipment tires with the designation “AO” have been specially matched to your Audi. When used correctly, these tires meet the highest standards for safety and handling. An authorized Audi dealer or authorized Audi Service Facility will be able to provide you with more information.

⑨ Mud and snow capability

“M/S” or “M+S” indicates the tire is suitable for driving on mud and snow. ⛄ indicates a winter tire.

⑩ Composition of the tire cord and materials

The number of plies indicates the number of rubberized fabric layers in the tire. In general: the more layers, the more weight a tire can carry. Tire manufacturers must also specify the materials used in the tire. These include steel, nylon, polyester and other materials.

⑪ Maximum permitted load

This number indicates the maximum load in kilograms and pounds that the tire can carry.

⑫ Uniform tire quality grade standards for treadwear, traction and temperature resistance

Treadwear, traction and temperature ranges ⇨ *page 339*.

⑬ Running direction

The arrows indicate the running direction of unidirectional tires. You must always follow the specified running direction ⇨ *page 354*.

⑭ Maximum permitted inflation pressure

This number indicates the maximum pressure to which a tire can be inflated under normal operating conditions.

Glossary of tire and loading terminology

Accessory weight

means the combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio, and heater, to the extent that these items are available as factory-installed equipment (whether installed or not).

Aspect ratio

means the ratio of the height to the width of the tire in percent. Numbers of 55 or lower indicate a low sidewall for improved steering response and better overall handling on dry pavement.

Bead

means the part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim.

Bead separation

means a breakdown of the bond between components in the bead.

Cord

means the strands forming the plies in the tire.

Cold tire inflation pressure

means the tire pressure recommended by the vehicle manufacturer for a tire of a designated size that has not been driven for more than a couple of miles (kilometers) at low speeds in the three hour period before the tire pressure is measured or adjusted.

Curb weight

means the weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, and coolant, air conditioning and additional weight of optional equipment.

Extra load tire

means a tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire. Extra load tires may be identified as “XL”, “xl”, “EXTRA LOAD”, or “RF” on the sidewall. ▶

8W0012721BG

Gross Axle Weight Rating ("GAWR")

means the load-carrying capacity of a single axle system, measured at the tire-ground interfaces.

Gross Vehicle Weight Rating ("GVWR")

means the maximum total loaded weight of the vehicle.

Groove

means the space between two adjacent tread ribs.

Load rating (code)

means the maximum load that a tire is rated to carry for a given inflation pressure. You may not find this information on all tires because it is not required by law.

Maximum load rating

means the load rating for a tire at the maximum permissible inflation pressure for that tire.

Maximum loaded vehicle weight

means the sum of:

(a) Curb weight
(b) Accessory weight
(c) Vehicle capacity weight, and
(d) Production options weight

Maximum (permissible) inflation pressure

means the maximum cold inflation pressure to which a tire may be inflated. Also called "maximum inflation pressure."

Normal occupant weight

means 150 lbs. (68 kilograms) times the number of occupants seated in the vehicle up to the total seating capacity of your vehicle.

Occupant distribution

means distribution of occupants in a vehicle.

Outer diameter

means the overall diameter of an inflated new tire.

Overall width

means the linear distance between the exteriors of the sidewalls of an inflated tire, including elevations due to labeling, decorations, or protective bands or ribs.

Ply

means a layer of rubber-coated parallel cords.

Production options weight

means the combined weight of those installed regular production options weighing over 5 lbs. (2.3 kg) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levelers, roof rack, heavy duty battery, and special trim.

Radial ply tire

means a pneumatic tire in which the ply cords that extend to the beads are laid at substantially 90 degrees to the centerline of the tread.

Recommended inflation pressure

see ⇨ *page 325, Cold tire inflation pressure*.

Reinforced tire

means a tire designed to operate at higher loads and at higher inflation pressures than the corresponding standard tire. Reinforced tires may be identified as “XL”, “xl”, “EXTRA LOAD”, or “RF” on the sidewall.

Rim

means a metal support for a tire or a tire and tube assembly upon which the tire beads are seated.

Rim diameter

means nominal diameter of the bead seat. If you change your wheel size, you will have to purchase new tires to match the new rim diameter.

Rim size designation

means rim diameter and width.

Rim width

means nominal distance between rim flanges.

Sidewall

means that portion of a tire between the tread and bead.

Speed rating (letter code)

means the speed at which a tire is designed to be driven for extended periods of time. The ratings range from 93 mph (150 km/h) to 186 mph (298 km/h) ⇨ *table on page 323*. You may not find this information on all tires because it is not required by law.

The speed rating letter code, where applicable, is molded on the tire sidewall and indicates the ▶

maximum permissible road speeds. See also ⇨ ⚠ *in General information on page 322*.

Tire pressure monitoring system

means a system that detects when one or more of a vehicle's tires are underinflated and illuminates a low tire pressure warning telltale.

Tread

means that portion of a tire that comes into contact with the road.

Tread separation

means pulling away of the tread from the tire carcass.

Treadwear indicators (TWI)

means the projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread. See ⇨*page 331, Treadwear indicator* for more information on measuring tire wear.

Uniform Tire Quality Grading

is a tire information system developed by the United States National Highway Traffic Safety Administration (NHTSA) that is designed to help buyers make relative comparisons among tires. The UTQG is not a safety rating and not a guarantee that a tire will last for a prescribed number of miles (kilometers) or perform in a certain way. It simply gives tire buyers additional information to combine with other considerations, such as price, brand loyalty and dealer recommendations. Under UTQG, tires are graded by the tire manufacturers in three areas: treadwear, traction, and temperature resistance. The UTQG information on the tires, molded into the sidewalls.

U.S. DOT Tire Identification Number (TIN)

This is the tire’s “serial number”. It begins with the letters “DOT” and indicates that the tire meets all federal standards. The next two numbers or letters indicate the plant where it was manufactured, and the last four numbers represent the week and year of manufacture. For example,

DOT ... 2218 ...

means that the tire was produced in the 22nd week of 2018. The other numbers are marketing codes that may or may not be used ▸

by the tire manufacturer. This information is used to contact consumers if a tire defect requires a recall.

Vehicle capacity weight

means the rated cargo and luggage load plus 150 lbs. (68 kilograms) times the vehicle's designated seating capacity.

Vehicle maximum load on the tire

means that load on an individual tire that is determined by distributing to each axle its share of the maximum loaded vehicle weight and dividing by two.

Vehicle normal load on the tire

means that load on an individual tire that is determined by distributing to each axle its share of the curb weight, accessory weight, and normal occupant weight (distributed in accordance with ⇨ *table on page 334*) and dividing by two.

Occupant loading and distribution for vehicle normal load for various designated seating capacities

Refer to the tire inflation pressure label ⇨ *page 332, fig. 265* for the number of seating positions. Refer to the table ⇨ *table on page 334* for the number of people that correspond to the vehicle normal load.

New tires or wheels

Audi recommends having all work on tires or wheels performed by an authorized Audi dealer or authorized Audi Service Facility. These facilities have the proper knowledge and are equipped with the required tools and replacement parts.

- ►New tires do not yet have the optimum gripping properties. Drive carefully and at moderate speeds for the first 350 miles (500 km) with new tires.
- ►Only use tires with the same design, size (rolling circumference), and as close to the same tread pattern as possible on all four wheels.
- ►Do not replace tires individually. At least replace both tires on the same axle at the same time.
- ►Audi recommends that you use Audi Original Tires. If you would like to use different tires, please note that the tires may perform ▶

differently even if they are the same size ⇨ ⚠.

- If you would like to equip your vehicle with a tire and rim combination that is different from what was installed at the factory, consult with an authorized Audi dealer or authorized Audi Service Facility before making a purchase ⇨ ⚠.

Because the spare tire* is different from the regular tires installed on the vehicle (such as winter tires or wide tires), only use the spare tire* temporarily in case of emergency and drive carefully while it is in use. It should be replaced with a regular tire as soon as possible.

Applies to: vehicles with all wheel drive: All four wheels must be equipped with tires that are the same brand and have the same construction and tread pattern so that the drive system is not damaged by different wheel speeds. For this reason, in case of emergency, only use a spare tire* that is the same circumference as the regular tires.

⚠ WARNING

- Do not use steel rims that are 17 inches or larger. Otherwise, damage to the vehicle and an accident could result.
- Only use tire/rim combinations and suitable wheel bolts that have been approved by Audi. Otherwise, damage to the vehicle and an accident could result.
- For technical reasons, it is not possible to use tires from other vehicles. In some cases, you cannot even use tires from the same vehicle model.
- Make sure that the tires you select have enough clearance to the vehicle. Replacement tires should not be chosen simply based on the nominal size, because tires with a different construction can differ greatly even if they are the same size. If there is not enough clearance, the tires or the vehicle can be damaged and this can reduce driving safety and increase the risk of an accident. ▶

– Only use tires that are more than six years old when absolutely necessary and drive carefully when doing so.
– Do not use run-flat tires on your vehicle. Using them when not permitted can lead to vehicle damage or accidents.
– If you install wheel covers on the vehicle, make sure they allow enough air circulation to cool the brake system. If they do not, this could increase the risk of an accident.

Tire wear and damage

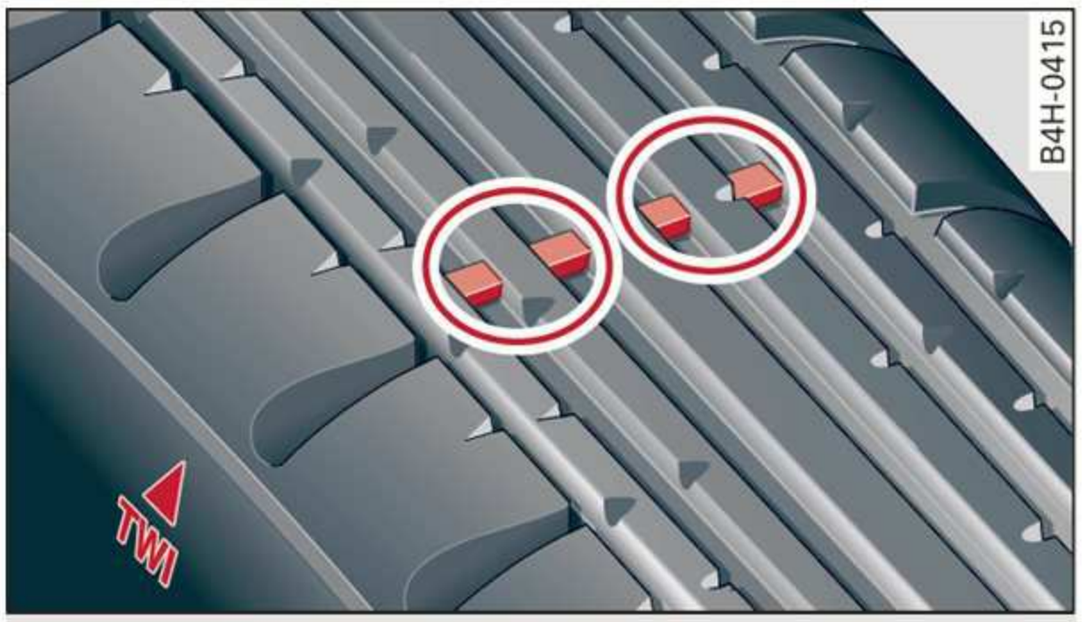


Fig. 263 Tire profile: treadwear indicator

Tire wear

Check the tires regularly for wear.

– Inflation pressure that is too low or high can increase tire wear considerably.
– Driving quickly through curves, rapid acceleration, and heavy braking increase tire wear.
– Have an authorized Audi dealer or authorized Audi Service Facility check the wheel alignment if there is unusual wear.
– Have the wheels rebalanced if an imbalance is causing noticeable vibration in the steering wheel. If you do not, the tires and other vehicle components could wear more quickly.

Treadwear indicator

Original equipment tires contain treadwear indicators in the tread pattern, which are bars that are 1/16 in (1.6 mm) high and are spaced evenly around the tire perpendicular to the running direction ⇨ *fig. 263*. The letters “TWI” or triangles on the tire sidewall indicate the location of the treadwear indicators.

The tires have reached the minimum tread depth [1] when they ▶

[1] Obey any applicable regulations in the country where the vehicle is being operated.

have worn down to the treadwear indicators. Replace the tires with new ones ⇨ ⚠.

Tire rotation

Rotating the tires regularly is recommended to ensure the tires wear evenly. To rotate the tires, install the tires from the rear axle on the front axle and vice versa. This will allow the tires to have approximately the same length of service life.

For unidirectional tires, make sure the tires are installed according to the running direction indicated on the tire sidewall ⇨ *page 354*.

Hidden damage

Damage to tires and rims can often occur in locations that are hidden. Unusual vibrations in the vehicle or pulling to one side may indicate that there is tire damage. Reduce your speed immediately. Check the tires for damage. If no damage is visible from the outside, drive slowly and carefully to the nearest authorized Audi dealer or authorized Audi Service Facility to have the vehicle inspected.

⚠ WARNING

Tread that has worn too low or uneven tread depths on the tires can reduce driving safety. This can increase the risk of an accident because it has a negative effect on handling, driving through curves, and braking, and because it increases the risk of hydroplaning when driving through deep puddles.

Tire pressure



Fig. 264 Driver's side B-pillar: tire pressure label

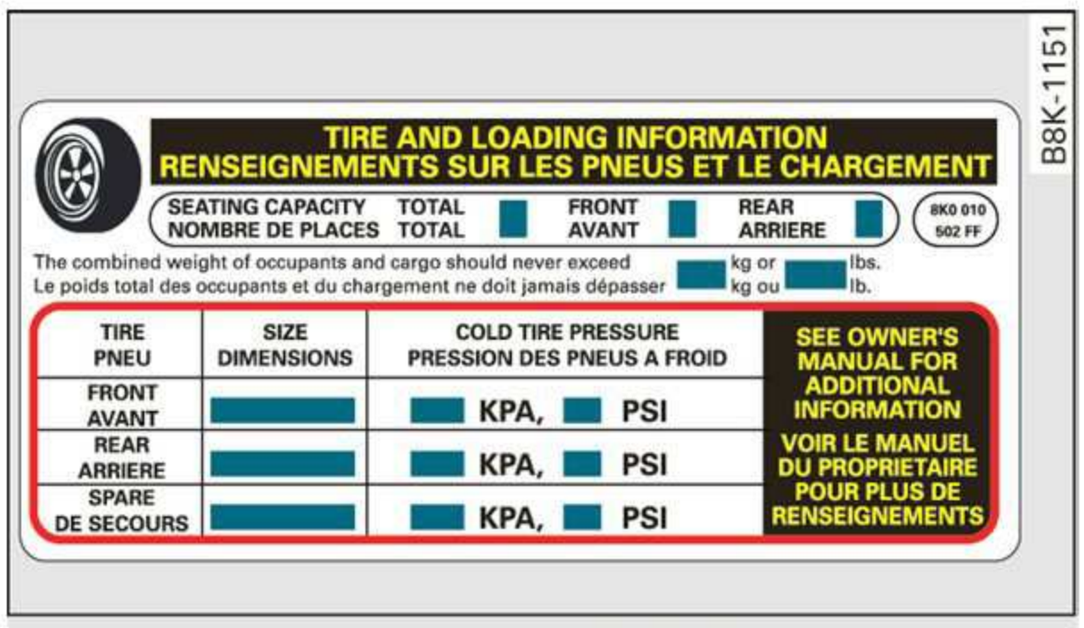


Fig. 265 Tire pressure label

The correct tire pressure for tires installed at the factory is listed on a label. The label is located on the ▶

B-pillar (driver's side) ⇨ *fig. 264*, ⇨ *fig. 265*. The location may vary depending on the model.

Use the tire pressure specified for a normal vehicle load when the vehicle is partially loaded ⇨ *table on page 334*. If driving the vehicle when fully loaded, you must increase the tire pressure to the maximum specified pressure ⇨ ⚠.

Checking and correcting tire pressure

- ►Check the tire pressure at least once per month and also check it before every long drive.
- ►Always check the tire pressure when the tires are *cold*. Do not reduce the pressure if it increases when the tires are warm.
- ►Check the label ⇨ *fig. 265* for the correct tire pressure based on vehicle load.
- ►Correct the tire pressure if necessary.
- ►Store the new tire pressure in the Infotainment system ⇨ *page 341*.
- ►Check the pressure in the spare tire (compact spare tire)*. Always maintain the maximum temperature that is specified for the tire.

WARNING

Always adapt the tire pressure to your driving style and the vehicle load.

–Overloading can lead to loss of vehicle control and increase the risk of an accident. Read and follow the important safety precautions in ⇨ *page 335, Tires and vehicle load limits*.

–The tire must flex more if the tire pressure is too low or if the vehicle speed or load are too high. This heats the tire up too much. This increases the risk of an accident because it can cause the tire to burst and result in loss of vehicle control.

–Incorrect tire pressure increases tire wear and has a negative effect on driving and braking behavior, which increases the risk of an accident.

Note

Replace lost valve caps to reduce the risk of damage to the tire valves. ►

8W0012721BG

For the sake of the environment

Tire pressure that is too low increases fuel consumption.

Tire pressure table

Please note that the information contained in the following table was correct at the time of printing, and the information is subject to change. If there are any differences, you should always follow the tire pressure sticker ⇨ *page 332, fig. 264*.

Make sure that the tire designation on your tire matches the designation on the tire pressure label and the tire pressure table.

The following table lists recommended tire pressures in cold tires according to the load and the size of the tires installed.

Model/ Engine	Tire designation	Tire pressure							
		Normal load (up to 3 people)[a)]				Maximum load			
		Front		Rear		Front		Rear	
		PSI	kPA	PSI	kPA	PSI	kPA	PSI	kPA
A4 sedan: 2.0L 4-cylinder (190 hp) Gasoline engine	225/50 R17 94H	30	210	28	190	32	220	32	220
	245/40 R18 93Y	30	210	28	190	32	220	32	220
	245/40 R18 97H	35	240	32	220	35	240	35	240
	245/35 R19 93Y	35	240	32	220	36	250	39	270
A4 sedan: 2.0L 4-cylinder (252 hp) Gasoline engine	225/50 R17 94H	30	210	28	190	35	240	35	240
	245/40 R18 93Y	30	210	28	190	33	230	33	230
	245/40 R18 97H	35	240	32	220	36	250	36	250
	245/35 R19 93Y	36	250	33	230	41	280	44	300
S4 sedan: 3.0L 6-cylinder Gasoline engine	245/40 R18 97Y	36	250	33	230	38	260	38	260
	245/40 R18 97H	35	240	32	220	36	250	36	250
	245/35 R19 93Y	39	270	35	240	44	300	45	310

Model/ Engine	Tire designation	Tire pressure							
		Normal load (up to 3 people)[a)]				Maximum load			
		Front		Rear		Front		Rear	
		PSI	kPA	PSI	kPA	PSI	kPA	PSI	kPA
allroad: 2.0L 4-cylinder gasoline engine	225/55 R17 97Y	32	220	29	200	33	230	30	210
	245/45 R18 96Y	32	220	29	200	35	240	32	220
	245/45 R18 100H	32	220	32	220	35	240	35	240
	245/40 R19 98Y	35	240	32	220	38	260	35	240

a) Two people in the front, one person in the rear

WARNING

Please note the important safety precautions regarding tire pressure ⇨ *page 332* and load limits ⇨ *page 335*.

Tires and vehicle load limits

There are limits to the amount of load or weight that any vehicle and any tire can carry. A vehicle that is overloaded will not handle well and is more difficult to stop. Overloading can not only lead to loss of vehicle control, but can also damage important parts of the vehicle and can lead to sudden tire failure, including a blowout and sudden deflation that can cause the vehicle to crash.

Your safety and that of your passengers also depends on making sure that load limits are not exceeded. Vehicle load includes everybody and everything in and on the vehicle. These load limits are technically referred to as the vehicle's **Gross Vehicle Weight Rating** ("GVWR").

The "GVWR" includes the weight of the basic vehicle, all factory installed accessories, a full tank of fuel, oil, coolant and other fluids plus maximum load. The maximum load includes the number of passengers that the vehicle is intended to carry ("seating capacity") with an assumed weight of 150 lbs. (68 kg) for each passenger at a designated seating position and the total weight of any luggage in the vehicle. If you tow a trailer, the weight of the trailer hitch and the tongue weight of the loaded trailer must be included as part of the vehicle load.

The **Gross Axle Weight Rating** ("GAWR") is the maximum load ▶

8W0012721BG

that can be applied at each of the vehicle's two axles.

The fact that there is an upper limit to your vehicle's Gross Vehicle Weight Rating means that the total weight of whatever is being carried in the vehicle (including the weight of a trailer hitch and the tongue weight of the loaded trailer) is limited. The more passengers in the vehicle or passengers who are heavier than the standard weights assumed mean that less weight can be carried as luggage.

The Gross Vehicle Weight Rating and the Gross Axle Weight Rating are listed on the safety compliance sticker on the driver's side B-pillar respectively on the front end of the driver's door.

WARNING

Overloading a vehicle can cause loss of vehicle control, a crash or other accident, serious personal injury, and even death.

–Carrying more weight than your vehicle was designed to carry will prevent the vehicle from handling properly and increase the risk of the loss of vehicle control.

–The brakes on a vehicle that has been overloaded may not be able to stop the vehicle within a safe distance.

–Tires on a vehicle that has been overloaded can fail suddenly, including a blowout and sudden deflation, causing loss of control and a crash.

–Always make sure that the total load being transported – including the weight of a trailer hitch and the tongue weight of a loaded trailer – does not make the vehicle heavier than the vehicle's Gross Vehicle Weight Rating.

Determining correct load limit

Use the example below to calculate the total weight of the passengers and luggage or other things that you plan to transport so that you can make sure that your vehicle will not be overloaded.

Steps for Determining Correct Load Limit

1. Locate the statement "THE COMBINED WEIGHT OF OCCUPANTS AND CARGO SHOULD ▶

NEVER EXCEED XXX KG OR XXX LBS" on your vehicle's placard (tire inflation pressure label) ⇨ *page 332, fig. 265*.

2. Determine the combined weight of the driver and passengers that will be riding in your vehicle.
3. Subtract the combined weight of the driver and passengers from "XXX" kilograms or "XXX" pounds shown on the sticker ⇨ *page 332, fig. 265*.
4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1400 lbs. and there will be five 150 lbs. passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1400-750 (5 x 150) = 650 lbs.)
5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

▶ Check the tire sidewall (⇨ *page 323, fig. 262*) to determine the designated load rating for a specific tire.

Wheel bolts and rims

Wheel bolts

Wheel bolts must be clean and loosen/tighten easily.

Rims

Rims with a bolted rim ring* or with bolted wheel covers* consist of multiple pieces. These components were bolted together using special bolts and a special procedure. You must not repair or disassemble them ⇨ ⚠.

WARNING

Wheel bolts that are tightened or repaired incorrectly can become loose and result in loss of vehicle control, which increases the risk of an accident. For the correct tightening specification, see ⇨ *page 354, Finishing*.

– Always keep the wheel bolts and the threads in the wheel hub clean and free of grease.
– Only use wheel bolts that fit the rim.
– Always have damaged rims repaired by an authorized Audi dealer or authorized Audi Service Facility. Never repair or disassemble rims yourself, because this increases the risk of an accident.

Winter tires

Winter tires significantly improve the vehicle's handling when driving in winter conditions. Because of their construction (width, compound, ▶

8W0012721BG

tread pattern), summer tires provide less traction on ice and snow.

- ► Use winter tires on all four wheels.
- ► Only use winter tires that are approved for your vehicle.
- ► Please note that the maximum permitted speed may be lower with winter tires ⇨ ⚠ *in General information on page 322*. An authorized Audi dealer or authorized Audi Service Facility can inform you about the maximum permitted speed for your tires.
- ► Check the tire pressure after installing wheels ⇨ *page 332*.

The effectiveness of winter tires is reduced greatly when the tread is worn down to a depth of 0.16 in (4 mm). The characteristics of winter tires also decrease greatly as the tire ages, regardless of the remaining tread.

For the sake of the environment

Reinstall summer tires at the appropriate time, because they provide better handling when roads are free of snow and ice. Summer tires cause less road noise, tire wear, and fuel consumption.

Tips

You can also use all season tires instead of winter tires. Please note that in some countries where winter tires are required, only winter tires with the ⛷ symbol may be permitted.

Snow chains

Snow chains improve both driving and braking in winter road conditions.

- ► Only install snow chains on the front wheels.
- ► Check and correct the seating of the snow chains after driving a few feet, if necessary. Follow the instructions from the manufacturer.
- ► Note the maximum speed of 30 mph (50 km/h). Observe the local regulations.

Use of snow chains is only permitted with certain rim/tire combinations due to technical reasons. Check with an authorized Audi dealer or authorized Audi Service Facility to see if you may use snow chains.

Use **fine-mesh snow chains**. They must not add more than 0.53 in (13.5 mm) in height, including the chain lock.

You must remove the snow chains on roads without snow. Otherwise, you could impair driving ability and damage the tires.

WARNING

Using incorrect snow chains or installing snow chains incorrectly can result in loss of vehicle control, which increases the risk of an accident.

Note

Snow chains can damage the rims and wheel covers* if the chains come into direct contact with them. Remove the wheel covers* first. Use coated snow chains.

Tips

When using snow chains, it may be advisable to limit the ESC ⇨ *page 139*.

Low-profile tires

Applies to: vehicles with low-profile tires

Compared to other tire/rim combinations, low-profile tires offer a wider tread surface and a larger rim diameter with shorter tire sidewalls. This results in an agile driving style. However, it may reduce the level of comfort and increase road noise when driving on roads in poor condition.

Low-profile tires can become damaged more quickly than standard tires when driving over large bumps, potholes, manhole covers, and curbs. Therefore, it is particularly important to maintain the correct tire pressure ⇨ *page 332*.

To reduce the risk of damage to the tires and rims, drive very carefully on poor roads.

Check your wheels regularly every 2,000 mi (3,000 km) for damage. For example, check for bulges/cracks on the tires or deformations/cracks on the rims. ▶

After a heavy impact or damage, have the tires and rims inspected or replaced immediately by an authorized Audi dealer or authorized Audi Service Facility.

Low-profile tires can wear out faster than standard tires.

Uniform tire quality grading

– Tread wear
– Traction AA A B C
– Temperature A B C

Quality grades can be found where applicable on the tire side wall between tread shoulder and maximum section width ⇨ *page 323, fig. 262*.

For example: Tread wear **200**, Traction **AA**, Temperature **A**.

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.

Tread wear

The *tread wear* grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one and one half (1 1/2) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

Traction

The *traction* grades, from highest to lowest, are AA, A, B and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance ⇨ ⚠.

Temperature

The *temperature* grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure ⇨ ⚠.

The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

⚠ WARNING

The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning or peak traction characteristics.

⚠ WARNING

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

⚠ WARNING

Temperature grades apply to tires that are properly inflated and not over or underinflated.

Tire pressure monitoring system

(!) General notes

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on ▶

8W0012721BG

the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires).

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

If the tire pressure monitoring indicator appears

Applies to: vehicles with Tire Pressure Monitoring System indicator

The tire pressure indicator in the instrument cluster informs you if the tire pressure is too low or if there is a system malfunction.

Using the ABS sensors, the tire pressure monitoring system compares the tire tread circumference and vibration characteristics of the individual tires. If the pressure changes in one or more tires, this is indicated in the instrument cluster display with an indicator light (!) and a message. If only one tire is affected, the location of that tire will be indicated.

The tire pressures must be stored in the Infotainment system again each time the pressures change (switching between partial and full load pressure) or after changing or replacing a tire on your vehicle ⇨ *page 341*. The tire pressure monitoring system only monitors the tire pressure you have stored. Refer to the tire pressure label for the recommended tire pressure for your vehicle ⇨ *page 332, fig. 265*.

Tire tread circumference and vibration characteristics can change and cause a tire pressure warning if:

– The tire pressure in one or more tires is too low
– The tires have structural damage
– The tire was replaced or the tire pressure was changed and it was not stored ⇨ *page 341*
– Tires that are only partially used are replaced with new tires

Indicator lights

(!) – Loss of pressure in at least one tire ⇨ ⚠. Check the tires and replace or repair if necessary. Check/correct the pressures of all four tires and store the pressure again in the Infotainment system ⇨ *page 341*.

TPMS (Tire Pressure Monitoring System) **Tire pressure: malfunction! See owner's manual**. If TPMS appears after switching the ignition on or while driving and the (!) indicator light in the instrument cluster blinks for approximately one minute and then stays on, there is system malfunction. ▶

Try to store the correct tire pressures ⇨ *page 341*. In some cases, you must drive for several minutes after storing the pressures until the indicator light turns off. If the indicator light does turn off or turns on again after a short period of time, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the malfunction corrected.

WARNING

- If the tire pressure indicator appears in the display, reduce your speed immediately and avoid any hard steering or braking maneuvers. Stop as soon as possible and check the tires and their pressure.
- The driver is responsible for maintaining the correct tire pressure. You must check the tire pressure regularly.
- Under certain conditions (such as a sporty driving style, winter conditions, or unpaved roads), the tire pressure monitoring system indicator may be delayed.

Tips

- The tire pressure monitoring system can also stop working when there is an ESC malfunction.
- Using snow chains may result in a system malfunction.
- The tire pressure monitoring system in your Audi was calibrated with "Audi Original Tires" ⇨ *page 329*. Using these tires is recommended.

Storing tire pressures

Applies to: vehicles with Tire Pressure Monitoring System indicator

If the tire pressure changes or a tire is replaced, it must be confirmed in the Infotainment system.

- ▸ Before storing the tire pressures, make sure the tire pressures in all four tires meet the specified values and are adapted to the load ⇨ *page 332*.
- ▸ Switch the ignition on.
- ▸ Select in the Infotainment system: MENU button > **Vehicle** > **Service & checks** > **Tire pressure monitoring** > **Store tire pressure** > **Yes, store now**.

Tips

Do not store the tire pressures if snow chains are installed.

Care and cleaning

General information

Regular, proper care helps to maintain your vehicle's value. It can also be a requirement when submitting warranty claims for corrosion damage and paint defects on the body.

The required cleaning and care products can be obtained from an authorized Audi dealer or authorized Service Facility. Read and follow the instructions for use on the packaging.

WARNING

- Using cleaning and care products incorrectly can be dangerous to your health.
- Always store cleaning and care products out of reach of children to reduce the risk of poisoning.

For the sake of the environment

- Purchase environmentally-friendly cleaning products if possible.
- Do not dispose of cleaning and care products with household trash.

Car washes

The longer that deposits such as insects, bird droppings, tree sap or road salt remain on the vehicle, the more the surface can be damaged. High temperatures such as those caused by sunlight increase the damaging effect.

Before washing, rinse off heavy deposits with plenty of water.

Stubborn deposits such as bird droppings or tree sap are best removed with plenty of water and a microfiber cloth.

Also, wash the underside of your vehicle once road salt stops being used for the season.

Pressure washers

When washing your vehicle with a pressure washer, always follow the operating instructions provided with the pressure washer. This is especially important in regard to the pressure and spraying distance. Do not aim the spray directly at the seals on the side windows, doors, lids or the sunroof* or at tires, rubber hoses, insulating material, sensors* or camera lenses*. Keep a distance of at least 16 in (40 cm).

Do not remove snow and ice with a pressure washer.

Never use cone nozzles or high pressure nozzles.

The water temperature must not be above 140 °F (60 °C).

Automatic car wash

Spray off the vehicle before washing.

Make sure that the windows and roof* are closed and the windshield wipers are off. Follow instructions from the car wash operator, especially if there are accessories attached to your vehicle.

If possible, use car washes that do not have brushes.

Washing by hand

Clean the vehicle starting from the top and working downward using a soft sponge or cleaning brush. Use solvent-free cleaning products.

Washing vehicles with matte finish paint by hand

To reduce the risk of damaging the paint when washing, first remove dust and large particles from your vehicle. Insects, grease spots, and fingerprints are best removed with a special cleaner for matte finish paint.

Apply the product using a microfiber cloth. To reduce the risk of damaging the paint surface, do not use too much pressure.

Rinse the vehicle thoroughly with water. Then clean using a neutral shampoo and a soft microfiber cloth.

Rinse the vehicle thoroughly again and let it air dry. Remove any water residue using a chamois.

WARNING

- To reduce the risk of accidents, only wash the vehicle when the ignition is off and follow the instructions from the car wash operator.

– To reduce the risk of cuts, protect yourself from sharp metal components when washing the underbody or the inside of the wheel housings.
– After washing the vehicle, the braking effect may be delayed due to moisture on the brake rotors or ice in the winter. This increases the risk of an accident. The brakes must be dried with a few careful brake applications.

Note

– If you wash the vehicle in an automatic car wash, you must fold the exterior mirrors in to reduce the risk of damage to the mirrors. Power folding exterior mirrors* must only be folded in and out using the power folding function.
– To reduce the risk of damage to the rims and tires, compare the width between the wheels on your vehicle with the distance between the guide rails in the car wash.
– To reduce the risk of damage, compare the height and width of your vehicle with the height and width of the inside of the car wash.
– To reduce the risk of paint damage, do not wash the vehicle in direct sunlight.
– To reduce the risk of damage, do not wash decorative decals* with a pressure washer.
– To reduce the risk of damage to the surface, do not use insect removing sponges, kitchen sponges, or similar items.
– When washing matte finish painted vehicle components:
  – To reduce the risk of damage to the surface, do not use polishing agents or hard wax.
  – Never use protective wax. It can destroy the matte finish effect.
  – Do not place any stickers or magnetic signs on vehicle components painted with matte finish paint. The paint could be damaged when the stickers or magnets are removed.

For the sake of the environment

Only wash the vehicle in facilities specially designed for that purpose. This will reduce the risk of dirty water contaminated with oil from entering the sewer system.

Cleaning and care information

When cleaning and caring for individual vehicle components, refer to the following tables. The information contained there is simply recommendations. For questions or for components that are not listed, consult an authorized Audi dealer or authorized Audi Service Facility. Also follow the information found in ⇨ ⚠.

Exterior cleaning

Component	Situation	Solution
Windshield wiper blades	Deposits	Soft cloth with glass cleaner, ⇨ *page 54*
Headlights/ Tail lights	Deposits	Soft sponge with a mild soap solution[a)]
Sensors/ camera lenses	Deposits	Sensors: soft cloth with a solvent-free cleaning solution Camera lenses: soft cloth with an alcohol-free cleaning solution
	Snow/ice	Hand brush/solvent-free de-icing spray
Wheels	Road salt	Water
	Brake dust	Acid-free special cleaning solution

Component	Situation	Solution
Exhaust tail pipes	Road salt	Water, cleaning solution suitable for stainless steel, if necessary
Decorative parts/ trim	Deposits	Mild soap solution [a)], a cleaning solution suitable for stainless steel, if necessary
Paint	Paint damage	Refer to the paint number on the vehicle data label, repair with touch up paint ⇨ *page 372*.
	Spilled fuel	Rinse with water immediately
	Surface rust	Rust remover, then protect with hard wax; for questions, consult an authorized Audi dealer or authorized Audi Service Facility.
	Corrosion	Have it removed by an authorized Audi dealer or authorized Audi Service Facility.
	Water no longer beads on the surface of clean paint	Protect with hard wax (at least twice per year)
	No shine even though paint has been protected/paint looks poor	Treat with suitable polish; then apply paint protectant if the polish that was used does not contain any protectant
	Deposits such as insects, bird droppings, tree sap, and road salt	Dampen with water immediately and remove with a microfiber cloth
	Grease-based contaminants such as cosmetics or sunblock	Remove immediately with a mild soap solution [a)] and a soft cloth
Carbon components	Deposits	Clean the same way as painted components ⇨ *page 342*
Decorative decals	Deposits	Soft sponge with a mild soap solution[a)]

a) Mild soap solution: maximum two tablespoons of neutral soap in 1 quart (1 liter) of water

Interior cleaning

Component	Situation	Solution
Window glass	Deposits	Glass cleaner, then wipe dry
Decorative parts/ trim	Deposits	Mild soap solution[a)]
Plastic parts	Deposits	Damp cloth
	Heavier deposits	Mild soap solution [a)], detergent-free plastic cleaning solution, if necessary
Displays/instrument cluster	Deposits	Soft cloth with LCD cleaner; dust in the lower area of the instrument cluster can be removed using a soft brush.
Controls	Deposits	Soft brush, then a soft cloth with a mild soap solution[a)]

Component	Situation	Solution
Safety belts	Deposits	Mild soap solution [a], allow to dry before letting them retract
Textiles, artificial leather, Alcantara	Deposits adhering to the surface	Vacuum cleaner
	Water-based deposits such as coffee, tea, blood, etc.	Absorbent cloth and mild soap solution[a]
	Oil-based deposits such as oil, make-up, etc.	Apply a mild soap solution [a], blot away the dissolved oil or dye, treat afterward with water, if necessary
	Specific types of deposits such as ink, nail polish, latex paint, shoe polish, etc.	Special stain remover, blot with absorbent material, treat afterward with mild soap solution, if necessary[a]
Natural leather	Fresh stains	Cotton cloth with a mild soap solution[a]
	Water-based deposits such as coffee, tea, blood, etc.	Fresh stains: absorbent cloth Dried stains: stain remover suitable for leather
	Oil-based deposits such as oil, make-up, etc.	Fresh stains: absorbent cloth and stain remover suitable for leather Dried stains: oil cleaning spray
	Specific types of deposits such as ink, nail polish, latex paint, shoe polish, etc.	Spot remover suitable for leather
	Care	Regularly apply conditioning cream that protects from light and penetrates into the material. Use special colored conditioning cream, if necessary.
Carbon components	Deposits	Clean the same way as plastic components

a) Mild soap solution: maximum two tablespoons of neutral soap in 1 quart (1 liter) of water

WARNING

The windshield must not be treated with water-repelling windshield coating agents. Unfavorable conditions such as wetness, darkness, or low sun can result in increased glare. Wiper blade chatter is also possible.

Note

– **Headlights and tail lights**

– Never clean headlights or tail lights with a dry cloth or sponge.

– Do not use any cleaning products that contain alcohol, because they could cause cracks to form.

– **Wheels**

– Never use any paint polish or other abrasive materials.

– Damage to the protective layer on the rims, such as stone chips or scratches, must be repaired immediately. ▶

- **Camera lenses**
  - Never use warm or hot water to remove snow or ice from the camera lens. This could cause the lens to crack.
  - Never use abrasive cleaning materials or alcohol to clean the camera lens. This could cause scratches and cracks.
- **Door windows**
  - Remove snow and ice on windows and exterior mirrors with a plastic scraper. To reduce the risk of scratches, move the scraper only in one direction and not back and forth.
  - Never remove snow or ice from door windows and mirrors using warm or hot water because this could cause cracks to form.
  - To reduce the risk of damage to the rear window defogger, do not apply any stickers on the heating wires on the inside of the window.
- **Decorative parts and trim**
  - Never use chrome care or cleaning products.
- **Paint**
  - To reduce the risk of scratches, the vehicle must be free of dirt and dust before polishing or waxing.
  - To prevent paint damage, do not polish or wax the vehicle in direct sunlight.
  - To reduce the risk of paint damage, do not polish away rust spots.
  - Remove cosmetics and sunscreen immediately because they could damage the paint.
- **Decorative decals**
  - To reduce the risk of damage, do not use any rough powder or abrasive cleaning products.
  - To reduce the risk of damage, do not polish decorative decals that have a matte or printed finish.
  - Due to the risk of damage, do not use an ice scraper to remove snow and ice on windows with decorative decals on them.
- **Displays and instrument cluster**
  - Make sure that the instrument cluster is switched off and has cooled off before cleaning it.
  - Displays, the instrument cluster, and the trim surrounding it must not be cleaned with dry cleaning methods because they could become scratched.
  - Make sure no fluids enter the spaces between the instrument cluster and the trim, because that could cause damage.
- **Controls**
  - Make sure that no fluids enter the controls, because this could cause damage.
- **Safety belts**
  - Do not remove the safety belts to clean them.
  - Never clean safety belts or their components with chemicals or with corrosive fluids or solvents and never allow sharp objects to come into contact with the safety belts. This could cause damage to the belt webbing.
  - If there is damage to the webbing, the connections, the retractors, or the buckles, have them replaced by an authorized Audi dealer or authorized Audi Service Facility.
- **Textiles, artificial leather, and Alcantara**
  - Never treat artificial leather or Alcantara with leather care products, solvents, floor polish, shoe polish, spot remover, or similar products.
  - Have a cleaning specialist remove stubborn stains to reduce the risk of damage.
  - Never use steam cleaners, brushes, hard sponges, etc. when cleaning.
  - Do not turn on the seat heating* to dry the seat.
  - Objects with sharp edges, such as zippers or rivets on clothing or belts, can cause damage to the surface.
  - Open hook and loop fasteners, for example on clothing, can damage seat covers. Make sure hook and loop fasteners are closed.
- **Natural leather** ▶

– Never treat leather with solvents, floor polish, shoe polish, spot remover or similar products.
– Objects with sharp edges, such as zippers or rivets on clothing or belts, can cause damage to the surface.
– Never use steam cleaners, brushes, hard sponges, etc. when cleaning.
– Do not turn on the seat heating* to dry the seat.
– To help prevent the leather from fading, do not leave the vehicle in direct sunlight for long periods of time. If leaving the vehicle parked for long periods of time, you should cover the leather to protect it from direct sunlight.

Tips

– Insects are easier to remove from paint that has been freshly waxed.
– Regular waxing can prevent rust spots from forming.
– Decorative decals can age due to environmental conditions, which can result in damage such as brittleness. The color may fade if exposed to excessive sunlight.

Taking your vehicle out of service

If you would like to take your vehicle out of service for a long period of time, contact an authorized Audi dealer or authorized Audi Service Facility. They will advise you of important measures, such as corrosion protection, service, and storage procedures. Also follow the information about the vehicle battery ⇨ *page 318*.

8W0012721BG

Emergency assistance

General information

- Park the vehicle as far as possible from moving traffic in the event of a breakdown. In the event of a flat tire, park the vehicle on a level surface. If you are on a steep hill, be especially careful.
- Set the parking brake.
- Switch the emergency flashers on.
- Have the passengers exit the vehicle. They should move to a safe place, for example behind a guard rail.

WARNING

Follow the steps given above. This is for your protection and the for the safety of others on the road.

Equipment

Vehicle tool kit, tire mobility kit, and vehicle jack

Applies to: vehicles with the vehicle tool kit, tire mobility kit, and vehicle jack



Fig. 266 Luggage compartment: cargo floor cover

The vehicle tool kit, vehicle jack, tire mobility kit and compressor are stored in the luggage compartment under the cargo floor cover.

- Applies to: sedan: To open the front compartment, lift the cargo floor cover by the strap ①.
- Applies to: allroad: To open the front compartment, pull the cargo floor cover by the plastic handle ② slightly toward the rear. Lift the cargo floor cover over the front compartment.
- To open the rear compartment, lift the cargo floor cover by the plastic handle ②.
- Applies to: sedan: Hook the plastic handle ② into the luggage compartment seal.
- To remove the cargo floor cover completely, pull it toward the rear at the plastic handle ②.
- Applies to: vehicles with spare tire: Turn the handle counter-clockwise and remove the spare tire.
- Applies to: sedan: Unhook the cargo floor cover again before closing the luggage compartment lid.

Depending on vehicle equipment, the vehicle tool kit, tire mobility kit, and compressor may be located under another cover that is secured with a handwheel.

Applies to: vehicles with vehicle jack in the storage bag: The bag with the vehicle jack is secured to the tie-downs in the luggage compartment and must be secured to the tie-downs again after using it.

WARNING

Applies to: vehicles with vehicle jack in the storage bag

A vehicle jack that is unsecured, incorrectly secured, or not secured in the luggage compartment may slide out of place when braking, turning, or in an accident, which increases the risk of injuries to vehicle passengers. To reduce the risk of an accident, never transport the vehicle jack without securing it.

WARNING

Improper use of the vehicle jack can cause serious personal injuries.

– Never use the screw driver hex head to tighten wheel bolts, since the bolts cannot attain the necessary tightening torque if you use the hex head, potentially causing an accident.
– The factory-supplied jack is intended only for your vehicle model. Under no circumstances should it be used to lift heavy vehicles or other loads; you risk injuring yourself.
– Never start the engine when the vehicle is raised, which could cause an accident.
– Support the vehicle securely with appropriate stands if work is to be performed ▶

underneath the vehicle; otherwise, there is a potential risk for injury.
– Never use the jack supplied with your Audi on another vehicle, particularly on a heavier one. The jack is only suitable for use on the vehicle it came with.

Tips

– In some vehicles, the rear compartment may not open.
– The vehicle jack in your vehicle is maintenance-free.

Tire mobility kit

Preparation

Applies to: vehicles with tire mobility kit

► Read and follow the important safety precautions ⇨ *page 348*.
► Set the parking brake.

Applies to: vehicles with manual transmission

► Shift into 1st gear.

Applies to: vehicles with automatic transmission

► Select the "P" selector lever position.

► Check if a repair with the tire mobility kit is possible ⇨ *page 349*.

Using the tire mobility kit

Applies to: vehicles with tire mobility kit



Fig. 267 Tire: tire damage that cannot be repaired

The tire repair is only meant for temporary use. Change the damaged tire as soon as possible ⇨ ⚠.

If the tire is pierced by an object such as a nail, do not remove the object from the tire.

The tire mobility kit can be used at temperatures as low as -4 °F (-20 °C).

The tire mobility kit must not be used:

– If the tire has cuts or punctures that are larger than 0.16 in (4 mm) ① ⇨ *fig. 267*
– If the rim is damaged ②
– If you have driven with very low tire pressure or without air in the tire ③

See an authorized Audi dealer or authorized Audi Service Facility for assistance in these situations.

WARNING

– Please note that the tire mobility kit cannot be used in all situations, and that it may only be used temporarily.
– The tire sealant must not come in contact with skin, eyes, or clothing.
– If tire sealant comes into contact with your eyes or your skin, thoroughly rinse the affected area immediately with clean water.
– Do not inhale the fumes.
– If you swallow any of the tire sealant, thoroughly rinse your mouth immediately and drink a lot of water. Do not induce vomiting. Seek medical attention immediately.
– Change your clothing immediately if it comes into contact with tire sealant.
– If an allergic reaction occurs, seek medical attention immediately.
– Keep the tire sealant away from children.

Tips

– If sealant leaks, allow it to dry in place. You can then peel it off like a sticker.
– Note the expiration date on the sealant bottle. Replace the tire sealant at an authorized Audi dealer or authorized Audi Service Facility.
– Radio reception can be interrupted when operating the compressor.
– Follow the legal regulations that are applicable in the country where you are operating the vehicle.

Repairing tires

Applies to: vehicles with tire mobility kit

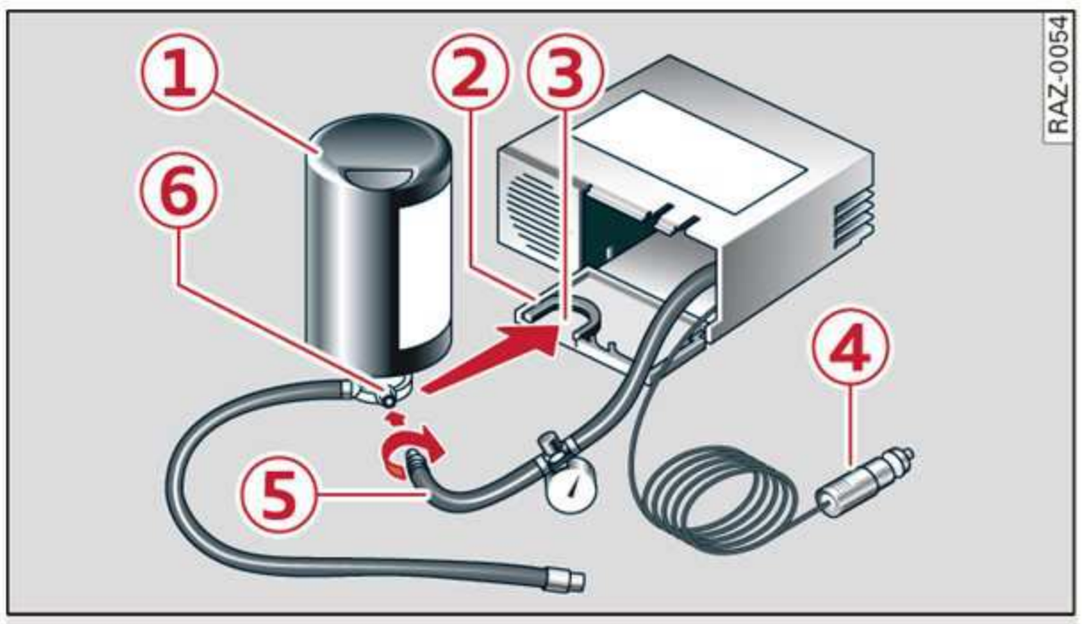


Fig. 268 Diagram: components of the tire mobility kit

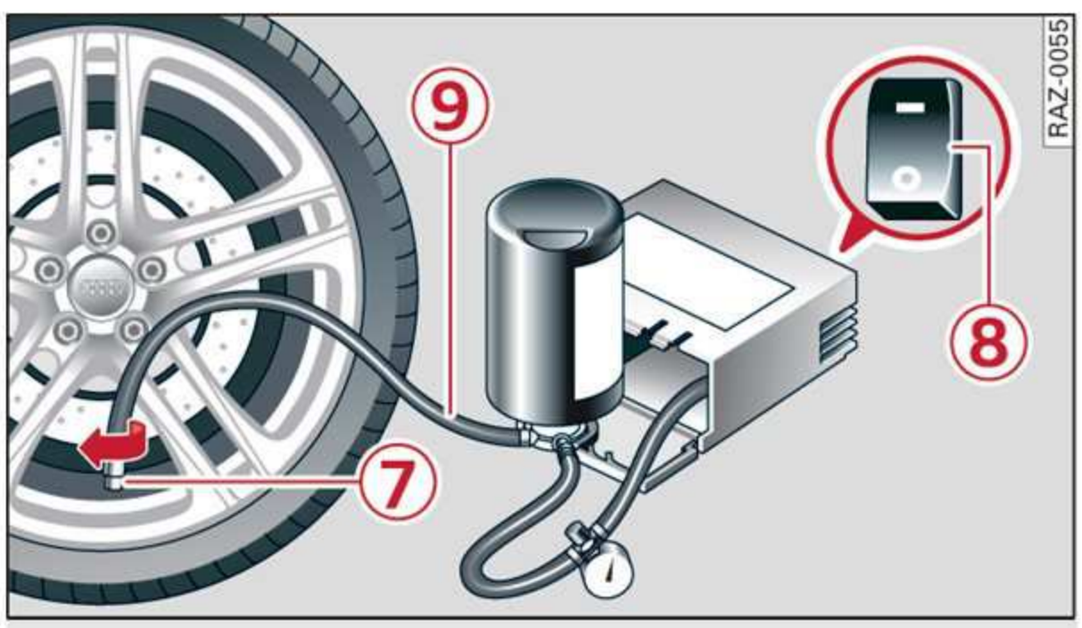


Fig. 269 Diagram: tire mobility kit connection

Requirement: the tire mobility kit must be laid out and ready for use ⇨ *page 348*.

Setting up the tire mobility kit

- ▸ Open the cover ② on the compressor[1] ⇨ *fig. 268*.
- ▸ Remove the connector ④ and pressure hose ⑤ with pressure gauge from the housing.
- ▸ Connect the compressor pressure hose ⑤ to the flange ⑥ on the tire sealant bottle ①.
- ▸ Insert the sealant bottle with the flange at the bottom into the opening ③ on the compressor cover.
- ▸ Remove the valve cap from the faulty tire.
- ▸ Install the filler hose ⑨ on the valve ⑦ ⇨ *fig. 269*.
- ▸ Connect the plug ④ ⇨ *fig. 268* to an outlet in the vehicle.
- ▸ Switch the ignition on.

Inflating a tire

- ▸ Move the switch ⑧ ⇨ *fig. 269* on the compressor into position **I**.
- ▸ Inflate the tire to between 29 psi (200 kPA) and 36 psi (250 kPA) and read the pressure on the gauge.
- ▸ If this tire pressure is not reached, remove the filler hose. Drive slowly approximately 33 feet (10 m) forward or in reverse so that the sealant can be distributed in the tire. Inflate the tire again ⇨ ⚠.

⚠ WARNING

- – Read and follow the manufacturer's safety precautions on the compressor and in the instructions on the bottle of sealant.
- – If a tire pressure of 29 psi (200 kPA) cannot reached after inflating for 6 minutes, then the tire is too severely damaged. Do not continue driving.
- – If the tire cannot be repaired with the tire sealant, see an authorized Audi dealer or authorized Audi Service Facility for assistance.

ⓘ Tips

Do not operate the compressor for more than six minutes continuously, or it can overheat. Once the compressor has cooled, you can continue to use it.

Completing

Applies to: vehicles with tire mobility kit

- ▸ Affix the sticker that says "max. 50 mph (max. 80 km/h)" that is provided with the tire mobility kit within the driver's field of vision.
- ▸ Stop the vehicle after driving for about 10 minutes and check the tire pressure.
- ▸ If the tire pressure is lower than 19 psi (130 kPA), then the tire is too severely damaged. Do not continue driving. ▶

1) The compressor may look different. However, the way it is operated is generally the same.

WARNING

Pay attention to the following after repairing the tire:

– Do not drive faster than 50 mph (80 km/h).
– Avoid hard acceleration, heavy braking, and fast cornering.
– The vehicle may become more difficult to control.
– If the tire is too severely damaged, see an authorized Audi dealer or authorized Audi Service Facility for assistance.

For the sake of the environment

You can give the used tire sealant bottle to an authorized Audi dealer or authorized Audi Service Facility for disposal.

Tips

Remember to obtain a new bottle of sealant from an authorized Audi dealer or authorized Audi Service Facility after repairing a tire.

Changing a tire

Preparation

You must complete the preparation before changing a tire.

► Read and follow the important safety precautions ⇨ *page 348*.
► Set the parking brake.

Applies to: vehicles with manual transmission

► Shift into 1st gear.

Applies to: vehicles with automatic transmission

► Select the "P" selector lever position.

► When towing a trailer: disconnect the trailer from your vehicle.
► Lay out the vehicle tool kit ⇨ *page 348* and the spare tire ⇨ *page 355*.
► Switch the ignition off.

WARNING

When using the vehicle jack* on a road with a steep hill or when offroad, you must take extra precautions to prevent the vehicle from rolling. Use suitable objects to block the front and back of the wheel that is diagonal from the wheel with the flat tire.

WARNING

You or your passengers could be injured while changing a wheel if you do not follow these safety precautions:

– If you have a flat tire, move a safe distance off the road. Turn off the engine, turn the emergency flashers on and use other warning devices to alert other motorists.
– Make sure that passengers wait in a safe place away from the vehicle and well away from the road and traffic.
– To help prevent the vehicle from moving suddenly and possibly slipping off the jack*, always fully set the parking brake and block the front and back of the wheel diagonally opposite the wheel being changed. When one front wheel is lifted off the ground, placing the Automatic Transmission in P (Park) will *not* prevent the vehicle from moving.
– Before you change a wheel, be sure the ground is level and firm. If necessary, use a sturdy board under the jack*.
– Always store the vehicle tool kit, the jack* and the replaced tire in the luggage compartment ⇨ *page 64*.

Tips

Obey all laws.

Removing the caps



Fig. 270 Wheel: wheel bolts with caps

8W0012721BG

- ▸ Slide the plastic clip from the vehicle tool kit onto the cap until it engages ⇨ *fig. 270*.
- ▸ Remove the cap with the plastic clip.

Loosening the wheel bolts



Fig. 271 Wheel: loosening the wheel bolt

- ▸ Slide the wheel wrench from the vehicle tool kit all the way onto the wheel bolt.
- ▸ Turn the wheel bolt approximately one turn to the left -arrow-. To achieve the required torque, hold the end of the wheel wrench. If the wheel bolt will not loosen, press carefully on the wheel wrench with your foot. Hold onto the vehicle securely while doing this and make sure your footing is stable.

WARNING

To reduce the risk of an accident, only loosen the wheel bolts gently one turn before raising the vehicle with the vehicle jack*.

Raising the vehicle

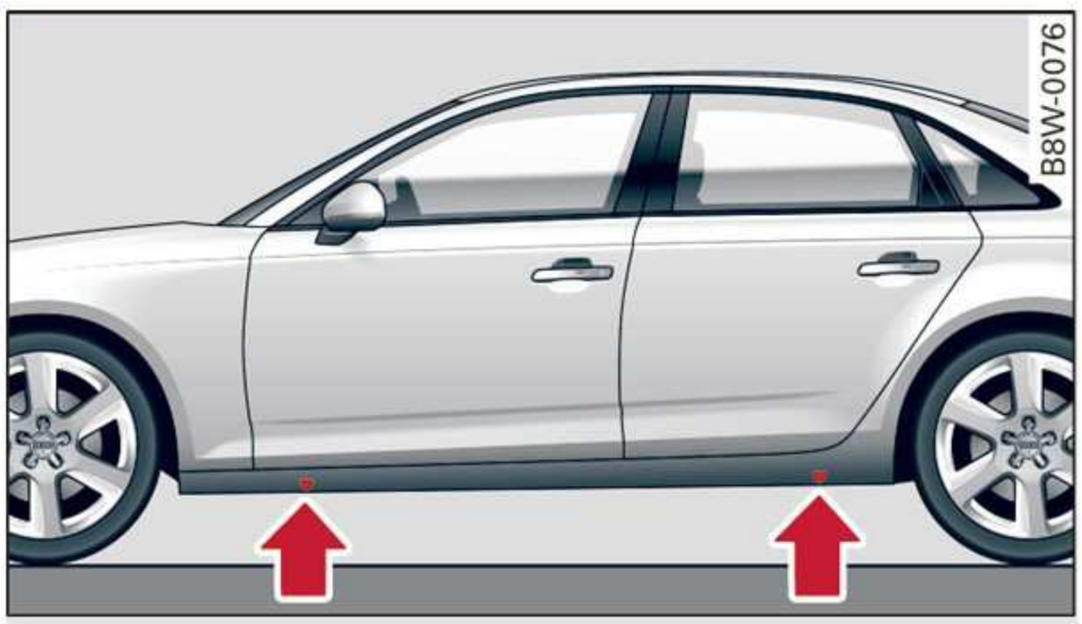


Fig. 272 Sill panels: markings

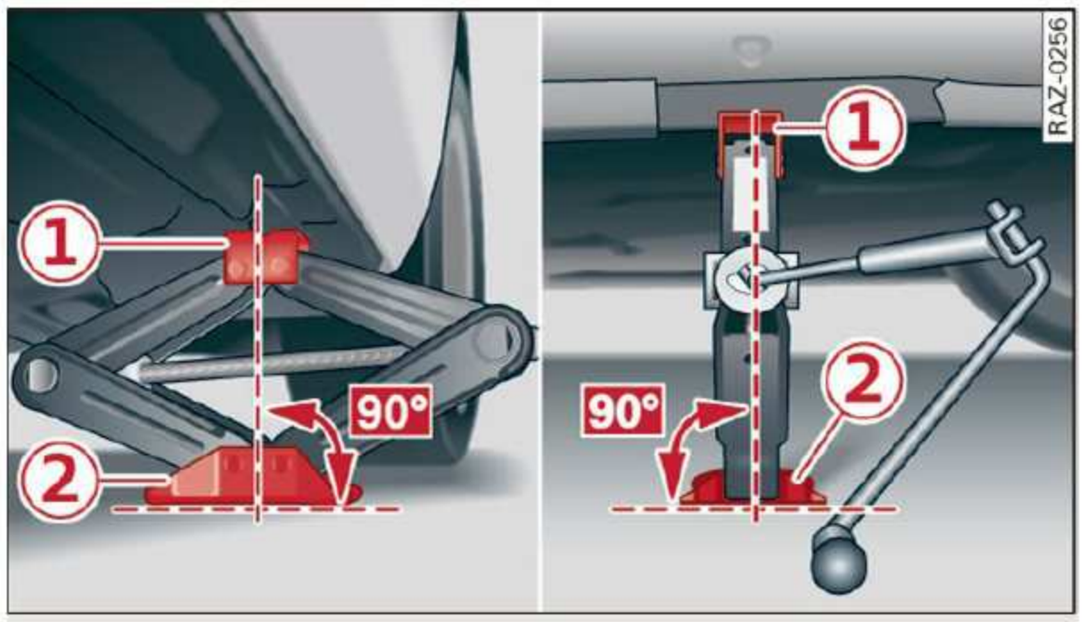


Fig. 273 Sill: positioning the vehicle jack

- ▸ Place the vehicle jack* from the vehicle tool kit on a firm surface. Use a flat, stable support if necessary. On a slippery surface such as tile, you should use a non-slip pad such as a rubber mat ⇨ ⚠.
- ▸ Find the marking on the sill that is closest to the tire that will be changed ⇨ *fig. 272*. Behind the marking, there is a lifting point on the side sill for the vehicle jack*.
- ▸ Turn the handwheel to raise the vehicle jack* under the lifting point on the side sill until the bracket on the jack (1) completely covers the notch on the vehicle.
- ▸ Align the vehicle jack* so the bracket (1) covers the notch and the base (2) is flat on the ground. The base (2) must be directly under the mounting point (1).
- ▸ Mount the crank on the vehicle jack*: insert the crank into the opening on the handwheel. Turn the crank to the left or right to secure it.
- ▸ Continue raising the vehicle jack* with the crank until the wheel lifts off the ground slightly.

WARNING

– Make sure the vehicle jack* is stable. There is a risk of injury when the ground is slippery or soft, because the vehicle jack* could slide or sink.
– Only raise your vehicle with the vehicle jack* provided by the factory. If you use a vehicle jack designed for another vehicle, your vehicle could slip and cause injury.
– Position the vehicle jack* only at the designated mounting points on the side sill and align the jack. Otherwise, the vehicle jack* could slip and cause an injury if it does not have sufficient hold on the vehicle.

– To reduce the risk of an accident, never start the engine when the vehicle is raised.
– To reduce the risk of injury, support the vehicle securely with suitable stands if work is to be performed underneath the vehicle.

WARNING

To help prevent injury to yourself and your passengers:

– Do not raise the vehicle until you are sure the jack* is securely engaged.
– Passengers must not remain in the vehicle when it is jacked up.
– Make sure that passengers wait in a safe place away from the vehicle and well away from the road and traffic.
– Make sure jack position is correct, adjust as necessary and then continue to raise the jack*.
– If work has to be done under the vehicle, ensure that it is safely supported on suitable stands – risk of injury!
– Never start the engine when the vehicle is on the jack* – risk of accident!

Note

Do not lift the vehicle by the sill. Position the vehicle jack* only at the designated mounting points on the side sill. Otherwise, your vehicle could be damaged.

Removing and installing a wheel

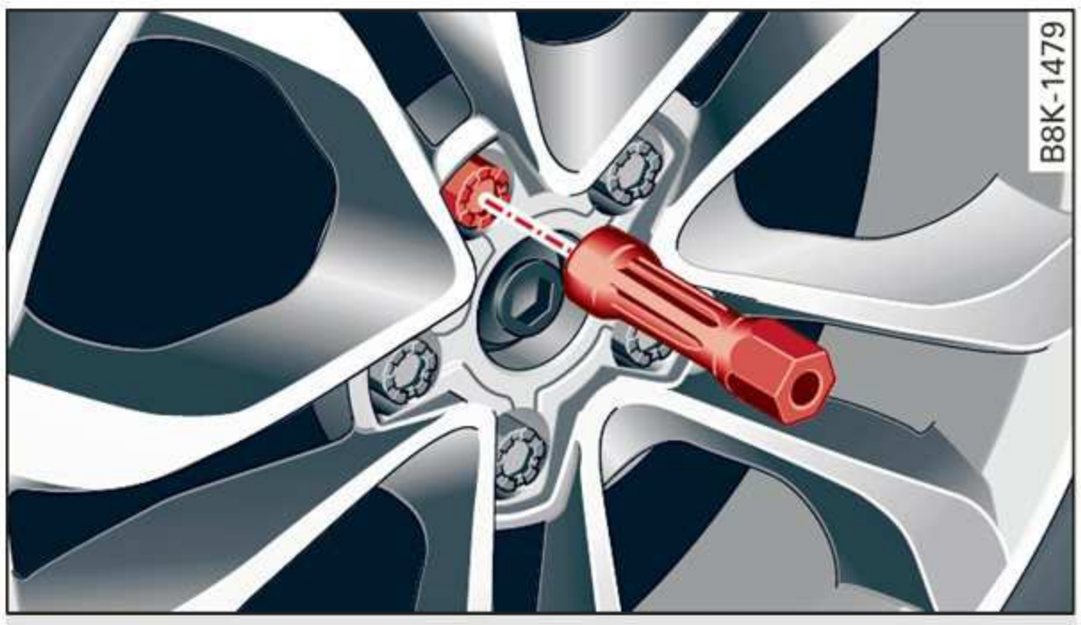


Fig. 274 Wheel: internal hex socket to turn the wheel bolts



Fig. 275 Wheel: alignment pin in the top hole

Removing a wheel

- ▸ Remove the top wheel bolt completely using the hex socket in the screwdriver handle from the vehicle tool kit ⇨ *fig. 274* and place it on a clean surface.
- ▸ Then install the alignment pin from the vehicle tool kit in the empty wheel bolt hole by hand ⇨ *fig. 275*.
- ▸ Remove the rest of the wheel bolts.
- ▸ Remove the wheel ⇨ (!). The alignment pin remains in the hole while doing this.

Installing a wheel

Read the directions on ⇨ *page 354* when installing unidirectional tires.

- ▸ Slide the wheel on over the alignment pin ⇨ (!).
- ▸ Install the wheel bolts and tighten them gently using the hex socket.
- ▸ Remove the alignment pin and tighten the remaining wheel bolt.
- ▸ Carefully lower the vehicle using the vehicle jack*.
- ▸ Tighten the wheel bolts in a diagonal pattern using the wheel wrench.

The wheel bolts must be clean and loosen and tighten easily. Check the contact surfaces for the wheel and hub. Contaminants on these surfaces must be removed before installing the wheel.

WARNING

Never use the hex socket in the screwdriver handle or the hex socket wrench with the ratchet to loosen or tighten the wheel bolts. This increases the risk of an accident, because you will not be able to achieve the correct tightening specification. ▶

Note

When removing or installing the wheel, the rim could hit the brake rotor and damage the rotor. Work carefully and have a second person help you.

Tips

– When mounting tires with **unidirectional tread design** make sure the tread pattern is pointed the right way ⇨ *page 354*.
– The wheel bolts should be clean and easy to turn. Check for dirt and corrosion on the mating surfaces of both the wheel and the hub. Remove all dirt from these surfaces before remounting the wheel.

Unidirectional tires

A unidirectional tire profile is identified by arrows on the tire sidewall that point in the running direction. You must always maintain the specified running direction. This is necessary to ensure the tire's optimum performance in regard to adhesion, running noise, and friction, and to reduce the risk of hydroplaning.

To benefit fully from the advantages of the unidirectional tire design, you should replace faulty tires as soon as possible and restore the correct running direction on all of the tires.

Finishing

- ▸ Reinstall the caps on the wheel bolts if necessary.
- ▸ Store the vehicle tool kit in its designated place.
- ▸ If the removed wheel does not fit in the spare wheel well, store it securely in the luggage compartment ⇨ *page 64*.
- ▸ Check the tire pressure on the installed wheel as soon as possible.
- ▸ Correct the tire pressure and store it in the Infotainment system ⇨ *page 341*.
- ▸ The wheel bolt tightening specification must be 90 ft lbs (120 Nm). Have it checked it as soon as possible with a torque wrench. Drive carefully until then.
- ▸ Have the faulty wheel replaced as quickly as possible.

Tips

– If you notice that the wheel bolts are corroded and difficult to turn while changing a tire, they should be replaced before you check the tightening torque.
– Drive at reduced speed until you have the tightening torques checked.

Notes on wheel changing

Please read the information ⇨ *page 329* if you are going to use a replacement tire which is different from the tires on your vehicle.

After you change a tire:

– **Check the tire pressure on the replacement tire immediately after installation.**
– **Have the wheel bolt tightening torque checked with a torque wrench as soon as possible by your authorized Audi dealer or qualified workshop.**
– **With steel and alloy wheel rims, the wheel bolts are correctly tightened at a torque of 90 ft lbs (120 Nm).**
– **If you notice that the wheel bolts are corroded and difficult to turn while changing a tire, they should be replaced before you check the tightening torque.**
– **Replace the flat tire with a new one and have it installed on your vehicle as soon as possible. Remount the wheel cover.**

Until then, drive with extra care and at reduced speeds.

WARNING

– If you are going to equip your vehicle with tires or rims which differ from those which were factory installed, then be sure to read the information ⇨ *page 329*.
– Always make sure the damaged wheel or even a flat tire and the jack* and tool kit are properly secured in the luggage compartment and are not loose in the passenger compartment.

– In an accident or sudden maneuver they could fly forward, injuring anyone in the vehicle.
– Always store damaged wheel, jack* and tools securely in the luggage compartment. Otherwise, in an accident or sudden maneuver they could fly forward, causing injury to passengers in the vehicle.

Space-saving spare tire

Applies to: vehicles with space-saving spare tire (compact spare tire)

The spare tire is intended for short-term use only. Have the damaged tire checked and replaced if necessary by an authorized Audi dealer or authorized Audi Service Facility as soon as possible.

There are some restrictions on the use of the compact spare tire. The compact spare tire has been designed specifically for your type of vehicle. Do not replace it with the spare tire from another type of vehicle.

The compact spare tire is located in the luggage compartment under the cargo floor cover ⇨ *page 348*.

The tire pressure must be 61 PSI (420 kPA).

Snow chains

For technical reasons, the use of snow chains on the compact spare tire is not permitted.

If you have to drive with snow chains and a front tire fails, mount the spare tire in place of a rear tire. Install the snow chains on the rear tire that you removed, and install that in place of the front tire that failed.

WARNING

– After installing a spare tire, the tire pressure must be checked as soon as possible.
– Do not drive faster than 50 mph (80 km/h) with a compact spare tire. Driving faster than that increases the risk of an accident.
– To reduce the risk of an accident, avoid full-throttle acceleration, heavy braking, and fast cornering with the compact spare tire.
– To reduce the risk of an accident, never drive with more than one compact spare tire.
– Normal summer or winter tires must not be mounted on the compact spare wheel rim.

Collapsible spare tire

Applies to: vehicles with collapsible spare tire

The collapsible spare tire is intended for short-term use only. Have the damaged tire checked and replaced if necessary by an authorized Audi dealer or authorized Audi Service Facility as soon as possible.

There are some restrictions on the use of the collapsible spare tire. The collapsible spare tire has been designed specifically for your type of vehicle. Do not replace it with the collapsible spare tire from another type of vehicle.

The collapsible spare tire is located in the luggage compartment under the cargo floor cover.

Requirement: the vehicle tool kit ⇨ *page 348* and the compressor must be laid out.

Removing

▸ Remove the cargo floor cover ⇨ *page 348, fig. 266*.
▸ Turn the handwheel counter-clockwise and remove it.
▸ Remove the collapsible spare tire.

You must inflate the collapsible spare tire beforehand in order to use it.

Inflating

▸ Remove the valve cap from the collapsible spare tire.
▸ Tighten the compressor hose on the collapsible spare tire valve.
▸ Connect the compressor hose to a vehicle socket and switch it on.
▸ Let the compressor run until the specified value on the tire pressure sticker is reached ⇨ *page 332, fig. 265* ⇨ (!).
▸ Screw the valve cap back onto the valve.

Returning to storage

▸ Remove the valve cap to drain the air. ▶

8W0012721BG

- ▸ Wait several hours before placing the collapsible spare tire in the spare wheel well. Only then will it fold down completely so that you can store it securely.
- ▸ Then screw the valve cap back onto the valve.
- ▸ Secure the collapsible spare tire with the handwheel.
- ▸ Fold the cargo floor cover back into place.

Snow chains

Using snow chains on the collapsible spare tire is not permitted for technical reasons.

If you have to drive with snow chains and a front tire fails, mount the collapsible spare tire in place of a rear tire. Install the snow chains on the rear tire that you removed, and install that in place of the front tire that failed.

WARNING

- Only use the collapsible spare tire in emergencies and drive very carefully, especially if it is more than six years old.
- The compressor and the hose can become very hot during operation which increases the risk of burn injuries.
- After installing a collapsible spare tire, the tire pressure must be checked as quickly as possible to reduce the risk of an accident.
- Do not drive faster than 50 mph (80 km/h) with the collapsible spare tire. Driving faster than that increases the risk of an accident.
- Avoid full-throttle acceleration, heavy braking, and fast cornering with the collapsible spare tire, because this increases the risk of an accident.
- Never drive using more than one collapsible spare tire, because this increases the risk of an accident.
- Normal tires or winter tires must not be mounted on the collapsible spare tire rim.

Note

The compressor must be switched off after 12 minutes at the most to reduce the risk of overheating. Let the compressor cool down for several minutes before using it again.

Fuses and bulbs

Fuses

Replacing fuses

A fuse that has blown will have metal strips that have burned through.

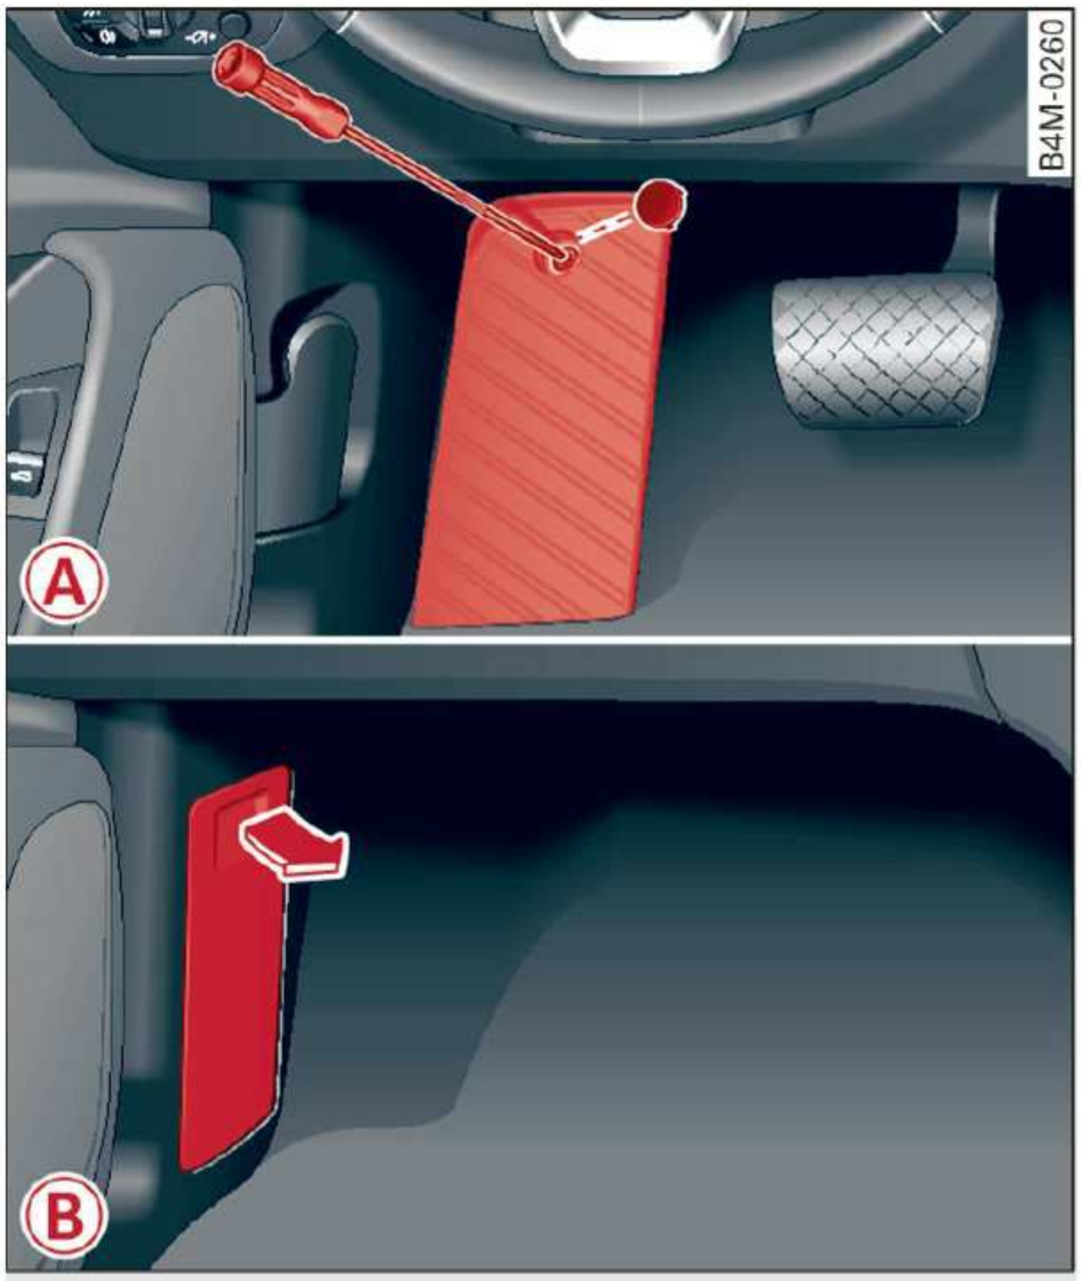


Fig. 276 Driver's side footwell (left-hand drive vehicles): footrest Ⓐ, front passenger's footwell (right-hand drive vehicles): cover Ⓑ

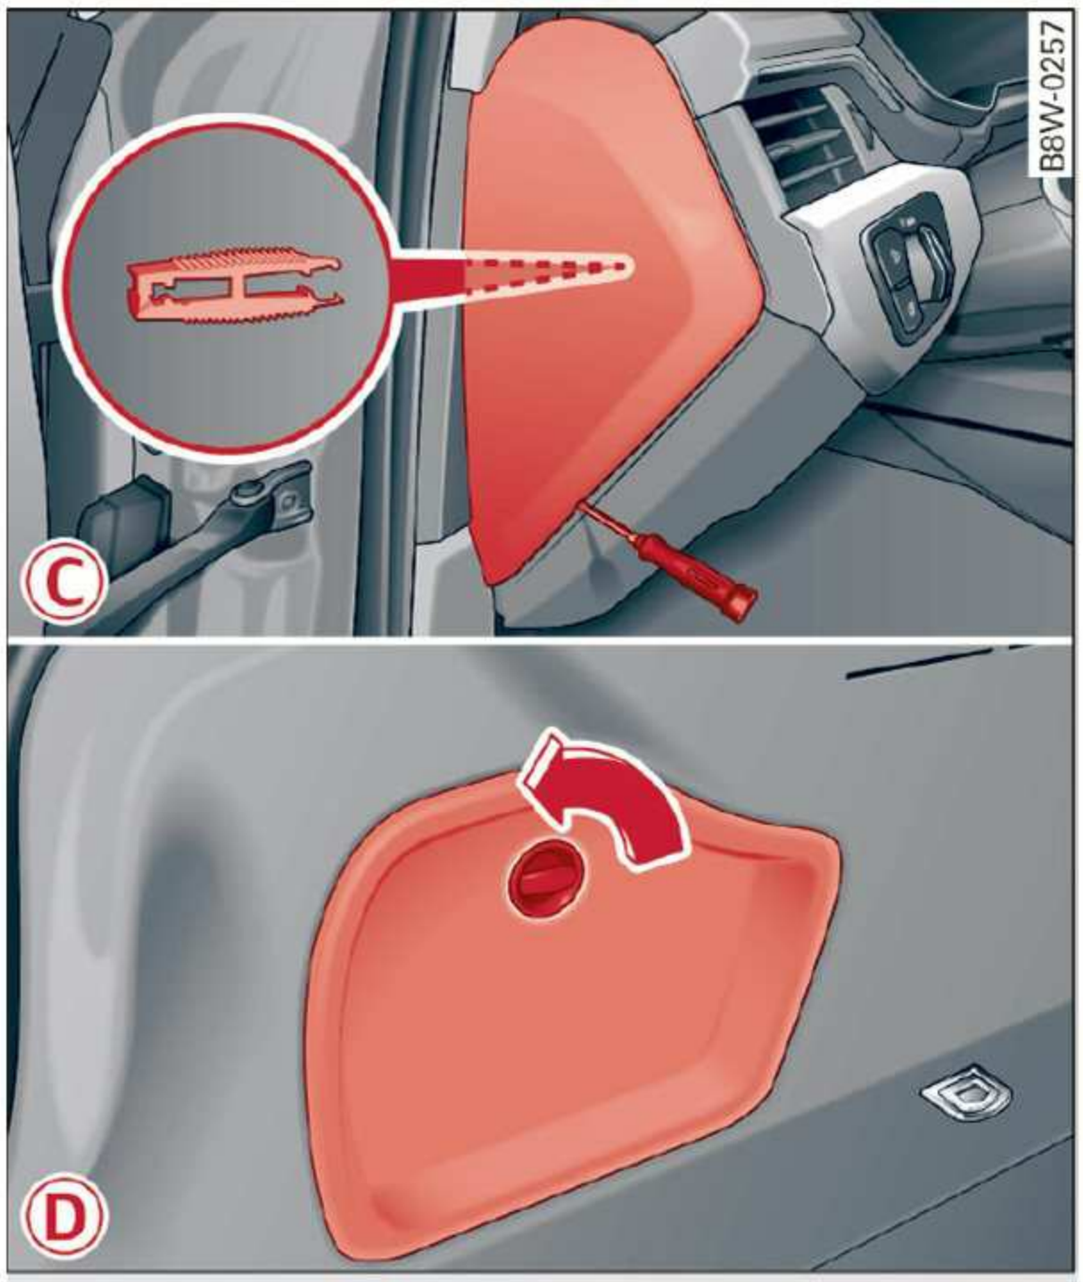


Fig. 277 Driver's side cockpit (left-hand drive/right-hand drive vehicles): cover Ⓒ, left side of luggage compartment: cover Ⓓ

The fuses are located in the footwell under the foot rest (left-hand drive vehicle) Ⓐ or behind the cover (right-hand drive vehicle) Ⓑ. Additional fuses are located on the front side of the cockpit (driver's side) Ⓒ and under the left cover in the luggage compartment Ⓓ.

- ▸ Switch the ignition and all electrical equipment off.
- ▸ Check the table that follows to see which fuse belongs to the equipment.
- ▸ Remove the screwdriver and the reversible Torx bit from the vehicle tool kit ⇨ *page 348*.
- ▸ Remove the footrest or the corresponding cover.
- ▸ Remove the colored plastic clip from the fuse panel, if necessary ⇨ *page 358, fig. 278*. You can dispose of the plastic clip.
- ▸ Remove the clip from the rear side of the cover Ⓒ.
- ▸ Remove the fuse using the clip.
- ▸ Replace the blown fuse only with a fuse that has the same current rating.
- ▸ Reattach the footrest or the cover. ▶

Fuse color identification

Color	Current rating in amps
Black	1
Purple	3
Light brown	5
Brown	7.5
Red	10
Blue	15
Yellow	20
White or transparent	25
Green	30
Orange	40

WARNING

Do not repair fuses and never replace a blown fuse with one that has a higher amp rating. This can cause damage to the electrical system and increases the risk of fire.

Note

If a new fuse burns out again shortly after you have installed it, have the electrical system checked as soon as possible by an authorized Audi dealer or authorized Audi Service Facility.

Tips

- The following table does not list fuse locations that are not used.
- Some of the equipment listed in the following tables applies only to certain model versions or certain optional equipment.

Fuse assignment - driver's/front passenger's footwell

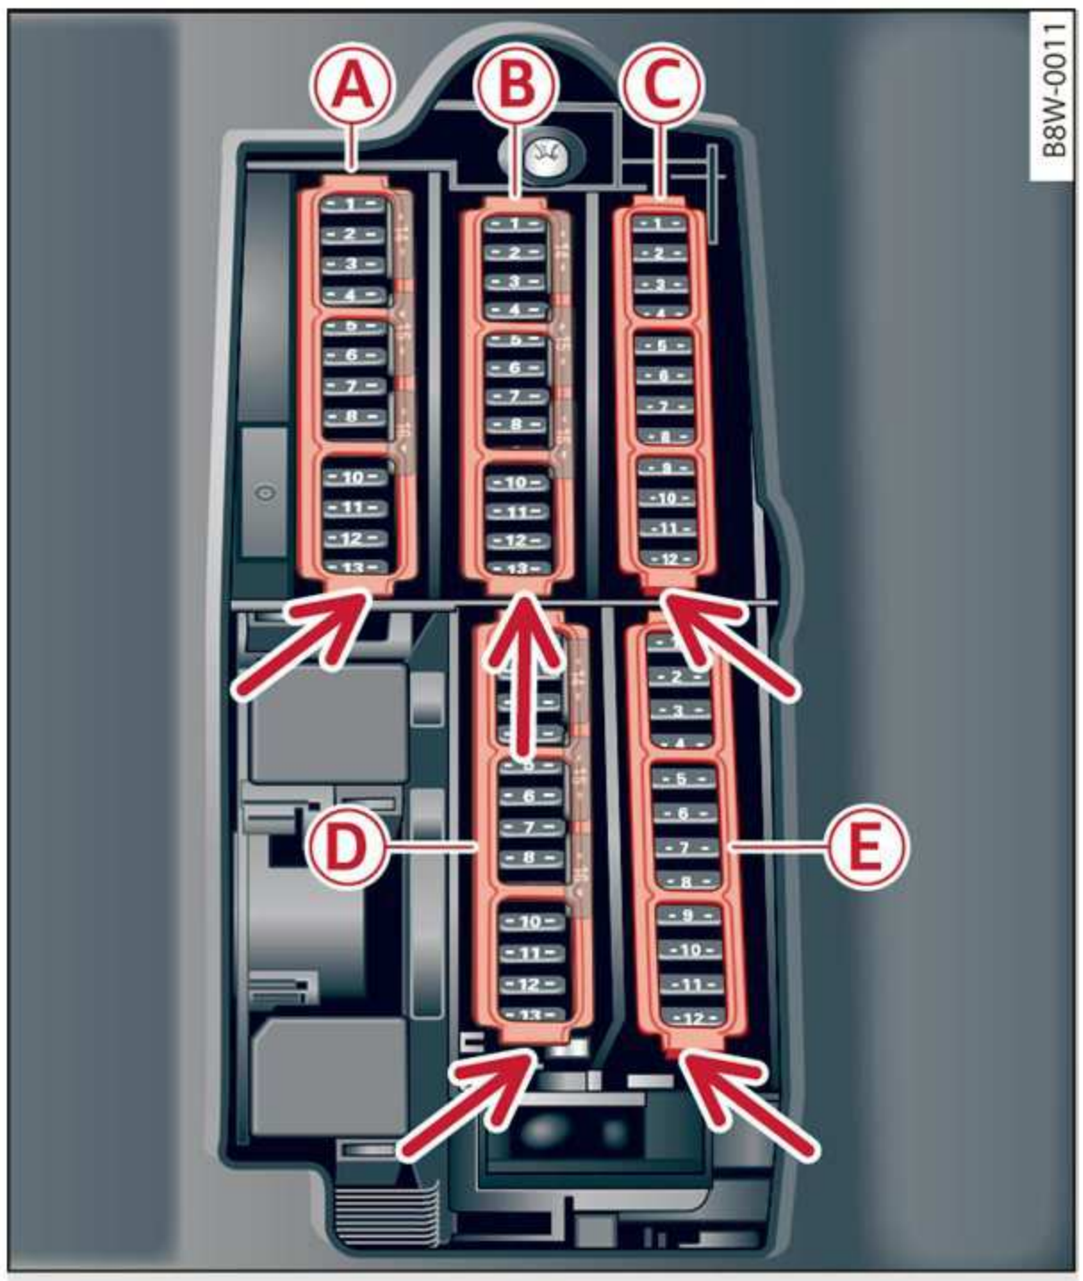


Fig. 278 Driver's footwell (left-hand drive vehicle): fuse panel with plastic clip

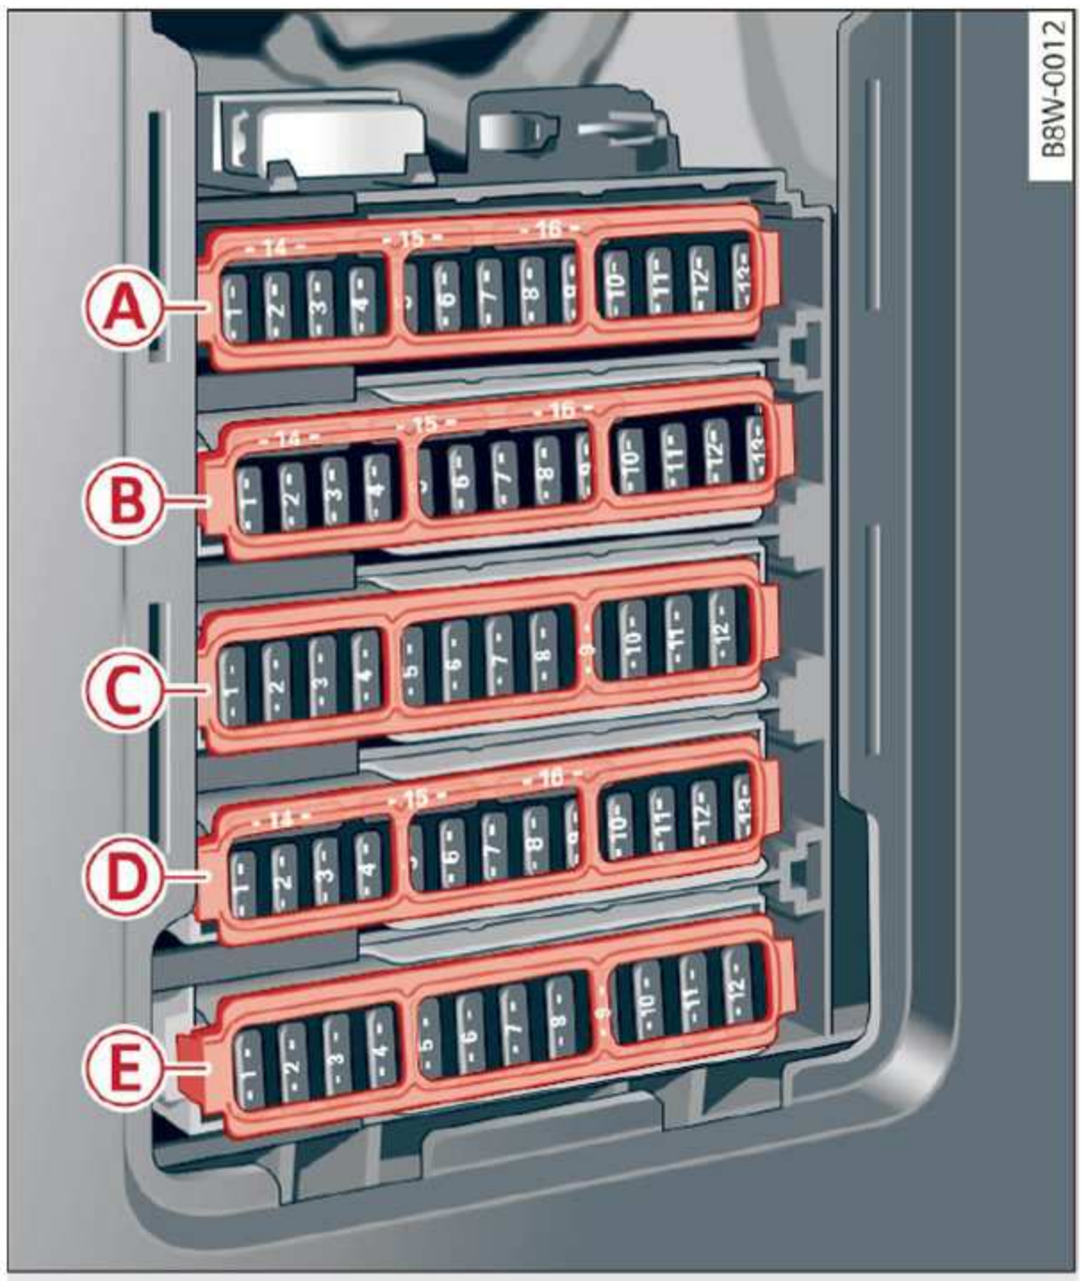


Fig. 279 Front passenger's footwell (right-hand drive vehicle): fuse panel with plastic clip

Fuse panel Ⓐ (brown)	
No.	**Equipment**
2	Mass airflow sensor, camshaft adjustment, charge air cooler pump
3	Exhaust doors, fuel injectors, radiator inlet, crankshaft housing heater
4	Vacuum pump, hot water pump, particulate sensor, biodiesel sensor, exhaust doors
5	Brake light sensor
6	Engine valves, camshaft adjustment
7	Heated oxygen sensor, mass airflow sensor
8	Water pump, high pressure pump, high pressure regulator valve
9	Hot water pump
10	Oil pressure sensor, oil temperature sensor
11	Clutch pedal position sensor, engine start
12	Engine valves
13	Radiator fan
14	Fuel injectors, engine control module
15	Ignition coils, heated oxygen sensors
16	Fuel pump

Fuse panel Ⓑ (red)	
No.	**Equipment**
1	Anti-theft alarm system
2	Engine control module
3	Lumbar support
4	Automatic transmission selector mechanism
5	Horn
6	Electromechanical parking brake
7	Gateway control module
8	Interior headliner lights
9	Emergency call system
10	Airbag control module
11	Electronic Stabilization Control (ESC)
12	Diagnostic connector, light/rain sensor
13	Climate control system
14	Right front door control module
15	A/C compressor

Fuse panel Ⓒ (black)	
No.	**Equipment**
1	Front seat heating
2	Windshield wipers
3	Left headlight electronics
4	Panoramic glass roof / sliding/tilting sunroof
5	Left front door control module
6	Sockets
7	Right rear door control module
8	All wheel drive
9	Right headlight electronics
10	Windshield washer system/headlight washer system
11	Left rear door control module

Fuse panel Ⓓ (black)	
No.	**Equipment**
1	Seat ventilation, rearview mirror, climate control system, rear climate control system controls, windshield defogger
2	Gateway, climate control system
3	Sound actuator/exhaust sound tuning
4	Clutch pedal position sensor
5	Engine start
7	Rear USB charging port
8	Garage door opener
9	Adaptive cruise control
10	Exterior sound
11	Video camera
12	Matrix LED headlight/right LED headlight
13	Matrix LED headlight/left LED headlight
14	Rear window wiper
16	Rear Seat Entertainment preparation

Fuse panel Ⓔ (red)	
No.	**Equipment**
1	Ignition coils
5	Engine mount
6	Automatic transmission
7	Instrument panel
8	Climate control system (blower)

▶

8W0012721BG

Fuse panel Ⓔ (red)	
10	Dynamic steering
11	Engine start

Fuse assignment - Driver's side of the cockpit

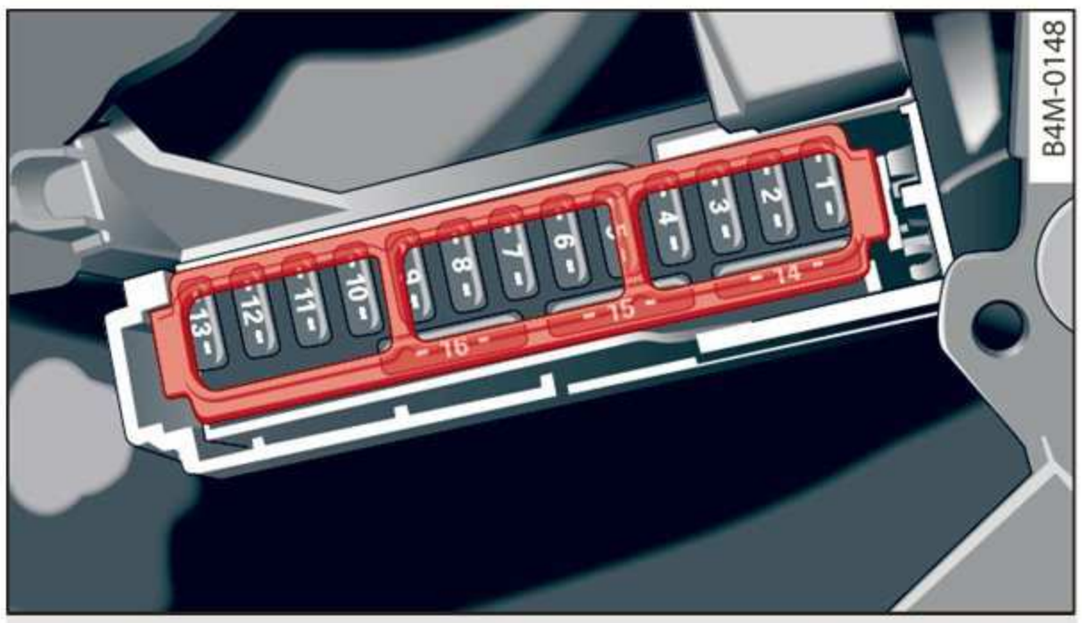


Fig. 280 Driver side cockpit: fuse panel with plastic bracket

Fuse panel	
No.	**Equipment**
1	Vehicle opening/start (NFC)
2	Telephone
4	Head-up display
5	Audi music interface, USB charging port
6	Front climate control system controls
7	Steering column lock
8	Infotainment system display
9	Instrument cluster
10	Infotainment unit
11	Light switch, switch panel
12	Steering column electronics
14	Infotainment system
16	Steering wheel heating

Fuse assignment - Left side of the luggage compartment

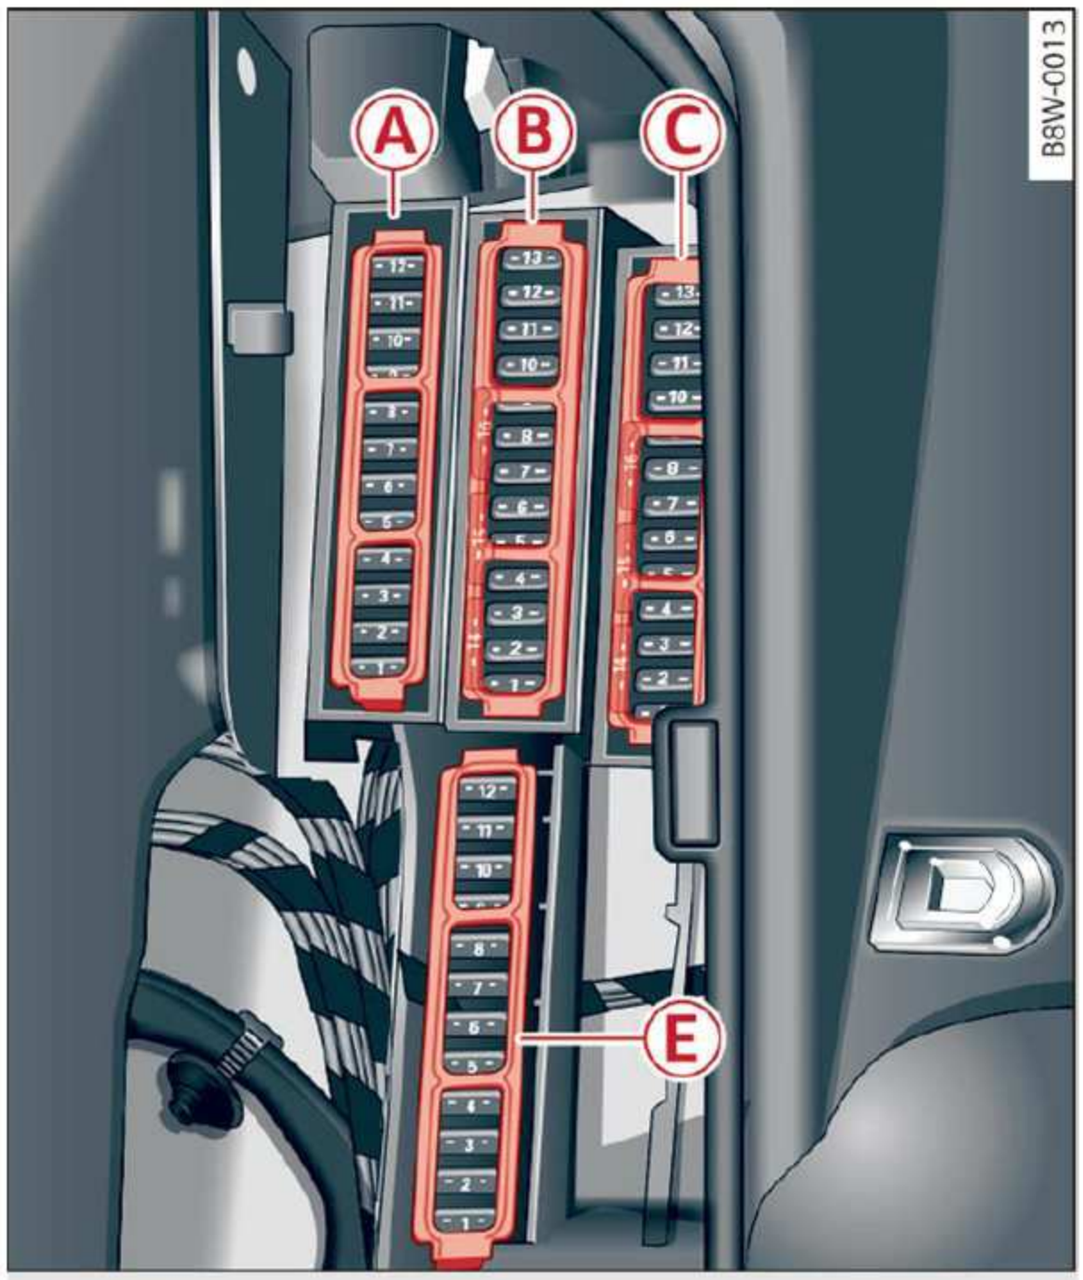


Fig. 281 Left side of the luggage compartment: fuse panel with plastic clip

Fuse panel Ⓐ (black)	
No.	**Equipment**
2	Windshield defroster
3	Windshield defroster
5	Suspension control
6	Automatic transmission
7	Rear window defogger
8	Rear seat heating
9	Left tail lights
10	Left safety belt tensioner
11	Central locking system
12	Luggage compartment lid

Fuse panel Ⓑ (red)	
No.	**Equipment**
	Not assigned

Fuse panel Ⓒ (brown)	
No.	**Equipment**
2	Telephone
3	Lumbar support

Fuse panel Ⓒ (brown)	
4	Audi side assist
5	Rear Seat Entertainment preparation
7	Vehicle opening/start (NFC)
8	Smart module (tank)
11	Auxiliary battery control module
12	Garage door opener
13	Rearview camera, peripheral cameras
14	Right tail lights
16	Right safety belt tensioner

Fuse panel Ⓔ (red)	
No.	**Equipment**
2	Sound-amplifier
3	AdBlue heating
5	Trailer hitch (right light)
7	Trailer hitch
8	Trailer hitch (left light)
9	Trailer hitch (socket)
10	Sport differential
11	AdBlue heating

Bulbs

Replacing light bulbs

For your safety, we recommend that you have your authorized Audi dealer replace any bulbs for you.

It is becoming increasingly more and more difficult to replace vehicle light bulbs since in many cases, other parts of the car must first be removed before you are able to get to the bulb. This applies especially to the light bulbs in the front of your car which you can only reach through the engine compartment.

Sheet metal and bulb holders can have sharp edges that can cause serious cuts, parts must be correctly taken apart and then properly put back together to help prevent breakage of parts and long term damage from water that can enter housings that have not been properly resealed.

For your safety, we recommend that you have your authorized Audi dealer replace any bulbs for you, since your dealer has the proper tools, the correct bulbs and the expertise.

Gas discharge lamps (Xenon lights):

Due to the high electrical voltage, have the bulbs replaced by a qualified technician. Headlights with Xenon light are identified by the high voltage sticker.

LED headlights*

LED headlights require no maintenance. Please contact your authorized Audi dealer if a bulb needs to be replaced.

WARNING

Changing Xenon lamps without the necessary equipment can cause serious personal injury.

- Bulbs are pressurized and can explode when being changed. Potential risk of injury!
- On vehicles equipped with gas discharge bulbs (Xenon light) life-threatening injuries can result from improper handling of the high-voltage portions of such lamps!
- Only your authorized Audi dealer or qualified workshop should change the bulbs in gas discharge lamps. There are parts with sharp edges on the openings and on the bulb holders that can cause serious cuts. If you are uncertain about what to do, have the work performed by an authorized Audi dealer or qualified workshop. Serious personal injury may result from improperly performed work.

Tips

- If you still prefer to replace the light bulbs yourself, be aware that the engine compartment is a hazardous area to work in ⇨ ⚠ *in Working in the engine compartment on page 309*.
- It is best to ask your authorized Audi dealer whenever you want to change a bulb.

8W0012721BG

Emergency situations

General

This chapter is intended for trained emergency crews and working personnel who have the necessary tools and equipment to perform these operations.

Starting by pushing or towing

Note

Vehicles with an automatic transmission cannot be started by pushing or towing.

Starting with jumper cables

If necessary, the engine can be started by connecting it to the battery of another vehicle.

If the engine should fail to start because of a discharged or weak battery, the battery can be connected to the battery of *another* vehicle, using a **pair of jumper cables** to start the engine.

Jumper cables

Use *only* jumper cables of sufficiently large **cross section** to carry the starter current safely. Refer to the manufacturer's specifications.

Use only jumper cables with *insulated* terminal clamps which are distinctly marked:

plus (+) cable in most cases colored **red**

minus (-) cable in most cases colored **black**.

WARNING

Batteries contain electricity, acid, and gas. Any of these can cause very serious or fatal injury. Follow the instructions below for safe handling of your vehicle's battery.

- Always shield your eyes and avoid leaning over the battery whenever possible.
- A dead battery can freeze at temperatures around 32 °F (0 °C). If the vehicle battery is frozen, you must thaw it before connecting the jump start cables. If you do not, this increases the risk of an explosion and chemical burns. After jump starting the vehicle, drive to an authorized Audi dealer or authorized Audi Service Facility immediately to have the vehicle battery checked.
- Do not allow battery acid to contact eyes or skin. Flush any contacted area with water immediately.
- Improper use of a booster battery to start a vehicle may cause an explosion.
- Vehicle batteries generate explosive gases. Keep sparks, flame and lighted cigarettes away from batteries.
- Do not try to jump start any vehicle with a low acid level in the battery.
- The voltage of the booster battery must also have a 12-Volt rating. The capacity (Ah) of the booster battery should not be lower than that of the discharged battery. Use of batteries of different voltage or substantially different "Ah" rating may cause an explosion and personal injury.
- Never charge a frozen battery. Gas trapped in the ice may cause an explosion.
- Never charge or use a battery that has been frozen. The battery case may have be weakened.
- Use of batteries of different voltage or substantially different capacity (Ah) rating may cause an explosion and injury. The capacity (Ah) of the booster battery should not be lower than that of the discharged battery.
- Before you check anything in the engine compartment, always read and heed all WARNINGS ⇨ *page 309*.

Note

- Applying a higher voltage booster battery will cause expensive damage to sensitive electronic components, such as control units, relays, radio, etc.
- There must be no electrical contact between the vehicles as otherwise current could already start to flow as soon as the positive (+) terminals are connected. ▶

Tips

The discharged battery must be properly connected to the vehicle's electrical system. When jump starting or charging the battery, never connect the negative ground cable to the battery negative post because the battery manager system must be able to detect the battery's state of charge. Always connect the negative ground cable to the negative ground post of the battery manager control unit.

Using the jump start cable

Both jump start cables must be connected in the correct order.



Fig. 282 Engine compartment: connectors for jump start cables and a charger

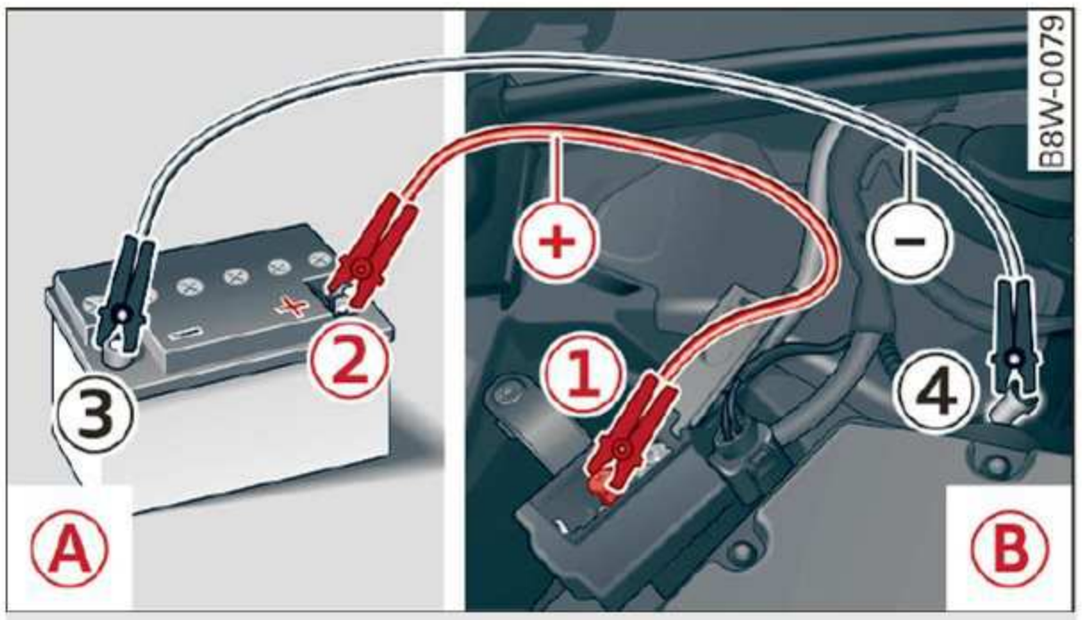


Fig. 283 Jump starting using a battery in another vehicle: Ⓐ – providing current, Ⓑ – drained

Please note that the connecting process for the jump start cables described below is intended for when your vehicle is being jump started.

Vehicle with drained vehicle battery

- ▸ Set the parking brake and select the “P” (Park) selector lever position*.
- ▸ Switch the ignition and all electrical equipment off.

Connecting the positive cable (red) to the positive terminal

- ▸ Open the red cover on the positive terminal ⇨ *fig. 282*.

1. Secure one end of the positive cable (red) to the jump start pin ⇨ *fig. 283* ① (pin under the red cover = “positive”) on the vehicle that needs to be started Ⓑ.
2. Secure the other end of the positive cable (red) to the positive terminal ② on the battery providing the current Ⓐ.

Connecting the negative cable (black) to the negative terminal

3. Secure one end of the negative cable (black) to the negative terminal ③ on the battery that is providing the current Ⓐ.
4. Secure the other end of the negative cable (black) to the jump start pin ④ (hex head pin = “negative”) on the vehicle that needs to be started Ⓑ.

Starting the engine

- ▸ Start the engine in the vehicle providing the jump start Ⓐ and let it run at idle.
- ▸ Now start the engine on the vehicle with the drained battery Ⓑ.
- ▸ If the engine does not start, stop the starting procedure after 10 seconds and then repeat it after approximately 30 seconds.
- ▸ Once the engine with the drained vehicle battery has been started, remove the cables in the reverse order from the way they were installed.
- ▸ Close the red cover on the positive terminal.

The battery is vented to the outside to prevent gases from entering the vehicle interior. Make sure that the jumper clamps are well connected with their *metal parts in full contact* with the battery terminals.

WARNING

To avoid serious personal injury and damage to the vehicle, heed all warnings and instructions of the jumper cable manufacturer. If in doubt, call for road service.

– Jumper cables must be long enough so that the vehicles do not touch.
– When connecting jumper cables, make sure that they cannot get caught in any moving parts in the engine compartment.
– Do not bend over the batteries - danger of chemical burns!
– The battery cell locking screws must be tightened securely.
– Before you check anything in the engine compartment, always read and heed all WARNINGS ⇨ *page 309*.

Note

Improper hook-up of jumper cables can ruin the generator.

– Always connect POSITIVE (+) to POSITIVE (+), and NEGATIVE (–) to NEGATIVE (–) ground post of the battery manager control unit.
– Check that all screw plugs on the battery cells are screwed in firmly. If not, tighten plugs prior to connecting clamp on negative battery terminal.
– Please note that the procedure for connecting a jumper cable as described above applies specifically to the case of your vehicle being jump started. When you are giving a jump start to another vehicle, do *not* connect the negative **(–)** cable to the negative **(–)** terminal on the discharged battery ④ ⇨ *fig. 283*. Instead, securely connect the negative **(–)** cable to either a solid metal component that is firmly bolted to the engine block or to the engine block itself. If the battery that is being charged does not vent to the outside, escaping battery gas could ignite and explode!

Towing with a tow truck

General hints

Your Audi requires special handling for towing.

The following information is to be used by commercial tow truck operators who know how to operate their equipment safely.

– **Never tow your Audi, towing will cause damage to the engine and transmission.**
– **Never wrap the safety chains or winch cables around the brake lines.**
– **To prevent unnecessary damage, your Audi must be transported with a flatbed truck.**
– **To load the vehicle on to the flatbed, use the towing loop found in the vehicle tools and attach to the front or rear anchorage** ⇨ *page 364* and ⇨ *page 365*.

WARNING

A vehicle being towed is not safe for passengers. Never allow anyone to ride in a vehicle being towed, for any reason.

Front towing loop

Only install the front towing loop when it is needed.

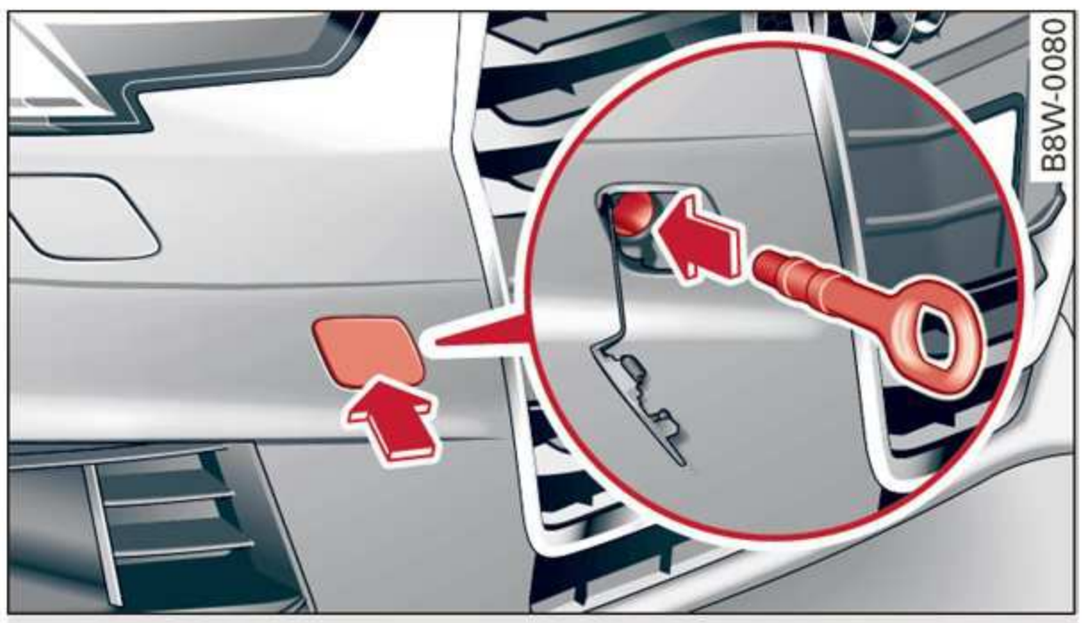


Fig. 284 Front bumper: installing the towing loop

The threaded opening for the towing loop is located on the right side of the front bumper.

► Remove the towing loop from the vehicle tool kit ⇨ *page 348*.
► Press the cap inward with brief, strong pressure ⇨ *fig. 284*. The cap will loosen from the bumper.
► Tighten the towing loop in the threaded opening until it stops and then tighten it with a wheel wrench.
► After using, place the towing loop back in the vehicle tool kit.

WARNING

If the towing loop is not tightened until it stops when installing, the threads may be ▶

pulled out when towing the vehicle and result in an accident.

Rear towing loop

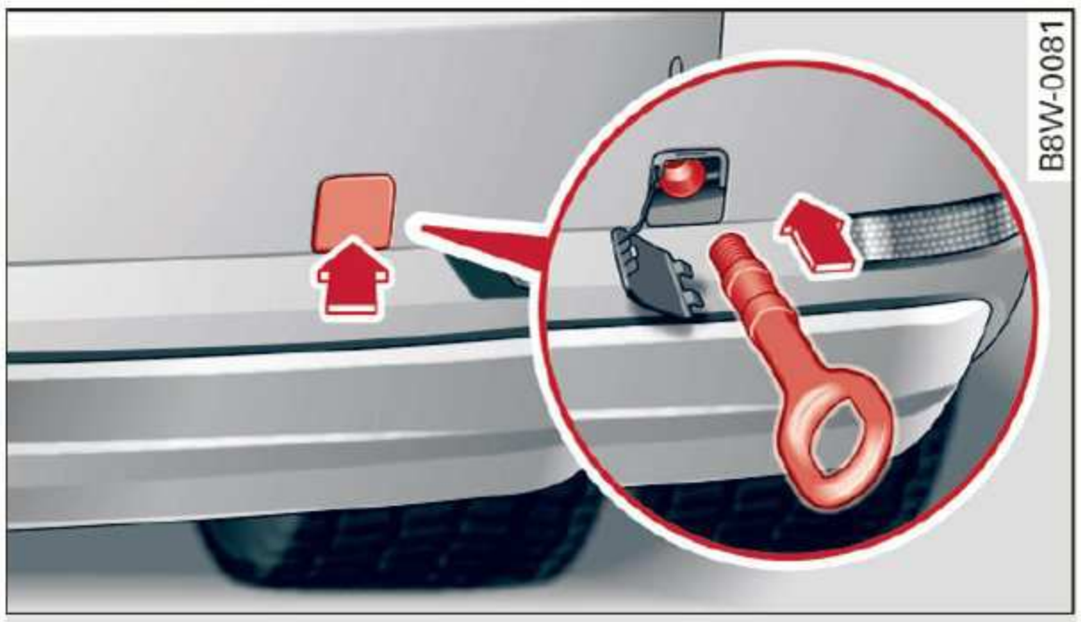


Fig. 285 Rear bumper: installing the towing loop

The threaded opening for the towing loop is located on the right rear of the bumper.

- ► Remove the towing loop from the vehicle tool kit ⇨ *page 348*.
- ► Press the cap inward with brief, strong pressure ⇨ *fig. 285*. The cap will loosen from the bumper.
- ► Tighten the towing loop in the threaded opening until it stops and then tighten it with a wheel wrench.
- ► After using, place the towing loop back in the vehicle tool kit.

WARNING

If the towing loop is not tightened until it stops when installing, the threads may be pulled out when towing the vehicle and result in an accident.

Loading the vehicle onto a flatbed truck



Fig. 286 Vehicle on flatbed truck

Front hook up

- ► Align the vehicle with the centerline of the car carrier ramp.
- ► Attach the winch hook to the front towline eye previously installed.

Rear hook up

- ► Align the vehicle with the centerline of the car carrier ramp.
- ► Attach the winch hook to the rear towline eye previously installed.

Tips

Check carefully to make sure the hook-up is secure before moving the car up the flatbed truck ramp.

Raising the vehicle

Lifting with workshop hoist and with floor jack

The vehicle may only be lifted at the lifting points illustrated.

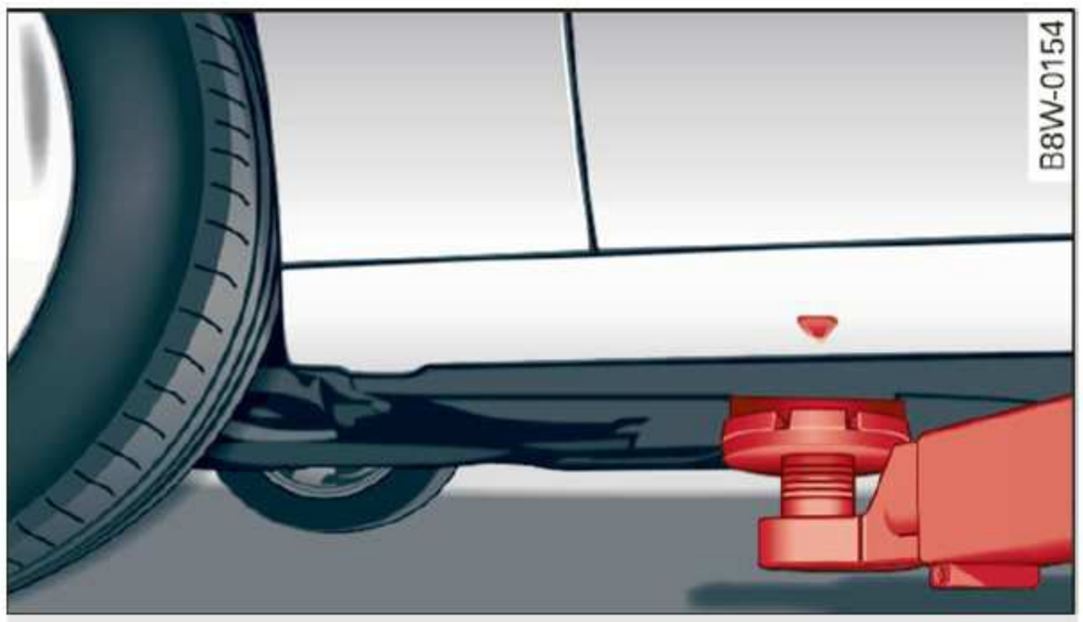


Fig. 287 Front lifting point

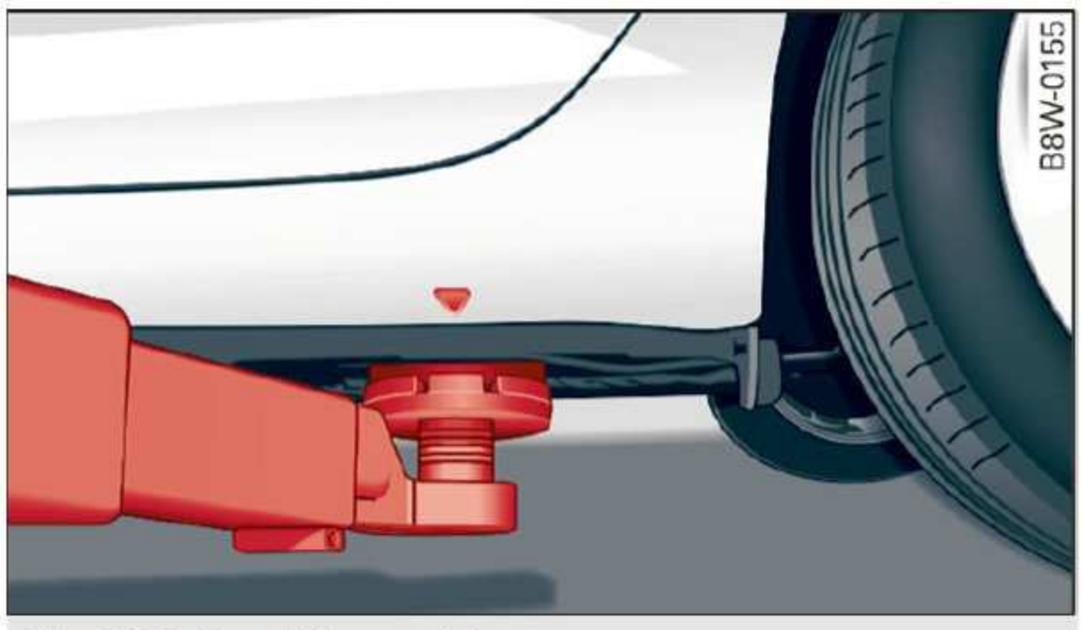


Fig. 288 Rear lifting point

- ► Read and heed WARNING ⇨ ⚠.
- ► Locate lifting points ⇨ *fig. 287* and ⇨ *fig. 288*. ▶

- ▸ Adjust lifting arms of workshop hoist or floor jack to match vehicle lifting points.
- ▸ Insert a rubber pad between the floor jack/ workshop hoist and the lifting points.

If you must lift your vehicle with a floor jack to work underneath, be sure the vehicle is safely supported on stands intended for this purpose.

Front lifting point

The lifting point is located on the floor pan reinforcement about at the same level as the jack mounting point ⇨ *fig. 287*. **Do not lift the vehicle at the vertical sill reinforcement.**

Rear lifting point

The lifting point is located on the vertical reinforcement of the lower sill for the onboard jack ⇨ *fig. 288*.

Lifting with vehicle jack

Refer to ⇨ *page 352*.

WARNING

- To reduce the risk of serious injury and vehicle damage.
  - Always lift the vehicle only at the special workshop hoist and floor jack lift points illustrated ⇨ *fig. 287* and ⇨ *fig. 288*.
  - Failure to lift the vehicle at these points could cause the vehicle to tilt or fall from a lift if there is a change in vehicle weight distribution and balance. This might happen, for example, when heavy components such as the engine block or transmission are removed.
- When removing heavy components like these, anchor vehicle to hoist or add corresponding weights to maintain the center of gravity. Otherwise, the vehicle might tilt or slip off the hoist, causing serious personal injury.

Note

- Be aware of the following points before lifting the vehicle:
  - **The vehicle should never be lifted or jacked up from underneath the engine oil pan, the transmission housing, the front or rear axle or the body side members. This could lead to serious damage.**
  - **To avoid damage to the underbody or chassis frame, a rubber pad must be inserted between the floor jack and the lift points.**
  - **Before driving over a workshop hoist, check that the vehicle weight does not exceed the permissible lifting capacity of the hoist.**
  - **Before driving over a workshop hoist, ensure that there is sufficient clearance between the hoist and low parts of the vehicle.**

Accessories and technical changes

Warranty

Your vehicle is covered by various warranties:

– New Vehicle Limited Warranty
– Limited Warranty Against Corrosion Perforation
– Emissions Control System Warranties: *Federal Emissions Control System Defect Warranty, Federal Emissions Performance Warranty*
– Applies to: USA models: Kansas Safety Belt Limited Warranty
– Applies to: USA models: California Emissions Control Warranties: *Short-term Emissions Defects Warranty, Long-term Emissions Defects Warranty, TZEV models Emissions Defects Warranty, California Emissions Performance Warranty*

You can find detailed information in your Warranty & Maintenance Booklet and in the California Emissions Booklet*.

Audi Literature Shop

Service information is made available as soon as possible after a model is introduced and can be ordered in the Audi Literature Shop: http://literature.audiusa.com

Driving in other countries

Government regulations in the United States and Canada require motor vehicles to comply with emissions regulations and safety standards. Therefore, vehicles that were produced for the U.S. and Canadian markets are different from vehicles produced for other countries.

If you plan to use your vehicle outside of the United States or Canada, it is possible that:

– Fuel may have a significantly lower octane rating. Unsuitable fuels can cause engine damage.
– Proper maintenance and repair work may not be possible because special service equipment, tools, or measuring devices needed for your vehicle may not be available.
– Replacement parts may not always be available.
– Navigation systems for vehicles built for the U.S.A. and Canada will not necessarily work in Europe, and may not work in other countries.

Note

Audi is not liable for damage to the vehicle resulting from these country-specific differences.

Maintenance, repairs, and technical modifications

Note the safety precautions ⇨ *page 309, Working in the engine compartment* and ⇨ *page 352, Raising the vehicle*.

General information

Due to the increasing complexity of technology in these vehicles, as well as the safety and environmental standards that apply, you can only perform a very limited amount of repairs and modifications to the vehicle yourself.

Proof of maintenance work may be required to submit a claim within the warranty period.

We recommend that you have your vehicle serviced by an authorized Audi dealer or authorized Audi Service Facility and that Audi Genuine Parts and Audi Genuine Accessories are used. This helps to ensure that your vehicle's functionality, performance, and safety are not impaired.

Maintenance and repairs

Your vehicle was designed to help keep maintenance requirements to a minimum. Some regular maintenance is required to help ensure that your vehicle runs in a safe, economical, and reliable manner. Please refer to your Warranty & Maintenance Booklet for more detailed information about vehicle maintenance.

When operating the vehicle under more extreme operating conditions, for example when outside temperatures are very low or in very dusty environments, certain maintenance should be performed between the specified intervals. ▶

8W0012721BG

Usually maintenance and repair work requires special tools, measuring devices, and other equipment that is available to trained vehicle technicians in order to help ensure that your vehicle and all of its systems operate correctly, reliably, and safely. Performing work on the vehicle incorrectly can impair the operation and reliability of your vehicle and may void one or more of your vehicle's warranties.

Technical Modifications

Interference with electronic components, their software, the wiring, and data transfer may cause malfunctions. Because of the way electronic components are interconnected, such malfunctions can also impair systems that are not directly involved. This means that you risk both a substantial reduction in the operational safety of your vehicle and increased wear of vehicle components.

Some convenience functions, such as the convenience turn signal function, individual door opening function, and displays, can be reprogrammed using special workshop equipment. If functions are reprogrammed, the information and descriptions about these functions in this Owner's Manual may no longer apply to the changed functions. Audi recommends that an authorized Audi dealer or authorized Audi Service Facility perform and verify any reprogramming procedures.

WARNING

Maintenance procedures, repairs, or technical modifications that are performed incorrectly increase the risk of an accident and can lead to serious injuries.

WARNING

The engine compartment of any motor vehicle is a potentially dangerous area and can cause serious personal injury.

- Always use extreme caution when doing any work in the engine compartment. Always follow commonly accepted safety practices and use common sense. Never risk personal injury.
- Never perform any work in the engine compartment unless you know exactly how to carry out the job and have the correct technical information and the correct tools.
- If you are uncertain about what to do, have the work performed by an authorized Audi dealer, an authorized Audi Service Facility, or another qualified workshop. Serious personal injury may result from improperly performed work.

Note

- Maintenance procedures, repairs or technical modifications that are performed incorrectly can cause damage to the vehicle, such as corrosion.
- If emergency repairs must be performed, take your vehicle to an authorized Audi dealer or authorized Audi Service Facility as soon as possible.
- Audi is not liable for damage to the vehicle resulting from failure to comply with these guidelines.

For the sake of the environment

- Regular maintenance can help protect the environment.
- Technical modifications to the vehicle can have a negative impact on fuel consumption and vehicle emissions.

For the sake of the environment

Undeployed airbag modules and pretensioners are classified as Perchlorate Material – special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate. When the vehicle or parts of the restraint system including airbag modules and safety belts with pretensioners are scrapped, all applicable laws and regulations must be observed. Your authorized Audi dealer is familiar with these requirements and we recommend that you have your dealer perform this service for you.

Tips

Because of your vehicle's aluminum body design, all service and repair procedures affecting the body should be performed by an authorized Audi dealer or authorized Audi ▶

Service Facility, who will perform the work according to Audi factory specifications. Only Audi Genuine Parts are used when Audi experts perform repair or service procedures. Failure to use Audi Genuine Parts or Audi Genuine Accessories or performing repairs incorrectly may result in severe vehicle damage, such as corrosion.

Accessories and parts

Consult with an authorized Audi dealer or authorized Audi Service Facility before purchasing accessories or replacement parts. We recommend that you have your vehicle serviced by an authorized Audi dealer or authorized Audi Service Facility and that Audi Genuine Parts and Audi Genuine Accessories are used.

Audi does not endorse the use of products and accessories that it has not evaluated, even if the product is approved by a certified testing agency or government agency.

WARNING

- Installing unapproved accessories or incorrect replacement parts can cause vehicle damage and can increase the risk of an accident.
- Never attach accessories, such as telephone holders or cup holders, to the airbag covers or within the airbag deployment zone, because this increases the risk of injury if the airbag deploys.
- Do not use a license plate bracket on the front bumper that is different from the bracket installed at the factory, and do not attach any additional brackets.

Note

A correctly-installed exterior antenna is required for operating radio equipment in the vehicle. Otherwise, the increased electromagnetic waves can cause malfunctions in the vehicle. Observe the regulations in the country where the vehicle is being operated and the instructions from the radio equipment manufacturer.

Reporting Safety Defects

Applicable to U.S.A.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying

Audi of America, Inc.
2200 Ferdinand Porsche Drive
Herndon, VA 20171

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Audi of America, Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1–888–327–4236 (TTY: 1–800–424–9153); go to http://www.safercar.gov; ▶

8W0012721BG

or write to:

Administrator NHTSA
1200 New Jersey Ave.,
S.E. West Building
Washington, DC
20590.

You can also obtain other information about motor vehicle safety from http://www.safercar.gov.

Applicable to Canada

If you live in Canada and you believe that your vehicle has a defect that could cause a crash, injury or death, you should immediately inform Transport Canada, Defect Investigations and Recalls. You should also notify Audi Canada.

Canadian customers who wish to report a safety-related defect to Transport Canada, Defect Investigations and Recalls, may either call Transport Canada toll-free at:

Tel.: 1-800-333-0510 or
Tel.: 1-819-994-3328 (Ottawa region and from other countries)
TTY for hearing impaired:
1-888-675-6863

or contact Transport Canada by mail at:

Motor Vehicle Safety Investigations Laboratory
80 Noel Street
Gatineau, QC
J8Z 0A1

For additional road safety information, please visit the Road Safety website at:

English:
http://www.tc.gc.ca/eng/motorvehiclesafety/menu.htm

French:
http://www.tc.gc.ca/fra/securiteautomobile/menu.htm

Declaration of compliance for telecommunications equipment and electronic systems

The manufacturer is not liable for radio malfunctions that are caused by unauthorized changes to the equipment.

Equipment

The following equipment complies with FCC section 15 and RSS-Gen:

– Audi adaptive cruise control*
– Audi side assist*
– Remote control key
– Garage door opener (HomeLink)*

FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. ▶

FCC Part 15.21

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RSS-Gen

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

(1) This device may not cause interference; and

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Technical data

Identification data

Vehicle identification label

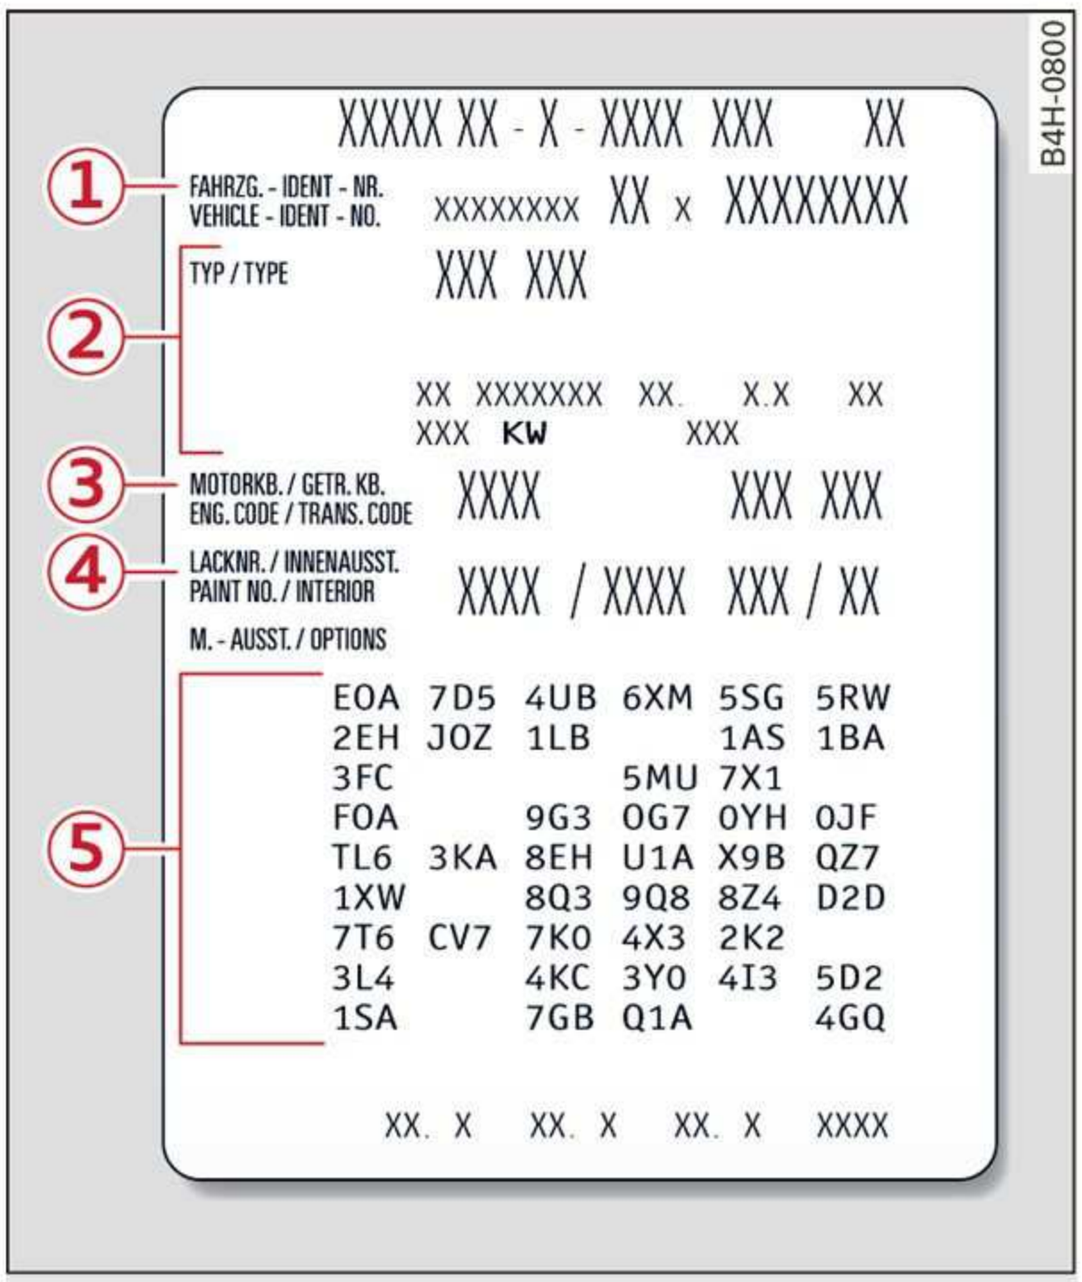


Fig. 289 Vehicle identification label

The vehicle identification label ⇨ *fig. 289* is located in the luggage compartment under the cargo floor cover.

The vehicle identification label information can also be found in the Warranty and Maintenance booklet.

The sticker contains the following vehicle data:

1. Vehicle Identification Number (VIN)
2. Vehicle type, engine output, transmission
3. Engine and transmission codes
4. Paint and interior codes
5. Optional equipment numbers

Vehicle identification number (VIN)

The VIN is located in the following areas:

– Select: the MENU button > **Vehicle** > left control button > **Service & checks** > **Vehicle information**.
– On the vehicle identification label
– At the front behind the windshield*
– in the engine compartment on the right side

Notes about technical data

The values may vary based on special equipment as well as market-specific equipment and measuring methods.

Please note that the specifications listed in the vehicle documentation always take precedence.

Tips

Any technical data that is missing was not available at the time of printing.

Vehicle data


Dimensions

	Length (in (mm))	Width (in (mm))	Width across the mirrors (in (mm))	Height at curb weight (in (mm))
A4 sedan	186.1 (4,726)	72.5 (1,842)	79.6 (2,022)	56.2 (1,427)
S4 sedan	186.8 (4,745)	72.5 (1,842)	79.6 (2,022)	55.3 (1,404)
allroad	187.0 (4,750)	72.5 (1,842)	79.6 (2,022)	58.8 (1,493)

Capacities

	Approximate capacities
Fuel tank, front wheel drive	14.3 gal (54 L)
Fuel tank, all wheel drive	15.3 gal (58 L)
Windshield and headlight washer system*	5.1 qt (4.8 L)

Weights

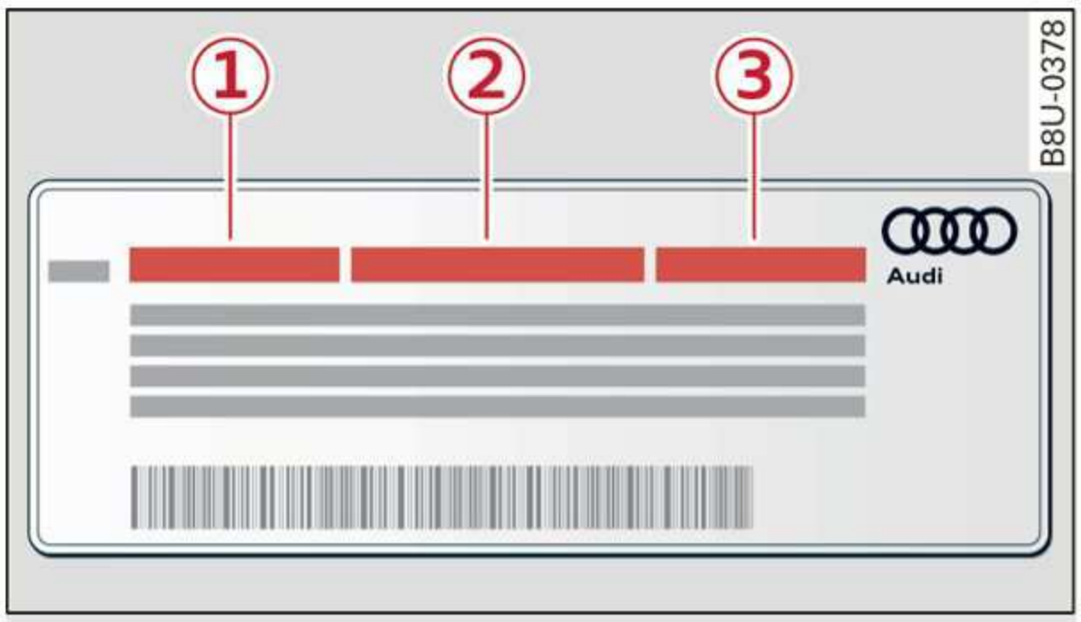

Applies to: Sedan
Fig. 290 safety certificate



Applies to: allroad
Fig. 291 safety certificate

Gross Vehicle Weight Rating (GVWR)

The maximum permitted total weight (1) of the vehicle is listed on the safety certificate on the side area of the door or on the driver's door pillar.

Gross Axle Weight Rating (GAWR)

The maximum permitted load on the front axle (2) or the rear axle (3) is listed on the safety certificate on the side area of the door or on the driver's door pillar.

Load

The maximum permitted load is listed on the tire pressure label on the driver's door pillar.

Roof load

The maximum permissible roof load is 200 lbs (90 kg).

A

A/C (climate control system) 72
ABS 138
Accessories 62, 369
Active lane assist
  Cleaning the camera area 343
  also refer to Audi active lane assist 117
Adaptive cruise control 102
  Cleaning the sensors 343
  Messages 111
  Predictive control 101
Adjusting air distribution (automatic climate control) 73
Adjusting the additional display 17
Adjusting the sound 244
Adjusting the temperature (automatic climate control) 73
Adjusting the volume 17
Advanced key
  refer to Convenience key 78
Airbag 261
Airbag system 261, 281
  Advanced Airbag System components 268
  Care 276
  Children 287
  Child restraints 287
  Components (front airbags) 268
  Danger of fitting a child safety seat on the front passenger seat 262
  Disposal 276
  Front airbags 266
  How do the front airbags work? 271
  How many airbags does my vehicle have? . 268
  How the Advanced Airbag System components work together 270
  Important safety instructions on the knee airbag system 279
  Indicator light 273
  Knee airbags 277
  Monitoring 273
  PASSENGER AIR BAG light 273
  Repairs 276
  Safety instructions 275
  When must the system be inspected? 273
Alarm system
  refer to Anti-theft alarm system 34
Alignment pin (changing the wheel) 348
All-weather lights 47
All season tires 337
All wheel drive
  Indicator light 26
  also refer to quattro 143
AMI
  refer to Audi music interface 226
Android Auto
  refer to Audi smartphone interface 238
Anti-freeze
  Windshield washer system 320
Anti-Lock Braking System
  refer to ABS 138
Anti-Slip Regulation
  refer to ASR 138
Anti-theft alarm system 34
Apple CarPlay
  refer to Audi smartphone interface 238
Arrow view 161
Ashtray 62
ASR 138
Audi active lane assist 117
  Messages 119
Audi adaptive cruise control
  Distance display, distance warning 110
  Traffic jam assist 109
Audi connect Infotainment
  Services overview 187
Audi drive select 126
Audi Entertainment mobile 228
Audi music interface 226
Audi music stream
  refer to Wi-Fi 224
Audio files 229
Audio player
  Bluetooth audio player 223
  Wi-Fi audio player 224
Audio track 232
Audi phone box 174
Audi pre sense 112
  Messages 117
  Settings 117
Audi side assist 121
  Rear cross-traffic assist 125
Audi smartphone interface 238, 243

Audi virtual cockpit
refer to Instrument cluster 13
AUTO
Automatic headlights 47
Auto Lock (central locking system) 28
Automatic belt retractor 256
Automatic climate control 71
Audi drive select 126
Operation 72
Automatic climate control system
Setup 74
Automatic luggage compartment lid 36, 37
Automatic transmission 85
Emergency program 90
Hill descent control 88
Kick-down 89
Launch control program 89
Manual shifting 88
Parking lock emergency release 91
Selector lever positions 85
Automatic wipe/wash system 53
AUTO (button)
Automatic climate control system 73
Auxiliary heater (automatic climate control) . 74
AUX input 226
Average consumption 19
Average speed 19

B

BACK button 145
Balance (sound) 244
Band
refer to Frequency band 215
Bass (sound) 244
Battery 318
Charging 319
Jump starting 362
Winter operation 318
Before driving 247
Belt tensioners 259
Blower (automatic climate control system) . . 73
Bluetooth
Audio player 223
Connecting a cell phone 171
Settings 243
Boost 20
Booster seats 294
Boost pressure indicator 20
Brake fluid
Checking the brake fluid level 317
Brakes 141
Brake assist 138
Brake fluid 317
Electromechanical parking brake 82
Emergency braking function 82
New brake pads 141
Break-in security feature 34
Breaking in
New brake pads 141
New tires 329
Browser
refer to Media center 230
Bulbs 361
Buttons
Control panel (MMI) 145
Multifunction steering wheel 15, 18
Switching the Infotainment system display on/off 146

C

Cable (USB adapter/AUX connector cable) . . 226
California Proposition 65 Warning 310
Battery specific 318
Call list 176
Call options 183
Capacities
Fuel tank 373
Washer fluid reservoir 373
Cargo area
refer to Loading the luggage compartment . 64
Car key 29
Car wash 342
Catalytic converter 308
CD drive (media drives) 221
Cell phone
refer to Telephone 171
Cell phone compartment
refer to Audi phone box 174
Center armrest 59
Central locking 28
Convenience key 31
Convenience opening and closing 41

Luggage compartment lid 35
Mechanically unlocking and locking 33
Remote control key 31
Setting 33
Vehicle key 31
Central locking switch 32
Certification 370
Changing the scale 16
Charging
refer to Power sources 62
Charging the battery (mobile devices) 174, 226, 228
Child restraints
Danger of using child restraints in the front seat 262
Where can I get additional information about child restraints and their use? 304
Child restraint system anchors 299
Child safety 285
Important safety instructions for using child safety seats 289
Installing a child restraint using the LATCH system 301
Mounting and releasing the anchorage hook 301
Tether anchors 302
Tether straps 302
Child safety lock
Power windows 40
Rear doors 40
Child safety seats 291
Booster seats 294
Convertible child seats 293
Danger of using child restraints in the front seat 262
How do I properly install a child safety seat in my vehicle? 289
Infant seats 291
LATCH system 301
Safety instructions 289
Securing 296
Unused safety belts on the rear seat 291
Child seats
Lower anchorages 300
Cigarette lighter 62
Classic view 17
Cleaning 342
Cleaning Alcantara 345
Cleaning artificial leather 345
Cleaning carbon components 344, 345
Cleaning controls 344
Cleaning decorative parts/trim 344
Cleaning exhaust tail pipes 344
Cleaning plastic parts 344
Cleaning textiles 345
Climate control system
refer to Automatic climate control 71
Clock 19, 240
Closing
Automatic luggage compartment lid 36
Convenience closing 41
Hood 310
Luggage compartment lid 35
Luggage compartment lid with foot motion . 37
Panoramic glass roof 43
Sliding/tilting sunroof 42
Sunshade 43
Windows 41
Cockpit (overview) 8
Collapsible spare tire
Inflating 355
Collapsible tire
refer to Collapsible spare tire 355
Color number 372
Command (voice recognition system) 164
Compact spare tire 355
Compartments 63
Compass in the mirror 56
Compliance 370
connect 186
Data plans 194
Data Privacy 194
Emergency call 196
Infotainment 186
Infotainment services 187
Online roadside assistance 197
Vehicle control services 190
Connection manager 241
Connections
refer to Media 220, 229
Consumer information 367
Consumption (fuel) 19

Contacts 181
Additional directory 242
Importing/exporting 183
Memory capacity 184
Storing as destination 206
Control buttons (operating the MMI) 147
Control knob with joystick function (MMI operation) 150
Convenience key 28
Switching the ignition on 78
Unlocking and locking 31
Convenience opening and closing
Setting 41
Windows or roof 41
Convertible child safety seats 293
Convertible locking retractor
Activating 298
Deactivating 299
Using to secure a child safety seat 298
Cooled glove compartment 63
Cooling mode (climate control system) 72
Cooling system
Adding coolant 316
Coolant 315
Coolant level checking 316
Coolant temperature indicator 14
Crosshairs 200
Cruise control system 95
Cup holders 63
Current consumption 19

D

Data plans 194
Data Privacy 194
Date 19, 240
Date display 240
Daytime running lights 47
Declaration of compliance 370
Defrosting (windows) 74
DEF (instrument cluster) 15
Demo mode
refer to Presentation mode 206
Destination on the map
Using the MMI touch 200
Determining correct load limit 336
Digital compass 56
Digital Rights Management 220
Dimensions 372
Dimming the exterior mirrors 52
Dimming the rearview mirror 52
Directory
refer to Contacts 181
Display 15
Cleaning 344
Infotainment system display 146, 241
Instrument cluster 18
Multifunction steering wheel 15
Versions (MMI) 146
Disposal 367
Distance 19
Doors
Child safety lock 40
Mechanically unlocking and locking 33
Driver information system
Changing views 15
Energy consumers 20
Outside temperature display 13
Trip computer 19
View 17
Driver seat
refer to Seating position 248
Drives
refer to Media 220, 229
Drive select
refer to Audi drive select 126
Driving offroad 84
Driving safely 247
Driving through water 76
Driving time 19
Driving tips
Efficient driving 76
DVD drive (media drives) 221
Dynamic steering 126
Dynamic volume
refer to System volume 245

E

E-mail 180
Economical route 205
EDS 138
Electrical system 317
Electromechanical parking brake 82

8W0012721BG

Electromechanical steering 142
Electronic immobilizer 29
Electronic Stabilization Control (ESC)
refer to ESC 138, 139
Embedded SIM card 186
Emergency assistance 348
Emergency braking function 82
Emergency call 196
Emergency flashers 49
Emergency operation
Doors 33
Fuel filler door 308
Luggage compartment lid 39
Panoramic glass roof 43
Sliding/tilting sunroof 42
Emergency starting 362
Emissions control systems 308
Energy management 143
Engine
Breaking in 76
Coolant 315
Start/Stop system 80
Starting/stopping 78
Starting with jumper cables 362
Engine compartment
Opening and closing the hood 310
Overview 311
Safety precautions 309
Engine oil
Adding 312
Changing 314
Checking oil level 312
Consumption 312
Indicator light 312
Replacement interval 320
Temperature display 20
Engine sound 126
Engine Start/Stop mode
refer to Start/Stop system 80, 81
Engine stop
refer to Start/Stop system 80, 81
Enhanced view 17
Entering characters/numbers (speller) 152
Entering letters (speller) 152
Entertainment sliding menu 150
Entry/exit lighting 49
Environment
Unleaded gasoline 305
ESC 138
Hill descent assist 140
Offroad mode 139
Sport mode 139
eSIM
refer to Embedded SIM card 186
Evasive steering support 114
Event Data Recorder (EDR) 143
Exterior lighting 47
Exterior mirrors 51
Folding settings 33
External voice operation 169

F

Factory default settings
Multi Media Interface 241
Fader (sound) 244
Fastening
Booster seats 294
Convertible child safety seats 293
Infant seats 291
Fast forwarding and rewinding (audio/video file) 229
Fast forwarding (audio/video file) 229
Fast route 205
Favorites
Media 232
Navigation 200
Telephone 178
Federal Communications Commission (FCC) . 370
File formats (media drives) 235
Floor mats 252
Foot pedals 252
For the sake of the environment
Disposing of engine oil 314
Fueling 306
Leaks 310
Warming up the engine 78
Free text search 154
Media 231
Navigation 198
Radio 216
Telephone 182

Freeze protection
Coolant 315
Frequency band 215, 218
also refer to Frequency band 215
Front airbags
Description 265
How they work 271
Frontal collisions and the laws of physics . . . 254
Front seats
Adjusting 249
Child restraints in the front seat 262
also refer to Seats 58
Fuel 305
Additives 306
Current consumption 19
Fuel gauge 13, 15
Fuel tank capacity 373
Gasoline 305
Saving fuel 126
Saving fuel consumption 76
Fueling
Fuel filler door emergency release 308
Fuel gauge 15
Fuel tank capacity 373
Opening the fuel filler door 306
Fuses
Assignment 358
Replacing 357

G

GALA
refer to Speed dependent volume control . 244
Garment hooks 63
Gas discharge lamps 361
Gasoline 305
Additives 306
Gasoline mixture 305
GAWR
refer to Gross Axle Weight Rating (GAWR) . 373
Glossary of tire and loading terminology . . . 325
Glove compartment 63
Valet parking 43
Gross Axle Weight Rating (GAWR) 373
Gross Vehicle Weight Rating (GVWR) 373
GVWR
refer to Gross Vehicle Weight Rating (GVWR) 373

H

Handsfree 171
Head-up display 27
Adjusting 27
Operating 27
Headlight range control system 47
Headlights 47
Cleaning 343
Headlight range control system 47
Washer system 53
Head restraints 59, 250
Adjusting 250
Heating 71
Heavy clothing and safety belts 255
High beams 48
Assistant 48
Hill descent assist 140
Hill descent control 88
Hill hold assist 84
also refer to Hill hold assist 83
Home address 200, 205
Horn 8
Hotspot 193
How are child restraint system anchors related to child safety 299
How many airbags does my vehicle have? . . 268
How safety belt pretensioners work 259

I

Imbalance (wheels) 331
Immobilizer
refer to Electronic immobilizer 29
Important things to do before driving 247
Importing and exporting (contacts) 183
Improperly worn safety belts 259
Indicator lights 10
Airbag system 273
PASSENGER AIR BAG 273
Infant seats 291

8W0012721BG

Input
Using the MMI touch 148
Using the speller 152
Input level (media) 232
Inspection interval 320
Installing the upper tether strap on the anchorage 303
Instrument cluster 13
Cleaning 344
Messages 21
Service interval display 320
Instrument illumination 51
Interior lighting 50
Interior monitoring 34
Internet
refer to connect 186
Internet radio 225
Interval mode (wipers) 53
iPhone
refer to Audi music interface 226

J

Jukebox 222
Jump-starting 362
Jump start cable 363

K

Key 28, 29
Convenience opening and closing 41
Key not recognized 79
Key replacement 29
Mechanical key 29, 30
Replacing the battery 30
Unlocking and locking 31
Vehicle code 29
Kick-down (automatic transmission) 89
Knee airbags 277
Description 277
How they work 278
Important safety instructions 279

L

Lane assist
refer to Audi active lane assist 117
Lap timer 99
Evaluating 99
Starting 99
LATCH 299
Description 300
Installing a child restraint 301
Location 300
Mounting and releasing the anchorage hook 301
Launch control program 89
Leather care and cleaning 345
Left control button 16
License plate bracket 369
Licensing agreements (MMI) 246
Lifting points (vehicle jack) 352
Light/rain sensor
Headlights 47
Interval mode (wipers) 53
Light functions 47
High beam assistant 48
Instrument illumination 51
Interior lighting 50
Lighting
Exterior 47
Interior 50
Lights
Headlight range control system 47
Listening to music
refer to Media 220, 229
Load 373
Loading the luggage compartment 64
Low beam headlights 47
Luggage compartment 64
Cover (manual) 65
Pass-through 69
Power sources 62
Tie-downs 68
Valet parking 43
also refer to Loading the luggage compartment 64
Luggage compartment lid 35
Closing button 36
Emergency releasing 39
Opening and closing 35
Opening and closing with foot motion 37
Power opening and closing 36
Luggage compartment net 68

Lumbar support 58

M

Maintenance 367
Maintenance intervals 320
Making an emergency call 178
Malfunction Indicator Lamp (MIL) 308
Map
Display 212
Operating 207
Settings 209
Update 198
Map update 211
Mechanical key 29, 30
Media 220, 229
Drives 221
Supported formats 235
Media center 230
Memory buttons
refer to Shortcut keys 145, 152
Memory capacity
Directory 183
Jukebox 222
Memory card
SD card reader (MMI) 221
Supported types and formats 235
Memory function 60
MENU button 145
Menu language
refer to Setting the language 240
Menu paths (Owner's Manual) 148
Menus/symbols 155
Messages 178
Mirrors
Adjusting exterior mirrors 51
Compass 56
Dimming 52
Vanity mirror 53
MMI
refer to Multi Media Interface 145
MMI search
refer to Free text search 154, 231
MMI touch 148
Mobile device
refer to Telephone 171
Mobile device reminder signal 240
MODE button 18
Monitoring the Advanced Airbag System . . . 273
MP3
refer to Jukebox 222
Multifunction steering wheel 157
Button 17
Map zoom 16
Operating 15, 18
Switching tabs 15, 18
Voice recognition system 17
Multi Media Interface 145
Music collection
refer to Jukebox 222
Mute 17, 245
myAudi 187, 202

N

Natural leather care and cleaning 345
NAV/MAP button 198
Navigation 198
Announcements 207
Better route 213
Driver information system 161
also refer to Map 207
Navigation (instrument cluster) 159, 160
Net 63
NHTSA 369
Number of seats 253

O

Occupant protection 112
Occupant seating positions 248
Octane rating (gasoline) 305
Odometer 15
Offroad 84
Offroad mode 139
OFF (button) 72
Oil
refer to Engine oil 312
On/Off knob (MMI) 145
On Board Diagnostic System (OBD) 308
Online destinations
refer to Point of interest search 201
Online map 210
Online map update 211

Online media 225
Online roadside assistance 197
Online services
refer to connect 186
Opening 28
Automatic luggage compartment lid 36
Convenience opening 41
Fuel filler door 306
Hood 310
Luggage compartment lid 35
Luggage compartment lid with foot motion . 37
Panoramic glass roof 43
Sliding/tilting sunroof 42
Sunshade 43
Windows 41
Opening and closing
refer to Unlocking and locking 28, 31
Operating
Head-up display 27
Multifunction steering wheel 15, 18
Multi Media Interface 147
Voice recognition system 164
Optional equipment number 372
Options menu 147, 151
Other consumers 20
Outside temperature display 13
Overview (cockpit) 8

P

Paint damage 344
Paint number 372
Panic button 31
Panoramic glass roof 43
Convenience opening and closing 41
Emergency closing 43
Sunshade 43
Parental control
DVD 232
Park assist
Cleaning the sensors/camera 343
Parking aid 129
Parking brake
refer to Electromechanical parking brake . . 82
Parking lights 47
Parking lock emergency release 91
Parking system
Peripheral cameras 133
Rearview camera 132
Settings 136
also refer to Parking system 130, 132
Partition net 67, 68
Pass-through 69
PASSENGER AIR BAG light 273
Pause (audio/video file) 229
Pedals 252
Perchlorate 367
Personal convenience settings 29
Personal route assistance 204
Phonebook
refer to Contacts 181
Physical principles of a frontal collision 254
Picture format (video) 232
Playback (media) 229
Playlist 232
Point of interest 201
Point of interest search 201
also refer to Point of interest 201
Polishing 344
Pollutant filter (automatic A/C system) 71
Power sources 62, 174, 226, 228
Power windows 41
Malfunction 42
Predictive efficiency assist 100
Pregnant women
Special considerations when wearing a safety belt 258
pre sense
refer to Audi pre sense 112
Presentation mode 207
Presets (radio) 218
Pressure
Tire pressure monitoring system 340
Tires 332
Program guide
Radio 216
Programming buttons (multifunction steering wheel) 17
Proper occupant seating positions 248
Proper safety belt position 257

Proper seating position
Front passenger 249
Occupants 248
Rear passengers 250
Protecting 344
Pyrotechnic elements 367

Q

quattro 143
Selective wheel torque control 138
Question
What happens to unbelted occupants? . . . 254

R

Radio 215
Additional station information 217
Presets 218
Radio text 216
Station list 215
Radio communications equipment 369
Radio equipment 369
Radio Standards Specification (RSS) 370
Rain/light sensor
Headlights 47
Interval mode (wipers) 53
Raising the vehicle 365
Range (fuel level) 19
Reading lights 50
Rear center armrest
refer to Cup holders 63
Rear cross-traffic assist 125
Rear lid
Escape latch 38
also refer to Luggage compartment lid 35
Rear Seat Entertainment preparation
refer to Audi Entertainment mobile 228
Rearview camera
refer to Parking system 130, 132
Rear window defogger 74
Rear window shade 53
Rear window washer system 53
REAR (button) 74
Recirculation mode (automatic climate control system) 73
Recuperation 19
Refueling 306
Remote control key 29
Convenience opening and closing 41
Key replacement 29
LED 30
Mechanical key 30
Panic function 31
Replacing the battery 30
Unlocking and locking 31
Remote operation
Garage door opener 44
Removing the caps (wheel bolts) 351
Repairs 367
Airbag system 276
Replacement key 29
Replacement parts 369
Replacing
Light bulbs 361
Replacing wiper blades 55
Reporting Safety Defects 369
Reset
refer to Restart (MMI) 246
Reset button (trip odometer) 15
Resetting the trip odometer 15
Residual heat (automatic climate control) . . . 74
Restart (MMI) 246
Retractor 256
Reverse gear 85
Reversible cargo floor 69
Rewinding (audio/video file) 229
Right control button 16
Rims 337
Cleaning 343
Ringtone settings 183
Roof load 70, 373
Roof rack 70
also refer to Roof rack 70
Route criteria 207
Route guidance
refer to Navigation 198
Running direction (tires) 354

S

Safe driving habits 247

Safety
Airbag system 261
Belts 253
Correct seating position 248
Pedal area 252
Telephone 171
Safety belt height adjustment 258
Safety belt position 257
Safety belt height adjustment 258
Safety belts worn by pregnant women 258
Safety belt pretensioner
Service and disposal 260
Safety belts 253, 256
Cleaning 345
Danger to passengers who do not wear a safety belt 254
Fastening 256
Improperly worn 259
Not worn 254
Safety belt position 257
Safety instructions 255
Securing child safety seats 296
Special considerations for pregnant women 258
Unfastening 258
Warning/indicator light 253
Worn properly 255
Safety belt warning light 253
Safety instructions
for side curtain airbags 284
for using child safety seats 289
for using safety belts 255
Monitoring the Advanced Airbag System . . 275
Saving fuel
Energy consumers 20
Recuperation 19
Scan (radio) 216
Screen
refer to Display 15, 18
Screwdriver 348
SD card reader (MMI) 221
Search area (point of interest) 201
Search function
refer to Free text search 154, 231
Seat adjustment
Head restraints 250
Seat belts
refer to Safety belts 253
Seat heating 73
Seating capacity 253
Seating position
Driver 248
Front passenger 249
How to adjust the front seats 249
Incorrect seat position 251
Occupants 248
Rear passengers 250
Seats
Adjusting 58
Cleaning 345
Correct seating position 248
Number of seats 253
Seat ventilation 74
Secondary phone 173, 242
Selecting a source (media) 229
Selection menu 16, 147, 151
Selective door unlocking 28
Selective wheel torque control 138
Selector lever
Selector lever positions 85
Self-learning navigation
refer to Personal route assistance 204
Service and disposal
Safety belt pretensioner 260
Service interval display 320
Service position
refer to Replacing wiper blades 55
SET REAR (button) 73
Settings
Directory 184
Map 209
Media 232
Navigation 206
Radio 218
System (MMI) 240
Telephone 183
Voice recognition system 241
Setting the language 240
Shade
Rear window/rear doors 53
Shifting into gear (manual transmission) 77
Shift paddles 88

Shortcut keys 145, 152
Shuffle 232
also refer to Shuffle 232
Side airbags 279
How they work 281
Side assist
Cleaning the sensors 343
also refer to Audi side assist 121
Side curtain airbags 282
Description 282
How they work 283
Safety instructions 284
SIM card 186
SiriusXM alert notifications 217
Sliding/tilting sunroof 42
Convenience opening and closing 41
Emergency closing 42
Sunshade 42
Snow chains 338
Socket
refer to Power sources 62
Software update
refer to System update (MMI) 244
Software (MMI)
Licensing agreements 246
Update 244
Version 244
Sources of information about child restraints and their use 304
Space-saving spare tire (compact spare tire) . 355
Spare tire 355
Speed dependent volume control 244
Speed limit information
refer to Traffic sign recognition 97
Speed limits
refer to Traffic sign recognition 97
Speedometer 13
Speed warning system 95
Speller 152
Sport differential 126, 143
Indicator light 26
Sport view 17
Stabilization program
refer to ESC 138, 139
Start/Stop system 80
Messages 81
Switching off and on 81
START ENGINE STOP button 78
Starting to drive 83
Starting (engine) 78, 80
Steering
Electromechanical steering 142
Locking 78
also refer to Electromechanical steering . . 142
Steering wheel
Adjusting 77
Shift paddles 88
Steering wheel heating 74
also refer to Multifunction steering wheel 15, 17, 18
Steps for determining correct load limit . . . 336
Stopover (navigation) 202
Stopping (engine) 80
Storage compartments 63
Streaming
refer to Online media 225
S tronic (automatic transmission) 85
Subtitles (DVD) 232
Subwoofer 244
Sunshade
Rear window/rear doors 53
Sun visors 53
Suspension control 126
Swap call 177
Switching tabs
refer to Multifunction steering wheel 15, 17, 18
Switching the ignition on/off 78
Symbols 155
Navigation 207
Traffic 212
also refer to Indicator lights 10
SYNC (button) 73
System settings (MMI) 240
System update (MMI) 244
System volume 245

T

Tachometer 13, 14

Tail lights
Cleaning 343
Technical data 372
Technical modifications 367
Telephone 171
Audi phone box 174
Connecting 172
Dialing a number 176
Options during a phone call 177
Playing music 223
Settings 183
Temperature display
Coolant 13
Outside temperature 13
Tether anchors 302
Tether strap 302
Text messages 178
also refer to Text messages 178
Tie-downs 68
Tightening specification
Wheel bolts 354
Tightening specification (wheel bolts) 354
Time 240
Tire Mobility System (tire repair set) 349
Tires 322
Changing 351
Low-profile tires 338
Repair set 349
Service life 331
Tire pressure 332
Tire pressure monitoring system 339, 340
Tire pressure table 334
Tire pressure (trailer towing) 93
Treadwear indicators 331
Unidirectional 324, 354
Uniform tire quality grading 339
Tires and wheels
Glossary of tire and loading terminology . . 325
Tires and vehicle load limits 335
TMC
refer to Traffic information 212
Tone (sound)
refer to Adjusting the sound 244
Tool 348
Torn or frayed safety belts 255
Touch
refer to MMI touch 148
Towing
Tow trucks 364
Towing loop 364, 365
Towing protection monitoring 34
TPMS
Tire pressure monitoring system 340
Traffic information 212, 213
Traffic jam assist 109
Traffic messages 208
Traffic sign recognition 97
Trailer mode (navigation) 206
Trailer towing 93
Trailer load 93
Treble (sound) 244
Trip computer 19
Trunk lid
Trunk escape latch 38
Turn assist 114
Turn signal 48

U

Unfastening safety belts 258
Uniform tire quality grading 339
Unlocking and locking 28
By remote control 31
Using the lock cylinder 33
With the central locking switch 32
With the convenience key 31
With the vehicle key 31
Updating stations (radio) 215
USB charging port 62, 226, 228
USB stick
refer to Audi music interface 226

V

Valet parking 43
Vanity mirror 53
Vehicle
Care/cleaning 342
Dimensions 372
Identification data 372
Out of service 347
Raising 352
Vehicle battery
Charge level 143

Vehicle care 342
Vehicle identification number 372
Vehicle jack 348
Lifting points 352
Vehicle key 28, 29
Convenience opening and closing 41
LED 30
Mechanical key 30
Personal convenience settings 29
Replacing the battery 30
Unlocking and locking 31
Vehicle tool kit 348
Ventilation 71
Version information 244
VIEW button 15
Voice guidance
refer to Multifunction steering wheel 15, 17, 18
Voicemail 181
Voice recognition system 164
Commands 165
External 169
Multifunction steering wheel 17
Operating 164
Settings 241
Volume 17, 245
Volume 245

W

Warning lights
refer to Indicator lights 10
Washing matte finish paint 342
Wave band
refer to Frequency band 215
Web radio 225
Weights 373
What happens if you wear your safety belt too loose? 257
What happens to unbelted occupants? 254
What impairs driving safety? 247
Wheel bolts 337
Changing a tire 351
Wheels 322
Cleaning 343
Glossary of tire and loading terminology . . 325
Replacing 351
Tire pressure monitoring system 340
Tires and vehicle load limits 335
Wheel wrench 348
When must a safety belt be replaced? 255
When must the airbag system be inspected? .273
Where are lower anchorages located? 300
Wi-Fi
Audi music stream 224
Audio player 224
Hotspot 193
Online media 225
also refer to Wi-Fi 224
Windows
Child safety lock 40
Cleaning and removing ice 344
Convenience opening and closing 41
Defrosting 74
Opening and closing 41
Power windows 41
Windshield
Cleaning 53
Defrosting 74
also refer to Windshield 53
Windshield washer system 53, 320
Reservoir capacity 373
Windshield wipers 53
Winter operation
Battery 318
Car washes 342
Cooling system 315
Defrosting the windows 74
Removing ice from windows 344
Seat heating 73
Snow chains 338
Steering wheel heating 74
Tires 337
Windshield washer system 320
Winter tires 337

X

Xenon headlights 361

Z

Zooming on the map
Multifunction steering wheel 16
Zoom (map) 200, 207

8W0012721BG

It has always been Audi's policy to continuously improve its products. AUDI AG reserves the right to make changes in design and specifications, and to make additions or improvements in its products without incurring any obligation to install them on products previously manufactured. This owner's manual is based on the current data available when it was printed. Text, illustrations, and specifications in this owner's manual are based on the most current information available at the time of printing, and shall not constitute a basis for liability claims.

These instructions may not be reproduced or translated in whole or in part without written consent of AUDI AG. All rights reserved by AUDI AG.

For the sake of the environment

Printed on eco-friendly paper (bleached without chlorine, recyclable).

Owner's Manual
Englisch Nordamerika 07.2018
8W0012721BG

8W0012721BG

www.audi.com