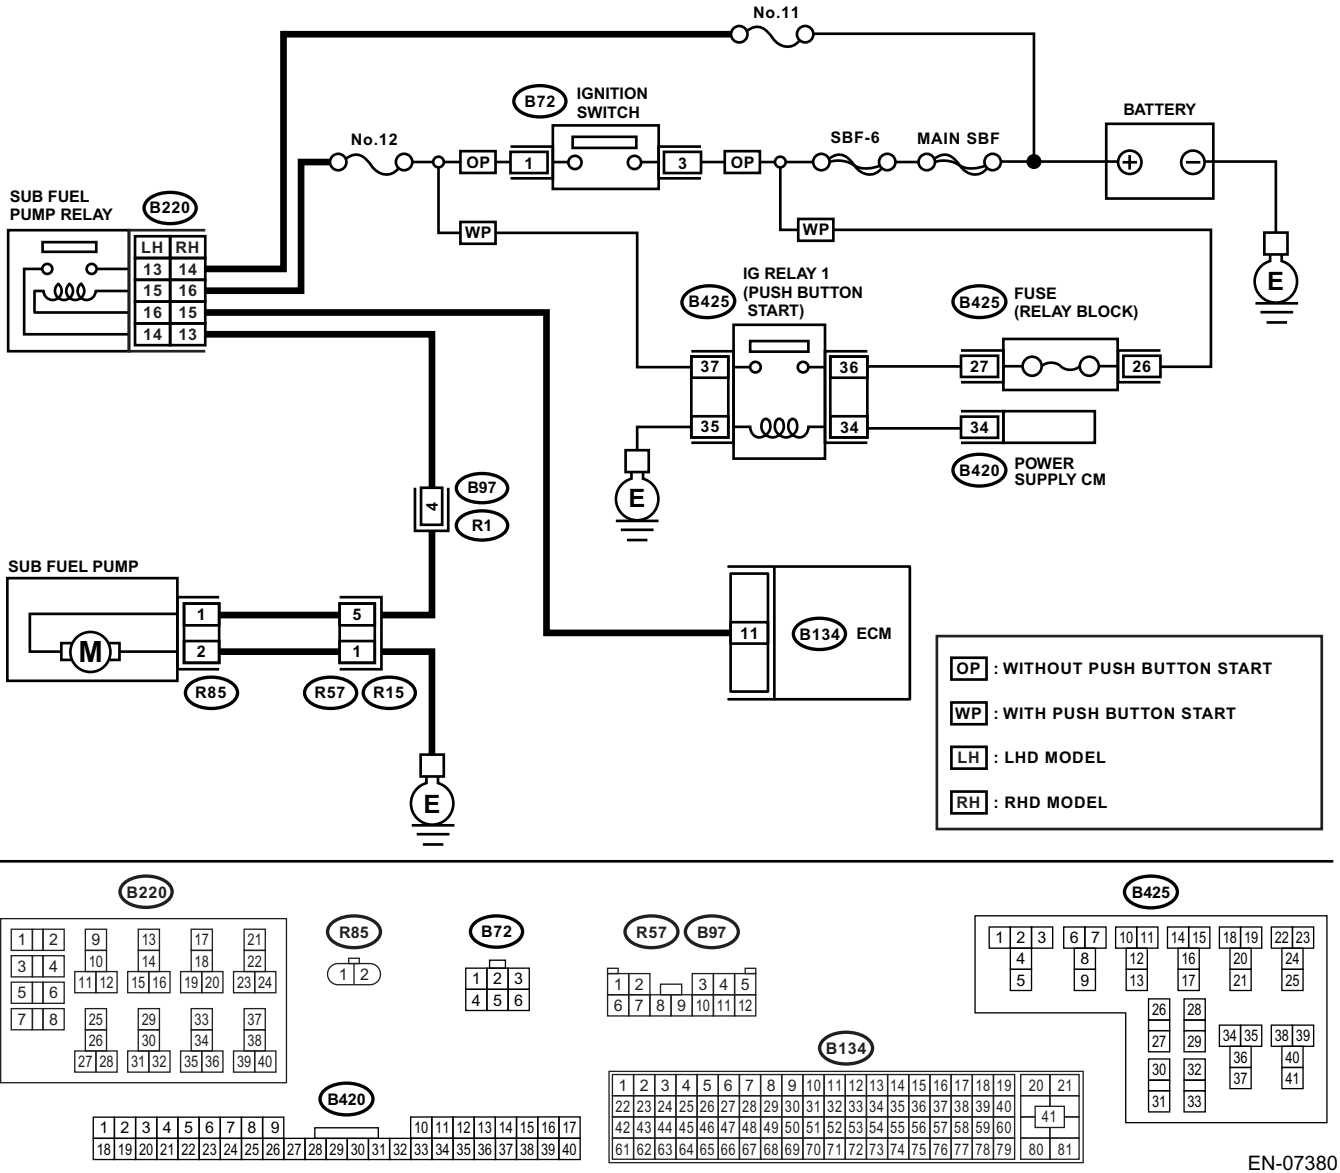

No.11
B72
IGNITION SWITCH
No.12
OP
1
3
OP
SBF-6
MAIN SBF
BATTERY
SUB FUEL PUMP RELAY
B220
LH
RH
13
14
15
16
16
15
14
13
WP
WP
E
IG RELAY 1 (PUSH BUTTON START)
B425
37
36
35
34
B425
FUSE (RELAY BLOCK)
27
26
34
B420
POWER SUPPLY CM
E
B97
4
R1
SUB FUEL PUMP
M
1
2
5
1
R85
R57
R15
11
B134
ECM
E
OP : WITHOUT PUSH BUTTON START
WP : WITH PUSH BUTTON START
LH : LHD MODEL
RH : RHD MODEL
B220
R85
B72
R57
B97
B425
B420
B134
41

EN-07380