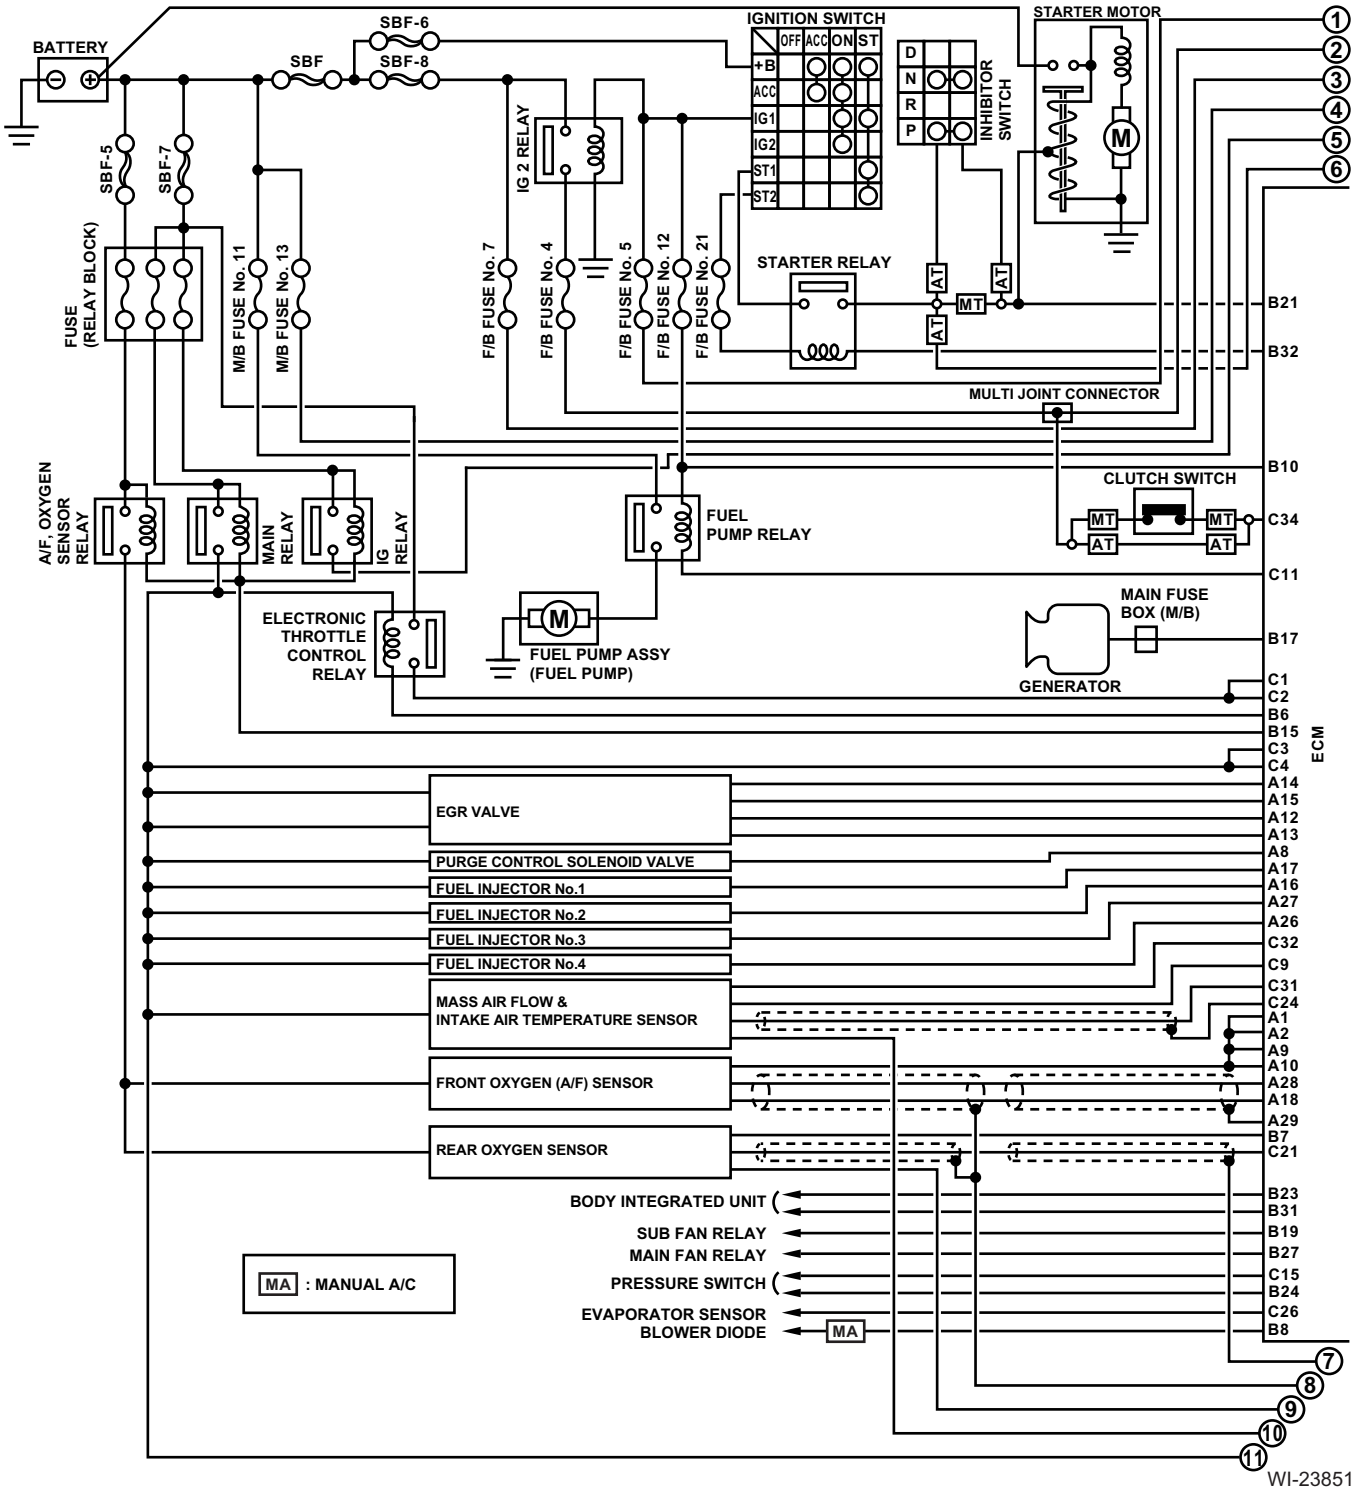

BATTERY
SBF-6
SBF
SBF-8
SBF-5
SBF-7
FUSE (RELAY BLOCK)
M/B FUSE No. 11
M/B FUSE No. 13
IG 2 RELAY
F/B FUSE No. 7
F/B FUSE No. 4
F/B FUSE No. 5
F/B FUSE No. 12
F/B FUSE No. 21
IGNITION SWITCH
OFF ACC ON ST
+B
ACC
IG1
IG2
ST1
ST2
D
N
R
P
INHIBITOR SWITCH
STARTER MOTOR
STARTER RELAY
AT
MT
B21
B32
MULTI JOINT CONNECTOR
B10
CLUTCH SWITCH
C34
A/F, OXYGEN SENSOR RELAY
MAIN RELAY
IG RELAY
FUEL PUMP RELAY
C11
ELECTRONIC THROTTLE CONTROL RELAY
FUEL PUMP ASSY (FUEL PUMP)
MAIN FUSE BOX (M/B)
B17
GENERATOR
C1
C2
B6
B15
C3
C4
ECM
EGR VALVE
A14
A15
A12
A13
PURGE CONTROL SOLENOID VALVE
A8
FUEL INJECTOR No.1
A17
FUEL INJECTOR No.2
A16
FUEL INJECTOR No.3
A27
FUEL INJECTOR No.4
A26
C32
C9
MASS AIR FLOW & INTAKE AIR TEMPERATURE SENSOR
C31
C24
A1
A2
A9
FRONT OXYGEN (A/F) SENSOR
A10
A28
A18
A29
REAR OXYGEN SENSOR
B7
C21
BODY INTEGRATED UNIT
B23
B31
SUB FAN RELAY
B19
MAIN FAN RELAY
B27
PRESSURE SWITCH
C15
B24
EVAPORATOR SENSOR
C26
BLOWER DIODE
B8
MA
MA : MANUAL A/C
1
2
3
4
5
6
7
8
9
10
11

WI-23851