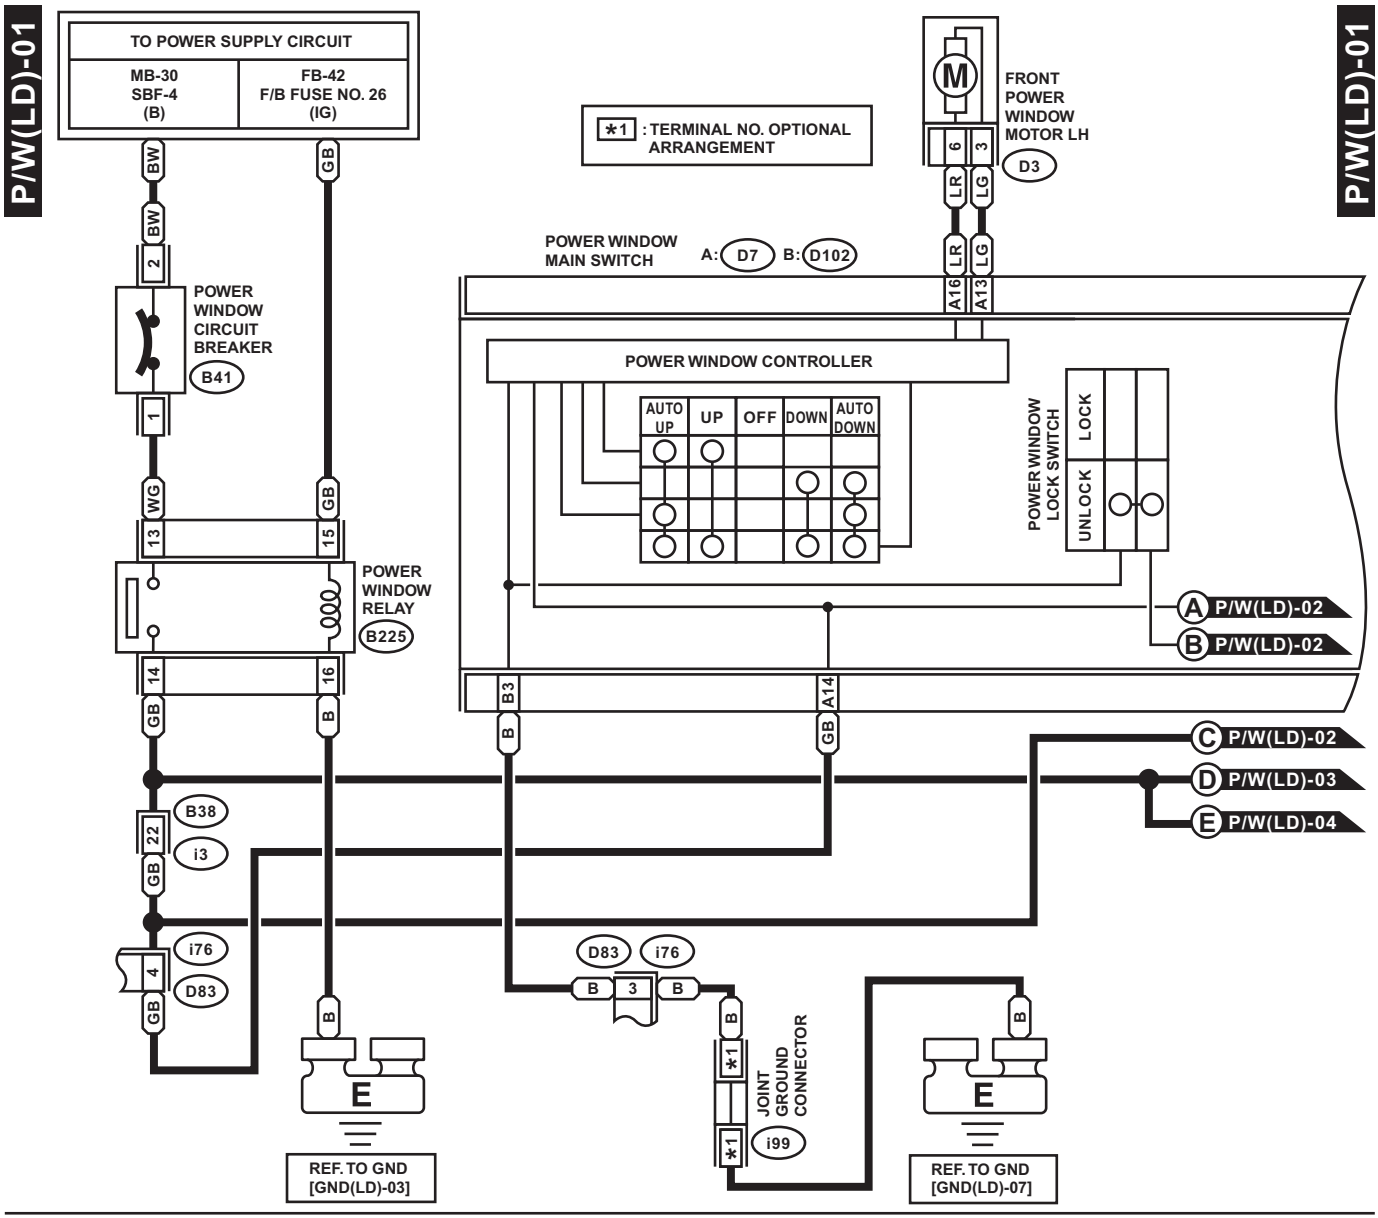
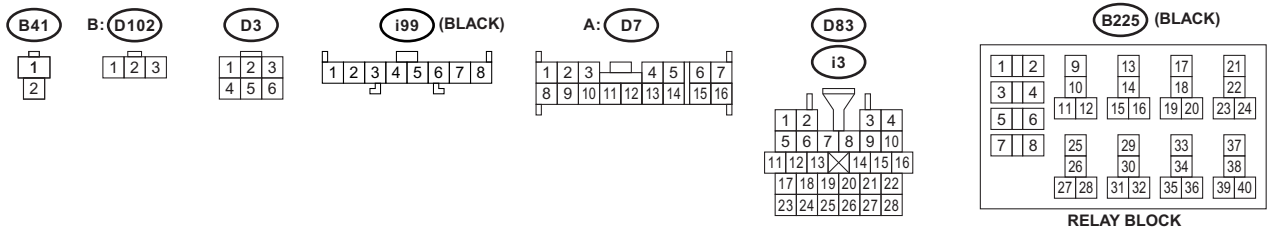
P/W(LD)-01


TO POWER SUPPLY CIRCUIT
MB-30
SBF-4
(B)
FB-42
F/B FUSE NO. 26
(IG)
*1 : TERMINAL NO. OPTIONAL ARRANGEMENT
FRONT POWER WINDOW MOTOR LH
D3
POWER WINDOW MAIN SWITCH
A: D7 B: D102
POWER WINDOW CIRCUIT BREAKER
B41
POWER WINDOW CONTROLLER
AUTO UP
UP
OFF
DOWN
AUTO DOWN
POWER WINDOW LOCK SWITCH
LOCK
UNLOCK
POWER WINDOW RELAY
B225
A P/W(LD)-02
B P/W(LD)-02
C P/W(LD)-02
D P/W(LD)-03
E P/W(LD)-04
B38
i3
i76
D83
JOINT GROUND CONNECTOR
i99
REF. TO GND [GND(LD)-03]
REF. TO GND [GND(LD)-07]


B41
B: D102
D3
i99 (BLACK)
A: D7
D83
i3
B225 (BLACK)
RELAY BLOCK